

DRIVER ASSURANCE

Mazda Driver's Assurance Plan
Check out www.mymazda.com, the website dedicated to you.

Manage your maintenance records, receive valuable offers, see the latest accessories and much more!

Mazda Roadside Assistance
Exhilaration, liberation and inspiration are great reasons to drive a Mazda car, truck, SUV or minivan. In addition to all the other great standard features, you also get peace of mind, our Emergency Roadside Assistance Plan, it's just a phone call away, 24 hours a day, 365 days a year, call **1-800-866-1998 Mazda "bumper-to-bumper" Limited Warranty**

We design and build every Mazda to give you driving pleasure now and far down the road. We're so confident in our quality that we cover the entire vehicle against defects in materials and workmanship

for 48 months or 50,000 miles, whichever comes first

Mazda Service Transportation Solution

Being without your Mazda may put a crimp in your day.

If you do ever have to take your Mazda in for repairs don't worry, you're covered. With the Mazda Transportation Solution, you will be given a loaner car at no charge when your Mazda vehicle is in for warranty repairs. For all the details, see your Mazda Dealer

Unleaded Gasoline

87-octane minimum

15-gallon/
55-liter tank
2.0L/2.3L

This Quick Tips® guide is provided by Mazda North American Operations to make your Mazda ownership experience more convenient. It is not intended to replace your Owner's Manual.

If you have any questions about your vehicle, you are invited to contact your local dealer.

Or if you need additional help, feel free to call our **Customer Assistance Center at 1-800-222-5500**

Monday through Friday,
8 a.m.-4:45 p.m., Pacific
9 a.m.-5:45 p.m., Eastern/Central



©2005 Calcar, Quick Tips® is a trademark of Calcar, made in USA 5/05 97.859M DOT Mazda North American Operations reserves the right to change product specifications at any time without incurring obligations. 9999-95-038C-06QT

2006




MAZDA3

Quick Tips®

Reference
Guide for
Controls and
Functions



 DRIVER'S VIEW

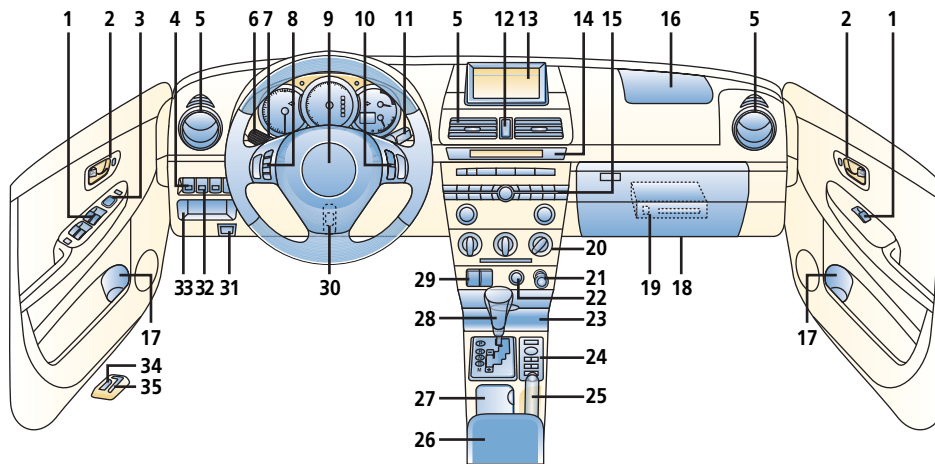

1. **Power window switches***, see Switches
2. **Door locks***, see Locks
3. **Mirror controls***, see Switches
4. **Xenon headlight leveling switch***, see Getting Started
5. **Air vents**
6. **Turn signal/lighting control lever**, see Getting Started
7. **Fog light switch***, see Getting Started
8. **Audio control switches***, see Getting Started
9. **Horn/Air bag**
To beep: Press
10. **Cruise control***, see Getting Started
11. **Wiper/washer control lever**, see Getting Started
12. **Hazard warning switch**
Push to activate/deactivate
13. **NAVI display***, see Owner's Manual

14. **Information display**, see Information Display
15. **Audio system**, see Audio Systems
16. **Passenger air bag**
17. **Bottle holder**
CAUTION: Use plastic bottles with caps, cups may spill when door is closed
18. **Passenger junction box**
19. **NAVI DVD***
20. **Climate control panel**, see Climate Controls
21. **Cigarette lighter**
22. **Passenger air bag off indicator**, see Getting Started
23. **Ashtray**
24. **NAVI remote control***
25. **Parking-brake lever**
To engage: Pull up
To release: Pull up slightly, while depressing button at front of lever, lower parking brake lever

26. **Center console**
27. **Cup holder**
28. **Gearshift lever**, see Transaxle
29. **Heated seats***, Press on/off
30. **Tilt/telescopic steering wheel lever**, see Getting Started
31. **Hood release handle**
Pull release handle to unlock
32. **Instrument cluster lighting**, see Getting Started
33. **Storage**
34. **Fuel-filler lid release**
To open: Pull lever up
35. **Remote trunk-lid release (4-Door only)**
To open: Pull lever up

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Driver's
View

GETTING STARTED

 
Getting Started

MAZDA3 Quick Tips® are designed to quickly familiarize you with some important features of your MAZDA3

The Driver's View tab is your index to the Quick Tips®, locate the item you would like to learn more about and then turn to the listed tab

This Getting Started section contains important operating tips about your MAZDA3

Items identified in blue text call out important information

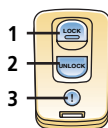

Remote entry system*

Functions only with ignition key not inserted

To lock doors: Press LOCK (1); pressing again within 5 seconds causes doors/liftgate to re-lock, horn to beep once and hazard warning lights to flash once if doors/liftgate properly closed. To unlock: Press UNLOCK (2) for driver's door, hazard warning lights will flash twice, press again within 5 seconds for all other doors. Panic alarm: Press ! (3); horn sounds, parking lights flash; press any button on transmitter to stop. After unlocking with the transmitter, all doors or the liftgate will automatically lock if a door or the liftgate is not opened within about 30 seconds.

Instrument panel lighting



With headlights ON: To brighten/dim turn thumbwheel up/down



 
Headlights/parking lights ON, ignition key must be ON: Illumination changes brightness when dimmer switch (4) is pressed (if equipped with black-out meter)

With headlights OFF†, key ON: Press instrument cluster dimmer select button (4) to select between 5 brightness settings for instrument cluster

HID headlights leveling switch



Adjusts headlight angle to compensate for weight of passengers and cargo, see Owner's Manual

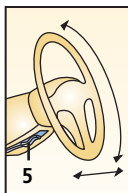

Tilt/telescopic steering-wheel lever

Pull lever (5) down to unlock column, position tilt angle and length of steering column position

Tip: Telescopic function allows steering wheel to be adjusted closer or farther according to driver's reach

WARNING: Do not adjust steering-wheel while driving
Passenger air bag deactivation indicator light

Front air bag deactivation indicator light provides current status of front passenger air bag and pretensioner system. If total seated weight on front passenger seat is less than

approximately 66 lb., front passenger air bag deactivation indicator light illuminates, air bag/pretensioner will not deploy/activate in an accident. If the total seated weight is greater than approximately 93 lb., light does not illuminate, and the air bag/pretensioner will deploy/activate in an appropriate accident, see Owner's Manual for additional information on this feature and the air bag system.

Passenger sensing operation

See Driver's View. PAD indicator on dash will illuminate when passenger air bag is deactivated, child-restraint seat with child that weighs a combined total of 66 lbs. or less will deactivate front passenger air bag/pretensioner.

See Owner's Manual

WARNINGS: Never place rear-facing infant-safety seat in front of any air bag, an infant is in serious danger of being injured or killed. If you must install a forward-facing child-safety seat in the front seating position, move vehicle seat as far back as possible.

Tire Pressure Monitoring System (TPMS)*

 
Warning light illuminates for a few seconds with ignition on. If tire pressure is low, warning light illuminates with audible beep sound, adjust tire pressure to correct specifications, perform tire pressure adjustment before driving, a digital tire pressure gauge is recommended. Flashing warning light may indicate malfunction, dealer inspection required.

*Denotes optional equipment

† See Owner's Manual

Always check the Owner's Manual for more operating information and safety features

GETTING STARTED

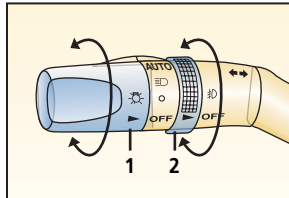**Turn signal/lighting control lever**

OFF = Lights off

○ = Tail, parking and dashboard lights on: Rotate knob (1) to first notch

☰ = Tail, parking, dashboard and headlights on: Rotate knob (1) to second notch

AUTO* = With ignition switch in ON position; headlights and exterior lights automatically turn ON/OFF depending on surrounding darkness/lightness; rotate knob (1) to third notch

 
High beams on/off: Push forward/pull back to detent

To flash high beams: Pull back slightly and release

Turn signals right/left: Move lever up/down

⦿ = Fog lights* on: Rotate (2); functions only with headlight low beams on

Tip: Headlights switch off, parking lights remain on, if lights are left on and switch is in lock position or key removed

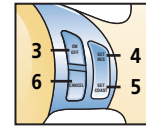**Cruise control***

Operates above 19 mph

Press MAIN (3) to turn system on/off

To set speed: Accelerate to desired speed and press SET/COAST (5)

 
To accelerate: Press and hold RES/ACCEL (4); release button at desired speed

To decelerate: Press and hold SET/COAST (5); release button at desired speed

Incremental acceleration: Press and release (4); each tap = plus 1 mph

Incremental deceleration: Press and release (5); each tap = minus 1 mph

To cancel: Press CANCEL (6) or MAIN (3); tap brake pedal or depress clutch pedal*

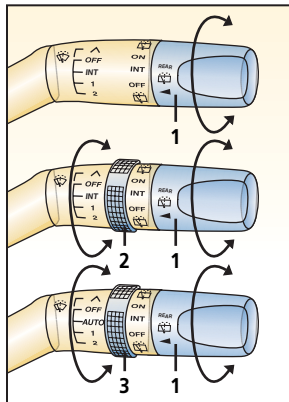**Wiper/washer control lever**

Single wipe: Push lever up

Washer: Pull back, also operates wipers

Intermittent wiper: One click down

To change interval speed: Rotate inner ring* (2)

Normal wiper speed: Two clicks down

High-speed wiper: Three clicks down

Auto*: One click down

Rain sensor senses rain amount on windshield, then controls wiper automatically

 
Rain sensor sensitivity is adjusted from high sensitivity (+) to less sensitivity (-) by rotating ring (3)

Rear window wiper/washer (5-Door only)

To activate rear interval wiper: Rotate knob (1) up to INT

To activate rear normal speed wiper: Rotate knob (1) up to ON

To activate rear washer: Rotate knob (1) to and release

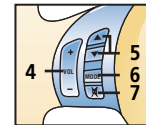**Steering-wheel audio controls***

To increase/decrease volume: Press (4)

Radio: Press ▲ / ▼ (5) less than one second to select next/previous preset station, press ▲ / ▼ (5) more than one second until beep sound is heard to seek next/previous station

Cassette*/CD: Press ▲ (5) to select next selection/track, press ▼ (5) to repeat current selection/track

Press (6) to select FM1, FM2, AM, SAT 1*, 2*, 3*, CD and Cassette*

Press (7) to mute audio/NAVI system

**Fuel filler door**

 
Located on passenger side

* Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Instrument Cluster

INSTRUMENT CLUSTER

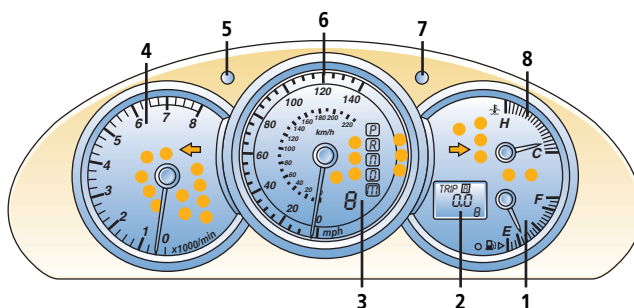

GAUGES

- 1. Fuel gauge**
15-gallon/55-liter tank (2.0L and 2.3L engines)
- 2. Odometer/Trip meter**
- 3. Gear indicator (A/T only)***
Displays current gear position
- 4. Tachometer**
- 5. Instrument cluster dimmer select button*,**
see Getting Started
- 6. Speedometer**
- 7. Odometer/Trip meter selector**
Press to view odometer; press again to reset trip odometer A/B settings
- 8. Engine coolant temperature gauge**
Stop car if above normal range, turn off engine, let vehicle cool; check coolant level when safe

WARNING LIGHTS

- **CRUISE** **Cruise control on***, see Getting Started
- **CRUISE MAIN** **Cruise control main power on***, see Getting Started
- **Tire Pressure Monitoring System (TPMS)***, see Getting Started
- **Turn signals/hazard warning on**
- **High beams on**
- **Engine oil-pressure warning light**
Stop car when safe and turn off engine; check oil level
- **Brake system**
Parking brake on/low brake fluid
- **Always fasten seat belts**
- **Security indicator light***
- **Lights on**
- **Charging system warning light**
Charging system malfunction; dealer inspection required
- **Air bag/front seat belt pretensioner system**
If light flashes or stays on, the air bags/front seat belt pretensioners may not operate in an accident; dealer inspection required
- **Door ajar**
- **Power steering malfunction**
Dealer inspection required if light remains on
- **Check engine**
Dealer inspection required
- **Low fuel**
- **AT Automatic transaxle warning light***
Automatic transaxle malfunction; dealer inspection required
- **Anti-lock Brake System (ABS)***
ABS malfunction, normal brakes only; dealer inspection required
When brake pedal is pressed, ABS automatically reduces hydraulic pressure to any wheel on the verge of locking up
You may feel a slight pulsing of the brake pedal and hear a clicking noise; this tells you the ABS is functioning properly; increase pressure on pedal for maximum braking

Tips: Maintain constant pressure on the brake pedal. Do not pump the brakes.

 
*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Instrument Cluster

Locks

LOCKS

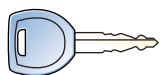

Key
Operates ignition and all locks

 
Tip: Use key number plate to purchase a new key; store in safe place separate from vehicle



Remote entry system*, see Getting Started

Illuminated entry system

Activates interior lights when dome light switch set to DOOR position; lights off after driver's door is locked or ignition in ON position

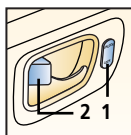

Power door locks* Master front door locks switches

To lock/unlock all doors: Press bottom/top of switch (1)

 
To lock doors without key: With door open, press bottom of door lock switch, exit car, close doors

To unlock: Use key to unlock driver's front door, rotate key to counterclockwise position for more than one second to unlock other doors

Manual door locks Lock button

To lock: Press front of button (2) toward door handle

To unlock: Pull front of button away from door handle

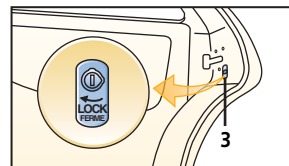


Child-safety locks

Located at the edge of rear doors

To activate: Rotate childproof lock (3) in direction of arrow using key tip (doors open from outside only); rotate in opposite direction to deactivate

 WARNINGS: Since children may access either rear door, child-safety locks for both rear doors should be activated
Never leave a child in car with key in ignition

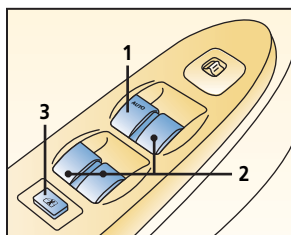


Power windows*

Ignition must be on
All windows controlled from the driver's armrest; passenger doors have separate switches

1. Driver's window: One-touch-down; push down firmly and release, window goes down all the way; pull switch back briefly to stop; press lightly and hold for normal operation

2. Passenger window switches: Push down and hold to open, pull back and hold to close

 3. Power window lockout switch: Press down until it clicks, only driver's window operates; press again and passenger window switches function again

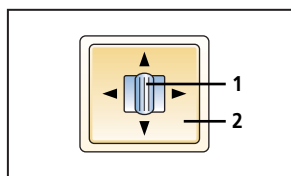


Dual power mirrors*

Ignition must be in ACC or ON

To adjust left/right mirror: Press control switch (1) left/right, press switch (2) in direction of desired mirror movement

 Tip: To lock mirrors in place, move control switch to center position

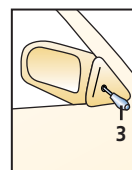

Manual mirrors

To adjust: Move knob (3) on door

 
*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features


Switches

Interior Lights


INTERIOR LIGHTS

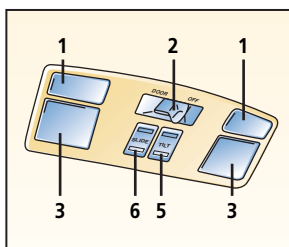

 
- 1. Map/reading light switch***
Press on/off
- 2. Interior light switch**
DOOR = light on when door open
ON = light always on
OFF = light always off
- 3. Front interior light**
- 4. Rear interior light**

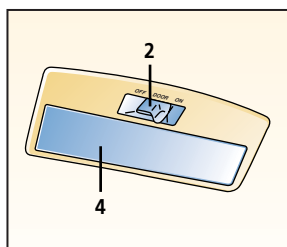

 - 5. Sunroof tilt switch***
Press rear of switch to tilt rear of sunroof
Press front of switch to close
- 6. Sunroof slide switch***
Press rear of switch to open sunroof
Press front of switch to close

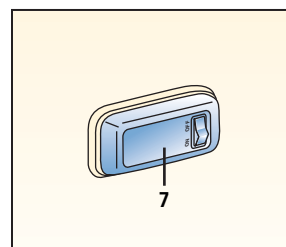

 - 7. Cargo light* (5-Door)**
ON = Light always on
OFF = Light always off
- Cargo light* (4-Door)**
Light on with trunk open
See Trunk/Cargo Area
- Driver/passenger covered visor mirrors**
To access mirror: Lower visor

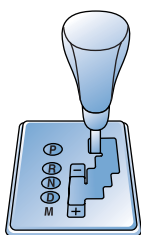

Automatic Transaxle*

Gearshift must be in Park or Neutral to start engine; it must be in Park to remove ignition key

P = Park

To move gearshift from Park: Press firmly on brake pedal then move the shift lever out of P

R = Reverse

N = Neutral
No gear engaged

D Drive (Overdrive)

For normal driving: Shifts through all forward gears automatically



 
M (Sport A/T manual shift mode)

Move shifter from D to M to engage manual shift mode, M will be illuminated for manual mode on

shift position indicator located in the instrument panel
Manual shifting of transmission is achieved by moving shifter back to upshift and forward to downshift, move shifter from M to D to engage automatic shift mode


Gear indicator (A/T only)*

Illuminated numeral of gear indicator located in the instrument panel displays current gear in Automatic and Manual shift modes

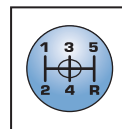

Manual transaxle

 Depress clutch pedal to start engine and change gears

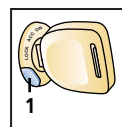

Ignition key release button (M/T only)

Press button (1) to remove key from ignition

Tips: Do not shift into 1st above 20 mph or clutch failure could occur
Resting your foot on clutch pedal while driving or using the clutch to hold your vehicle at a standstill while waiting on a hill may reduce clutch life

* Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Transaxle

Seats

 
 
SEATS

Shoulder belt height adjustment

To raise:
Push adjuster upward

To lower:
Pull button (1) and slide downward

⚠ WARNING: Make sure adjuster locks in one of its positions

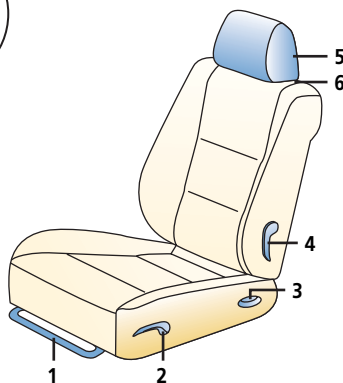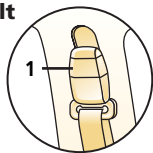

Seat controls

1. Fore-aft adjustment

Lift lever and hold, slide seat, release lever

2. Raise/lower seat (Driver's seat only)

Pull/push lever and release

3. Seat back angle

To adjust: Lift and hold lever, lean forward or backward to tilt seat, release lever

4. Lumbar support adjustment* (Driver's seat only)

Pull lever forward

5. Head restraint

To raise/lower: Pull up/hold release button (6) and push down

☀ Tip: Side-impact air bags* deploy from outboard side of front seatbacks

⚠ WARNINGS: Do not adjust seats while driving

Safety belts must always be worn when vehicle is in motion

Air bags are supplemental and do not replace safety belt usage

Always wear your safety belt and properly secure children 12 and under in the rear seat

Never place rear-facing infant-safety seat in front of any air bag, an infant is in serious danger of being injured or killed

If you must install a forward-facing child-safety seat in the front seating position, move vehicle seat as far back as possible

Use age appropriate child restraints, see Owner's Manual and state or province laws

Child-safety seat

To install in rear outboard seats: Use dual locking mode retractor seat belts; see Owner's Manual for proper installation and child seat tether and LATCH system instructions

Safety belt emergency locking mode

 
Belts lock only on hard acceleration, braking, cornering or impacts of about 5 mph or more

Automatic locking mode (front passenger and all rear safety belts only)

Must be used when installing child-safety seat

To activate: Pull belt fully out of retractor, allow belt to retract until click is heard; belt will only tighten

To disengage: Unbuckle belt and allow belt to retract fully

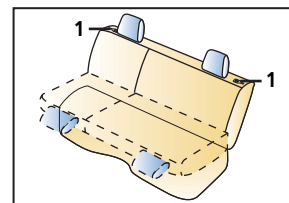

Split fold-down rear seatbacks

To fold: Push release knob (1), push seatback down

To return and lock: Push seatback firmly until latched, make sure seatbelts are returned to original positions

☀ Tip: 4-Door has seatback locks as part of trunk security

 
⚠ WARNING: Lower seatback slowly using both hands, seatback is heavy and could cause personal injury

* Denotes optional equipment


Always check the Owner's Manual for more operating information and safety features

Seats

CLIMATE CONTROLS

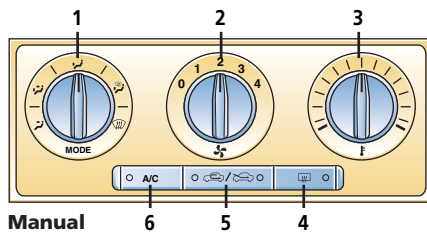

Manual

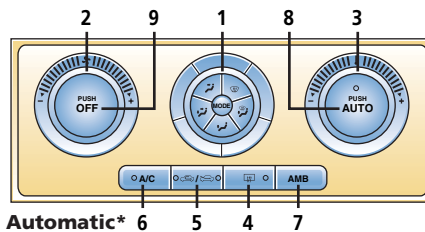 

Automatic*

1. Air flow selections

- = air to dash
- = air to dash and floor
- = air to floor
- = air to floor and windshield
- = defrost, air to windshield

2. Fan control

Rotate knob right/left to increase/decrease fan speed

WARNING: Do not use position in cold weather; windows will fog and hamper vision

6. Air Conditioning*

Press to activate/deactivate

Tip: Floor position and both defrost positions / : A/C turns ON, air intake switches to fresh air

8. AUTO

Press for automatic operation; rotate dial to set temperature, see Owner's Manual

Tip: Automatic climate control display viewed via information display, see below

9. OFF

Press (9) to turn system off (Automatic System), rotate knob (2) to 0 (Manual System)

3. Temperature control

Rotate knob to blue for cool, red for warm

4. Rear window defogger

Press to activate/deactivate

5. Air Intake Control

Push switch to select
 = recirculate inside air; use for maximum heating/cooling or to keep odors out
 = fresh air

7. AMB*

 
Press to display ambient temperature, press again to switch display to temperature set for air conditioner

Tip: With audio system ON, temperature display can be switched between Centigrade and Fahrenheit or vice versa by pressing audio POWER button, then pressing MEDIA button and holding both for five seconds or more

Control positions for maximum defrost

Fan to maximum, temperature to maximum hot, air flow selector knob to

Tips: To help prevent windshield fogging in humid weather, select before starting engine
 To prevent moisture buildup, never drive with system off
 Objects placed under the front seats may interfere with air flow to the rear

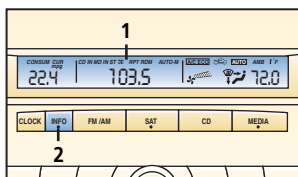

Information display

Information display (1) has the following functions: Clock, ambient temperature display* (AMB), automatic climate control display, audio display and trip computer*

*Denotes optional equipment

Trip computer* can display current fuel economy, average fuel economy, approximate distance you can travel on available fuel and average vehicle speed
 Ignition must be in ON position, press INFO button* (2) to change display mode

Always check the Owner's Manual for more operating information and safety features

Information Display

Audio Systems

RADIO/COMPACT DISC

Audio systems

1. Power/Volume

Press to turn on/off; rotate to increase/decrease volume

2. Program Random†

Press to enable/cancel random play

3. Tune/Auto-Memory/Display

 
Radio: Press and hold until a beep sound is heard; system automatically scans and temporarily stores up to six strong stations in each band; press again to switch to another preset station
Tune: Rotate counterclockwise/clockwise for lower frequency/higher frequency

4. Program

Press to change cassette tape-play direction

5. SEEK/TRACK/APC

Radio: Press ▲ / ▼ to automatically seek higher/lower frequency

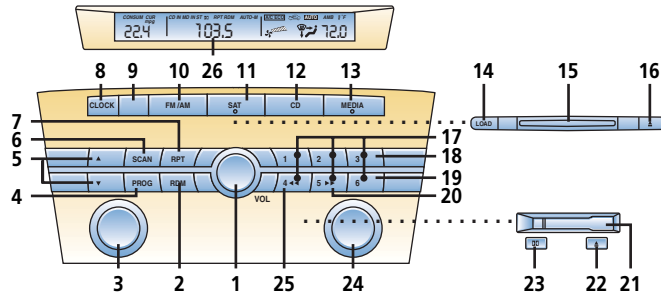

9. SET or INFO*

Clock setting button, see Clock (8)
See Information Display

10. FM/AM

Press to turn radio on and select between FM1/FM2/AM station preset buttons (17)

18. Disc up ^†

Press to skip forward to beginning of next CD

19. Disc down v†

Press to skip back to beginning of previous CD

20. Fast forward ►►

Press to fast forward through a track

CD: Press ▲ / ▼ to select next/beginning of current track
Tape: Press ▲ / ▼ to automatically advance tape to beginning of next selection/replay selection; to stop this operation, press button again

6. Scan

Press to briefly sample next listenable selections; functions in all modes

7. RPT

Press to replay current selection

8. Clock

To set: With ignition in ACC or ON position, press (8) and hold until beep sounds; 12 hr/24 hr will be displayed; press (9) to select; press (8) again while selection is flashing: Hr ADJUST displays; press (9) to select hr; press (8) when done, do the same to set minutes

11. SAT*

Satellite ready capability

12. CD

Press to play CD

13. MEDIA*

Press to play cassette tape

14. LOAD*

To load multiple discs: Press and hold LOAD (14) until beep sound is heard; insert CD when "In" is displayed

To eject disc: Press Eject (16)

To eject specific disc: Press and hold Eject (16) until beep sound is heard; within five seconds press the desired tray number 1-6 (17)

15. CD slot

16. CD eject button

17. Memory preset buttons

To set: Tune to station, press and hold until beep sound is heard

21. Cassette door*


22. Eject button*

23. Dolby® Noise Reduction*

Reduces tape noise and hiss; press to activate/deactivate

24. Text/Audio Control

Audio control: Press to select ALC/BASS/TREBLE/FADE/BAL/BEEP ON/ILLM ON
Rotate right/left to adjust selected feature

 **Tip: Automatic Level Control (ALC) automatically adjusts audio volume depending on vehicle speed**

25. Reverse ◀◀

Press to reverse through a track

26. Display, see Information Display

* Denotes optional equipment

 
† For use with CD, or CD changer*

Always check the Owner's Manual for more operating information and safety features

Audio Systems

Trunk/ Cargo Area

TRUNK / CARGO AREA

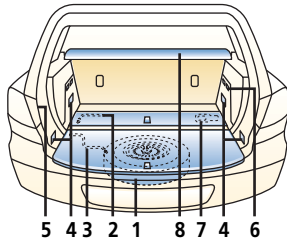

MAZDA3 5-Door

1. Temporary spare tire

Stored under panel in trunk; to change flat tire: Follow instructions in Owner's Manual

WARNING: Do not exceed 50 mph with temporary spare

Tip: For instructions and restrictions on use of temporary spare tire, see Owner's Manual

2. Lug wrench

3. Jack handle

 
4. Cargo securing loops

5. Jack

6. Cargo light

7. Front tiedown eyelet

8. Cargo area cover

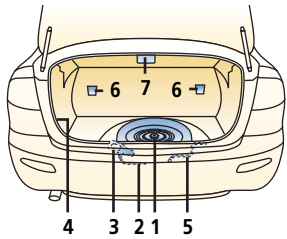

MAZDA3 4-Door

1. Temporary spare tire

Stored under panel in trunk; to change flat tire: Follow instructions in Owner's Manual

WARNING: Do not exceed 50 mph with temporary spare

Tip: For instructions and restrictions on use of temporary spare tire, see Owner's Manual

2. Lug wrench

3. Front tiedown eyelet

4. Jack

5. Jack handle

6. Rear seatback lock (4-Door only)

Lock or unlock: Move lever

7. Cargo light

Tire economy and tips

Check pressure at least monthly when tires are cold

Tires should be of the same make, kind and dimension

Maintain correct front-end alignment and tire balance; rotate tires at 7,500-mile intervals; see Owner's Manual for rotation chart

Tire pressure

Decal on driver's door provides tire pressure information

Tire chains*†

Use only SAE Class "S" chains; install on front tires as tightly as possible and re-tighten periodically; do not use chains on dry roads, aluminum wheels, or with tire pressure monitor system, damage may occur, use on steel wheels only



Luggage compartment internal safety release

Allows you to escape should you become locked in trunk. Slide illuminated release lever in direction of arrow; lever will glow if it has been exposed to light. Located on interior trunk lid.

*Denotes optional equipment

 
† See Owner's Manual

Always check the Owner's Manual for more operating information and safety features

Trunk/ Cargo Area

Under Hood

UNDER HOOD

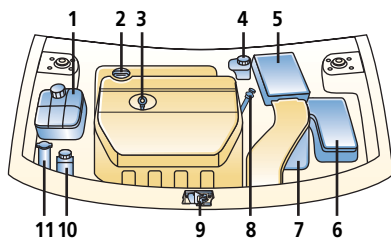

2.0/2.3-liter Engine

1. Engine coolant reservoir

Level should be between COLD FILL RANGE indicator marks

⚠ WARNING: Never remove coolant reservoir cap while engine is running or hot; remove only when safe

2. Engine oil filler cap

See Owner's Manual for recommended engine oil viscosity

3. Engine oil dipstick

Fluid should be between F and L on dipstick; do not fill above F

4. Brake/clutch fluid reservoir

Fill to MAX mark with DOT 3 fluid; check with cap on

💡 Tip: Clutch uses same reservoir as brakes

5. Battery

6. Fuse panel

Push latch in, lift cover must be between the indicator marks on the dipstick

7. Air filter

8. Automatic transaxle fluid dipstick*

Check with transaxle in park, engine on and at operating temperature

9. Hood latch

Pull up to release hood

10. Power steering fluid reservoir

Level should be between MIN and MAX lines

11. Windshield washer reservoir

Fill with windshield washer fluid

💡 Tip: Check all fluids with vehicle parked on a level surface and engine off unless otherwise stated

Break-in period

First 600 miles: Avoid heavy braking and acceleration; drive at varying road and engine speeds

💡 Tip: Follow the same procedures with newly overhauled engine or when brakes are replaced

Maintenance notes:

Rotate tires every 7,500 miles or sooner if needed
Replace cabin air filter every 25,000 miles or 24 months
Replace (FL22)* engine coolant at 120,000 miles

💡 Tip: For severe driving conditions, Owner's Manual recommends changing oil and filter at 5,000† miles

NORMAL SERVICE INTERVALS

7,500 miles	A		
15,000 miles	A		F
22,500 miles	A		
30,000 miles	A B		F
37,500 miles	A	C	
45,000 miles	A		F G
52,500 miles	A		
60,000 miles	A B	D	F
67,500 miles	A		
75,000 miles	A	C	E F
82,500 miles	A		
90,000 miles	A B		F G

💡 Tip: For additional service intervals and complete details, see Owner's Manual

A. Replace: Engine oil/filter
Lubricate: All locks and hinges

B. Inspect: Cooling system, fuel lines and hoses, brake lines, hoses and connections, steering operation and linkages, front and rear suspension and ball joints, drive-shaft dust boots

C. Inspect: Drive belts (tension)
Replace: Air filter

D. Inspect: Hoses and tubes for emission system
Replace: Engine coolant (Other than FL22)

E. Inspect: Engine valve clearance
Replace: Spark plugs

F. Inspect: Disc brakes

G. Inspect: Exhaust system and heat shields

*Denotes optional equipment

† See Owner's Manual

Always check the Owner's Manual for more operating information and safety features