



VOLVO C70

QUICK GUIDE



WELCOME TO THE GLOBAL FAMILY OF VOLVO OWNERS!

Getting to know your new vehicle is an exciting experience.

Please browse through this Quick Guide to get the full benefits from your new Volvo. For detailed information, please refer to your Owner's Manual.

Warning texts and other important information are only provided in the Owner's Manual - not in this folder. The Owner's Manual contains the most up-to-date information.

For additional information, contact Customer Service:

U.S.A.: 1-800-458-1552 www.volvocars.us

CANADA: 1-800-663-8255 www.volvocanada.com



KEY BLADE

Used to lock/unlock the glove compartment or the driver's door if the vehicle has no electrical current.



To mechanically open the trunk.



Locks the doors, trunk, cabin storage compartments, ski hatch, and arms the alarm. If the car is locked with the remote control while the power retractable hard top is down, the double locking feature activates after approximately 30 seconds. The doors can then not be opened from inside the car.



Unlocks the doors, trunk, cabin storage compartments, ski hatch, and disarms the alarm^A.



Unlocks the trunk. (Does not open the trunk)



Approach lighting (30 seconds^B) illuminates lights in door mirrors, cabin, footwells, license plates. Turn signals and parking lights illuminate.



"Panic" alarm. Press and hold to sound the alarm. Turn off alarm with unlock button.

^A Automatic relock occurs if no door/tailgate is opened within 2 minutes after unlock.

^B The time can be set to 30, 60, or 90 seconds.

COLD START



NOTE

After cold starts, your engine will idle at a higher speed for a short time.

AUTOSTART

 
Depress the clutch and/or brake pedal. Turn the key/keyless drive start control to position III and release it. The engine will start automatically.

TURN SIGNALS



A. Lane-change sequence, **three flashes**.
B. **Full turn** sequence.

STEERING WHEEL ADJUSTMENT

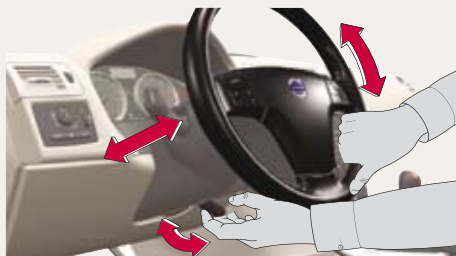

Adjust tilt and telescope.

WARNING! Never adjust the steering wheel while driving.

LIGHTING PANEL



0 Automatic headlights. High beam flash only.

Parking lights

Headlights: turn off when ignition is switched off, high/low beams.

Display & instrument panel lighting

Front fog lights (option)

Rear fog light (driver's side only)

A High beam flash

B Toggle between high/low beams, home safe lighting.



REFUELING



Press this button to unlock the fuel filler door.

Hang the fuel filler cap on the hook while refueling.

CAR CARE



We do not recommend washing your car in an automatic wash during the first six months because the paint will not have hardened sufficiently.

Leather upholstery requires regular care. Treat the leather with protectant cream, one to four times a year as necessary. Consult your Volvo retailer for leather care products.

BLIS – BLIND SPOT INFORMATION SYSTEM (OPTION)



 
If the BLIS indicator lights illuminate occasionally even when there are no other vehicles in the blind area, this may be caused by light reflected from a wet road surface, the vehicle's own shadow against a large, light, smooth surface, or sunlight directly in the camera when the sun is low on the horizon.

In the event of a fault, **Blind spot syst. service required** will be displayed.

AUTOMATIC CAR WASH



Remove the antenna, by turning it counterclockwise, before washing the car in an automatic car wash.

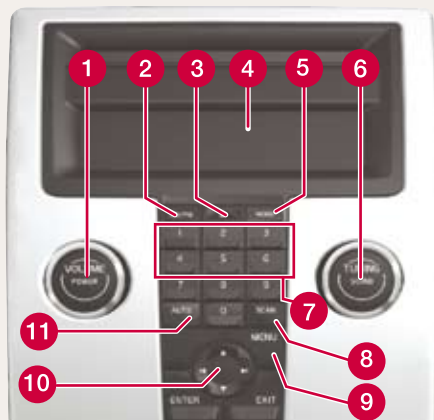

- 1 On/Off and volume.** Press to turn on/off. Turn to adjust volume. Radio and Volvo Navigation System (option) volume are stored individually.
- 2 FM1, FM2 or AM radio**
- 4 Display**
- 5 MODE, CD, Sirius satellite radio (option), AUX^A.**
- 6 Sound settings.** Press to select e.g., BASS, TREBLE, etc. Turn to adjust.
- 9 MENU.** AUX volume and advanced sound settings.

^A AUX connector for e.g., MP3 player. Set MP3 player's volume to medium for best sound quality. The accessory iPod Music Interface enables control of the music player using the audio system controls or steering wheel keypad.

^B Files in MP3 and WMA formats can also be played

RADIO

- 6 Turn to select a radio station.**
- 10 Search for stations** with left/right arrows or **SCAN** (8). **Store up to 20 stations** by pressing and holding one of the preset buttons (7) **0-9** in FM1 and **0-9** in FM2. A stored station is confirmed in the display.
- 11 Autostore stations**
Press **AUTO** for 2 seconds. **AUTOSTORE** is displayed during the search. The 10 strongest stations are stored. Press **0-9** to select a station.

CD PLAYER^B

- 10 Change CD tracks** with left/right arrows or turn (6).
Select CD (optional CD changer only) with up/down arrows.
- 3 CD eject.** Press to eject current CD. Press and hold to eject all CDs.
- 7 CD select** (optional CD changer only). Press 1-6.

 
BLUETOOTH[®]


1. Make the cell phone searchable/visible.
2. Press the **PHONE** button on the audio system control panel briefly.
3. Select "Add phone" in the audio system display.
4. Select the cell phone to be connected.
5. Enter the numbers shown in the audio system display using the cell phone's keypad.

WINDSHIELD WIPERS AND RAIN SENSOR (OPTION)



- C Single wiper sweep**
- 0 Off**
- D Intermittent wipers.** Turn (B) to adjust interval
- E Normal speed**
- F High speed**
- G Windshield and headlight washer**

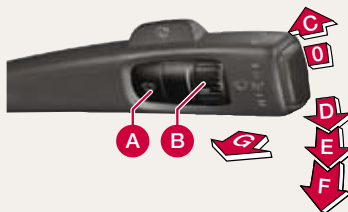

- A Activate rain sensor.** Positions **D-F** deactivate the rain sensor.
- B Turn to adjust rain sensor sensitivity.**
-  **Symbol in display** (rain sensor on).



AUTOMATIC CONTROL

In **AUTO** mode, ECC controls all functions automatically and makes driving more pleasant with optimal air quality.

1 Automatic mode

Press **AUTO** to maintain cabin temperature balanced airflow, and other settings.

2 Temperature

Press to individually adjust the left (**L**) or right (**R**) side. Turn the dial to the desired temperature, which is shown in the display.

MANUAL CONTROL



Blower speed



Air distribution



Defroster to quickly remove mist on the windshield and side windows.



Recirculation



AC Air conditioning off/on.



Heated rear window and door mirrors. Timer function^A.

^A Rear window 12 minutes. Mirrors 6 minutes.

 
TIRE PRESSURE MONITORING SYSTEM (TPMS)



When a low tire pressure warning message has been displayed and the tire pressure warning light has come on, one or more tires has low inflation pressure.

Stop the vehicle in a safe place and check the inflation pressure of all four tires with a tire pressure gauge.

CD STORAGE

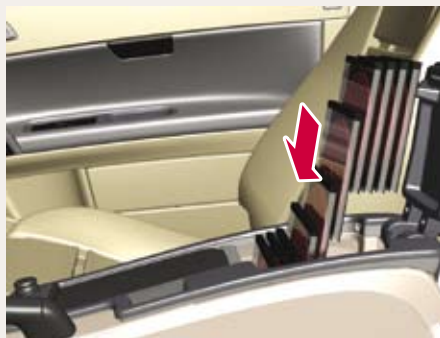

The deep center storage compartment has room for 10 CD jewel cases. These cases must be inserted with their spines upward in order to allow room for 10 CDs.

ODOMETER AND TRIP COMPUTER



FUEL

- 1 Low fuel level indicator**
When the symbol illuminates, refuel as soon as possible.
- 2 Fuel gauge**
The fuel filler door is on the right, as indicated by the arrow.

TRIP ODOMETER

- 3 Press quickly to toggle between T1 & T2. Press and hold to reset the displayed odometer.**
- 4 The trip odometer display shows two separate trip odometers, T1 & T2.**

DISPLAY

- 5 Information display (trip computer information, messages, clock and ambient temperature).**

TRIP COMPUTER

 


- 6 Press** to erase a displayed message.
- 7 Turn** to show trip computer information such as **MILES TO EMPTY TANK** in the information display.
- 8 Reset current function.** A long press resets all functions.

NOTE

MILES TO EMPTY TANK is an approximation, based on recent average fuel consumption.

DRIVER'S DOOR CONTROL PANEL

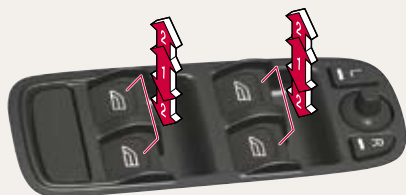

AUTOMATIC WINDOW FUNCTION

When a door is opened or the power retractable hard top is operated, the windows open automatically approximately 1 in. (2 cm). The windows close again automatically.

L R Adjusting the door mirrors. Select L or R. Adjust with the control.

- 1** Open/close a window partially
- 2** Open/close a window fully



PREPARATION

There should be no objects on the parcel shelf, roof, or trunk lid.

- 6.5 ft (2 m) free height above the car, and 8 in. (0.2 m) behind.
- Flat ground.
- Ambient temperature above 14 °F (-10 °C).
- Trunk lid and trunk divider closed.
- The car must be at a standstill.
- Always have an unobstructed view of the power retractable hard top when it is in motion.

 
The windows open automatically approximately 1 in. (2 cm) when the power retractable hard top is operated. They close automatically.

OPERATION



1. Engine idling (car parked outdoors).
2. Press the brake pedal.
3. Hold down the button (see inset illustration above) to open or pull up to close the convertible hard top. Hold until a tone is audible and the message TOP FULLY UP/TOP FULLY DOWN is displayed.
4. Release the button.

TRUNK DIVIDER

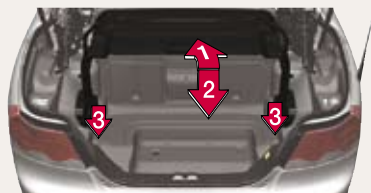

The trunk divider limits the amount of cargo in the trunk to leave space for the power retractable hard top.

1. Raise the divider when loading the trunk.
2. Close the divider completely (3) before operating the hard top. See the decal on the trunk divider.

LOAD ASSISTANCE



Raise or lower the folded power retractable hard top to facilitate loading.

Press the button and wait several seconds for the hard top to rise slightly. Open the trunk divider, load the cargo, and close the trunk divider again.

Press the button again to lower the folded power retractable hard top.



 
1 Lumbar support

2 Backrest tilt

3 Raise/lower the seat

4 Raise/lower the front edge of the seat cushion

5 Forward/rearward

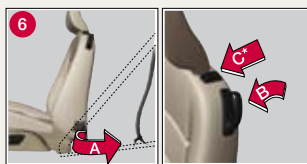

6 Access to rear seat & seat belt guide

Manual seat

A. Remove the seat belt from the guide.

B. Pull up the handle and move the seat forward.

Power seat (option)

A. Remove the seat belt from the guide.

B. Pull up the handle and fold the backrest down.

C. Press and hold the button while the seat moves forward.

STORAGE SPACES, 12-VOLT SOCKET & AUX CONNECTOR (OPTION)



The front and rear **12-volt sockets** function in ignition positions **I** or **II**. The **12 volt socket** on the right side of the **trunk** is always active.

AUX can be used to connect e.g., an MP3 player to the vehicle's audio system. Use a 3.5 mm stereo mini plug.

The accessory iPod Music Interface enables control of the music player using the audio

system controls or steering wheel keypad.



CAUTION

Using the 12-volt socket in the trunk with the engine switched off will drain the battery.

