



S60





WEB EDITION
QUICK GUIDE

WELCOME TO THE GLOBAL FAMILY OF VOLVO OWNERS!

This Quick Guide provides a brief overview of the most common features and functions in your Volvo.

The Owner's Manual and the other driver's information provided contain important warnings and other information not included in this guide.

The following symbols indicate:

-  Specific call-outs in a general illustration.
-  Step-by-step instructions.
-  Important information that should be read in the Owner's Manual.
-  Important information, warnings and safety-related instructions marked by these symbols can be found on the last page of this guide.

An asterisk (*) indicates optional equipment.

For additional information, contact Customer Service:

U.S.A.: 1-800-458-1552 www.volvocars.com/us

Canada: 1-800-663-8255 www.volvocars.com/ca

01 Starting and driving

Remote key
Keyless drive
Starting and switching off the engine
Parking brake
Wipers

02 Driver support systems

Park Assist Pilot (PAP)*
Lane Keeping Aid (LKA)*
BLIS* and CTA*
Start/Stop*
Pedestrian Detection*

03 Your driving environment

Adjusting the seats
Adjusting the steering wheel
Folding down the rear seat backrests

04 Functions in your vehicle

Climate controls
Instrument panel
Infotainment system
Lighting controls
Bluetooth hands-free
Engine Remote Start*
External audio devices
Volvo Navigation System*
Menu settings
Setting the clock

05 Tips

Refueling
Vehicle care
Storage compartments
AUX/USB and 12-volt sockets

How does the remote key work?

01



- 1 Unlocks the doors and the trunk and disarms the alarm. This setting can be changed in **MY CAR**.
- 2 Locks the doors and the trunk and arms the alarm.
- 3 Approach lighting.
- 4 Press once to unlock the trunk only, press again to pop open the trunk lid.
- 5 Information about the vehicle (Personal Car Communicator (PCC*) only).
- 6 "Panic" alarm: Press and hold to sound the alarm. Turn off the alarm with the unlock button.

The remote key can store the positions of the power seat* and door mirrors.



What do the lights in the remote key (PCC* only) indicate?

01



- 1 Green light: the vehicle is locked.
- 2 Yellow light: the vehicle is unlocked.
- 3 Red light: the alarm has been triggered.
- 4 Alternatively flashing red lights: the alarm was triggered less than 5 minutes ago.



How does keyless drive* work?

01



A keyless drive remote key must be in your possession.

Locking and arming the alarm

- Press the pressure-sensitive area on any of the outside door handles or the rubber-covered button next to the trunk opening control.

Unlocking and disarming the alarm

- Pull a door handle to unlock and open the door or press the trunk opening control.

See the additional information on the last page of this guide.





How do I start the engine?

01

- 1 Holding the end of the remote key with the base of the key blade, insert the remote key into the ignition slot and press it in as far as possible.
- 2 Press the brake pedal.
- 3 Press the **START/STOP ENGINE** button briefly and release it to start the engine.

See the additional information on the last page of this guide.



How do I switch off the engine?

01

- 1 Park the vehicle and briefly press the **START/STOP ENGINE** button to switch off the engine.
- 2 Pull the remote key out of the ignition slot.



How do I set/release the parking brake?

01

Setting

- 1 Press firmly on the brake pedal.
- 2 Press the **PUSH LOCK/PULL RELEASE** control: the symbol in the instrument panel flashes while the parking brake is being applied and glows steadily when it has been fully applied.
- 3 Release the brake pedal.

Releasing

- 1 Press firmly on the brake pedal.
- 2 Pull the **PUSH LOCK/PULL RELEASE** control.



How do I start the windshield wipers and rain sensor*? 01

Press the lever down to start the windshield wipers or up for the single-sweep function.

- 1 Rain sensor On/Off.
- 2 Turn to adjust the rain sensor sensitivity or interval wiper speed.



How do I use Park Assist Pilot (PAP)*? 02

PAP determines if a parking space is big enough for your vehicle and helps to steer it into the space. The driver selects gears, regulates the vehicle's speed and applies the brakes.

- 1 Activate PAP by pressing the button. Speed must be below 20 mph (30 km/h).
- 2 Follow the instructions displayed in the instrument panel.
- 3 Be prepared to stop the vehicle when instructed to do so.

See the warning on the last page of this guide.



What does Lane Keeping Aid (LKA)* do? 02

If the vehicle crosses a side marker line or the road's center dividing line, LKA will provide active steering assistance to help steer it back into the lane.

If the vehicle crosses a side marker line, the driver will also be alerted by vibrations in the steering wheel.

- Activate LKA by pressing the button on the center console.

See the warning on the last page of this guide.





Blind Spot Information System (BLIS) indicates the presence of a fast approaching vehicle or a passing vehicle in the door mirror's blind area.

Cross Traffic Alert (CTA) detects vehicles crossing behind your vehicle while you are backing up.

BLIS and CTA are activated when the engine is started and can be deactivated/reactivated by pressing the button.

- 1 BLIS On/Off.
- 2 CTA On/Off – controlled by the same button as Park Assist*.

Park Assist – see your Owner's Manual for more information. See also the warning on the last page of this guide.



How do I use the Start/Stop function*?



Stopping the engine

Press and hold the brake pedal until the vehicle stops.

Starting the engine

Release the brake pedal.

The indicator light in the button indicates that the function is active.



How does Pedestrian Detection* work?



The optional Pedestrian and Cyclist Detection with Full Auto Brake system has a feature that helps detect pedestrians and applies the brakes to help slow or stop the vehicle.

This feature is designed to be a supplementary driving aid and cannot detect pedestrians in all situations. It is not intended to replace the driver's attention and judgement.

Understanding this feature is essential, see your Owner's Manual for more information. See also the warning on the last page of this guide.



How do I adjust the seat?

03



- 1 Raise/lower the front edge of the seat cushion.
- 2 Raise/lower the seat.
- 3 Move the seat forward/rearward.
- 4 Tilt the backrest.
- 5 Memory button (M).
- 6 Buttons for storing seat positions.

Programming the power seat's* memory

- 1 Adjust the seat to the desired position.
- 2 Press and hold down the M (memory) button (5).
- 3 With the M button depressed, briefly press one of the buttons (6) to store the current seat position.



See the warning on the last page of this guide.

How do I adjust the steering wheel?

03



- 1 Release the steering wheel.
- 2 Adjust up/down/fore/aft.
- 3 Lock the steering wheel in position.



See the warning on the last page of this guide.

How do I fold down the rear seat backrests? 03



Both sections of the split rear seat backrest can be folded down: together or separately.

- 1 Pull the desired handle at the upper edge of the trunk opening.
- 2 Fold the backrest down. Lower the center head restraint if that section of the backrest is to be folded down.



See the warning on the last page of this guide.



How do I set the temperature? 04



- 1 Turn the controls to set the temperatures on the driver and passenger sides respectively. The selected temperature is shown in the display.
- 2 Press **AUTO** to automatically regulate cooling, heating, blower speed, recirculation, and air distribution to maintain the chosen temperature. **AUTO CLIMATE** is displayed.



How do I defrost the windshield? 04




- 1 Press to activate electrical heating*; the symbol (1) illuminates in the display.
- 2 Press again to also direct airflow toward the windshield and front side windows; symbols (1) and (2) will illuminate.
- 3 Press again to switch off both functions; no symbols will be illuminated.

Models without electrical defrosting: Press to direct airflow toward the windshield and front side windows.



How do I operate the trip computer?

04

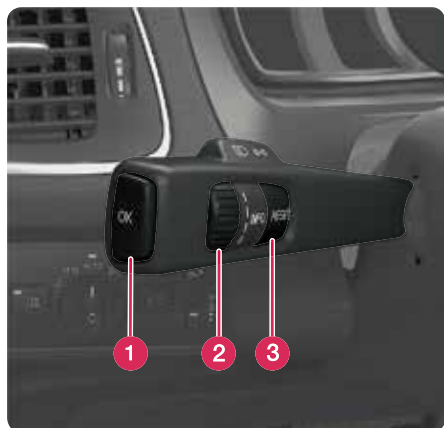

- 1 **OK** opens the trip computer menus, activates a selection or erases displayed messages.
- 2 Use the thumb wheel to scroll among the menu selections.
- 3 **RESET** resets the trip computer functions and exits the menus.



How do I reset the trip odometers?


04



- 1 Turn the left side steering wheel thumb wheel to scroll to the desired trip odometer (T1 or T2).
- 2 Press and hold **RESET** to reset.

What does the trip computer's "Distance to empty" indicate?

04

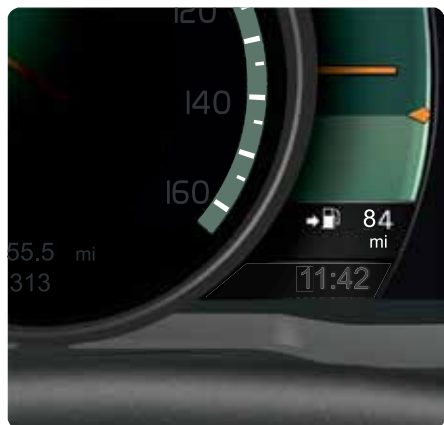

This is the approximate distance that can be driven on the remaining fuel based on average fuel consumption during the last 20 miles (30 km) of driving (digital* instrument panel shown).

When "...distance to empty" is displayed (analog instrument panel), or "---" (digital* instrument panel), refuel as soon as possible.

See the additional information on the last page of this guide.





How do I switch the infotainment system on and off?

04

- 1 Press the power button briefly to switch the system on.
- 2 Press and hold the button (until the screen turns black) to switch off.

With the system on, press the button briefly to mute/unmute the sound.

Keep in mind that the entire Infotainment system, including telephone and navigation* functions, are switched on and off at the same time.



How do I navigate in the infotainment system?

04

- 1 Press **RADIO**, **MEDIA**, **MY CAR**, **NAV*** or **TEL** on the center console to select a mode.
- 2 Press **OK/MENU** or the thumb wheel on the steering wheel to display the mode's main view.
- 3 Turn **TUNE** or the thumb wheel to navigate in the menus.
- 4 Press **OK/MENU** or the thumb wheel to make a selection.

Press **EXIT** briefly to go back in the menu system, cancel a function or erase characters.

Press and hold **EXIT** to return to the mode's main view. From a mode's main view, press and hold **EXIT** to go to the infotainment system's main view.

Tip:

To display the shortcut menu while in the NAV or TEL modes, press **NAV** or **TEL**. Press again to return to the mode's main view.





How does the **AUTO** headlight feature work? 04

With the switch in the **AUTO** position:

- The headlights will switch automatically between daytime running lights and low beam headlights, depending on ambient lighting conditions.
- High beams can be used.
- Active Bending lights* (ABL) switch between high and low beams automatically if another vehicle approaches or is directly ahead.
- Tunnel detection* is also active.



How do I pair a **Bluetooth®** cell phone? 04

- 1 Press **TEL** on the center console.
- 2 Put the cell phone in Bluetooth® discoverable mode.
- 3 Press **OK/MENU** and follow the instructions on the screen to complete the procedure.

The phone will then be connected automatically to the infotainment system when it's within range.

See your Owner's Manual for alternative pairing instructions.



How do I make a call? 04

- 1 Press **TEL** on the center console.
- 2 Enter the desired phone number or turn the thumb wheel on the steering wheel downward to access the list of contacts or upward for a list of calls.
- 3 Press the thumb wheel to start the call.

Reject or end the call by pressing **EXIT**.

See your Owner's Manual for information about other ways of making calls.





How do I answer a call?

04

- Press the thumb wheel on the steering wheel to answer an incoming call.

Reject or end the call by pressing **EXIT**.

See your Owner's Manual for information about other ways of answering calls.



How does Engine Remote Start* (ERS) work? 04

Maximum range: approx. 100 ft (30 meters). The vehicle must be locked. To start the engine:

- 1 Press button 1 briefly.
- 2 Immediately press button 2 for approximately 2 seconds.

The following will occur:

- 1 The turn signals will flash several times.
- 2 The engine will start.
- 3 The turn signals will illuminate for 3 seconds to indicate that the engine has started.



How do I connect an external audio device? 04

- 1 Connect the device using the AUX or USB sockets in the tunnel console.
- 2 Press **MEDIA**.
- 3 Turn **TUNE** to the desired audio source.
- 4 Press **OK/MENU**.





How can I set a destination in the navigation* system? 04

- 1 Press **NAV** on the center console to start the system.
- 2 Press **NAV** again and select **Set address** by pressing **OK/MENU**.
- 3 Enter an address with the text wheel or the center console keypad.
- 4 Conclude by selecting **Set single destination** or **Add as waypoint** and press **OK/MENU**.

See the Volvo Navigation System* manual for additional information.



What settings can be made in the menu system? 04

Many of the vehicle's functions can be controlled in **MY CAR**, such as setting the clock, storing the door mirrors' position, locks, etc.

See the section "How do I navigate in the infotainment system" in this Quick Guide for more information.



How do I set the clock? 04

- 1 Go to **Settings > System options > Time** in **MY CAR**.
- 2 Press **OK/MENU** to activate the hour box. Turn **TUNE** to set the hour and press **OK/MENU**.
- 3 Turn **TUNE** to select the minute box and press **OK/MENU**. Turn **TUNE** to set the minute and press **OK/MENU**.
- 4 Turn **TUNE** to select **OK** and press **OK/MENU**.



How do I refuel?

05

- Press the button on the lighting panel to open the fuel filler door. The door will open when the button is released.

The arrow on the fuel pump symbol in the instrument panel shows the side of the vehicle that the fuel filler door is on.



How should I wash the vehicle?

05

Avoid washing the vehicle in an automatic car wash during the first few months (because the paint will not have hardened sufficiently).

Use a suitable car washing liquid and a clean sponge when hand-washing the vehicle. Dirt or grit on the sponge can scratch the paint.



How should I care for leather upholstery*?

05

Leather requires regular care to remain smooth and soft. Volvo leather care products, available from your retailer, should preferably be used several times a year.


See the additional information on the last page of this guide.



Where are the storage compartments located?

05

Several of the storage compartments are shown here.

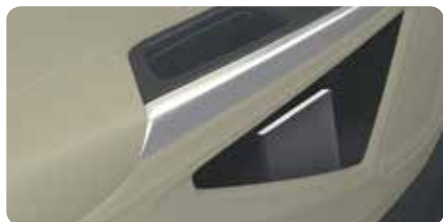

Your Owner's Manual shows all of the storage compartments.



Where are the AUX/USB/12-volt sockets?

05

The ignition must be in mode **I** or higher for the 12-volt sockets in the cabin to function. The 12-volt socket in the trunk* provides current even when the ignition is switched off.



See the additional information on the last page of this guide.



How does keyless drive* work?



Wearing thick gloves may affect the unlocking function. Keyless drive can be affected by electromagnetic fields and metal obstructions. Never carry the remote key close to a cell phone or metallic objects.

How do I start the engine?



After a cold start, idle speed may be noticeably higher than normal for a short period, regardless of the ambient temperature. This is done to help bring components in the emission control system to their normal operating temperature as quickly as possible.

How do I use Park Assist Pilot (PAP)*?



PAP does not function in all situations and is only intended to assist the driver when parallel parking. As the driver, you have full responsibility for parking the vehicle in a safe manner.

What does Lane Keeping Aid (LKA)* do?



LKA is only intended to assist the driver and does not function in all driving, weather, traffic or road conditions. As the driver, you have full responsibility for operating the vehicle in a safe manner.

What do BLIS* and CTA* do?



BLIS and CTA are information systems, NOT warning or safety systems and do not function in all situations. BLIS and CTA do not eliminate the need for you to visually confirm the conditions around you, and the need for you to turn your head and shoulders to make sure that you can safely change lanes or back up. As the driver, you have full responsibility for changing lanes/backing up in a safe manner.

How does Pedestrian Detection* work?



The system cannot detect all pedestrians in all situations, such as in darkness/at night and cannot detect partially hidden pedestrians, people who are less than approx. 32 in. (80 cm) tall, or people wearing clothing that obscures the contours of their bodies.

How do I adjust the seat?



Do not adjust the seat while driving. The seat should be adjusted so that the brake pedal can be depressed fully. In addition, position the seat as far rearward as comfort and control allow.

How do I adjust the steering wheel?



After adjusting the seat, always adjust the steering wheel prior to driving.

How do I fold down the rear seat backrests?



When one or more sections of the backrest is returned to the upright position, check that it is properly locked in place by pushing and pulling it. Long loads should always be securely anchored to help avoid injury in the event of a sudden stop.

What does the trip computer's "Distance to empty" indicate?



The accuracy of the figure shown may vary if your driving style changes. An economical driving style will generally increase this distance.

How should I care for leather upholstery?



Clothing that is not colorfast, such as new jeans or suede garments, may stain the upholstery. Gasoline, naphtha or similar cleaning agents should never be used on the leather since these can cause damage.

Where are the AUX/USB/12-volt sockets?



The maximum current consumption is 10A (120W) if only one of the 12-volt sockets in the passenger compartment is in use. If both the front and rear sockets are used at the same time, the maximum current consumption per socket is 7.5A (90W).