



S80

QUICK GUIDE

WEB EDITION







WELCOME TO THE GLOBAL FAMILY OF VOLVO OWNERS!

This Quick Guide provides a brief overview of the most common features and functions in your Volvo.

The Owner's Manual and the other driver's information provided contain important warnings and other information not included in this guide.

The following symbols indicate:

-  Specific call-outs in a general illustration.
-  Step-by-step instructions.
-  Important information that should be read in the Owner's Manual.
-  Important information, warnings and safety-related instructions marked by these symbols can be found on the last page of this guide.

An asterisk (*) indicates optional equipment.

For additional information, contact Customer Service:

U.S.A.: 1-800-458-1552 www.volvocars.com/us

Canada: 1-800-663-8255 www.volvocars.com/ca

01 Starting and driving

Remote key
Starting and switching off the engine
Parking brake
Keyless drive*
Wipers

02 Driver support systems

BLIS*
Pedestrian protection*
HomeLink®*

03 Your driving environment

Adjusting the seats
Adjusting the steering wheel
Folding down the rear seat backrests
Moonroof*

04 Functions in your vehicle

Climate control
Lighting controls
Instrument panel
Infotainment system
Bluetooth hands-free
External audio devices
Buttons in the center console
Menu settings

05 Tips

Vehicle care
Storage compartments
AUX/USB and 12-volt sockets
Engine Remote Start* (ERS)

How does the remote key work?

01



- 1 Unlocks the doors and trunk and disarms the alarm.
- 2 Locks the doors and trunk and arms the alarm.
- 3 Approach lighting.
- 4 Unlocks/opens the trunk (press once to unlock; press twice to open the trunk slightly).
- 5 Information about the vehicle (Personal Car Communicator (PCC*) only).
- 6 "Panic" alarm: Press and hold to sound the alarm. Turn off the alarm with the unlock button.

The remote key can store the positions of the power seat* and door mirrors.



What do the lights in the remote key (PCC* only) indicate?

01



- 1 Green light: the vehicle is locked.
- 2 Yellow light: the vehicle is unlocked.
- 3 Red light: the alarm has been triggered.
Alternatively flashing red lights: the alarm was triggered less than 5 minutes ago.



How do I start the engine?

01



- 1 Holding the end of the remote key with the base of the key blade, insert the remote key into the ignition slot and press it in as far as possible.
- 2 Press the brake pedal.
- 3 Press the **START/STOP ENGINE** button briefly and release it to start the engine.

See the additional information on the last page of this guide.





- 1 Park the vehicle and briefly press the **START/STOP ENGINE** button to switch off the engine.
- 2 Pull the remote key out of the ignition slot.



Setting

- 1 Press firmly on the brake pedal.
- 2 Press the **PUSH LOCK/PULL RELEASE** control: the symbol in the instrument panel flashes while the parking brake is being applied and glows steadily when it has been fully applied.
- 3 Release the brake pedal.

Releasing

- 1 Press firmly on the brake pedal.
- 2 Pull the **PUSH LOCK/PULL RELEASE** control.



A keyless drive remote key must be in your possession.

Locking and arming the alarm (see the illustration)

- Press the pressure-sensitive area on any of the outside door handles or the rubber-covered button next to the trunk opening control.

Unlocking and disarming the alarm

- Pull a door handle to unlock and open the door or press the trunk opening control on the trunk lid.

See the additional information on the last page of this guide.



How do I start the windshield wipers and rain sensor*?

01

Press the lever down to start the windshield wipers or up for the single-sweep function.

- 1 Rain sensor On/Off.
- 2 Turn to adjust the rain sensor sensitivity or interval wiper speed.



What does BLIS* do?

02

Blind Spot Information System (BLIS) indicates the presence of a passing vehicle in the door mirror's blind area.

- BLIS is activated when the engine is started and can be deactivated/reactivated by pressing the button.



See the warning on the last page of this guide.



How does HomeLink** work?

02

The HomeLink Wireless Control System has to be programmed with your garage door opener or other device before it can be used. See your Owner's Manual or www.homelink.com for instructions.

To use HomeLink:

- Press and hold the programmed HomeLink button until the device begins to operate (this may take several seconds).

The device's hand-held transmitter may also be used at any time.



How does Pedestrian Detection* work? 02



The optional system Collision Warning with Full Auto-brake and Pedestrian Detection has a feature that helps detect pedestrians and applies the brakes to help slow or stop the vehicle.

This feature is designed to be a supplementary driving aid and cannot detect pedestrians in all situations. It is not intended to replace the driver's attention and judgement.

Understanding this feature is essential, see your Owner's Manual for more information. See also the warning on the last page of this guide.



How do I adjust the seat? 03



- 1 Raise/lower the front edge of the seat cushion.
- 2 Raise/lower the seat.
- 3 Move the seat forward/rearward.
- 4 Tilt the backrest.
- 5 Memory button (M).
- 6 Buttons for storing seat positions.

Programming the power seat's* memory

- 1 Adjust the seat to the desired position.
- 2 Press and hold down the M (memory) button (5).
- 3 With the M button depressed, briefly press one of the buttons (6) to store the current seat position.

See the warning on the last page of this guide.





How do I adjust the steering wheel?

03

- 1 Release the steering wheel.
- 2 Adjust up/down/fore/aft.
- 3 Lock the steering wheel in position.

See the warning on the last page of this guide.



How do I fold down the rear seat backrests?

03

Both sections of the split rear seat backrest can be folded down: together or separately.

- 1 Pull the desired handle at the upper edge of the trunk opening.
- 2 Fold the backrest down. Lower the center head restraint if that section of the backrest is to be folded down.

See your Owner's Manual for information about folding down the outboard head restraints. See also the warning on the last page of this guide.



How does the moonroof* work?

03

- A** Automatic complete open.
- B** Manual open.
- C** Manual close.
- D** Automatic complete close.
- E** Open to the ventilation position.
- F** Close from the ventilation position.

See the warning on the last page of this guide.



How do I set the temperature?

04




- 1 Turn the controls to set the temperatures on the driver and passenger sides respectively. The selected temperature is shown in the display.
- 2 Press **AUTO** to automatically regulate cooling, heating, blower speed, recirculation, and air distribution to maintain the chosen temperature. **AUTO CLIMATE** is displayed.



How do I defrost the windshield?

04

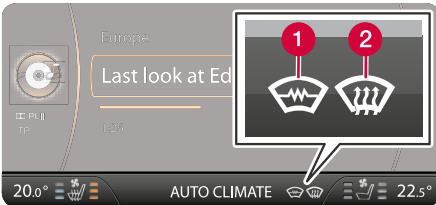

- 1 Press to activate electrical heating*; the symbol (1) illuminates in the display.
- 2 Press again to also direct airflow toward the windshield and front side windows; symbols (1) and (2) will illuminate.
- 3 Press again to switch off both functions; no symbols will be illuminated.

Models without electrical defrosting: Press to direct airflow toward the windshield and front side windows.



How does the AUTO headlight feature work?


04



With the switch in the AUTO position:

- The headlights will switch automatically between daytime running lights and low beam headlights, depending on ambient lighting conditions.
- High beams can be used.
- Active Bending lights* (ABL) switch between high and low beams automatically if another vehicle approaches or is directly ahead. Tunnel detection* is also active.



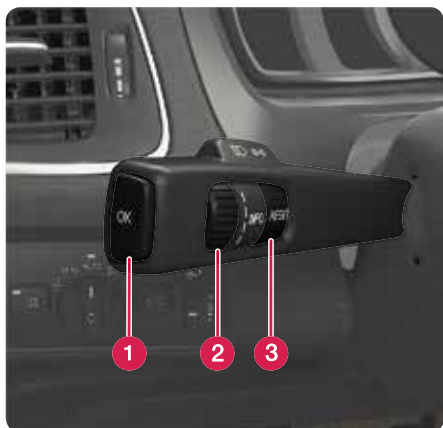

How do I operate the trip computer?

04

- 1 **OK** opens the trip computer menus, activates a selection or erases displayed messages.
- 2 Use the thumb wheel to scroll among the menu selections.
- 3 **RESET** resets the trip computer functions and exits the menus.



How do I reset the trip computers?

04

- 1 Press the **RESET** button on the left steering wheel lever twice briefly.
- 2 Scroll to the desired trip odometer (**T1** or **T2**) with the thumb wheel.
- 3 Press and hold **RESET** to reset.



How does the gear shift indicator* work?

04

When using the Geartronic manual shifting mode, a white arrow will appear above or below the number of the current gear to prompt the driver to shift up or down (digital instrument panel* shown).

See your Owner's Manual for information about the analog instrument panel.





How do I change the digital instrument panel's display alternative (theme)*?

04

The digital instrument panel has three different display alternatives (themes): Elegance/Eco/Performance. To switch themes:

- 1 With the engine running and the vehicle safely parked, press **OK** on the left steering wheel lever.
- 2 Use the thumb wheel to scroll to **Themes**.
- 3 In the **Themes** menu, scroll to the desired theme and press **OK** to select and confirm your choice.



What does the trip computer's "Distance to empty" indicate?

04

This is the approximate distance that can be driven on the remaining fuel based on average fuel consumption during the last 20 miles (30 km) of driving (digital* instrument panel shown).

When "...distance to empty" is displayed (analog instrument panel), or "---" (digital* instrument panel), refuel as soon as possible.

See your Owner's Manual for information about the analog instrument panel.



How do I switch the infotainment system on and off?

04

- 1 Press the power button briefly to switch the system on.
- 2 Press and hold the button (until the screen turns black) to switch off.

With the system on, press the button briefly to mute/unmute the sound.



How do I navigate in the infotainment system?

04

- 1 Press **RADIO, MEDIA, MY CAR, NAV*** or **TEL** on the center console to select a mode.
- 2 Press **OK/MENU** or the thumb wheel on the steering wheel to display the mode's main view.
- 3 Turn **TUNE** or the thumb wheel to navigate in the menus.
- 4 Press **OK/MENU** or the thumb wheel to make a selection.

Press **EXIT** briefly to go back in the menu system, cancel a function or erase characters.

Press and hold **EXIT** to return to the mode's main view. From a mode's main view, press and hold **EXIT** to go to the infotainment system's main view.

Tip:

To display the shortcut menu while in the NAV or TEL modes, press **NAV** or **TEL**. Press again to return to the mode's main view.



How do I pair a Bluetooth® cell phone? 04

- 1 Press **TEL** on the center console.
- 2 Put the cell phone in Bluetooth® discoverable mode.
- 3 Press **OK/MENU** and follow the instructions on the screen to complete the procedure.

The phone will then be connected automatically to the infotainment system when it's within range.

See your Owner's Manual for alternative pairing instructions.





How do I make a call?

04

- 1 Press **TEL** on the center console.
- 2 Enter the desired phone number or turn the thumb wheel on the steering wheel downward to access the list of contacts or upward for a list of calls.
- 3 Press the thumb wheel to start the call.

Reject or end the call by pressing **EXIT**.

See your Owner's Manual for information about other ways of making calls.



How do I answer a call?

04

- Press the thumb wheel on the steering wheel to answer an incoming call.

Reject or end the call by pressing **EXIT**.

See your Owner's Manual for information about other ways of answering calls.



How do I connect an external audio device?

04

- 1 Connect the device using the AUX or USB sockets in the tunnel console.
- 2 Press **MEDIA**.
- 3 Turn **TUNE** to the desired audio source.
- 4 Press **OK/MENU**.

See your Owner's Manual for additional information.





How can I set a destination in the navigation* system?

04

- 1 Press **NAV** to start the system.
- 2 Press **NAV** again and select **Set address** by pressing **OK/MENU**.
- 3 Enter an address with the text wheel or the center console keypad.
- 4 Conclude by selecting **Set single destination** or **Add as waypoint** and press **OK/MENU**.

See the Volvo Navigation System* manual for additional information.



What settings can be made in the menu system?

04

Many of the vehicle's functions can be controlled in **MY CAR**, such as setting the clock, storing the door mirrors' position, locks, etc.

See the section "How do I navigate in the infotainment system" in this Quick Guide for more information.



How do I set the clock?

04

- 1 Go to **Settings > System options > Time** in **MY CAR**.
- 2 Press **OK/MENU** to activate the hour box. Turn **TUNE** to set the hour and press **OK/MENU**.
- 3 Turn **TUNE** to select the minute box and press **OK/MENU**. Turn **TUNE** to set the minute and press **OK/MENU**.
- 4 Turn **TUNE** to select **OK** and press **OK/MENU**.



How should I wash the vehicle?

05

Avoid washing the vehicle in an automatic car wash during the first few months (because the paint will not have hardened sufficiently).

Use a suitable car washing liquid and a clean sponge when hand-washing the vehicle. Dirt or grit on the sponge can scratch the paint.



How should I care for leather upholstery?

05

Leather requires regular care to remain smooth and soft. Volvo leather care products, available from your retailer, should preferably be used several times a year.



How does Engine Remote Start* (ERS) work?

05

Maximum range: approx. 100 ft (30 meters). The vehicle must be locked. To start the engine:

- 1 Press button 1 briefly.
- 2 Immediately press button 2 for approximately 2 seconds.

The following will occur:

- 1 The turn signals will flash several times.
- 2 The engine will start.
- 3 The turn signals will illuminate for 3 seconds to indicate that the engine has started.

Where are the storage compartments located?

05

Several of the storage compartments are shown here.



Your Owner's Manual shows all of the storage compartments.



Where are the AUX/USB/12-volt sockets?

05

The ignition must be in mode **I** or higher for the 12-volt sockets in the cabin to function. The 12-volt socket in the trunk* provides current even when the ignition is switched off.



How do I start the engine?



After a cold start, idle speed may be noticeably higher than normal for a short period, regardless of the ambient temperature. This is done to help bring components in the emission control system to their normal operating temperature as quickly as possible.

How does keyless drive* work?



Wearing gloves may affect the unlocking function.

What does BLIS* do?



BLIS does not eliminate the need for you to visually confirm the conditions around you, and the need for you to turn your head and shoulders to make sure that you can safely change lanes or back up. As the driver, you have full responsibility for changing lanes/backing up in a safe manner. BLIS does not function in sharp curves or when backing up.

How does Pedestrian Detection* work?



The system cannot detect all pedestrians in all situations, such as in darkness/at night and cannot detect partially hidden pedestrians, people who are less than approx. 32 in. (80 cm) tall, or people wearing clothing that obscures the contours of their bodies.

How do I adjust the seat?



Do not adjust the seat while driving. The seat should be adjusted so that the brake pedal can be depressed fully. In addition, position the seat as far rearward as comfort and control allow.

How do I adjust the steering wheel?



After adjusting the seat, always adjust the steering wheel prior to driving.

How do I fold down the rear seat backrests?



When one or more sections of the backrest is returned to the upright position, check that it is properly locked in place by pushing and pulling it. The red indicators should also not be visible. Long loads should always be securely anchored to help avoid injury in the event of a sudden stop.

How does the moonroof* work?



During manual closing, if the moonroof is obstructed, immediately open it again. Never open or close the moonroof if it is obstructed in any way. Never allow a child to operate the moonroof. When leaving the vehicle, ensure that the ignition is in mode 0 to disable the moonroof. Never leave the remote key/PCC* in the vehicle. Never extend any object or body part through the open moonroof, even if the vehicle's ignition is completely switched off.

What does the trip computer's "Distance to empty" indicate?



The accuracy of the figure shown may vary if your driving style changes. An economical driving style will generally increase this distance.

How should I care for leather upholstery?



Clothing that is not colorfast, such as new jeans or suede garments, may stain the upholstery. Gasoline, naphtha or similar cleaning agents should never be used on the leather since these can cause damage.

Where are the AUX/USB/12-volt sockets?



The maximum current consumption is 10A (120W) if only one of the 12-volt sockets in the passenger compartment is in use. If both the front and rear sockets are used at the same time, the maximum current consumption per socket is 7.5A (90W).