




# Radio Funky Operating instructions



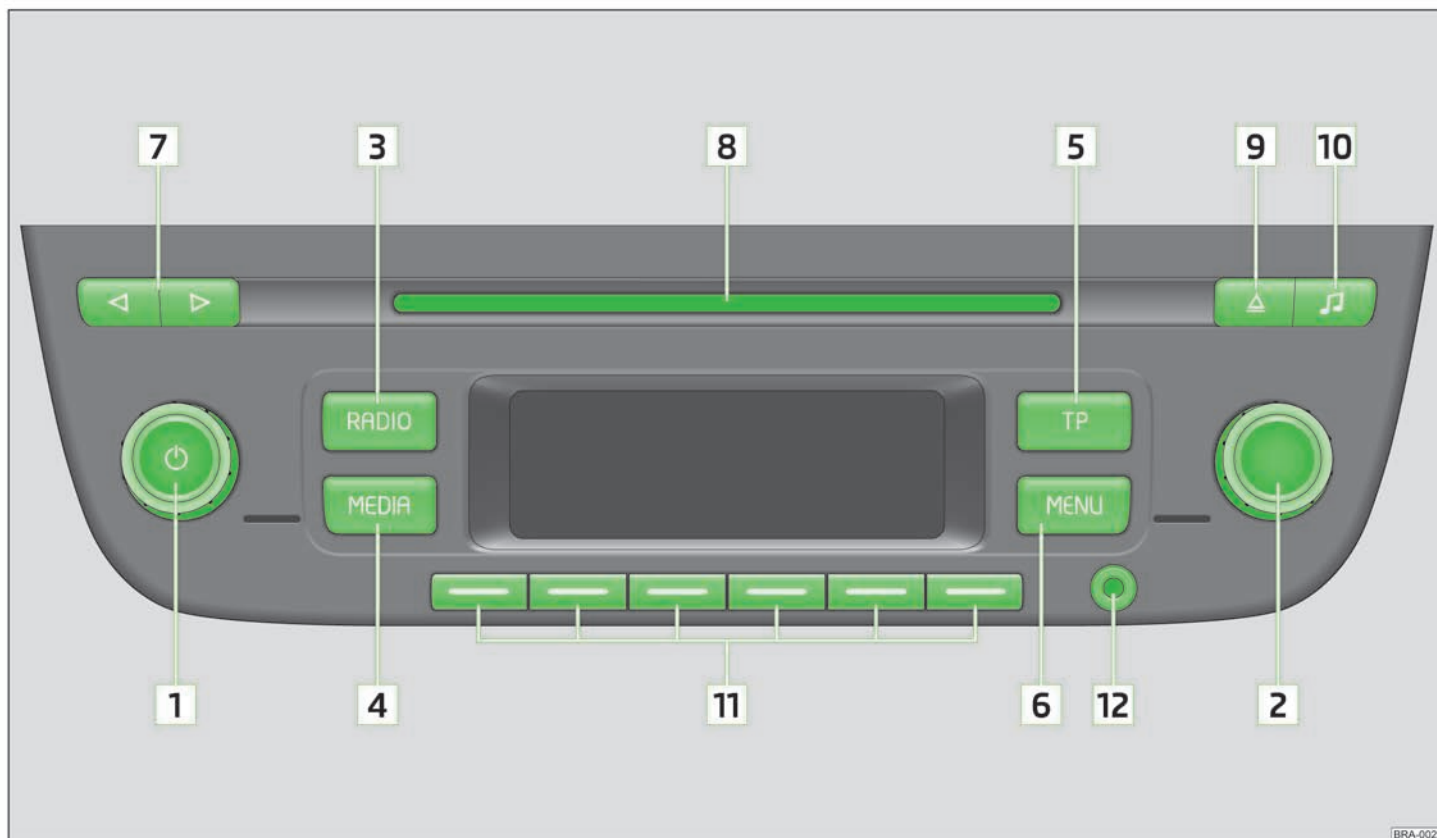

# Table of Contents

## General information

Operating instructions .....	2
Important information .....	2
Equipment overview .....	3
Switching the unit on and off .....	3
Volume setting .....	3
Sound settings .....	3
MENU mode .....	4
RADIO mode .....	4
MEDIA operation .....	5

## General information

### Operating instructions

These operating instructions describe **all possible equipment variants** without identifying them as special equipment, model variants or market-dependent equipment.

Consequently, this vehicle does **not need to contain all of the equipment components** described in these operating instructions.

The scope of equipment for your vehicle is described in the sales documentation you were given when purchasing the car. For more information, contact your local SKODA retailer.

## Important information

### Safety instructions

#### WARNING

- Concentrate fully at all times on your driving! As the driver you are fully responsible for road safety. Only use the system so that you are in full control of your vehicle in every traffic situation - risk of accident!
- Adjust the volume to ensure that acoustic signals from outside, e.g. sirens from vehicles which have the right of way, such as police, ambulance and fire brigade vehicles, can be heard at all time.
- High volumes can cause hearing damage.

### Warranty

The equipment warranty terms and conditions also apply for new vehicles.

After the expiration of the warranty, a piece of equipment in need of repair can be replaced with a reconditioned, original item with spare part warranty. It is, however, a precondition that the housing has not been damaged and no unauthorised attempts have been made to carry out repairs.

#### Note

The warranty does not relate to:

- Damage and defects due to improper handling of the equipment,
- Damage and defects from unprofessional repair attempts,
- Devices with damage to the exterior.

### Screen cleaning

#### CAUTION

- Do not use solvents such as turpentine or petrol as they may corrode the display surface.
- Carefully handle the display because dents and scratches can occur through pressure of the finger or contact with sharp objects.






#### Note

The display can be cleaned with a soft cloth and finger marks can be wiped away with pure alcohol.

### Anti-theft protection

The anti-theft coding of your radio prevents an operation of the system after a voltage interruption, e.g. during a vehicle repair or after theft. After disconnecting the battery, disconnecting the radio from the on-board voltage of the vehicle and after a fuse failure, the code must be entered before the vehicle can be used again.

#### Enter code

- Switch on the radio when the ignition is on. **SAFE** is displayed and then **1000**.
- Enter the safety code using the function keys  -  .
- Confirm the safety code by pressing and holding the function key  .

#### Code number

The code number can only be called up "online" via the ŠKODA system, as this guarantees even more effective anti-theft protection. Please contact your authorized ŠKODA Service Partner, if necessary.

### Incorrect code number

If an incorrect code is confirmed after entry of the code, the procedure can be repeated **once again**. The number of possible attempts is shown in the second line on the touch-screen.

If the code is entered incorrectly a second time, the unit will be blocked for approx. one hour. It is possible to enter again the safety code after one hour has expired, when the unit and the ignition have been switched on.










If two invalid attempts are then made again, the unit will be blocked again for an hour.

The cycle - two attempts, blocked for an hour - will continue to apply.

### Note

The code is normally stored in the instrument cluster. This ensures that it is automatically decoded (convenience coding). Manual input of the code is normally not necessary.

## Equipment overview

- 1**  - **Rotary knob**
  - for switching the equipment on and off (press)
  - for volume adjustment of audio source currently being played (turn)
- 2** **Rotary knob**
  - for activating the Scan function
  - for settings in the individual modes
- 3**  - Radio operation
- 4**  - MEDIA operation
- 5**  - switches traffic programme on/off
- 6**  - Setting of the special functions
- 7**  and  - buttons for moving forwards/backwards
  - **RADIO-Mode** - for the selection of the stations from the preset list.
  - **MEDIA-Mode** - for the selection of the previous or following track.
  - **MENU-Mode** - for setting the setpoints of special functions
- 8** **CD case**
- 9**  - Eject a CD
- 10**  - Sound settings

### **11** Function keys

- Save and select radio stations
- Enter code

### **12** AUX jack - connect an external audio source

## Switching the unit on and off

- To switch the unit on/off, press the rotary knob **1**.

After switching on the unit, the last audio source that was active before switching off will be played.

If the key is pulled out of the ignition lock while the unit is switched on, the unit will switch off automatically.


If your vehicle is fitted with the KESSY system, the unit will switch off automatically after the engine is turned off and the door opened. If you open the door before turning off the engine, the unit will not switch off until the vehicle is locked.

If the ignition is switched off, the system switches off automatically after approx. half an hour (vehicle battery protection against discharging).

## Volume setting

- To increase the volume, turn the rotary knob **1** to the right.
- To decrease the volume, turn the rotary knob **1** to the left.

The change to the volume appears in the unit display.

If the volume is reduced to 0, the speakers are muted. The following symbol will appear in the display .

### CAUTION

High volumes can cause hearing damage.

## Sound settings

Press the button  repeatedly to select the desired parameter.

- **TRE** - Treble setting
- **BAS** - Bass setting

- **BAL** - setting of the volume ratio between the left and the right side
- **FAD** - setting of the volume ratio between the front and the rear

## MENU mode

### SCN (scan) function

Press the rotary knob **[2]** or the **(MENU)** button and then the **SCN** function key.

The auto-play function starts and plays each station in the current frequency band for about five seconds.

Press the rotary knob **[2]** or the **SCN** function key again to end the auto-play at the current radio station.

### Function AS

Press the **(MENU)** button and then the **AS** button.

An automatic station finding is started during which the 6 stations with the strongest signal in the memory level FM1 and/or AM1 are stored.

### Setting special functions

Press the **(MENU)** button and then the **SET** function key.

- **SKM** (SEEK MODE) - automatic station finding
  - **ALL** - stops the station finding at all available stations
  - **PRESET** - stops the station finding only at the stored stations
- **VOL** - reduces the volume when turning on
- **GALA** - speed-sensitive volume adjustment
- **DIS** - sets the display backlight
- **PHONE** - outputs telephone calls via the onboard loudspeakers
- **PDC** - sets the reduction of the volume when the park distance control is active
  - **PDC VOL ATTENU 0** - no volume limit
  - **PDC VOL ATTENU 1** - medium level volume limit
  - **PDC VOL ATTENU 2** - low level volume limit
  - **PDC VOL ATTENU 3** - mute

- **AUX** - sets the input sensitivity of an external source
  - **OFF** - switches off
  - **AUX VOL LEVEL 1** - high level, used in particular for notebooks
  - **AUX VOL LEVEL 2** - medium level, used for cassette or CD players
  - **AUX VOL LEVEL 3** - low level, used for MP3 player

### Note

Each setting change is stored by changing to another menu point.

## RADIO mode

### RADIO mode

Your radio is equipped with FM and AM wavebands.

In the ranges FM1/FM2 and AM1/AM2 there are each 6 memory spaces available, in order to change, press the button **(RADIO)** briefly.

#### Manual search

Tune to the desired station by turning the rotary knob **[2]**.

#### Automatic station finding

The radio searches for the next radio station in the selected waveband by pressing the button **(◀)** or **(▶)** briefly.

#### Save radio station

Tune to the desired station and press and hold the function key **[11]** until a beep will be heard.

### Note

- Certain radio stations transmit additional text information - designated as radio text. **RDS (Radio Data System)** used to transmit program IDs and additional services, thus enabling automatic station tracking, for example. In the event of sufficiently satisfactory reception, the suitable RDS radio stations will display the station name instead of the station frequency.

### Traffic information function TP

Press the **(TP)** button to switch the traffic information function on/off.

The **"TP"** display in combination with a station name (e.g. in the station or preset list), indicates a traffic programme station.

Irrespective of which radio station is heard, an additional receiver part in the unit ensures that a traffic programme station can always be received as long as the traffic programme function is switched on. During media mode, the unit always searches for an available traffic program station in the background.

The availability of traffic programme alerts is identified by the letters **"TP"** at the top right of the display.

If no traffic programme station can be received because, for example, radio reception is interrupted in general, **"NO TP"** will be displayed instead of **"TP"**.

## MEDIA operation

### Operating the CD player

Press the **(MEDIA)** button and then the **CD** (internal CD drive) or **AUX** » [page 6](#), *External sources* function key.

- **CD** - changes over to an inserted CD
  - **SCN** - plays all the titles of the current media source for approximately 10 seconds. The auto-play feature can also be started or stopped by briefly pressing the rotary knob **[2]**.
    - **SCAN CD** - plays a track of a CD
    - **SCAN FOLDER** - plays a track in the selected folder
  - **MIX** - plays all tracks in the current audio source in random order
    - **MIX OFF** - the function of the menu is switched off;
    - **MIX CD** - plays the tracks on a CD in random order
    - **MIX FOLDER** - plays the tracks in the selected folder in random order
    - **MIX PLS** - plays the playlist (folder of the selected tracks from individual folders that is stored on the CD) in random order. Is only displayed if the current CD has a playlist stored on it.
  - **⬆** - scrolls up in the folders
  - **⬇** - scrolls down in the folders
  - **INF** - you can select the display of additional information on MP3 data by pressing the **INF** function key a second time
    - **TITLE** - name of the track
    - **ARTIST** - name of the performer
    - **ALBUM** - name of the album

- **FILE** - file
- **FOLDER** - folder
- **AUX** - switches to an external audio source that is connected to the AUX multi-media jack » [page 6](#), *External sources*

### Buttons on the unit for controlling the current audio sources

The arrow buttons on unit **[◀]** or **[▶]** will always affect the currently heard audio source, irrespective of the current menu used.

**[◀]** - pressing this briefly changes over to the beginning of the current title or chapter, repeated pressing changes over to the beginning of the previous title or chapter.

**[▶]** - pressing this briefly changes over to the beginning of the next title or chapter, repeated pressing changes over to the beginning of the next title or chapter.

### General information for CD operation

Audio-CDs (CD-A) and MP3-CDs can be played in the internal drive.

#### Inserting the CD

Insert a CD with the written side facing up as far as possible into the CD case **[8]** until it is automatically drawn in. The play function will start automatically.

#### Taking out the CD

Press the **[EJECT]** button - the CD will be ejected.

If the "ejected" CD is not taken out within 10 seconds, it will be retracted again for safety reasons.

#### Unreadable CD

If you insert a CD which cannot be read by the unit, a pop-up window is displayed with a note. The CD is moved to the eject position within a few seconds.

If the CD is not taken out within 10 seconds, it will be retracted again for safety reasons.

#### CD to jump

Uneven road surfaces and strong vibrations may cause the CD to jump.

#### Formation of condensation

When it is cold and after rain showers, moisture can deposit in the CD drive (condensation). This can effect the CD jump or impair the play function. In such cases wait until the moisture has dissipated.

### Notes for the care of the CDs

If a CD is soiled, please never clean the CD with circular movements but rather from the inside to the outside with a soft lint-free cloth. In case of severe layers of dirt we recommend to clean the CD with a commercially available CD cleaner. Also in this case do not clean the CD with circular movements but rather from the inside to the outside and then let it dry off.

### ! WARNING

The CD/DVD player is a 1st class laser product. There is a risk of injury from invisible laser beams if you open the CD/DVD player.

### ! CAUTION

- Never insert into the internal drive CD discs with the designation "Do not insert in drives without a drawer" or *Eco Disc*.
- Inserting a second CD while a CD is being ejected can destroy the CD drive in the unit. After pressing the **Eject button** (A) there is a delay of a few seconds before the CD is ejected. During this time the lock in front of the CD case is open. It is essential that you wait until the CD has been fully ejected before you try to insert a new CD.
- If the CD is mechanically damaged or inserted incorrectly or not fully, "**ERROR / CHECK CD**" will be initially displayed. Please check the CD and place it again correctly and fully into the drive. If "**ERROR / CHECK CD**" is persistently displayed, please contact an authorized ŠKODA service partner.
- If the inside temperature of the unit is too high, no CDs will be accepted. The unit switches into the last active operating mode.
- Never use liquids such as gasoline, paint thinner or record cleaner, otherwise the surface of the CD could get damaged!
- Never expose the CD to direct sun rays!
- Only write on the CD with appropriate writing tools.
- Do not affix anything to the CD!

### i Note

- It is possible that CDs with copy-protection and non-original CD-R and CD-RW discs are not played or played only with restrictions.
- Please also observe the additional information on MP3 mode.

- Please comply with the national legal copyright requirements in your country.
- Dirt or damage of a CD can lead to difficulties when "reading" the information. The difficulty in reading the error depends on the dirt or on the severity of the mechanical damage. Severe scratches cause reading errors which can make the CD jump or "get stuck". All CDs must be treated carefully and always be stored in a protective case.

## General information for MP3 operation

### Requirements for the MP3 data and data carrier

- CD-ROM, CD-R, CD-RW with a capacity of 650 MB and 700 MB.
- The CDs must correspond to the ISO 9660 Level 2 standard as well as the Joliet data system (single and multi-session).
- Data names must be no longer than 64 characters.
- The list structure is restricted to a depth of 8 list levels.
- The name of the artist, the album and the title of the played MP3 data can be displayed if such information is available as so-called ID3 tags » [page 5, Operating the CD player](#). The list and data name will be displayed if there is no ID3 tag.
- WMA data (Windows Media Audio) can also be played even if the copyright is additionally protected by the DRM procedure (Digital Rights Management). Such WMA data is not supported by the unit.

### Bit rate (data flow per time unit)

- The system supports MP3 data with bit rates of 32 to 320 KB/s as well as MP3 data with variable bit rates.
- The indicated playing time data with variable bit rates is not reliable.

## External sources

Press the button (MEDIA) and then the function key (AUX).

External audio sources connected to the AUX jack can **not** be operated via the radio system. Only the volume can be controlled from the radio.

Use the standard jack plug 3.5 mm for the AUX socket. If the external audio source does not have this jack plug, you must use an adapter.

We recommend that you purchase an adapter for connecting the USB devices, the devices with Mini USB output or an iPod, at an authorised ŠKODA Service Partner.

### Adjust the play function volume of the external audio source

The play volume of the external audio source can be adjusted via the volume control on the radio [1](#).



Depending on the connected audio source, the output volume on the external audio source can be changed.

You can also change the input sensitivity of the external audio source » [page 4, Setting special functions](#), in order for the play function volume of the external audio source to adapt to other audio sources or to avoid distortions of the play function volume.

#### Conditions for proper connection

- Only USB devices with the specification 2.0 can be connected.
- The version of the file allocation table FAT (File Allocation Table) of the connected device must be FAT16 ( <2 GB) or FAT32 ( > 2 GB).
- In order to replay from a unit with a hard disk (HDD) which includes a large data volume, it can lead to a time delay when reading in the overview of the music data.
- In order to replay from a unit, which includes a complicated folder structure, it can lead to a time delay when reading in the overview of the music data.
- The folder structure in the connected unit must not exceed a depth of 8 levels. One folder must not contain more than 1000 data.
- A USB extension cable or USB distributor (HUB) must not be used to connect the unit.

#### WARNING

- On no account place an external audio source on the dash panel. It could be thrown into the passenger compartment during sudden driving manoeuvres, injuring the occupants.
- On no account place an external audio source close to the airbags. It could be thrown into the passenger compartment when the airbags are deployed, injuring the occupants.
- You must not hold the external audio source in the hand or on the knees while driving. You could make sudden manoeuvres in the passenger compartment and injure the occupants.
- Always guide the connection cable of the external audio source in such a way that it does not restrict you when driving.

#### CAUTION

The AUX input must only be used for audio sources!

#### Note

- If an external audio source is connected via AUX, which is equipped with an adapter for external power supply, it can occur that the audio signal is interrupted. This depends on the quality of the adapter which is used.
- The loudspeakers in the vehicle are matched to a power output of the radio of 4x20 W.
- For the equipment sound system, the loudspeakers are matched to a power output of the amplifier of 4x40 W + 6x20 W.

ŠKODA AUTO pursues a policy of constant product and model development. We trust that you will understand that changes to models in terms of shape, equipment and engineering, may be introduced at any time. The information about scope of delivery, appearance, performances, dimensions, weight, fuel consumption, standards and functions of the vehicle is only correct at the time of publication. Certain items of equipment might only be installed later on (information provided by your local authorised ŠKODA Service Partner) and only envisaged for particular markets. It is therefore not possible for legal claims to be made based on the data, illustrations and descriptions contained in this Owner's Manual.

Reprinting, reproduction or translation, either in whole or in part, is not permitted without the written consent of ŠKODA AUTO.

ŠKODA AUTO expressly reserves all rights relating to copyright laws.

We reserve the right to make changes to this document.

Issued by: ŠKODA AUTO a.s.

© ŠKODA AUTO a.s. 2012

[www.skoda-auto.com](http://www.skoda-auto.com)

Funky: Citigo  
Rádio anglicky 05.2012  
S00.5610.89.20  
1ST 012 095 BC