





Foreword

This owner's manual and the corresponding supplements should be read carefully to familiarise yourself with your vehicle.

Also, the regular care and maintenance and correct handling of the vehicle will contribute to preserve its value.

For safety reasons, note the information concerning accessories, modifications and parts exchange.

If selling the vehicle, give all of the onboard documentation to the new owner as this should be kept with the vehicle.

Contents

The structure of this manual	5	Operating instructions	55	Ashtrays*, cigarette lighter* and electrical sockets	14
		Cockpit	55	First-aid kit, warning triangle, fire extinguisher	14
Content		Overview	55	Luggage compartment	14
		Instruments	56	Heating, Ventilation and Air conditioning	15
C (1 F) 1		Digital display in the instrument panel	59	Heating and ventilation	15
Safety First	7	Instrument panel menus	65	Climatic*	15
Safe driving	7	Warning lamps	72	2C-Climatronic*	15
Brief introduction	7	Steering wheel controls	84	General notes	16
Proper sitting position for occupants	10	General points	84	Driving	16
Pedal area	16	Audio system	84	Address	16
Stowing luggage	17	Radio navigation system	88	Safety	16
		Steering wheel lighting controls	92	Ignition lock	16
Seat belts	19	Unlocking and locking	93	Starting and stopping the engine	16
Introduction	19	Central locking	93	Manual gearbox	16
Why wear seat belts?	21 24	Keys	99	Automatic gearbox* / DSG automatic gearbox*	16
Safety belts	28	Radio frequency remote control	100	Handbrake	17
		Anti-theft alarm system*	102	Acoustic parking aid system*	17
Airbag system	30	Tailgate	104	Cruise control system (CCS)*	17
Brief introduction	30	Windows	106		
Front airbags	34	Sliding/tilting roof*	108	Tips and Maintonance	4.0
Side airbags*	37	Lights and visibility	111	Tips and Maintenance	18
Curtain airbags	41	Lights	111	Intelligent technology	18
Deactivating airbags*	44	Interior lights	117	Brakes	18
Child safety	46	Visibility	120	Anti-lock brake system and traction control M-ABS	
Brief introduction	46	Windscreen wipers	121	(ABS and TCS)	18
Child seats	48	Mirrors	125	Electronic stabilisation programme (ESP)*	18
Securing child seats	51	Seats and stowage	128	Driving and the environment	18
		The importance of correct seat adjustment	128	Running-in	18
		Head restraints	129	Exhaust gas emission control system	18
		Front seats	131	Driving abroad	19
		Rear seat bench	132	Driving economically and with respect for the	
		Stowage compartments	134	environment	19

Trailer towing	197	Technical Data	275
Instructions to follow	197		
Ball coupling of towing bracket*	198	General notes on the technical data	275
Driving tips	198	What you should be aware of	275
Fitting a towing bracket*	199	How are the figures measured?	277
Cleaning and caring for your vehicle		Towing a trailer	278
General notes	201 201	Technical data	279
Care of the vehicle exterior	202	Checking fluid levels	279
Care of the vehicle interior	208	Petrol engine 1.4 63 kW (86 bhp)	280
Accessories, parts replacement and		Petrol engine 1.4 92 kW (125 bhp)	281
modifications	210	Petrol engine 1.6l 75 kW (102 bhp)	282
Accessories and parts	210	Petrol engine 1.8 118 kW (160 bhp)	283
Modifications	210	Petrol engine 2.0 110 kW (150 bhp)	285
Roof aerial*	210	Petrol engine 2.0 litre 110 kW (150 bhp).	
Mobile telephones and radiotelephones	211	Automatic	286
		Petrol engine 2.0 litre 147 kW (200 bhp)	287
Checking and refilling levels	212	Petrol engine 2.0 litre 147 kW (200 bhp).	
Refuelling	212	Automatic	288
Petrol	213	Petrol engine 2.0 litre 147 kW (200 bhp).	200
Diesel	214	Freetrack	290
Working in the engine compartment	215	Diesel engine 1.9 TDI 77 kW (105 bhp)	291
Engine oil	218	Diesel engine 1.9 TDI 77 kW (105 bhp). Automatic	292
Coolant	223	Diesel engine 2.0l 103 kW (140 bhp)	292
Washer fluid and windscreen wiper blades	225	Diesel engine 2.0l 103 kW (140 bhp). Freetrack	294
Brake fluid	228	Diesel engine 2.0l 103 kW (140 bhp). Automatic	295
Battery	230	Diesel engine 2.0l 100 kW (136 bhp)	298
Wheels and tyres	233	Diesel engine 2.0l 100 kW (136 bhp)	299
Wheels	233	Diesel engine 2.0l 125 kW (170 bhp)	300
If and when	241	Diesel engine 2.0l 125 kW (170 bhp). Freetrack	301
Tools, tyre repair kit and spare wheel	241	Dimensions and capacities	303
Wheel change	243	Dimensions and capacities. Freetrack	304
Tyre repair kit (Tyre-Mobility-System)*	250	billions and capacities. Freetrack	504
Fuses	252		
Bulb change	259	Index	305
Jump-starting	268		
Towing and tow-starting	271		

The structure of this manual

Before reading this manual it must be understood

This manual contains a description of the **equipment** supplied with the vehicle at the time of going to press. Some of the equipment described here will not be available until a later date, or is available only in certain markets.

Because this is a general manual for the ALTEA XL- ALTEA FREETRACK, some of the equipment and functions that are described in this manual are not included in all types or variants of the model or model year; they may vary or be modified depending on the technical requirements and on the market; this is in no way deceptive advertising.

The **illustrations** are intended as a general guide, and may vary from the equipment fitted in your vehicle in some details.

The **direction indications** (left, right, front, rear) appearing in this manual refer to the normal forward working direction of the vehicle except when otherwise indicated.

The **equipment marked with an asterisk*** is supplied as standard on certain versions of the model only, it can be supplied as an option on some models, or else it is only on sale in certain countries.

- All registered marks are indicated with
 Even if the copyright symbol does not appear this does not mean that the mark is not copyrighted.
- ► The section is continued on the following page.
- This shows the end of the section.



WARNING

Texts with this symbol contain safety information. They warn you of serious dangers, possibly involving accident or injury.



) Caution

Texts with this symbol draw your attention to a possible risk of damage to your vehicle.



For the sake of the environment

Texts with this symbol refer to points relevant to the protection of the environment.



Note

Texts preceded by this symbol contain additional information. ■

Content

This manual is structured to give you the information you need as quickly and clearly as possible. The contents of this Manual are grouped into relatively short **sections** making up **chapters** (e.g. "Air conditioning"). The entire manual is divided into five large parts which are:

1. Safety First

Information on the vehicle equipment relating to passive safety such as seat belts, airbags, seats, etc.

2. Controls and equipment

Information about the distribution of controls in the driver position of the vehicle, about the seat adjustment possibilities, how to create a suitable climate in the passenger compartment, etc.

3. Tips and Maintenance

Advice relating to driving, care and maintenance of your vehicle and certain problems which you may solve yourself.

4. Technical data

Figures, values and the dimensions of your vehicle.

5. Alphabetic index

At the end of this manual there is a detailed alphabetical index, this will help you to rapidly find the information you require.

Safety First

Safe driving

Brief introduction

Dear SEAT Driver

Safety first!

This chapter contains important information, tips, suggestions and warnings that you should read and follow in the interest of your own safety and the safety of your passengers.



WARNING

- This manual contains important information concerning the driver's and passengers' handling of the vehicle. The other booklets in the vehicle wallet also contain further information that you should be aware of for your own safety and for the safety of your passengers.
- Ensure that the onboard documentation is kept in the vehicle at all times. This is especially important when lending or selling the vehicle to another person.

Safety equipment

The safety equipment is a part of the occupant protection system and can reduce the risk of injury during an accident.

Never "gamble" with your safety and the safety of your passengers. In the event of an accident, the safety equipment could reduce the risk of injury. The following list includes most of the safety equipment in your SEAT:

- three-point seat belts,
- belt tension limiters for the front and rear side seats,
- belt tension devices for the front seats,
- belt height adjustment for the front seats,
- front airbags,
- side airbags in the front seat backrests.
- curtain airbags,
- crash-active front head restraints*,
- "ISOFIX" anchor points for child seats in the rear side seats with the "ISOFIX" system,
- · height-adjustable head restraints,
- head restraints with in-use position and non-use position
- adjustable steering column.

The safety equipment mentioned above works together to provide you and your passengers with the best possible protection in accident situations. But this safety equipment cannot help you or your passengers if you or your

Safety First | Operating instructions | Tips and Maintenance | Technical Date

passengers assume an incorrect sitting position or do not properly adjust or use this equipment.

Therefore, information is provided about why this equipment is so important, how it protects you, what you have to observe when using it and how you and your passengers can achieve the greatest possible benefit from the safety equipment fitted. This manual includes important warnings that you and your passengers should observe in order to reduce the risk of injury.

Safety is everyone's business! ■

Before every trip

The driver bears the responsibility for his passengers and the operational worthiness of the vehicle.

For your own safety and the safety of your passengers, always note the following points before every trip:

- Ensure that the vehicle's lights and turn signals operate flawlessly.
- Check tyre pressure.
- Ensure that all windows provide a clear and good view of the surroundings.
- Securely restrain all parcels \Rightarrow page 17.
- Make sure that no objects can interfere with the pedals.
- Adjust front seat, head restraint and mirrors properly for your size.

- Ensure that the passengers in the rear seats always have the head restraints in the in-use position ⇒ page 14.
- Instruct passengers to adjust the head restraints according to their height.
- Protect children with appropriate child seats and properly applied seat belts
 page 46.
- Assume the correct sitting position. Instruct your passengers also to assume a proper sitting position ⇒ page 10.
- Fasten your safety belt securely. Instruct your passengers also to fasten their seat belts properly ⇒ page 19.

What affects driving safety?

Driving safety is largely determined by your driving style and the personal behaviour of all occupants.

As driver, you are responsible for yourself and your passengers. When your concentration or driving safety is affected, you endanger yourself as well as others on the road $\Rightarrow \uparrow \uparrow \uparrow$, for this reason:

- Do not allow yourself to be distracted from the traffic around you,
 e.g. by passengers or telephone conversations.
- Never drive when your driving ability is impaired (e.g. by medication, alcohol, drugs).
- Observe traffic laws and speed limits.

9

- Always reduce your speed as appropriate for road, traffic and weather conditions.
- When travelling long distances, take breaks regularly at least every two hours.
- If possible, avoid driving when you are tired or are under pressure of time.



WARNING

When driving safety is impaired during a trip, the risk of injury and accidents increases.

Safety First

Proper sitting position for occupants

Proper sitting position for driver

The proper sitting position for the driver is important for safe and relaxed driving.



Fig. 1 The proper distance between driver and steering wheel

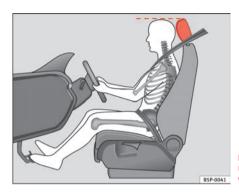


Fig. 2 Proper head restraint position for driver

For your own safety and to reduce the risk of injury in the event of an accident, we recommend the following adjustments for the driver:

- Adjust the steering wheel so that there is a distance of at least
 25 cm between the steering wheel and the centre of your chest
 ⇒ fig. 1.
- Move the driver's seat forwards or backwards so that you are able to press the accelerator, brake and clutch pedals to the floor with your knees still slightly angled ⇒ .
- Ensure that you can reach the highest point of the steering wheel.
- Adjust the head restraint so that its upper edge is at the same level as the top of your head, or as close as possible to the same level as the top of your head ⇒ fig. 2.
- Move the backrest to an upright position so that your back rests completely against it.

- Fasten vour seat belt correctly ⇒ page 19.
- Keep both feet in the foot well so that you have the vehicle under control at all times

Adjustment of the driver's seat \Rightarrow page 128.



WARNING

- An incorrect sitting position of the driver can lead to severe injuries.
- Adjust the driver's seat so that there is at least 25 cm distance between the centre of the chest and the hub of the steering wheel \Rightarrow page 10, fig. 1. If you are sitting nearer than 25 cm, the airbag system cannot protect you properly.
- If your physical constitution prevents you from maintaining the minimum distance of 25 cm, contact a qualified workshop. The workshop will help you decide if special specific modifications are necessary.
- When driving, always hold the steering wheel with both hands on the outside of the ring at the 9 o'clock and 3 o'clock positions. This reduces the risk of injury when the driver airbag is triggered.
- Never hold the steering wheel at the 12 o'clock position, or in any other manner (e.g. in the centre of the steering wheel). In such cases, you may sustain injuries to the arms, hands and head.
- To reduce the risk of injury to the driver during sudden braking manoeuvres or an accident, never drive with the backrest tilted far back! The airbag system and seat belts can only provide optimal protection when the backrest is in an upright position and the driver is wearing his or her seat belt properly. The further the backrests are tilted to the rear, the greater the risk of injury due to incorrect positioning of the belt web or the incorrect sitting position!
- Adjust the head restraint properly to achieve optimal protection.

Proper sitting position for front passenger

The front passenger must sit at least 25 cm away from the dash panel so that the airbag can provide the greatest possible protection in the event that it is triggered.

For your own safety and to reduce the risk of injury in the event of an accident, we recommend the following adjustments for the front passenger:

- Move the front passenger seat back as far as possible $\Rightarrow \Lambda$.



- Move the backrest to an upright position so that your back rests completely against it.
- Adjust the head restraint so that its upper edge is at the same level as the top of your head, or as close as possible to the same level as the top of your head \Rightarrow page 13.
- Keep both feet in the foot well in front of the front passenger seat.
- Fasten your seat belt correctly ⇒ page 19.

It is possible to deactivate the passenger airbag in exceptional circum**stances** \Rightarrow page 25.

For detailed information on how to adjust the front passenger's seat, see \Rightarrow page 131.



WARNING

• An incorrect sitting position of the front passenger can lead to severe injuries.

Safety First

WARNING (continued)

- Adjust the front passenger seat so that there is at least 25 cm between your breastbone and the dash panel. If you are sitting nearer than 25 cm, the airbag system cannot protect you properly.
- If your physical constitution prevents you from maintaining the minimum distance of 25 cm, contact a qualified workshop. The workshop will help you decide if special specific modifications are necessary.
- Always keep your feet in the foot well when the vehicle is moving; never rest them on the instrument panel, out the window or on the seat. An incorrect sitting position exposes you to an increased risk of injury in the event of a braking manoeuvre or an accident. If the airbag is triggered, you could sustain severe injuries due to an incorrect sitting position.
- To reduce the risk of injury to the front passenger during sudden braking manoeuvres or an accident, never travel with the backrest tilted far back! The airbag system and seat belts can only provide optimal protection when the backrest is in an upright position and the front passenger is wearing his or her seat belt properly. The further the backrests are tilted to the rear, the greater the risk of injury due to incorrect positioning of the belt web or the incorrect sitting position!
- Adjust the head restraint properly to achieve maximum protection.

Correct sitting position for passengers in the rear seats

Passengers in the rear seats must sit up straight, keep their feet in the foot well s and wear their seat belts properly.

To reduce the risk of injury in the event of a sudden braking manoeuvre or an accident, passengers on the rear bench seat must observe the following:

- Adjust the headrest to the correct position \Rightarrow page 14.

- Keep both feet in the foot well in front of the rear seat.
- Fasten your seat belt correctly ⇒ page 19.
- Use an appropriate child restraint system when you take children in the vehicle ⇒ page 46.



WARNING

- If the passengers on the rear seat are not sitting properly, they could sustain severe injuries.
- Adjust the head restraint properly to achieve maximum protection.
- Seat belts can only provide optimal protection when backrests are in an
 upright position and the passengers are wearing their seat belts properly.
 If passengers on the rear seat are not sitting in an upright position, the risk
 of injury due to incorrect positioning of the belt web increases.

Correct adjustment of front seat head restraints

Properly adjusted head restraints are an important part of occupant protection and can reduce the risk of injuries in most accident situations.



Fig. 3 Properly adjusted head restraint viewed from the front

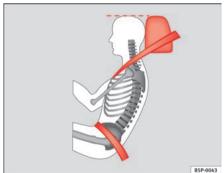


Fig. 4 Properly adjusted head restraint viewed from the side

Adjust the head restraint properly to achieve maximum protection.

Adjust the head restraint so that its upper edge is at the same level as the top of your head, or as close as possible to the same level as the top of your head and, at the very least, at eye level ⇒ fig. 3 and ⇒ fig. 4.

Adjusting the head restraints \Rightarrow page 128.



WARNING

- Travelling with the head restraints removed or improperly adjusted increases the risk of severe injuries.
- Incorrectly adjusted head restraints could result in death in the event of a collision or accident.
- Incorrectly adjusted head restraints also increase the risk of injury during sudden or unexpected driving or braking manoeuvres.
- \bullet The head restraints must always be adjusted according to the occupant's size. \blacksquare

Headrests in use*

Vehicle occupants are pressed into their seats during a rear end collision. The resulting body pressure on the backrest activates the crash-active head restraint* on the front seat, which moves rapidly forwards and upwards at the same time. This movement reduces the distance between the occupant's head and the head rest, thus reducing the risk of head injuries such as brain trauma.

Safety First Operating instructions Tips and Maintenance Technical Date



WARNING

Travelling with the head restraints removed or improperly adjusted increases the risk of severe injuries.

- Incorrectly adjusted head restraints could result in death in the event of a collision or accident.
- Incorrectly adjusted head restraints also increase the risk of injury during sudden or unexpected driving or braking manoeuvres.
- The head restraints must always be adjusted according to the occupant's size.



Note

The crash-active head restraints* could also be triggered if a vehicle occupant applies a high level of pressure on the backrest (e.g. by "falling" back into the seat when entering the vehicle) or if pressure is applied to a front seat head restraint from the rear. This accidental activation is, however, not dangerous as the crash-active head restraints will return to the original position immediately and are thus once again ready.

Correct adjustment of rear seat head restraints

Properly adjusted head restraints are an important part of the occupant protection and can reduce the risk of injuries in most accident situations

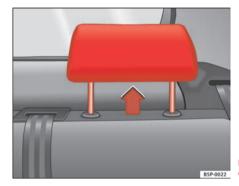


Fig. 5 Head restraints in correct position



Fig. 6 Head restraint position warning label

Rear outer seat head restraints

- The rear outer seat head restraints have 3 positions.
- Two positions for use ⇒ page 14, fig. 5. In these positions, the head restraints are used normally, protecting passengers along with the rear seat belts.
- And one position for non-use.
- To fit the head restraints in position for use, pull on the edges with both hands in the direction of the arrow.

Centre rear head restraint

The centre head restraint only has two positions, in-use (head restraint up) and non-use (head restraint down).



WARNING

- Under no circumstances should the rear passengers travel while the head restraints are in the non-use position. See the warning label located on the rear side fixed window ⇒ page 14, fig. 6.
- Do not swap the centre rear head restraint with either of the outer seat rear head restraints.
- Injury risk in case of an accident!



Caution

Note the instructions on the adjustment of the head restraints \Rightarrow page 129.

Examples of incorrect sitting positions

An incorrect sitting position can lead to severe injuries to occupants.

Seat belts can provide optimal protection only when the belt webs are properly positioned. Incorrect sitting positions substantially reduce the protective function of seat belts and increase the risk of injury due to incorrect belt web position. As the driver, you are responsible for all vehicle occupants, especially children.

The following list contains examples of sitting positions that could be dangerous for all occupants. The list is not complete, but we would like to make you aware of this issue.

Therefore, whenever the vehicle is in motion:

- Never stand in the vehicle,
- never stand on the seats,
- never kneel on the seats,
- never tilt your backrest far to the rear,
- never lean against the dash panel,
- never lie on the rear bench,
- never sit on the front edge of a seat,
- never sit sideways,
- never lean out of a window,
- never put your feet out of a window,
- never put your feet on the dash panel,
- never put your feet on the surface of a seat,

Safety First Operating instructions Tips and Maintenance Technical Data

- never travel in a foot well,
- · never travel on a seat without wearing the seat belt,
- never carry any person in the luggage compartment.



WARNING

- Every incorrect sitting position increases the risk of severe injuries.
- Sitting in an incorrect position exposes the occupants to severe injuries
 if airbags deploy, striking an occupant who has assumed an incorrect
 sitting position.
- Before the vehicle moves, assume the proper sitting position and maintain it throughout the trip. Before every trip, instruct your passengers to assume the proper sitting position and to maintain it during the trip ⇒ page 10, "Proper sitting position for occupants".

Pedal area

Pedals

The operation and freedom of movement of all pedals must never be impaired by objects or floor mats.

- Ensure that you can always press the accelerator, brake and clutch pedals unimpaired to the floor.
- Ensure that the pedals can return unimpaired to their initial positions.

Use only floor mats which leave the pedal area free and can be securely fastened in the foot well.

If a brake circuit fails, the brake pedal must be free to move further than normal in order to bring the vehicle to a stop.

Wear suitable shoes

Always wear shoes which support your feet properly and give you a good feel for the pedals.



WARNING

- Restricting pedal operation can lead to critical situations while driving.
- Never place objects in the driver foot well. An object could move into the pedal area and impair pedal operation. In the event of a sudden driving or braking manoeuvre, you will not be able to operate the brake, clutch or accelerator pedal. Risk of accident!

Floor mats on the driver side

Only floor mats may be used which can be securely fastened in the foot well and do not impair operation of the pedals.

 Ensure that the floor mats are securely fastened during the trip and do not obstruct the pedals ⇒ .

Only use floor mats which leave the pedals clear and which are secured to prevent them from slipping. You can obtain suitable floor mats from a qualified dealership.



WARNING

- If the pedals are obstructed, you could cause an accident. Risk of serious injuries.
- Ensure that the floor mats are always securely attached.

MARNING (continued)

 Never lay or fit floor mats or other floor coverings over the original floor mats. This would reduce the pedal area and could obstruct the pedals. Risk of accident.

Stowing luggage

Loading the luggage compartment

All luggage and other loose objects must be safely secured in the luggage compartment.

Unsecured objects which shift back and forth could impair the driving safety or driving characteristics of the vehicle by shifting the centre of gravity.

- Distribute the load evenly in the luggage compartment.
- Lay and stow heavy luggage as far forward as possible in the luggage compartment.
- Stow heavy luggage as low as possible in the luggage compartment.
- Secure heavy objects to the fitted fastening rings \Rightarrow page 18.



WARNING

 Loose luggage and other objects in the luggage compartment can cause serious injuries.

↑ WARNING (continued)

- Always stow objects in the luggage compartment and secure them on the fastening rings.
- Use suitable specialist straps to secure heavy objects.
- During sudden manoeuvres or accidents, loose objects can be thrown forward, injuring vehicle occupants or passers-by. This increased risk of injury will be further increased if a loose object is struck by an inflating airbag. If this happens, objects can be transformed into "missiles". Risk of fatal injury.
- Please note that the centre of gravity may shift when transporting heavy objects; this may affect the vehicle's handling and lead to an accident. Therefore, it is essential to adjust your speed and driving style accordingly, to avoid accidents.
- Never exceed the allowed axle loads or allowed maximum weight. If the allowed axle load or the allowed total weight is exceeded, the driving characteristics of the vehicle may change, leading to accidents, injuries and damage to the vehicle.
- Never leave your vehicle unattended, especially when the tailgate is open. Children could climb into the luggage compartment closing the door behind them; they will remain trapped without help and there is a mortal risk.
- Never allow children to play in or around the vehicle. Close and lock both the tailgate and all the doors when you leave the vehicle. Before you lock the vehicle, make sure that there are no adults or children in the vehicle.
- \bullet Never transport passengers in the luggage compartment. Every passenger must be properly belted in \Rightarrow page 19.

Safety First Operating instructions Tips and Maintenance Technical Data



Note

- Air circulation in the vehicle helps reduce fogging of the windows. Used air escapes through ventilation slits in the side trim of the luggage compartment. Ensure that the ventilation slits are never covered.
- Straps for securing the load to the fastening rings are commercially available.

 ■

Fastening rings

There are four fastening rings in the luggage compartment which can be used to secure luggage and other objects.

- Always use suitable and undamaged straps to secure luggage and other objects to the fastening rings ⇒ in "Loading the luggage compartment" on page 17.
- Pull up the fastening rings to attach the straps.

During a collision or an accident, even small and light objects can build up so much energy that they can cause very severe injuries. The amount of "kinetic energy" depends on the speed of the vehicle and the weight of the object. The most significant factor, however, is the speed of the vehicle.

Example: An object weighing 4.5 kg is lying unsecured in the vehicle. During a frontal collision at a speed of 50 km/h, this object generates a force corresponding to 20 times its weight. That means that the effective weight of the object increases to about 90 kg. You can imagine the severity of the injuries which might be sustained if this "projectile" strikes an occupant as it flies through the passenger compartment. This increased risk of injury will be further increased if a loose object is struck by an inflating airbag.



WARNING

- If pieces of baggage or other objects are secured to the fastening rings with inappropriate or damaged retaining cords, injuries could result in the event of braking manoeuvres or accidents.
- To prevent pieces of luggage or other objects from flying forward, always use appropriate retaining cords which are secured to the fastening rings.
- Never secure a child seat on the fastening rings.

19

Seat belts

Introduction

Before driving: remember your seat belt!

Properly worn seat belts can save lives!

In this chapter you will learn why seat belts are so important, how they work and how to properly fasten, adjust and wear them.

Read and observe all the information as well as the warnings in this chapter.



WARNING

- If the seat belts are worn incorrectly or not at all, the risk of severe injuries increases.
- · Properly worn seat belts can reduce severe injuries in the event of sudden braking manoeuvres or accidents. Therefore, you and your passengers should always wear the seat belts properly as long as the vehicle is in motion.
- Pregnant women or persons with physical disabilities must also use seat belts. Like all other occupants, these persons can also sustain severe injuries if they are not wearing their seat belts properly.

Number of seats

Your vehicle has **five** passenger places, two individual front seats and three places on the rear seat. Each seat is equipped with a three-point seat belt.



WARNING

 
- Never transport more people than there are seats available in the vehicle.
- Every occupant in the vehicle must properly fasten and wear the seat belt belonging to his or her seat. Children must be protected with an appropriate child restraint system.

Seat belt warning lamp* 👗

The warning lamp acts as a reminder to the driver to fasten the seat helt.

Before starting the vehicle:

- Fasten your safety belt securely.
- Instruct your passengers to fasten their seat belts properly before driving off.
- Protect children by using child seats of the correct height for the age of the child.



The warning lamp \clubsuit in the instrument panel lights up¹⁾ if the driver seat belt is not fastened when the ignition is switched on. In addition, an acoustic signal is given for a few seconds and a text is displayed on the combi-instrument asking you to **fasten your seat belt**¹⁾.

The warning lamp* \clubsuit does not go out until the driver seat belt is fastened while the ignition is switched on.

 $^{^{1)}}$ Depending on the model version

Why wear seat belts?

Frontal collisions and the laws of physics

In the event of a frontal collision, a large amount of kinetic energy is generated.

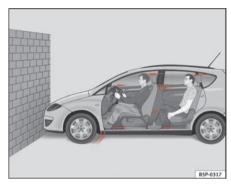


Fig. 7 Vehicle about to hit a wall: the occupants are not wearing seatbelts

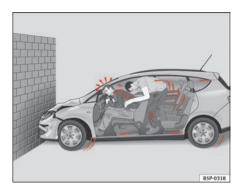


Fig. 8 The vehicle hits the wall: the occupants are not wearing seatbelts

It is easy to explain how the laws of physics work in the case of a head-on collision: When a vehicle starts moving \Rightarrow fig. 7 there is a certain amount of energy known as "kinetic energy", both in the vehicle and in the occupants.

The amount of "kinetic energy" depends on the speed of the vehicle and the weight of the vehicle and passengers. The higher the speed and the greater the weight, the more energy there is to be "released" in an accident.

The most significant factor, however, is the speed of the vehicle. If the speed doubles from 25 km/h to 50 km/h, for example, the kinetic energy increases by a factor of four.

Because the passengers in our example are not restrained by seat belts, the entire amount of kinetic energy has to be absorbed at the point of impact \Rightarrow fig. 8.

Even at speeds of 30 km/h to 50 km/h, the forces acting on bodies in a collision can easily exceed one tonne (1,000 kg). At greater speed these forces are even higher.

Passengers not wearing seat belts are not "attached" to the vehicle. In a frontal collision they will continue to move forward at the speed their vehicle

Safety First Operating instructions Tips and Maintenance Technical Da

was travelling just before the impact. This example applies not only to frontal accidents, but to all accidents and collisions. ■

The danger of not using the seat belt

Many people believe that the occupants can protect themselves with their hands in a minor collision, this is false.



Fig. 9 A driver not wearing a seat belt is thrown forward violently.



Fig. 10 The unbelted rear passenger is thrown forward violently, hitting the driver wearing a seat

Even at low speeds the forces acting on the body in a collision are so great that it is not possible to brace oneself with one's hands. In a frontal collision, unbelted passengers are thrown forward and will make violent contact with the steering wheel, dashboard, windscreen or whatever else is in the way \Rightarrow fig. 9.

The airbag system is not a substitute for the seat belts. When deployed, airbags provide only additional protection. All occupants (including the driver) must be wearing seat belts properly during the trip. This will reduce the risk of severe injuries in the event of an accident – regardless of whether an airbag is fitted for the seat.

Note that airbags can be triggered only once. To achieve the best possible protection, the seat belt must always be worn properly so that you will be protected in accidents in which no airbag is deployed.

It is also important for the rear passengers to wear seat belts properly, as they could otherwise be thrown forward violently in an accident. Rear passengers who do not use seat belts endanger not only themselves but also the front occupants \Rightarrow fig. 10.

23

Seat belts protect

Passengers not wearing seat belts risk severe injuries in the event of an accident.



Fig. 11 Driver wearing the seat belt properly: is secured by the belt in sharp braking

Properly worn seat belts hold the vehicle occupants in the correct sitting positions and substantially reduce the kinetic energy in the event of an accident. Seat belts also help to prevent uncontrolled movements that could lead to severe injuries. In addition, properly worn seat belts reduce the danger of being thrown from the car.

Passengers wearing their seat belts correctly benefit greatly from the ability of the belts to absorb kinetic energy. The front crumple zones and other passive safety features (such as the airbag system) are also designed to absorb the kinetic energy generated in a collision. Taken together, all these features reduce the forces acting on the occupants and consequently the risk of injury.

Our examples describe frontal collisions. Of course, properly worn seat belts reduce substantially the risk of injury in all other types of accidents. This is

why it is so important to fasten seat belts before every trip, even when "just driving around the corner".

Ensure that your passengers wear their seat belts as well. Accident statistics have shown properly worn seat belts to be an effective means of substantially reducing the risk of injury and improving the chances of survival in a serious accident. Furthermore, properly worn seat belts improve the protection provided by airbags in the event of an accident. For this reason, wearing a seat belt is required by law in most countries.

Although your vehicle is equipped with airbags, the seat belts must be fastened and worn. The front airbags, for example, are only triggered in some frontal accidents. The front airbags will not be triggered during minor frontal collisions, minor side collisions, rear collisions, rolls or accidents in which the airbag trigger threshold in the control unit is not exceeded.

Therefore, you should always wear your seat belt and ensure that your passengers have fastened their seat belts properly before you drive off!

Safety notes on using seat belts

If seat belts are used correctly, they can reduce the risk of injury in an accident.

- Always wear the seat belt as described in this booklet.
- Ensure that the seat belts can be fastened at all times and are not damaged.



WARNING

• If the seat belts are worn incorrectly or not at all, the risk of severe injuries increases. The optimal protection from seat belts can be achieved only if you use them properly.

Safety First

WARNING (continued)

- Fasten your seat belt before every trip even when driving in town. That applies also to your front and rear passengers – danger of injury!
- The seat belt cannot offer its full protection if the belt web is not positioned correctly.
- Never allow two passengers (even children) to share the same seat belt.
- Keep both feet in the foot-well in front of your seat as long as the vehicle is in motion.
- Never unbuckle a seat belt while the vehicle is in motion. Risk of fatal injury.
- The belt webbing must never be twisted while it is being worn.
- The belt webbing should never lie on hard or fragile objects (such as glasses or pens, etc.) because this can cause injuries.
- Do not allow the seat belt to be damaged or jammed, or to rub on any sharp edges.
- Never wear the seat belt under the arm or in any other incorrect position.
- Loose, bulky clothing (such as an overcoat over a jacket) impairs the proper fit and function of the belts, reducing their capacity to protect.
- The slot in the seat belt buckle must not be blocked with paper or other objects, as this can prevent the latch plate from engaging securely.
- Never use seat belt clips, retaining rings or similar instruments to alter the position of the belt webbing.
- Frayed or torn seat belts or damage to the connections, belt retractors or parts of the buckle could cause severe injuries in the event of an accident. Therefore, you must check the condition of all seat belts at regular intervals.
- Seat belts which have been worn in an accident and stretched must be replaced by a qualified workshop. Renewal may be necessary even if there is no apparent damage. The belt anchorage should also be checked.

MARNING (continued)

- Do not attempt to repair a damaged seat belt yourself. The seat belts must not be removed or modified in any way.
- The belts must be kept clean, otherwise the retractors may not work properly ⇒ page 209.

Safety belts

Seat belt adjustment

The seat belts for the front and rear occupants are locked into position by a latch.

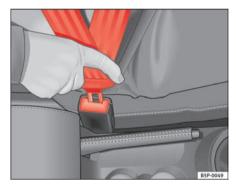


Fig. 12 Belt buckle and latch plate of seat belt

The seat belt cannot offer its full protection if the belt web is not positioned correctly.

- Adjust the seat and head restraint correctly.
- To fasten the belt, take hold of the latch plate and pull it slowly across your chest and lap.
- Insert the latch plate into the buckle for the appropriate seat and push it down until it is securely locked with an audible click
 ⇒ page 24, fig. 12.
- Pull the belt to ensure that the latch plate is securely engaged in the buckle.

The seat belts are equipped with an automatic retractor on the shoulder strap. Full freedom of movement is permitted when the shoulder belt is pulled slowly. However, during sudden braking, during travel in mountains or bends and during acceleration, the automatic retractor on the shoulder belt is locked.

The automatic belt retractors on the front seats are fitted with belt tension devices \Rightarrow page 28.

A

WARNING

- An incorrectly worn seat belt web can cause severe injuries in the event of an accident.
- The seat belts offer best protection only when the backrests are in an upright position and the seat belts have been fastened properly.
- Never put the latch plate in the buckle of another seat. If you do this, the seat belt will not protect you properly and the risk of injury is increased.
- If an occupant is incorrectly belted in, the belt cannot protect him or her properly. An incorrectly positioned belt web can cause extremely severe injuries.
- Always engage the retractor lock when you are securing a child seat in group 0, 0+ or $1 \Rightarrow page 46$.

Seat belt position

Seat belts offer their maximum protection only when they are properly positioned.

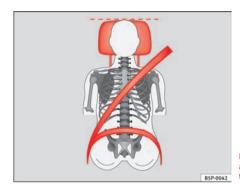


Fig. 13 Correct belt web and head restraint positions, viewed from front

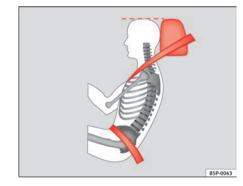


Fig. 14 Correct belt web and head restraint positions, viewed from side

Safety First Operating instructions Tips and Maintenance Techni

The following features are available to adjust the seat belt in the shoulder region:

- belt height adjustment for the front seats.
- front seat height adjustment*.



WARNING

- An incorrectly worn seat belt web can cause severe injuries in the event of an accident.
- The shoulder part of the seat belt must lie on the centre of the shoulder, never across the neck. The seat belt must lie flat and snugly on the torso ⇒ page 25, fig. 13.
- The lap part of the seat belt must lie across the pelvis, never across the stomach. The seat belt must lie flat and snugly on the pelvis ⇒ page 25, fig. 14. Pull the belt tight if necessary to take up any slack.
- Read and observe the warnings ⇒ page 23.

Pregnant women must also fasten their seat belts properly

The best protection for the unborn child is for the mother to wear the seat belt properly at all times during the pregnancy.



Fig. 15 Positioning seat belts during pregnancy

The seat belt provides maximum protection only when the belt web is properly positioned \Rightarrow page 25.

- Adjust the front seat and head restraint correctly \Rightarrow page 10.
- Holding the latch plate, pull the belt evenly across your chest and as low as possible over the pelvis ⇒ fig. 15.
- Pull the belt to ensure that the latch plate is securely engaged in the buckle.

27



WARNING

- An incorrectly worn seat belt web can cause severe injuries in the event of an accident.
- For pregnant women, the lap part of the seat belt must lie as low as possible over the pelvis, never across the stomach, and always lie flat so that no pressure is exerted on the abdomen.
- Read and observe the warnings \Rightarrow page 23.

Seat belt release

The seat belt must not be unfastened until the vehicle has come to a standstill.



Fig. 16 Removing latch plate from buckle

- Press the red button on the belt buckle \Rightarrow fig. 16. The latch plate is released and springs out $\Rightarrow \bigwedge$.

- Guide the belt back by hand so that it rolls up easily and the trim is not damaged.



WARNING

Never unbuckle a seat belt while the vehicle is in motion. If you do, you increase the risk of sustaining severe or fatal injuries.

Adjusting the seat belt height

Seat belt height adjusters can be used to adjust the position of the seat belt at the shoulder.

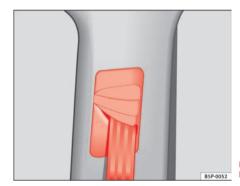


Fig. 17 Location of the belt height adjuster

The seat belt adjuster for the front seats can be used to adjust the proper belt position at the shoulder.

- Press the upper part of the shoulder belt guide and hold it in this position ⇒ page 27, fig. 17.
- Move the shoulder belt guide up or down until you have adjusted the seat belt ⇒ page 25.
- After adjusting, pull the shoulder belt sharply to check that the catch on the shoulder belt guide is engaged securely.

Incorrectly fastened seat belts

Incorrectly worn seat belts can cause severe injuries.

Seat belts can provide optimal protection only if the belt web is properly worn. The seat belts must be fastened exactly in the order described in this chapter. An incorrect sitting position impairs substantially the protection a seat belt offers and can lead to severe or fatal injuries. The risk of severe or fatal injuries is especially increased when a deploying airbag strikes an occupant who has assumed an incorrect sitting position. As driver, you are responsible for all vehicle occupants, especially children. Therefore:

 Never permit anyone to assume an incorrect sitting position in the vehicle while travelling ⇒ ⚠.

Λ

WARNING

- An incorrectly worn seat belt increases the risk of severe injuries.
- Before every trip, instruct your passengers to adjust their seat belts properly and to wear them during the trip.
- \bullet Read and always observe information and warnings concerning the use of seat belts \Rightarrow page 23. \blacksquare

Belt tension devices

Function of the belt tension device

During a frontal collision, the seat belts on the front seats are retracted automatically.

The seat belts for the front occupants are equipped with belt tension devices. Sensors will only trigger the belt tension devices during severe head-on, lateral and rear collisions, and only if the seat belt is actually being worn. This retracts and tightens the seat belts, reducing the forward motion of the occupants.

The belt tension device can be triggered only once.

The belt tension devices will not be triggered in the event of a light frontal, side or rear collision, if the vehicle overturns, or in situations where no large forces act on the front, side or rear of the vehicle.



Note

- If the belt tension devices are triggered, a fine dust is produced. This is normal and is no indication that there was a fire in the vehicle.
- The relevant safety requirements must be observed when the vehicle or components of the system are scrapped. A qualified workshop is familiar with these regulations and will be pleased to pass on the information to you.

Service and disposal of belt tension devices

The belt tension devices are components of the seat belts that are installed in the seats of your vehicle. If you work on the belt tension devices or remove and install parts of the system when performing other repair work, the seat

29

belt may be damaged. The consequence may be that, in the event of an accident, the belt tension devices function incorrectly or not at all.

So that the effectiveness of the belt tension device is not reduced and that removed parts do not cause any injuries or environmental pollution, regulations, which are known to the qualified workshops, must be observed.



/ WARNING

- If repairs are not carried out by a professional, or if the belt tension devices are used incorrectly, the risk of severe or fatal injuries increases. The belt tension devices may fail to trigger or may trigger in the wrong circumstances.
- Never attempt to repair, adjust, remove or install parts of the belt tension devices or seat belts.
- The belt tension device and seat belt including its automatic retractor cannot be repaired.
- Any work on the belt tension devices and seat belts, including the removal and refitting of system parts in conjunction with other repair work, must be performed by a qualified workshop only.
- The belt tension devices will only provide protection for one accident and must be changed it they have been activated.

Airbag system

Brief introduction

Why wear a seat belt and assume the correct sitting position?

For the inflating airbags to achieve the best protection, the seat belt must always be worn properly and the correct sitting position must be assumed.

For your own safety and the safety of the passengers, please ensure the following before you drive:

- Always wear the seat belt properly \Rightarrow page 19.
- Adjust the driver seat and the steering wheel correctly ⇒ page 10.
- Adjust the front passenger seat correctly ⇒ page 11.
- Adjust the head restraint seat correctly ⇒ page 13.
- Use the correct child restraint system to protect children in your vehicle ⇒ page 46.

The airbag deploys in fractions of a second and with a high velocity. If you have assumed an incorrect seating position at that moment, you could sustain critical injuries. Therefore, it is essential that all occupants maintain a correct sitting position while travelling.

Braking heavily the moment before an accident may cause an occupant not wearing a seat belt to be thrown forward into the area of the deploying airbag.

In this case, the inflating airbag may inflict critical or fatal injuries upon the occupant. This applies particularly to children.

Always maintain the greatest possible distance between yourself and the front airbag. This way, the front airbags can completely deploy when triggered, providing their maximum protection.

The most important factors that will trigger an airbag are: the type of accident, the angle of collision and the speed of the vehicle.

Whether the airbags are triggered depends primarily on the vehicle deceleration rate resulting from the collision and detected by the control unit. If the vehicle deceleration occurring during the collision and measured by the control unit remains below the specified reference values, the front, side and/or curtain airbag will not be triggered. Take into account that the visible damage in a vehicle following an accident, for whatever reason, are not an indication as to why the airbags were triggered.



WARNING

- Wearing the seat belt incorrectly or assuming an incorrect sitting position can lead to critical or fatal injuries.
- All occupants, including children, who are not properly belted can sustain critical or fatal injuries if the airbag is triggered. You should always transport all children up to 12 years of age on the rear seat. Never transport children in the vehicle if they are not restrained or the restraint system is not appropriate for their age, size or weight.
- If you are not wearing a seat belt or if you lean forward or to the side or assume an incorrect sitting position, the risk of injury is increased substantially. This increased risk of injury will be further increased if you are struck by an inflating airbag.
- To reduce the risk of injury from an inflating airbag, always wear the seat belt properly \Rightarrow page 19.

↑ WARNING (continued)

Always properly adjust the front seats.

The danger of fitting a child seat on the front passenger seat

Rear-facing child seats must never be used on the front passenger seat when the front passenger airbag is enabled.

An enabled front airbag on the front passenger side is potentially a major danger to a child. The front passenger seat is life threatening to a child if you transport the child in a rear-facing child seat. You should always transport all children up to 12 years of age on the rear seat.

If a rear-facing child seat is secured to the front passenger seat, an inflating airbag can strike it with such great force that critical or fatal injuries may result.

Therefore we urgently recommend that you transport children on the rear seats. That is the safest place in the vehicle for children. Alternatively, the front passenger airbag can be disabled with a key-operated switch ⇒ page 44. When transporting children, use a child seat appropriate to the age and size of each child \Rightarrow page 46.

For those vehicles that do not include a key lock switch to turn the airbag off, an Authorised Service Centre must be consulted.



WARNING

- If a child seat is secured to the front passenger seat, the risk to the child of sustaining critical or fatal injuries in the event of an accident increases.
- Never secure a rear-facing child seat to the front passenger seat if the front passenger airbag is enabled. The child can suffer critical or fatal injuries when the front passenger airbag is triggered.

WARNING (continued)

- An inflating front passenger airbag can strike the rear-facing child seat and hurl it with great force against the door, the roof or the backrest.
- If, under special circumstances, it should be necessary to transport a child in a rear-facing child seat on the front passenger seat, it is absolutely essential that you observe the following safety measures:
 - Disable the front passenger airbag ⇒ page 44, "Deactivating airbags*".
 - The child seat must be approved by the child seat manufacturer for use on a front passenger seat with front or side airbag.
 - Follow the installation instructions of the child seat manufacturer and absolutely observe the warnings \Rightarrow page 46, "Child safety".
 - Before properly installing the child seat, push the front passenger seat all the way to the rear so that the greatest possible distance to the front passenger airbag is ensured.
 - Ensure that no objects prevent the front passenger seat from being pushed completely back.
 - The backrest of the front passenger seat must be in an upright position.

Warning lamp for airbag and belt tension device system 🦃



This warning lamp monitors the airbag and belt tension device system.

The warning lamp monitors all airbags and belt tension devices in the vehicle, including control units and wiring connections.

Safety First

Monitoring of airbag and belt tension device system

The functionality of the airbag and belt tension device system is constantly monitored electronically. Each time the ignition is switched on, the warning lamp stights for several seconds and the display in the instrument panel* shows AIRBAG / TENSIONER.

The system must be checked when the warning lamp *:

- does not come on when the ignition is switched on,
- does not go out about 4 seconds after the ignition is switched on,
- goes out and then comes on again after the ignition is switched on,
- or if it comes on or flickers while the car is moving.

In the event of a malfunction, the warning lamp remains on continuously. In addition, depending on the malfunction, a fault message appears in the display of the combi-instrument for approx. 10 seconds and a short acoustic signal is given. In this event, you should have a qualified workshop check the system immediately.

If any of the airbags are de-activated by the Authorised Service Centre, the indicator lights for several seconds more after the verification and will turn off if there is no fault.



/!\ WARNING

- If there is a malfunction, the airbag and belt tension device system cannot properly perform its protective function.
- If a malfunction should occur, have the system checked immediately by a qualified workshop. Otherwise there is a risk that, in the event of an accident, the airbag system and belt tension devices may not be triggered, or may not be triggered correctly.

Repair, care and disposal of the airbags

The parts of the airbag system are installed in various places in your vehicle. If you work on the airbag system or remove and install parts of the system when performing other repair work, parts of the airbag system may be damaged. The consequence may be that, in the event of an accident, the airbag inflates incorrectly or does not inflate at all.

The relevant safety requirements must be observed when the vehicle or components of the airbag are **scrapped**. The specialist workshops and the Vehicle disposal centres are familiar with these requirements.



WARNING

- If repairs are not carried out by a professional, or if the airbags are used incorrectly, the risk of severe or fatal injuries is increased. The airbags may fail to inflate, or could inflate in the wrong circumstances.
- Do not cover or stick anything on the steering wheel hub or the soft plastic surface of the airbag unit on the passenger side of the dashboard, and do not obstruct or modify them in any way.
- It is important not to attach any objects such as cup holders or telephone mountings to the surfaces covering the airbag units.
- To clean the steering wheel or dash panel, you may use only a dry cloth
 or one moistened with water. Never clean the dash panel and surface of the
 airbag module with cleansers containing solvents. Solvents cause the
 surface to become porous. If the airbag inflates, disintegrating plastic
 parts can cause substantial injuries.
- Never attempt to repair, adjust, remove or install parts of the airbag system.
- Any work on the airbag system or removal and installation of the airbag components for other repairs (such as repairs to the steering wheel) should be performed only by a qualified workshop. Qualified workshops have the necessary tools, repair information and qualified personnel.

MARNING (continued)

- We urgently recommend that you go to a qualified workshop for all work on the airbag system.
- Never attempt to alter the front bumper or the body.
- The airbags provide protection for one accident only, if they have been deployed they must be replaced.

 ■

Front airbags

Description of front airbags

The airbag system is not a substitute for the seat belts.



Fig. 18 Driver airbag located in steering wheel



Fig. 19 Front passenger airbag located in dash panel

The front airbag for the driver is located in the steering wheel \Rightarrow fig. 18 and the airbag for the front passenger is located in the dash panel \Rightarrow fig. 19. Airbags are identified by the text "AIRBAG".

In conjunction with the seat belts, the front airbag system gives the front occupants additional protection for the head and chest in the event of a severe frontal collision \Rightarrow page 37, "Safety notes on front airbag system".

In addition to their normal function of restraining the occupants, the seat belts also hold the driver and front passenger in a position where the airbags can provide maximum protection in a frontal collision.

The airbag system is not a substitute for seat belts, but is an integral part of the vehicle's overall passive safety system. Please bear in mind that the airbag system can only work effectively when the occupants are wearing their seat belts correctly and have adjusted the head restraints properly. For this reason, it is most important to wear the seat belts at all times - not only because this is required by law in most countries, but also for your safety \Rightarrow page 19, "Introduction".

The main parts of the front airbag system are:

- an electronic control and monitoring system (control unit),
- the two front airbags (airbag with gas generator) for the driver and front passenger.
- a warning lamp \mathfrak{Z} in the dash panel insert \Rightarrow page 31.

The functionality of the airbag system is monitored electronically. The airbag warning lamp will light up for a few seconds every time the ignition is switched on (self-diagnosis).

There is a fault in the system if the warning lamp

- does not come on when the ignition is switched on \Rightarrow page 31,
- does not go out about 4 seconds after the ignition is switched on,
- goes out and then comes on again after the ignition is switched on,
- or if it comes on or flickers while the car is moving.

The front airbag system will not be triggered if:

- if the ignition is switched off,
- during a minor frontal collision,
- during a side collision,
- during a rear-end collision,
- or if the vehicle rolls.



WARNING

- The seat belts and airbags can only provide maximum protection if the occupants are seated correctly \Rightarrow page 10, "Proper sitting position for occupants".
- If a fault should occur in the airbag system, have the system checked immediately by a qualified workshop. Otherwise there is a danger that during a frontal collision, the system may fail to trigger, or not trigger correctly.

Function of front airbags

Inflated airbags reduce the risk of head or chest injury.



Fig. 20 Inflated front airbags

The airbag system is designed so that the airbags for the driver and front passenger are triggered in a severe frontal collision.

In certain types of accident the front, curtain and side airbags may be triggered together.

When the system is triggered, the airbags fill with a propellant gas and deploy in front of the driver and front passenger \Rightarrow fig. 20. The fully deployed airbags cushion the forward movement of the front occupants and help to reduce the risk of injury to the head and the upper part of the body.

The special design of the airbag allows the controlled escape of the propellant gas when an occupant puts pressure on the bag. Thus, the head and chest are surrounded and protected by the airbag. Once the impact has been absorbed, the airbag deflates sufficiently for the front occupants to see forward.

Safety First | Operating instructions | Tips and Maintenance | Technical Date

In order to provide the desired extra protection in an accident, the airbags have to deploy extremely rapidly (within fractions of a second). A fine dust

may develop when the airbag deploys. This is normal and is no indication that there was a fire in the vehicle. ■

The function of the airbag covers if the airbags are triggered

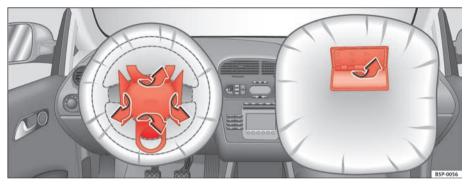


Fig. 21 Airbag covers reacting when the airbags are triggered

The airbag covers fold out of the steering wheel or dash panel when the driver and front passenger airbags deploy ⇒ fig. 21. The airbag covers remain connected to the steering wheel or the dash panel. ■

Safety notes on front airbag system

If you use airbags correctly, they can considerably reduce the risk of injury in many kinds of accident.



/ WARNING

- It is important for the driver and front passenger to maintain a distance of at least 25 cm from the steering wheel or dash panel. If the minimum distance is not observed then the airbags do not correctly protect the vehicle occupants; risk of fatal injuries! In addition, the front seats and head restraints must always be positioned correctly for the height of the occupant.
- If you are not wearing a seat belt or if you lean forward or to the side or assume an incorrect sitting position, the risk of injury is increased substantially. This increased risk of injury will be further increased if you are struck by an inflating airbag.
- Never let a child travel on the front seat without an appropriate restraint system. If the airbag is triggered in an accident, children can sustain serious or fatal injuries from the airbag as it inflates \Rightarrow page 46, "Child safety".
- Occupants sitting in the front of the vehicle must never carry any objects or pets in the deployment space between them and the airbags, or allow children or other passengers to travel in this position.
- The airbags provide protection for one accident only, if they have been deployed they must be replaced.
- It is also important not to attach any objects such as cup holders or telephone mountings to the surfaces covering the airbag units.
- Do not attempt to modify components of the airbag system in any way.

Side airbags*

Description of side airbags

The airbag system is not a substitute for the seat belts.



Fig. 22 Side airbag in

The front side airbags are located in the driver seat and front passenger seat backrests \Rightarrow fig. 22. The rear side airbags are located in the rear wheel housing lining. The locations are identified by the text "AIRBAG" in the upper region of the backrests and in the rear wheel housing lining.

In conjunction with the seat belts, the side airbag system gives the front seat occupants additional protection for the upper body in the event of a severe side collision \Rightarrow page 40, "Safety notes on the operation of the side airbag system".

In a side collision the side airbags reduce the risk of injury to passengers on the front seats to the areas of the body facing the impact. In addition to their normal function of protecting the occupants in a collision, the seat belts also hold the passengers on the front seats and the outer rear seats in a position where the side airbags can provide maximum protection.

The airbag system is not a substitute for seat belts, but is an integral part of the vehicle's overall passive safety system. Please bear in mind that the airbag system can only work effectively when the occupants are wearing their seat belts. For this reason, it is most important to wear the seat belts at all times - not only because this is required by law in most countries, but also for your safety \Rightarrow page 19, "Introduction".

The side airbag system will not be triggered

- if the ignition is switched off.
- during a minor side collision.
- during a frontal collision.
- during a rear-end collision.
- or if the vehicle rolls.

The main parts of the airbag system are

- an electronic control and monitoring system (control unit),
- The front side airbags in the backrests of the front seats and the rear side airbags in the lining of the rear wheel housing.
- a warning lamp % in the dash panel insert \Rightarrow page 31.

The functionality of the airbag system is monitored electronically. The airbag warning lamp will light up for approx. 4 seconds every time the ignition is switched on (self-diagnosis).



WARNING

- In a side-on collision, the side airbags will not work, if the sensors do not correctly measure the pressure increase on the interior of the doors. due to air escaping through the areas with holes or openings in the door panel.
- Never drive the vehicle if the interior panels have been removed.

↑ WARNING (continued)

- Never drive if the interior door panels have been removed or if the panels have not been correctly fitted.
- Never drive the vehicle if the loudspeakers in the door panels have been removed, unless the holes left by the loudspeakers have been correctly closed.
- Always check that the openings are closed or covered if loudspeakers or other equipment are fitted in the interior door panels.
- Any work carried out to the doors should be made in a qualified authorised workshop.
- The seat belts and airbags can only provide maximum protection if the occupants are seated correctly \Rightarrow page 10, "Proper sitting position for occupants".
- If a fault should occur in the airbag system, have the system checked immediately by a qualified workshop. Otherwise there is a danger that during a side collision, the system may fail to trigger, or not trigger correctly.

Function of side airbags

Inflated airbags can reduce the risk of head or chest injury in many side impact collisions.

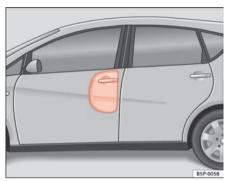


Fig. 23 Inflated side airbag on left side of vehicle

In some **side collisions** the side airbag is triggered on the impact side of the vehicle \Rightarrow fig. 23.

In certain types of accident the front, curtain and side airbags may be triggered together.

When the system is triggered, the airbag is filled with propellant gas.

In order to provide the desired extra protection in an accident, the airbags have to deploy extremely rapidly (within fractions of a second). A fine dust may develop when the airbag deploys. This is normal and is no indication that there was a fire in the vehicle.

The fully deployed airbags cushion the movement of the occupants of the front seats and the outer rear seats and help to reduce the risk of injury to the upper body.

The special design of the airbag allows the controlled escape of the propellant gas when an occupant puts pressure on the bag. Thus, the head and chest are surrounded and protected by the airbag.

Safety notes on the operation of the side airbag system

If airbaas are used correctly, they can considerably reduce the risk of injury in side impact collisions.



/ WARNING

- If you do not wear a seat belt, if you lean forward, or are not seated correctly while the vehicle is in motion, you are at greater risk of injury should the side airbag system be triggered in an accident.
- In order for the side airbags to provide their maximum protection, the prescribed sitting position must always be maintained with seat belts fastened while travelling.
- Occupants of the outer seats must never carry any objects or pets in the deployment space between them and the airbags, or allow children or other passengers to travel in this position. It is also important not to attach any accessories (such as cup holders) to the doors. This would impair the protection offered by the side airbags.
- The built-in coat hooks should be used only for lightweight clothing. Do not leave any heavy or sharp-edged objects in the pockets.
- Great forces, such as hard blows or kicks, must not be exerted upon the backrest bolster because the system may be damaged. In this case the side airbags would not be triggered.
- Under no circumstances should protective covers be fitted over the driver seat or front passenger seat unless the covers have been expressly approved for use in your vehicle. Because the airbag deploys from the side of the backrest, the use of non-approved seat covers would obstruct the side airbag seriously reducing the airbag's effectiveness \Rightarrow page 210, "Accessories, parts replacement and modifications".
- Any damage to the original seat upholstery or around the seams of the side airbag units must be repaired immediately by a qualified workshop.
- The airbags provide protection for one accident only, if they have been deployed they must be replaced.

↑ WARNING (continued)

- When children assume an incorrect sitting position, they expose themselves to an increased risk of injury in the event of an accident. This is particularly the case if the child is travelling on the front passenger seat and the airbag system is triggered in an accident; this could have critical consequences including serious injury or death ⇒ page 46, "Child safety".
- Any work on the side airbag system or removal and installation of the airbag components for other repairs (such as removal of the front seat) should only be performed by a qualified workshop. Otherwise, a fault may be introduced into the operation of the airbag system.
- Do not attempt to modify components of the airbag system in any way.
- The side and head airbags are managed through sensors located in the interior of the front doors. To ensure the correct functioning of the side and head airbags neither the doors nor the door panels should be modified in any way (e.g. fitting loudspeakers). If the front door is damaged in any way, this may affect the correct working of the system. All work carried out on the front door must be made in a qualified workshop.

Curtain airbags

Description of curtain airbags

The airbag system is not a substitute for the seat belts.



Fig. 24 Location of left curtain airbag

The curtain airbags are located on both sides in the interior above the doors ⇒ fig. 24 and are identified with the text "AIRBAG".

In conjunction with the seat belts, the curtain airbag system gives the occupants additional protection for the head and upper body in the event of a severe side collision \Rightarrow page 42, "Safety notes on the operation of the curtain airbag system".

The airbag system is not a substitute for seat belts, but is an integral part of the vehicle's overall passive safety system. Please bear in mind that the airbag system can only work effectively when the occupants are wearing their seat belts correctly and have adjusted the head restraints properly. For this reason, it is most important to wear the seat belts at all times - not only

because this is required by law in most countries, but also for your safety \Rightarrow page 19, "Introduction".

The main parts of the curtain airbag system are:

- an electronic control and monitoring system (control unit),
- the curtain airbags (airbags with gas generator) for the driver, front passenger and passengers on the rear seats,
- a warning lamp in the dash panel insert ⇒ page 31.

The functionality of the airbag system is monitored electronically.

The curtain airbag system will not be triggered

• if the ignition is switched off,

Safety First Operating instructions Tips and Maintenance Technical Data

- during a frontal collision,
- during a rear-end collision,
- if the vehicle rolls,
- during a minorside collision,



WARNING

If a fault should occur in the airbag system, have the system checked immediately by a qualified workshop. Otherwise there is a danger that during a collision, the system may fail to trigger, or not trigger correctly.

Function of curtain airbags

Fully inflated airbags reduce the risk of head or chest injury in a side collision

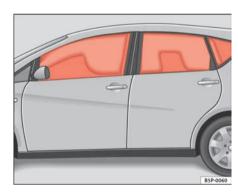


Fig. 25 Deployed curtain airbags

During some **side collisions** the curtain airbag is triggered on the impact side of the vehicle \Rightarrow fig. 25.

In certain types of accident the front, side and curtain airbags may be triggered together.

When the system is triggered, the airbag is filled with propellant gas. In the process, the curtain bag covers the side windows and door pillars.

In order to provide the desired extra protection in an accident, the airbags have to deploy extremely rapidly (within fractions of a second). A fine dust may develop when the airbag deploys. This is normal and is no indication that there was a fire in the vehicle.

The fully deployed airbags cushion the movement of the front occupants and help to reduce the risk of injury to the upper body.

The special design of the airbag allows the controlled escape of the propellant gas when an occupant puts pressure on the bag. Thus, the head and chest are surrounded and protected by the airbag.

Safety notes on the operation of the curtain airbag system

If you use airbags correctly, they can considerably reduce the risk of injury in many kinds of accident.



WARNING

- In order for the side airbags to provide their maximum protection, the prescribed sitting position must always be maintained with seat belts fastened while travelling.
- For safety reasons, the head air bag must be disconnected in those vehicles fitted with a passenger compartment separation screen. See an Authorised Service Centre to make this adjustment.

MARNING (continued)

- There must be no other persons, animals or objects between the occupants of the outer seats and the deployment space of the curtain airbags so that the curtain airbag can deploy without restriction and provide the greatest possible protection. Therefore, sun blinds which have not been expressly approved for use in your vehicle may not be attached to the side windows \Rightarrow page 210, "Accessories, parts replacement and modifications".
- The built-in coat hooks should be used only for lightweight clothing. Do not leave any heavy or sharp-edged objects in the pockets. When using the coat hooks, do not hang the clothes on coat hangers.
- The airbags provide protection for one accident only, if they have been deployed they must be replaced.
- Any work on the curtain airbag system or removal and installation of the airbag components for other repairs (such as removal of the roof lining) should only be performed by a qualified workshop. Otherwise, a fault may be introduced into the operation of the airbag system.
- Do not attempt to modify components of the airbag system in any way.
- The side and head airbags are managed through sensors located in the interior of the front doors. To ensure the correct functioning of the side and head airbags neither the doors nor the door panels should be modified in any way (e.g. fitting loudspeakers). If the front door is damaged in any way, this may affect the correct working of the system. All work carried out on the front door must be made in a qualified workshop.

Deactivating airbags*

Disabling front passenger airbag

If you fit a rear-facing child seat to the front passenger seat, the front passenger airbag must be de-activated.



Fig. 26 In the glove compartment: key for enabling and disabling front passenger airbag



Fig. 27 Warning lamp for deactivated passenger airbag in centre console

When the passenger airbag is **deactivated**, this means that only the frontal airbag is deactivated. All the other airbags in the vehicle remain functional.

Disabling front passenger airbag

- Switch off ignition.
- Turn the ignition switch in the key operated switch in the glove box to the position OFF ⇒ fig. 26.
- Check that the warning lamp "OFF" in the instrument panel \Rightarrow fig. 27 remains lit when the ignition is switched on \Rightarrow \bigwedge .

Enabling front passenger airbag

- Switch off ignition.
- Turn the ignition switch in the key-operated switch in the glove box to the position ON ⇒ fig. 26.

Check that the warning lamp in the instrument panel does
 ⇒ page 44, fig. 27 not light up when the ignition is switched on
 ⇒ ⚠.



WARNING

- The driver is responsible for the proper position of the key-operated switch.
- You should deactivate the front passenger airbag only if you have to use a rear-facing child seat in exceptional cases. ⇒ page 46, "Child safety".
- Never install a child seat facing backwards (or rear-facing) on the front passenger seat unless the front passenger airbag has been disabled. This represents a risk of fatal injuries to the child! However, if it is necessary in exceptional circumstances to transport a child in a rear-facing child seat on the front passenger seat, you must always disable the front passenger airbag.
- As soon as the child seat is no longer needed on the front passenger seat, enable the front passenger airbag again.
- Only deactivate the passenger airbag when the ignition is off, otherwise a fault may occur in the airbag system, this will create a danger that in case of an accident, the airbag does not deploy properly or does not deploy at all.
- When the passenger airbag is deactivated, if the warning lamp AIRBAG OFF is not continuously lit up when the front passenger airbag is disabled, there may be a fault in the airbag system:
 - $-\,$ Have the airbag system inspected immediately by a qualified workshop.
 - Do not use a child seat on the front passenger seat! The front passenger airbag could be triggered despite the fact that there is a fault in the system and, as a result, a child could sustain serious or fatal injuries.

MARNING (continued)

- It is not certain whether the front passenger airbag will deploy during an accident! Inform your passengers of this.
- When using the ignition key to activate / deactivate the passenger front airbag, only the passenger front airbag will be activated / deactivated. The side airbag and head airbag on the passenger side will remain active.

Safety First | Operating instructions | Tips and Maintenance | Technical Date

Child safety

Brief introduction

Introduction

Statistics show that children are generally safer on the rear seat than on the front passenger seat.

We recommend that children under 12 years of age be transported on the rear seats. Children travelling on the rear seat must use a child restraint system or the seat belts provided, depending on their age, height and weight. For safety reasons, the child restraint system should be installed in the centre of the rear seat or behind the front passenger's seat.

The physical principles involved and the forces acting in a collision apply to children just as much as adults \Rightarrow page 21, "Why wear seat belts?". But unlike adults, children do not have fully developed muscle and bone structures. This means that children are subject to a greater risk of injury.

To reduce this risk, children must always use special child restraint systems when travelling in the vehicle.

We recommend the use of child safety products from the SEAT Genuine Accessories Program including systems for all ages made by "Peke"²).

These systems have been especially designed and approved, complying with the ECE-R44. regulation.

Follow the manufacturer's instructions and observe any statutory requirements when installing and using child seats. Always read and observe ⇒ page 47, "Safety notes on using child seats".

We recommend that you include the manufacturer's directions for child seat use in the vehicle wallet and always keep them in the vehicle. ■

²⁾ Not for all countries

Safety notes on using child seats

Proper use of child seats substantially reduces the risk of injury in an accident!

As the driver, you are responsible for any children you transport in your vehicle.

- Protect your children by properly using appropriate child seats ⇒ page 48.
- Always ensure that the belt webbing is properly positioned according to the instructions provided by the manufacturer of the child seat.
- When travelling, do not allow children to distract you from traffic.
- Take breaks regularly during long trips. Take a break at least every two hours.

WARNING

- Never install a child seat facing backwards (or rear-facing) on the front passenger seat unless the front passenger airbag has been disabled. This could lead to a risk of potentially fatal injuries to the child! However, if it is necessary, in exceptional cases, to transport a child in the front passenger seat, the front passenger airbag must always be disabled ⇒ page 44, "Deactivating airbags*". If the passenger seat has a height adjustment option, move it to the highest position.
- For those vehicles that do not include a key lock switch to turn the airbag off, an Authorised Service Centre must be consulted.
- All passengers, especially children, must assume the proper sitting position and be properly belted in while travelling.

WARNING (continued)

- Never hold children or babies on your lap, this can result in potentially fatal injuries to the child!
- Never allow a child to be transported in a vehicle without being properly secured, or to stand up or kneel on a seat while travelling. In an accident, the child could be flung through the vehicle, causing possibly fatal injuries to themselves and other occupants.
- If children assume an improper sitting position when the car is moving, they expose themselves to greater risk of injury during a sudden braking manoeuvre or in an accident. This is particularly the case if the child is travelling on the front passenger seat and the airbag system is triggered in an accident; this could have consequences including serious injury or death.
- A suitable child seat can protect your child!
- Never leave a child unsupervised in a child seat or alone in the vehicle.
- Depending on weather conditions, it may become extremely hot or cold inside the vehicle. This can be fatal.
- Children who are less than 1.5 metres tall must not wear a normal seat belt without a child restraint system, as this could cause injuries to the abdominal and neck areas during a sudden braking manoeuvre or in an accident.
- Do not allow the belt webbing to become twisted or jammed, or to rub on any sharp edges.
- Incorrectly worn seat belts can cause injuries even in a minor collision or sudden braking manoeuvres.
- The seat belt provides maximum protection only when the belt web is properly positioned ⇒ page 24, "Safety belts".
- Only one child may occupy a child seat \Rightarrow page 48, "Child seats".

Safety First Operating instructions Tips and Maintenance Technical Data

Child seats

Categorisation of child seats into groups

Use only child seats that are officially approved and suitable for the child.

Child seats are subject to the regulation ECE-R 44. ECE-R means: Economic Commission for Europe Regulation

The child seats are grouped into 5 categories:

Group 0: Children up to 10 kg **Group 0+:** Children up to 13 kg

Group 1: from 9 to 18 kg **Group 2**: from 15 to 25 kg **Group 3**: from 22 to 36 kg

Child seats that have been tested and approved under the ECE R 44 standard bear the test mark on the seat (the letter E in a circle with the test number below it).

Group 0 and 0+ child seats

A suitable child seat and a correctly adjusted seat belt can help to protect your child.

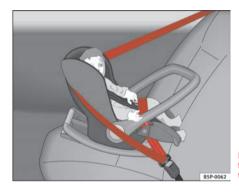


Fig. 28 A group 0 rearfacing child seat fitted on the rear seat.

Group 0: For babies from about 9 months old and 10 kg in weight the most suitable seats are those appearing in the illustration ⇒ fig. 28.

Group 0+: For babies from about 18 months old and 13 kg in weight the most suitable seats are those appearing in the illustration.

Follow the manufacturer's instructions and observe any statutory requirements when installing and using child seats.

We recommend that you include the manufacturer's directions for child seat use in the vehicle wallet and always keep them in the vehicle.



WARNING

Read and always observe information and warnings concerning the use of child seats $\Rightarrow \bigwedge$ in "Safety notes on using child seats" on page 47.

49

Group 1 child seats

A suitable child seat and a correctly adjusted seat belt can help to protect your child.



Fig. 29 A category 1 forward-facing child seat fitted on the rear seat.

Child seats using the "ISOFIX" and "Toptether" system (or even the anti-rotation system) or seats in which the child faces the rear of the car are most appropriate for babies and small children weighing between 9 and 18 kg.

Follow the manufacturer's instructions and observe any statutory requirements when installing and using child seats.

We recommend that you include the manufacturer's directions for child seat use in the vehicle wallet and always keep them in the vehicle.



WARNING

Read and always observe information and warnings concerning the use of child seats ⇒ !\text{ in "Safety notes on using child seats" on page 47. ■

Group 2 and 3 child seats

A suitable child seat and a correctly adjusted seat belt can help to protect your child.



Fig. 30 Forward-facing child seat installed on rear seat.

Follow the manufacturer's instructions and observe any statutory requirements when installing and using child seats.

We recommend that you include the manufacturer's directions for child seat use in the vehicle wallet and always keep them in the vehicle.

Group 2 child seats

Children under 7 years of age weighing between 15 and 25 kg are best protected by group 2 child seats in conjunction with properly adjusted seat belts.

Group 3 child seats

Children over 7 years of age weighing between 22 and 36 kg but less than 1.5 metres tall are best protected by seat cushions with head restraints in conjunction with properly worn seat belts \Rightarrow fig. 30.



/ WARNING

- The shoulder part of the seat belt must lie approximately on the centre of the shoulder, never across the neck or the arm. The seat belt must lie close to the torso. The lap belt part must lie across the pelvis, not across the stomach, and always fit closely. Pull the belt tight if necessary to take up any slack \Rightarrow page 24, "Safety belts".
- Read and always observe information and warnings concerning the use of child seats ⇒ ⚠ in "Safety notes on using child seats" on page 47. ■

51

Securing child seats

Ways to secure a child seat

A child seat can be secured differently on the rear seat and on the front passenger seat.

You can secure a child seat to the rear seat or front passenger seat in the following ways:

• Child seats in groups 0 to 3 can be secured with a seat belt.

• Child seats from the groups 0. 0+ and 1 using the "ISOFIX" and "Toptether" systems or the antirotation system may be secured without using the adult seatbelt and using the "ISOFIX" and "Toptether" anchors or the antirotation mechanism/brackets.

Weight class	Weight	Seat locations		
		Front passenger	Rear outer	Rear centre
Group 0	<10 kg	U*	U/L	U
Group 0+	<13 kg	U*	U/L	U
Group 1	9-18 kg	U*	U/L	U
Group 2 / 3	15-36 kg	U*	U	U

- U: Suitable for universal approved restraining systems for use in this age category (universal retention systems are those fitted using the adult seat belt.
- Move the passenger seat as far to rear as possible, as high as possible and always deactivate the airbag.
- L: Suitable for retention systems using the "ISOFIX" and "Toptether" anchors or antirotation mechanism/bracket



WARNING

• When travelling, children must be secured in the vehicle with a restraint system suitable for age, weight and size.

WARNING (continued)

- Never install a child seat facing backwards (or rear-facing) on the front passenger seat unless the front passenger airbag has been disabled. This represents a risk of fatal injuries to the child! However, if it is necessary, in exceptional cases, to transport a child in the front passenger seat, the front passenger airbag must always be disabled \Rightarrow page 44, "Deactivating airbags*" and move the seat to its highest position, in case it has this adiustment.
- Read and always observe information and warnings concerning the use of child seats \Rightarrow \bigwedge in "Safety notes on using child seats" on page 47.

Safety First

Securing the child seat by "ISOFIX" and "Toptether" systems or anti-rotating system

The child seat with "ISOFIX" system can be secured quickly, easily and safely on the rear outer seats using the system

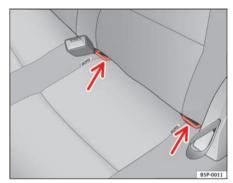


Fig. 31 ISOFIX securing rings

When removing or fitting the child seat, please be sure to follow the manufacturer's instructions.

- Move the seat as far to rear as it will go.
- Press the child seat onto the "ISOFIX" retaining rings until the child seat can be heard to engage securely. If the child seat is equipped with "Toptether" anchor points, secure it to the correspondent ring. If the child seat is fitted with any other antirotation system, follow the manufacturer instructions carefully.
- Pull on both sides of the child seat to ensure that it is secure.

Two "ISOFIX" retaining rings are fitted on each rear seat. In some vehicles, the rings are secured to the seat frame and in others they are secured to the rear floor. Access to "ISOFIX" rings is between the rear back rest and the seat. "Toptether" rings are located in the space behind the rear seats. They are often located on the rear of the seat backs.

Child seats with "ISOFIX" and "Toptether" mountings are available from the Authorised Service Centres.



WARNING

- The retaining rings are designed only for use with "ISOFIX" and "Toptether" child seats.
- Never secure child seats that do not have the "ISOFIX" or "Toptether" system, retaining belts or objects to the fastening rings this can result in potentially fatal injuries to the child!
- Ensure that the child seat is secured correctly using the "ISOFIX" and "Toptether" anchors.

Safety First Operating instructions Tips and Maintenance Technical Data

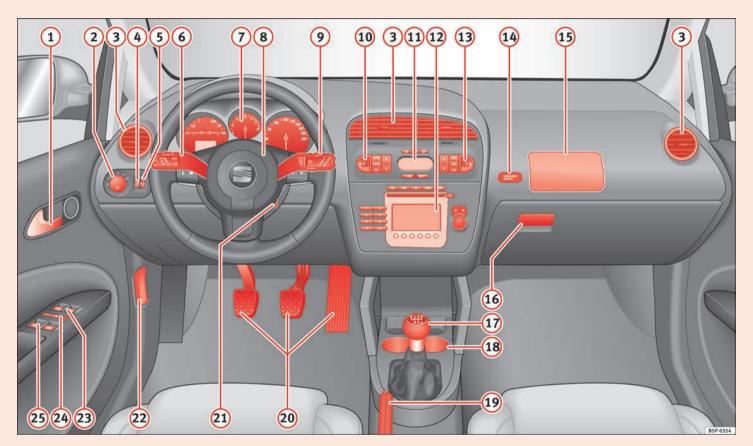


Fig. 32 Instrument panel

Operating instructions

Cockpit

Overview

Overview of the instrument panel

This overview will help you to familiarise yourself with the controls and displays.

1	Door release lever	
2	Light switch	111
3	Air vent	
4	Lighting control for instrument and control lighting	113
(5)	Headlight range control	113
6	Turn signal and main beam lever and cruise control system*	116, 176
7	Instrument panel:	
	- Instruments	56
	- Display	59
	- Indication lamps	72
8	Horn (works only when the ignition is on)/ and driver front	
	airbag	30
9	$\label{thm:continuous} Windscreen\ wash\ lever\ and\ operation\ of$	
	the multi-function display*	121, 61
10	Thumb wheel for left seat heating	132

(11)	Controls for	
	- Heating* and ventilation	151
	- Air conditioning*	153
	- Air conditioner*	156
12	Radio	
13	Thumb wheel for right seat heating	132
14	Indicator light for deactivated front passenger airbag	44
15	Front passenger airbag	30
16	Glove compartment lever	134
17	Gear shift lever	168
18	Cup holder compartment	139
19	Handbrake	
20	Pedals	
21	Ignition lock	163
22	Handle for releasing the bonnet	215
23	Button for opening and closing the front windows	106
24	Safety switch* for the rear windows	106
(25)	Control* for opening and closing the rear windows	106



Note

Some of the items of equipment listed here are fitted only on certain models/model years or are optional extras. ■

Safety First Operating instructions Tips and Maintenance Technical Date

Instruments

Instrument overview

The instruments display the vehicle operating status.

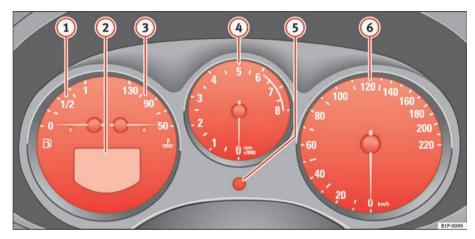


Fig. 33 Detailed view of dash panel instrument panel

Detailed view of dash panel instrument panel

- 1 Fuel gauge \Rightarrow page 57
- (2) Multi-function display
- 3 Engine coolant temperature gauge ⇒ page 57
- (4) Rev counter ⇒ page 58
- \bigcirc Time adjustment button / trip recorder reset button \Rightarrow page 58
- 6 Speedometer ■

Fuel gauge and reserve indicator



Fig. 34 Instrument panel: fuel gauge

Instrument panel: fuel gauge

The fuel tank has a capacity of approx. 55 litres. On vehicles with four-wheel drive, the fuel tank has a capacity of approx. 60 litres.

When the needle reaches the reserve zone \Rightarrow fig. 34 (arrow), the warning lamp will light and an acoustic signal will sound **reminding the driver to refuel**. At this point there are still about 7 litres of fuel in the tank (8 litres for vehicles with four-wheel drive).

The following text appears in the instrument panel display $^{3)}$ **PLEASE REFUEL***.

Engine coolant temperature display 🎩

This gauge shows the engine coolant temperature.



Fig. 35 Instrument panel: engine coolant temperature gauge

Needle in cold zone (A)

Avoid high engine speeds and heavy engine loads \Rightarrow fig. 35.

Needle in normal zone (B)

In normal driving conditions, the needle should be in the middle section of the scale. The temperature may also rise when the engine is working hard, especially at high outside temperatures. This is no cause for concern as long as the warning lamp does not light up and no warning* text appears in the combi-instrument display.

Needle in warning zone ©

The warning lamp* \Rightarrow page 72, fig. 47 ② will light up if the needle is in the warning zone. The following warning appears in the instrument panel

³⁾ Depending on the model version

display⁴⁾. **Stop the car and switch off the engine.** Check the coolant level \Rightarrow page 223 $\Rightarrow \bigwedge$.

Even if the coolant level is correct do not continue driving. You should obtain technical assistance.



/ WARNING

When working in the engine compartment, always bear in mind the safety warnings \Rightarrow page 215.



Caution

Accessories in front of the air inlet reduce the cooling effect of the coolant. At high outside temperatures and high engine loads, there is a risk of the engine overheating.

Rev counter

The rev. counter displays the engine speed in revolutions per minute.

The start of the red zone on the dial \Rightarrow page 56, fig. 33 (4) indicates the maximum engine speed which may be used briefly when the engine is warm and after it has been run in properly. However, it is advisable to change up a gear or move the selector lever to D (or lift your foot off the accelerator) before the needle reaches the red zone.



The rev counter needle must never enter the red zone on the scale. Risk of engine damage.



For the sake of the environment

Changing up a gear early will help you to save fuel and minimise engine noise.

Setting the digital clock*

The digital clock is located in the instrument panel display.

- Turn the setting knob \Rightarrow page 56, fig. 33 (5) anti-clockwise to the stop to set the hour. If the knob is turned briefly anti-clockwise the clock will advance one hour further.
- Turn the setting knob clockwise to the limit stop to set the minutes. If the knob is turned briefly clockwise the clock will advance one minute further.

Depending on the model version

Digital display in the instrument panel

Display (without warning or information texts)

The display in the instrument panel shows, amongst other things, the mileage and trip recorder as well as the selector lever position.

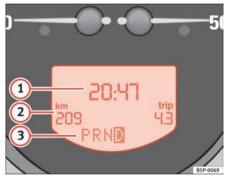


Fig. 36 Detail of the instrument cluster: screen with different indicators



Fig. 37 Detail of the instrument cluster: screen with Tiptronic gear indicator

- 1 Digital clock display ⇒ page 58
- (2) Distance display or service interval display ⇒ page 60
- 3 Selector lever position display for the automatic gearbox*.
- (a) Display for the gears in Tiptronic mode (automatic gearbox)*. The selected gear appears in the display field with a light background ⇒ fig. 37. ■

Displayed categories

The display in the instrument panel shows the mileage and trip recorder as well as the selector lever position.



Fig. 38 Digital display in the instrument panel

- (1) Warning and monitoring indicators: "Warning and indication lamps"
- Clock: "Setting the time". In some vehicles the ambient temperature is displayed to the right of the clock.
- (2) There are optional and automatic displays in this field.
- Optional indicators: e.g. Multi-function display (MFD) and ambient temperature display
- Automatic indicators: Information texts and warnings: "Warning and information messages on the screen"
- Menus providing further information and which can be used to make diverse settings are also shown: "Instrument panel menus"

- 3 Distance display or flexible service interval display: "Distance display or flexible service interval display"
- Selector lever position display for the automatic gearbox. The actual position of the selector lever or the gear which is engaged (for Tiptronic) are highlighted.

Mileage display or Service Interval Display

Distance display

The left-hand counter in the display registers the total amount of distance covered by the vehicle.

The right-hand counter registers the short journeys. The last digit indicates steps of 100 metres. The trip recorder counter may be reset by the reset button \Rightarrow page 56, fig. 33 (5).

Service interval display

A **service pre-warning** will appear on the mileage displays if a service is due soon. A "spanner" symbol appears and the display "miles" with the distance that can be driven until the next service appointment is due. The display will change after approximately 10 seconds. A "clock symbol" appears and the number of days until the service appointment should be carried out. The instrument panel displays shows the following message⁵⁾: **SERV. IN ... KM OR ... DAYS.** The service message will disappear approximately 20 seconds after the ignition is switched on or the engine is running. The normal display can be resumed by pressing the reset button on the trip counter or by pressing the rocker switch of the MFI \Rightarrow page 61, fig. 39 (B).

With the ignition switched on, you can call up the current **service message** by pressing the trip counter reset knob for 2 seconds.

⁵⁾ Depending on the model version

An **overdue service** is indicated by a minus sign in front of the mileage or day information.

Display with multi-function display (MFD)*

The multi-function display (MFD) shows you diverse journey and consumption data.

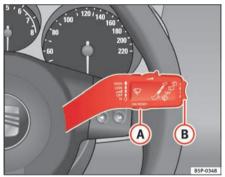


Fig. 39 Windscreen wiper and windscreen wash lever: button A and rocker switch B

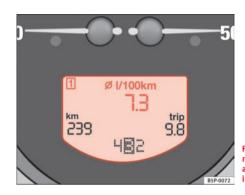


Fig. 40 Digital instrument panel display: average fuel consumption indicator

The multi-function system uses two automatic memories: **1 - Trip memory** and **2 - Total memory**. The selected memory will be shown in the upper right-hand corner of the display.

Selecting memory

With the ignition switched on, briefly press the button ⇒ fig. 39
 A on the windscreen wiper lever to move between the two memories.

Resetting the memory

- Select the memory that you would like to reset.
- Press and hold button (A) on the windscreen wiper lever for at least 2 seconds.

The **trip memory 1** collects the travel and consumption data from the moment the ignition is switched on until it is switched off. If the journey is continued within two hours of switching off the ignition, the new values will be added to

the existing trip recorder memory. The memory will automatically be deleted if the journey is interrupted for more than two hours.

The **total journey memory 2** collects the journey data for any number of individual journeys (even if the ignition is switched off for longer than two hours) up to a total of 99 hours and 59 minutes travel time, 9999 kilometres distance travelled and 999 litres of fuel consumed. The memory will automatically be deleted if one of the named values is reached.

Displays in the multi-function display (MFD)*

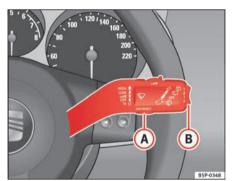


Fig. 41 Windscreen wiper and windscreen wash lever: button A and rocker switch B



Fig. 42 Digital instrument panel display: average fuel consumption indicator.

You can switch between the following displays in the multi-function display (MFD) by operating the rocker switch \Rightarrow fig. 41 (B) on the windscreen wiper lever.

Memory displays

- Journey duration
- Speed warning
- Average speed
- Distance
- Distance to empty (the distance you can travel with the remaining fuel)
- Average fuel consumption
- Current fuel consumption

min - Journey duration

The display shows the amount of time which has elapsed since the ignition was switched on.

The maximum display value in both memories is 99 hours and 59 minutes.

The memory will automatically be deleted once this value has been reached.

Set speed indicator

When driving at the required speed, enter the speed indicator mode and press the button (A) (Reset), the display remembers the indicated speed. If the indicated speed is exceeded, a warning text is displayed on the screen⁶⁾ and a warning signal sounds.

This may be deactivated by pressing the button (A) (Reset).

The speed may be altered using the rocker switch (B) in steps of 5 km/h within 5 seconds of the initial memory value.

Ø km/h - Average speed

The average speed will be shown after a distance of approximately 100 metres has been travelled. Dashes will appear in the display until that time. The display will be updated every 5 seconds whilst the vehicle is in motion.

km - Distance travelled

The display shows the distance travelled since the ignition was switched on.

The maximum display value in both memories is 9999 km. The memory will automatically be deleted once this value has been reached.

km - Fuel range

The fuel range is calculated using the figures for tank content and current fuel consumption. It shows how far the vehicle can travel using the same conditions as a reference.

Ø litre/100km - Average fuel consumption

The average fuel consumption will be shown ⇒ page 62, fig. 42 after a distance of approximately 100 metres has been travelled. Dashes will appear in the display until that time. The display will be updated every 5 seconds whilst the vehicle is in motion. The amount of fuel used will not be shown.

ltr/100km or ltr/hr - Current fuel consumption

The display will show the current fuel consumption in litre/km whilst the vehicle is in motion or in litre/hour when the vehicle is in a stationary position with the engine running.

Using this display you can see how your driving style affects fuel consumption \Rightarrow page 194.

Ambient temperature display

The measurement margin extends from -45°C to +58°C. At temperatures lower than +4°C, an "ice crystal symbol" is displayed and a "warning" sounds if the vehicle is moving at more than 20 km/h (ice warning). This symbol will flash for about 10 seconds and remains lit until the exterior temperature rises above +4°C or 6°C if it was already lit.



WARNING

There could be black ice on the road surface even if the "snowflake symbol" is not shown. You should, for this reason, not rely exclusively on this display - Risk of accident!



Not

When the vehicle is stationary or travelling at very low speeds, the temperature displayed may be slightly higher than the actual ambient temperature as a result of the heat radiated from the engine.

Warning or information text in the display

Faults are shown in the display with warning lamps and warning/information reports.

The system runs a check on certain components and functions when the ignition is switched on and while the vehicle is moving. Functional faults are indi-

Safety First Operating instructions Tips and Maintenance Technical Data

⁶⁾ Depending on the model version, the message on the screen may vary and may be represented by flashing of the speed indication or by a speed message.

cated by symbols with warnings and information texts in the display. An audible warning is given in certain cases.

Warning symbols

There are red warning symbols (priority 1) and yellow warning symbols (priority 2).

Information text

In addition to warning messages given on a fault, you will receive information in the display on procedures or will be asked to carry out certain tasks.



Note

In the case of screens without warning or information texts, faults are indicated exclusively by the warning lamps. ■

Warning reports, Priority 1 (red)

If one of these faults occurs, the warning lamp will flash or light up and will be accompanied by **three audible warnings**. This is a **danger** warning. Stop the car and switch off the engine. Check the fault and correct it. Obtain professional assistance if necessary.

If several priority 1 faults are detected at the same time, the symbols will be displayed one after the other for about 2 seconds at a time and will continue until the fault is corrected.

No menus will be shown in the display for the duration of a priority 1 warning report.

Examples of priority 1 warning reports (red) 7)

- Brake system symbol ① with warning text STOP BRAKE FLUID
 INSTRUCTION MANUAL or STOP BRAKE FAULT INSTRUCTION MANUAL.
- Coolant symbol with the warning text STOP CHECK COOLANT INSTRUCTION MANUAL.

Warning reports, Priority 2 (yellow)

If one of these faults occurs, the warning lamp lights up, and is accompanied by **one audible warning**. The function should be checked as soon as possible.

If several priority 2 warning reports are detected at the same time, the symbols are displayed one after the other for about 2 seconds at a time. After a set time, the information text will disappear and the symbol will be shown as a reminder at the side of the display.

Priority 2 warning reports will not be shown until all **Priority 1** warning reports have been dealt with!

Examples of priority 2 warning reports (yellow):8)

- Fuel symbol with the information text PLEASE REFUEL.
- Electronic immobiliser symbol ← with the information text **SAFE**. A valid key was not used, for this reason the vehicle may not start. ■

⁷⁾ Depending on the model version

⁸⁾ Depending on the model version

Instrument panel menus

Main menu

The menu enables access to the different display functions.

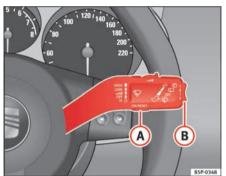


Fig. 43 Windscreen wiper lever: button A to confirm the menu selection and rocker switch B to change the menu

Open main menu

- Switch on the ignition.
- Press and hold the eject button (B) for at least 2 seconds. It may be necessary to repeat this operation until the main menu is displayed.

Select a menu from the main menu

 To choose an option from the menu, press the upper or lower end of rocker switch (B). The selected option is displayed between two horizontal lines.



Fig. 44 Digital instrument panel display: Main

- Press button (A) to select the entry.

Example of menu use: "Example of menu use"

afety First Operating instructions Tips and Maintenance Technical Da

Main menu	Function
Multi-function display	Change to the multi-function display (MFD): "Multi-function display (MFD)"
Audio	The current station will be shown when the radio is switched on.
Navigation	This menu is only available if the vehicle is fitted with a navigation system. The navigation system must be switched on. When the destination guide is activated, the turning arrows and proximity bars are displayed. The display is similar to that of the Navigation system. If the destination guide is not activated, the direction of travel (compass) and the name of the street along which you are driving are shown.
Telephone	This menu is only available if the vehicle is fitted with a telephone mounted by the manufacturer: "Fixed telephone installation"
Vehicle condition	This menu displays current warning or information texts: "Vehicle status menu" This option flashes when one of these texts is displayed.
Configuration	This option allows the time, the speed warning when using winter tyres, units, language, independent heating, the Light and visibility menu and the Convenience menu to be reset.
Display off	The display is switched off. It comes on again on entering the main menu or when a warning, breakdown or service message appears. The main menu will be shown in the display for approximately 5 seconds after the ignition is switched on. The display will then switch off again.



Note

For electronic and vehicle equipment one or more of these menus will be displayed. \blacksquare

Example of menu use

All the menus on the instrument panel may be used according to the following procedure.

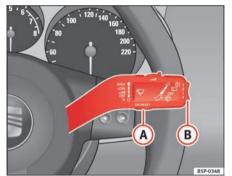


Fig. 45 Windscreen wiper lever: button A to confirm the menu selection and rocker switch B to change the menu

The setting of a speed warning will be used as an example of how to use the menus. This is a good idea if you are, for example, using winter tyres which are not suited for the top speed of the vehicle.

1. Open the main menu

- Switch on the ignition.
- Hold down button B for two seconds to return to main menu from other menu. It may be necessary to repeat this operation until the main menu is displayed.

2. Open the main menu "Configuration"

 To choose an option from the menu, press the upper or lower end of the rocker switch. The selected option is displayed between two lines and there will also be a triangle on the right.



Fig. 46 Digital instrument panel display: winter tyres indicator

- Select menu Configuration.
- Press button (A) on the windscreen wiper lever. The Configuration menu is opened.

3. Open the main menu "Winter tyres"

- Select option **Winter tyres** using the rocker switch.
- Press button (A). The menu **Winter tyres** is opened.

4. Program a speed limit warning

Use the rocker switch to select the menu entry + 10 km/h or -10 km/h and press the button to either increase or decrease the set speed.

5. To activate and deactivate the speed limit warning

 Use the rocker switch to select the menu point On/ Off and press the button to switch the speed warning either on or off. If the speed warning is deactivated, three dashes will be displayed ---

6. To close the menu "Winter tyres"

- In the menu select **Back**.

The function "Winter tyres" sends an optical and an acoustic signal when the vehicle reaches the set speed.

Example menu "Winter tyres"

On the display Winter tyres	Function Name of menu displayed
X km/h	The current set speed is displayed
or	or dashes will be shown if the function is deactivated.
On / Off	If the function is activated or deactivated
+10 km/h	The set value increases by 10 km/h
-10 km/h	The set value decreases by 10 km/h
Back	The menu "Winter tyres" is closed and the last displayed menu is shown.



Note

For electronic and vehicle equipment one or more of these menus will be displayed. \blacksquare

Vehicle status menu

This menu shows warning or information texts

Open Vehicle Condition menu

 Select the option Vehicle status from the main menu: "Main menu" and press the button on the windscreen wiper lever. Priority 2 warning messages and information texts: "Information and warning messages on the screen" will automatically disappear from the screen after a time and will be stored in the "Vehicle status" menu.

The warning and information texts may be viewed in this menu. If there are no messages, **ok** appears on the display. If there are several messages, each one is shown for four seconds. ■

Configuration menu

This menu is used to make the settings for the vehicle functions.

Open Configuration menu

 Select the option Configuration from the main menu: "Main menu" and press the button on the windscreen wiper lever. Example of menu use: "Example of menu use".

Configuration	Function
Time	The hours and minutes of the clock and the navigation system can be changed. Both 12 - and 24 -hour formats are available and the time may be changed to summer time (an S appears in the upper part of the screen)
Winter tyres	The menu allows the setting of a speed at which an optical and acoustic warning will be given by the system. You can use this function, for example, if you have fitted winter tyres which are not suited for the top speed of your vehicle. See chapter "Wheels" in owner's manual
Settings: Language	The display texts and the navigation system texts can be seen in seven different languages
Units	This option allows you to select the units for displaying temperature, fuel consumption values and distances.
Convenience	From this menu it is it possible to alter the vehicle convenience settings.

afety First Operating instructions Tips and Maintenance Technical Date

Lights & visibility	From this menu it is it possible to alter the vehicle lighting settings: "Lights and visibility Menu".	
Display off	Only emergency messages appear	
Back	This returns to the main menu	



Note

For electronic and vehicle equipment one or more of these menus will be displayed. ■

Convenience menu

From this menu it is it possible to alter the vehicle convenience settings.

Open menu Convenience

 Choose the option Configuration from the main menu and press the button (A) on the windscreen wiper lever. Choose the option Convenience from the main menu and press the button (A) on the windscreen wiper lever.

Example of menu use: "Example of menu use"

Convenience	Function	
Open doors	Selective opening/ Complete opening Self-locking Self-unlocking	
Audible warning function	On / off (acoustic signal of centralised locking)	
Convenience opening	Off All 1 door	
Synchronised regulation of wing mirrors	Synchronised/individual	
Back	This returns to the Configuration menu	



Note

For electronic and vehicle equipment one or more of these menus will be displayed. ■

Lights and visibility menu

From this menu it is it possible to alter the vehicle lighting settings.

Open Lights and visibility Menu

 Select the option Configuration from the main menu: "Main menu" and press button (A) on the windscreen wiper lever. Select the option Lights & visibility from the menu and press button (A) on the windscreen wiper lever.

Example of menu use: "Example of menu use"

Lights & visibility	Function
Coming Home/ Leaving Home	The lighting duration may be modified, in steps of 10 seconds, from a minimum of 10 seconds to a maximum of 90 seconds The function may also be deactivated.
Indicator conf.	With the convenience mode activated, the indicator will blink at least three times when turned on.
Manufacturer's settings	The manufacturer's predefined values for the functions of this menu are restored.
Back	This returns to the Configuration menu



Note

For electronic and vehicle equipment one or more of these menus will be displayed. \blacksquare

Gafety First Operating instructions Tips and Maintenance Technical Data

Warning lamps

Overview of the warning lamps

The warning lamps indicate a number of different functions and possible faults.

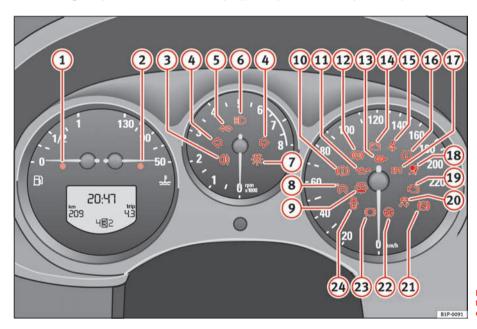


Fig. 47 Instrument panel with warning lamps. Some of the items of equipment listed here are fitted only on certain models/model years or are optional extras.

Item	Symbol	Meaning of warning and control lamps	Further information
1		Fuel level / reserve	⇒ page 75
2	<u>_</u> E_	Coolant level / coolant temperature	⇒ page 75
3	Q ‡	Rear fog light switched on	⇒ page 76
4	$\Diamond \Diamond$	Turn signals in operation	⇒ page 76
5	\$1 \$	Trailer turn signals in operation	⇒ page 76
6	≣ D	Main beam switched on	⇒ page 76
7	- ∰-	Bulb defective	⇒ page 77
8	*\(\text{\chi}\)	Cruise control system switched on	⇒ page 77
9	~	Washer fluid level	⇒ page 77
10	(())	Parking brake applied or low brake fluid level or fault in brake system	⇒ page 77
(11)	٠٠٠٠	Engine oil pressure	⇒ page 78
(12)	(ABS)	ABS system fault	⇒ page 78
(13)	•	Pollen accumulation in the diesel engine particulate filter	⇒ page 79
14		Alternator fault	⇒ page 79

Safety First Operating instructions Tips and Maintenance Technical Data

Item	Symbol	Meaning of warning and control lamps	Further information
15	Ä	Fasten seat belts!	⇒ page 19
16)	(1)	Tyre pressure	⇒ page 80
17)	EPC	Engine fault (petrol engine)	⇒ page 81
17)	700	Glow plug system for diesel engine If lit: preheating active If flashing: engine fault	⇒ page 81
18	% 7-	Airbag or belt tension device system fault or airbag disabled	⇒ page 28 ⇒ page 31
19	١Ē	Fault in the emission control system	⇒ page 81
20	설 (건	If flashing: electronic stabilisation programme (ESP) is working If it remains lit: ESP malfunction or off	⇒ page 81
21)	(S)	Operate foot brake	⇒ page 82
22	©	Electromechanical steering	⇒ page 82
23	(0)	Brake pad wear indicator	⇒ page 82
24	a	Door open indicator	⇒ page 82
	SAFE	Electronic immobiliser	⇒ page 83



WARNING

- Failure to observe warning lamps and warning messages can result in serious personal injury or damage to your vehicle.
- The risk of an accident increases if your vehicle breaks down. Use a warning triangle to draw the attention of other road users to your stationary vehicle so that it does not represent a danger.
- The engine compartment of any motor vehicle is a dangerous area! Before you open the bonnet to work on the engine or in the engine compartment, you must switch off the engine and allow it to cool to reduce the risk of scalding or other injuries. Read and observe the relevant warnings ⇒ page 215.



Note

- The appropriate warning lamp for a fault will light up in vehicles without warning or information texts in the display.
- In vehicles with warning or information texts in the display, the appropriate warning lamp for a fault will light up and a warning or information text will also appear in the display.

Fuel level / reserve

This symbol lights up to indicate that the fuel tank is down to the reserve level.

This lights when only 7 litres of fuel remain in the tank (8 litres for vehicles with four-wheel drive). Also, an **audible warning** is given. This serves as a reminder to fill up with fuel at the earliest opportunity \Rightarrow page 212.

The instrument panel displays shows the following message⁹: **PLEASE REFUEL!**

Coolant Level* / temperature

The warning lamp lights up if the coolant temperature is too high or if the coolant level is too low.

There is a fault if:

- The warning symbol does not go out again after a few seconds.
- The warning lamp lights up or flashes while the vehicle is moving, while **three acoustic warning signals** \Rightarrow \bigwedge are emitted.

This means that either the coolant level is too low or the coolant temperature is too high.

Coolant temperature too high

The instrument panel displays shows the following message $^{10)}$: CHECK COOLANT INSTRUCTIONS MANUAL.

First look at the coolant temperature gauge. The coolant temperature is too high if the needle is over the warning area on the dial. **Stop the vehicle, switch off the engine and wait for it to cool down.** Check the coolant level.

If the coolant level is correct, the overheating may be caused by a malfunction of the radiator fan. Check the radiator fan fuse and have it replaced if necessary \Rightarrow page 252.

If the warning lamp lights up again after driving on for a short distance, **stop the vehicle and switch off the engine**. Contact an Authorised Service Centre or a qualified workshop.

Safety First Operating instructions Tips and Maintenance Technical Data

⁹⁾ Depending on the model version

¹⁰⁾ Depending on the model version

Coolant level too low

The instrument panel displays shows the following message 11: STOP CHECK **COOLANT INSTRUCTION MANUAL** ⇒ page 223.

First look at the coolant temperature gauge. If the needle is in the normal range, top up with coolant at the earliest opportunity $\Rightarrow \bigwedge$.



/!\ WARNING

- If your vehicle is immobilised for any technical reasons, move it to a safe distance from traffic. Turn off the engine, turn on the hazard lights and place the warning triangle.
- Never open the bonnet if you can see or hear steam or coolant escaping from the engine compartment. Risk of scalding. Wait until you can no longer see or hear escaping steam or coolant.
- The engine compartment of any motor vehicle is a dangerous area! Before carrying out any work in the engine compartment, switch off the engine and allow it to cool down. Always note the corresponding warnings ⇒ page 215. **■**

Rear fog light ()‡

This warning lamp lights up when the rear fog light is switched on Q≢. Further information \Rightarrow page 111.

Turn signals $\diamondsuit \diamondsuit$

The warning lamp flashes when the turn signals are in operation.

Depending on which turn signal is operated, either the left ⟨¬ or right ⟨¬ indicator lamp flashes. Both warning lamps will flash at the same time when the hazard warning lights are switched on.

If one turn signal fails, the warning lamp will start flashing twice as fast.

For further information on the indicator signals, please see ⇒ page 116.

Trailer turn signals 414

This warning lamp also flashes when the turn signals are operated while towing a caravan or trailer.

The warning lamp \$1\$ flashes when the turn signals are operated, provided a trailer is correctly attached and connected to the vehicle.

The warning lamp will not flash if one of the turn signals on the trailer fails.

Main beam headlights **■**□

This warning lamp lights up when the main beams are on.

The warning lamp ID lights up when the main beams are on or when the headlight flasher is operated.

Further information ⇒ page 116. ■

¹¹⁾ Depending on the model version

Bulb defect 🌣

The warning lamp lights up when a bulb in the vehicle's exterior lighting is defective.

The warning lamp \mathfrak{F} lights up when a bulb in the vehicle's exterior lighting (e.g. left-hand main beam) is defective.

The instrument panel displays shows the following message ¹²⁾: **LEFT FULL LIGHT FAULT.**

Cruise control system* *

The warning lamp comes on when the cruise control system is switched on.

The warning lamp \mathfrak{R} lights up when the cruise control system is switched on. For further notes on the cruise control system, please see \Rightarrow page 176.

Washer fluid 🛗

This warning lamp lights up to indicate that the windscreen washer level is too low.

This serves as a reminder to fill up the reservoir at the earliest opportunity \Rightarrow page 225.

The following message is shown on the instrument panel display¹³⁾: **REFILL WINDSCREEN WASHER FLUID.**

Brake system* / handbrake (!)

The warning lamp lights up if the handbrake is applied, if the brake fluid level falls too low or if there is a fault in the brake system.

This warning lamp (1) lights up if

If the handbrake is on

If you drive faster than 6 km/h with the handbrake on, the following message will appear in the instrument panel display $^{14)}$: **HANDBRAKE ON.** Also, an audible warning is given.

• If the brake fluid level is too low ⇒ page 228

The instrument panel displays shows the following message ¹⁴⁾: **STOP BRAKE FLUID INSTRUCTION MANUAL**.

• If there is a fault in the brake system

The instrument panel displays shows the following message ¹⁴⁾: **BRAKE SYSTEM FAULT INSTRUCTIONS MANUAL.**

This warning lamp can light up together with the anti-lock brake system warning lamp.

MARNING

- Before opening the bonnet, read and observe the warnings on ⇒ page 215, "Working in the engine compartment".
- If the brake warning lamp does not go out, or if it lights up when driving, the brake fluid level \Rightarrow page 228, "Brake fluid" in the reservoir is too low. Risk of accident. Stop the vehicle and do not drive on. Obtain technical assistance.

Safety First Operating instructions Tips and Maintenance

¹²⁾ Depending on the model version

¹³⁾ Depending on the model version

¹⁴⁾ Depending on the model version

♠ WARNING (continued)

• If the brake warning lamp (1) lights up together with the ABS warning lamp (2), the control function of the ABS could be out of action. This could cause the rear wheels to lock quickly when you brake. This could cause the rear to break away. Risk of skidding. Stop the vehicle and seek technical assistance.

Engine oil pressure

This warning lamp indicates that the engine oil pressure is too low.

If this warning symbol starts to flash, and is accompanied by three **audible warnings**, switch off the engine and check the oil level. If the oil level is too low, add more engine oil \Rightarrow page 218.

The instrument panel displays shows the following message¹⁵⁾: **STOP ENGINE OIL PRESSURE INSTRUCTION MANUAL.**

If the symbol flashes although the oil level is correct, *do not* drive on. The engine must not even run at idle speed. Obtain technical assistance.

Anti-lock brake system (ABS) (1898)

A warning lamp system monitors the ABS.

The warning lamp (should light up for a few seconds when the ignition is switched on. It goes out again after the system has run through an automatic test sequence.

There is a fault in the ABS if:

- The warning lamp (does not light up when the ignition is switched on.
- The warning lamp does not go out again after a few seconds.
- The warning lamp lights up when the vehicle is moving.

The vehicle can still be braked in the normal way (except that the ABS control function will not function). Please take the vehicle to a qualified workshop as soon as possible. For further information on the ABS see the \Rightarrow page 181.

If a fault occurs in the ABS, the ESP* warning lamp will also light up.

Brake system fault

If the ABS warning lamp n lights up together with the brake warning lamp n, this indicates not only a fault in the ABS function, but also a possible fault in the brake system $\Rightarrow \bigwedge$.



WARNING

- Before opening the bonnet, read and observe the warnings on ⇒ page 215.
- If the brake warning lamp ③ should light up together with the ABS warning lamp ⑤, stop the vehicle immediately and check the brake fluid level in the reservoir ⇒ page 228, "Brake fluid". If the fluid level has dropped below the "MIN" mark you must not drive on. Risk of accident. Obtain technical assistance.
- If the brake fluid level is correct, the fault in the brake system may have been caused by a failure of the ABS system. This could cause the rear wheels to lock quickly when you brake. This could cause the rear to break away. Risk of skidding. Stop the vehicle and seek technical assistance. ■

¹⁵⁾ Depending on the model version

Differential lock fault (EDL)*

EDL operates along with the ABS in vehicles equipped with an Electronic Stabilisation Program (ESP)*

A malfunction in the EDL is indicated by the ABS warning lamp (e). Please take the vehicle to a qualified workshop as soon as possible. For further information on the EDL \Rightarrow page 184.

Traction control system (TCS)*

The traction control system prevents the driven wheels from spinning when the vehicle is accelerating

The warning lamp lights up when the ignition is switched on and should turn out after about 2 seconds.

When the TCS is operating while driving, the warning lamp flashes. If the system is deactivated or if there is any fault in the same, the warning lamp will remain lit.

It will also come on if a fault should occur in the ABS because the TCS operates in conjunction with the ABS. For further information see \Rightarrow page 181.

Soot accumulation in the diesel engine particulate filter*

If the indicator lights up — you may help the filter clear itself by driving in the appropriate manner.

To do this, drive about 15 minutes in 4th or 5th gear (automatic gearbox: S gear range) at a speed of 60 km/h, with the engine running at approximately 2000 rpm. In this way, the pollen build up in the filter is burned. When cleaning is successful, the indicator turns off.

If the lamp \clubsuit does not switch off, bring the vehicle to a specialised workshop to repair the fault \Rightarrow page 190.



WARNING

- Always drive according to the road weather conditions, the terrain and traffic. Driving recommendations should never lead to illegal maneouvers in surrounding traffic.
- The diesel engine particulate filter may reach extremely high temperatures; it should not enter into contact with flammable materials underneath the vehicle. Failure to comply could result in fire.

Alternator 🗀

This warning lamp signals a fault in the alternator.

The warning lamp \rightleftharpoons lights up when the ignition is switched on. It should go out when the engine has started running.

If the warning lamp 🗀 lights up while driving, the alternator is no longer charging the battery. You should immediately drive to the nearest qualified workshop.

You should avoid using electrical equipment that is not absolutely necessary because this will drain the battery.

If the indicator flashes the voltage is insufficient for normal vehicle operation. ■

Tyre pressure (!)



Fig. 48 Central console: tyre monitor system button

The tyre monitor $^{16)}$ compares wheel revolutions and with this information, the diameter of each wheel using the ESP sensors. If the diameter of a wheel changes, the tyre monitor indicator lights (1). The wheel diameter changes when:

- Tyre pressure is insufficient.
- The tyre structure is damaged.
- The vehicle is unbalanced because of a load.
- The wheels of one axle are under more pressure (for example, driving with a trailer or on extreme slopes).
- The vehicle is fitted with snow chains.
- The emergency wheel is fitted.
- The wheel on one axle is changed.

Tyre pressure adjustment

Following the modification to tyre pressure or changing one or more wheels, the button \Rightarrow fig. 48 must be kept pressed while the ignition is on until an acoustic signal is heard.

If the wheels are under excessive load (for example, driving with a trailer or heavy load), the tire pressure must be increased to the recommended value for a full load (see the sticker on the inside of the fuel flap). If the tyre monitor system button is pressed the new tyre pressures are confirmed.

The tyre pressure monitor indicator (!) lights

If the tyre pressure of one wheel is much lower than the value set by the driver then the indicator lights \Rightarrow \triangle .

The tyre pressure monitor indicator (!) flashes

If the tyre pressure indicator flashes, this indicates a fault. Go to the nearest specialist workshop.



WARNING

- When the tyre pressure indicator lights, reduce speed immediately and avoid any sudden manoeuvre or braking. Stop when possible, and check the tyre pressure and status.
- The driver is responsible for correct tyre pressure. For this reason, tyre
 pressure must be regularly checked.
- Under certain circumstances (for example, in a sports situation, in winter conditions or on a dirt track) the tyre monitor indicator may light or function incorrectly.



Note

If the battery is disconnected, the yellow indicator 1 lights after turning the ignition on. This should turn off after a brief trip. \blacksquare

¹⁶⁾ Depending on the model version

Engine management* EPC

This warning lamp monitors the engine management system for petrol engines.

The warning lamp **EPC** (Electronic Power Control) lights up when the ignition is switched on to show that the lamp is working properly. It should go out when the engine has started running.

If a fault develops in the electronic engine management system while you are driving, this warning lamp will light up. Stop the vehicle and seek technical assistance.

Glow plug system / Engine fault

The warning lamp lights up to show that the glow plugs are preheating. It flashes if there is an engine fault.

Warning lamp \mathfrak{W} is lit

The warning lamp on lights up while the glow plugs are preheating. When the warning lamp goes off, the engine should be started straight away.

Warning lamp of flashes

If a fault develops in the engine management system while you are driving, the glow plug lamp will flash oo. Take the vehicle to an Authorised Service Centre as soon as possible and have the engine checked. ■

Emission control system* 🗔

This warning lamp monitors the exhaust system.

Warning lamp 🗁 flashes:

When there is misfiring that can damage the catalytic converter. Reduce speed and drive carefully to the nearest qualified workshop to have the engine checked.

The instrument panel displays shows the following message ¹⁷⁾: **EXHAUST GAS SEE WORKSHOP.**

Warning lamp ₲ is lit:

If a fault has developed during driving which has reduced the quality of the exhaust gas (e.g. lambda probe fault). Reduce speed and drive carefully to the nearest qualified workshop to have the engine checked.

The following information is displayed on the instrument panel display: $\mathbf{EXHAUST}$ GAS SEE WORKSHOP.

Electronic stabilisation programme (ESP)* 🔁

This warning lamp monitors the electronic stabilisation programme.

This programme includes the ABS, EDL and TCS.

The warning lamp 🕏 has the following functions:

- It will light for about 2 seconds when the ignition is switched on while a test of the function is carried out.
- It flashes when the ESP is activated when driving.
- It will light up continuously if there is a malfunction in the ESP.

Safety First Operating instructions Tips and Maintenance Technical Data

¹⁷⁾ Depending on the model version

- It will light up continuously if the ESP is switched off.
- It will also come on if a fault should occur in the ABS because the ESP operates in conjunction with the ABS.

If the ESP warning lamp $\mathfrak R$ lights up and stays on after the engine is started, this may mean that the control system has temporarily switched off the ESP. In this case the ESP can be reactivated by switching the ignition off and then on again. If the warning lamp goes out, this means the system is fully functional.

Operating the brake pedal (S)

The footbrake must be depressed when this warning lamp lights up. This is necessary when the automatic gearbox* selector lever is moved out of the positions \mathbf{P} or \mathbf{N} .

Power steering system*

For vehicles with power steering, the level of steering assistance depends on the vehicle's speed and on the steering angle.

The warning lamp should light up for a few seconds when the ignition is switched on. It should go out when the engine has started running.

If the battery is disconnected, the indicator remains lit, even with the engine running. The warning light only goes off after a distance of approx. 50 m.

There is a fault in the electromechanical steering system if the lamp does not go out or lights up whilst the vehicle is in motion. The indicator may appear in two different colours to indicate faults. If it lights yellow, this indicates a minor fault. If it lights red, seek workshop assistance immediately, if no assistance is available stop driving. Stop the vehicle and seek technical assistance. The power steering does not work if the battery is flat or if the

engine is off (for example, for towing). You should take into account that you will need considerably more power than normal to steer the vehicle if the steering assistance is reduced or has failed completely.

For those vehicles fitted with ESP* the function "Recommended steering manoeuvre" is included. See ⇒ page 183. ■

Brake pad wear indicator* (*)

As the brake pad wear indicator only monitors the front brake pads, it is advisable to have the rear brake pads inspected at the same time.

The instrument panel displays shows the following message $^{18)}$: **CHECK BRAKE PADS.**



WARNING

Have the brake pads inspected immediately by a qualified dealership if the warning display ∅ lights up. ■

Indicator for open doors or tailgate 🕏

This indicator lights if one of the doors or the tailgate is open.

The warning light 🕏 should go off when all the doors are closed correctly.

The system also works when the ignition is switched off. It should go off about 15 seconds after the vehicle is locked.

¹⁸⁾ Depending on the model version

83

Electronic immobiliser* "Safe"

This warning lamp flashes if an unauthorised key is used.

Inside the key there is a chip that deactivates the electronic immobiliser automatically when the key is inserted into the ignition. The immobiliser will be activated again automatically as soon as you pull the key out of the ignition lock.

The instrument panel displays shows the following message 19: **SAFE**. The vehicle cannot be used in this case \Rightarrow page 164.

The engine can, however, be started if the appropriate coded SEAT genuine key is used.



The vehicle cannot be operated properly if you do not have a genuine SEAT key.

¹⁹⁾ Depending on the model version

Steering wheel controls

General points

The steering wheel includes a multifunction module from where it is possible to control the audio, telephone and radio navigation functions, and the automatic gearbox*, without needing to distract the driver.

There are two versions of the multifunction module:

- Audio version, to control the available audio functions from the steering wheel.
- Audio + Telephone version, to control the available audio functions and the telephone system from the steering wheel.

Both versions may be used to control the Audio system (Radio, CD Audio, CD mp3, CD Changer) and the radio / navigation System, in which case they also control the Navigation system.

Version for automatic gearbox* ⇒ page 172.

Audio system

Steering wheel audio version controls

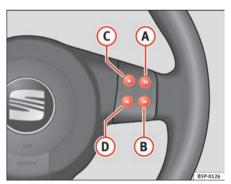


Fig. 49 Controls on the steering wheel

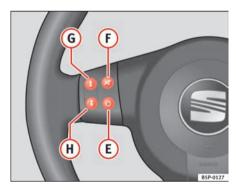


Fig. 50 Controls on the steering wheel

Button		Short press			Long press			
Button	Radio	CD Audio	CD mp3 ^{a)}	CDC	Radio	CD Audio	CD mp3 ^{a)}	CDC
A		Volume up			Continue volume up			
В	Volume down				Continue volume down			
C	Station search. Higher frequency.	Following track			Station search. Higher frequency.	Fast forward		
D	Station search. Lower frequency	Previous track			Station search. Lower frequency		Rewind	
E		Cyclic source control FM - AM - CD - CDC - FM				No specifie	ed function	
F	Silence	Pause		No specified function				
G	Next preset	No function	Change folder (forward)	Change CD (forward)	No specified function			
Н	Previous preset	No function	Change folder (back)	Change CD (Back)	No specified function			

a) Only for mp3 compatible radio.*

Safety First Operating instructions Tips and Maintenance Technical Data

Steering wheel Audio + Telephone version controls

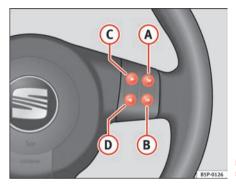


Fig. 51 Controls on the steering wheel

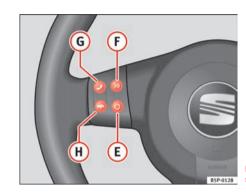


Fig. 52 Controls on the steering wheel

D. H.	Short press				Short press Long press					
Button	Radio	CD Audio	CD mp3 ^{a)}	CDC	Radio	CD Audio	CD mp3 ^{a)}	CDC		
A		Volume up				Volume up Continue volume up				
В	Volume down				Continue vo	olume down				
C	Station search. Higher fre- quency.		Following track			Fast forward	Change folder (forward)	Fast forward		
D	Station search. Lower frequency		Previous track		Station search. Lower frequency	Rewind	Change folder (Back)	Rewind		

E	Cyclic source control FM - AM - CD - CDC - FM	No specified function
F	Voice recognition activation Press to speak	No specified function
6	Make a call or Direct access to the phone book or Accept a call	No specified function
Н	Terminate call or Refuse call or Quite telephone menu	No specified function

a) Only for mp3 compatible radio.*

Safety First Operating instructions Tips and Maintenance Technical Data

Radio navigation system

Steering wheel audio version controls

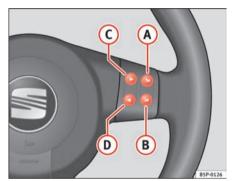


Fig. 53 Controls on the steering wheel

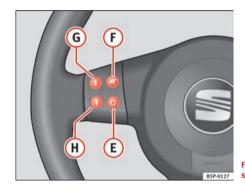


Fig. 54 Controls on the steering wheel

Button	Short press					Long	press	
Button	Radio	Radio CD CD mp3 ^{a)} CDC		CDC	Radio	CD	CD mp3 ^{a)}	CDC
A	Increase the source volume and the navigation message				Increase the sou	irce volume and th	e navigation messa	ige continuously
В	Decrease	Decrease the source volume and the navigation message				urce volume and th	e navigation mess	age continuously
C	Station search. Higher fre- quency.	Following track			Station search. Higher fre- quency.		Fast forward	

D	Station search. Lower frequency		Previous track			Rewind
E _b)	When in Navig	Cyclic change of source Radio - CD / CDC - Radio When in Navigation mode the system leaves the navigation screen.				Repeat the last Navigation instruction Iy if the Navigation function is activated.
F	Silence	Silence Pause				No specified function
6	Next preset	No function	Of function Change folder Change CD (forward) (forward)			No specified function
Н	Previous preset	No function	Change folder (back)	Change CD (Back)	No specified function	

Operating instructions

Only for those Radio-Navigation Systems compatible with the MP3 format
Button E, rapid flashing: Depending on the equipment, the radio frequency band may be selected.

Steering wheel Audio + Telephone controls

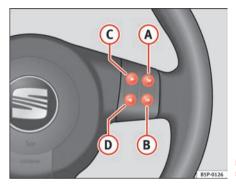


Fig. 55 Controls on the steering wheel

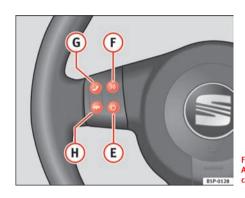


Fig. 56 Steering wheel Audio + Telephone controls

Button	Short press				Short press Long press				
Button	Radio	CD	CD mp3 ^{a)}	CDC	Radio	CD	CD mp3 ^{a)}	CDC	
A	Increase t	Increase the source volume and the navigation message				Increase the source volume and the navigation message continuously			
В	Decrease	Decrease the source volume and the navigation message			Decrease the so	urce volume and th	e navigation mess	age continuously	
C	Station search. Higher fre- quency.		Following track			Fast forward	Change folder (forward)	Fast forward	
D	Station search. Lower frequency		Previous track		Station search. Lower frequency	Rewind	Change folder (Back)	Rewind	

E ^{b)}	Cyclic change of source Radio - CD / CDC - Radio When in Navigation mode the system leaves the navigation screen.	Repeat the last Navigation instruction Only if the Navigation function is activated.
F	Voice recognition activation Press to speak	No specified function
6	Make a call or Direct access to the phone book or Accept a call	No specified function
Н	Terminate call or Refuse call or Quite telephone menu	No specified function

Operating instructions

a) Only for those Radio-Navigation Systems compatible with the MP3 format
b) Button E, rapid flashing: Depending on the equipment, the radio frequency band may be selected.

Steering wheel lighting controls



Fig. 57 Steering wheel Audio + Telephone version controls



Fig. 58 Steering wheel audio version controls

The lighting is turned on using the simultaneous pressing of the following keys:

	Push simultaneously				
Audio ⇒ fig. 58	A	В			
Audio + Telephone ⇒ fig. 57	A	B			

Unlocking and locking

Central locking

Description

The central locking system enables you to lock and unlock all the doors and the tailgate from one point.

Central locking can be activated using any of the following options:

- the key, by inserting it into the driver's door cylinder and rotating manually,
- **the central locking button,** (electronic control) in the passenger compartment \Rightarrow page 97.
- the radio frequency remote control, using the buttons on the key \Rightarrow page 100.

Various functions are available to improve the vehicle security:

- Locking system "Safe"
- Selective unlocking system*
- Auto-locking to prevent involuntary unlocking
- Automatic speed dependent locking and unlocking system*
- Emergency unlocking system



Note

For anti-theft security, only the driver's door is fitted with a lock cylinder. \blacksquare

Safety system "Safe"

This is an anti-theft device consisting of a double lock for the door locks and a deactivation function for the boot in order to make forced entry more difficult.

Activation

The "safe" system is activated when the vehicle is locked using the key or the remote control.

To activate this system with the key, rotate the key once in the door lock cylinder in the locking direction.

To activate the system using the remote control, press the lock button on the remote $\widehat{\Theta}$ once.

When this system is activated, it is not possible to open the doors normally, from the outside or the inside. The boot/tailgate may not be opened. The central locking button does not work.

Voluntary deactivation

The "Safe" system can be deactivated voluntarily by the user.

This is done by locking two times in quick succession (in under 2 seconds). This double locking can be executed using the key or the remote control.

Using the key, rotate the lock cylinder twice in the locking direction.

To activate the system using the remote control, press the lock button on the remote $\mbox{\Large \textcircled{a}}$ twice.

When the "Safe" system is deactivated, the alarm volumetric sensor is also deactivated.

afety First Operating instructions Tips and Maintenance Technical Data

When the "Safe" system is deactivated, the doors are locked using the simple locking system, meaning that they may be opened from the interior but not from the exterior.

Involuntary deactivation

The methods described for deactivation of the "Safe" system may be executed involuntarily (for example, if we press the button (a) because we want to lock the vehicle, and it locks as a result, however, we are not sure that it is locked and we press the button once more within 2 seconds, we will have deactivated the "Safe" system).

Deactivation when opening

To deactivate the system on opening, see "Selective unlocking system*"

"Safe" status

On the front left hand side door, there is a light indicator visible from the outside of the vehicle that indicates the "Safe" system status.

We can see that the "Safe" system is activated, by the flashing of the light indicator. The indicator will flash on all vehicles, whether they are fitted with an alarm or not, and until the vehicle is unlocked.

We can see that the "Safe" system is deactivated, when the light indicator flashes about seven times and turns off. If the vehicle is not fitted with an alarm then it remains off. If the vehicle is fitted with an alarm, once 28 seconds have passed since the indicator is switched off, it will start to flash again and continue until the vehicle is unlocked once more.

Remember:

Safe activated with or without alarm: Indicator flashes continuously.

Safe deactivated without alarm: Indicator flashes about seven times and turns off.

Safe deactivated with alarm: The indicator flashes about seven times, turns off and then continues to flash after about 28 seconds.



WARNING

No one should remain in the vehicle if the "Safe" deadlock mechanism has been activated. It is not possible to open the doors from the inside or the outside and this would make any outside intervention difficult in case of emergency. Danger of death. People could become trapped inside in an emergency.

Selective unlocking system*

This system allows for unlocking only the driver's door, or all the vehicle.

Driver's door unlock button

This is done by a simple unlocking (once). This can be done with the key or the remote control.

With the key, rotate the key once in the lock cylinder in the unlock direction. The driver's door will be released from the "Safe" system, unlocked and may be opened. Once the door is opened, 15 seconds remain for turning on the ignition, in which moment, the "Safe" system will be deactivated on the remaining doors and the light indicator will be turned off. For vehicles fitted with an alarm, this system is deactivated.

Using the remote control, press the unlock button on the remote **(?**) once. The "Safe" system is deactivated for all the vehicle, only the driver's door is unlocked for opening, the alarm is turned off as is the light indicator.

Unlocking all doors and the boot

So that all the doors and the boot can be opened, the unlock button **②** on the remote must be pressed twice.

The button must be pressed twice in under 2 seconds and this will deactivate the "Safe" system for all the vehicle, all doors will be unlocked and the boot

will be activated. The indicator will be turned off as will be the alarm for those vehicles fitted with one.

Unlocking the boot

See \Rightarrow page 100 and \Rightarrow page 104. ■

Locking system for involuntary unlocking

This is an anti-theft system and will avoid situations where the vehicle is opened unintentionally

The vehicle will be re-locked automatically, if it is unlocked and neither the boot or any of the doors are opened within 30 seconds. This function prevents the vehicle from remaining unlocked if the unlocking button is pressed by mistake.

Automatic speed dependent locking and unlocking system*

This is a safety system to prevent access to the vehicle from the exterior when the vehicle is in transit (for example, when stopped at a traffic light).

Locking

The doors and the boot are automatically locked when vehicle speed exceeds $15\ km/h$.

If the vehicle is stopped and one of the doors is opened, when the vehicle moves off again and exceeds a speed of 15 km/h the unlocked door(s) will be locked once more.

Unlocking

The driver's door automatically unlocks when the key is removed from the ignition.

Each door may be unlocked and opened from the interior (for example when a passenger gets out). For this, simply operate the lever on the inside of the door.



The door handles should never be operated when the vehicle is running: the door will open. \blacksquare

Emergency unlocking system

The entire vehicle is unlocked if the airbags are triggered during an accident, except for the boot. It is possible to lock the vehicle from inside using the central locking, after turning the ignition off and back on again.

If the doors must be locked from the outside, see "Manually locking the doors". \blacksquare

Emergency manual locking

This permits mechanical locking of the doors in case of central locking system failure.

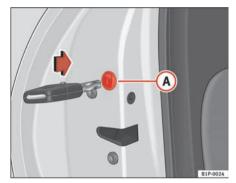


Fig. 59 Locking the doors manually

Locking the driver's door manually

Insert the key in the door lock cylinder and rotate in a clockwise direction for the left hand side door and anti-clockwise for the right hand side door.

Once the door has been closed it can no longer be opened from the outside.

Manual (emergency) locking of the remaining doors

Open the door and remove the cap $\textcircled{A} \Rightarrow$ fig. 59 printed with a lock image. This will expose a circular element with a groove in the centre. Insert the key into the groove and rotate the element clockwise for the right hand side doors and anticlockwise for the left hand side doors.

Replace the cap and close the door. Once the door has been closed it can no longer be opened from the outside.

Unlocking the manually (emergency) locked driver's door

Insert the key in the door lock cylinder and rotate anti-clockwise for the left hand side doors and clockwise for the right hand side doors.

The door lock is released and the door may be opened using the exterior door handle.

Unlocking the remaining manually (emergency) locked doors

First the driver's door must be unlocked to gain entry to the vehicle. Operate the internal door handle for the required door. If the child safety lock is activated on the rear doors, when the interior door release lever is operated the door is unlocked but does not open. The exterior door handle may now be used to open the door.



Note

Once the vehicle is open, if you wish to lock it manually (emergency locking), repeat the previous instructions. ■

Central locking button

The vehicle can be locked and unlocked from the inside using the central locking button.



Fig. 60 Detail of the centre console: central locking system button

Locking the vehicle

- Press the button \Longrightarrow \bigwedge .

Unlocking the doors

Press the button

The central locking button is still operative when the ignition is switched off. Except, if the "safe" security system is activated.

Please note the following when you use the central locking button to lock your vehicle:

• It will not be possible to open the doors or the tailgate from the *outside* (this may offer extra safety, for instance when stopped at traffic lights).

- The driver or front passenger door cannot be locked if it is open. This prevents you from locking yourself out of the vehicle.
- Repeated operation of the central locking will deactivate the central locking button for 30 seconds. Once this time has passed, the button may be used once more.
- There is a danger that the key may remain inside the vehicle, if the vehicle is locked using the central locking button when the driver's door is closed and, for example, the passenger door open. If this door is closed, then the keys will remain inside the vehicle.
- All doors may be locked separately from inside the car. Do this by pulling the door release lever *once*.



WARNING

- If the vehicle is locked, children and disabled people may be trapped inside.
- The central locking button is not operative in the following cases.
- When the vehicle is locked from the outside (using the remote or the key).
- While the ignition is not activated after unlocking the door lock cylinder with the key.



- Vehicle locked, button amber colour.
- Vehicle unlocked, button (♥) red.

Childproof locks

The childproof lock prevents the rear doors being opened from the inside. This system prevents minors from opening a door accidentally while the vehicle is moving.



Fig. 61 Child safety lock on the left hand side door



Fig. 62 Child safety lock on the right hand side door

This function is independent of the electronic opening and locking systems of the vehicle. It only affects the rear doors. It is only possible to activate it and deactivate it manually, as described below:

Activating the childproof lock

- Unlock the car and open the door you wish to childproof.
- With the door open, rotate the groove in the door using the ignition key, clockwise for the left hand side doors, and anti-clockwise for the right hand side doors ⇒ fig. 61, ⇒ fig. 62.

Deactivating the childproof lock

- Unlock the car and open the door for which you wish to deactivate the childproof lock.
- With the door open, rotate the groove in the door using the ignition key clockwise for the right hand side doors and anti-clockwise for the left hand side doors ⇒ fig. 61, ⇒ fig. 62.

When the childproof lock is activated, the door can be opened from the outside only. The childproof lock can be activated and deactivated using the key in the groove when the door is open, as described above.

Keys

Key set

The set of keys includes a remote control, a key without a remote control and a key tab with the number of the key.



Fig. 63 Set of keys

The key set belonging to your vehicle consists of the following items:

- one remote control key \Rightarrow fig. 63 (A) with folding key bit,
- one key without remote control B,
- one key tab (c) with the key number.

Plastic key tab

Spare keys cannot be issued without the key number on the key tab \Rightarrow fig. 63 (B). Therefore:

- Always keep the key tab in a safe place.
- Never leave the key tab in the vehicle.

If you sell the vehicle, please give the plastic key tab to the new owner.

Duplicate keys

If you need a replacement key, take your key tab to an Authorised Service Centre.



WARNING

- Incorrect use of the keys can result in critical injuries.
- Never leave children or disabled persons in the vehicle; in case of emergency they may not be able to leave the vehicle or look after themselves.
- Unsupervised use of a key could mean that the engine is started or that
 electrical equipment is used (e.g. electric windows). Risk of accident. The
 doors can be locked using the remote control key. This could result in
 people being trapped in the vehicle in an emergency.
- Never leave any of the vehicle keys in the vehicle. Unauthorised use of your vehicle could result in injury, damage or theft. Always take the key with you when you leave the vehicle.
- Never remove the key from the ignition if the vehicle is in motion. Risk of accident. The steering lock could engage suddenly, and you would not be able to steer the vehicle.



) Caution

There are electronic components in the key and remote control. Protect the keys from moisture and excessive vibration. ■

Radio frequency remote control

Locking and unlocking the vehicle

The remote control key can be used to lock and unlock the vehicle from a distance.

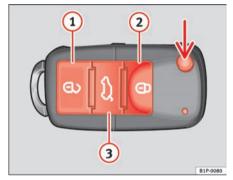


Fig. 64 Assignment of buttons on the remote control key

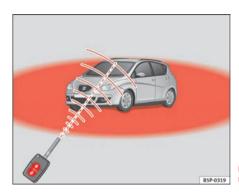


Fig. 65 Range of the remote control

Using the button \Rightarrow fig. 64 (arrow) on the control, the key shaft is released.

Unlocking the vehicle $(\mathbf{G}) \Rightarrow \text{fig. 64} (1)$.

Locking the vehicle \bigcirc \Rightarrow fig. 64 \bigcirc 2.

Unlocking the tailgate. Press the button (a) ⇒ fig. 64 (3) until all indicators on the vehicle briefly flash. When the unlocking button (a) (3) is pressed, 2 minutes remain for opening the door. Once this time has passed, it will lock once more.

Also, the battery indicator on the key \Rightarrow fig. 64, will flash.

The remote control transmitter and the batteries are integrated in the key. The receiver is in the interior of the vehicle. The maximum range of the remote control depends on various conditions. The range is reduced when the batteries start to lose power.

Selective unlocking*

When the button $\mathfrak{P} \Rightarrow \text{fig. 64}$ is pressed once, the driver's door is unlocked, all others remain locked.

Press the button \bigcirc \Rightarrow fig. 64 \bigcirc twice to unlock all doors.



WARNING

- Incorrect use of the key can result in critical injuries.
- Never leave children or disabled persons in the vehicle; in case of emerquency they may not be able to leave the vehicle or look after themselves.
- Never leave any of the vehicle keys in the vehicle. This could result in serious injuries, accidents or the theft of your vehicle. Always take the key with you when you leave the vehicle.
- Unsupervised use of a key could mean that the engine is started or that electrical equipment is used (e.g. electric windows). Risk of accident. The vehicle can be locked using the remote control key. This could result in people being trapped in the vehicle in an emergency.



Note

- The radio-frequency remote control can also be programmed so that only the driver's door is unlocked the first time that the unlocking button on the radio frequency remote control key is pressed. When the button is pressed once more, all doors and the tailgate will be unlocked.
- The remote control functions only when you are in range ⇒ page 100, fig. 65 (red area).
- If the vehicle is unlocked using the (a) 1 button, the vehicle will be locked again automatically if any of the doors or the tailgate are not opened within 30 seconds of unlocking the vehicle. This function prevents the vehicle from remaining unlocked if the unlocking button is pressed by mistake.
- If the vehicle cannot be opened and closed using the remote control, the remote control key will have to be re-synchronised \Rightarrow page 101.

Changing the battery

If the battery indicator does not flash when the buttons are pushed, the battery must be replaced.



Caution

Use of inappropriate batteries may damage the radio frequency remote control. For this reason, always replace the dead battery with another of the same size and power.



For the sake of the environment

The flat batteries must be disposed of in accordance with regulations governing the protection of the environment. ■

Synchronising the remote control key

Synchronising the remote control key

- Use both keys that have been delivered with the vehicle
 ⇒ page 99, fig. 63, the key fitted with the remote control (a) and the normal key (B).
- Unlock the vehicle from the driver side door using the key without the remote.
- Turn the ignition ON using the key without the remote control.
- Lock the vehicle using the driver side door lock with the remote control key ⇒ page 100, fig. 64.
- In a time of maximum 30 seconds the following operations must be carried out:

Safety First Operating instructions Tips and Maintenance Technical Data

- Operate the button (a) once for locking on the remote control, the indicators will flash.
- Operate the button once for unlocking on the remote control for more than 2 seconds.
- The key will have been programmed and the vehicle will unlock, confirming at the same time the synchronisation.

It is possible that the vehicle could no longer be opened and closed with the remote control if the button a is repeatedly pressed outside of the effective range of the radio frequency remote control. The remote control key will have to be resynchronised.

Spare remote control keys are available from Authorised Service Centres, they must be matched to the locking system.

Up to eight remote control keys can be used. ■

Anti-theft alarm system*

Description of anti-theft alarm system*

The anti-theft alarm triggers an alarm if unauthorised movements are detected around the vehicle.

The anti-theft alarm makes it more difficult to break into the vehicle or steal it. Audible and visible alarms are triggered if the car is opened using the mechanical key, or if unauthorised access is gained to the vehicle.

The anti-theft alarm system is automatically switched on when the vehicle is locked. The system is then primed.

When does the system trigger an alarm?

The system triggers an alarm if the following unauthorised actions are carried out when the car is locked:

- Mechanical opening of the vehicle with the vehicle key
- Opening a door
- · Opening the bonnet
- Opening the tailgate
- Switching on the ignition
- Movements in the vehicle
- Undue manipulation of the alarm
- Battery handling

The acoustic signals sound and the indicators flash for approx. 30 seconds. This may be repeated up to 10 times depending on the country.

Opening the doors mechanically (emergency opening)

If the remote control function fails, you will have to use the key to unlock the car. This is done as follows:

- Unfold the key by pressing the button shown by the (arrow).
- Use the lock on the driver door to unlock the vehicle. The anti-theft alarm system remains active, but an alarm is not triggered immediately.
- Switch on the ignition within 15 seconds. When the ignition is switched on, the electronic immobiliser recognises a valid vehicle key and deactivates the anti-theft alarm system. If you do not switch on the ignition within 15 seconds, the alarm is triggered.

How is the alarm switched off?

When the vehicle is unlocked via the unlocking button of the remote control or when the key is inserted in the ignition lock.



Note

- If, after the alarm goes off, access is gained to a second secured zone (e.g. the tailgate is opened after a door has been opened), the warning signal is triggered again.
- Vehicle monitoring remains active even if the battery is disconnected or not working for any reason.
- The alarm is triggered immediately if one of the battery cables is disconnected while the alarm system is active.

Volumetric sensor*

Monitoring or control function incorporated in the anti-theft alarm*, that detects unauthorized vehicle entry using ultrasound.

The system consists of 3 sensors, 2 emitters and a receptor.

Activation

It is automatically turned on with the anti-theft alarm, when the vehicle is locked mechanically with the key and when the button
 on the remote control is used.

Deactivation

Press the button (a) on the remote control twice. Only the volumetric sensor is deactivated. The alarm system remains activated.



/! WARNING

- The "safe" security system remains deactivated if the volumetric sensor is deactivated.
- For those vehicles in which a separate sunblind is fitted in the passenger compartment, the alarm will not function correctly due to interference with the sensor.



Note

• If the alarm has been triggered by the volumetric sensor, this will be indicated by a flashing of the indicator on the driver's door. This flashing will be different to that for an activated alarm.

Safety First Operating instructions Tips and Maintenance Technical Dat

Tailgate

Opening and locking

The operation of the tailgate opening system is electric. It is activated by using the handle on the tailgate



Fig. 66 Boot lid: opening from the outside



Fig. 67 Detail of the inside of the tailgate: hand grip

Opening the tailgate

Pull on the release lever and lift the tailgate ⇒ fig. 66. The tailgate will then open.

Closing the tailgate

 Grip the tailgate by one of the two handles on the interior lining and close it, using a light movement.

The system may or may not operate depending on the situation of the vehicle.

If the tailgate is locked then it cannot be opened, however if it is unlocked then the opening system is operative and the boot may be opened.

To the locking / unlocking status, press the button or the button on the remote control key.

A warning appears in the instrument panel if the tailgate is open or not properly closed.* An audible warning is also given if the tailgate is opened while the vehicle is moving faster than 6 km/h.*



WARNING

- Always close the tailgate properly. Risk of accident or injury.
- The tailgate must not be opened when the reverse or rear fog lights are lit. This may damage the lighting units.
- Do not close the tailgate by pushing it down with your hand on the window. The glass could shatter. Risk of injury!
- Ensure the tailgate is locked after closing. If not, it may open unexpectedly while driving.
- If the tailgate is not fully closed, open it with the handle and close it again correctly. Do not try to close it by pressing on the surface of the tailqate, as this may damage the surface.
- Never allow children to play in or around the vehicle. A locked vehicle
 can be subjected to extremely high and low temperatures, depending on
 the time of year. This could cause serious injuries/illness. It could even
 have fatal consequences. Close and lock both the tailgate and all the other
 doors when you are not using the vehicle.
- Never close the tailgate without observing and ensuring it is clear, to do otherwise could cause serious injury to you and others. Make sure that no one is in the path of the tailgate.
- Never drive with the tailgate open or half-closed, exhaust gasses may penetrate into the interior of the vehicle. Danger of poisoning!
- If only the boot is opened then do not leave the key inside. The vehicle may not be opened if the key is left inside.

Emergency opening

This allows the vehicle to be opened if the central locking does not operate (for example if the battery is flat)



Fig. 68 Boot lid: emergency open

There is a groove in the boot allowing access to the emergency opening mechanism.

Opening the tailgate from inside the luggage compartment

 Insert the key bit in the groove and unlock the locking system, turning the key from right to left, as shown by the arrow

⇒ fig. 68. **■**

Windows

Opening or closing the windows electrically

The front and rear electric windows can be operated using the controls in the driver's door.

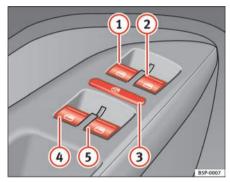


Fig. 69 Detail of driver door: controls for the front and rear windows

Opening and closing the windows

- Press the button to open a window.
- Pull button 3 to close a window $\Rightarrow \triangle$.

Always close the windows fully if you park the vehicle or leave it unattended $\Rightarrow \Lambda$.

You can use the electric windows for approx. 10 minutes after switching off the ignition if neither the driver door nor the front passenger door has been opened and the key has not been removed from the ignition.

Buttons in the driver door

- 1 Button for window in front left door
- 2) Button for window in front right door

Buttons for rear windows*

- 3 Safety switch for deactivating the electric window buttons in the rear doors
- Button for window in rear left door
- Button for window in rear right door

Safety switch 🕾*

Safety switch (3) in the driver door can be used to disable the electric window buttons in the rear doors.

Safety switch not pressed: buttons on rear doors are activated.

Safety switch pressed: buttons on rear doors are deactivated.



- Incorrect use of the electric windows can result in injury.
- Never close the tailgate without observing and ensuring it is clear, to do otherwise could cause serious injury to you and others. Make sure that no one is in the path of a window.
- Always take the vehicle key with you when you leave the vehicle.
- Never leave children or disabled persons in the vehicle, particularly if
 they have access to the keys. Unsupervised use of a key could mean that
 the engine is started or that electrical equipment is used (e.g. electric
 windows). Risk of accident. The doors can be locked using the remote
 control key. This could result in people being trapped in the vehicle in an
 emergency.
- The electric windows will work until the key has been removed from the ignition and one of the front doors has been opened.



↑ WARNING (continued)

• If necessary, use the safety switch to disable the rear electric windows. Make sure that they have been disabled.



If the window is not able to close because it is stiff or because of an obstruction, the window will automatically open again \Rightarrow page 107. If this happens, check why the window could not be closed before attempting to close it again.

One-touch opening and closing

One-touch opening and closing means you do not have to hold down the button.

One-touch closing

- Pull up the button for the window briefly to the second position. The window closes fully.

One-touch opening

- Push down the button for the window briefly to the second position. The window opens fully.

Restoring one-touch opening and closing

- Close all windows.
- Use the key to lock the vehicle from outside and hold the key in the lock position for at least one second. The one-touch function is now ready for operation.

The buttons \Rightarrow page 106, fig. 69 (1) and (2) have two levels for opening the window and two for closing it. This makes it easier to open or close windows to the desired position.

One-touch closing does not work when the ignition has been switched off, even if the key is in the ignition.

The automatic open and close function will not work if the battery has been temporarily disconnected, or if the battery is flat. The function then has to be reactivated.

The one-touch function and roll-back function will not work if there is a malfunction in the electric windows. Contact an Authorised Service Centre.

Roll-back function

The windows have a roll-back function. This reduces the risk of injuries when the windows are closing.

- If a window is obstructed when closing automatically, the window stops at this point and lowers immediately $\Rightarrow \bigwedge$.
- If this happens, check immediately (within 10 seconds) why the window could not be closed before attempting to close it again. After 10 seconds the normal automatic function resumes.
- If the window is still obstructed, the window stops at this point.
- If there is no obvious reason why the window cannot be closed, try to close it again within five seconds.

If you wait longer than 5 - 10 seconds, the window will open fully when you operate one of the buttons. One-touch closing is reactivated.

The one-touch function and roll-back function will not work if there is a malfunction in the electric windows. Contact an Authorised Service Centre.





/!\ WARNING

- Incorrect use of the electric windows can result in injury.
- Always take the key with you when leaving the vehicle, even if you only intend to be gone for a short time. Please ensure that children are never left unsupervised in the vehicle.
- The electric windows will work until the key has been removed from the ignition and one of the front doors has been opened.
- Never close the tailgate without observing and ensuring it is clear, to do otherwise could cause serious injury to you and others. Make sure that no one is in the path of a window.
- Never allow people to remain in the vehicle when you close the vehicle from the outside. The windows cannot be opened even in an emergency.



Note

The roll-back function is deactivated if the windows are closed from the outside of the vehicle using the ignition key for convenience closing ⇒ page 108. ■

Convenience opening and closing*

Using the door lock

- Hold the key in the door lock of the driver door in either the locking or the unlocking position until all windows are either opened or closed.
- Release the key to interrupt this function.
- Once the windows are completely closed, the indicators will flash.

Using the remote control

- Push the lock button on the remote control for about 3 seconds. All windows which function electrically will be either opened or closed.
- Press the unlock button to interrupt the function.
- Once the windows are completely closed, the indicators will flash.

Sliding/tilting roof*

Opening and closing the sliding/tilting roof

The sliding/tilting sunroof is opened and closed using the rotary button when the ignition is switched on.

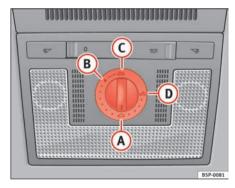


Fig. 70 Roof lining description: rotary sun roof control



Closing the sliding/tilting sunroof

- Turn the rotary button to position \bigcirc ⇒ page 108, fig. 70 ⇒ \bigcirc .

Opening/tilting the sliding/tilting sunroof

- Turn the rotary button to position (B). The sunroof opens to the convenience position where wind noise is reduced.
- To open the roof further, turn the switch to position (and hold the switch in this position until the roof opens to the desired position.

Tilting the sliding/tilting sunroof

Turn the rotary button to position D.

Always close the sliding/tilting roof fully if you park the vehicle or leave it unattended $\Rightarrow \Lambda$.

The sliding/tilting sunroof can be operated for up to about ten minutes after the ignition has been switched off, provided the driver door and the front passenger door are not opened.

Sunshade

The sunroof blind is opened together with the sliding/tilting roof. If required, it can be closed by hand when the sunroof is closed.



WARNING

- $\bullet \quad \text{Incorrect use of the sliding/tilting sunroof can result in injury.}$
- Never close the sliding/tilting sunroof without observing and ensuring it is clear, to do otherwise could cause serious injury to you and others.
 Make sure that no one is in the path of the sliding/tilting sunroof.
- Always take the vehicle key with you when you leave the vehicle.

WARNING (continued)

- Never leave children or disabled persons in the vehicle, particularly if they have access to the keys. Unsupervised use of a key could mean that the engine is started or that electrical equipment is used (e.g. electric sliding/tilting sunroof). Risk of accident! The doors can be locked using the remote control key. This could result in people being trapped in the vehicle in an emergency.
- The sliding/tilting sunroof continues to function until one of the front doors is opened and the key removed from the ignition. ■

Convenience closing*

Using the door lock

- Hold the key in the door lock of the driver's door in the locking position until the sliding/tilting sunroof is closed.
- Release the key to interrupt this function.

Using the remote control

- Push the lock button on the remote control for about 3 seconds.
 The sliding/tilting sunroof is closed.
- Press the unlock button to interrupt the function.



Note

The sliding/tilting sunroof rotary button remains in the last position selected if the roof is closed using convenience closing from outside the vehicle and will have to be re-positioned the next time you drive.

Roll-back function of the sliding/tilting roof*

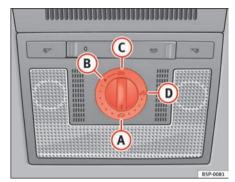


Fig. 71 Roof lining description: rotary sun roof control

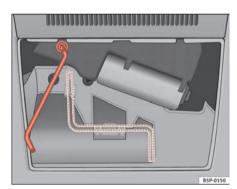


Fig. 72 Emergency closing handle

The sliding/tilting roof has a *roll-back function* which prevents larger objects getting trapped when the roof is closed. The roll-back function does not

prevent fingers getting pinched against the roof opening. The sliding/tilting sunroof stops and opens again immediately if it is obstructed when closing.

If the sliding/tilting roof has been opened again by the roll-back function, it can be closed only by pressing the rotary button at the front in position (A) \Rightarrow fig. 71 until the sliding/tilting roof has closed fully. Please note that the sunroof will now close without the roll-back function.

Operation in the event of a breakdown

In the event of a breakdown, the sunroof may be closed manually.

- Remove the plastic cover by inserting a screwdriver in the rear section.
- Remove the lever from the cover fastening, insert it in the opening as far as possible (pushing against the spring) and close the sliding roof.
- Fit the lever back into position.

Lights and visibility

Lights

Switching lights on and off 🌣



Fig. 73 Detailed view of dash panel lights, fog light and rear fog light control

Switching on the side lights

Turn the light switch ⇒ fig. 73 to position ⇒ €.

Switching on dipped headlights

- Turn the light switch to position **⑤**D.

Switching off the lights

- Turn the light switch to position 0.

Switching on the fog lights*

Pull the switch out of position ⇒ or ≦O to the first stop. The symbol ② in the light switch lights up.

Switching on the rear fog lights (vehicles with front fog lights)

Pull the switch out of position ⇒ or

O to the second stop
 A warning lamp lights up in the control panel.

Switching on the rear fog lights (vehicles with no front fog lights)



WARNING

Never drive with just the side lights on. Risk of accident. The side lights are not bright enough to illuminate the road ahead and to ensure that other road users are able to see you. Always use your dipped headlights if it is dark or if visibility is poor.



Note

- The dipped beam headlights will only work with the ignition on. The side lights come on automatically when the ignition is turned off.
- If the lights are left on after the key has been taken out of the ignition lock, a buzzer sounds when the driver door is opened. This is a reminder to switch off the lights.
- If the coming home* feature is activated, the acoustic signal for the dipped beam headlights will not sound, it will sound if the position lights are activated.

Safety First Operating instructions Tips and Maintenance Technical Data

- The rear fog light is so bright that it can dazzle drivers behind you. You should use the rear fog light only when visibility is very poor.
- If you are towing a trailer equipped with a rear fog light on a vehicle with a factory-fitted *towing bracket*, the rear fog light on the car will automatically be switched off.
- \bullet The use of the lighting described here is subject to the relevant statutory requirements. \blacksquare

Automatic lighting*



Fig. 74 Automatic lighting

Activation

 Rotate the switch to the position "Auto", this indication will light up.

Deactivation

- Turn the light switch to 0.

When the switch is in this position, as soon as visibility conditions are reduced, the lights are automatically activated. The indication "Auto", changes to red.

Automatic lighting

If the automatic headlight control is switched on, dipped headlights are automatically switched on by a light-sensitive sensor if you drive into a tunnel, for example.

The rain function switches on the headlights if the continuous wipe function is switched on for longer than 5 seconds. The dipped beam headlights are switched off if the continuous wipe or the intermittent wipe functions are switched off for longer than 255 seconds.



WARNING

 If automatic headlight control is switched on, the headlights will not be switched on in fog or heavy rain. Therefore, the dipped beam must be switched on manually.



Note

- For those vehicles with the automatic headlight system, when the key is removed from the ignition, the acoustic signal will only sound if the light control is in the position ⇒ or D if the vehicle is not fitted with the coming home function.
- If the daylight driving automatic light function is switched on, the fog lights or rear fog light cannot be switched on in addition.
- The use of the lighting described here is subject to the relevant statutory requirements.
- Do not put stickers on the windscreen in front of the sensor. This may cause disruptions or faults in the automatic lighting system.

Coming home / leaving home function*

After dark the area around the car is lit up with the aid of the coming home / leaving home function.

Coming home function*

To activate the function

- Remove key from ignition switch.

To deactivate the function

- Turn light switch to position 0.

When the system is activated and it is **dark** the dipped headlights, rear lights and number plate lights come on for 40 seconds, after the vehicle has been closed.

While one of the doors or the tailgate are open, the dipped headlights, the rear lights and the registration plate lighting remain on for about 90 seconds. If, before this time is up, all of the doors and the tailgate are closed, another 40 seconds of lighting is given. However, if all of the doors and the tailgate are closed after the 90 seconds have passed, the system will be deactivated and the lights will not come on.

If you wish to reactivate the system, you must start from the beginning.

The lighting time is defined at the time of manufacture.

Leaving home function*

The function is activated when the vehicle is unlocked using the remote control. In the dark, the leaving home function will light the dipped beam lights, the rear lights and the registration plate lighting for about 40 seconds.

With the lights switch in the position "0", the leaving home function is not activated.



Note

- If the vehicle is used often during the night for short trips using the coming home function, this will place a heavy demand on the battery. To avoid this, make longer journeys whenever possible.
- Observe all relevant statutory requirements when using the lighting systems described here.
- For those vehicles fitted with the "Dot Matrix" display, the time for the Coming home function (about 40 seconds) can be adjusted using the "Configuration, lights and visibility" menu. ■

Instrument and switch lighting / Headlight range control



Fig. 75 Instrument panel: regulation for instrument and switch illumination and headlight range control

afety First Operating instructions Tips and Maintenance Technical Date

Instrument and switch lighting (1)

When the headlights are switched on, the brightness of the instruments and switch lighting can be regulated to suit your requirements by turning the thumb wheel \Rightarrow page 113, fig. 75 (1).

Headlight range control (2)

Using the electrical headlight range control, ② you can adjust the headlight range to the load level that is being carried in the vehicle. In this way it is possible to avoid dazzling oncoming traffic more than necessary. At the same time, the driver has the best possible lighting for the road ahead using the correct headlight settings.

The headlights can only be adjusted when the dipped beam is switched on. To lower the beam, turn the thumb wheel down (2) from the basic setting 0.

Those vehicles fitted with xenon gas discharge headlights are fitted with an automatic headlight range system.

Dynamic headlight range control

Vehicles with **gas discharge lamps** ("xenon lamps") are equipped with **dynamic headlight range control**. This means that the headlights will be adjusted to suit the load level of the vehicle and "nodding movements" when pulling off and braking are automatically compensated for.

Vehicles with gas discharge lamps do not have headlight range control.

Self directional headlights*

When driving around bends the headlights will light the most important areas of the road.

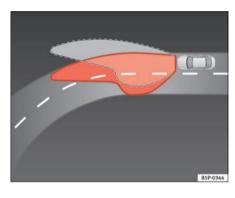


Fig. 76 Cornering lighting using directional headlights

This cornering light gives better illumination of the side of the road when driving through a corner. The dynamic lighting is controlled automatically according to speed and the steering wheel angle.

The two main headlights move at different angles to avoid that the front of the vehicle is left completely in the dark.



Note

The system operates from a speed of about 10 km/h.

Hazard warning lights 🛆

The hazard warning lights are used to draw the attention of other road users to your vehicle in emergencies.

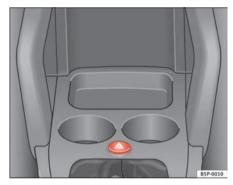


Fig. 77 Instrument panel: switch for hazard warning lights

If your vehicle breaks down:

- 1. Park your vehicle at a safe distance from moving traffic.
- 2. Press the button to switch on the hazard warning lights $\Rightarrow \bigwedge$.



- 3. Switch the engine off.
- 4. Apply the handbrake.
- 5. On a manual gearbox engage 1st gear, and for an automatic move the selector lever to P.
- 6. Use the warning triangle to draw the attention of other road users to your vehicle.

7. Always take the vehicle key with you when you leave the vehicle.

You should switch on the hazard warning lights to warn other road users, for instance when:

- reaching the tail end of a traffic jam
- there is an emergency
- your vehicle breaks down due to a technical defect
- you are towing another vehicle or your vehicle is being towed.

All turn signals flash simultaneously when the hazard warning lights are switched on. That is that the two turn signal indicator lamps ⟨¬¬⟩ and the indicator lamp in the switch \triangle will flash at the same time. The hazard warning lights also work when the ignition is switched off.

Turning on the emergency indicators

The emergency indicators turn on automatically when braking sharply at a speed of over 60 km/h, or if the ABS works for a prolonged period, in order to alert the vehicles behind. If you accelerate, or continue at over 40 km/h, the emergency indicators turn off automatically.



WARNING

- The risk of an accident increases if your vehicle breaks down. Always use the hazard warning lights and a warning triangle to draw the attention of other road users to your stationary vehicle.
- Never park where the catalytic converter could come into contact with inflammable materials under the vehicle, for example dry grass or spilt petrol. This could start a fire!



• The battery will run down if the hazard warning lights are left on for a long time, even if the ignition is switched off.

Operating instructions

• The use of the hazard warning lights described here is subject to the relevant statutory requirements. ■

Turn signal and main beam headlight lever

The turn signal and main beam lever also operates the parking lights and the headlight flasher.

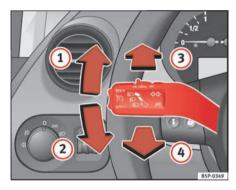


Fig. 78 Turn signal and main beam headlight lever

The turn signal and main beam headlight lever has the following functions:

Switching on the turn signals

Move the lever all the way up ⇒ fig. 78 1 to indicate right, and all the way down 2 to indicate left.

Signalling a lane change

 Push the lever up 1 or down 2 to the point where you incur resistance and then release the lever. The turn signal will flash several times. The corresponding warning lamp will also flash.

Switching main beam on and off

- Press the lever forward ⇒ fig. 78 (3) to switch on the main beams.
- Pull the lever back towards you to switch the main beam headlights off again.

Headlight flasher

 Pull the lever towards the steering wheel 4 to operate the flasher.

Switching on parking lights

- Switch off the ignition and remove the key from the lock.
- Move the lever up or down to turn on the right or left-hand parking lights respectively.



WARNING

The main beam can dazzle other drivers. Risk of accident! Never use the main beam headlights or the headlight flasher if they could dazzle other drivers.



Note

- The turn signals only work when the ignition is switched on. The corresponding warning lamp ⟨¬¬ or □¬ flashes in the combi-instrument. The warning lamp ⟨¬¬ or □¬ flashes when the turn signals are operated, provided a trailer is correctly attached and connected to the vehicle. If a turn signal bulb is defective, the warning lamp flashes at double speed. If the trailer turn signal bulbs are damaged, warning lamp ⟨¬¬¬ does not light up. You should have the bulb replaced.
- The *main beam headlights* can only be switched on if the dipped beam headlights are already on. The warning lamp **≣** then comes on in the combinistrument.
- The *headlight flasher* comes on for as long as you pull the lever even if no other lights are switched on. The warning lamp **≣** then comes on in the combi-instrument.
- When the *parking lights* are switched on, the headlight and the rear light on the corresponding side of the vehicle light up. The parking lights will only work if the key is removed from the ignition. If the lights are switched on, a **buzzer** gives an audible warning while the driver door is open.
- If the turn signal lever is left on after the key has been taken out of the ignition lock, an acoustic signal sounds when the driver door is opened. This is a reminder to switch off the turn signal, unless of course you wish to leave the parking light on. ■

Interior lights

Front interior light type 1

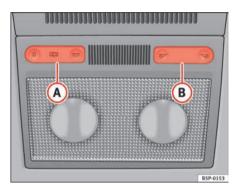


Fig. 79 Interior roof trim: front interior lights

The switch \bigcirc \Rightarrow page 118, fig. 80 is used to select the following positions:

Courtesy light position 🖳

Rocker switch in flat position (not activated). The interior lights are automatically switched on when the vehicle is unlocked or the key removed from the ignition lock and turn off about 20 seconds after the closure of the doors. The interior lights are switched off when the vehicle is locked or when the ignition is switched on.

Push the switch to the position \overline{x} .

Interior light switched off O

Push the switch to the position $0 \Rightarrow \text{fig. } 79$.

Safety First Operating instructions Tips and Maintenance Technical Data



Note

If not all the vehicle doors are closed, the interior lights will be switched off after approx. 10 minutes, providing the key has been removed and the courtesy light position selected. This prevents the battery discharging.

Front interior light type 2

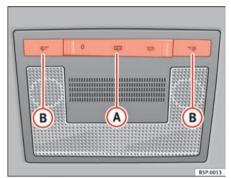


Fig. 80 Interior roof trim: front interior lights

The switch \bigcirc \Rightarrow fig. 80 is used to select the following positions:

Courtesy light position 🛡

Rocker switch in flat position (not activated). The interior lights are automatically switched on when the vehicle is unlocked or the key removed from the ignition lock and turn off about 20 seconds after the closure of the doors. The interior lights are switched off when the vehicle is locked or when the ignition is switched on.

Interior light switched on 豕

Push the switch to the position 豕.

Interior light switched off O

Push the switch to the position $0 \Rightarrow \text{fig. } 80$.



Note

If not all the vehicle doors are closed, the interior lights will be switched off after approx. 10 minutes, providing the key has been removed and the courtesy light position selected. This prevents the battery discharging.

Front reading lights

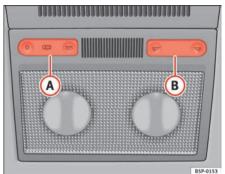


Fig. 81 Interior roof trim: front reading lights, type

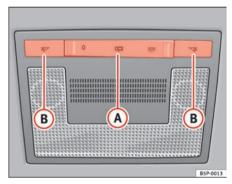


Fig. 82 Interior roof trim: front reading lights, type 2

Switching on the reading light To

Press the corresponding button \Rightarrow fig. 81 (B) and \Rightarrow fig. 82 (B) to switch on the reading light.

Switching off the reading lights ▼

Press the corresponding button to switch off the reading light.

Rear interior and reading lights*

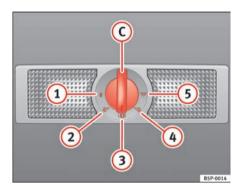


Fig. 83 Interior roof trim: rear interior lights and reading lights.

The switch \Rightarrow fig. 83 (c) is used to select the following positions:

Interior light switched off 0

In switch position \Rightarrow fig. 83 ①, the interior and reading lights are switched off.

Switching on the reading light To

Turn the switch to position 2 (left reading light) or to position 4 (right reading light).

Courtesy light position 🛡

Turn the control to position 3. The interior lights are automatically switched on when the vehicle is unlocked or the key removed from the ignition lock The

light turns off about 20 seconds after the closure of the doors. The interior lights are switched off when the vehicle is locked or when the ignition is switched on.

Interior lights or both reading lights switched on 🛣

Turn the control to position (5).



Note

If not all the vehicle doors are closed, the interior lights will be switched off after approx. 10 minutes, providing the key has been removed and the courtesy light position selected. This prevents the battery discharging.

Visibility

Sun visors

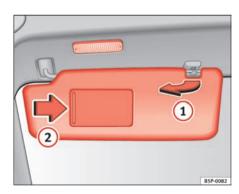


Fig. 84 Sun visor on the driver side

The sun visors for the driver and the front passenger can be pulled out of their mountings in the centre of the vehicle and turned towards the doors \Rightarrow fig. 84

The make-up mirrors in the sun visors have covers. When you open the cover 2, a lamp in the roof lights up.

The lamp* in the roof lining will go out when the vanity mirror cover is pushed back or the sun visor is pushed back up.



Note

The roof lamp will turn off about 10 minutes following the removal of the ignition key. This prevents the battery discharging. ■

Sun blinds*

The rear door windows have sun blinds

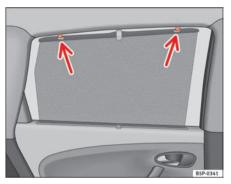


Fig. 85 Rear door blinds

Rear side window sun blinds*

 Pull out the blind and hook it into the hooks at the top of the door frame ⇒ page 120, fig. 85.

Windscreen wipers

Front windscreen wipers ∇

The windscreen wiper lever controls the windscreen wipers and the automatic wash and wipe.



Fig. 86 Windscreen wiper and windscreen wash lever

The windscreen wiper lever \Rightarrow fig. 86 has the following positions:

Switching off the wipers

Move the lever to position (0).

Intermittent wipe

- Move the lever up to position 1.
- Move the control (A) to the left or right to set the length of the intervals. Control to the left: long intervals; control to the right: short intervals. Four wiper interval stages can be set using switch (A).

Slow wipe

Move the lever up to position (2).

Continuous wipe

Move the lever up to position 3.

Brief wipe

 Move the lever down to position (4) to give the windscreen a brief wipe. The wiper will start to move faster if you keep the lever pressed down for longer than 2 seconds.

Wash and wipe automatic system 🏶

- Pull the lever towards the steering wheel Position (5). The wash function will start immediately and the wipers will start with a slight delay. The wash and wiper systems will function at the same time at speeds of over 120 km/h.
- Release the lever. The wipers will keep running for approximately four seconds.

Optional heated windscreen in the wiper blade* area (page

In some countries and with some versions, there is the possibility of heating the windscreen in the area of the windscreen wiper blades in order to aid deicing in the zone.

Safety First Operating instructions Tips and Maintenance Technical Data

This function is activated by turning the exterior heated rearview mirror* control forwards \Rightarrow page 126.



WARNING

- Worn and dirty wiper blades obstruct visibility and reduce safety levels.
- In cold conditions, you should not use the wash / wipe system unless you have warmed the windscreen with the heating and ventilation system.
 The washer fluid could otherwise freeze on the windscreen and obscure your view of the road.
- \bullet Always note the corresponding warnings on \Rightarrow page 226, "Changing windscreen wiper blades".



Caution

In icy conditions, always check that the wiper blades are not frozen to the glass before using the wipers for the first time. If you switch on the wipers when the wiper blades are frozen to the windscreen, you could damage both the wiper blades and the wiper motor.



Not

- $\bullet\hspace{0.4mm}$ The windscreen wipers will only work when the ignition is switched on.
- In certain versions of vehicles with alarms, the windscreen wiper will only work when the ignition is on and the bonnet closed.
- When in use, the wipers do not go as far as the rest position. When the lever is moved to position 0, they are totally hidden.
- The next speed down will automatically be selected if speed ⇒ page 121, fig. 86 ② or ③ is selected when the vehicle stops. The set speed will be resumed when the vehicle starts again
- The windscreen will be wiped again after approximately five seconds once the "automatic wipe/wash system" has been operated while the vehicle is in transit (automatic function). If you activate the wipers less than three seconds after the drip function, a new wash sequence will begin without the

last wipe. To reactivate the "automatic" function the ignition must be turned off and on again.

- When the "intermittent wipe function" is on, the intervals are directly proportional to the speed. This way, the higher the vehicle speed the shorter the intervals.
- The wiper will try to wipe away any obstacles that are on the windscreen. The wiper will stop moving if the obstacle blocks its path. Remove the obstacle and switch the wiper back on again.
- Before removing any objects that may be trapped in the side areas of the windscreen, always move the wiper arms to the service position (horizontal).
- The heat output of the heated jets* is controlled automatically when the ignition is switched on, depending upon the outside temperature.

Rain sensor*

The rain sensor controls the frequency of the windscreen wiper intervals, depending on the amount of rain.

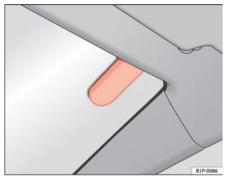


Fig. 87 Rain sensor*



Fig. 88 Windscreen wiper lever

Switching on the rain sensor

- Move the windscreen wiper lever into position $(1) \Rightarrow$ fig. 88.
- Move the control (A) to the left or right to set the sensitivity of the rain sensor. Control to the right: highly sensitive. Control to the left: less sensitive.

The rain sensor is part of the interval wipe function. You will have to switch the rain sensor back on if you switch off the ignition. This is done by switching the wiper intermittent function off and back on.



Note

• Do not put stickers on the windscreen in front of the sensor. This may cause sensor disruption or faults. ■

Rear window wiper 💭

The windscreen wiper lever operates the windscreen wiper and the wash and wipe system for the rear window.



Fig. 89 Windscreen wiper and windscreen wash lever: rear window wiper

Switching on the interval wipe

Press the lever forwards to position (6) ⇒ fig. 89. The wiper will wipe the window approximately every 6 seconds.

Switching off the interval wipe function

Pull the lever back from position 6 towards the steering wheel.
 The wiper will continue to function for a short period if you switch off whilst the wipers are in motion.

Switching on the windscreen wiper and washer system

- Press the lever fully forwards to position (7) ⇒ fig. 89. The wash function will start immediately and the wiper will start with a slight delay. The windscreen wash system will function as long as you hold the lever in this position.
- Release the lever. The wiper then wipes for approximately 4 seconds, and then in intervals again.
- Release the lever. The washer system stops and the wipers function.



WARNING

- A worn or dirty wiper blade will obstruct visibility and reduce safety.
- $\bullet \;\;$ Always note the corresponding warnings on \Rightarrow page 226, "Changing windscreen wiper blades".



Caution

In icy conditions, always check that the wiper blade is not frozen to the glass before using the wiper for the first time. If you switch on the wiper when the wiper blade is frozen to the glass, this could damage both the wiper blade and the wiper motor.



Note

- The windscreen wiper will only function when the ignition is switched on and the tailqate is closed.
- In reverse gear, with the windscreen wipers switched on, the rear windscreen wiper will make one wipe.

Headlight washer system

The headlight washers clean the headlight lenses.

The headlight washers are activated automatically when the windscreen washer is used and the windscreen wiper lever is pulled towards the steering wheel for at least 1.5 seconds – provided the dipped headlights or main beams are switched on. Clean off stubborn dirt (insects, etc.) from the headlights at regular intervals, for instance when filling the fuel tank.



Note

- To ensure that the headlight washers work properly in winter, keep the nozzle holders in the bumper free of snow and remove any ice with a de-icer spray.
- To remove water, the windscreen wipers will be activated from time to time, the headlight wipers will be activated every three cycles.

Mirrors

Interior mirror

It is dangerous to drive if you cannot see clearly through the rear window.

Manual anti-dazzle function for interior mirror

In the basic mirror position, the lever at the bottom edge of the mirror should be at the front. Pull the lever to the back to select the anti-dazzle function.

Automatic anti-dazzle interior mirror*

The automatic anti-dazzle function can be switched on and off as desired.

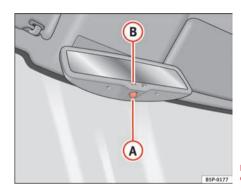


Fig. 90 Automatic antidazzle interior mirror.

Switching off anti-dazzle function

- Press button $(A) \Rightarrow$ fig. 90. Warning lamp (B) goes out:

Switching on anti-dazzle function

- Press button \bigcirc \Rightarrow fig. 90. Warning lamp is lit.

Anti-dazzle function

The anti-dazzle function is activated every time the ignition is switched on. The green indicator lamp lights up in the mirror housing.

When the anti-dazzle function is activated the interior mirror will darken **automatically** according to the amount of light it receives (for example from the headlights of a vehicle behind). The anti-dazzle function is cancelled if reverse gear is engaged.

Safety First Operating instructions Tips and Maintenance Technical Data



Note

- The automatic anti-dazzle function will only work properly if the sun blind* for the rear window is retracted and there are no other objects preventing light from reaching the interior mirror.
- If you have to stick any type of sticker on the windscreen, do not do so in front of the sensors. Doing so could prevent the anti-dazzle function from working well or even from working at all. ■

Exterior mirrors

The exterior mirrors can be adjusted using the rotary knob in the centre console

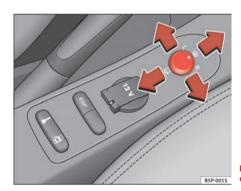


Fig. 91 Exterior mirror control

Basic setting of exterior mirrors

1. Turn knob \Rightarrow fig. 91 to position L (left exterior mirror).

- 2. Turn the rotary knob to position the mirror so that you have a good view to the rear of the vehicle.
- 3. Turn knob to position **R** (right exterior mirror).
- Swivel the rotary knob to position the mirror so that you have a good view to the rear of the car ⇒ .

Heating the exterior mirrors*

Turn the knob forwards to the central position ⇒ fig. 91 (1) so that the heated rear view mirrors warm up and the heated windscreen* in the wiper blade rest area is activated ⇒ page 121.

Folding in exterior mirrors*

Turn the control ⇒ fig. 91 to position → to fold in the exterior mirrors. You should always fold in the exterior mirrors if you are driving through an automatic car wash. This will help prevent damage.

Folding rear view mirrors with convenience control*

- The outer rear view mirror will fold back automatically with convenience closing (with the remote or the key)
- To unfold it again, open the door and use the contact

Folding exterior mirrors back out to the extended position*

 Turn the knob to another position to fold the exterior mirrors back out ⇒ ⚠.

Synchronised mirror adjustment

1. Turn the control to the position L (left exterior mirror).

Turn the rotary knob to position the mirror so that you have a good view to the rear of the vehicle. The **right exterior mirror** will be adjusted at the same time (synchronised).



WARNING

- The rear view convex or aspheric mirror increase the field of vision however the objects appear smaller and further away in the mirrors. If you use these mirrors to estimate the distance to vehicles behind you when changing lane, you could make a mistake. Risk of accident.
- If possible, use the interior mirror to estimate distances to vehicles behind you.
- Make sure that you do not get your finger trapped between the mirror and the mirror base when folding back the mirrors. Risk of injury!



For the sake of the environment

The exterior mirror heating should be switched off when it is no longer needed. Fuel is wasted otherwise.



Note

- If the electrical adjustment ever fails to operate, the mirrors can be adjusted by hand by lightly pressing the edge of the mirror glass.
- In vehicles with electric wing mirrors, the following points should be observed: if, due to an external force (e.g. a knock while manoeuvring), the adjustment of the mirror housing is altered, the mirror will have to be completely folded **electrically**. Do not readjust the mirror housing by hand, as this will interfere with the mirror adjuster function.
- The rear view mirrors can be adjusted separately or simultaneously, as described before.

Safety First Operating instructions Tips and Maintenance Technical Dat

Seats and stowage

The importance of correct seat adjustment

Proper seat adjustment optimises the level of protection offered by seat belts and airbaas.

Your vehicle has **five** passenger places, two individual front seats and three places on the rear seat. Each seat is equipped with a three-point seat belt.

The driver seat and front passenger seat can be adjusted in many ways to suit the physical requirements of the vehicle occupants. The correct seat position is very important for:

- fast and easy operation of all controls on the instrument panel,
- relaxed posture that does not cause drowsiness.
- safe driving \Rightarrow page 7.
- and to ensure that the seat belts and airbag system provide maximum protection \Rightarrow page 19.



/! WARNING

- If the driver and passengers assume improper sitting positions, they may sustain critical injuries.
- Never transport more people than there are seats available in the vehicle.
- Every occupant in the vehicle must properly fasten and wear the seat belt belonging to his or her seat. Children must be protected with an appropriate child restraint system \Rightarrow page 46, "Child safety".
- The front seats and all head restraints must always be adjusted to body size and the seat belt must always be properly adjusted to provide you and your passengers with optimum protection.

MARNING (continued)

- Always keep your feet in the foot well when the vehicle is moving; never rest them on the dash panel, out of the window or on the seat. This also applies to passengers. An incorrect sitting position exposes you to an increased risk of injury in the event of a braking manoeuvre or an accident. If the airbag is triggered, you could sustain severe injuries due to an incorrect sitting position.
- It is important for the driver and front passenger to maintain a distance of at least 25 cm from the steering wheel or dash panel. Failure to respect the minimum distance means that the airbag will not protect you. Risk of fatal injury. The distance between the driver and the steering wheel or between the front passenger and the dash panel should always be as great as possible.
- Adjust the driver or front passenger seat only when the vehicle is stationary. This also applies to the forwards/backwards adjustment of the rear seats. Otherwise your seat could move unexpectedly while the vehicle is moving. This could increase the risk of an accident and therefore injury. In addition, while adjusting your seat, you will assume an incorrect sitting position. Risk of fatal accidents.
- Special guidelines apply to installing a child seat on the front passenger seat. When installing a child seat, observe the warning note in the \Rightarrow page 46, "Child safety".

Head restraints

Correct adjustment of head restraints

Properly adjusted head restraints are an important part of occupant protection and can reduce the risk of injuries in most accident situations.



Fig. 92 Front view: head restraints and seat belts correctly adjusted

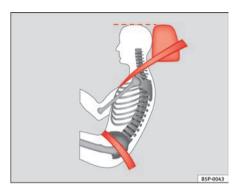


Fig. 93 Side view: head restraints and seat belts correctly adjusted

Adjust the head restraint so that its upper edge is at the same level as the top of your head, or as close as possible to the same level as the top of your head and, as a very minimum at eye level ⇒ fig. 92 and ⇒ fig. 93.

Adjusting the head restraints \Rightarrow page 130.



WARNING

- Travelling with the head restraints removed or improperly adjusted increases the risk of severe injuries.
- Improperly adjusted head restraints could lead to death in the event of a collision or accident.
- Incorrectly adjusted head restraints also increase the risk of injury during sudden or unexpected driving or braking manoeuvres.
- \bullet The head restraints must always be adjusted according to the occupant's size. \blacksquare

Safety First Operating instructions Tips and Maintenance Technical Da

Removing or adjusting head restraints

The head restraints can be adjusted by moving them up and down.

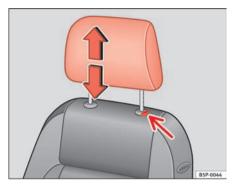


Fig. 94 Adjusting and removing the head restraints

Adjusting height (front seats)

- Press the button on the side and pull upwards to the desired position.
- To lower the head restraint, press the button and push head restraint downwards.
- Make sure that it engages securely into position.

Adjusting height (rear seats)

Press the button on the side and pull upwards to the desired position.

- To lower the head restraint, press the button and push head restraint downwards.
- Make sure that the head restraint engages securely in one of its positions ⇒ page 14.

Angle adjustment (front seats)

- Press the head restraint forward or back to the required position.

Removing the head restraint

- Push the head restraint up as far as it will go.
- Press the button \Rightarrow fig. 94 (arrow).
- Pull head restraint out of fitting without releasing the button.

Fitting the head restraint

- Insert the head restraint into the guides on the rear backrest.
- Push head restraint down.
- Adjust the head restraint to suit body size ⇒ page 14 and ⇒ page 13.



WARNING

- Never drive if the head restraints have been removed. Risk of injury.
- Never drive if the head restraints are in an unsuitable position, there is a risk of serious injury.
- After refitting the head restraint, you must always adjust it properly for height to achieve optimal protection.
- Please observe the safety warnings \Rightarrow page 129, "Correct adjustment of head restraints". \blacksquare

Front seats

Adjustment of the front seats



Fig. 95 Front left seat controls

The control elements in \Rightarrow fig. 95 are mirrored for the front right-hand seat.

1 Adjusting the seat forwards and backwards

- Pull up the grip and move the seat forwards or backwards.
- Then release the grip 1 and move the seat further until the catch engages.

2 Adjusting the seat height*

 Pull the lever up or push down (several times if necessary) from its home position. This adjusts the seat height in stages.

(3) Adjusting the backrest angle

- Take your weight off the backrest and turn the hand wheel.

(4) Adjusting the lumbar support*

 Take your weight off the backrest and turn the hand wheel to adjust the lumbar support.

The backrest curvature of the cushioned area is determined by the settings made in the lumbar region. This supports the natural curvature of the spine very effectively.



WARNING

- Never adjust the driver or front passenger seat while the vehicle is in motion. While adjusting your seat, you will assume an incorrect sitting position. Risk of fatal accidents. Adjust the driver or front passenger seat only when the vehicle is stationary.
- To reduce the risk of injury to the driver and front passenger during sudden braking manoeuvres or an accident, never drive with the backrest tilted far to the rear. The maximum protection of the seat belt can be achieved only when the backrests are in an upright position and the driver and front passenger have properly adjusted their seat belts. The further the backrests are tilted to the rear, the greater the risk of injury due to improper positioning of the belt web!
- Exercise caution when adjusting the seat height or forwards/backwards position. Injuries can be caused if the backrest is tilted without due care and attention.

Heated seats*

The front seat cushions and backrests can be heated electrically.

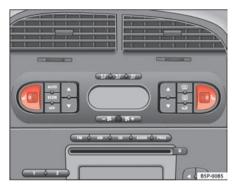


Fig. 96 Thumb wheel for the front seat heating

 Turn the appropriate thumb wheel ⇒ fig. 96 to switch on the seat heating. The seat heating is switched off in the 0 position.

The seat heating only works when the ignition is switched on. The left thumb wheel controls the left seat and the right thumb wheel the right seat.



Caution

To avoid damaging the heating elements, please do not kneel on the seat or apply sharp pressure at a single point to the seat cushion and backrest.

Rear seat bench

Seat adjustment

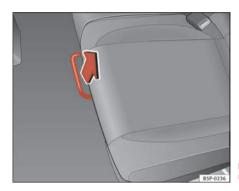


Fig. 97 For unlocking the rear seat

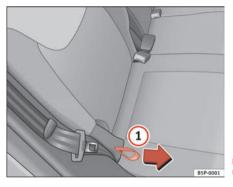


Fig. 98 Rear seat backrest angle adjustment

The seats may be moved forwards or backwards independently. The movement can be 1/3 or 2/3 of the seat. There are various possible positions.

Adjusting reach

- In the seated position, unlock the lever in the direction of the arrow ⇒ page 132, fig. 97.
- Move the seat cushion forwards or backwards to the desired position.

Backrest angle adjustment

Hold the backrest at the top. Pull the loop on the side of the seat
 ⇒ page 132, fig. 98 (1) in the direction of the arrow and hold the loop in this position. Push the backrest to the required position and release the loop.



WARNING

- Adjust the seat only when the vehicle is stationary. Otherwise your seat could move unexpectedly while the vehicle is moving. This could increase the risk of an accident and therefore injury.
- Do not push the seatbacks down until the seat is moved, this is to avoid damage to the centre console.
- Ensure that the seat, once moved, is fixed in position.



Note

- In order to maintain the maximum luggage compartment space, put the seatbacks in position normal, without moving.
- In order to maintain the maximum space without putting the seatbacks down, move the seats forward to the desired position.

Folding the seat backrests down

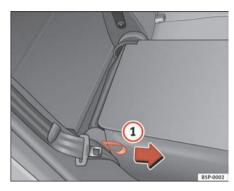


Fig. 99 Folding or opening the rear seat backrests

- Pull the loop on the side of the seat \Rightarrow fig. 99 (1).

In this position the back rest is locked. This is the reason why the loop located on the side of the seat must be pulled in the direction of the arrow to open the backrest.



WARNING

- $\bullet \;\;$ You should check that the backrest has engaged properly in position after the loop is released.
- The locking system loops on the seats may not, for reasons of safety, be used to secure any items.

afety First Operating instructions Tips and Maintenance Technical Dat

Folding the rear seat backrests down

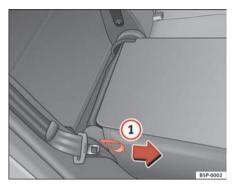


Fig. 100 Folding or opening the front seat backrests

Pull the loop on the side of the seat ⇒ fig. 100 (1) in the direction of the arrow and lift the seat backrest into position.

/ WARNING

- You should check that the backrest has engaged properly in position after the loop is released.
- The locking system loops on the seats may not, for reasons of safety, be used to secure any items.
- After locking the seat backrest into position ensure that the seat belts protrude from the seat.

Stowage compartments

Stowage compartment on the front passenger side



Fig. 101 Passenger side: stowage compartment

The compartment can be opened by pulling the lever \Rightarrow fig. 101.



WARNING

Always keep the stowage compartment cover closed while the vehicle is in motion to reduce the risk of injury during a sudden braking manoeuvre or in the event of an accident.

Centre arm rest at front with stowage area

There is a stowage area in the armrest.



Fig. 102 Front armrest with stowage area

- To open the stowage area, lift the armrest up in the direction of the arrow ⇒ fig. 102 and then lift the cover.
- To access the CD loader* or the lower stowage area, pull on the armrest cover without pressing on the button.
- To close the stowage area, push the armrest down.



WARNING

Always keep the stowage area closed while the vehicle is in motion to reduce the risk of injury from the armrest during a sudden braking manoeuvre or in the event of an accident.



Note

The CD changer is located in this compartment.

Stowage areas under the front seats*

There is a stowage locker with a cover under each front seat.



Fig. 103 Stowage area under the front seats

The drawer* \Rightarrow fig. 103 (A) is opened by pushing the button and putting the cover back.

There are two open positions of 15 and 60 degrees depending on the pressure applied to the cover. In the 60 degree position, the cover will collapse if too much pressure is applied.

To close the drawer, press the cover until it locks into position.

afety First Operating instructions Tips and Maintenance Technical Data



WARNING

- The drawers will hold a maximum weight of 1.5 kg.
- Do not drive with the drawer cover open. There is an injury risk for passengers if the cargo is released in case of sudden braking or an accident.

Folding table*

Folding tables are fitted to the rear of the front seat backrests.



Fig. 104 Folding table of front left seat

 To open the table, open it up in the direction of the arrow ⇒ fig. 104.



WARNING

- The folding tables may not be folded down whilst the vehicle is in motion and anyone is seated on the second row of seats. There is a risk on injury during a sudden braking manoeuvre! The table must therefore be closed and properly secured whilst the vehicle is in motion.
- Never place hot drinks in the drink holders. During normal or sudden driving manoeuvres, sudden braking or an accident, the hot drink could be spilled. Danger of scalding.



Caution

When driving, do not leave open cans in the cup holders. The drink might be spilt on braking, for example, and could damage the vehicle.

Roof stowage compartment*

There are four stowage compartments in the roof

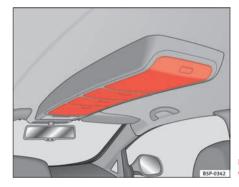


Fig. 105 Roof stowage compartments

- Press the button on the cover to open these compartments
 ⇒ page 136, fig. 105. The cover will then open.
- To close the cover, press it up until it engages.



WARNING

Always keep the stowage area cover closed while the vehicle is in motion to reduce the risk of injury during a sudden braking manoeuvre or in the event of an accident and to prevent any items from being thrown through the vehicle interior.

Stowage in the luggage compartment*

There is a variable stowage area* in the luggage compartment floor.

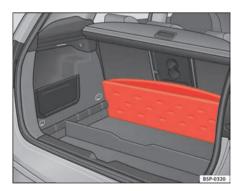


Fig. 106 Variable floor boot stowage compartment



Fig. 107 Variable floor boot stowage compartment

- Lift the luggage compartment floor and fold it back all the way ⇒ fig. 106.
- Fit the separator (A) ⇒ fig. 107, into the side grooves depending on the size of the objects to be transported. The onboard tool kit and the spare wheel are located underneath the luggage compartment.
- Secure luggage in the luggage compartment with suitable straps on the fastening rings.



Note

- The folding table is designed for a maximum load of 50 kg. For heavier loads fold up the table and remove.
- Do not exceed the maximum authorised weight for the vehicle ⇒ page 279.

Luggage compartment retaining net

There is a retaining net in the luggage compartment for securing objects.

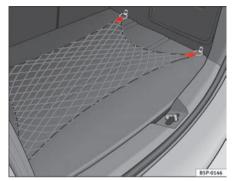


Fig. 108 Retaining net

 Use the fastening rings located on the side of the luggage compartment to attach the retaining net ⇒ fig. 108.



Not

- The folding table is designed for a maximum load of 50 kg. For heavier loads fold up the table and remove.
- Do not exceed the maximum authorised weight for the vehicle
 ⇒ page 279.

Other stowage areas

Other stowage areas can be found:

- in the centre console.
- in the door trims (front and rear),
- in the side trims of the luggage compartment,
- in the spare wheel recess in the luggage compartment (only on vehicles with an optional anti-puncture kit*.

The clothes hooks are located on the rear roof handles.



WARNING

- Do not store loose objects on the dashboard. These objects could be flung through the passenger compartment when the vehicle is moving (e.g. while accelerating, braking or cornering) and distract the driver. Risk of accident.
- Ensure that no objects can fall from the centre console or other stowage areas into the driver foot well while the vehicle is moving. In the event of a sudden braking manoeuvre, you will not be able to use the brake, clutch or accelerator. Risk of accident.
- Clothing hung on the coat hooks must not restrict the driver's view. Risk of accident. The coat hooks are intended only for use with light articles of clothing. Do not leave any hard, sharp or heavy objects in hanging articles of clothing. During sudden braking manoeuvres or accidents, especially those involving airbag deployment, these objects could injure the vehicle occupants. ■

Drinks holders at the front



Fig. 109 Front drink holder

In the centre console, in front of the gear lever, there are two drink holders \Rightarrow fig. 109.



/! WARNING

- Never place hot drinks in the drink holders. During normal or sudden driving manoeuvres, sudden braking or an accident, the hot drink could be spilled. Danger of scalding.
- Never use rigid materials (for example, glass or ceramic), these could cause injury in the case of an accident.

Rear drink holder*/ Armrest*



Fig. 110 Opening the rear drink holders



Fig. 111 Rear armrest/drink holder

Operating instructions

Opening and closing the armrest*/ drink holder*

- To open, pull the loop in the direction of the arrow ⇒ page 139, fig. 110 1.
- To close, lift the Drink holder*/ armrest* in the direction of the arrow ⇒ page 139, fig. 111 ②.



WARNING

Ensure that the load in the luggage compartment is correctly secured with the retainer net when travelling with the armrest down \Rightarrow page 138.

Multi-purpose* mobile stowage compartment - Fitting and removal

This stowage compartment may only be placed in the central area of the rear seat

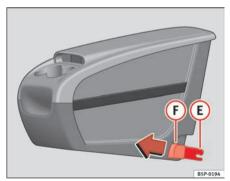


Fig. 112 Mobile stowage compartment Installation

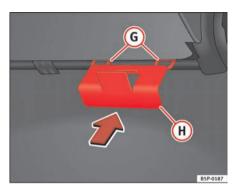


Fig. 113 Mobile stowage compartment mounting plate

Fitting mobile stowage compartment

- Fold down the small section of the rear seat back rest, in order to access the large section of the back rest.
- Fit the mobile stowage compartment mounting plate (H) ⇒ fig. 113 from the inside of the vehicle, through the rear section of the seat. It should be fitted between the back rest and the seat, in the central seat area.
- Push the plate until it clips the cushion frame. The rings of the mobile stowage compartment mounting plate appear at the front of the seat.
- If it is difficult to make the plate clip, tilt the rear back rest of the large section forwards slightly and then lean the back rest backwards to make the fitting of the mobile stowage compartment onto the mounting plate easier.

- Place the mobile stowage compartment onto the foam of the central seat.
- Set both mounting pieces together (E) ⇒ page 140, fig. 112, with both mounting rings (G) ⇒ page 140, fig. 113 and press hard until both the clips completely connect with the rings.

Removing mobile stowage compartment

- Pull each of the buttons ⇒ page 140, fig. 112 () on the clips (red buttons) forwards, until they snap out of place.
- Fold the larger seat down and remove the mobile stowage compartment mounting plate.

Multi-purpose* mobile stowage compartment - General information

This stowage compartment may only be placed in the central area of the rear seat

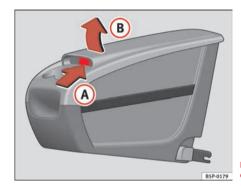


Fig. 114 Mobile stowage compartment Opening

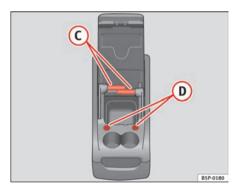


Fig. 115 Mobile stowage compartment Duties

Safety First Operating instructions Tips and Maintenance Technical Da

Opening

- Lift the cover \bigcirc , in area \bigcirc \Rightarrow page 141, fig. 114.

Closing

- Push the cover down, until it clips into place.

Uses of the mobile stowage compartment

- The front open glove box may be used to store small objects that will not damage passengers in the event that the objects are flung around the interior of the vehicle.
- The drink holders are used for holding drink cans or cups.
- The elastic belt on the side may be used for keeping papers and magazines.
- The tables may be used as a support for writing.

To use the table $\textcircled{c} \Rightarrow page 141$, fig. 115, it must be removed from its compartment on the side of the mobile stowage compartment and fitted into compartment $\textcircled{o} \Rightarrow page 141$, fig. 115 on the front section of the mobile stowage compartment.

The table in the right-hand compartment is fitted in the left-hand compartment of the front of the mobile stowage compartment and the table in the left-hand compartment is fitted in the right-hand compartment.

The tables have two positions for use and cannot be interchanged.



WARNING

- The mobile stowage compartment supports a maximum load of 5 kg. Do not overload.
- $\bullet \;\;$ Do not drive when the cover of the mobile stowage compartment is open.
- Do not drive when the tables are set up for use.

MARNING (continued)

- When the vehicle is moving, keep the tables stored inside the mobile stowage compartment with the cover closed, and likewise when they are not in use
- Never place hot drinks in the drink holders. The drink may spill and cause burns when the vehicle is moving.
- Do not leave cans in the drinkholder when the vehicle is in motion, there is a danger that the can may be flung around the vehicle and cause injury.
- Make sure that the mounting plate is correctly clipped onto the cushion frame.
- When the plate is not in use, store inside the stowage compartment.
- When the mobile stowage compartment is not in use, it should always be fastened by the retaining net in the luggage compartment.



Note

• Check that the mobile stowage compartment is correctly fitted, pulling it forwards by the front glove box and checking that both safety clips are correctly clipped onto the rings.

Ashtrays*, cigarette lighter* and electrical sockets

Ashtray*



Fig. 116 Ashtray located in the front drinks holder

Opening and closing the ashtray

- To open the ashtray, lift the cover \Rightarrow fig. 116.
- To close, lower the cover.

Emptying the ashtray

Extract the ashtray and empty.



WARNING

Never put paper in the ashtray. Hot ash could ignite the paper in the ashtray.

Cigarette lighter*



Fig. 117 The cigarette lighter is located in the electric socket on the front of the centre console

- Press on the cigarette lighter \Rightarrow fig. 117 to activate it \Rightarrow \bigwedge .



- Wait for the lighter to pop out slightly.
- Pull out the cigarette lighter and light the cigarette on the glowing coil.



/ WARNING

- Improper use of the cigarette lighter can lead to serious injuries or start a fire.
- Take care when using the cigarette lighter. Carelessness or negligence when using the cigarette lighter can cause burns, risk of injury.
- The lighter only works when the ignition is turned on or the engine is running. To avoid the risk of fire, never leave children unsupervised in the vehicle.

Electrical sockets

Electrical equipment can be connected to any of the 12 volt sockets.



Fig. 118 Socket, centre console, front

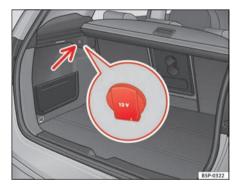


Fig. 119 Socket, luggage compartment

Electrical accessories may be connected to the 12 volt socket in the front centre console \Rightarrow fig. 118 of the passenger compartment and that of the boot* \Rightarrow fig. 118. The appliances connected to each socket must not exceed a power rating of 120 Watt.



WARNING

The current sockets and the connected accessories will only operate when the ignition is on or when the engine is running. Improper use of the sockets or electrical accessories can lead to serious injuries or cause a fire. To avoid the risk of injury, never leave children unsupervised in the vehicle.



Note

- Using electrical appliances with the engine switched off will drain the battery.
- Before using any electrical accessories, see the instructions on ⇒ page 210. ■

Auxiliary audio connection (AUX-IN)



Fig. 120 Auxiliary audio connection

- Lift the AUX. cover \Rightarrow fig. 120.
- Insert the pin fully (see the radio manual). ■

AUX RSE connection*



Fig. 121 AUX RSE connection

This connector may be used as an audio input (red and white connectors) or audio and video connector (red, white and yellow connectors). For more details about the use of this audio and video source, see the RSE manual.

Apple* iPod connector®

The $iPod^{\textcircled{R}}$ connection is located in the centre arm rest.

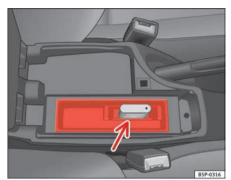


Fig. 122 iPod connection in central armrest compartment.

For information concerning the use of this equipment, please see the Radio handbook.

USB* Connection

Inside the central armrest compartment there is a USB port.

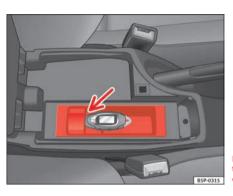


Fig. 123 USB connection* in central armrest compartment

For information concerning the use of this equipment, please see the Radio handbook.

First-aid kit, warning triangle, fire extinguisher

Warning triangle and first-aid kit*

The warning triangle may be housed in the stowage compartment on the floor of the boot, under the carpet.

The first aid box may be housed in the stowage compartment on the floor of the boot, or in the stowage compartment in the left side lining of the luggage compartment, depending on the version.



Note

- The warning triangle and the first aid box do not belong to the standard vehicle equipment.
- The first aid kit must comply with legal requirements.
- Observe the expiry date of the contents of the first aid kit. You should purchase a new first-aid kit as soon as possible after the shelf-life date of the first-aid kit has expired.
- Before acquiring accessories and emergency equipment see the instructions on ⇒ page 210.

Fire extinguisher

The fire extinguisher* is attached to the luggage compartment carpet by velcro.



Note

- The fire extinguisher does not belong to the standard vehicle equipment.
- The fire extinguisher must comply with legal requirements.
- Ensure that the fire extinguisher is fully functional. The fire extinguisher should, therefore, be checked regularly. The sticker on the fire extinguisher will inform you of the next date for checking.
- \bullet Before acquiring accessories and emergency equipment see the instructions on \Rightarrow page 210. \blacksquare

Luggage compartment

Stowing luggage

All luggage must be securely stowed.

Please observe the following points to ensure the vehicle handles well at all times:

- Distribute the load as evenly as possible.
- Place heavy objects as far forward in the luggage compartment as possible.
- Secure luggage in the luggage compartment with suitable straps on the fastening rings*.



WARNING

- Loose luggage and other loose items in the vehicle can cause serious injuries.
- Loose objects in the luggage compartment can suddenly move and change the way the vehicle handles.
- During sudden manoeuvres or accidents, loose objects in the passenger compartment can be flung forward, injuring vehicle occupants.
- Always store objects in the luggage compartment and secure with suitable straps. This is especially important for heavy objects.
- When you transport heavy objects, always keep in mind that a change in the centre of gravity can also cause changes in vehicle handling.
- Please observe information on safe driving => page 7, "Safe driving".

Safety First Operating instructions Tips and Maintenance Technical Data



Caution

Hard objects on the shelf could chafe against the wires of the heating element in the rear window and cause damage.



Note

The ventilation slots in front of the rear side windows must not be covered as this would prevent stale air being extracted from the vehicle.

Luggage compartment cover



Fig. 124 Using the luggage compartment cover

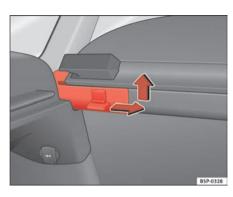


Fig. 125 Removing the luggage compartment cover

Using the luggage compartment cover

- Use the handle (A) to pull the cover back until you hear a "click"
 ⇒ fig. 124.
- Press the area marked "PRESS", and the cover is retrieved automatically.

To remove the luggage compartment cover

- Press the side pin in the direction of the arrow, lift the cover and remove it ⇒ fig. 125.
- Follow the instructions in reverse to fit it.



WARNING

Do not place heavy or hard objects on the luggage compartment cover, this will endanger the vehicle occupants in case of sudden braking.



aution

- Before closing the tailgate, ensure that the stowage compartment tray is correctly fitted.
- An overloaded boot could mean that the rear stowage tray is not correctly seated and it may be bent or damaged.
- If the boot is overloaded, remove the tray.



Note

• Ensure that, when placing items of clothing on the luggage compartment cover, rear visibility is not reduced. ■

Cargo divider net*

The partition grille prevents loose objects in the luggage compartment from being thrown forward into the passenger compartment (e.g. under sudden braking).

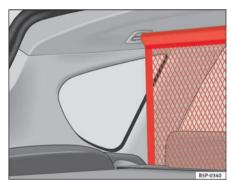


Fig. 126 Divider net



Fig. 127 Fastening rings to tighten the divider net

- Pass the retaining net up between the backrest and the roll-up cover, and place it in the ceiling allotments first into the right one and then into the left one ⇒ fig. 126.
- Hook the seat belts into the fastening rings before tightening the retaining net ⇒ fig. 127.

Roof carrier*

Please observe the following points if you intend to carry loads on the roof:

- For safety reasons, only luggage racks and accessories approved by SEAT should be used.
- It is essential that you follow the assembly instructions included with the bars exactly, being especially careful to position front and rear luggage compartment cover bars on the special housings on the longitudinal bars. You must also respect their position according to the direction of travel indi-


cated in the assembly manual. Not following these instructions may lead to marks on the longitudinal bars.

- Distribute the load evenly. A maximum load of 40 kg only is permitted for each roof carrier system support bar, the load must be distributed evenly over the entire length. However, the maximum load permitted for the entire roof (including the support system) of 75 kg must not be exceeded nor should the total weight of the vehicle be exceeded. See the chapter on "Technical Data".
- When transporting heavy or large objects on the roof, any change in the normal vehicle behaviour due to a change in the centre of gravity or an increased wind resistance must be taken into account. For this reason, a suitable speed and driving style must be used.
- For those vehicles fitted with a sunroof*, ensure that it does not interfere with the load on the roof carrier system when opened.

Heating, Ventilation and Air conditioning

Heating and ventilation

Controls and equipment

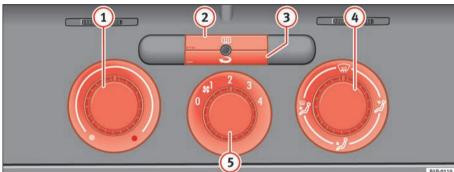

B5P-0110 Fig. 128 On the dash panel: Heater controls

- Using the controls ⇒ fig. 128 (1) and (4) and the control (5) you can set the temperature, air distribution and the turbine speed.
- To switch a function on or off, press the appropriate button (2) or
 When the function is activated, the display window in the lower left of the button is lit.

Temperature

With the regulator 1 the heating level is determined. The required temperature inside the vehicle cannot be lower than the ambient temperature.

Maximum heat output, which is needed to defrost the windows quickly, is only available when the engine has reached its operating temperature.

Rear window heating 🕮

This function (2) will be switched off automatically approximately 20 minutes after being switched on. It can also be switched off beforehand by pushing the button

Air recirculation mode •

Air recirculation mode \bigcirc prevents strong odours in the outside air from entering the vehicle interior, for example when passing through a tunnel or in queuing traffic \Rightarrow \triangle .

Safety First Operating instructions Tips and Maintenance Technical Dat

With low temperatures outside, the air recirculation increases the effectiveness of the heating system by heating the air inside the passenger compartment rather than the air from outside.

Air distribution

Control 4 for setting the flow of air in the required direction.

🖚 – Air distribution towards the windscreen. Air recirculation is, for safety reasons, **not** possible in this position.

🝰 – Air distribution to the upper body.

♣ – Air distribution to footwell

🖏 – Air distribution to the windscreen and the foot well.

Blower

The air flow can be set at four speeds with the control (3). The air flow should always be set at the lowest speed when driving slowly.



WARNING

- For road safety all windows must be clear of ice, snow, and condensation. This is essential to ensure good visibility. Please familiarise yourself with the correct operation of the heating and ventilation system, including the anti-fog/defrost functions for the windscreens.
- In air recirculation mode, no ambient air enters the vehicle interior. The
 windows can quickly fog over if the heating is switched off. Therefore, you
 should never leave the air recirculation mode switched on for longer
 periods, as this increases the risk of an accident.



Note

Please observe the general notes ⇒ page 160. ■

Climatic*

Control switches

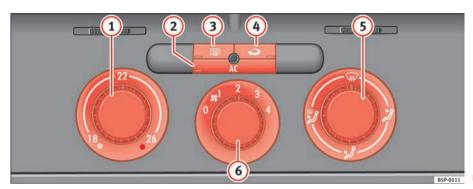


Fig. 129 On the dash panel: Climatic controls

The climatic or semi-automatic air conditioning system only works when the engine is running and the turbine is switched on.

- Using the controls ⇒ fig. 129 (1) and (5) and the control (6) you can set the temperature, air distribution and the turbine speed.
- To switch a function on or off, press the appropriate button 2,
 3 or 4. When the function is activated, the display window in the lower corner of the button is lit.
- Temperature selector ⇒ page 154
- ② Button (AC) Heating, ventilation and air-conditioning system on/off ⇒ page 154

- 3 Button Rear window heating. The heating will be switched off automatically approximately 20 minutes after switching on. It can also be switched off beforehand by pushing the button.
- (4) Button (○) Air recirculation mode ⇒ page 155
- (5) Air distribution control ⇒ page 154
- (6) Blower switch. There are four speed settings for the air flow. The air flow should always be set at the lowest speed when driving slowly.



For road safety all windows must be clear of ice, snow, and condensation. This is essential to ensure good visibility. Please familiarise yourself with the correct operation of the heating and ventilation system, including the anti-foq/defrost functions for the windscreens.



Note

Please observe the general notes ⇒ page 160. ■

Heating and cooling the interior

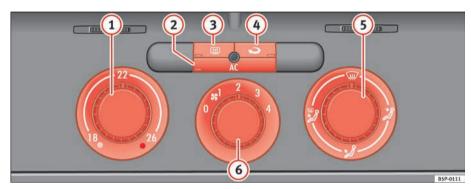


Fig. 130 On the dash panel: Climatic controls

Heating of the vehicle interior

- Turn the temperature selector ⇒ fig. 130 (1) clockwise to select the required temperature.
- Turn the blower switch to one of the settings 1-4.
- Set the air distribution control to the air flow configuration desired: (a) (towards the windscreen), (b) (towards the chest), (b) (towards the foot rest) and (c) (towards the windscreen and foot rest areas).

Cooling the passenger compartment

- Switch on the air conditioning using the button ⇒ page 153, fig. 129 (AC).
- Turn the temperature selector anti-clockwise until the desired cooling output is reached.
- Turn the blower switch to one of the settings 1-4.

Use the air distribution control to guide the flow of air in the required direction: (a) (to the windscreen), (b) (to the upper body), (c) (to the foot well) and (c) (to the windscreen and to the foot well).

Heating

Maximum heat output, which is needed to defrost the windows quickly, is only available when the engine has reached its operating temperature.

Air conditioner

When the air conditioning system is switched on, not only the temperature, but also the air humidity in the vehicle interior is reduced. This improves

comfort for the vehicle occupants and prevents misting of the windows when the ambient air humidity is high.

If the air conditioning system cannot be switched on this may be caused by the following reasons:

- The engine may not be running.
- The blower is switched off.
- The ambient air temperature is lower than +3°C.
- The air conditioning system compressor has been temporarily switched off because the engine coolant temperature is too high.
- The air conditioning fuse is faulty.
- \bullet Another fault in the vehicle. Have the air conditioning checked by a qualified workshop. \blacksquare

Air recirculation mode <a>

Air recirculation mode prevents fumes or unpleasant smells from entering the vehicle.

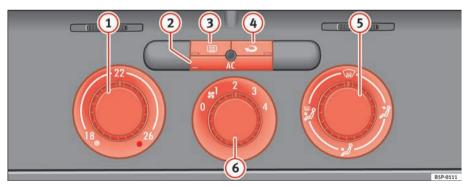


Fig. 131 On the dash panel: Climatic controls

afety First Operating instructions Tips and Maintenance Technical Data

Air recirculation mode ⇒ page 155, fig. 131 ○ prevents strong odours in the outside air from entering the vehicle interior, for example when passing through a tunnel or in queuing traffic.

With low temperatures outside, the air recirculation increases the effectiveness of the heating system by warming the air inside the passenger compartment rather than the cold air from outside.

With high ambient temperatures, the air recirculation increases the effectiveness of the air conditioning system by cooling the air inside the passenger compartment rather than the ambient air.

For reasons of safety, air recirculation is **not** possible when the control for air distribution is set to the windscreen setting .



WARNING

In air recirculation mode, no ambient air enters the vehicle interior. If the air conditioning system is switched off, the windows can quickly mist over. Therefore, you should never leave the air recirculation mode switched on for longer periods, as this increases the risk of an accident.

2C-Climatronic*

Control switches

The controls allow separate adjustment of air conditioning settings for the left and right.

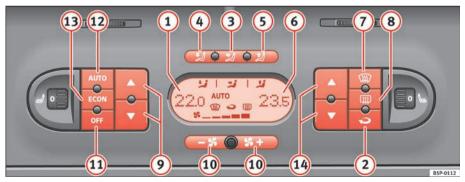


Fig. 132 On the dash panel: 2C Climatronic controls

The air conditioning system only works when the engine is running and the blower is switched on.

- Press the temperature control buttons ⇒ page 156, fig. 132 (9) or (14) in order to adjust the temperature on the left hand side or the right hand side respectively.
- The functions will be switched on when the buttons are pressed.
 When these functions are activated, they are indicated in the display. Also, the de-icing and rear heated window functions will turn on along with their corresponding yellow symbol. Press the button again to switch off the function.

The temperature can be adjusted separately for the left and right sides of the vehicle interior.

- 1 Display of the selected interior temperature for the left side.
- Button Manual air recirculation mode.
- Button (2) Central air distribution
- (4) Button 🕍 Downward air distribution
- (5) Button [3] Upward air distribution
- 6 Display of the selected interior temperature for the right side.
- ▼ Button ▼ defrost function for the windscreen. The air drawn in from outside the vehicle is directed at the windscreen. The air recirculation mode, if switched on, will be switched off as soon as the defrost function is switched on. At temperatures over 3°C, the air conditioning system will be switched on automatically and the blower speed will be increased by one level in order to dry the air. The button lights up yellow and the symbol appears in the display.
- 8 Button matched off automatically approximately 20 minutes after switching on. However, it may be turned off by pushing the button. The button lights up yellow and the symbol appears in the display.
- (9) Temperature selector for the left side ⇒ page 157

- (10) Blower control \Rightarrow page 158
- (1) Button (OFF) Switches the 2C-Climatronic on and off ⇒ page 158
- 12 Button (AUTO) Automatic temperature, ventilation and air distribution control ⇒ page 157
- Button ECON Switches heating, ventilation and air-conditioning system off
- 14) Temperature selector for the right side \Rightarrow page 157



WARNING

For road safety all windows must be clear of ice, snow, and condensation. This is essential to ensure good visibility. Please familiarise yourself with the correct operation of the heating and ventilation system, including the anti-foq/defrost functions for the windscreens.



Note

Please observe the general notes \Rightarrow page 160.

Automatic mode

In automatic mode air temperature, air flow and distribution are automatically regulated so that a specified temperature is attained as quickly as possible and then maintained.

The temperature can be adjusted separately for the left and right sides of the vehicle interior.

Switching on automatic mode

 Press the button (AUTO) ⇒ page 156, fig. 132. "AUTO" is shown on the display. Press the temperature selectors to set the desired temperatures for the left and right sides of the interior. We recommend 22°C (72°F).

A comfortable interior climate is quickly reached when a temperature of $+22^{\circ}\text{C}$ (72°F) is set in automatic mode. It can be changed as necessary to suit individual preferences or particular circumstances. It is possible to select interior temperatures from +16°C (61°F) to +29.5°C (86°F). These are approximate temperatures and the actual temperature may be slightly higher or lower depending on the ambient conditions.

Climatronic maintains a constant temperature level fully automatically. The temperature of the air supplied to the interior, the blower speed and the air distribution are regulated automatically. The system also allows for the effect of strong sunlight, so there is no need for manual adjustment. Therefore, **automatic mode** provides the best comfort for the vehicle occupants in virtually all conditions throughout the year.

Automatic mode is switched off whenever an adjustment is made using the buttons for the air distribution, air flow or (ECON). The temperature will continue to be regulated within the parameters manually selected by the user.

Manual mode

In manual mode you can adjust the air temperature, air flow and distribution as required.

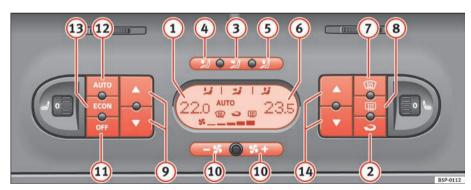


Fig. 133 On the dash panel: 2C Climatronic controls

Switching on manual mode

- To enter manual mode, press one of the buttons \Rightarrow fig. 133 (3) to

(5), ECON or press the air flow control (10). The symbol (AUTO) will disappear from the display.

Temperature

There are separate temperature selectors for the left and right sides of the vehicle interior. The selected temperature is displayed above the selector. It is possible to select interior temperatures from $+16^{\circ}\text{C}$ (61°F) to $+29.5^{\circ}\text{C}$ (86°F). These are approximate temperatures and the actual temperature may be slightly higher or lower depending on the ambient conditions.

If a temperature below 16°C (61°F) is selected, the display switches to ${\bf LO}$. In this setting the system runs at maximum cooling output and the temperature is not regulated.

If a temperature above 29.5°C (86°F) is selected the display switches to ${\bf HI}$. In this setting the system runs at maximum heating output and the temperature is not regulated.

Blower

The air flow may be adjusted freely using the control ①. Always have the blower running at a low setting to ensure a constant flow of fresh air into the vehicle. Pushing the button \$\frac{1}{2}\$ to the minimum -1, turns the Climatronic off.

Air distribution

The air distribution is adjusted using the buttons [2], [3] and [3]. It is also possible to open and close some of the air vents separately.

Switching the air conditioning system on and off

Pressing the button (ECON) switches off the air conditioning system to save fuel. The temperature continues to be regulated. The set temperature can then only be reached if it is higher than the ambient temperature.

Air recirculation mode

Air recirculation mode prevents fumes or unpleasant smells from entering the vehicle.

Air recirculation mode prevents strong odours in the ambient air from entering the vehicle interior, for example when passing through a tunnel or in queuing traffic.

With low temperatures outside, the air recirculation increases the effectiveness of the heating system by heating the air inside the passenger compartment rather than the air from outside.

With high ambient temperatures, the air recirculation increases the effectiveness of the air conditioning system by cooling the air inside the passenger compartment rather than the ambient air.

For reasons of safety, air recirculation is **not** possible when the control for air distribution is set to the windscreen setting \mathfrak{W} .



WARNING

In air recirculation mode, no ambient air enters the vehicle interior. If the air conditioning system is switched off, the windows can quickly mist over. Therefore, you should never leave the air recirculation mode switched on for longer periods, as this increases the risk of an accident.

General notes

The pollen filter

The pollution filter (a combined particulate filter and active carbon filter) serves as a barrier against impurities in the ambient air, including dust and pollen.

For the air conditioning system to work with maximum efficiency, the pollen filter must be replaced at the intervals specified in the Service Schedule.

If the filter loses efficiency prematurely due to use in areas with very high levels of air pollution, the pollen filter must be changed more frequently than stated in the Service Schedule.



Caution

- If you suspect that the air conditioning is damaged, switch off the air conditioning with button ECON to prevent further damage and have it checked by a qualified workshop.
- Repairs to the air conditioning system require specialist knowledge and special tools. Therefore, we recommend that you take the vehicle to a qualified workshop should problems occur.



No

- If the humidity and temperature outside the vehicle are high, **condensation** can drip off the evaporator in the cooling system and form a pool underneath the vehicle, this is completely normal and there is no need to suspect a leak.
- Keep the air intake slots in front of the windscreen free of snow, ice and leaves to ensure heating and cooling is not impaired, and to prevent the windows misting over.
- The air from the vents flows through the passenger compartment and is extracted by slots designed for this purpose. Do not cover these slots with articles of clothing or other objects.

- The air conditioning system operates most effectively with the windows and the sliding/tilting roof* closed. However, if the sun has heated up the vehicle, the air inside can be cooled more quickly by opening the windows for a short period.
- Do not smoke while air recirculation mode is on, as smoke drawn into the air conditioning system leaves a residue on the evaporator, producing a permanent unpleasant odour.
- It is advisable to connect the air conditioning at least once a month, to lubricate the system gaskets and prevent leaks. If a decrease in the cooling capacity is detected, an Authorised Service Centre should be consulted to check the system.

Driving

Address

Adjusting the steering wheel position

The height and reach of the steering wheel can be freely adjusted to suit the driver.

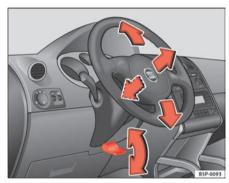


Fig. 134 Adjusting the steering wheel position

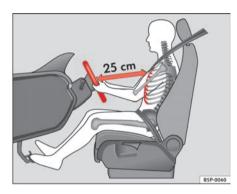


Fig. 135 Proper sitting position for driver

- Adjust the driver seat to the correct position.
- Push the lever under the steering column ⇒ fig. 134 down
 ⇒ ↑.
- Adjust the steering wheel in this way until the correct position is set ⇒ fig. 135.
- Then push the lever up again firmly \Rightarrow \triangle .



/ WARNING

- Incorrect use of the steering column adjustment function and an incorrect seating position can result in serious injury.
- To avoid accidents, the steering column should be adjusted only when the vehicle is stationary. Risk of accident.

Safety First Operating instructions Tips and Maintenance Technical Dat

WARNING (continued)

- Adjust the driver seat or steering wheel so that there is a distance of at least 25 cm between the steering wheel and your breast bone ⇒ page 161, fig. 135. If you fail to observe the minimum distance, the airbag will not protect you. Risk of fatal injury.
- If your physical constitution prevents you from maintaining the minimum distance of 25 cm, contact an Authorised Service Centre. The Authorised Service Centre will help you decide if special specific modifications are necessary.
- If you adjust the steering wheel so that it points towards your face, the driver airbag will not protect you properly in the event of an accident. Make sure that the steering wheel points towards your chest.
- When driving, always hold the steering wheel with both hands on the outside of the ring at the 9 o'clock and 3 o'clock positions. Never hold the steering wheel at the 12 o'clock position, or in any other manner (e.g. in the centre of the steering wheel, or on the inside of the rim). In such cases, you could receive severe injuries to the arms, hands and head.

Safety

Electronic stabilisation programme (ESP)*

ESP helps make driving safer in certain situations.



Fig. 136 Detail of the centre console: ESP button

The Electronic Stabilisation Program (ESP) contains the electronic differential lock (EDL) and the traction control system (TCS). The ESP function works in conjunction with the ABS. Both warning lamps will light up if the ESP or ABS systems are faulty.

The ESP is started automatically when the engine is started.

In specific circumstances where you require less traction, you can switch off the ESP by pressing button \Rightarrow fig. 136 (ESP).

For example:

- When driving with snow chains,
- when driving in deep snow or on loose surfaces,

 when rocking the vehicle backwards and forwards to free it from mud, for example.

You should press the button to switch the ESP back on when you no longer need wheel spin.

The TCS and EDL are also switched off if the ESP is switched off. That is to say, these systems are not available while ESP is not activated.

When does the ESP button light up or flash?

- It lights up when the ignition is switched on and should go out again after about 2 seconds.
- It will start flashing to indicate that ESP is counteracting an unstable driving condition.
- It will light up continuously if there is a malfunction in the ESP.
- It will light up continuously if the ESP is switched off.



WARNING

- The electronic stabilisation programme (ESP) cannot defy the laws of physics. This should be kept in mind, particularly on slippery and wet roads and when towing a trailer.
- Always adapt your driving style to suit the condition of the roads and the traffic situation. Do not let the extra safety afforded by ESP tempt you into taking any risks when driving, this can cause accidents.
- Please refer to the corresponding warning notes on ESP in ⇒ page 181, "Intelligent technology".

Ignition lock

Position of the ignition key

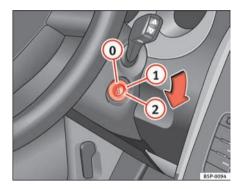


Fig. 137 Ignition key positions

Ignition switched off, steering lock (0)

In the position ⇒ fig. 137 the ignition and the engine are OFF and the steering may be locked.

For the **Steering lock** to operate without the ignition key, turn the steering wheel until it locks with an audible sound. You should always lock the steering wheel when you leave your vehicle. This will help prevent theft of the vehicle $\Rightarrow \bigwedge$.

Switching on the ignition or glow plug system (1)

Turn the ignition key to this position and let go of the key. If the key cannot be turned or is difficult to turn from position (a) to position (1), move the steering wheel (to take the load off the steering lock mechanism) until the key turns freely.

Safety First Operating instructions Tips and Maintenance Technical Date

Starting (2)

The engine is started when the key is in this position. Electrical components with a high power consumption are switched off temporarily.

Each time that the vehicle must be started, the ignition key must be turned to the position (0). The **repetitive start prevention lock** of the ignition prevents possible damage to the starter motor if the engine is already running.



/!\ WARNING

- Wait for the vehicle to come to a standstill before removing the ignition key from the lock. The steering lock could be activated immediately - Risk of accident!
- Always remove the key from the ignition lock when leaving the vehicle, even if you only intend to be gone for a short period. This is especially important if you must leave children or disabled people in the vehicle, they could accidentally start the engine or work electrical equipment such as the windows possibly resulting in an accident.
- Unsupervised use of the keys could result in the engine being started or electrical systems, such as the electric windows, being used. This can result in serious injury.



Caution

The starter motor will only work when the engine is stopped (ignition key position (2). ■

Electronic immobiliser

The immobiliser prevents unauthorised persons from driving the vehicle.

Inside the key there is a chip that deactivates the electronic immobiliser automatically when the key is inserted into the ignition.

The immobiliser will be activated again automatically as soon as you pull the key out of the ignition lock.

The engine can only be started using a genuine SEAT key with the correct code.



The vehicle cannot be operated properly if you do not have a genuine SEAT key.

Starting and stopping the engine

Starting petrol engines

The engine can only be started using a genuine SEAT key with the correct code.

- Move the gear lever to the neutral position and depress the clutch pedal fully and hold it in this position, the starter will then only have to turn the engine.
- Turn the ignition key to position ⇒ page 163 to start the engine.

 Let go of the ignition key as soon as the engine starts; the starter motor must not be allowed to run on with the engine.

After starting a very hot engine, you may need to press the accelerator briefly.

When starting from cold, the engine may be a little noisy for the first few seconds until oil pressure has built up in the hydraulic valve compensators. This is quite normal, and no cause for concern.

If the engine does not start immediately, switch off the starter after about 10 seconds and try again after about half a minute. If the engine still does not start, the fuel pump fuse should be checked \Rightarrow page 252, "Fuses".



WARNING

- Never start or run the engine in unventilated or closed rooms. The exhaust fumes contain carbon monoxide, an odourless and colourless poisonous gas. Risk of fatal accidents. Carbon monoxide can cause loss of consciousness. It can also cause death.
- Never leave the vehicle unattended if the engine is running.
- Never use "cold start sprays", they could explode or cause the engine to run at high revs. Risk of injury.



Caution

- When the engine is cold, you should avoid high engine speeds, driving at full throttle and over-loading the engine. Risk of engine damage.
- The vehicle should not be pushed or towed for more than approximately 50 metres to start the engine. Fuel could enter the catalytic converter and damage it.
- Before attempting to push-start or tow a vehicle to start it, you should first try to start it using the battery of another vehicle. Note and follow the instructions \Rightarrow page 268, "Jump-starting".



For the sake of the environment

Do not warm-up the engine by running the engine with the vehicle stationary. You should drive off as soon as you start the engine. This helps the engine reach operating temperature faster and reduces emissions.

Starting diesel engines

The engine can only be started using a genuine SEAT key with the correct code.

- Move the gear lever to the neutral position and depress the clutch pedal fully and hold it in this position, the starter will then only have to turn the engine.
- Turn the ignition key to the starting position.
- Turn the ignition key to position ⇒ page 163, fig. 137 ①. The indication lamp ™ will light for engine pre-heating.
- When the warning lamp goes out, turn the key to position 2 to start the engine. Do not press the accelerator.
- Let go of the ignition key as soon as the engine starts, the starter motor must not be allowed to run on with the engine.

When starting from cold, the engine may be a little noisy for the first few seconds until oil pressure has built up in the hydraulic valve compensators. This is quite normal, and no cause for concern.

If there are problems starting the engine, see \Rightarrow page 268.

afety First Operating instructions Tips and Maintenance Technical D

Glow plug system for the diesel engine

To avoid unnecessary load on the battery, do not use any other major electrical equipment while the glow plugs are pre-heating.

Start the engine as soon as the glow plug warning lamp \Rightarrow page 81 goes out.

Starting the engine after the fuel tank has been completely run dry

If the fuel tank has been completely run dry, it may take longer than normal (up to one minute) to start the engine after refuelling with diesel fuel. This is because the system must eliminate air first.



WARNING

- Never start or run the engine in unventilated or closed rooms. The exhaust fumes contain carbon monoxide, an odourless and colourless poisonous gas. Risk of fatal accidents. Carbon monoxide can cause loss of consciousness. It can also cause death.
- Never leave the vehicle unattended if the engine is running.
- Never use "cold start sprays", they could explode or cause the engine to run at high revs. Risk of injury.



Caution

- When the engine is cold, you should avoid high engine speeds, driving at full throttle and over-loading the engine. Risk of engine damage.
- The vehicle should not be pushed or towed for more than approximately 50 metres to start the engine. Fuel could enter the catalytic converter and damage it.
- Before attempting to push-start or tow a vehicle to start it, you should first try to start it using the battery of another vehicle. Note and follow the instructions \Rightarrow page 268, "Jump-starting".



For the sake of the environment

Do not warm-up the engine by running the engine with the vehicle stationary. You should drive off as soon as you start the engine. This helps the engine reach operating temperature faster and reduces emissions.

Switching off the engine

- Stopping the engine.
- Turn the ignition key to position \Rightarrow page 163, fig. 137 (0).

After the engine is switched off the radiator fan may run on for up to 10 minutes, even if the ignition is switched off. It is also possible that it will turn itself on once more if the temperature of the coolant increases due to the elimination of built up heat in the engine compartment or if this is heated due to prolonged exposure to the heat of the sun.



WARNING

- Never switch off the engine until the vehicle is stationary.
- The brake servo works only when the engine is running. You will need more strength to brake the vehicle when the engine is switched off. As you cannot brake in the normal manner, there is a greater risk of accidents and serious injury.
- The steering lock can engage immediately when the key is removed from the ignition lock. The vehicle cannot be steered. Risk of accident.



aution

If the engine has been driven hard for a long period, the engine could overheat when it is switched off. Risk of engine damage. For this reason, you should idle the engine for approx. 2 minutes before you switch it off. ■

Manual gearbox

Driving a car with a manual gearbox

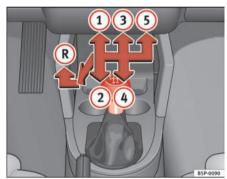


Fig. 138 Detail of the centre console: gear shift pattern of a 5-speed manual gearbox

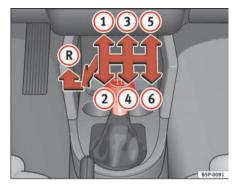


Fig. 139 Detail of the centre console: gear shift pattern of a 6-speed manual gearbox

Selecting the reverse gear

- The vehicle should be stationary with the engine idling. Press the clutch right down.
- Place the gear lever into neutral gate and push the lever all the way down.
- Slide the gearstick to the left, and then into the reverse position shown on the gearstick.

The reverse gear can only be engaged when the vehicle is stationary. When the engine is running, before engaging this gear wait about 6 seconds with the clutch pressed in fully in order to protect the gearbox.

The reversing lights come on when the reverse gear is selected and the ignition is on.

/!\ WARNING

- When the engine is running, the vehicle will start to move as soon as a gear is engaged and the clutch released.
- Never select the reverse gear when the vehicle is in motion. Risk of accident.



- Do not rest your hand on the gear lever when driving. The pressure of your hand could cause premature wear on the selector forks in the gearbox.
- When changing gear, you should always depress the clutch fully to avoid unnecessary wear and damage.
- Do not hold the car "on the clutch" on hills. This causes premature wear and damage to the clutch.

Automatic gearbox* / DSG automatic qearbox*

Selector lever positions

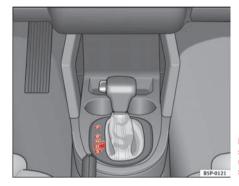


Fig. 140 Central console: selector lever for automatic gearbox / direct shift gearbox DSG

Selector lever positions indicated on the cover

- Parking position (lever locked).
- Reverse position.
- Neutral position (lever locked). This position is similar to the neutral position for manual gearboxes).
- Drive position (economic driving programme).
- Sports driving position.
- +/- Tiptronic driving position (this programme is similar to the operation of a manual gearbox).

Driving programmes

The automatic gearbox / direct shift gearbox has three programmes.

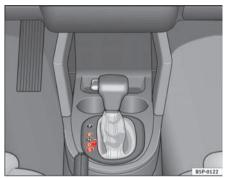


Fig. 141 Program selection

Selecting the economy programme

- This programme selects a higher gear earlier rather than remain in a lower gear.
- Put the selector lever into position **D** to drive forwards
- Put the selector lever into position R to reverse. This position is shared by all programmes for reversing.

Selecting the sport programme

- Move the lever to position **S**.

If you select the sport programme, **S**, the program is designed for a sports mode, that is, a programme which changes up at higher engine speeds to use

the full power of the engine. This programme is not recommended for use on the motorway or in the city.

Selecting the manual programme (tiptronic)

This programme allows driving similar to a manual gearbox.

You can access this program from the gear stick or from the paddles on the steering wheel, if this option exists \Rightarrow page 172.

Selector lever locking

The selector lever lock prevents gears from being engaged inadvertently, which would cause the vehicle to move.

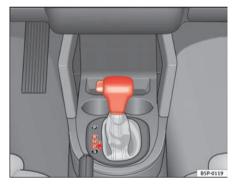


Fig. 142 Deactivating the lock

Releasing the selector lever lock

- Start the vehicle.

afety First Operating instructions Tips and Maintenance Technical Data

 Press and release the brake pedal, at the same time press the button on the selector lever.

The lock is only activated when the vehicle is stopped or at a speed of less than 5 km/h. At higher speeds, the lock is automatically released in position \mathbf{N} .

For rapid changes of position (e.g. from $\bf R$ to $\bf D$) the lever will not lock. If the lever remains in the position $\bf N$ more than one second then it is locked. With the automatic lock, the lever is prevented passing from $\bf P$ and $\bf N$ to any other quarter without first pressing the brake pedal.

The selector lever must be put in the position **P** in order to remove the key.

Driving with an automatic gearbox* / DSG automatic gearbox*

The drive and reverse gears are automatically engaged.



Fig. 143 Driving

Driving

- Press and hold the foot brake.
- Press on the button on the selector lever knob (on the left)
 ⇒ fig. 143.
- Select a gear for driving (**R**, **D** or **S**).
- Release the button and wait a few seconds for the gear to engage, a light jerk will be felt.
- Release the brake and accelerate.

Short stop

- Hold the vehicle stationary with the brake pressed down (for example at traffic lights). The selector lever does not need to be put into the positions P or N for this.
- Do not press the accelerator.

Parking the vehicle

- Press the foot brake and hold to bring the vehicle to a stop.
- Apply the handbrake firmly.
- Press in the button on the selector lever knob, move the lever to the position P and release the button.

Driving slowly

- Move the selector lever to the position **D** and press to the right to put the lever into Tiptronic mode.
- Press the gear lever towards (-) to select a lower gear.

Hill stop

- Hold the vehicle, in all cases, using the foot brake to prevent rolling back.
- Do not try to slow the vehicle using another forward gear (engine braking).

Descending gradients

- With the gear engaged, release the brake and accelerate.

The steeper the gradient the lower the gear must be for effective engine braking. For example, if 3rd gear is used on a very steep gradient, the engine braking is insufficient and vehicle accelerates. So that the engine speed does not become excessive, the gearbox changes to the next highest gear. Depress the brake pedal and move the selector lever to the Tiptronic gate to return to 3rd gear.



WARNING

- The driver should never leave the vehicle while the engine is running or with any gear selected. If for any reason you must leave the vehicle with the engine running, apply the handbrake and move the selector lever to position P.
- When the engine is running and the positions D, S or R are selected, it is necessary to hold the vehicle with the foot brake because the vehicle will creep at a low speed.
- Never accelerate while changing the position of the selector lever (risk of an accident).
- The selector lever must never be moved into the positions R or P while moving (risk of an accident).
- Before descending a steep gradient, reduce speed and use the Tiptronic programme to select a lower gear.

MARNING (continued)

- If you must stop on a hill, always hold the vehicle using the footbrake to avoid rolling back.
- The footbrake must not be held for a long period of time, not even lightly; continuous braking will cause overheating of the brakes and a reduction or even a loss of braking power and a significant increase in braking distances.
- Never allow the vehicle to coast down a gradient with the selector lever in positions N or D, even when the engine is not running. For descents, the use of the Tiptronic programme is recommended to keep the speed reduced.



Caution

- Never use the automatic gearbox to hold the vehicle stationary on a hill, even for short periods, as this may overheat the gearbox and cause damage. Apply the handbrake or depress the foot brake to hold the vehicle in position.
- If the vehicle is allowed to roll with the engine stopped but the selector in position N then the gearbox may be damaged because it will not be lubricated.

Using the Tiptronic gear system

The Tiptronic system allows the driver to manually select gears

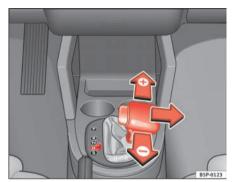


Fig. 144 Changing gear with Tiptronic



Fig. 145 Steering wheel with levers for automatic gearbox

General information about driving in Tiptronic mode

Changing gear with the gear stick

- Put the lever in position **D** and push to the right to enter the Tiptronic gate ⇒ fig. 144.
- Press the gear lever forwards (+) to select a higher gear.
- Press the gear lever back (-) to select a lower gear.

Changing gear with the steering wheel levers

- Pull right lever (+) towards the steering wheel to change up ⇒ fig. 145.
- Pull left lever (-) towards the steering wheel to change down
 ⇒ fig. 145.

Using the levers on the steering wheel, you can access manual driving mode regardless of the driving mode pre-selected.

General information about driving in Tiptronic mode

When accelerating, the automatic gearbox / direct shift gearbox goes into a higher gear a little before it reaches the maximum permitted revolutions.

If a lower gear is selected, the automatic gearbox / direct shift gearbox does not change down until the point is reached where the engine could no longer overrey.

If the "Tiptronic" is selected whilst the vehicle is in motion and the automatic gearbox / direct shift gearbox is in 3rd gear in selector lever position D, the "Tiptronic" will then also be in 3rd gear.



Note

• The gearbox controls on the steering wheel can operate with the gear stick in any position and with the vehicle in motion.

Handbrake

Using the handbrake

The handbrake should be applied firmly to prevent the vehicle from accidentally rolling away.



Fig. 146 Handbrake between the front seats

Always apply the handbrake when you leave your vehicle and when you park.

Applying the handbrake

- Pull the handbrake lever up firmly \Rightarrow fig. 146.

Releasing the handbrake

Pull the lever up slightly and press the locking knob in the direction of the arrow ⇒ fig. 146 and guide the handbrake lever down fully ⇒ ⚠.

Always apply the handbrake *firmly*. This prevents you driving with the handbrake applied $\Rightarrow \triangle$.

The handbrake warning lamp (1) lights up when the handbrake is applied and the ignition switched on. The warning lamp goes out when the handbrake is released.

If you drive faster than 6 km/h with the handbrake on, the following message* will appear in the instrument panel display: **HANDBRAKE ON.** Also, an audible warning is given.



WARNING

- Never use the handbrake to slow down the vehicle when it is in motion. The braking distance is considerably longer, as braking is only applied to the rear wheels. Risk of accident!
- If it is only partially released this will cause overheating of the rear brakes, which can impair the function of the brake system and could lead to an accident. This also causes premature wear on the rear brake pads/linings.



D Cautio

Always apply the handbrake before you leave the vehicle. The first gear should also be selected.

Parking

The handbrake should always be firmly applied when the vehicle is parked.

Always note the following points when parking the vehicle:

- Use the foot brake to stop the vehicle.
- Apply the handbrake.
- The first gear should also be selected.
- Switch off the engine and remove the key from the ignition lock.
 Turn the steering wheel slightly to engage the steering lock.

Additional notes on parking the vehicle on gradients:

Turn the steering wheel so that the vehicle would roll against the kerb if it did start to roll.

- If the vehicle is facing **downhill**, turn the front wheels so that they point *towards the kerb*.
- If the vehicle is facing **uphill**, turn the front wheels so that they point *away* from the kerb.
- Secure the vehicle as normal by applying the handbrake firmly and selecting first gear.



WARNING

 Take measures to reduce the risk of injury when you leave your vehicle unattended.

MARNING (continued)

- Never park where the hot exhaust system could ignite inflammable materials, such as dry grass, low bushes, spilt fuel etc.
- Never allow vehicle occupants to remain in the vehicle when it is locked. They would be unable to open the vehicle from the inside, and could become trapped in the vehicle in an emergency. In the event of an emergency, locked doors will delay assistance to occupants.
- Never leave children unsupervised in the vehicle. They could set the vehicle in motion, for example, by releasing the handbrake or the gear lever / selector lever.
- Depending on weather conditions, it may become extremely hot or cold inside the vehicle. This can be fatal.

Acoustic parking aid system*

Rear parking aid

The parking aid system will use an acoustic signal to warn of the approach of any object towards the rear of the vehicle.

Description

The acoustic parking aid system will measure the distance between the rear of the vehicle and any possible obstacle using four ultrasonic sensors located on the rear bumper. The measuring range of the sensors starts at **approximately and depending on the nature of the obstacle** at a distance of:

- side of the rear bumper: 0.8 m
- middle of the rear bumper: 1.5 m

Activation

The system is activated by engagement of the reverse gear. A brief acoustic signal confirms the activation and correct function of the system.

Reversing

The distance warning will begin as soon as an obstacle is detected by the system. The frequency of the bleeps emitted by the system will increase rapidly as the vehicle approaches the obstacle.

Within a short distance of about 25 cm, a continuous signal sounds (stop signal). The driver should not reverse any further.

Trailer towing

For vehicles fitted with a tow bar by the manufacturer, the parking aid system will not be activated by the engagement of the reverse gear when pulling a trailer, as the trailer's electric connecter will be plugged into the vehicle.

Possible faults

If a continuous bleep sounds for some seconds when the reverse gear is engaged, this indicates that there is a fault in the parking aid system.

If the fault continues until the ignition is turned off, the acoustic signal warning of the fault will not be emitted every time the system is reactivated (by engaging the reverse gear). Thus, the system ready indication will not sound either. Have the fault repaired by an Authorised Service Centre as soon as possible.

If there is no ready signal or no acoustic warning signal then the parking aid loudspeaker is faulty and may not warn of obstacles.

To ensure that the system works properly, the sensors must be kept clean and free of ice and snow.



WARNING

The sensors have blind spots in which obstacles may not be detected.

MARNING (continued)

- Always look out for small children and animals because the system will not always detect them. Always pay attention when reversing to avoid accidents.
- The parking aid is not a replacement for driver awareness. The driver must take full responsibility for parking and other manoeuvres.



Caution

- Please note that low obstacles detected by the system may no longer be registered by the sensors as the car moves closer, so the system will not give any further warning. Certain kinds of obstacles (such as wire fences, chains, thin posts or trailer draw bars, high kerbs or painted railings etc) may not always be detected by the system, so there is a risk of damaging the vehicle in such cases.
- In some cases, obstacles with uniform edges and bumps may not be detected immediately by the system due to their geometry. Take special care around this type of obstacle such as corners, rectangular objects, etc.., these can cause damage to the vehicle.
- Be especially carefully when manoeuvring into a corner between two perpendicular walls. Survey the approach of the wall to the side of the vehicle (using the mirrors)
- The parking aid system does not replace use of the mirrors for manoeuvres.
- Distant ultra-sonic sources (hammers, tyres, construction machinery, other vehicles with PDC) may interfere with the operation of the system.
- Periodic cleaning of the sensors, take care not to damage or scratch them.
 When cleaning with high pressure washers or steam cleaners, the sensors should be sprayed for only a very short period and from a distance of more than 10 cm.

Safety First Operating instructions Tips and Maintenance Technical Data

Cruise control system (CCS)*

Description

The cruise control system is able to maintain the set speed in the range from approx. 30 km/h to 180 km/h.

Once the speed setting has been saved, you may take your foot off the accelerator.



/ WARNING

It could be dangerous to use the cruise control system if it is not possible to drive at constant speed.

- For safety reasons the cruise control system should not be used in dense traffic, in sections with bends or where roads conditions are poor (e.g. aquaplaning, loose chippings, slippery surfaces, snow). Risk of accident.
- Always switch off the CCS when you have finished using it. This will prevent you using it by mistake.
- It is dangerous to use a set speed which is too high for the current road, traffic or weather conditions. Risk of accident.



The cruise control cannot maintain a constant speed when descending gradients. The vehicle will accelerate under its own weight. Use the foot brake to slow the vehicle.

Switching the cruise control system on and off

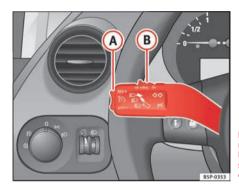


Fig. 147 Turn signal and main beam headlight lever switch and rocker switch for the cruise control

Switching on the system

- Push the switch \Rightarrow fig. 147 (B) to the left to ON.

Switching off system

- Either push the switch (B) to the right to OFF or turn the ignition off when the vehicle is stationary.

When the cruise control is on and a speed is programmed, the indicator on the instrument panel is lit.²⁰⁾

If the cruise control system is switched off, the \ symbol is switched off. The system will also be switched off fully when the 1st gear is selected.*

²⁰⁾ Depending on the model version

Setting speed*

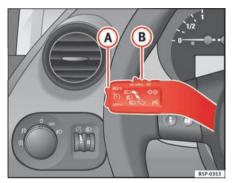


Fig. 148 Turn signal and main beam headlight lever switch and rocker switch for the cruise control

Press the lower part SET/- of the rocker switch ⇒ fig. 148 (A) once briefly when you have reached the speed you wish to set.

When you release the rocker switch, the current speed is set and held constant.

Adjusting set speed*

The speed can be altered without touching the accelerator or the brake.



Fig. 149 Turn signal and main beam headlight lever switch and rocker switch for the cruise control

Setting a higher speed

Press the upper part RES/+ of the rocker switch ⇒ fig. 149 (a) to increase the speed. The vehicle will continue to accelerate for as long as you keep the rocker switch pressed. When you release the switch, the new speed is stored.

Setting a lower speed

Press the lower part SET/- of the rocker switch (A) to reduce the speed. The vehicle will automatically reduce its speed for as long as you keep the switch pressed. When you release the switch, the new speed is stored.

When you increase speed with the accelerator and then release the pedal, the system will automatically restore the set speed. This will not be the case, however, if the vehicle speed is more than 10 km/h higher than the stored speed for longer than 5 minutes. The speed will have to be stored again.

Control of the set speed is switched off if you reduce speed by depressing the brake pedal. You can reactivate the control by pressing once on the upper part of the rocker switch **RES/+** \Rightarrow page 177, fig. 149 (A).



WARNING

It is dangerous to use a set speed which is too high for the current road, traffic or weather conditions. Risk of accident.

Switching off system temporarily*

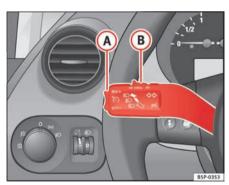


Fig. 150 Turn signal and main beam headlight lever switch and rocker switch for the cruise control

The cruise control system will be switched off in the following situations:

if the brake pedal is depressed,

- if the clutch pedal is depressed.
- if the vehicle is accelerated to over 180 km/h,
- when the lever (B) is moved to the position "CANCEL" without reaching the "OFF" position. Once the "CANCEL" operation is completed, the lever is released and returns to its initial position.

To resume the cruise control, release the brake or clutch pedal or reduce the vehicle speed to less than 180 km/h and press once on the upper part of the rocker switch **RES/+** \Rightarrow fig. 150 (A).



WARNING

It is dangerous to use a set speed which is too high for the current road, traffic or weather conditions. Risk of accident.

Turning off the cruise control system*

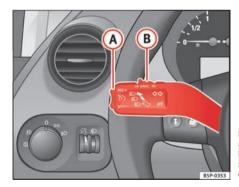


Fig. 151 Turn signal and main beam headlight lever switch and rocker switch for the cruise control

Vehicles with a manual gearbox

The system **is completely turned off** by moving the control **(B)** all the way to the right hand side (OFF engaged), or when the vehicle is stationary, ignition off.

Vehicles with automatic gearbox / DSG automatic gearbox*

To completely disengage the system, the selector lever must be placed in one of the following positions: **P**, **N**, **R** or **1** or with the vehicle stopped and the ignition turned off.

Tips and Maintenance

Intelligent technology

Brakes

Brake servo

The brake servo amplifies the pressure you apply to the brake pedal. It works **only when the engine is running**.

If the brake servo is not functioning due to a malfunction, or if the vehicle has to be towed, you will have to press the brake pedal considerably harder to make up for the lack of servo assistance.



WARNING

The braking distance can also be affected by external factors.

- Never let the vehicle coast with the engine switched off. Failure to do so could result in an accident. The braking distance is increased considerably as the brake servo does not function.
- If the brake servo is not functioning, for example if the vehicle is being towed, you will have to press the brake pedal considerably harder than normal.

Brake assist system (BAS)*

In an emergency, most drivers brake in time, but not with maximum force. This results in unnecessarily long braking distances.

The brake assist system intervenes here, if you press the brake pedal very quickly, the brake assist system registers an emergency situation. It then very quickly builds up the full brake pressure so that the ABS can be activated more quickly and efficiently, thus reducing the braking distance.

Do not reduce the pressure on the brake pedal. The brake assist system switches off automatically as soon as you release the brake.



WARNING

- The risk of accident is higher if you drive too fast, if you do not keep your distance to the vehicle in front, and when the road surface is slippery or wet. The increased accident risk cannot be reduced by the brake assist system.
- The brake assist system cannot defy the laws of physics. Slippery and wet roads are dangerous even with the brake assist system! Therefore, it is essential that you adjust your speed to suit the road and traffic conditions. Do not let the extra safety features tempt you into taking any risks when driving.

Safety First Operating instructions Tips and Maintenance Technical Data

Anti-lock brake system and traction control M-ABS (ABS and TCS)

Anti-lock brake system (ABS)

The anti-lock brake system prevents the wheels locking during braking.

The anti-lock brake system (ABS) is an important part of the vehicle's active safety system.

How the ABS works

If one of the wheels is turns too slowly in relation to the road speed, and is close to locking, the system will reduce the braking pressure for this wheel. The driver is made aware of this control process by a **pulsating of the brake pedal** and audible noise. This is a deliberate warning to the driver that one or more of the wheels is tending to lock and the ABS control function has intervened. In this situation it is important to keep the brake pedal fully depressed so the ABS can regulate the brake application. Do not "pump".

If you brake hard on a slippery road surface, the best possible control is retained as the wheels do not lock.

However, ABS will not necessarily guarantee shorter braking distances in *all* conditions. The braking distance could even be longer if you brake on gravel or on fresh snow covering a slippery surface.



WARNING

• The anti-lock brake system cannot defy the laws of physics. Slippery and wet roads are dangerous even with ABS! If you notice that the ABS is working (to counteract locked wheels under braking), you should reduce speed immediately to suit the road and traffic conditions. Do not let the extra safety features tempt you into taking any risks when driving.

MARNING (continued)

- The effectiveness of ABS is also determined by the tyres fitted
 ⇒ page 233.
- If the running gear or brakes are modified, the effectiveness of the ABS could be severely limited.

Traction control system (TCS)

The traction control system prevents the drive wheels from spinning when the car is accelerating.

Description and operation of the traction control system during acceleration (TCS)

TCS reduces engine power to help prevent the drive wheels of front-wheel drive vehicles losing traction during acceleration. The system works in the entire speed range in conjunction with ABS. If a malfunction should occur in the ABS, the TCS will also be out of action.

TCS helps the vehicle to start moving, accelerate and climb a gradient in slippery conditions where this may otherwise be difficult or even impossible.

The TCS is switched on automatically when the engine is started. If necessary, it may be turned on or off pushing the button on the centre console.

When the TCS is off, the warning lamp is lit. The TCS should normally be left switched on at all times. Only in exceptional circumstances, when slipping of the wheels is required, should it be disconnected for example

- With compact temporary spare wheel.
- When using the snow chains.
- When driving in deep snow or on loose surfaces
- When the vehicle is bogged-down, to free it by "rocking."

The TCS should be switched on again afterwards as soon as possible.



WARNING

- It must be remembered that TCS cannot defy the laws of physics. This should be kept in mind, particularly on slippery and wet roads and when towing a trailer.
- Always adapt your driving style to suit the condition of the roads and the traffic situation. Do not let the extra safety afforded by TCS tempt you into taking any risks when driving, this can cause accidents.



Caution

- In order to ensure that TCS function correctly, all four wheels must be fitted with the same tyres. Any differences in the rolling radius of the tyres can cause the system to reduce engine power when this is not desired.
- Modifications to the vehicle (e.g. to the engine, the brake system, running gear or any components affecting the wheels and tyres) could affect the efficiency of the ABS and TCS.

Electronic stabilisation programme (ESP)*

General notes

The electronic stabilisation programme increases the vehicle's stability on the road.

The electronic stabilisation programme helps to reduce the danger of skidding.

The electronic stabilisation programme (ESP) consists of ABS, EDL, TCS and Steering manoeuvre recommendations.

Electronic Stabilising Program (ESP)*

ESP reduces the danger of skidding by braking the wheels individually.

The system uses the steering wheel angle and road speed to calculate the changes of direction desired by the driver, and constantly compares them with the actual behaviour of the vehicle. If the desired course is not being maintained (for instance, if the car is starting to skid), then the ESP compensates automatically by braking the appropriate wheel.

The forces acting on the braked wheel bring the vehicle back to a stable condition. If the vehicle tends to oversteer, the system will act on the front wheel on the outside of the turn.

Steering manoeuvre recommendations

This is a complementary safety function included in the ESP This function aids the driver to better stabilize the vehicle in a critical situation. For example, in case of sudden braking surface with varied adherence, the vehicle will tend to destabilize its trajectory to the right to or to the left. In this case the ESP recognizes the situation and helps the driver with a counter steering manoeuvre from the power steering.

This function simply provides the driver with a recommended manoeuvre in critical situations.

The vehicle doesn't steer itself with this function, the driver has full control of the vehicle at all times.



/!\ WARNING

- It must be remembered that ESP cannot defy the laws of physics. This should be kept in mind, particularly on slippery and wet roads and when towing a trailer.
- Always adapt your driving style to suit the condition of the roads and the traffic situation. Do not let the extra safety afforded by ESP tempt you into taking any risks when driving, this can cause accidents.

Tips and Maintenance Safety First



Caution

- In order to ensure that ESP functions correctly, all four wheels must be fitted with the same tyres. Any differences in the rolling radius of the tyres can cause the system to reduce engine power when this is not desired.
- Modifications to the vehicle (e.g. to the engine, the brake system, running gear or any components affecting the wheels and tyres) could affect the efficiency of the ABS, EDL, ESP and TCS.



Note

To disconnect using the ESP button \Rightarrow page 162.

Anti-lock brake system (ABS)

The anti-lock brake system prevents the wheels locking during braking \Rightarrow page 182. \blacksquare

Electronic differential lock (EDL)*

The electronic differential lock helps prevent the loss of traction caused if one of the driven wheels starts spinning.

EDL helps the vehicle to start moving, accelerate and climb a gradient in slippery conditions where this may otherwise be difficult or even impossible.

The system will control the revolutions of the drive wheels using the ABS sensors (in case of an EDL fault the warning lamp for ABS lights up) ⇒ page 78.

At speeds of up to approximately 80 km/h, it is able to balance out differences in the speed of the driven wheels of approximately 100 rpm caused by

a slippery road surface on *one side* of the vehicle. It does this by braking the wheel which has lost traction and distributing more driving force to the other driven wheel via the differential.

To prevent the disc brake of the braked wheel from overheating, the EDL cuts out automatically if subjected to excessive loads. The vehicle will continue to function normally without EDL. For this reason, the driver is not informed that the EDL has been switched off.

The EDL will switch on again automatically when the brake has cooled down.



WARNING

- When accelerating on a slippery surface, for example on ice and snow, press the accelerator carefully. Despite EDL, the driven wheels may start to spin. This could impair the vehicle's stability.
- Always adapt your driving style to suit road conditions and the traffic situation. Do not let the extra safety afforded by EDL tempt you into taking any risks when driving, this can cause accidents.



Caution

Modifications to the vehicle (e.g. to the engine, the brake system, running gear or any components affecting the wheels and tyres) could affect the efficiency of the EDL \Rightarrow page 210.

The traction control system (TCS)

The traction control system prevents the drive wheels from spinning when the car is accelerating \Rightarrow page 182. \blacksquare

Four-wheel drive

On quattro models the engine power is distributed to all four wheels

General notes

The four-wheel drive system operates automatically. The engine power is distributed to all four wheels. It automatically adjusts to driving style and road conditions.

The four-wheel drive is specially designed to complement the superior engine power of your SEAT. This combination gives the car exceptional handling and performance capabilities – both on normal roads and in more difficult conditions, such as snow and ice.

Winter tyres

Thanks to its four-wheel drive, your car will have plenty of traction in winter conditions, even with the standard tyres. Nevertheless, we still recommend that winter tyres or all-season tyres should be fitted on all four wheels when winter road conditions are expected, mainly because this will give a better braking response.

Snow chains

On roads where snow chains are mandatory, this also applies to cars with four-wheel drive.

Changing tyres

On vehicles with four-wheel drive, all four tyres must have the same rolling circumference \Rightarrow page 237.



WARNING

Even with four-wheel drive, you should always adjust your speed to suit
the conditions. Do not let the extra safety features tempt you into taking
any risks when driving. Failure to do so could result in an accident.

WARNING (continued)

- The braking capability of your vehicle is limited by the tyres' grip. It is therefore no different from a car without four-wheel drive. So do not be tempted to drive too fast on icy or slippery roads just because the car still has good acceleration in these conditions. Failure to do so could result in an accident.
- On wet roads bear in mind that the front wheels may start to "aquaplane" and lose contact with the road if the car is driven too fast. If this should happen, there will be no sudden increase in engine speed to warn the driver, as with a front-wheel drive car. Therefore, you should adjust your speed to the road conditions. Failure to do so could result in an accident.

Brakes

What factors can have a negative effect on the brakes?

New brake pads

New brake pads do not provide optimal performance during the first 400 km, they must be "run in". However, the reduced braking capacity may be compensated by pressing on the brake pedal a little harder. Avoid overloading the brakes during run-in.

Wear

The rate of wear on the **brake pads** depends a great deal on how you drive and the conditions in which the vehicle is operated. Negative factors are, for instance, city traffic, frequent short trips or hard driving with abrupt starts and stops.

Wet roads: road salt

When the velocity is *over* 80 km/h, and the windscreen wipers are *on*, the brake system moves the pads towards the brake discs for a few seconds. This

occurs - without warning to the driver - in regular intervals and requires a more rapid response from the brakes when driving on wet roads.

In certain conditions, such as in heavy rain, or after washing the car or driving through water, the full braking effect can be delayed by moisture (or in winter by ice) on the discs and brake pads. The brakes should be dried by pressing the pedal to restore full braking effect.

The effectiveness of the brakes can also be temporarily reduced if the car is driven for some distance without using the brakes when there is a lot of salt on the road in winter. In this case, the layer of salt on the brake discs and pads has to wear off before braking.

Corrosion

There may be a tendency for dirt to build up on the brake pads and corrosion to form on the discs if the car is used infrequently, or if you only drive low mileages without using the brakes very much.

If the brakes are not used frequently, or if corrosion has formed on the discs, it is advisable to clean off the pads and discs by braking firmly a few times from a moderately high speed $\Rightarrow \triangle$.

Faults in the brake system

If the brake pedal travel should ever increase *suddenly*, this may mean that one of the two brake circuits has failed. Drive immediately to the nearest qualified workshop and have the fault rectified. On the way to the dealer, be prepared to use more pressure on the brake pedal, and allow for longer stopping distances.

Low brake fluid level

Malfunctions can occur in the brake system if the brake fluid level is too low. The brake fluid level is monitored electronically.

Brake servo

The brake servo amplifies the pressure you apply to the brake pedal. The brake servo works only when the engine is running.



WARNING

- When applying the brakes to clean off deposits on the pads and discs, select a clear, dry road. Be sure not to inconvenience or endanger other road users. Risk of accident.
- Ensure the vehicle does not move while in neutral, when the motor is stopped. Failure to do so could result in an accident.



Caution

- Never let the brakes "drag" by leaving your foot on the pedal when you do not really intend to brake. This overheats the brakes, resulting in longer stopping distances and greater wear.
- Before driving down a long, steep gradient, it is advisable to reduce speed and change to a lower gear (or move the selector lever to a lower gear position if your car has automatic transmission). This makes use of engine braking and prolongs the service life of the brakes. If you still have to use the brakes, it is better to brake firmly at intervals than to apply the brakes continuously.



✓ No¹

- If the brake servo is not functioning due to a malfunction, or if the vehicle has to be towed, you will have to press the brake pedal considerably harder to make up for the lack of servo assistance.
- If you wish to equip the car with accessories such as a front spoiler or wheel covers, it is important that the flow of air to the front wheels is not obstructed, otherwise the brakes can overheat.

Braking effect and braking distance

The braking effect and braking distance are influenced by driving situations and road conditions.

The efficiency of the brakes depends directly on the **brake pad** wear. The rate of wear of the brake pads depends to a great extent on the conditions under which the vehicle is operated and the way the vehicle is driven. If you often drive in town, drive short distances or have a sporty driving style, we recommend that you have the thickness of your brake pads checked by an Approved Service Centre more frequently than recommended in the Maintenance Programme.

If you drive with **wet brakes**, for example, after crossing areas of water, in heavy rainfall or even after washing the car, the effect of the brakes is lessened as the brake discs are wet or even frozen (in winter): The brakes should be dried by pressing the pedal to restore full braking effect.



WARNING

Longer braking distances and faults in the brake system increase the risk of accidents.

- New brake pads must be run in and do not have the correct friction during the first 200 km. However, the reduced braking capacity may be compensated by pressing on the brake pedal a little harder. This also applies when new brake pads are fitted.
- If brakes are wet or frozen, or if you are driving on roads which have been gritted with salt, braking power may set in later than normal.
- On steep descents if the brakes are excessively used they will over heat. Before driving down a long steep gradient, it is advisable to reduce speed and change to a lower gear (or move the selector lever to a lower gear if your vehicle has automatic transmission). This makes use of engine braking and relieves the brakes.

WARNING (continued)

- Never let the brakes "rub" by applying light pressure. Continuous braking will cause the brakes to overheat and will increase the braking distance. Apply and then release the brakes alternately.
- Never let the vehicle coast with the engine switched off. The braking distance is increased considerably as the brake servo does not function.
- Very heavy use of the brakes may cause a vapour lock if the brake fluid is left in the system for too long. This impairs the braking effect.
- Non-standard or damaged front spoilers could restrict the airflow to the brakes and cause them to overheat. Observe the relevant instructions before purchasing accessories \Rightarrow page 210, "Modifications".
- If a brake circuit fails, the braking distance will be increased considerably. Contact a qualified workshop immediately and avoid unnecessary journeys.

Power steering (servotronic*)

The power steering assists the driver when turning the steering wheel (with the engine running).

The power steering assists the driver by reducing the force needed to turn the steering wheel. In cars equipped with servotronic* power steering the degree of power assistance is regulated *electronically* according to road speed.

If a fault should occur in the *servotronic* system the power steering* will still operate. The degree of power assistance will, however, no longer adapt to different speeds. If the electronic regulating system is not working properly, this is most noticeable when turning the steering wheel at low speeds (for instance when parking) – more effort will be required than usual. The fault should be corrected by a qualified workshop as soon as possible.

The power steering does not work if the engine is off. In this case the steering wheel is very hard to turn.

If the steering is held at its *turning limit* when the car is stationary, this will place an excessive load on the power steering system, Turning the steering wheel to its limits places a load on the system, which causes noise. It will also reduce the idling speed of the engine.



Caution

When the engine is running, do not turn the steering wheel to its limits for more than 15 seconds. Otherwise, there is a risk of damaging the power steering.



Note

- If the power steering should fail at any time or the engine is switched off (for instance when being towed), the car can still be steered. However, more effort will be required to turn the steering wheel.
- If the system is leaking or malfunctioning, please take the car to a qualified workshop as soon as possible.
- The power steering requires a special hydraulic fluid. The container is located in the engine compartment (front left). The correct fluid level in the reservoir is important for the power steering to function properly. The hydraulic fluid level is checked at the Inspection Service.

Driving and the environment

Running-in

Running in a new engine

The engine needs to be run-in over the first 1,500 km.

Up to 1,000 kilometres

- Do not drive faster than three guarters of top speed.
- Do not accelerate hard.
- Avoid high engine revolutions.
- Do not tow a trailer.

From 1,000 to 1,500 km

Speeds can be *gradually* increased to the maximum road speed or maximum permissible engine speed (rpm).

During its first few hours of running, the internal friction in the engine is greater than later on when all the moving parts have bedded in.



For the sake of the environment

If the engine is run in gently, the life of the engine will be increased and its oil consumption reduced.

Running in tyres and brake pads

New tyres should be run-in carefully for the first 500 km. New brake pads should be run-in carefully for the first 200 km.

During the first 200 km, you can compensate for the reduced braking effect by applying more pressure to the brake pedal. If you need to make an emergency stop, the braking distance will be longer with new brake pads than with brake pads which have been run-in.



WARNING

- New tyres do not give maximum grip to start with, and require runningin. This may cause an accident. Drive particularly carefully in the first 500 km.
- New brake pads must be "run in" and do not have the correct friction properties during the first 200 km. However, the reduced braking capacity may be compensated by pressing on the brake pedal a little harder.

Exhaust gas emission control system

Catalytic converter*

To conserve the useful life of the catalytic converter

- Always use unleaded petrol.
- Do not run the fuel tank dry.

Tips and Maintenance

- For engine oil changes, do not replenish with too much engine oil ⇒ page 221, "Topping up engine oil ".".
- Never tow the vehicle to start it, use jump leads if necessary \Rightarrow page 268.

If you notice misfiring, uneven running or loss of power when the vehicle is moving, reduce speed immediately and have the vehicle inspected at the nearest qualified workshop. In general, the exhaust warning lamp will light up when any of the described symptoms occur \Rightarrow page 72. If this happens, unburnt fuel can enter the exhaust system and escape into the environment. The catalytic converter can also be damaged by overheating.



/ WARNING

The catalytic converter reaches very high temperatures! Fire hazard!

- Never park where the catalytic converter could come into contact with dry grass or inflammable materials under the vehicle.
- Do not apply additional underseal or anti-corrosion coatings to the exhaust pipes, catalytic converter or the heat shields on the exhaust system. These materials could catch fire when the vehicle is driven.



Never fully drain the fuel tank, in this case, the irregularity of the fuel supply may cause ignition problems. This allows unburnt fuel to enter the exhaust system, which could cause overheating and damage the catalytic converter.



For the sake of the environment

Even when the emission control system is working perfectly, there may be a smell of sulphur from the exhaust under some conditions. This depends on the sulphur content of the fuel used. Quite often the problem can be remedied by changing to another brand of fuel.

Diesel engine particulate filter*

The diesel engine particulate filter eliminates soot produced by burning diesel.

The diesel engine dust filter eliminates most of the soot from the exhaust gas system. Under normal driving conditions, the filter cleans itself. If the driving conditions do not allow the filter to clean itself (for example, multiple short trips) the filter will be obstructed by dust and pollen and the indicator for the diesel engine particulate filter indicator will light ⇒ page 79.



WARNING

 The diesel engine particulate filter may reach extremely high temperatures: it should not enter into contact with flammable materials underneath the vehicle. Failure to comply could result in fire.



Caution

Vehicles equipped with a diesel engine particulate filter must not be refueled using biodiesel (RME), given that the fuel system may be damaged.

Driving abroad

Notes

For driving abroad, the following must be taken into consideration:

• For vehicles fitted with a catalytic converter ensure that unleaded petrol is available for the journey. See the chapter "Refuelling". Automobile organisations will have information about service station networks selling unleaded fuel.

• In some countries it is possible that a vehicle model is sold under conditions where some spare parts are not available or that the Authorised Service Centres may only carry out limited repairs.

SEAT importers and distributors will gladly provide information about the technical preparation of your vehicle in addition to necessary maintenance and repair possibilities.

Adhesive strips for headlights

If you have to drive a right-hand drive vehicle in a left-hand drive country, or vice versa, the asymmetric dipped beam headlights will dazzle oncoming traffic.

To prevent dazzling, you must apply stickers to certain parts of the headlight lenses. Further information is available from your Authorised Service Centre.

In vehicles with self-directing headlights, the rotation system must previously be disconnected. To do this please go to a specialist workshop.

Adjusting headlights for driving on the left

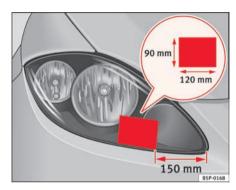


Fig. 152 Right headlight

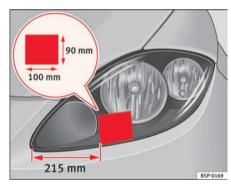


Fig. 153 Left headlight

On the right hand side headlight, if you are changing from driving on the right-hand side to the left-hand side \Rightarrow fig. 152.

afety First Operating instructions Tips and Maintenance Technical Da

On the left hand side headlight, if you are changing from driving on the left-hand side to the right-hand side ⇒ page 191, fig. 153. ■

Covering headlights for driving on the right

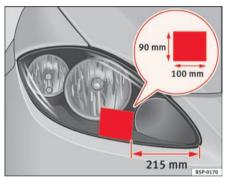


Fig. 154 Right headlight

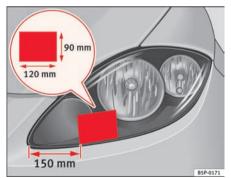


Fig. 155 Left headlight

On the right headlight, if you are changing from driving on the left-hand side to the right-hand side.

On the left headlight, if you are changing from driving on the left-hand side to the right-hand side. \blacksquare

Covering simple headlights for driving on the right

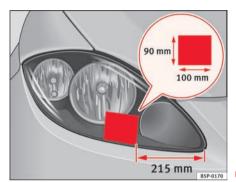


Fig. 156 Right headlight

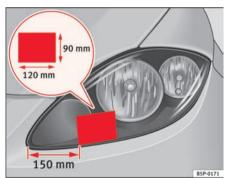


Fig. 157 Left headlight

On the right headlight, if you are changing from driving on the left-hand side to the right-hand side.

On the left headlight, if you are changing from driving on the left-hand side to the right-hand side.

Adjustments for Bixenon headlights for driving on the left

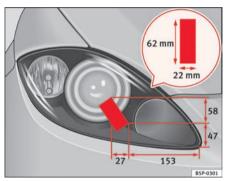


Fig. 158 Right headlight

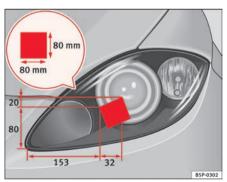


Fig. 159 Left headlight



On the right hand side headlight, if you are changing from driving on the right-hand side to the left-hand side \Rightarrow page 193, fig. 158.

On the left hand side headlight, if you are changing from driving on the left-hand side to the right-hand side ⇒ page 193, fig. 159. ■

Driving economically and with respect for the environment

General Observations

Fuel consumption, environmental pollution and wear to the engine, brakes and tyres depends in large part on your driving style. Fuel consumption may be reduced from 10 to 15 % by driving defensively and economically. Below we will give you some suggestions to "alleviate" some of the strain in the environment and, at the same time, your wallet.

Anticipate the traffic situation well in advance

A vehicle uses most fuel when accelerating. When you anticipate the situation, you will have to brake less often and, thus, accelerate less. If it is possible, let the vehicle roll with a **gear engaged**, for example, if you see a red light ahead.

Change gear early to save energy

An effective way of saving fuel is to change up quickly through the gears. Running the engine at high rpm in the lower gears uses an unnecessary amount of fuel.

Manual gearbox: Change from first to second gear as quickly as possible. We recommend that, whenever possible, you change to a higher gear upon reaching 2,000 rpms.

Automatic gearbox: Accelerate slowly and avoid the "kick-down" position.

Avoid driving at high speed

We advise you not to drive at the top speed permitted by the vehicle. Fuel consumption, exhaust emissions and noise levels all increase very rapidly at higher speeds. Driving at moderate speeds will help to save fuel.

Avoid idling

It is worthwhile switching off the engine when waiting in a traffic jam, at level crossings or at traffic lights with a long red phase. The fuel saved after only 30 - 40 seconds is greater than the amount of fuel needed to restart the engine.

The engine takes a very long time to warm up when it is running at idling speed. Mechanical wear and pollutant emissions are also especially high during this initial warm-up phase. It is therefore best to drive off immediately after starting the engine. Avoid running the engine at high speed.

Periodic maintenance

Periodic maintenance work guarantees that, before beginning a journey, you will not waste fuel. A well-serviced engine gives you the benefit of **improved fuel efficiency** as well as maximum reliability and an enhanced resale value.

A maladjusted engine may mean an increase of 10 % over normal fuel consumption.

Check the **oil level** every time you fill the tank. **Oil consumption** depends to a great extent on the engine load and engine speed. It is quite normal that the oil consumption of a new engine only reaches its lowest level after a certain mileage. This means that the oil consumption can only be properly assessed after about 5,000 km. Depending on your personal driving style, oil consumption can be up to 0.5 litres per 1,000 km.

Avoid short journeys

To reduce the consumption and emission of polluting gases, the engine and the exhaust filtration systems should reach the optimum **service temperature**.

With the engine cold, fuel consumption is proportionally higher. The engine does not warm up and fuel consumption does not regularise until having driven some *four* kilometres. This is the reason why we recommend avoiding short trips wherever possible.

Maintain the correct tyre pressures

Bear in mind that keeping the tyres at an adequate pressure saves fuel. If the tyre pressures are just 1 bar too low, this can put the fuel consumption up by as much as 5 %. Due to the greater rolling resistance, under-inflation also increases **tyre wear** and impairs handling.

The tyre pressures should always be checked when the tyres are *cold*.

Do not use **winter tyres** all through the year: they will increase fuel consumption by up to 10 %.

Avoid unnecessary weight

Every kilo of **extra weight** will put up the fuel consumption, so it is worth checking the luggage compartment occasionally to make sure that no unnecessary loads are being transported.

Save electrical energy

The engine activates the alternator, which produces electricity. With the need for electricity, fuel consumption is also increased. Because of this, always turn off electrical equipment when you do not need them. Examples of equipment that use a lot of electricity are: the fan at high speeds, the rear window heating or the seat heaters*.

Logbook

A good way of keeping a check on **fuel consumption** is to take regular notes. You will be able to note the variations (both positive and negative) and react accordingly.

Environmental friendliness

Environmental protection is a top priority in the design, choice of materials and production of your new Seat

Design measures for economical recycling

- Joints and connections designed for ease of dismantling
- Modular construction to facilitate dismantling
- Increased use of single-grade materials
- Plastic parts and elastomers are labelled in accordance with ISO 1043, ISO 11469 and ISO 1629

Choice of materials

- Nearly all materials used can be recycled
- Similar types of plastics grouped together for easy recycling
- Recycled materials used in manufacture
- Reduced "vapour emissions" from plastics
- CFC-free refrigerant in air conditioning

Compliance with prohibited materials laws: cadmium, asbestos, lead, mercury, chrome VI.

Manufacturing methods

- Use of recycled material for manufacturing plastic parts
- Solvent-free cavity sealing
- Solvent-free wax for protecting the vehicles in transit
- Solvent-free adhesives
- No CFCs used in production

- Surplus materials used extensively for energy conversion and building materials
- Overall water consumption reduced
- Heat recovery systems
- Water-soluble paint ■

Trailer towing

Instructions to follow

Your vehicle may be used to tow a trailer when fitted with the correct equipment.

If the car is supplied with a **factory-fitted** towing bracket it will already have the necessary technical modifications and meet the statutory requirements for towing a trailer. For the **after-market fitting** of a trailer towing bracket see \Rightarrow page 199.

Connector

Your vehicle is fitted with a 12-pin connector for the electrical connection between the trailer and the vehicle.

If the trailer has a **7-pin plug** you will need to use an adapter cable. This is available from any SEAT dealer.

Trailer weight / draw bar loading

Never exceed the authorised towing limit. If you do not load the trailer up to the maximum permitted trailer weight, you can then climb correspondingly steeper gradients.

The maximum trailer weights listed are only applicable for **altitudes** up to 1,000 m above sea level. With increasing altitude the engine power and therefore the vehicle's climbing ability are impaired because of the reduced air density. The maximum trailer weight has to be reduced accordingly. The weight of the vehicle and trailer combination must be reduced by 10% for every further 1,000 m (or part thereof). The gross combination weight is the actual weight of the laden vehicle plus the actual weight of the laden trailer. Where possible, operate the trailer with the maximum permitted **draw bar weight** on the ball joint of the towing bracket, but do not exceed the specified limit.

The figures for **trailer weights** and **draw bar weights** that are given on the data plate of the towing bracket are for certification purposes only. The correct figures for your specific model, which may be *lower* than these figures for the towing bracket, are given in the registration documents \Rightarrow Section "Technical data".

Distributing the load

Distribute loads in the trailer so that heavy objects are as near to the axle as possible. Loads carried in the trailer must be secured to prevent them moving.

Tyre pressure

Set tyre pressure to the maximum permissible pressure shown on the sticker on the inside of the fuel tank flap. Set the tyre pressure of the trailer tyres in accordance with the trailer manufacturer's recommendations.

Exterior mirrors

Check whether you can see enough of the road behind the trailer with the standard mirrors. If this is not the case you should have additional mirrors fitted. Both exterior mirrors should be mounted on hinged extension brackets. Adjust the mirrors to give sufficient vision to the rear.



!\ WARNING

Never transport people in a trailer. This could result in fatal accidents.



J Not

• Towing a trailer places additional demands on the vehicle. We recommend additional services between the normal inspection intervals if the vehicle is used frequently for towing a trailer.

Safety First Operating instructions Tips and Maintenance Technical Data

● Find out whether special regulations apply to towing a trailer in your country. ■

Ball coupling of towing bracket*

Depending on the model version, the spherical head on the trailer hook may be stored in the tool box.

The ball coupling is provided with instructions on fitting and removing the ball coupling of the towing bracket.



WARNING

The towing bracket ball coupling must be stored securely in the luggage compartment to prevent them being flung through the vehicle and causing injury.



Note

 By law, the ball coupling must be removed if a trailer is not being towed and it obscures the number plate.

Driving tips

Driving with a trailer always requires extra care.

Weight distribution

The weight distribution of a loaded trailer with an unladen vehicle is very unfavourable. However, if this cannot be avoided, drive extra slowly to allow for the unbalanced weight distribution.

Speed

The stability of the vehicle and trailer is reduced with increasing speed. For this reason it is advisable not to drive at the maximum permissible speed in unfavourable road, weather or wind conditions. This applies especially when driving downhill.

You should always reduce speed immediately if the trailer shows the slightest sign of **snaking**. Never try to stop the "snaking" by increasing speed.

Always brake in good time. If the trailer has an **overrun brake**, apply the brakes *gently at first* and then firmly. This will prevent the jerking that can be caused by the trailer wheels locking. Select a low gear in good time before going down a steep descent. This enables you to use the engine braking to slow down the vehicle.

Heating

At very high temperatures and during prolonged ascents, driving in a low gear and high engine speed, always monitor the temperature indicator for the coolant \Rightarrow page 55.

Electronic Stabilisation Program*

Do not switch off the ESP* when towing a trailer. The ESP* makes it easier to stabilise if the trailer starts to snake. ■

Fitting a towing bracket*

It is possible to fit a towing bracket to the rear of the vehicle.

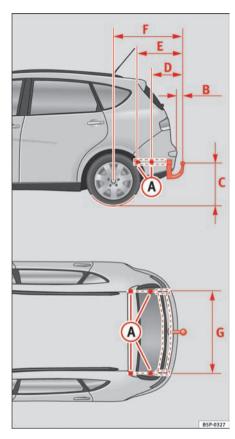


Fig. 160 Attachment points for towing bracket

If a towing bracket is to be fitted after the vehicle is purchased, this must be completed according to the instructions of the towing bracket manufacturer.

The attachment points for the towing bracket (A) are underneath the vehicle.

The distance between the centre of the ball coupling and the ground should never be lower than the measurement indicated when the vehicle is fully loaded including the maximum resting weight.

Measurement for securing the towing bracket:

- (B) 65 mm (minimum)
- (c) 350 mm to 420 mm (fully laden vehicle)
- (D) 344 mm
- 531 mm
- 1.044 mm
- 1,040 mm

Fitting a towing bracket

- Driving with a trailer implies additional work for the vehicle. Therefore, before fitting a towing bracket, please contact an Authorised Service Centre to check whether your cooling system needs modification.
- Observe the legal requirements in your country (e.g. the fitting of a separate warning lamp).
- Certain vehicle components, e.g. the rear bumper must be removed and reinstalled. The towing bracket securing bolts must be tightened using a torque wrench, and an electrical socket must be used to connect to the vehicle's electrical system. This requires specialist knowledge and tools.
- The figures in the illustration show the dimensions and attachment points which must be observed if you are retrofitting a towing bracket.



WARNING

Towing brackets should be fitted by specialists.

↑ WARNING (continued)

- If the towing bracket is incorrectly installed, there is serious danger of an accident.
- For your own safety, please observe the instructions provided by the manufacturer of the towing bracket.



If the electrical socket is incorrectly installed, this could cause damage to the vehicle's electrical system.

Cleaning and caring for your vehicle

General notes

Regular washing and care help maintain the value of your vehicle.

Regular care

Regular and expert care helps to **maintain the value** of the vehicle. This may also be one of the requirements for acknowledging warranty claims in the event of corrosion or paint defects.

The best way to protect the car against environmental contaminants is to wash and wax it *frequently*. The longer substances such as insects, bird droppings, resinous tree sap, road dirt, industrial deposits, tar, soot or road salt and other aggressive materials remain on the vehicle, the more damage they do to the paintwork. High temperatures (for instance in strong sunlight) further intensify the corrosive effect.

After the period when salt is put on the roads it is important to have the **underside** of the vehicle washed thoroughly.

Car care products

Car care products are available from your Authorised Service Centre. Keep the product instructions until you have used up the product.



WARNING

- Car care products can be toxic. For this, they must always be kept closed in their original container. Keep out of children's reach. Failure to comply could result in poisoning.
- Always read and observe the instructions and warnings on the package before using car care products. Improper use could damage your health or

Δ

WARNING (continued)

your vehicle. The use of certain products may produce noxious vapours; these should be used in well ventilated areas.

- Never use fuel, turpentine, engine oil, nail varnish remover or other volatile fluids. These are toxic and highly flammable. There is a fire / explosion risk.
- Before you wash your vehicle, or carry out any maintenance, switch off the engine, apply the handbrake firmly and remove the key from the ignition.



Caution

Never attempt to remove dirt, mud or dust if the surface of the vehicle is dry. Never use a dry cloth or sponge for cleaning purposes. This could damage the paintwork or glass on your vehicle. Soak dirt, mud or dust with plenty of water.



For the sake of the environment

- When purchasing car care products, try to select ones which are not harmful to the environment.
- Left over car care products should not be disposed of with ordinary household waste. Observe the disposal information on the package. ■

Care of the vehicle exterior

Automatic car wash tunnel

The car can normally be washed without problem in an automatic car wash

The paint is so durable that the car can normally be washed without problems in an automatic car wash. However, the effect on the paint depends to a large extent on the design of the car wash, the brushes used, the filtering of the wash water and the type of detergents and wax solutions used, etc.

Before going through a car wash, be sure to take the usual precautions such as closing the windows and sunroof. There is nothing to note apart from that.

If the vehicle has special accessories such as spoilers or a roof carrier or twoway radio aerial, etc., it is advisable to consult the car wash operator.

After the car has been washed, the **brakes** could hesitate to respond as the brake discs and pads will be wet, or even frozen in winter. "Dry" the brakes by braking several times.



WARNING

Moisture, ice and salt on the brakes may affect braking efficiency. Risk of accident.



Caution

If an automatic car wash tunnel is used, before entering the tunnel, put the aerial down parallel to the roof and do not tighten to avoid damage.

Washing by hand

Washing the vehicle

- First soften the dirt with plenty of water and rinse off.
- Clean the vehicle with a soft sponge, a glove or a brush. Start on the roof and work your way down. Use only light pressure.
- Rinse the sponge or glove as much as possible.
- Special car shampoo should only be used for very stubborn dirt.
- Clean the wheels, sill panels etc. last using a different sponge or glove.
- Rinse the vehicle thoroughly with water.
- Dry the surface of the vehicle gently using a chamois leather.
- If it is cold, dry the rubber seals and the surfaces they touch with a cloth to prevent them freezing. Apply silicone spray to the rubber seals.

After cleaning the vehicle

 If possible, avoid sudden braking directly after washing the vehicle. You must "dry" the brakes by applying the brakes carefully several times ⇒ page 187, "Braking effect and braking distance".



WARNING

• The ignition must always be switched off before the vehicle is washed.

↑ WARNING (continued)

- Protect your hands and arms from cuts on sharp metal edges when cleaning the underbody, the inside of the wheel housings etc. Risk of injury.
- . Moisture, ice and salt on the brakes may affect braking efficiency. Risk of accident.



Caution

- Never attempt to remove dirt, mud or dust if the surface of the vehicle is dry. Never use a dry cloth or sponge for cleaning purposes. This could scratch the paintwork or glass on your vehicle.
- Washing the vehicle in low temperatures: if the vehicle is rinsed with a hose, do not direct the water into the lock cylinders or the gaps around the doors, luggage compartment, or bonnet. Otherwise there is a risk of malfunction.



For the sake of the environment

In the interests of environmental protection, the car should be washed only in specially provided wash bays. This prevents toxic, oil-laden waste water entering the sewerage system. In some districts, washing vehicles anywhere else may be prohibited.



Do not wash the vehicle in direct sunlight.

Washing the car with a high pressure cleaner

Be particularly careful when using a high pressure cleaner!

- Always observe the instructions for the high-pressure cleaner. particularly those concerning the **pressure** and the **spraying** distance.
- Increase the spraying distance for soft materials and painted bumpers.
- Do not use a high pressure cleaner to remove ice or snow from windows \Rightarrow page 204.
- Never use concentrated iet nozzles or so-called "dirt blasters" $\Rightarrow \Lambda$.
- If possible, avoid sudden braking directly after washing the vehicle. You must "dry" the brakes by applying the brakes carefully several times \Rightarrow page 187.



WARNING

- Never wash tyres with a concentrated jet or cylindrical jet ("rotating") nozzle"). Even at large spraying distances and short cleaning times, visible and invisible damage can occur to the tyres. This may cause an accident.
- Moisture, ice and salt on the brakes may affect braking efficiency. Risk of accident.



- Do not use water hotter than 60°C. This could damage the car.
- To avoid damage to the vehicle, maintain a sufficient distance from sensitive materials for example: flexible hoses, plastic, sound proofing, etc. This is

Tips and Maintenance

especially important for bumpers painted in the same colour as the vehicle. The closer the nozzle is to the surface, the greater the wear on the material.

- Do not use polishes and hard wax on painted parts with a matte finish or on plastic parts.
- Do not polish your vehicle in a sandy or dusty environment.

Waxing the car

Regular waxing protects the paintwork.

You need to apply wax to your car if water does not form small drops and run off the paintwork when it is *clean*.

Good quality *hard wax* is available from your Authorised Service Centre.

A good coat of wax helps to protects the paintwork from environmental contaminants \Rightarrow page 201. It is also effective in protecting against minor scratches.

Even if a wax solution is used regularly in the car wash, it is advisable to protect the paint with a coat of hard wax at least twice a year.

Polishing the paintwork

Polishing brings back gloss to the paintwork.

Polishing is only necessary if the paint has lost its shine, and the gloss cannot be brought back by applying wax. Polish can be obtained from your Authorised Service Centre.

The car must be waxed after polishing if the polish used does not contain wax compounds to seal the paint \Rightarrow page 204, "Waxing the car".



Caution

To prevent damage to the paintwork:

Caring for plastic parts

Solvents will damage plastic parts.

If normal washing fails to clean plastic parts, clean them with special **solvent-free** plastic cleaning and care products.



Caution

- The use of liquid air freshener directly over the air vents of the vehicle may damage the plastic parts if the liquid is accidentally spilled.
- Cleaning products which contain solvents will damage the material.

Cleaning windows and exterior mirrors

Cleaning the windows

- Moisten the windows with commercially available, alcohol based glass cleaner.
- Dry the windows with a clean chamois leather or a lint-free cloth.

Removing snow

- Use a small brush to remove snow from the windows and mirrors.

Removing ice

Use a de-icer spray.

Use a clean cloth or chamois leather to dry the windows. Chamois leathers which have been used on painted surfaces are not suitable for use on windows. They will be soiled with wax deposits which would smear the windows.

If possible use a de-icing spray to remove ice. If you use an ice scraper, push it in one direction only. Do not move it to and fro.

Use window cleaner or a silicone remover to clean off rubber, oil, grease and silicone deposits.

Wax deposits have to be removed with a special cleaner which is available from your Authorised Service Centre. Wax deposits on the windscreen could cause the wiper blades to judder. A window cleanser specifically for removing wax will stop the blades juddering if added to the windscreen washer fluid. Grease removing cleansers will not remove wax deposits.



Caution

- Never use warm or hot water to remove snow and ice from windows and mirrors. This could cause the glass to crack!
- The heating element for the rear window is located on the inner side of the window. To prevent damage, do not put stickers over the heating elements on the inside of the window.

Cleaning windscreen wiper blades

Clean wiper blades are essential for clear vision.

- Use a soft cloth to remove dust and dirt from the windscreen wiper blades.
- 2. Use window cleanser to clean the windscreen wiper blades. Use a sponge or a cloth to remove stubborn stains.

Care of rubber seals

If rubber seals are well looked after, they will not freeze so quickly.

- 1. Use a soft cloth to remove dust and dirt from the rubber seals.
- 2. Apply a specialist care product to the rubber seals.

The weather strips on the doors, windows, bonnet and rear lid will remain pliable and last longer if they are treated with a suitable care product (for example silicone spray).

Caring for rubber seals will also prevent premature ageing and leaks. The doors will be easier to open. If rubber seals are well looked after, they will not freeze so quickly in winter.

Door lock cylinders

The door lock cylinders can freeze up in winter.

To de-ice the lock cylinders you should only use spray with lubricating and anti-corrosive properties. \blacksquare

Cleaning chrome parts

- 1. Clean chrome parts with a damp cloth.
- 2. Polish chrome parts with a soft, dry cloth.

afety First Operating instructions Tips and Maintenance Technical Data

If this does not provide satisfying results, use a specialist **chrome cleaning product**. Chrome cleaning products will remove stains and coatings from the surface.



Caution

To prevent scratching chrome surfaces:

- Never use an abrasive care product on chrome.
- Do not clean or polish chrome parts in a sandy or dusty environment.

Steel wheels

- Clean steel wheels regularly using a separate sponge.

Use an industrial cleanser to remove brake dust. Any damage to the paint on steel wheels should be repaired before the metal starts to rust.



WARNING

- Never wash tyres with a cylindrical jet. Even at large spraying distances and short cleaning times, visible and invisible damage can occur to the tyres. This may cause an accident.
- Moisture, ice and salt on the brakes may affect braking efficiency. Risk
 of accident. If possible, avoid sudden braking immediately after washing
 the vehicle. You must "dry" the brakes by applying the brakes carefully
 several times ⇒ page 187, "Braking effect and braking distance".

Cleaning alloy wheels

Every two weeks

- Wash salt and brake dust from alloy wheels.
- Use an acid free detergent to clean the wheels.

Every three months

Apply a hard wax compound to the wheels.

Alloy wheels require regular attention to preserve their appearance. It is important to remove road salt and brake dust by washing the wheels at regular intervals, otherwise the finish will be impaired.

Always use an acid-free detergent for alloy wheels.

Car polish or other abrasive agents should not be used. If the protective coating is damaged, e.g. by stone impact, the damaged area should be repaired immediately.



WARNING

- Never wash tyres with a cylindrical jet. Even at large spraying distances and short cleaning times, visible and invisible damage can occur to the tyres. This may cause an accident.
- Moisture, ice and salt on the brakes may affect braking efficiency. Risk
 of accident. If possible, avoid sudden braking immediately after washing
 the vehicle. You must "dry" the brakes by applying the brakes carefully
 several times ⇒ page 187, "Braking effect and braking distance".

Underbody sealant

The underside of the vehicle is coated to protect it from corrosion and damage.

The protective coating could be damaged when driving. We recommend that the protective coating under the body and on the running gear should be checked, and reinstated if necessary, before and after the winter season.

We recommend that repair work and additional anti-corrosion work is carried out by your Authorised Service Centre.



WARNING

Do not apply underseal or anti-corrosion coatings to the exhaust pipes, catalytic converter or the heat shields on the exhaust system. The heat of the exhaust system or the engine could cause them to ignite! This is a fire hazard.

Cleaning the engine compartment

Take special care when cleaning the engine compartment.

Anti-corrosion treatment

The engine compartment and the surface of the power unit are given anticorrosion treatment at the factory.

Good corrosion protection is particularly important in winter when the car is frequently driven on salted roads. To prevent the salt corroding the vehicle, the entire engine compartment should be thoroughly cleaned before and after the salting period.

Your Authorised Service Centre is able to provide the correct cleaning and preserving products and has the necessary equipment. For this reason, we recommend having this work performed by them.

The anti-corrosion protection is usually removed if the engine compartment is cleaned with grease removing solutions, or if you have the engine cleaned. If this job is carried out, you should ensure that all surfaces, seams, joints and components in the engine compartment are given anti-corrosion treatment afterwards.



WARNING

- \bullet When working in the engine compartment, always observe the safety warnings \Rightarrow page 215.
- Switch off the engine, apply the parking brake firmly and always remove the key from the ignition before you open the bonnet.
- Allow the engine to cool before you clean the engine compartment.
- Do not clean the underside of vehicle, wheel arches without protecting your hands and arms. You may cut yourself on sharp-edged metal parts.
 Failure to comply could result in injury.
- Moisture, ice and salt on the brakes may affect braking efficiency. Risk of accident. If possible, avoid sudden braking immediately after washing the vehicle.
- Never touch the radiator fan. It is temperature-controlled and could start automatically, even when the key is removed from the ignition!



For the sake of the environment

Fuel, grease and oil deposits could be removed when the engine is washed. The polluted water must be cleaned in an oil separator. For this reason, engine washing should be carried out only by a qualified workshop or a suitable filling station.

Care of the vehicle interior

Cleaning plastic parts and the dash panel

- Use a clean, damp cloth to clean plastic parts and the dash panel.
- If this does not provide satisfactory results, use a special solvent-free plastic cleaning product.



WARNING

Never clean the dash panel and surface of the airbag module with cleansers containing solvents. Solvents cause the surface to become porous. If the airbag inflates, disintegrating plastic parts can cause substantial injuries.



Caution

Cleaning products which contain solvents will damage the material.

Cleaning wooden trim*

- Clean the wooden trim with a clean cloth moistened with water.
- If this does not provide satisfactory results, use a gentle soap solution.



Caution

Cleaning products which contain solvents will damage the material.

Cleaning cloth seat covers and fabric trim

Cloth seat covers and fabric trim on the doors, headlining etc. can be cleaned with a special interior cleanser or with dry foam and a soft brush.

Cleaning leather*

Normal cleaning

 Moisten a cotton or woollen cloth with water and wipe over the leather surfaces.

Cleaning stubborn stains

- More stubborn dirt can be removed using a mild soap solution (pure liquid soap; two tablespoons diluted in one litre of water) and a cloth.
- Do not let the water soak through the leather or soak into the seams.
- Then wipe off with a soft, dry cloth.

Leather care

- The leather should be treated regularly (about twice a year) with a special leather-care product, which is available from your Authorised Service Centre.
- Apply these products very sparingly.
- Then wipe off with a soft, dry cloth.

SEAT does everything possible to preserve the special qualities of leather, as a natural product. Because of the natural properties of the specially selected hides employed, the finished leather has a certain sensitivity to grease and dirt, etc. so a degree of care is required in everyday use and when looking after the leather.

Dust and grit in the pores and seams can scratch and damage the surface. If the vehicle is left standing in the sun for long periods, the leather should be protected against direct sunlight to prevent it from fading. However, slight colour variations in high-quality natural leather are normal.



Caution

- Do not use solvents, wax polish, shoe cream, spot removers or similar products on leather.
- To avoid damage, stubborn stains should be removed by a qualified workshop. ■

Cleaning seat belts

A dirty belt may stop the seat belt working properly.

Keep the seat belts clean and check all seat belts regularly.

Cleaning seat belts

- Carefully pull the dirty seat belt right out and leave it out.
- Clean the dirty seat belts with a *gentle* soap solution.
- Allow the seat belt fabric to dry.
- Do not roll up the seat belt until it is dry.

If large stains form on the belts the belt will not retract correctly into the automatic belt retractor.



/!\ WARNING

- Do not use chemical cleaning agents on the seat belts, as this can impair the strength of the webbing. Ensure that the belts do not come into contact with corrosive fluids.
- Check the condition of all seat belts at regular intervals. If you notice that the belt webbing, fittings, retractor mechanism or buckle of any of the belts is damaged, the belt must be replaced by a specialist workshop.
- Do not attempt to repair a damaged seat belt yourself. The seat belts must not be removed or modified in any way.



Caution

After cleaning, allow seat belts to dry completely before rolling them up. Otherwise the belt retractors could become damaged.

Accessories, parts replacement and modifications

Accessories and parts

Always consult an Authorised Service Centre before purchasing accessories and parts.

Your vehicle is designed to offer a high standard of active and passive safety.

Before purchasing accessories and parts, and before making technical changes to your car, we recommend that you consult your Authorised Service Centre.

SEAT dealerships will be happy to provide you with the latest information about the use, legal requirements and recommendations from the manufacturer regarding accessories and parts.

We recommend you use only **SEAT Approved Accessories**[®] and **SEAT Approved Spare Parts**[®]. This way, SEAT can guarantee that the product in question is suitable, reliable and safe. Authorised Service Centres have the necessary experience and facilities to ensure that parts are installed correctly and professionally.

Despite continuous observation of the market, SEAT is not able to assess the reliability, safety and suitability of parts **not approved by SEAT**. For this reason SEAT cannot assume responsibility for any non-genuine parts used, even if these parts have been approved by an official testing agency or are covered by an official approval certificate.

Any **equipment subsequently installed** which has a direct effect on the vehicle and/or the way it is driven (e.g. cruise control system or electronically-controlled suspension) must be approved by SEAT for use in your vehicle and bear the **e** mark (the European Union's authorisation symbol).

If any **additional electrical components** are fitted which do not serve to control the vehicle itself (for instance a refrigerator box, laptop or ventilator

fan, etc.), these must bear the **CE** mark (European Union manufacturer conformity declaration).



WARNING

Accessories, for example telephone holders or drink holders, should never be fitted on the covers of, or within the working range of, the airbags. If they are, there is a danger of resulting injury if the airbag is triggered in an accident.

Modifications

Modifications must always be carried out according to our specifications.

Unauthorised modifications to the electronic components or software in the vehicle may cause malfunctions. Due to the way the electronic components are linked together in networks, other systems may be affected by the faults. This can seriously impair safety, lead to excessive wear of components, and also invalidate your vehicle registration documents.

SEAT Authorised Service Centres cannot be held liable for any damage caused by modifications and/or work performed incorrectly.

For this reason, we recommend that all work should be performed by an Authorised Service Centre using **genuine and SEAT** [®] **approved parts and accessories**



WARNING

Incorrectly performed modifications or other work on your vehicle can lead to malfunctions and cause accidents.

Roof aerial*

The vehicle may be fitted with a foldable* and anti-theft* aerial that may be positioned parallel to the roof.

To fold down

Unscrew the rod, position parallel to the roof and tighten once again.

To return to working position

Continue in the reverse order to that given in the previous instruction.



Caution

If an automatic car wash tunnel is used, before entering the tunnel, put the aerial down parallel to the roof and do not tighten to avoid damage. ■

Mobile telephones and radiotelephones

First consult your Authorised Service Centre if you wish to use a mobile telephone or a two-way radio with a transmitting power in excess of 10 watts. Here you will receive information concerning the technical possibilities for retrofitting this equipment.

Mobile telephones and two-way radios should be fitted only by a qualified workshop, for example an Authorised Service Centre.



WARNING

- Always concentrate primarily on driving. If you are distracted while driving you could have an accident.
- Never attach the telephone mountings to the surfaces covering the airbag units or within the range of the airbags, danger of injury if the airbag is triggered.



Note

Please observe the operating instructions of your mobile telephone / two-way radio.

Checking and refilling levels

Refuelling

The tank flap is released manually. The tank holds approximately 55 litres. On vehicles with four-wheel drive, the fuel tank has a capacity of approx. 60 litres.

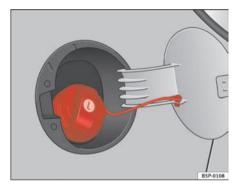


Fig. 161 Tank flap open

Unscrewing the tank cap

- Lift the lid.
- Grip the cap and then insert the key into the lock and rotate 180° to the left.
- Unscrew the cap, turning it anti-clockwise.

Closing the tank cap

- Screw the tank cap to the right, until the point of feeling a "click".
- Turn the key in the lock, without releasing the cap in the clockwise direction 180°.
- Remove the key and close the flap until it clicks into place. The tank cap is secured with an anti-loss attachment

The tank flap is at the rear of the vehicle on the right.

If the automatic filler nozzle is operated correctly, it will switch itself off as soon as the tank is "full". Never attempt to fill beyond this point, as this will fill the expansion chamber. Fuel may leak out if ambient conditions are warm.

The correct fuel grade for your vehicle is given on a sticker on the inside of the fuel tank flap. Further notes on fuel can be found.



WARNING

- Fuel is highly inflammable and can cause serious burns and other injuries.
 - Never smoke or use any naked flame when filling the fuel tank of the vehicle, or a spare fuel canister, with fuel. This is an explosion hazard.
 - Follow legal requirements for the use of spare fuel canisters.
 - For safety reasons we do not recommend carrying a spare fuel canister in the vehicle. The canister could be damaged in an accident and leak.
- If, in exceptional circumstances, you have to carry a spare fuel canister, please observe the following points:

↑ WARNING (continued)

- Never fill the spare fuel canister inside the vehicle or on it. An electrostatic charge could build up during filling, causing the fuel fumes to ignite. This may be fatally explosive. Always place the canister on the ground to fill it.
- Insert the fuel nozzle into the mouth of the canister as far as possible.
- If the spare fuel canister is made of metal, the filling nozzle must be in contact with the canister during filling. This helps prevent an electrostatic charge building up.
- Never spill fuel in the vehicle or in the luggage compartment. Fuel vapours are explosive. Danger of death.



Caution

- Fuel spills should be removed from the paintwork immediately.
- Never run the tank completely dry. An irregular fuel supply could cause misfiring. As a result, unburnt fuel could enter the catalytic converter and cause damage.



For the sake of the environment

Do not try to put in more fuel after the automatic filler nozzle has switched off: this may cause the fuel to overflow if it becomes warm.

Petrol

Petrol types

The correct petrol types are listed on a sticker inside the fuel tank flap.

Only unleaded petrol, corresponding to the standard DIN EN 228, may be used for vehicles with catalytic converters (EN = "European Standard").

Fuel types are differentiated by the octane rating, e.g. 91, 95, 98 RON (RON = "Regulation Octane Number, unit for determining the knock resistance of petrol"). You may use petrol with a higher octane number than the one recommended for your engine. However, this has no advantage in terms of fuel consumption and engine power. If, in exceptional circumstances, the correct octane rating is not available:

- For engines which require Premium unleaded petrol (95 RON) the following is valid: Regular unleaded fuel with 91 RON can also be used. This can, however, result in a slight loss of power under certain driving conditions.
- For engines which require Premium unleaded petrol (98 RON) the following is valid: Premium unleaded fuel with 95 RON can also be used. This can, however, result in a slight loss of power under certain driving conditions. - If premium unleaded petrol is not available, the engine can be run on regular unleaded petrol with 91 RON as an "emergency measure". In this case only use moderate engine speeds and a light throttle. Avoid using full throttle. Fill up with premium petrol as soon as possible.



 Petrol that follows EN 228 may be mixed with small quantities of ethanol. However, the so-called "bioethanol fuels" available at commercial establishments with reference E50 or E85, which contain a high percentage of ethanol, may **not** be used, as they will damage the fuel system.

- Even one tankfull of leaded fuel would permanently impair the efficiency of the catalytic converter.
- High engine speed and full throttle can damage the engine when using petrol with an octane rating lower than the correct grade for the engine.



For the sake of the environment

Just one full tank of leaded fuel would seriously impair the efficiency of the catalytic converter. ■

Petrol additives

Petrol additives improve the quality of the petrol.

The quality of the petrol influences running behaviour, performance and service life of the engine. For this reason you should use good quality petrol containing additives. These additives will help to prevent corrosion, keep the fuel system clean and prevent deposits from building up in the engine.

If good quality petrol with additives is not available or engine problems occur, the required additives must be added during refuelling.

Diesel

Diesel*

Diesel fuel must correspond to DIN EN 590 (EN = "European standard"). It must have a cetane number (CN) of at least 51. The cetane number indicates the ignition quality of the diesel fuel.

Notes on filling with fuel \Rightarrow page 212.

RME fuel*

Only those vehicles fitted with special equipment (number PR 2G0 for biodiesel use) may use biodiesel corresponding to the standard DIN FN 14214.

The biodiesel fuel must comply with the DIN EN 14.214 (FAME) Standard.

- Biodiesel is a methylester obtained from rapeseed oil.
- DIN is a German abbreviation for "Deutsches Institut f\u00fcr Normung e.V.",
 the German standards institute.
- EN means European Norm.
- FAME is the English abbreviation for "Fatty Acid Methyl Ester".

If the date sticker of the vehicle includes the number PR 2G0 optional equipment) this means that that vehicle has been prepared for biodiesel use.

Your Authorised Service Centre or automobile association will be able to advise on where you can obtain RME biodiesel fuel.

Your Authorised Service Centre can also be consulted to know if the vehicle has been prepared for biodiesel use.

Things to note about RME fuel (biodiesel)

- The performance of a vehicle using biodiesel maybe somewhat reduced.
- Fuel consumption of a vehicle using biodiesel may be slightly higher.
- RME fuel can be used in winter at temperatures down to approx. -10°C.
- At outside temperatures below -10°C, we recommend using winter diesel fuel.



Cautio

 RME fuel can damage the fuel system in vehicles which are not suitably adjusted.

- If you decide to use biodiesel in your vehicle, please use only RME fuel which is DIN E 14.214 compliant.
- If you use biodiesel that does not meet the required standard, the fuel filter could become clogged.



Note

- In case of low exterior temperatures and a fuel biodiesel percentage of higher than 50%, an increase in gas emission may occur during operation of the independent heating.
- The fuel filter may become clogged when fuel is changed to biodiesel. For this reason, we recommend that, about every 300 or 400 km, following a fuel change, also change the fuel filter. Also. note the instructions in the inspection and maintenance plan.
- If the vehicle is to remain parked for more than about two weeks, we recommend filling the fuel tank with biodiesel and driving about 50 km in order to avoid damage to the injection system.

Winter driving

Diesel can thicken in winter.

Winter-grade diesel

When using "summer-grade diesel fuel", difficulties may be experienced at sub-zero temperatures because the fuel thickens due to wax separation. For this reason, "winter-grade diesel fuel" is available in some countries during the cold months. It can be used at temperatures as low as -22°C.

In countries with different climatic conditions the diesel fuel sold generally has different temperature characteristics. Check with an Authorised Service Centre or filling stations in the country concerned regarding the type of diesel fuels available.

Filter pre-heater

Your vehicle is fitted with a fuel filter pre-heater, making it well equipped for operation in winter. This ensures that the fuel system remains operational to approx. -24°C, provided you use winter-grade diesel which is safe to -15°C.

However, if the fuel has waxed to such an extent that the engine will not start at temperatures of under -24°C, simply place the vehicle in a warm place for a while.



Caution

Do not mix fuel additives ("thinners", or similar additives) with diesel fuel.

Working in the engine compartment

Safety instructions on working in the engine compartment

Any work carried out in the engine compartment or on the engine must be carried out cautiously.

Before starting any work on the engine or in the engine compartment:

- 1. Switch off the engine and remove the key from the ignition.
- 2. Apply the handbrake.
- 3. Move the gear stick to neutral or the selector lever to position P.
- 4. Wait for the engine to cool down.
- 5. Keep children away from the vehicle.

Safety First Operating instructions Tips and Maintenance Technical Data

6. Raise the bonnet \Rightarrow page 217.

You should not do any work in the engine compartment unless you know exactly how to carry out the jobs and have the correct tools! Have the work carried out by a qualified workshop if you are uncertain.

All service fluids and consumables, e.g. coolant, engine oil, spark plugs and batteries, are being constantly developed. SEAT provides a constant flow of information to the Authorised Service Centres concerning modifications. For this reason we recommend that you have service fluids and consumables replaced by an Authorised Service Centre. Please observe the relevant instructions \Rightarrow page 210. The engine compartment of any motor vehicle is a hazardous area $\Rightarrow \Lambda$.



WARNING

All work on the engine or in the engine compartment, e.g. checking and refilling fluids, involves the danger of injury and scalding as well as the risk of accident or fire.

- Never open the bonnet if you see steam, smoke or coolant escaping from the engine compartment. Otherwise, there is a risk of sustaining burns. Wait until no more steam or coolant is emitted, then allow the engine to cool before carefully opening the bonnet.
- Switch off the engine and remove the key from the ignition.
- Apply the handbrake and move the gear stick to neutral or selector. lever to position P.
- Keep children away from the vehicle.
- Never touch hot engine parts. There is a risk of burns.
- Never spill liquids on a hot engine or on a hot exhaust gas system. This is a fire hazard.
- Avoid causing short-circuits in the electrical system, particularly at the points where the jump leads are attached \Rightarrow page 269. The battery could explode.

↑ WARNING (continued)

- Never touch the radiator fan. It is temperature controlled and could start automatically, even when the engine has been switched off and the kev removed from the ignition!
- Do not unscrew the cap on the expansion tank when the engine is hot. If the coolant is hot, the cooling system will be pressurised!
- Protect face, hands and arms by covering the cap with a large, thick cloth to protect against escaping coolant and steam.
- Always make sure you have not left any objects, such as cleaning cloths and tools, in the engine compartment.
- If you have to work underneath the vehicle, you must use suitable stands additionally to support the vehicle, there is a risk of accident!. A hydraulic jack is insufficient for securing the vehicle and there is a risk of iniurv.
- If any work has to be performed when the engine is started or with the engine running, there is an additional, potentially fatal, safety risk from the rotating parts, such as the drive belts, alternator, radiator fan, etc., and from the high-voltage ignition system. You should also observe the following points:
 - Never touch the electrical wiring of the ignition system.
 - Ensure that jewellery, loose clothing and long hair do not get trapped in rotating engine parts. Danger of death. Before starting any work remove iewellery, tie back and cover hair, and wear tight-fitting clothes.
 - Always think carefully about pressing the accelerator if a gear is engaged in either an automatic or manual gearbox. The vehicle could move, even if the handbrake is applied. Danger of death.
- If work has to be carried out on the fuel system or on electrical components, you must observe the following safety notes in addition to the above warnings:
 - Always disconnect the battery. The vehicle must be unlocked when this is done, otherwise the alarm will be triggered.



- Do not smoke.
- Never work near naked flames.
- Always have a fire extinguisher on hand.



Caution

When changing or topping up service fluids, make absolutely certain that you fill the fluids into the correct reservoirs. Failure to observe this point will result in serious malfunctions and engine damage!



For the sake of the environment

Service fluids leaks are harmful to the environment. For this reason you should make regular checks on the ground underneath your vehicle. If you find spots of oil or other fluids, have your vehicle inspected in a qualified workshop.

Opening the bonnet

The bonnet is released from inside the vehicle.



Fig. 162 Detail of footwell area on driver's side: lever for unlocking the bonnet.

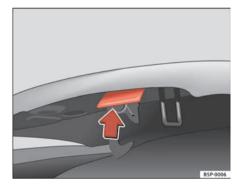


Fig. 163 Arrester hook for bonnet.

Before opening the bonnet ensure that the windscreen wipers are in rest position.

- To release the bonnet, pull the lever under the dashboard \Rightarrow fig. 162 in the direction indicated (arrow). The bonnet will be released by a spring action $\Rightarrow \Lambda$.
- Lift the bonnet using the release lever (arrow) and open the bonnet.
- Release the bonnet stay and secure it in fixture designed for this in the bonnet.



/!\ WARNING

Hot coolant can scald!

- Never open the bonnet if you see steam, smoke or coolant escaping from the engine compartment.
- Wait until no more steam, smoke or coolant is emitted from the bonnet, then carefully open the bonnet.
- When working in the engine compartment, always observe the safety warnings ⇒ page 215. ■

Closing the bonnet

- Raise the bonnet slightly
- Release the bonnet stay and replace it in its support.
- At a height of about 30 cm let it fall so it is locked.

If the bonnet does not close, do not press downwards. Open it once more and let it fall as before.



WARNING

If the bonnet is not closed properly, it could open while you are driving and completely obscure your view of the road. Risk of accident.

- After closing the bonnet, always check that it is properly secured. The bonnet must be flush with the surrounding body panels.
- If you notice that the bonnet latch is not secured when the vehicle is moving, stop the vehicle immediately and close the bonnet properly. Risk of accident.

Engine oil

Engine oil specifications

The engine oil used must conform with exact specifications.

Specifications

The engine comes with a special, high quality, multi grade oil that can be used in all seasons of the year except for those regions affected by extreme cold.

As the use of high quality oil is essential for the correct operation of the engine and its long useful life, when topping up or replacement is necessary use only those oils that conform to the requirements of the VW standards.

If it is not possible to find oil conforming to the VW standards then oil conforming to the ACEA or API standards with an appropriate viscosity at atmospheric temperature should be used instead. The use of this type of oil may have some repercussions on the performance of the engine for example, long starting time, increased consumption and a higher emission level.

If a top up is required then different oils may be mixed as long as they all conform to the VW standards.

The specifications (VW standards) set out in the following page should appear on the container of the service oil; the container will display together the different standards for petrol and diesel engines, the oil can be used for both types of engines.

Oil properties

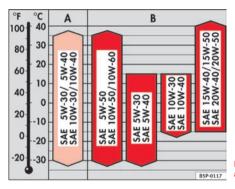


Fig. 164 Types of oil according to temperature

Viscosity

The viscosity class of the oil is selected according to the diagram.

When the ambient temperature falls outside the limits of the scale for a short period, an oil change is not required.

Engine type	Specification
Petrol	VW 501 01/ VW 502 00/ VW 504 00
Diesel	VW 505 00/ VW 505 01/ VW 507 00/ VW 506 01
Diesel Injector Pump ^{a)}	VW 505 01/ VW 507 00/ VW 506 01
Diesel Injector Pump Motor 118 kW ^{a)}	VW 506 01/ VW 507 00
Diesel Engines with Particulate filter (DPF) ^{a)}	VW 507 00

a) Only use recommended oils, otherwise you may damage the engine.

Safety First Operating instructions Tips and Maintenance Technical Data

Mono-grade oil

Single grade oils are generally not suitable for all year round use, due to ranges of $viscosity^{21}$.

These oils are only useful in a climate that is constantly very cold or very warm.

Engine oil additives

No type of additive should be mixed with the engine oil. The deterioration caused by these additives is not covered by the warranty.



Note

Before a long trip, we recommend finding an engine oil that conforms to the corresponding VW specifications and keeping it in the vehicle. This way, the correct engine oil will always be available for a top-up if needed.

²¹⁾ Viscosity: oil density

Checking the engine oil level

The engine oil dipstick indicates the level of the oil.

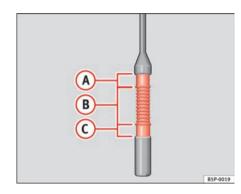


Fig. 165 Engine oil dipstick.

Checking oil level

- Park the vehicle in a horizontal position.
- Briefly run the engine at idle speed until the service temperature is reached then stop.
- Wait two minutes.
- Pull out the dipstick. Wipe the dipstick with a clean cloth and insert it again, pushing it in as far as it will go.
- Then pull it out once more and check the oil level ⇒ fig. 165. Top
 up with engine oil if necessary.

Oil level in area (A)

- Do not add oil.

Oil level in area (B)

- Oil can be topped up. The indicated oil level should be after the zone (A)

Oil level in area (c)

- Oil ${\bf must}$ be topped up. The indicated oil level should be found, ${\bf after}$, in zone ${\bf A}$

Depending on how you drive and the conditions in which the car is used, oil consumption can be up to $0.5\,L/1000\,km$. Oil consumption is likely to be higher for the first 5000 km. For this reason the engine oil level must be checked at regular intervals, preferably when filling the tank and before a journey.



WARNING

Any work carried out in the engine compartment or on the engine must be carried out cautiously.

 When working in the engine compartment, always observe the safety warnings ⇒ page 215.



Caution

If the oil level is above the area (A) do not start the engine. This could result in damage to the engine and catalytic converter. Contact an Authorised Service Centre.

Topping up engine oil 🐃

Top up gradually with small quantities of oil.



Fig. 166 In the engine compartment: Engine oil filler cap

Before opening the bonnet, read and observe the warnings $\Rightarrow \bigwedge$ in "Safety instructions on working in the engine compartment" on page 215.

- Unscrew cap from oil filler opening \Rightarrow fig. 166.
- Top-up oil in small amounts, using the correct oil.
- To avoid over-filling with engine oil, you should top-up using small quantities, wait a while and check the oil level before adding any more oil.
- As soon as the oil level is in area (B), carefully close the cap.

The position of the oil filler opening is shown in the corresponding engine compartment diagram \Rightarrow page 279.

Engine oil specification \Rightarrow page 218.



/ WARNING

Oil is highly inflammable! Ensure that no oil comes into contact with hot engine components when topping up.



Caution

If the oil level is above the area (A) do not start the engine. This could result in damage to the engine and catalytic converter. Contact a qualified workshop.



For the sake of the environment

The oil level must never be above area (A). Otherwise oil can be drawn in through the crankcase breather and escape into the atmosphere via the exhaust system.

Changing engine oil

The engine oil must be changed at the intervals given in the service schedule.

We recommend that you have the engine oil changed by an Authorised Service Centre.

The oil change intervals are shown in the Maintenance Programme.



WARNING

Only change the oil yourself if you have the specialist knowledge required!

↑ WARNING (continued)

- Before opening the bonnet, read and observe the warnings
- ⇒ page 215, "Safety instructions on working in the engine compartment".
- Wait for the engine to cool down. Hot oil may cause burn injuries.
- Wear eve protection to avoid injuries caused by splashes of oil.
- When removing the oil drain plug with your fingers, keep your arm horizontal to help prevent oil from running down your arm.
- Wash your skin thoroughly if it comes into contact with engine oil.
- Engine oil is poisonous! Used oil must be stored in a safe place out of the reach of children until it is disposed of.



No additives should be used with engine oil. This could result in engine damage. Any damage caused by the use of such additives would not be covered by the factory warranty.



For the sake of the environment

- Because of the disposal problems, the necessary special tools and specialist knowledge required, we recommend that you have the engine oil and filter changed by an Authorised Service Centre.
- Never pour oil down drains or into the ground.
- Use a suitable container when draining the used oil. It has to be large enough to hold all the engine oil ■

Coolant

Coolant specifications

Coolant is a mixture of water and at least 40% coolant additive.

The cooling system must be filled with a mixture of water and at least 40 % of our coolant additive G 12+ or an additive with the specification TT-VW 774 F (it is dyed purple). This mixture gives the necessary frost protection down to -25°C and protects the alloy parts of the cooling system against corrosion. It also prevents scaling and raises the boiling point of the coolant.

The concentration of coolant must *always* be at least 40% - even if frost protection is not required.

If greater frost protection is required in very cold climates, the proportion of the antifreeze additive G 12+ can be increased. However, the percentage of coolant additives should not exceed 60%, as this would reduce the frost protection. It would also reduce the cooling effect. A mixture with 60% coolant additive will give frost protection to approx. -40°C.



WARNING

- The coolant additive is toxic. There is a toxic risk. Always keep the
 coolant additive in the original container which should be stored out of the
 reach of children. The same applies to coolant which you have drained off.
- The coolant additive G 12+ must be added in sufficient quantities to provide anti-freeze protection at the coldest ambient temperatures that can be expected. At extremely cold ambient temperatures, the coolant could freeze, causing the vehicle to breakdown. As the heater would also not work in this situation, there is a risk of suffering exposure!



Caution

- Other additives may give considerably inferior corrosion protection. The resulting corrosion in the cooling system can lead to a loss of coolant, causing serious damage to the engine.
- The coolant additive G 12+ (purple) can be mixed with the additive G 12 (red) or G 11. Never mix G12 (red colour) with G 11. ■

Checking the coolant level and topping up

The correct coolant level is important for fault-free functioning of the engine cooling system.

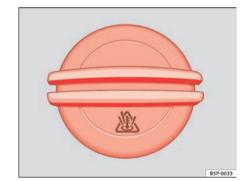


Fig. 167 In the engine compartment: Coolant expansion tank cap

Before opening the bonnet, read and observe the warnings $\Rightarrow \bigwedge$ in "Safety instructions on working in the engine compartment" on page 215.

Opening the coolant expansion tank

- Switch off the engine and allow it to cool.

Checking coolant level

- Look into the open coolant expansion tank and read off the coolant level.
- If the level is underneath the "MIN" mark, top up with coolant.

Topping up coolant

- Only use **new** coolant.
- Do not fill above the "MAX" mark.

Closing the coolant expansion tank

- Screw the cap on again tightly.

The position of the coolant expansion reservoir is shown in the corresponding engine compartment diagram \Rightarrow page 279.

Make sure that the coolant meets the required specifications \Rightarrow page 223. Do not use a different type of additive if coolant additive G 12+, is not available. In this case use only water and bring the coolant concentration back up to the correct level as soon as possible by putting in the specified additive \Rightarrow page 223.

Always top up with new coolant.

Do not fill above the "MAX" mark. Otherwise the excess coolant will be forced out of the cooling system when the engine is hot.

The coolant additive G 12+ (dyed purple) may be mixed with G 12 (dyed red) and also with G 11.



WARNING

Any work carried out in the engine compartment or on the engine must be carried out cautiously.

- \bullet When working in the engine compartment, always observe the safety warnings \Rightarrow page 215.
- When the engine is warm or hot, the cooling system is pressurised! Do not unscrew the cap on the expansion tank when the engine is hot. This is a burn injury risk.



Caution

- When mixed with other additives the colour of G 12 will change to brown. If this occurs you should have the coolant changed immediately. Failure to do so will result in engine damage!
- If a lot of coolant has been lost, wait for the engine to *cool down* before putting in cold coolant. This avoids damaging the engine. Large coolant losses are an indication of leaks in the cooling system. See a specialised workshop immediately and have the cooling system checked. Otherwise, there is a risk of engine damage.

Washer fluid and windscreen wiper blades

Topping up washer fluid 築

The water for cleaning the windscreen should always be mixed with washer fluid.



Fig. 168 In the engine compartment: Cap of windscreen washer fluid reservoir.

The windscreen washer and the headlight washing system are supplied with fluid from the windscreen washer fluid container in the engine compartment.

The reservoir is located on the right-hand side of the engine compartment.

Plain water is not enough to clean the windscreen and headlights. We recommend that you always add a product to the windscreen washer fluid. Approved windscreen cleaning products exist on the market with high detergent and anti-freeze properties, these may be added all-year-round. Please follow the dilution instructions on the packaging.

/ WARNING

Any work carried out in the engine compartment or on the engine must be carried out cautiously.

• When working in the engine compartment, always observe the safety warnings ⇒ page 215



- Never put radiator anti-freeze or other additives into the windscreen washer fluid.
- Always use approved windscreen cleansing products diluted as per instructions. If you use other washer fluids or soap solutions, the tiny holes in the fan-shaped nozzles could become blocked.

Changing windscreen wiper blades

If the windscreen wiper blades are in perfect condition, you will benefit from an improved visibility. Damaged wiper blades should be replaced immediately.



Fig. 169 Windscreen wipers in the service position

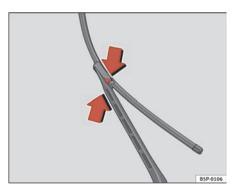


Fig. 170 Changing the front wiper blades

To change the blades it is necessary to change the rest position of the wipers to the service position.

Service position (for changing wiper blades)

- Ensure that the wiper blades are not frozen.
- Turn ignition on and off and then (before approx. 8 seconds have elapsed), move the windscreen wiper lever to the intermittent wipe position. The windscreen wipers will move to the service position.

Changing the windscreen wiper blades

- Lift the wiper arm away from the windscreen.
- Push the side buttons, free the blade and pull in the direction of the arrow ⇒ page 226, fig. 170.

Fitting the wiper blade

- Insert a blade of identical length and design into the wiper arm.
- Slide the blade until it clicks into position.
- Push the wiper arms back against the windscreen.

The windscreen wiper arms return to their original position when the ignition is turned on and the windscreen wiper lever is operated, or when driving faster than 6 km/h.

If the **windscreen wipers smear**, they should be replaced if they are damaged, or cleaned if they are soiled.

If this does not produce the desired results, the setting angle of the windscreen wiper arms might be incorrect. They should be checked by a qualified workshop and corrected if necessary.



WARNING

Do not drive unless you have good visibility through all windows!

- Clean the windscreen wiper blades and all windows regularly.
- The wiper blades should be changed once or twice a year.



Caution

- Damaged or dirty windscreen wipers could scratch the windscreen.
- Never use fuel, nail varnish remover, paint thinner or similar products to clean the windows. This could damage the windscreen wiper blades.
- Never move the windscreen wiper or windscreen wiper arm manually. This could cause damage.
- Do not pull the windscreen wipers forward unless they are in the service position. Otherwise the bonnet could be damaged.



Note

• The wiper arms can be moved to the service position only when the bonnet is properly closed.

Changing the rear wiper blade

A good rear wiper blade is essential for clear rear vision. Damaged wiper blades should be replaced immediately.

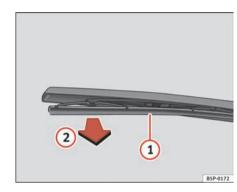


Fig. 171 Changing the rear window wiper blade

Removing the wiper blade

- Lift the wiper arm away from the glass \Rightarrow fig. 171.
- Unclip the wiper blade \bigcirc and pull \bigcirc \Rightarrow fig. 171.

Fitting the wiper blade

- With one hand, hold the top end of the wiper arm.
- With the other hand, press the wiper blade into the retainer.

Check the condition of the wiper blade regularly. Change as required.

If the **windscreen wiper scrapes**, it should be replaced if damaged, or cleaned if soiled.

If this is not sufficient, refer to a qualified workshop.



/ WARNING

Do not drive unless you have good visibility through all windows!

- Clean the windscreen wiper blades and all windows regularly.
- The wiper blades should be changed once or twice a year.

Caution

- A damaged or dirty window wiper could scratch the rear window.
- Never use fuel, nail varnish remover, paint thinner or similar products to clean the window.
- Never move the windscreen wiper by hand. This could cause damage.

Brake fluid

Checking the brake fluid level

The brake fluid is checked at the intervals given in the service schedule.

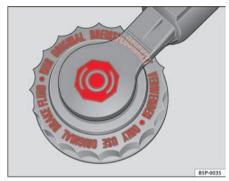


Fig. 172 In the engine compartment: Brake fluid reservoir cover

Read off the fluid level at the transparent brake fluid reservoir. It should always be between the "MIN" and "MAX" marks.

The position of the brake fluid reservoir is shown in the corresponding engine compartment diagram \Rightarrow page 279. The brake fluid reservoir has a black and yellow cap.

The brake fluid level drops slightly when the vehicle is being used as the brake pads are automatically adjusted as they wear.

However, if the level goes down noticeably in a short time, or drops below the "MIN" mark, there may be a leak in the brake system. A display on the instrument panel will warn you if the brake fluid level is too low ⇒ page 72.



WARNING

Before opening the bonnet to check the brake fluid level, read and observe the warnings \Rightarrow page 215.

Changing the brake fluid

The Maintenance Program indicates the brake fluid change intervals.

We recommend that you have the brake fluid changed by an Authorised Service Centre.

Before opening the bonnet, please read and follow the warnings $\Rightarrow \triangle$ in "Safety instructions on working in the engine compartment" on page 215 in "Working in the engine compartment".

Brake fluid absorbs moisture. In the course of time, it will absorb water from the ambient air. If the water content in the brake fluid is too high, the brake system could corrode. This also considerably reduces the boiling point of the brake fluid. Heavy use of the brakes may then cause a vapour lock which could impair the braking effect.

It is important that you use only brake fluid compliant with the US standard FMVSS 116 DOT 4. We recommend the use of Genuine SEAT brake fluid.



WARNING

Brake fluid is toxic. Old brake fluid impairs the braking effect.

MARNING (continued)

- Before opening the bonnet to check the brake fluid level, read and observe the warnings ⇒ page 215.
- Brake fluid should be stored in the closed original container in a safe place out of reach of children. There is a toxic risk.
- Complete the brake fluid change according to the Maintenance
 Program. Heavy use of the brakes may cause a vapour lock if the brake fluid is left in the system for too long. This would seriously affect the efficiency of the brakes and the safety of the vehicle. This may cause an accident.



Caution

Brake fluid could damage the paintwork. Wipe off any brake fluid from the paintwork immediately.



For the sake of the environment

Brake fluid must be drained and disposed of in the proper manner observing environmental regulations. ■

Battery

Warnings on handling the battery

(8)	Wear eye protection
	Battery acid is very corrosive and caustic. Wear protective gloves and eye protection!
®	Fires, sparks, naked lights and smoking are prohibited!
	A highly explosive mixture of gases is released when the battery is under charge.
®	Keep children away from acid and batteries!



WARNING

Always be aware of the danger of injury and chemical burns as well as the risk of accident or fire when working on the battery and the electrical system:

- Wear eye protection. Protect your eyes, skin and clothing from acid and particles containing lead.
- Battery acid is very corrosive and caustic. Wear protective gloves and eve protection. Do not tilt the batteries. This could spill acid through the vents. Rinse battery acid from eyes immediately for several minutes with clear water. Then seek medical care immediately. Neutralize any acid splashes on the skin or clothing with a soapy solution, and rinse off with plenty of water. If acid is swallowed by mistake, consult a doctor immediately.
- Fires, sparks, naked lights and smoking are prohibited. When handling cables and electrical equipment, avoid causing sparks and electrostatic

↑ WARNING (continued)

charge. Never short the battery terminals. High-energy sparks can cause iniurv.

- A highly explosive mixture of gases is released when the battery is under charge. The batteries should be charged in a well-ventilated room only.
- Keep children away from acid and batteries.
- Before working on the electrical system, you must switch off the engine, the ignition and all consumers. The negative cable on the battery must be disconnected. When a light bulb is changed, you need only switch off the light.
- Deactivate the anti-theft alarm by unlocking the vehicle before you disconnect the battery! The alarm will otherwise be triggered.
- When disconnecting the battery from the vehicle electrical system. disconnect first the negative cable and then the positive cable.
- Switch off all electrical consumers before reconnecting the battery. Reconnect first the positive cable and then the negative cable. Never reverse the polarity of the connections. This could cause an electrical fire.
- Never charge a frozen battery, or one which has thawed. This could result in explosions and chemical burns. Always replace a battery which has frozen. A flat battery can freeze at temperatures around 0°C.
- Ensure that the vent hose is always connected to the battery.
- Never use a defective battery. This may be fatally explosive. Replace a damaged battery immediately.



- Never disconnect the battery if the ignition is switched on or if the engine is running. This could damage the electrical system or electronic components.
- Do not expose the battery to direct sunlight over a long period of time, as the intense ultraviolet radiation can damage the battery housing.

• If the vehicle is left standing in cold conditions for a long period, protect the battery from frost. If it "freezes" it will be damaged. ■

Checking the electrolyte level

The electrolyte level should be checked regularly in highmileage vehicles, in hot countries and in older batteries.

- Open the bonnet and open the battery cover at the front ⇒ in "Safety instructions on working in the engine compartment" on page 215 ⇒ in "Warnings on handling the battery" on page 230.
- Check the colour display in the "magic eye" on the top of the battery.
- If there are air bubbles in the window, tap the window gently until they disperse.

The position of the battery is shown in the corresponding engine compartment diagram \Rightarrow page 279.

The round window ("magic eye") on the top of the battery changes colour, depending on the charge level and electrolyte level of the battery.

If the colour in the window is **colourless or bright yellow**, the electrolyte level of the battery is too low. Have the battery checked by a qualified workshop.

The colours green and black are used by the workshops for diagnostic purposes. ■

Charging and changing the vehicle battery

The battery is maintenance-free and is checked during the inspection service. All work on the vehicle battery requires specialist knowledge.

If you often drive short distances or if the vehicle is not driven for long periods, the battery should be checked by a qualified workshop between the scheduled services.

If the battery has discharged and you have problems starting the vehicle, the battery might be damaged. If this happens, we recommend you have the vehicle battery checked by an Authorised Service Centre where it will be recharged or replaced.

Charging the battery

The vehicle battery should be charged by a qualified workshop only, as batteries using special technology have been installed and they must be charged in a controlled environment.

Replacing a vehicle battery

The battery has been developed to suit the conditions of its location and has special safety features.

Genuine SEAT batteries fulfil the maintenance, performance and safety specifications of your vehicle.



WARNING

- We recommend you use only maintenance-free or cycle free leak-proof batteries which comply with the standards T 825 06 and VW 7 50 73. This standard applies as of 2001.



For the sake of the environment

Batteries contain toxic substances such as sulphuric acid and lead. They must be disposed of appropriately and must not be disposed of with ordinary household waste.

Wheels and tyres

Wheels

General notes

Avoiding damage

- If you have to drive over a kerb or similar obstacle, drive very slowly and as near as possible at a right angle to the kerb.
- Keep grease, oil and fuel off the tyres.
- Inspect the tyres regularly for damage (cuts, cracks or blisters, etc.). Remove any foreign objects embedded in the treads.

Storing tyres

- Mark tyres when you remove them to indicate the direction of rotation. This ensures you will be able to install them correctly when you replace them.
- When removed, the wheels and/or tyres should be stored in a cool, dry and preferably dark location.
- Store tyres in a vertical position if they are not fitted on wheel rims.

New tyres

New tyres have to be run in \Rightarrow page 189.

The tread depth of new tyres may vary, according to the type and make of tyre and the tread pattern.

Concealed damage

Damage to tyres and rims is often not readily visible. If you notice unusual vibrations or the car pulling to one side, this may indicate that one of the tyres is damaged. The tyres should be checked immediately by an Authorised Service Centre.

Tyres with directional tread pattern

An arrow on the tyre sidewall indicates the direction of rotation on tyres with directional tread. Always observe the direction of rotation indicated when fitting the wheel. This guarantees optimum grip and helps to avoid aquaplaning, excessive noise and wear.



WARNING

- New tyres do not have maximum grip in the first 500 km. Drive particularly carefully to avoid risk of accident.
- Never drive with damaged tyres. This may cause an accident.
- If you notice unusual vibration or if the vehicle pulls to one side when driving, stop the vehicle immediately and check the tyres for damage.

Checking tyre pressure

The correct tyre pressure can be seen on the sticker on the inside of the tank flap.

 Read the required tyre inflation pressure from the sticker. The values refer to Summer tyres. For Winter tyres, you must add 0.2 bar to the values given on the sticker.

Safety First Operating instructions Tips and Maintenance Technical Data

- The tyre pressures should only be checked when the tyres are cold. The slightly raised pressures of warm tyres must not be reduced.
- 3. Adjust the tyre pressure to the load you are carrying.

Tyre pressure

The correct tyre pressure is especially important at high speeds. The pressure should therefore be checked at least once a month and before starting a journey.

The sticker with the tyre pressure values can be found on the inside of the tank flap. The tyre pressure values given are for cold tyres. The slightly raised pressures of warm tyres must not be reduced $\Rightarrow \bigwedge$.



WARNING

- Check the tyre pressure at least once per month. Correct tyre pressure is very important. If the tyre pressure is too high or too low, there is an increased danger of accidents particularly at high speeds.
- A tyre can easily burst if the pressure is too low, causing an accident!
- At continuously high speeds, a tyre with insufficient pressure flexes more. In this way it becomes too hot, and this can cause tread separation and tyre blow-out. Always observe the recommended tyre pressures.
- If the tyre pressure is too low or too high, the tyres will wear prematurely and the vehicle will not handle well. Risk of accident!



For the sake of the environment

Under-inflated tyres will increase fuel consumption.

Tyre pressure monitoring

The tyre pressure monitoring system constantly checks the pressure of the tyres.

The system warns the driver in the event of a loss of pressure by means of symbols and messages in the instrument cluster display. The system uses $ESP \Rightarrow page 183$.

Note that tyre pressure also depends on tyre temperature. Tyre pressure increases about 0.1 bar for each 10°C in tyre temperature increase. The tyre heats up while the vehicle is being driven and the tyre pressure will rise accordingly. For this reason, you should only adjust the tyre pressures when they are cold (i.e. approximately at ambient temperature).

To ensure that the tyre pressure monitoring system works reliably, you should check and, if necessary, adjust the tyre pressures at regular intervals and store the correct pressures (reference values) in the system.

A tyre pressure information label is attached to the inside of the fuel tank flap.



WARNING

- Never adjust tyre pressure when the tyres are hot. This may damage or even burst the tyres. Risk of accident!
- An insufficiently inflated tyre flexes a lot more at high speeds and causes significant heating of the tyre. Under these conditions, the tyre bead may be released or the tyre may burst. Risk of accident!



For the sake of the environment

Under-inflated tyres lead to increased fuel consumption and tyre wear. ■

Significant tyre pressure loss

The tyre symbol 1 is displayed and indicates that the tyre pressure for a least one tyre is insufficient.

- Stop the vehicle.
- Switch the engine off.
- Check the tyre(s).
- Change the wheel if necessary ⇒ page 243. ■

Tyre service life

The service life of tyres is dependent on tyre pressure, driving style and fitting.



Fig. 173 Tyre tread wear indicators

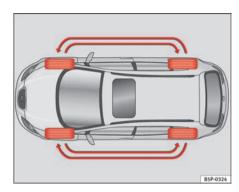


Fig. 174 Changing wheels

Wear indicators

The original tyres on your vehicle have 1.6 mm high "tread wear indicators" ⇒ fig. 173, running across the tread. Depending on the make, there will be six to eight of them evenly spaced around the tyre. Markings on the tyre sidewall (for instance the letters "TWI" or other symbols) indicate the positions of the tread wear indicators. The minimum tread depth required by law is 1.6 mm (measured in the tread grooves next to the tread wear indicators). Worn tyres must be replaced. Different figures may apply in export countries ⇒ ♠.

Tyre pressure

Incorrect tyre pressure causes premature wear and could cause tyre blow-out. For this reason, the tyre pressure should be checked at least once per month \Rightarrow page 233.

Driving style

Fast cornering, heavy acceleration and hard braking all increase tyre wear.

afety First Operating instructions Tips and Maintenance Technical Dat

Changing wheels around

If the front tyres are worn considerably more than the rear ones it is advisable to change them around as shown \Rightarrow page 235, fig. 174. All the tyres will then last for about the same time.

Wheel balance

The wheels on new vehicles are balanced. However, various factors encountered in normal driving can cause them to become unbalanced, which results in steering vibration.

Unbalanced wheels should be rebalanced, as they otherwise cause excessive wear on steering, suspension and tyres. A wheel must also be rebalanced when a new tyre is fitted.

Incorrect wheel alignment

Incorrect wheel alignment causes excessive tyre wear, impairing the safety of the vehicle. If tyres show excessive wear, you should have the wheel alignment checked by an Authorised Service Centre.



WARNING

There is a serious danger of accidents if a tyre bursts during driving!

- The tyres must be replaced at the latest when the tread is worn down to the tread wear indicators. Failure to do so could result in an accident. Worn tyres do not grip well at high speeds on wet roads. There is also a greater risk of "aquaplaning".
- At continuously high speeds, a tyre with insufficient pressure flexes more. This causes it to overheat. This can cause tread separation and tyre blow-out. Risk of accident. Always observe the recommended tyre pressures.
- If tyres show excessive wear, you should have the running gear checked by an Authorised Service Centre.
- Keep chemicals such as oil, fuel and brake fluid away from tyres.
- Damaged wheels and tyres must be replaced immediately!



For the sake of the environment

Under-inflated tyres will increase fuel consumption.

Puncture proof tyres

Anti-puncture tyres allow you to continue driving even with a punctured tyre, in the majority of cases.

Vehicles that are factory-fitted with puncture proof tyres ²²⁾ indicate on the instrument panel when there is a loss of tyre pressure.

Driving with anti-puncture tyres (emergency gear)

- Leave the ESP/TCS (electronic stabilisation programme) switched on, or switch on \Rightarrow page 183.
- Continue driving carefully and slowly (80 km/h maximum).
- Avoid sudden manoeuvres and sharp turns.
- Avoid driving over obstacles (for example kerbs) or potholes.
- Look out for the ESP/TCS intervening often, smoke coming from the tyres or the smell of rubber, the vehicle vibrating or a clattering noise. If any of these occur, stop the vehicle.

The anti-puncture tyres have a tag on the side of the tyre, with the description: "DSST", "Eufonia", "RFT", "ROF", "RSC", "SSR" or "ZP".

The sides of this type of tyre are reinforced. When the tyres lose air they are supported on the sides (emergency driving).

²²⁾ Depending upon version and country.

The loss of pressure in the tyre is shown on the instrument panel. You can then drive a maximum of 80 km and if the circumstances are favourable (for example, low load), even more.

The damaged tyre should be changed as soon as possible. The rim should be checked in a specialist workshop to detect possible damage and replace it if necessary. We recommend you contact Technical Service. If more than one tyre is being used under emergency conditions, this reduces the distance which can be travelled.

Starting driving in emergency conditions

At the moment the loss of tyre pressure is indicated on the instrument panel, at least one of the tyres is driving in emergency mode $\Rightarrow \bigwedge$.

End of emergency operation

Do not drive on if:

- · smoke is coming from one of the tyres,
- there is a smell of rubber,
- the vehicle vibrates,
- there is a rattling noise.

When is it no longer possible to continue driving even using anti-puncture tyres?

- If the Electronic Stabilisation Program (ESP) is out of operation.
- If the tyre pressure monitoring system is out of operation.
- If one of the tyres has been severely damaged in an accident, etc. If a tyre has been badly damaged there is a risk that parts of the tread can be thrown off and cause damage to the fuel lines, brake pipes or fuel filler.
- It is also advisable to stop driving if severe vibrations occur, or if the wheel starts overheating and gives off smoke.



WARNING

When driving in emergency conditions, the driving quality of the vehicle is considerably impaired.

- The maximum permitted speed of 80 km/h is subject to road and weather conditions. Please observe legal requirements when doing so.
- Avoid sharp turns and rapid manoeuvres, and brake earlier than usual.
- Avoid driving over obstacles (for example kerbs) or potholes.
- If one or more tyres is being driven in emergency conditions, the driving quality of the vehicle is impaired and there is a risk of accident.



Note

- The anti-puncture tyres do not "deflate" on losing pressure because they are supported on the reinforced sides. Therefore defects in the tyre can not be detected with a visual inspection.
- Snow chains must not be used on front tyres used in emergency conditions. ■

New tyres and wheels

New tyres and wheels have to be run-in.

The tyres and wheel rims are an essential part of the vehicle's design. The tyres and rims approved by SEAT are specially matched to the characteristics of the vehicle and make a major contribution to good road holding and safe handling $\Rightarrow \triangle$.

Tyres should be replaced at least in pairs and not individually (i.e. both front tyres or both rear tyres together). A knowledge of tyre designations makes it

afety First Operating instructions Tips and Maintenance Technical Dat

easier to choose the correct tyres. Radial tyres have the tyre designations marked on the sidewall, for example:

195/65 R15 91T

This contains the following information:

195 Tyre width in mm

65 Height/width ratio in %

Tyre construction: Radial

15 Rim diameter in inches

91 Load rating code

Speed rating

The tyres could also have the following information:

A direction of rotation symbol

"Reinforced" denotes heavy-duty tyres.

The manufacturing date is also indicated on the tyre sidewall (possibly only on the inner side of the wheel).

"DOT ... 1103 ..." means, for example, that the tyre was produced in the 11th week of 2003.

We recommend that work on tyres and wheels is carried out by an Authorised Service Centre. They are familiar with the procedure and have the necessary special tools and spare parts as well as the proper facilities for disposing of the old tyres.

Any Authorised Service Centre has full information on the technical requirements when installing or changing tyres, wheels or wheel trims.

On vehicles with four-wheel drive, all four tyres must always be fitted with tyres of the same type, make and tread pattern, as otherwise the driveline can be damaged by continuous differences in the wheel speeds. For the same reason, only use a spare wheel with the same tyre dimensions as the normal road wheels. You may also use the factory-supplied compact temporary spare wheel.



WARNING

- We recommend that you use only wheels and tyres which have been approved by SEAT for your model. Failure to do so could impair vehicle handling. Risk of accident.
- Avoid running the vehicle on tyres that are more than six years old. If you have no alternative, you should drive slowly and with extra care at all times.
- Never use old tyres or those with an unknown "history of use".
- If wheel trims are retrofitted, you must ensure that the flow of air to the brakes is not restricted. This could cause them to overheat.
- All four wheels must be fitted with radial tyres of the same type, size (rolling circumference) and the same tread pattern.



For the sake of the environment

Old tyres must be disposed of according to the laws in the country concerned.



- For technical reasons, it is not generally possible to use the wheels from other vehicles. This can also apply to wheels of the same model. The use of wheels or tyres which have not been approved by SEAT for use with your model may invalidate the vehicle's type approval for use on public roads.
- If the spare tyre is not the same as the tyres that are mounted on the vehicle - for example with winter tyres - you should only use the spare tyre for a short period of time and drive with extra care. Refit the normal road wheel as soon as possible.

Wheel bolts

Wheel bolts must be tightened to the correct torque.

The design of wheel bolts is matched to the rims. If different wheel rims are fitted, the correct wheel bolts with the right length and correctly shaped bolt heads must be used. This ensures that wheels are fitted securely and that the brake system functions correctly.

In certain circumstances, you may not use wheel bolts from a different careven if it is the same model \Rightarrow page 210.

After the wheels have been changed, the tightening torque of the wheel bolts should be checked as soon as possible with a torque wrench $\Rightarrow \bigwedge$. The tightening torque for steel and alloy wheels is 120 Nm.



WARNING

If the wheel bolts are not tightened correctly, the wheel could become loose while driving. Risk of accident.

- The wheel bolts must be clean and turn easily. Never apply grease or oil to them.
- Use only wheel bolts which belong to the wheel.
- If the torque of the wheel bolts is too low, they could loosen whilst the vehicle is in motion. Risk of accident! If the tightening torque is too high, the wheel bolts and threads could be damaged.



Caution

The prescribed torque for wheel bolts for steel and alloy wheels is 120 Nm. ■

Winter tyres

Winter tyres will improve the vehicles handling on snow and ice.

In winter conditions winter tyres will considerably improve the vehicles handling. The design of summer tyres (width, rubber compound, tread pattern) gives less grip on ice and snow.

Winter tyres must be inflated to a **pressure** 0.2 bar higher than the pressures specified for summer tyres (see sticker on tank flap).

Winter tyres must be fitted on all four wheels.

Information on permitted **winter tyre sizes** can be found in the vehicle's registration documents. Use only radial winter tyres. All tyre sizes listed in the vehicle documentation also apply to winter tyres.

Winter tyres lose their effectiveness when the tread is worn down to a depth of 4 mm.

The speed rating code \Rightarrow page 237, "New tyres and wheels" determines the following **speed limits**: $\Rightarrow \land \land \Rightarrow \land \land$

Q max. 160 km/h

S max. 180 km/h

T max. 190 km/h

H max. 210 km/h

In some countries, vehicles which can exceed the speed rating of the fitted tyre must have an appropriate sticker in the driver's field of view. These stickers are available from your Authorised Service Centre. The legal requirements of each country must be followed.

Do not have winter tyres fitted for unnecessarily long periods. Vehicles with summer tyres handle better when the roads are free of snow and ice.

If you have a flat tyre, please refer to the notes on the spare wheel \Rightarrow page 237, "New tyres and wheels".

Safety First Operating instructions Tips and Maintenance Technical Data



WARNING

The maximum speed for the winter tyres must not be exceeded. Otherwise, this could lead to tyre damage and thus, an accident risk.



For the sake of the environment

Fit your summer tyres in good time. They are quieter, do not wear so quickly and reduce fuel consumption. \blacksquare

Snow chains

Snow chains may be fitted only to the front wheels, and only to certain tyre sizes \Rightarrow page 237.

Snow chains must have fine-pitch links which do not protrude more than 9 mm, including tension device.

Remove wheel hub covers and trim rings before fitting snow chains. For safety reasons cover caps, available in any Authorised Service Centre, must then be fitted over the wheel bolts.

Four-wheel drive: where snow chains are compulsory on certain roads, this normally also applies to cars with four-wheel drive. Snow chains may only be fitted to the **front** wheels (also on vehicles with four-wheel drive).



WARNING

Observe the fitting instructions provided by the snow chain manufacturer.



Caution

You must remove the snow chains to drive on roads which are free of snow. Otherwise they will impair handling, damage the tyres and wear out very quickly.



Note

- In some countries, the speed limit for using snow chains is 50 km/h. The legal requirements of the country should be followed.
- We recommend that you ask your Approved Service Centre for information about appropriate wheel, tyre and snow chain size.

If and when

Tools, tyre repair kit and spare wheel

Vehicle Tools

The vehicle onboard tools are located under the floor panel in the luggage compartment.

- Lift the cover of the luggage compartment, by pulling it up with a finger in the fitting.
- Take the onboard tools out of the vehicle.

The tool kit includes:

- Jack*
- Hook for removing wheel covers* or hub caps*
- Box spanner for wheel bolts*
- Reversible screwdriver with handle (including hexagonal interior) for the wheel bolts. The screwdriver is a combination tool.
- Towing eye
- Adapter for the anti-theft wheel bolts*

Some of the items listed are only provided in certain models / model years, or are optional extras.



WARNING

 Do not use the hexagonal socket in the screwdriver handle to tighten the wheel bolts as with this it is not possible to tighten the bolts to the required torque, risk of accident.

MARNING (continued)

- The jack* supplied by the factory is only designed for changing wheels on this model. On no account attempt to use it for lifting heavier vehicles or other loads, risk of injury.
- Use the jack* only on firm, level ground.
- Never start the engine when the vehicle is on the jack, risk of accident.
- If work is to be carried out underneath the vehicle, this must be secured by suitable stands. Otherwise, there is a risk of injury.

Safety First Operating instructions Tips and Maintenance Technical Date

Compact temporary spare wheel*

The compact spare wheel (emergency wheel for vehicles without the anti-puncture kit) should only be used when strictly necessary.



Fig. 175 Luggage compartment. Access to the spare wheel

The temporary spare wheel is stored under the floor panel in the luggage compartment and is attached by a thumbnut.

How to use the compact temporary spare wheel

Should you ever have a punctured tyre, the compact temporary spare wheel is only intended for temporary use until you can reach a workshop. The standard-size road wheel should be replaced as soon as possible.

Please note the following restrictions when using the compact temporary spare wheel. This spare wheel has been specially designed for your vehicle, thus, it cannot be changed with the spare wheel from another vehicle.

No other type of tyre (normal summer or winter tyre) may be fitted on the compact temporary spare wheel rim.

Snow chains

For technical reasons, snow chains must **not** be used on the compact temporary spare wheel.

If you should have a puncture on one of the *front wheels* when using snow chains, fit the compact temporary spare in place of one of the rear wheels. You can then attach the snow chains to the wheel taken from the rear and use this wheel to replace the punctured front wheel.



WARNING

- The tyre pressures must be checked and corrected as soon as possible.
 The tyre pressure for the spare wheel is 4.2 bar. Failure to do so could result in an accident.
- Do not drive faster than 80 km/h. Higher speeds can cause an accident.
- Avoid heavy acceleration, hard braking and fast cornering, risk of accident.
- Never use two or more compact spare tyres at the same time, risk of accident.
- No other type of tyre (normal summer or winter tyre) may be fitted on the compact temporary spare wheel rim. ■

Tyre repair kit

The tyre repair kit (for vehicles not including a spare wheel) is stored under the floor panel in the luggage compartment.

Your vehicle is equipped with the Tyre Mobility System "Tyre repair kit".

The tyre repair kit consists of a container with sealing compound to repair the puncture and a **compressor** to generate the required tyre pressure. The kit will reliably seal punctures up to a size of about 4 mm caused by the penetration of a foreign body into the tyre.



• Seek professional assistance if the repair of a tyre puncture is not possible with the sealing compound.

Wheel change

Preparation work

What you must do before changing a wheel.

- If you have a flat tyre or puncture, park the vehicle as far away from the flow of traffic as possible. Choose a location that is as level as possible.
- All passengers should leave the vehicle. They should wait in a safe area (for instance behind the roadside crash barrier).
- Switch off the engine. Switch on the hazard warning lights.
- Apply the handbrake firmly.
- Engage the first gear, or put the selector lever to position P for those vehicles with an automatic gearbox.
- If you are towing a trailer, unhitch it from your vehicle.
- Take the **vehicle tools** and the **spare wheel** out of the luggage compartment.



/ WARNING

Put the hazard warning lights on and place the warning triangle in position. This is for your own safety and also warns other road users.



Caution

If you have to change the tyre on a gradient, block the wheel opposite the wheel being changed by placing a stone or similar object under it to prevent the vehicle from rolling away.



Note

Please observe legal requirements when doing so.

Changing a wheel

Change the wheel as described below

- Pull off the **hub cap**. Also refer to \Rightarrow page 244.
- Slacken the wheel bolts.
- Raise the car with the jack in the corresponding zone.
- Take off the wheel and then put on the spare wheel.
- Lower the vehicle.
- Tighten the wheel bolts firmly in diagonal sequence with the box spanner.
- Replace the hub cap.

After changing a wheel

After changing the wheel there are still tasks to complete.

- Put the tools and jack back in the luggage compartment.
- Place the wheel with the defective tyre in the luggage compartment and secure it.
- Check the tyre pressure of the newly fitted tyre as soon as possible.
- Have the tightening torque of the wheel bolts checked as soon as possible with a torque wrench. The prescribed torque is 120 Nm.



Note

- If you notice that the wheel bolts are corroded and difficult to turn when changing a wheel, they must be replaced before having the wheel bolt torque checked.
- In the interest of safety, drive at moderate speeds until the wheel bolt torque has been checked. ■

Wheel trims

The wheel trims must be removed to gain access to the wheel bolts.



Fig. 176 Changing the wheel: Removing a hub

Removing

- Insert the extraction hook from the tools into the designated ring, located in one of the bolt hole covers of the wheel cover ⇒ fig. 176.
- Pull off the hub cap.

Wheel covers*

The wheel covers must be removed for access to the wheel bolts

Removing

- Remove the wheel cover using the wire hook.
- Hook this into one of the cut-outs of the wheel cover.

Fitting

 Fit the wheel cover onto the wheel rim by pressing it firmly. Put pressure initially on the point of the cut-out for the valve. Then press the wheel cover onto the steel rim so that it engages all round.

Loosening the wheel bolts

The wheel bolts must be loosened before raising the vehicle.



Fig. 177 Changing the wheel: loosen the wheel

Loosening

- Fit the **box spanner** as far as it will go over the wheel bolt.
- Grasp the box spanner by the end turn it about one full turn to the left ⇒ fig. 177.

Tighten

- Fit the box spanner as far as it will go over the wheel bolt.
- Grasp the box spanner close to the end and turn the bolt to the right until it is secured.
- An adapter is required to unscrew or tighten the anti-theft wheel bolts.



/ WARNING

Loosen the wheel bolts only about one turn before raising the vehicle with the jack, loosening the wheel bolts more than one turn can result in an accident.



- Do not use the hexagonal socket in the screwdriver handle to loosen or tighten the wheel bolts.
- If the wheel bolt is very tight, you may be able to loosen it by pushing down the end of the spanner carefully with your foot. Hold on to the vehicle for support and take care not to slip.

Raising the vehicle

The vehicle must be raised with a jack to remove the wheel.

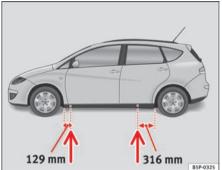


Fig. 178 The jacking points



Fig. 179 Fitting the jack

- Locate the jacking point under the door sill closest to the wheel being changed ⇒ fig. 178.
- Wind up the jack under the jacking point until the arm of the jack is directly below the vertical rib under the door sill.
- Align the jack so that the arm of the jack fits around the rib under the door sill and the movable base plate of the jack is flat on the ground ⇒ fig. 179.
- Raise the vehicle until the defective wheel is just clear of the ground.

Recesses at the front and rear of the door sills mark the jacking points ⇒ fig. 178. A position has been made for each wheel. Do not fit the jack anywhere else.

An **unstable surface** under the jack may cause the vehicle to slip off the jack. Therefore, the jack must be fitted on solid ground offering good support. Use a large and stable base, if necessary. On a hard, slippery surface (such as tiles) use a rubber mat or similar to prevent the jack from slipping.



WARNING

- Take all precautions so that the base of the jack does not slip. Failure to do so could result in an accident.
- The vehicle can be damaged if the jack is not applied at the correct jacking points. There is also a risk of injury since the jack can slip off suddenly if it is not properly engaged. ■

Jacking points for vehicles with sill panels*.



Fig. 180 Plastic sill panel with a cover for the jack anchor

Vehicles equipped with plastic sill panels, with covers*

- Remove the cover (A) to access the points for the vehicle jack anchor ⇒ fig. 180.
- Turn the cover in the direction indicated by the arrow, and extract it from its slot ⇒ fig. 180.
- Once the cover is loosened, it hangs by a strap to prevent its loss.

Removing and fitting the wheel

For removal and fitting the wheel, the following tasks must be completed.



Fig. 181 Changing the wheel: hexagonal socket in screwdriver handle to turn the wheel bolts after they have been loosened

Change the wheel as described below after loosening the wheel bolts and raising the vehicle with the jack.

Removing a wheel

 Unscrew the bolts using the hexagonal tool in the handle of the screwdriver (vehicle tool) and place them on a clean surface ⇒ fiq. 181.

Fitting a wheel

 Screw in the wheel bolts and tighten them lightly using the hexagonal socket in the screwdriver handle. The wheel bolts should be clean and turn easily. Before fitting the spare wheel, inspect the condition of the wheel and hub mounting surfaces. These surfaces must be clean before fitting the wheel.

The hexagonal socket in the screwdriver handle makes it easier to turn the wheel bolts when they are loose. The reversible screwdriver blade should be removed when the tool is used for this purpose.

If tyres with a specific direction of rotation are fitted, note the direction of rotation.



Note

Do not use the hexagonal socket in the screwdriver handle to loosen or tighten the wheel bolts. \blacksquare

Anti-theft wheel bolts

A special adapter is required to turn the anti-theft wheel holts.

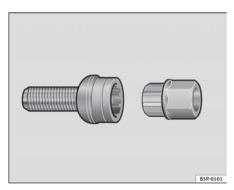


Fig. 182 Anti-theft wheel bolt

- Insert the adapter onto the wheel bolt and push it on as far as it will go ⇒ fig. 182.
- Fit the box spanner as far as it will go over the adapter.
- Loosen or tighten the wheel bolt as appropriate.

Error code

The code number of the anti-theft wheel bolt is stamped on the front of the adaptor. $\label{eq:code_poly}$

The code number should be noted and kept in a safe place, as it is only by using the code number that a duplicate adaptor can be obtained from an Authorised Service Centre.

Tyres with directional tread pattern

Tyres with directional tread pattern must be fitted so that they rotate in the correct direction.

A directional tread pattern can be identified by arrows on the sidewall that point in the direction of rotation. Always note the direction of rotation indicated when fitting the wheel. This is important so that these tyres can give maximum grip and avoid excessive noise, tread wear and aquaplaning.

If, in an emergency, you have to fit the spare wheel so it rotates in the wrong direction, you must drive extremely carefully. The tyre will not give optimum performance. This is particularly important when driving on wet roads.

To benefit from the advantages of tyres with this type of tread pattern, the defective tyre should be replaced as soon as possible so that all tyres again rotate in the correct direction.

Tyre repair kit (Tyre-Mobility-System)*

General information and safety notes

Your vehicle is equipped with a tyre repair kit: the **Tyre Mobility System**.

In the event of a tyre puncture, **sealing compound** and an **air compressor** are located in the luggage compartment under the floor panel.

The Tyre Mobility System will reliably seal punctures caused by the penetration of a foreign body of up to about 4 mm in diameter.

It is not necessary to remove the foreign body from the tyre.

Instructions for the sealing compound are located on the sealing compound container.

Notes for the proper use of the air compressor are included in an additional instruction leaflet.



WARNING

- Do not attempt to repair a puncture with the sealing compound if the tyre has been damaged by driving the car after the tyre has lost its air.
- Always observe warnings and follow instructions concerning compressor and sealing compound carefully.
- Do not drive faster than 80 km/h, avoid heavy acceleration, hard braking and fast cornering.
- Tyres which have been repaired with sealing compound are only suitable for temporary use over a short period. Therefore, please drive carefully to the next available qualified workshop.



For the sake of the environment

Used sealing compound containers should be disposed of at a proper facility.



Note

Seek professional assistance if the repair of a tyre puncture is not possible with the sealing compound. ■

Preparation work

Certain steps must be taken before repairing a tyre.

- If you have a flat tyre or puncture, park the vehicle as far away from the flow of traffic as possible.
- Apply the **handbrake** firmly.
- Engage first gear, or put the selector lever to position P.
- All passengers should leave the vehicle. They should wait in a safe area (for instance behind the roadside crash barrier).
- Check whether a repair is possible using the Tyre Mobility System "General information and safety notes."
- Unscrew inflation cap from the affected wheel.
- Take the tyre repair kit out of the luggage compartment.



WARNING

Put the hazard warning lights on and place the warning triangle in position. This is for your own safety and also warns other road users.



Caution

Take special care if you have to repair a tyre on a gradient.



Please observe legal requirements when doing so.



Note

The compressor should never be allowed to run for longer than 6 minutes.

Tyre repair

The following sections describe the procedures for repairing a tyre.

Using the sealing compound

 The instructions on the container give detailed information on how to use the sealing compound.

Inflating the tyre.

- Remove the air compressor and hose from the container.
- Screw the retaining nut onto the valve.
- Plug the compressor cable into a 12 volt socket.
- Turn on compressor and monitor the pressure shown on the pressure gauge.

Completing the repair

- Remove the compressor hose from the valve.
- Fit the valve cap.
- Unplug the compressor from the socket.
- Return all tools to their proper storing location.

Fuses

Changing a fuse

If a fuse has blown it must be replaced



Fig. 183 Left side of dash panel: Fuse box cover

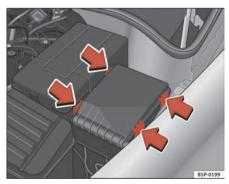


Fig. 184 Fuse box cover in engine compartment

Fuse cover underneath the steering wheel

- Switch off the ignition and the component concerned.
- Identify the fuse for the failed component \Rightarrow page 254.
- Take the plastic clip from inside the fuse cover, fit it onto the blown fuse and pull the fuse out.
- Replace the blown fuse (which will have a melted metal strip) with a new fuse of the same ampere rating.

Fuse cover in engine compartment

- Switch off the ignition and the component concerned.
- Prise off the fuse cover in the engine compartment by pressing the tabs towards the centre of the cover \Rightarrow fig. 184.
- Identify the fuse for the failed component \Rightarrow page 254.
- Take the plastic clip from inside the fuse cover (at left-hand end of the dash panel), fit it onto the blown fuse and pull the fuse out.
- Replace the blown fuse (which will have a melted metal strip) with a new fuse of the same ampere rating.
- Carefully fit the fuse cover back on to ensure no water can enter the fuse box.

The individual electrical circuits are protected by fuses. The fuses are located behind a cover at the left-hand end of the dash panel and on the left-hand side of the engine compartment.

The electric windows are protected by **circuit breakers**. These reset automatically after a few seconds when the overload (caused for example by frozen windows) has been corrected.

Colour coding of fuses

Colour	Amperes
light brown	5
red	10
Blue	15
yellow	20
natural (white)	25
green	30
orange	40
red	50
white	80
Blue	100
grey	150
violet	200



WARNING

Never "repair" damaged fuses and never replace them with fuses with a higher rating. Failure to comply could result in fire. This could also cause damage to other parts of the electrical system.



Note

- If a newly replaced fuse blows again after a short time, the electrical system must be checked by a qualified workshop as soon as possible.
- If you replace a fuse with a stronger fuse, you could cause damage to another location in the electrical system.
- \bullet Always keep some spare fuses in the vehicle. These are available from SEAT dealers. \blacksquare

Fuses on left side of dash panel

Fuses

Number	Consumer	Amperes
1	Vacant	
2	Vacant	
3	Vacant	
4	Vacant	
5	Vacant	
6	Vacant	
7	Vacant	
8	Vacant	
9	Airbag	5
10	RSE input (roof screen)	10
11	Vacant	
11	Vacant	
12	Left xenon headlight 10	
13	Heating controls / ESP, ASR switch / Reverse / Preinstallation of telephone / Tomtom Navigator	5
14	ABS/ESP switchboard / Engine / Headlights / Trailer switchboard / Light switch / Instrument panel / 4x4 switchboard ^{a)}	10
15	Headlight regulation switchboard / Heated wipers / Instrument lights / Diagnosis Switchboard	10
16	Right xenon headlight	10
17	Engine management 10	
18	Vacant	
19	Vacant	

Number	Consumer	Amperes	
20	Park Pilot (Parking assistant) / Gear lever/ ESP switchboard	10	
21	Cable control unit	7,5	
22	Volumetric alarm sensor/ Alarm horn	5	
23	Diagnosis / Rain sensor / Light switch	10	
24	Vacant		
25	Switchboard coupling automatic gearbox	20	
26	Vacuum pump	20	
27	RSE input (roof screen)	10	
28	Rear wiper motor / Switchboard wiring	20	
29	Vacant		
30	Cigarette lighter / socket	20	
31	Vacant		
32	Vacant		
33	Heater	40	
34	Vacant		
35	Vacant		
36	Engine management	10	
37	Engine management		
38	Engine management		
39	Trailer control unit (coupling)		
40	Trailer control unit (indicators, brakes and left side)		
41	Trailer control unit (fog light, reversing light and right side)		
42	Vacant		
43	Trailer pre-installation	40	

Safety First Operating instructions Tips and Maintenance Technical Data

Number	Consumer	Amperes
44	Rear window heater	25
45	Electric windows (front)	30
46	Rear electric windows	30
47	Engine (Fuel control unit, petrol relay)	15
48	Convenience controls	20
49	Heating controls	40
50	Heated seats	30
51	Sunroof	20
52	Headlight washer system	20
53	Vacant	
54	Taxi (taximeter power supply)	5
55	Vacant	
56	Taxi (taximeter power supply)	15
57	Vacant	
58	Central locking control unit	30

a) For four-wheel drive vehicles.

Please note that the above list, while correct at the time of printing, is subject to alterations. If discrepancies should occur, please refer to the sticker on the inside of the fuse cover for the correct information for your model.

Fuses layout, engine compartment, left part

Fuses

Number	Consumer	Amperes
1	Windscreen wipers	30
2	Steering column	5
3	Cable control unit	5
4	ABS	30
5	AQ gearbox	15
6	instrument panel	5
7	Vacant	
8	Radio	15
9	Telephone/TomTom Navigator	5
10	Engine management	5
10	Engine management	10
11	Vacant	
12	Electronic control unit	5
13	Petrol injection module supply	25
15	Diesel injection module supply	30
14	Coil	20
15	Engine management	5
15	Pump relay	10
16	ABS pump	30
17	Horn	15
18	Vacant	

Number	Consumer	Amperes
19	Clean	30
20	Vacant	
21	Lambda probe	15
22	Brake pedal, speed sensor	5
	Engine management	5
23	Engine management	10
	Engine management	15
24	ARF, gearbox valve	10
25	Right lighting	40
26	Left lighting	40
27	Engine management	
21	Engine management	50
28	lgnition key	
29	Electric windows (front and back)	
29	Electric windows (front)	30
30	Ignition key	40

Position in engine compartment: Side box

Fuses

Number	Consumer	Amperes
B1	Alternator < 140 W	
B1	Alternator > 140 W	200
C1	Power steering servo	80
D1	Multi-terminal voltage supply "30". Internal fuse box	100
E1	Ventilator > 500 W / Ventilator < 500 W	80/50
F1	PTCs (Supplementary electrical heating using air)	80
G1	PTC (Supplementary electrical heating using air)	40
H1	Central locking control unit	

Some of the electrical items listed in the table are only fitted on certain models or are optional extras.

Please note that the above list, while correct at the time of printing, is subject to alterations.

Bulb change

General notes

Before changing any bulb, first turn off the equipment concerned.

Do not touch the bulb glass. Fingerprints vaporise in the heat, causing a reduction in the bulb life and condensation on the mirror surface, thus reducing efficiency.

A bulb should only be replaced by one of the same type. The type is inscribed on the bulb, either on the glass part or on the base.

It is highly recommended to keep a box of spare bulbs in the vehicle. At the very least, the bulbs that most affect road safety should have spares in the vehicle.

Main headlights

Dipped beam - H7 Main beam - H1 Position - W5W Turn signals - PY21W

fety First Operating instructions Tips and Maintenance Technical Da

Xenon headlights²³⁾/self-directing

Dipped and full beam - D1S²⁴⁾ Flashes and extra full beam - H1 Position W5W Turn signals PY21W

Fog lights

Fog lights - H3

Fixed rear light

Stop/Position - P21W²⁵⁾ Turn signals - P21W

Rear tailgate light unit

Fog light (driver's side) - P21W Reverse (passenger's side) - P21W Position - W5W

Side indicator

Side indicator - W5W

Registration plate light

Registration plate light - C5W



Note

• Due to the difficulty in accessing the lamps, any replacement work should be done by a SEAT dealer. However, the following is a description of how to change the bulbs except for the fog lights and interior bulbs.

Main headlight lamps

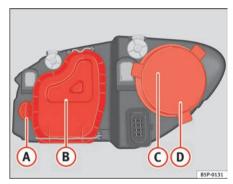


Fig. 185 Main headlight lamps

- A) Turn signals
- B Dipped headlights
- © Main beam headlights
- Side lights

²³⁾ On this type of headlight, the bulb changes must be made by the SEAT dealer, given that complex elements must be removed from the vehicle and a reset must be made on the automatic control system incorporated.

The Xenon bulbs discharge 2.5 times the light flux and have an average lifespan of 5 times more than that of halogen bulbs, this means that, except due to unusual circumstances, there is no need to change the bulbs for the whole life of the vehicle.

²⁵⁾ Electronically controlled single filament bulb for Stop/side bulbs. If the bulb blows it will not work in either position or Stop.

Turn signal lamps

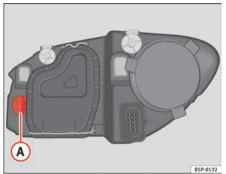


Fig. 186 Turn signal lamps

- Raise the bonnet.
- Rotate the lamp holder \Rightarrow fig. 186 (A) to the left and pull.
- Remove the bulb by pressing on the lamp holder and rotating at the same time to the left.
- Installation is done in the reverse order.

Dipped beam lights

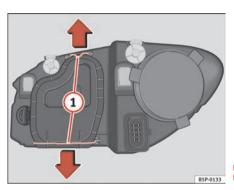


Fig. 187 Dipped headlights

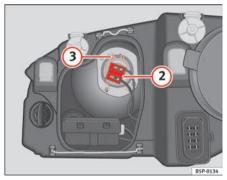


Fig. 188 Dipped headlights

- Raise the bonnet.

Safety First Operating instructions Tips and Maintenance Technical Date

- Remove the loops ⇒ page 261, fig. 187 ① in the direction of the arrow and remove the cover.
- Remove the connector \Rightarrow page 261, fig. 188 (2) from the bulb.
- Disengage the retainer spring ⇒ page 261, fig. 188 ③ pressing inwards and to the right.
- Extract the bulb and fit the replacement so that the rim of the attachment plate is on the reflector cut-out.

Main beam lights

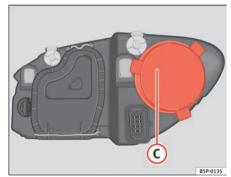


Fig. 189 Main beam headlights

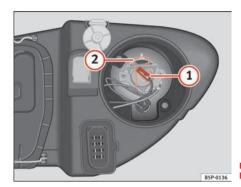


Fig. 190 Main beam headlights

- Raise the bonnet.
- Remove the cover \Rightarrow fig. 189 © by pulling on this.
- Remove the connector \Rightarrow fig. 190 (1) from the bulb.
- Press the spring \Rightarrow fig. 190 (2) inwards and to the right.
- Extract the bulb and fit the replacement so that it sits correctly into the cut-out on the reflector.
- Installation is done in the reverse order.

Side lights

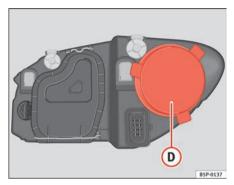


Fig. 191 Side lights

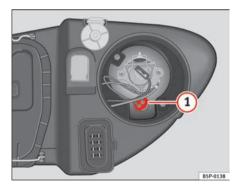


Fig. 192 Side lights

- Raise the bonnet.
- Remove the cover \Rightarrow fig. 191 (b) by pulling on this.

- Extract the lamp holder \Rightarrow fig. 192 (1) outwards.
- Replace the bulb by pulling this out and inserting the replacement.
- Installation is done in the reverse order.

Rear lights

- On the body
- Indicator, side and brake light
- On the tailgate
- Left hand side: position and antifog.
- Right hand side: reverse and position.

Indicator, side and brake lights on the bodywork



Fig. 193 Lights on vehicle body

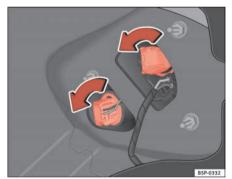


Fig. 194 Lights on vehicle body

Remove the cover of the luggage compartment lateral panel
 ⇒ fig. 193.

- Turn the lampholder to the left \Rightarrow fig. 194.
- Extract the failed bulb and change it for a new one.
- To refit follow the steps in reverse order, taking special care when fitting the lamp holder.

Position light, fog light and reverse light on the tailgate

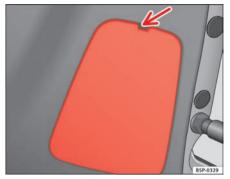


Fig. 195 Lights on the tailgate

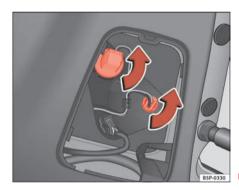


Fig. 196 Side lights

Side lights

- Open the tailgate.

- Pull the cover off.
- Take the lampholder out pressing on the securing pins and extract it outwards.
- Remove the blown bulb and replace it with another.
- To refit follow the steps in reverse order, taking special care when fitting the lamp holder.

Antifog and reverse light

- Open the tailgate.
- Pull the cover off.
- Turn the lampholder to the left.
- Remove the blown bulb and replace it with another.
- Installation is done in the reverse order.

Side indicators

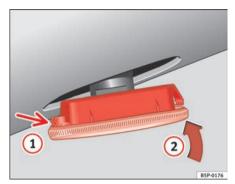


Fig. 197 Side indicator

- Press the indicator to the left or to the right to remove the lamp.
- Remove the lamp holder from the indicator.
- Remove the failed glass bulb and replace with a new bulb.
- Insert the lamp holder in the indicator guide until it clicks into place.
- First place the indicator in the opening in the bodywork, fixing the tabs ⇒ fig. 197, arrow 1.
- Insert the lamp as shown by the arrow (2) ⇒ fig. 197.

Luggage compartment lights

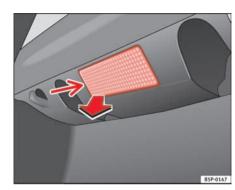


Fig. 198 Luggage compartment light

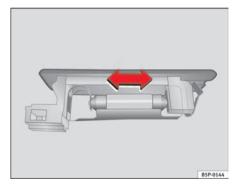


Fig. 199 Luggage compartment light

 Extract the tulip shaped fitting by pressing on the inside edge of this -arrow- using the flat side of a screwdriver ⇒ fig. 198. Press the lamp sideways and remove it from the allotment
 ⇒ page 266, fig. 199.

Registration light



Fig. 200 Registration plate light

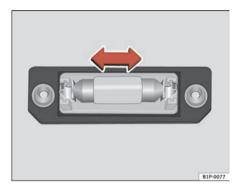


Fig. 201 Registration plate light

- To remove the bulb holder, unscrew the bolts \Rightarrow fig. 200.
- Remove the lamp, moving it in the direction of the arrow and outwards ⇒ fig. 201.
- Installation is done in the reverse order.

Sunroof light

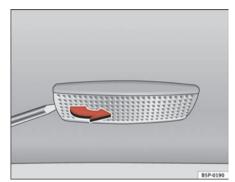


Fig. 202 Removing sunroof light

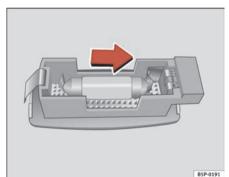


Fig. 203 Removing sunroof light

 Carefully remove the lamp, using the flat side of the screwdriver, as shown in the figure ⇒ fig. 203. Remove the lamp, moving it in the direction of the arrow and outwards ⇒ fig. 203.

Jump-starting

Jump leads

The jump lead must have a sufficient wire cross section.

If the engine fails to start because of a discharged battery, the battery can be connected to the battery of another vehicle to start the engine.

Jump leads

Jump leads must comply with the standard **DIN 72553** (see manufacturer's documentation). The wire cross section must be at least 25 mm² for petrol engines and at least 35 mm² for diesel engines.



Note

- The vehicles must not touch each other, otherwise electricity could flow as soon as the positive terminals are connected.
- \bullet $\:$ The discharged battery must be properly connected to the vehicles electrical system. \blacksquare

How to jump start: description

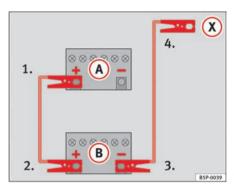


Fig. 204 How to connect the jump leads

In \Rightarrow fig. 204, the flat battery is (A) and the charged battery (B).

Jump lead terminal connections

- Switch off the ignition on both vehicles $\Rightarrow \triangle$.
- Connect one end of the red jump lead to the positive ⇒ fig. 204
 terminal of the vehicle with the flat battery ⇒ ⚠.
- 2. Connect the other end of the red jump lead to the positive terminal (+) in the vehicle providing assistance.
- Connect one end of the black jump lead to the negative terminal

 on the battery of the vehicle providing assistance.

- 4. Connect the other end of the black jump lead **(x)** to a solid metal component which is bolted on to the engine block, or onto the engine block itself of the vehicle with the flat battery. Do not connect it to a point near the battery ⇒ **(**↑.
- Position the leads in such a way that they cannot come into contact with any moving parts in the engine compartment.

Starting

- 6. Start the engine of the vehicle with the boosting battery and let it run at idling speed.
- 7. Start the engine of the car with the flat battery and wait one or two minutes until the engine is "running".

Removing the jump leads

- 8. Before you remove the jump leads, switch off the headlights (if they are switched on).
- 9. Turn on the heater blower and rear window heater in the vehicle with the flat battery. This helps minimise voltage peaks which are generated when the leads are disconnected.
- 10. When the engine is running, disconnect the leads in reverse order to the details given above.

Connect the battery clamps so they have good metal-to-metal contact with the battery terminals.

If the engine fails to start, switch off the starter after about 10 seconds and try again after about half a minute.

Safety First Operating instructions Tips and Maintenance Technical Dat

⚠

WARNING

- Please note the safety warnings referring to working in the engine compartment ⇒ page 215, "Working in the engine compartment".
- The battery providing assistance must have the same voltage as the flat battery (12V) and approximately the same capacity (see imprint on battery). Failure to comply could result in an explosion.
- Never use jump leads when one of the batteries is frozen. Danger of explosion! Even after the battery has thawed, battery acid could leak and cause chemical burns. If a battery freezes, it should be replaced.
- Keep sparks, flames and lighted cigarettes away from batteries, danger of explosion. Failure to comply could result in an explosion.
- Observe the instructions provided by the manufacturer of the jump leads.
- Do not connect the negative cable from the other vehicle directly to the negative terminal of the flat battery. The gas emitted from the battery could be ignited by sparks. Danger of explosion.
- Do not attach the negative cable from the other vehicle to parts of the fuel system or to the brake line.
- The non-insulated parts of the battery clamps must not be allowed to touch. The jump lead attached to the positive battery terminal must not touch metal parts of the vehicle, this can cause a short circuit.
- Position the leads in such a way that they cannot come into contact with any moving parts in the engine compartment.
- Do not bend over the batteries. This could result in chemical burns.



Not

The vehicles must not touch each other, otherwise electricity could flow as soon as the positive terminals are connected. \blacksquare

Towing and tow-starting

Tow-starting

The use of jump leads is preferable to tow-starting.

We recommend that you do **not** tow-start your vehicle. Jump-starting is preferable \Rightarrow page 268.

However, if your vehicle has to be tow-started:

- Engage the 2nd or the 3rd gear.
- Keep the clutch pressed down.
- Switch on the ignition.
- Once both vehicles are moving, release the clutch.
- As soon as the engine starts, press the clutch and move the gear lever into neutral. This helps to prevent driving into the towing vehicle.



WARNING

The risk of accidents is high when tow-starting. The vehicle being towed can easily collide with the towing vehicle.



Caution

When tow-starting, fuel could enter the catalytic converter and damage it. \blacksquare

General notes

Please observe the following points if you use a tow-rope:

Notes for the driver of the towing vehicle

- Drive slowly at first until the tow-rope is taut. Then accelerate gradually.
- Begin and change gears cautiously. If you are driving an automatic vehicle, accelerate gently.
- Remember that the brake servo and power steering are not working in the vehicle you are towing. Brake earlier than you would normally, but with a more gentle pressure on the brake.

Notes for the driver of the towed vehicle

- Ensure that the tow-rope remains taut at all times when towing.

Tow-rope or tow-bar

It is easier and safer to tow a vehicle with a tow-bar. You should only use a tow-rope if you do not have a tow-bar.

A tow-rope should be slightly elastic to reduce the loading on both vehicles. It is advisable to use a tow-rope made of synthetic fibre or similarly elastic material.

Attach the tow-rope or the tow-bar only to the towing eyes provided or a towing bracket.

Driving style

Towing requires some experience, especially when using a tow-rope. Both drivers should be familiar with the technique required for towing. Inexperienced drivers should not attempt to tow-start or tow away another vehicle.



Do not pull too hard with the towing vehicle and take care to avoid jerking the tow-rope. When towing on an unpaved road, there is always a risk of overloading and damaging the anchorage points.

The ignition of the vehicle being towed must be switched on to prevent the steering wheel from locking and also to allow the use of the turn signals, horn, windscreen wipers and washers.

As the brake servo does not work if the engine is not running, you must apply considerably more pressure to the brake pedal than you normally would.

As the power assisted steering does not work if the engine is not running, you will need more strength to steer than you normally would.

- The vehicle must not be towed faster than 50 km/h.
- The vehicle must not be towed faster than 50 Km/h.

Towing vehicles with an automatic gearbox

- Put the selector lever into position "N".
- Do not drive faster than 50 km/h when towing a vehicle.
- Do not tow further than 50 km.
- If a breakdown vehicle is used, the vehicle must be towed with the front wheels raised.



Note

- Observe legal requirements when towing or tow-starting.
- Switch on the hazard warning lights of both vehicles. However, observe any regulations to the contrary.
- For technical reasons, vehicles with an automatic gearbox must not be tow-started.
- If damage to your vehicle means that there is no lubricant in the gearbox, you must raise the drive wheels while the vehicle is being towed.
- If the vehicle has to be towed more than 50 km, the front wheels must be raised during towing, and towing should be carried out by a qualified person.

- The steering wheel is locked when the vehicle has no electrical power. The vehicle must then be towed with the front wheels raised. Towing should be carried out by a qualified person.
- The towing eye should always be kept in the vehicle. Please refer to the notes on ⇒ page 271, "Tow-starting". ■

Towing eyes

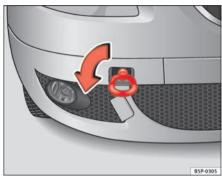


Fig. 205 The front right section of the vehicle: Fitting the front towing eye

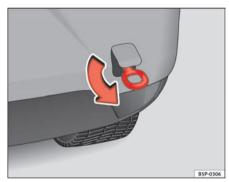


Fig. 206 Fitting the towing eye to the rear of the vehicle

Fitting the towing eye

- Take the towing ring from the onboard tools.

- Pull the lower front cover down and leave the cover hanging on the vehicle.
- Remove the cover of the screw hole, insert a screwdriver into the lower slot and lever gently.
- Screw the towing eye as shown by arrow anti-clockwise to the limit position in the front ⇒ fig. 205 or rear ⇒ fig. 206 threaded hole.

Towing eye. Freetrack

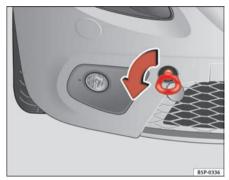


Fig. 207 Front towing eye for vehicles with fourwheel drive



Fig. 208 Rear towing eye for vehicles with four-wheel drive

Fitting the towing eye

- Take the towing ring from the onboard tools.

- Pull the lower front cover down and leave the cover hanging on the vehicle.
- Remove the cover of the screw hole, insert a screwdriver into the lower slot and lever gently.
- Screw the towing eye as shown by arrow anti-clockwise to the limit position in the front ⇒ fig. 207 or rear ⇒ fig. 208 threaded hole.

Technical Data

General notes on the technical data

What you should be aware of

General notes

All data in the official vehicle documents take precedence over this data.

All data in these documents are valid for the basic model as offered in Spain. The vehicle data card included in the inspection and maintenance schedule in the vehicles registration documents show which engine is installed in the vehicle.

The figures may be different if additional equipment is fitted, for different models, for special vehicles and for other countries.

Abbreviations used in this paragraph of the Technical Data

Abbreviation	Meaning	
kW	Kilowatt, engine power measurement.	
bhp	Brake horse power, formerly used to denote engine power	
at rpm	Revolutions per minute - engine speed.	
Nm	Newton metres, unit of engine torque.	
l/100 km	Fuel consumption in litres per 100 kilometres	
g/km	Carbon dioxide emissions in grams per kilometre.	
CO ₂	Carbon dioxide	
CN	Cetane number, indication of the ignition quality of the diesel.	
RON	Research octane number, indication of the knock resistance of petrol.	

Safety First Operating instructions Tips and Maintenance Technical Data

Vehicle identification data

The most important data are given on the type plate and the vehicle data sticker.

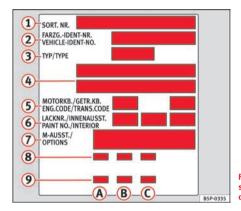


Fig. 209 Vehicle data sticker – luggage compartment

Vehicles for certain export countries do not have a type plate.

Type plate

The type plate is located on the left rib inside the engine compartment.

Vehicle identification number

The vehicle identification number (chassis number) can be read from outside the vehicle through a viewer in the windscreen. This is located on the left-hand side of the vehicle in the lower area of the windscreen. It is also located on the right hand side of the engine compartment.

Vehicle data

The data sticker is placed on the inside of the spare wheel recess in the luggage compartment.

The following information can be found in the vehicle information: \Rightarrow fig. 209

This information also figures in the Maintenance Program.

- Production control number
- 2) Vehicle identification number (chassis number)
- (3) Model code number
- (4) Model designation / engine power output
- 5 Engine and gearbox code letters
- (6) Paint number / interior trim code
- 7 Optional equipment codes
- (8) Consumption values
- (9) CO₂ emissions values.

The data of 2 to 9 also figure in the Maintenance Program.

CO emissions and consumption 2

- (A) Consumption (litres/100 km) / CO₂ emissions (g/km) urban.
- (B) Consumption (litres/100 km) / CO₂ emissions (g/km), road.
- C Consumption (litres/100 km) / CO₂ emissions (g/km) combination.

How are the figures measured?

Fuel consumption

The consumption and emission details shown on the vehicle data sticker differ from one vehicle to another.

The fuel consumption and ${\rm CO}_2$ emissions of the vehicle can be found on the vehicle data sticker.

The fuel consumption and emissions figures given are based on the weight category of the car, which is determined according to the engine/gearbox combination and the equipment fitted.

The consumption and emission figures are calculated in accordance with the EC test requirements 1999/100/EC. These test requirements specify a realistic test method based on normal everyday driving.

The following test conditions are applied:

Urban cycle	The urban cycle starts with an engine cold start. City driving is then simulated.	
Extra urban cycle	In the extra urban cycle the vehicle undergoes frequent acceleration and braking in all gears, as in normal everyday driving. The road speed ranges from 0 to 120 km/h.	
Combined	The average overall consumption is calculated with a weighting of around 37% for the urban cycle and 63% for the extra urban cycle.	
The exhaust gases are collected during both driving cycles to calculate carbon dioxide emissions. The gas composition analysed to evaluate the CO ₂ content and other emissions.		



Note

• Actual consumption may vary from quoted test values, depending on personal driving style, road and traffic conditions, the weather and the condition of the vehicle.

Safety First Operating instructions Tips and Maintenance Technical Data

Weights

Kerb weight refers to the basic model with a fuel tank filled to 90% capacity and without optional extras. The figure quoted includes 75 kg to allow for the weight of the driver.

For special versions and optional equipment fittings or for the addition of accessories, the weight of the vehicle will increase $\Rightarrow \triangle$.



WARNING

- Please note that the centre of gravity may shift when transporting heavy objects; this may affect the vehicle's handling and lead to an accident. Always adjust your speed and driving style to suit road conditions and requirements.
- Never exceed the gross axle weight rating or the gross vehicle weight rating. If the allowed axle load or the allowed total weight is exceeded, the driving characteristics of the vehicle may change, leading to accidents, injuries and damage to the vehicle.

Towing a trailer

Trailer weights

Trailer weights

The trailer weights and drawbar loads approved are selected in intensive trials according to precisely defined criteria. The approved trailer weights are valid for vehicles in the EU for maximum speeds of 80 km/h (in certain circumstances up to 100 km/h). The figures may be different in other countries. All data in the official vehicle documents take precedence over these data $\Rightarrow \bigwedge$.

Drawbar load

The *maximum* permitted weight exerted by the trailer drawbar on the ball joint of the towing bracket must not exceed **75 kg**.

In the interest of road safety, we recommend that you always tow approaching the maximum drawbar load. The response of the trailer on the road will be poor if the drawbar load is too small.

If the maximum permissible drawbar load cannot be met (e.g. with small, empty and light-weight single axle trailers or tandem axle trailers with an axle base of less than 1 metre), at least 4% of the actual trailer weight is a legal stipulation for a drawbar load.



WARNING

- For safety reasons, you should not drive at speeds above 80 km/h when towing a trailer. This also applies to countries where higher speeds are permitted.
- Never exceed the maximum trailer weights or the draw bar loading. If the permissible axle load or the permissible total weight is exceeded, the driving characteristics of the vehicle may change, leading to accidents, injuries and damage to the vehicle. ■

Technical data

Checking fluid levels

From time to time, the levels of the different fluids in the vehicle must be checked. Never fill with incorrect fluids, to do so may cause serious damage to the engine.

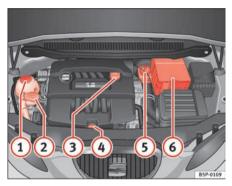


Fig. 210 Diagram for the location of the various elements

- (1) Radiator expansion tank
- (2) Windscreen washer fluid reservoir
- Engine oil filler cap
- 4 Engine oil dipstick
- Brake fluid reservoir
- 6 Vehicle battery (underneath the cover)

The checking and replenishment of the service fluids are carried out on the components mentioned above. These operations are described in the \Rightarrow page 215.

Overview

Further explanations, instructions and restrictions on the technical data are contained as of \Rightarrow page 275.

Petrol engine 1.4 63 kW (86 bhp)

General engine data

Power output in kW (bhp)	rpm	63 (86)/ 5000
Maximum torque in Nm	n at rpm	132/ 3800
No. of cylinders, capacity	in cm ³	4/ 1390
Compression ratio		$10,5\pm0,3$
Fuel		Premium unleaded 95 RON or regular unleaded 91 RON ^{a)}

a) With a slight power loss

Performance figures

Maximum speed in km/	169
Acceleration from 0-80 km/h in se	. 9,9
Acceleration from 0-100 km/h in se	. 15,1

Weights

Gross vehicle weight	in kg	1950
Weight in working order (with driver)	in kg	1405
Gross axle weight, front	in kg	934
Gross axle weight, rear	in kg	1033
Permitted roof load	in kg	75

Trailer weights

With no brakes, gradients up to 12%	700
With brakes, gradients up to 12%	1000

Engine oil capacity

Approximate engine oil capacity with oil filter change	2.8 litres		
ŀ	Approximate engine oil capacity with oil filter change	Approximate engine oil capacity with oil filter change 2.8 litres	Approximate engine oil capacity with oil filter change 2.8 litres

Petrol engine 1.4 92 kW (125 bhp)

General engine data

Power output in kW (bhp) rpm	92 (125)/ 5600
Maximum torque in Nm at rpm	200/ 1750-4000
No. of cylinders, capacity in cm ³	4/ 1390
Compression ratio	9,7 -0,4
Fuel	Premium unleaded 95 RON or regular unleaded 91 RON ^{a)}

a) With a slight power loss

Performance figures

Maximum speed in km/h	194
Acceleration from 0-80 km/h in sec.	7,0
Acceleration from 0-100 km/h in sec.	10,5

Weights

Gross vehicle weight	in kg	2023	
Weight in working order (with driver)	in kg	1478	
Gross axle weight, front	in kg	1004	
Gross axle weight, rear	in kg	1036	
Permitted roof load	in kg	75	

Safety First Operating instructions Tips and Maintenance Technical Data

Trailer weights

With no brakes, gradients up to 12%	730
With brakes, gradients up to 12%	1200

Engine oil capacity

1			
	Approximate engine oil capacity with oil filter change	3.3 litres	

Petrol engine 1.6l 75 kW (102 bhp)

General engine data

Power output in kW (bhp) rpm	75 (102)/ 5600
Maximum torque in Nm at rpm	148/ 3800
No. of cylinders, capacity in cm ³	4/ 1595
Compression ratio	$10,5 \pm 0,5$
Fuel	Premium unleaded 95 RON or regular unleaded 91 RON ^{a)}

a) With a slight power loss

Performance figures

Maximum speed in km/h	181
Acceleration from 0-80 km/h in sec.	8,7
Acceleration from 0-100 km/h in sec.	13,0

Weights

Gross vehicle weight	in kg	1979	
Weight in working order (with driver)	in kg	1434	
Gross axle weight, front	in kg	971	
Gross axle weight, rear	in kg	1025	
Permitted roof load	in kg	75	

Trailer weights

With no brakes, gradients up to 12%	710
With brakes, gradients up to 12%	1200

Engine oil capacity

Engine oil capacity with oil filter change.	4.1 litres
---	------------

Petrol engine 1.8 118 kW (160 bhp)

General engine data

Power output in kW (bhp)	rpm	118 (160)/ 5000-6200
Maximum torque in	Nm at rpm	250/ 1500-4200
No. of cylinders, capacity	in cm ³	4/ 1798
Compression ratio		9,8-0,5
Fuel		Premium unleaded 95 RON or regular unleaded 91 RON ^{a)}

a) With a slight power loss

afety First Operating instructions Tips and Maintenance Technical Data

Performance figures

Maximum speed in km/h	210
Acceleration from 0-80 km/h in sec.	6,0
Acceleration from 0-100 km/h in sec.	8,6

Weights

Gross vehicle weight in	kg 2094
Weight in working order (with driver) in	kg 1549
Gross axle weight, front in	kg 1068
Gross axle weight, rear in	kg 1043
Permitted roof load in	kg 75

Trailer weights

With no brakes, gradients up to 12%	750
With brakes, gradients up to 12%	1400

Engine oil capacity

Engine oil capacity with oil filter change.	4.6 litres	_
---	------------	---

Petrol engine 2.0 110 kW (150 bhp)

General engine data

Power output in kW (bhp) rpm	110 (150)/ 6000
Maximum torque in Nm at rpm	200/ 3500
No. of cylinders, capacity in cm ⁻³	4/ 1984
Compression ratio	11,5-0,5
Fuel	Super Plus unleaded 98 RON or Premium unleaded 95 RON ^{a)}

a) With a slight power loss

Performance figures

Maximum speed in km/h	206
Acceleration from 0-80 km/h in sec.	6,6
Acceleration from 0-100 km/h in sec.	9,8

Weights

Gross vehicle weight in kg	2034
Weight in working order (with driver) in kg	1489
Gross axle weight, front in kg	1022
Gross axle weight, rear in kg	1029
Permitted roof load in kg	75

Trailer weights

With no brakes, gradients up to 12%	740	
With brakes, gradients up to 12%	1400)

Safety First Operating instructions Tips and Maintenance Technical Data

Engine oil capacity

Approximate engine oil capacity with oil filter change	4.6 litres	
--	------------	--

Petrol engine 2.0 litre 110 kW (150 bhp). Automatic

General engine data

Power output in kW (bhp) rpi	n 110 (150)/ 6000
Maximum torque in Nm at rpr	n 200/ 3500
No. of cylinders, capacity in cm	3 4/ 1984
Compression ratio	11,5-0,5
Fuel	Super Plus unleaded 98 RON or Premium unleaded 95 RON ^{a)}

a) With a slight power loss

Performance figures

Maximum speed in km/h	203
Acceleration from 0-80 km/h in sec.	7,0
Acceleration from 0-100 km/h in sec.	10,2

Weights

Gross vehicle weight in kg	2074
Weight in working order (with driver) in kg	1529
Gross axle weight, front in kg	1057
Gross axle weight, rear in kg	1034
Permitted roof load in kg	75

Trailer weights

With no brakes, gradients up to 12%	750
With brakes, gradients up to 12%	1400

Engine oil capacity

Approximate engine oil capacity with oil filter change 4.6 litres	Approximate engine oil capacity with oil filter change	4.6 litres	
---	--	------------	--

Petrol engine 2.0 litre 147 kW (200 bhp)

General engine data

Power output in kW (bhp)	pm 147 (200)/ 5100 - 6000
Maximum torque in Nm at r	pm 280/ 1800-5000
No. of cylinders, capacity in cr	n ³ 4/ 1984
Compression ratio	10,3-0,5
Fuel	Super Plus unleaded 98 RON or Premium unleaded 95 RON ^{a)}

a) With a slight power loss

Performance figures

Maximum speed in km/h	220
Acceleration from 0-80 km/h in sec.	5,4
Acceleration from 0-100 km/h in sec.	7,7

Weights

Gross vehicle weight	in kg	1960
Weight in working order (with driver)	in kg	1507
Gross axle weight, front	in kg	1082
Gross axle weight, rear	in kg	1014
Permitted roof load	in kg	75

Trailer weights

With no brakes, gradients up to 12%	750
With brakes, gradients up to 12%	1400

Engine oil capacity

Approximate engine oil capacity with oil filter change	4.8 litres	
--	------------	--

Petrol engine 2.0 litre 147 kW (200 bhp). Automatic

General engine data

Power output in kW (bhp)	rpm	147 (200)/ 5100 - 6000
Maximum torque	in Nm at rpm	280/ 1800-5000
No. of cylinders, capacity	in cm ³	4/ 1984
Compression ratio		10,3-0,5
Fuel		Super Plus unleaded 98 RON or Premium unleaded 95 RON ^{a)}

a) With a slight power loss

Performance figures

Maximum speed in km/h	220
Acceleration from 0-80 km/h in sec.	5,4
Acceleration from 0-100 km/h in sec.	7,7

Weights

Gross vehicle weight	in kg	2124
Weight in working order (with driver)	in kg	1579
Gross axle weight, front	in kg	1112
Gross axle weight, rear	in kg	1036
Permitted roof load	in kg	75

Trailer weights

With no brakes, gradients up to 12%	750
With brakes, gradients up to 12%	1400

Engine oil capacity

Approximate engine oil capacity with oil filter change	4.8 litres
--	------------

Petrol engine 2.0 litre 147 kW (200 bhp). Freetrack

General engine data

Power output in kW (bhp) rp	n 147 (200)/ 5100 - 6000
Maximum torque in Nm at rp	n 280/ 1800-5000
No. of cylinders, capacity in cm	3 4/ 1984
Compression ratio	10,3-0,5
Fuel	Super Plus unleaded 98 RON or Premium unleaded 95 RON ^{a)}

a) With a slight power loss

Performance figures

	Front-wheel drive	Four-wheel drive
Maximum speed in km/h	216	214
Acceleration from 0-80 km/h in sec.	5,4	5,1
Acceleration from 0-100 km/h in sec.	7,7	7,5

Weights

		Front-wheel drive	Four-wheel drive
Gross vehicle weight	in kg	1960	2191
Weight in working order (with driver)	in kg	1525	1646
Gross axle weight, front	in kg	928	1108
Gross axle weight, rear	in kg	665	1096
Permitted roof load	in kg	75	

Trailer weights

With no brakes, gradients up to 12%	750
With brakes, gradients up to 12%	1400

Engine oil capacity

Approximate engine oil capacity with oil filter change	4.8 litres	•

Diesel engine 1.9 TDI 77 kW (105 bhp)

General engine data

Power output in kW (bhp) rpm	77 (105) 4000
Maximum torque in Nm at rpm	250/1900
No. of cylinders, capacity in cm ³	4/1896
Compression ratio	19 ± 0,5
Fuel	Min. 51 CZ

Performance figures

Maximum speed	in km/h	183	
Acceleration from 0-80 km/h	in sec.	8,4	
Acceleration from 0-100 km/h	in sec.	12,6)

Weights

Gross vehicle weight	in kg	2064
Weight in working order (with driver)	in kg	1519
Gross axle weight, front	in kg	1050
Gross axle weight, rear	in kg	1031
Permitted roof load	in kg	75

Trailer weights

With no brakes, gradients up to 12%	750
With brakes, gradients up to 12%	1400

Engine oil capacity

Approximate engine oil capacity with oil filter change	4,3	•
--	-----	---

Diesel engine 1.9 TDI 77 kW (105 bhp). Automatic

General engine data

Power output in kW (bhp) rpn	77 (105) 4000
Maximum torque in Nm at rpn	250/1900
No. of cylinders, capacity in cm	4/1896
Compression ratio	19±0,5
Fuel	Min. 51 CZ

Performance figures

Maximum speed in km/h	183
Acceleration from 0-80 km/h in sec.	8,2
Acceleration from 0-100 km/h in sec.	12,7

Weights

Gross vehicle weight	in kg	2094	
Weight in working order (with driver)	in kg	1549	
Gross axle weight, front	in kg	1080	
Gross axle weight, rear	in kg	1031	
Permitted roof load	in kg	75	

Trailer weights

With no brakes, gradients up to 12%	750
With brakes, gradients up to 12%	1400

Engine oil capacity

Approximate engine oil capacity with oil filter change	4,3	
--	-----	--

Diesel engine 2.0l 103 kW (140 bhp)

General engine data

Power output in kW (bhp) rpm	103 (140)/ 4000
Maximum torque in Nm at rpm	320/ 1750 - 2500
No. of cylinders, capacity in cm ³	4/ 1968
Compression ratio	$18,5 \pm 0,5$
Fuel	Min. 51 CZ

Performance figures

Maximum speed in km/h	201
Acceleration from 0-80 km/h in sec.	7,0
Acceleration from 0-100 km/h in sec.	10,0

Weights

Gross vehicle weight	in kg	2089
Weight in working order (with driver)	in kg	1544
Gross axle weight, front	in kg	1082
Gross axle weight, rear	in kg	1024
Permitted roof load	in kg	75

Trailer weights

With no brakes, gradients up to 12%	750
With brakes, gradients up to 12%	1400

Engine oil capacity

ĺ	Approximate engine oil capacity with oil filter change	4.3 litres	
- 1	Approximate engine on capacity with on litter change		1-

Diesel engine 2.0l 103 kW (140 bhp). Freetrack

General engine data

Power output in kW (bhp) rpm	103 (140)/ 4000
Maximum torque in Nm at rpm	320/ 1750 - 2500
No. of cylinders, capacity in cm ³	4/ 1968
Compression ratio	$18,5 \pm 0,5$
Fuel	Min. 51 CZ

Performance figures²⁶⁾

²⁶⁾ Front-wheel drive

Maximum speed in I	km/h	196	
Acceleration from 0-80 km/h	n sec.	7,1	ĺ
Acceleration from 0-100 km/h	n sec.	10,2	

Weights²⁷⁾

²⁷⁾ Front-wheel drive

Gross vehicle weight	in kg	2124
Weight in working order (with driver)	in kg	1579
Gross axle weight, front	in kg	1096
Gross axle weight, rear	in kg	1041
Permitted roof load	in kg	75

Trailer weights

With no brakes, gradients up to 12%	750
With brakes, gradients up to 12%	1400

Engine oil capacity

- 1			
	Approximate engine oil capacity with oil filter change	4.3 litres	

Diesel engine 2.0l 103 kW (140 bhp). Automatic

General engine data

Power output in kW (bhp) rpm	103 (140)/ 4000
Maximum torque in Nm at rpm	320/ 1750 - 2500
No. of cylinders, capacity in cm ³	4/ 1968
Compression ratio	18,5 ± 0,5
Fuel	Min. 51 CZ

Performance figures

Maximum speed in km/h	201
Acceleration from 0-80 km/h in sec.	6,7
Acceleration from 0-100 km/h in sec.	10,0

Weights

Gross vehicle weight	in kg	2124
Weight in working order (with driver)	in kg	1579
Gross axle weight, front	in kg	1112
Gross axle weight, rear	in kg	1029
Permitted roof load	in kg	75

Trailer weights

With no brakes, gradients up to 12%	750
With brakes, gradients up to 12%	1400

Engine oil capacity

Approximate engine oil capacity with oil filter change	4.3 litres	
--	------------	--

Diesel engine 2.0l 100 kW (136 bhp)

General engine data

Power output in kW (bhp) rpi	n 100 (136)/ 4000
Maximum torque in Nm at rpi	n 320/ 1750 - 2500
No. of cylinders, capacity in cm	3 4/ 1968
Compression ratio	18,5 ± 0,5
Fuel	Min. 51 CZ

Performance figures

Maximum speed in km/h	199
Acceleration from 0-80 km/h in sec.	710
Acceleration from 0-100 km/h in sec.	10,1

Weights

Gross vehicle weight in l	kg	2089
Weight in working order (with driver) in	kg	1544
Gross axle weight, front in	kg	1082
Gross axle weight, rear in	kg	1024
Permitted roof load in	kg	75

Trailer weights

With no brakes, gradients up to 12%	750	
With brakes, gradients up to 12%	1400	

Engine oil capacity

Approximate engine oil capacity with oil filter change	4.3 litres	

Diesel engine 2.0l 100 kW (136 bhp). Automatic

General engine data

Power output in kW (bhp) rpi	100 (136)/ 4000
Maximum torque in Nm at rpi	n 320/ 1750 - 2500
No. of cylinders, capacity in cm	3 4/ 1968
Compression ratio	18,5 ± 0,5
Fuel	Min. 51 CZ

Performance figures

Maximum speed in km/h	199
Acceleration from 0-80 km/h in sec	7,1
Acceleration from 0-100 km/h in sec	10,1

Weights

Gross vehicle weight	in kg	2124	
Weight in working order (with driver)	in kg	1579	
Gross axle weight, front	in kg	1112	
Gross axle weight, rear	in kg	1029	
Permitted roof load	in kg	75	

Trailer weights

With no brakes, gradients up to 12%	750
With brakes, gradients up to 12%	1400

Engine oil capacity

Engine oil capacity with oil filter change.	4.3 litres	
g	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	_

Diesel engine 2.0l 125 kW (170 bhp)

General engine data

Power output in kW (bhp) rpm	125 (1170)/ 4200
Maximum torque in Nm at rpm	350/ 1750 - 2500
No. of cylinders, capacity in cm ³	4/ 1968
Compression ratio	18,5 ± 0,5
Fuel	Min. 51 CZ

Performance figures

Maximum speed	in km/h	211	1
Acceleration from 0-80 km/h	in sec.	6,2	
Acceleration from 0-100 km/h	in sec.	8,7	1

Weights

Gross vehicle weight	in kg	2089	
Weight in working order (with driver)	in kg	1544	
Gross axle weight, front	in kg	1082	
Gross axle weight, rear	in kg	1024	
Permitted roof load	in kg	75	

Trailer weights

With no brakes, gradients up to 12%	750
With brakes, gradients up to 12%	1400

Engine oil capacity

Engine oil capacity with oil filter change.	4.3 litres	
---	------------	--

Diesel engine 2.0l 125 kW (170 bhp). Freetrack

General engine data

Power output in kW (bhp) rpm	125 (1170)/ 4200
Maximum torque in Nm at rpm	350/ 1750 - 2500
No. of cylinders, capacity in cm ³	4/ 1968
Compression ratio	18,5 ± 0,5
Fuel	Min. 51 CZ

Performance figures²⁸⁾

²⁸⁾ Four-wheel drive

Maximum speed in km/h	204
Acceleration from 0-80 km/h in sec.	5,9
Acceleration from 0-100 km/h in sec.	8,7

Weights²⁹⁾

²⁹⁾ Four-wheel drive

Gross vehicle weight	in kg	2168
Weight in working order (with driver)	in kg	1643
Gross axle weight, front	in kg	1115
Gross axle weight, rear	in kg	1086
Permitted roof load	in kg	75

Trailer weights

With no brakes, gradients up to 12%	750
With brakes, gradients up to 12%	1400

Engine oil capacity

Engine oil capacity with oil filter change.	4.3 litres	
---	------------	--

Dimensions and capacities

D	imensions		
Length, width	4,467 mm/ 1,768 mm	4,467 mm/ 1,768 mm	
Height at kerb weight	1,575 mm	1,575 mm	
Front and rear projection	913 mm/ 976 mm	913 mm/ 976 mm	
Wheelbase	2,578 mm	2,578 mm	
Turning circle	10.7 m	10.7 m	
	Front	Rear	
Track width ^{a)}	1,527 mm	1,506 mm	
	1,535 mm	1,514 mm	
	Capacities		
Fuel tank	55 litres, reserve 7 litres		
Windscreen washer fluid container with headlight washer	3 l/ 5.5 l		
Ту	re pressure		
Summer-grade tyres:			
The correct tyre pressure can be seen on the sticker on the inside of the tar	nk flap.		
Winter tyres:			

a) This data will change depending on the type of wheel rim.

The pressure of these tyres is the same as the summer tyre pressure plus 0.2 bar.

Dimensions and capacities. Freetrack

D	imensions		
Length, width	4,493 mm/ 1,778 mm		
Height at kerb weight	1,615 mm	1,615 mm	
Front and rear projection	940 mm/ 977 mm		
Wheelbase	2,576 mm	2,576 mm	
Turning circle	10,7		
T 1 100	Front	Rear	
Track width	1,542 mm	1,527 mm	
	Capacities		
Fuel tank	60 l. Reserve 8l.		
Windscreen washer fluid container with headlight washer	3 l/ 5.5 l		
Ту	re pressure		
Summer-grade tyres:			
The correct tyre pressure can be seen on the sticker on the inside of the tar	nk flap.		
Winter tyres:			
The pressure of these tyres is the same as the summer tyre pressure plus ().2 bar.		

Index

Airbags	Automatic wiper/wash function for the rear window
Care 32	124
Disposal 32	Auxiliary audio connection: AUX-IN 145
Safety notes	
Alarm system	В
Switching off	- N
Alterations to the vehicle	Ball coupling
Alternator	BAS 183
Warning lamp	Battery
Ambient temperature display	Changing
Anti-freeze	Charging
Anti-lock brake system	Winter conditions
Warning lamp	Belt tension device
Anti-theft alarm system	Disposal
Switching off	Warning lamp
Anti-theft wheel bolts	Belt tension devices
Apple iPod connector	Biodiesel
Aquaplaning	Bonnet
Ashtray*	Brake assist system
Automatic anti-dazzle interior mirror*	Brake fluid
Activating the anti-dazzle function 125	Changing
Deactivating anti-dazzle function 125	Warning lamp
Automatic car wash tunnel	Brake pad wear indicator*
	Indicator
	Brake pads
3 3	Brake pedal
,	Warning lamp82
	Brake servo
	Care 32 Disposal 32 Safety notes 32 Alarm system 102 Switching off 102 Alterations to the vehicle 210 Alternator Warning lamp 79 Ambient temperature display 63 Anti-freeze 223 Anti-lock brake system 182 Warning lamp 78 Anti-theft alarm system 102 Switching off 102 Apple iPod connector 146 Aquaplaning 236 Ashtray* 143 Automatic anti-dazzle interior mirror* Activating the anti-dazzle function 125

Brake system 228	Centre arm rest	Safety notes
Brake servo	Cetane number	Securing 51
Brakes 185	Changing gear	Child seats
Warning lamp 77	See Manual gearbox	ISOFIX and Toptether systems 52
Brakes 187	Changing the lamps	on the front passenger seat 31
Braking distance	Main headlight lamps 260	Cigarette lighter* 143
Bulb changes	rear lights	Cleaning alloy wheels
general notes	Changing the main headlight lamps	Cleaning and caring for your vehicle 202
Bulb defect	dipped beam lights	Cleaning chrome
warning lamp	main beam lights	Cleaning cloth seat covers 208
Buzzer117, 163	Side lights	Cleaning dash panel 208
	turn signal lamps	Cleaning engine compartment
C	Changing the rear light lamps	Cleaning fabric trim
	Position light, fog light and rear light on the	Cleaning leather
Car care	tailgate 265	Cleaning plastic parts
Exterior	Changing the rear lights	
Car care products	Indicator, side and brake lights on the	Cleaning seat belts
Catalytic converter	bodywork	Cleaning steel wheels
CD changer 135	luggage compartment lights 266	Cleaning windows
Central locking	Changing windscreen wiper blades 226	Cleaning wooden trim
Automatic speed dependent locking and un-	Chassis number	Climatic*
locking system* 95	Checking	Climatronic
Emergency unlocking system 95	Checking battery electrolyte level 231	General notes
Locking system for involuntary unlocking 95	Checking engine oil level 220	Clock 58
Selective unlocking system* 94	Child safety	Clothes hook
Central locking button	Child seat	Cockpit
Central locking	Categorisation in groups 48	Control
unlocking	Group 1 49	Light switches 113
Central locking system	Group 2 49	Control lamps 72
Automatic speed dependent locking and un-	Group 3 49	Control lighting 55
locking system* 95	Groups O and O. 40	

Controls	Diesel engine	Driving economically
Electric windows	Winter driving	Driving programmes
Convenience closing	Diesel engine particulate filter* 190	Driving safety
Sliding/tilting roof	Differential lock	Driving with an automatic gearbox / DSG automatic
Windows	Differential lock fault (EDL)	gearbox*
Convenience opening	warning lamp	Driving with respect for the environment 194
Windows	Digital clock	Duplicate keys
Coolant 223	Dipped headlights	Dust filter
Warning lamp 64	Disabling front passenger airbag	Dynamic headlight range control 113
Coolant Level	Safety notes	
Coolant level	Disabling the airbag	E
warning light75	Disabling front passenger airbag 44	-
Coolant Loss	Display (without warning or information texts) . 59	EDL
Coolant temperature	Displays in the Multi-function display	EDS
Display 57	Memory displays	Warning lamp
Safety instructions	Door lock cylinders	Electric steering system
Cruise control system	Door release lever	warning light
Warning lamp	Doors	Electrical sockets
Cruise control*	Childproof locks	Electronic differential lock 184
Turning off the cruise control system 178	Warning lamp	Warning lamp
Curtain airbags	Drawer	Electronic immobiliser
Description 41	Drinks holders at the front	warning message
Function 42	Drive wheels traction control system 182	Electronic stabilisation program 183
Safety notes 42	Driving	Electronic stabilisation programme 83
	Driving abroad	Description
D	Economically / With Respect for the	Warning lamp
Danger of fitting a child seat on the front passenger	Environment	Electronic stabilisation programme (ESP)
seat	With a trailer	warning lamp
Diesel	Driving abroad	emergency manual locking 90
2.555 217	Headlights	Emergency opening
		Doors 102

Emission control system	Examples of menu use	Fuel
warning lamp 81	Open the main menu	Diesel
Engine	Open the winter tyres menu 67	Petrol 213
Running in 189	To close the winter tyres menu 68	Fuel level
Engine compartment	Exterior mirrors	Indicator 57
Working in the engine compartment 215		Fuel reserve 75
Engine coolant	F	Warning 64
Engine fault		Fuel Tank
Warning lamp 81	Fastening rings	Opening the fuel tank flap 212
Engine management	Fire extinguisher	Fuel tank
Warning lamp 81	Floor mats	See Fuel reserve 75
Engine oil	Fog lights	Fuel: save
Changing	folding table* 136	Fuses 252
Checking level	Folding the seat backrests down	
Oil properties 219	Four-wheel drive	G
Specifications	Freetrack towing eye	
Topping up	Front airbags	G 12 223
Engine oil dipstick	Description 34	Gear shift pattern 167
Engine oil pressure	Function	General overview of the engine compartment 279
Warning lamp	Safety notes	Glove compartment
Environment	Front interior light type 1	Glow plug system 166
Environmental friendliness	Switching light off	Warning lamp 81
Environmental tip	Switching light on	
Avoiding pollution	Front interior light type 2	Н
ESP 81, 183	Switching light off	
Example of menu use	Switching light on	Handbrake
Open the configuration menu 67	Front passenger airbag deactivation 44	Warning lamp
Program a speed limit warning 67	Front reading lights	Hazard warning lights
To activate and deactivate the speed limit	Front seat adjustment	
warning 68	Lumbar support	

head restraints	Instrument panel menu	Luggage compartment
Adjusting 129, 130	Configuration menu 69	See also Luggage compartment 17
adjustment of the head restraint angle 130	Example of menu use	Luggage compartment cover 148
Removing	Lights and visibility menu 71	Luggage compartment retaining net 138
head restraints, correct adjustment $\dots 13$	Instrument panel menus	
In-use and non-use positions 14	Principal menu 65	M
Headlight flasher	Vehicle status menu	
Headlight range control	Instruments 56	Main beam
Headlights	Interior lights	Main beam headlights
Driving abroad191	Intermittent wipe, windscreen 121	Indicator lamp 76
Fog lights111	ISOFIX and Toptether systems	Main headlight lamps 260
Washer system		Manual gearbox
Heated front seats	1	Manual mode
Heated window	•	2C-Climatronic
2C-Climatronic 157	Jacking points	MFD
Heating and ventilation	Sill panel with cover	Mileage display 60
High pressure cleaners	Jump leads	Mirrors
Horn 55	Jump-starting	Exterior mirrors, electrical
		Interior mirror
	K	Make-up mirrors
	Key tab	Mobile telephone
Identification number	Keys	Modifications
Ignition key	keys99	Multi-function display 61
Ignition lock	T. Control of the Con	Multi-purpose* mobile stowage compartment 141
Indicator lights	L	Closing 141
indication lamp	Lights	Fitting 140
Information texts in the display	Load compartment	Opening 141
Instrument and switch lighting	See Luggage compartment 17	Removal
Instrument lighting 55	Locks	Uses 141
Instrument panel		

N	Petrol	Rear window heating
	Trips to foreign countries 190	Heating element wires 20
Number of seats	Petrol additives	Rear window wiper 12
0	Petrol engines, starting	Rear-view mirror 12 Refuelling 21
Observations 190 Octane number 213 Oil 218 Oil change 222 Oil properties 219	Plastic key tab 99 Plastic parts 204 Pollen filter 160 Power steering 187 Puncture proof tyres 236	Registration light
One-touch opening and closing Electric windows	Radio frequency remote control Changing the battery	Airbags
Instruments	audio + telephone version 88 audio version 88 Radio wave remote control 100 Rain sensor* 123 Rear drink holder*	RME fuel (biodiesel) 21 Roll-back function 11 Windows 10 Roof aerial* 21
Paintwork Polishing	Armrest*	Roof carrier*
Parking 174 Parking lights 116 Parts 210	Warning lamp	Running in Brake pads
Parts replacement	Rear seat bench	Tyres

S	Seats	Steering 161 Steering lock 163
C (1::	Selective opening*	5
Safe driving	Selector lever locking	Steering wheel audio controls
Safety 8	Selector lever positions	audio + telephone version
Safety equipment 7	Self directional headlights	audio version 84
Safety instructions	Service interval display	Steering wheel controls
Coolant temperature	servotronic	Lighting 92
Safety notes	Shoes	Steering wheel height adjustment 161
Belt tension devices	Side airbags	Stowage area
Curtain airbags 42	Description	Centre arm rest
Disabling front passenger airbag 45	Function	Front seats
Front airbags	Safety notes	Other stowage areas
Side airbags 40	Side lights	Stowage compartment
Using child seats 47	Sitting position	Front passenger side
Using seat belts 23	Driver	Stowage in the luggage compartment 137
Safety system- safe	Front passenger	Sun blinds
Seals	Incorrect sitting position	Sun visors
Seat adjustment	Passengers	Sunroof
Seat belt position	Sitting position, occupants	Sunroof blind
Pregnant women		Sliding/tilting roof
Seat belts	Sliding/tilting roof	Switch
Seat belt release		Hazard warning lights
Seat belt warning lamp	Soot accumulation in the diesel engine particulate filter *	Switches
Seat belts	Indicator	Electric windows
adjustment 24	Spare wheel*	Electrical exterior mirrors
Incorrectly fastened	Starting Petrol engines	Sliding/tilting roof
Not worn		Switching off the engine
Safety notes	Starting the engine	3
Warning lamp	· ·	
Seat belts protect	Steam cleaners	
Seat heating		

T	Turn signals 116 Warning lamp 76, 117	Vehicle tools Storage
Tailgate		5
Emergency opening	Turning on the emergency indicators 115	Vehicle wallet storage
Warning lamp 82	Type plate	Ventilation slits
Tank	Tyre Mobility-System (Tyre repair kit) 242	Volumetric sensor*
fuel level	Tyre monitor indicator 80	Activation
reserve indicator	Tyre pressure	Deactivation
tank capacity	Loss 235	VA/
TCS	Tyre pressure monitoring	W
TCS (Traction control system)	Tyre repair kit	Warning lamp
Warning lamp	Tyre-Mobility-System (Tyre repair kit) 250	Warning lamps
The danger of not using the seat belt	Tyres and wheels	Warning reports
•	Dimensions	Red
Tools	Tyres service life	Yellow
Towing	Tyres tread depth	•
Towing a trailer	Tyres with directional tread pattern 233	Warning texts in the display
Towing bracket	,	Warning triangle and first-aid kit
Towing bracket, fitting	U	Washer fluid
Towing eye		Washing by hand
Tow-starting	Underbody sealant	Washing the vehicle
Traction control system	USB* connection	Washing with high pressure cleaners 203
warning lamp	Using the Tiptronic gear system 172	Water
Trailer		warning 64
Trailer towing	V	Water in the windscreen washer tank 22!
Trailer turn signals	-	Wear indicators 235
Indicator lamps	Vehicle battery	Wheel bolts 245
Warning lamp 117	Vehicle data	Torque 239
Trailer weights 278	Vehicle identification data 276	Wheel change 243
Trips, checklist	Vehicle identification number 276	Wheel trims
•	Vehicle paint	Wheels
	Car care products	

Why assume the correct sitting position? $\ldots\ldots30$
Why should head restraints be correctly adjusted?
Why wear seat belts?
Why wear seatbelts?
Windows
Windscreen washer fluid
Warning lamp
Windscreen wiper blades
Cleaning 205
Windscreen wipers
Changing blades
Changing the rear blade 227
Winter driving
Diesel engine
Winter tyres
Wiper/wash automatic function $\dots 121$
Working in the engine compartment 215

SEAT S.A. is permanently concerned about continuous development of its types and models. For this reason we ask you to understand, that at any given time, changes regarding shape, equipment and technique may take place on the car delivered. For this reason no right at all may derive based on the data, drawings and descriptions in this current handbook.

All texts, illustrations and standards in this handbook are based on the status of information at the time of printing. Except for error or omission, the information included in the current handbook is valid as of the date of closing print.

Re-printing, copying or translating, whether total or partial is not allowed unless SEAT allows it in written form.

SEAT reserves all rights in accordance with the "Copyright" Act.

All rights on changes are reserved.



© SEAT S.A. - Reprint: 15.09.07



