

WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

 
 


Preproduction model shown

United States
Lincoln Customer Relationship Center
1-800-521-4140
(TDD for the hearing impaired 1-800-232-5952)
lincolnowner.com

Canada
Lincoln Customer Relationship Centre
1-800-387-9333
lincolncanada.com

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your occupants. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.



Lincoln MKC
March 2014
First Printing
Quick Reference Guide
Litho in U.S.A.
FJ7J 19G217 AA

2015 MKC



Preproduction model shown

Quick Reference Guide



THE LINCOLN MOTOR COMPANY

Commonly Used Voice Commands

Touch the voice button  on the right-hand side of your steering wheel and then say:



Basic Commands

- ▶ What can I say?
- ▶ List of commands
- ▶ Main menu
- ▶ Previous
- ▶ Next
- ▶ Go back
- ▶ Exit
- ▶ Help
- ▶ Pair my phone



Climate

- ▶ Climate control list of commands
 - Climate <On/Off>
 - Climate my temperature
 - Climate temperature



Phone

- ▶ Phone list of commands
 - Dial
 - Call <name> on cell/at home/at work
 - Call voicemail
 - Do not disturb <On/Off>
 - Listen to text messages (phone-dependent feature)



Entertainment

- ▶ Audio list of commands:
You can also get detailed lists of commands for radio, USB, **Bluetooth®** audio, SiriusXM and SD card*
 - ▶ Radio
 - <On/Off>
 - FM <87.9-107.9>
 - FM preset <#>
 - ▶ CD
 - Play track <1-512>
 - Shuffle <On/Off>
 - ▶ USB
 - Play song <name>
 - Play album <name>
 - ▶ SiriusXM
 - <Channel name>
 - Preset <#>



Navigation*

- ▶ Navigation list of commands
 - Destination street address <number, name, city>
 - Destination home
 - Navigation voice <On/Off>
 - Navigation volume <increase/decrease>
 - Repeat instruction
 - Show <map/north-up/heading-up/3D>
- ▶ Travel Link list of commands
 - Traffic
 - Weather
 - Movie listings
 - Fuel prices
 - Sports <headlines/scores/schedule>

SYNC® Say the Word.

Table of Contents

2015 MKC

Instrument Panel..... 4 – 5

SYNC with MyLincoln Touch..... 6 – 9

Convenience..... 10

Lincoln Experiences 11

Liftgate.....12

Liftgate and Built-in Storage13

Function..... 14 – 15

Essential Features..... 16 – 17

Comfort.....18

The Lincoln Pledge.....19



lincolnowner.com



lincolncanada.com

LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.

Some services may not be available in your area. For additional support, refer to your Owner's Manual, visit the website or call the toll-free number. **U.S. customers:** Visit **SyncMyRide.com** or call **1-800-392-3673** (select Option 1 or 2 for language, then press 3). **Canadian customers:** Visit **SyncMyRide.ca** or call **1-800-565-3673** (select Option 1 or 2 for language, then press 3).



Preproduction model shown

1 Adaptive Cruise Control*

Automatically adjusts your speed to maintain a set distance between your vehicle and the vehicle in front of you in the same lane. You can set the gap distance between your vehicle and the vehicle in front of you by pressing the and buttons on the steering wheel.

Note: Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Refer to the **Cruise Control** chapter of your **Owner's Manual** for safety information, more details and limitations.

2 Left Vehicle Information Display

Provides information about various systems on your vehicle. Use the left, 5-way controls located on the steering wheel to choose and confirm settings and messages. Refer to the **Information Displays** chapter in your **Owner's Manual** for more information.

Instrument Panel

2015 MKC

3 Service Engine Soon Light

Lights briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the On-Board Diagnostics (OBD-II) system has detected a malfunction. Drive in a moderate fashion (avoid heavy acceleration and deceleration) and contact your authorized dealer as soon as possible.

4 Right Vehicle Information Display

Displays information about Entertainment, Climate, Phone and Navigation*. Use the right, 5-way controls located on your steering wheel to scroll through, highlight and make minor adjustments within a selected menu. Refer to the **MyLincoln Touch™** chapter in your **Owner's Manual** for more information.

5 Steering Wheel Controls

Audio

Press **VOL +/-** to increase/decrease volume levels. Press **SEEK** to access the next/previous radio station preset, CD track or preset satellite radio channel*

Voice

Press to answer call.
Press to exit phone mode or end call.
Press to access voice recognition.

*if equipped

6 Power Tilt/Telescoping Steering Column*

The 4-way rocker control allows you to adjust the steering wheel to your desired position.

7 Push Button Start

Allows you to start your vehicle by pressing the **ENGINE START STOP** button while fully pressing down on the brake pedal. If your vehicle has been idling for an extended period of time, it will automatically shut down. Before the engine shuts down, a message appears in the information display, allowing the driver to override the shutdown feature. Press the button again to turn the engine off.

Note: Your intelligent access transmitter must be inside the vehicle for the ignition to start. Keyless warning alert sounds the horn twice when you exit the vehicle with the intelligent access transmitter and the keyless vehicle is in RUN, indicating the vehicle is still on.

8 Push Button Shift Transmission

Your vehicle is equipped with an electronic transmission. The shift buttons are located on the center stack next to the MyLincoln Touch system.

Putting Your Vehicle in Gear

1. Fully press down the brake pedal.
2. Press and release one of the PRNDS buttons to select your gear.
3. The gear shift button you select will light and the information display will show a telltale of the selected gear.
4. Release the brake pedal and your transmission will remain in the selected gear.

Note: When entering an automatic car wash, always put your vehicle into **Stay in Neutral** mode. To put your vehicle in **Stay in Neutral** mode, make sure your vehicle is stationary first and then:

1. Press the neutral (N) button on the shifter assembly once. The information display screen will read **"Press N to enter Stay in Neutral mode"**.
2. Press **N** on the shifter assembly again. The message "Stay in Neutral mode engaged" will appear in the information display and the **N** button will flash continuously to confirm your selection.
3. To exit **Stay in Neutral** mode, press another gear.




Using SYNC with MyLincoln Touch

SYNC is a hands-free, voice recognition system used for entertainment, information and communication.

Use the four-corner, four-color touchscreen to explore and interact with your vehicle. The touchscreen works the same way traditional controls, knobs and buttons do.

Press the various corners on your touchscreen to personalize the many features and settings of your vehicle all in one place. The system provides easy interaction with your cellular phone, multimedia entertainment, climate controls and navigation system*.


General Tips

- ▶ Press the home icon  at any time to return to the home screen.
- ▶ For additional support, refer to your **Owner's Manual**, visit the website or call the toll-free number. See the inside front cover of this guide for more details.

Before You Get Started

- ▶ If you have the navigation SD card*, make sure that it is inserted into the media port or your navigation will not work.
- ▶ The touchscreen is sensitive, so make sure you press the desired icon accurately and firmly.

Create Your Owner Account

1. Set up your owner account at **SyncMyRide.com** (U.S.) or **SyncMyRide.ca** (Canada). Register by following the on-screen instructions. After registering, you can see what complimentary services you are eligible for.
2. SYNC uses a wireless connection called  **Bluetooth®** to communicate with your phone. Turn Bluetooth mode on in your phone's menu options. This lets your phone find SYNC. For more details on setting up your phone with SYNC, visit **SyncMyRide.com** (U.S.) or **SyncMyRide.ca** (Canada), or your phone manufacturer's website.

Why You Need a SYNC Owner Account

A SYNC owner account gives you the latest software updates, and if you have questions, you'll get free customer support. Visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.

Pairing Your Phone with SYNC

1. Make sure that your vehicle is in park (P) and you switch on your radio and ignition. Touch **Add Phone** in the upper left corner of the touchscreen. **Find SYNC** appears on the screen and instructs you to begin the pairing process from your device.
2. Make sure that **Bluetooth** is set to **ON** and that your cellular phone is in the proper mode. See your phone's manual if necessary. Select SYNC and a six-digit PIN appears on your device.


3. If you are prompted to enter a PIN on your device, it does not support Secure Simple Pairing. To pair, enter the PIN displayed on the touchscreen. Skip the next step.
4. When prompted on your phone's display, confirm that the PIN provided by SYNC matches the PIN displayed on your cellular phone.
5. The display indicates when the pairing is successful.

Note: The system may prompt you to set your phone as the primary/favorite (the primary phone will receive messages and voicemail); download your phone book (this is required to use the full set of voice commands) and/or switch on 911 Assist®.

Tips

- ▶ Make sure you accept the request from SYNC to access your phone.
- ▶ To pair subsequent phones, please refer to **Pairing Subsequent Phones** in the **MyLincoln Touch** chapter of your **Owner's Manual**.
- ▶ If you are experiencing pairing problems, try performing a clean pairing by deleting your services from SYNC, deleting the SYNC connection from your phone, and then repeating the **Pairing Your Phone with SYNC** process.

Phone

 Voice-control your phone to connect with many other features:

- ▶ Connect automatically with a 911 Operator in the event of an accident (feature must be on before an event).
- ▶ Transfer calls seamlessly from SYNC to phone as you get in or out of your vehicle.
- ▶ Refer to the **MyLincoln Touch** chapter of your **Owner's Manual** for complete details.



Using Your Phone with SYNC

Note: Enter your phone book contacts with both first and last names to increase the ability of SYNC to select the correct contact. Remember to say the contact name exactly as it's listed in your phone book.

Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button. When prompted, give a voice command. For example, you could say “**Call Jake Smith at home**”. SYNC repeats the command back to you and dials the number.

Note: You can also make phone calls by giving the voice command “**Dial**”, then verbally saying the phone number.

Answering Incoming Calls

Whenever you have an incoming call, you will be able to see the name and number of the person calling in your display. Press ACCEPT on the

touchscreen or the  phone button to answer an incoming call.

Ending the Call

Press and hold the  phone button.

Do Not Disturb Mode

This feature blocks incoming calls and text messages, and saves them for later. You still have access to outgoing calls when this feature is active. Say the voice command “**Do not disturb on**” to enable, and “**Do not disturb off**” to disable.

 Navigation*

Get started with your navigation system by pressing the upper-right, green corner. The available, voice activated navigation system includes:



- ▶ SiriusXM Traffic
- ▶ SiriusXM Travel Link
- ▶ GPS (Global Positioning System) technology
- ▶ 3-D mapping
- ▶ Turn-by-turn navigation

Note: Some features may require activation. Refer to the **MyLincoln Touch** chapter of your **Owner's Manual** for more details.

Set a Destination

Set a destination on your touchscreen by using a street address, city center, a place on the map or a point of interest (POI). The easiest way, however, is by voice.

1. Press the voice button. When prompted, say “**Destination street address**”.
2. The system will ask you to say the full address and will display an example on-screen.
3. You can then speak the address naturally, such as: “**One two three Main Street, Anytown**”.

You can also use the touchscreen to enter a destination and narrow your choices by city or street as you type. You can choose from up to three different types of routes:

- ▶ **Fastest:** Uses the fastest moving roads possible.
- ▶ **Shortest:** Uses the shortest distance possible.
- ▶ **Eco (EcoRoute):** Uses the most fuel efficient route.

Tips

- ▶ Save your favorite locations by touching “**Save to Favorites**”.
- ▶ Change your map views from Heading-up, North-up or 3D.



Climate



Control the temperature, airflow direction, fan speed and other climate features for you and your front passenger. Say “**Climate temperature 72 degrees**” and MyLincoln Touch will make the adjustment.

Set Your Temperature

- ▶ Touch the lower-right, blue Climate corner on the touchscreen.
- ▶ Set your exact, desired temperature by using the + or – buttons.



Entertainment

No matter how you store your music, SYNC makes it yours to enjoy when you're behind the wheel. Just press the lower-left, red corner of the touchscreen. From here, you can easily go between AM/FM, SiriusXM and other media sources.

Set Your Radio Presets

- ▶ Touch the Entertainment corner on the touchscreen.
- ▶ Touch **FM**.
- ▶ Touch **Direct Tune**.
- ▶ Enter the desired station and touch **Enter**.
- ▶ Touch **Presets** and then touch and hold one of the memory preset buttons to save it. You'll hear a brief mute and the sound will return once the station is saved.


Using SYNC to Access Digital Media



SYNC has a media hub with multiple inputs, allowing you to access personal media from your digital devices. Plug in your USB media devices, such as phones and MP3 players, and use SYNC to play all of your favorite music.

Note: SYNC indexes your music; the more information that is stored on your USB device, the longer it takes SYNC to index.

Using Voice Commands to Play Music

1. Plug your media player into your USB port.
2. Press the voice button . When prompted, say “**USB**”, then follow up by saying a voice command.

For more information, refer to the **MyLincoln Touch** chapter of your **Owner's Manual**. For support, visit the website or call the toll-free number. See the inside front cover of this guide for details.

Intelligent Access



Note: Your intelligent access transmitter must be within 3 feet (1 meter) of the vehicle for intelligent access to function properly.

To unlock and open the driver’s door, pull the front exterior door handle.

To lock all of the doors, touch and briefly hold the sensor button on top of the door handle.

To open the liftgate, press the button located in the top of the liftgate pull cup handle to unlatch the liftgate and then pull on the outside handle.

Note: The transmitter also contains a mechanical key blade that can be used to unlock the driver door, if necessary.

Power Windows: Global Opening and Closing

You can use the remote control to operate the windows with the ignition off.

Open the windows for a short time after you unlock your vehicle with the remote control. After you unlock your vehicle, press and hold the remote control unlock button to open the windows. Release the button once movement starts. Press the lock or unlock button to stop movement.

To close the windows, press and hold the remote control lock button. Release the button once movement starts. Press the lock or unlock button to stop movement.

Automatic Climate Control Settings

Use your remote start to start and warm or cool your vehicle. When set to AUTO, the climate control system automatically adjusts the cabin temperature during remote start.

In hot weather, the air conditioning automatically turns on. The cooled seats also turn on if the cooled seats are set to high (if available and set to AUTO in the information display).




In cold weather, the heat automatically turns on. The heated seats and heated steering wheel are set to high (if available and also set to AUTO in the information display). Additionally, the heated rear window and mirrors also turn on automatically.

Autowipers*

If switched on, your wipers will automatically turn on when the system detects moisture on the windshield. The wiper speed will vary based on the amount of moisture detected and the sensitivity setting. To deactivate, switch off your wiper control. To switch on, use the wiper stalk or the information display. To adjust the sensitivity setting, use the rotary control on the stalk.

Note: Make sure you switch off this feature before entering a car wash.

Remote Start

Remote start allows you to start the engine from outside your vehicle using your transmitter. To start, press  and then press  twice within three seconds. Once inside, shift into drive (D) and go. To turn the engine off from outside the vehicle after using your remote start, press  once.

*if equipped

As you approach or leave your vehicle, key areas of your vehicle automatically adjust, including the following personalization features.

Welcome Lighting

Lights select exterior lighting as you approach your vehicle. This feature can be turned on and off in your information display. See the **Information Display** chapter in your **Owner’s Manual** for details.

Auto-folding Exterior Mirrors*

Automatically folds the exterior mirrors toward the glass when you place the transmission into park (P). When you place the transmission into drive (D), the mirrors fold back out automatically.



*if equipped

Interior Lighting

Lights select interior lighting and ambient lighting including the push button start as you enter your vehicle. Once you start your vehicle, the information display and the touchscreen also light.

Easy Entry

Automatically recalls your seat and power tilt and telescoping steering wheel positions when you push the keyless start ignition button.

Easy Exit

Moves the driver seat rearward up to 2 inches (5 centimeters). Additionally, the power tilt and telescoping steering wheel moves to the full up position when the transmission is in park (P) and you switch off the keyless start ignition. The driver

seat and steering column will return to their previous positions when you push the keyless start ignition button.

Note: You must have your intelligent access transmitter with you for these features to work.

MyLincoln® Mobile App*

This smartphone-compatible app combines vehicle service, client support and driver convenience features. For more details, visit www.support.lincoln.com/owner-services/mylincoln-mobile-app.com.



Preproduction model shown

Manual Liftgate

To Open the Liftgate



- 1. Unlock the liftgate with the remote control or power door control. If the intelligent access transmitter* is within 3 feet (1 meter) of the liftgate, the liftgate will unlock when you press the liftgate release button.
- 2. Unlock all the vehicle doors.
- 3. Press the button located inside the liftgate pull-cup handle to unlatch the liftgate.
- 4. Pull on the outside handle to raise the liftgate.

Power Liftgate*

To Open Using the Outside Liftgate Button

- 1. Unlock the liftgate with the remote control or power door control. If the intelligent access transmitter* is within 3 feet (1 meter) of the liftgate, the liftgate will unlock when you press the liftgate release button.
- 2. Press the button located in the top of the liftgate pull-cup handle.
- 3. Allow the power system to open the liftgate after pressing the control.
- 4. To close, press and release the control pictured below.

To Open Using the Remote Transmitter

Open or close the liftgate with your remote control by pressing the  button twice within three seconds. You will hear a tone when the liftgate is activated. You can also open or close the liftgate from inside the vehicle by pressing the  button on the instrument panel.

Setting the Liftgate Open Height

Once you open the power liftgate, you can move it manually to a desired height. If the previously programmed liftgate height is lower than the fully opened position, you can manually push it upward.



Preproduction model shown

To Program a New Height

- 1. Open the liftgate.
- 2. Manually move the liftgate to your desired height.
- 3. Press and hold the control button on the liftgate until you hear a tone, indicating that your programming of the liftgate height is successful.

The next time you use the power feature to open the liftgate, it will open to its newly programmed height.

To change the programmed height, repeat the process above.



*if equipped

Obstacle Detection*

When you use the power open or close feature and the liftgate detects a problem, you will hear a warning tone and the liftgate will stop.

The Liftgate Will Not Power Open or Close When

- ▶ It detects an object in its opening or closing path.
- ▶ The 12-volt battery does not have enough charge to power the liftgate.
- ▶ The ignition is on and the transmission is not in park (P).
- ▶ You are traveling at speeds at or above 3 mph (5 km/h).

Note: Entering the vehicle while the liftgate is closing could cause the vehicle to bounce and activate obstacle detection.

Hands-free Liftgate Operation*

- 1. Make sure you have your intelligent access transmitter within 3 feet (1 meter) of the liftgate.
- 2. Move your foot under and back from the rear bumper, similar to a kicking (front-to-back) motion. Do not move your foot sideways or the sensors may not detect the motion.

Note: In vehicles equipped with the towing package, you must kick your foot **between** the trailer hitch and the exhaust system. Do not kick under the hitch.

*if equipped

Built-in Storage

Cargo tie-downs, located in key areas of the rear cargo area, fold out of the way when not in use.

Umbrella tray, located on the outboard side of the driver seat, lets you store a wet umbrella and keeps it within easy reach.

Toll-ticket holder, located between the headliner and the sunvisor hinge: slide your toll ticket in the space provided.



Preproduction model shown

Lincoln Drive Control

This feature intelligently integrates chassis and powertrain systems for personalized ride comfort, steering, handling, powertrain response and sound. Choose between two default settings or customize your own.

Factory default settings include Normal Handling and Normal Performance while you are in drive (D). Select sport (S) to engage Sport Handling and Sport Performance settings.

Customize your Handling and Performance settings through the information display by navigating through the menu to **Settings > Vehicle > Drive Control** to configure:

Handling

- **Comfort:** Provides lower steering efforts and a more fluid suspension.
- **Normal:** Delivers an engaging drive experience with confident handling.
- **Sport:** Increases handling and control with a sporty feel.

Performance

- **Normal:** Provides smooth power delivery and a refined sound.
- **Sport:** Increases engine and transmission responsiveness, while adding a more powerful engine tone.

Active Park Assist and Park Out Assist*

Active Park Assist detects an available parallel parking space and automatically steers the vehicle into the space (hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to park your vehicle. To use active park assist, press the button located near the shifter.

To stop the parking procedure, grab the steering wheel or press the control again.

Active Park Out Assist determines the clearance to the front and rear of your vehicle and automatically steers your vehicle out of a parallel parking space (hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to enter traffic.

For complete information, refer to the **Parking Aids** chapter of your **Owner's Manual**.

Note: The driver is always responsible for controlling the vehicle, supervising the system, and intervening, if required.

SelectShift Automatic® Transmission

The transmission gives you the ability to manually change gears, if you like. To use SelectShift, press sport (S). Use the paddle shifters, located on the steering wheel, to manually select gears. Pull (+) to upshift, pull (–) to downshift. The system will stay in manual control until you make another shift button selection, for example, drive (D).

BLIS® (Blind Spot Information System) with Cross Traffic Alert*

BLIS uses radar sensors to help you determine if a vehicle may be in your blind spot zone. The cross traffic alert feature warns you of vehicles approaching from the sides when the transmission is in reverse (R). BLIS and cross traffic alert will display a yellow indicator light in your exterior mirrors and the cross traffic alert will also sound tones and display messages to warn you which direction vehicles are approaching. Refer to the **Driving Aids** chapter in your **Owner's Manual** for more information.

Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to the **Owner's Manual** for safety information, more details and system limitations.



*if equipped

Lane Keeping System*

The system detects unintentional drifting toward the outside of the lane and alerts or aids the driver to stay in the lane through the steering system and information display. The system automatically detects and tracks the road lane markings using a camera that is mounted behind the interior mirror.

Rear View Camera


This system provides a video image of the area behind the vehicle. The display automatically appears in the touchscreen when the vehicle is in reverse (R) and uses green, yellow and red guides to alert you of your proximity to objects.



Forward Sensing System*

This system sounds an audible warning tone if there is an obstacle near the vehicle's front bumper. As the vehicle moves closer to the obstacle, the rate of the warning tone increases in frequency. The front sensors are automatically activated when the gearshift is in any position other than park (P) or neutral (N) and the vehicle speed is below 6 mph (10 km/h). See the **Parking Aids** chapter in your **Owner's Manual** for complete information.

Configurable Daytime Running Lamps*

When you start your vehicle with your headlamp control in the autolamps position , the configurable daytime running lamps turn on automatically. You can configure the daytime running lamps ON or OFF using your information display controls. See the **Lighting** chapter in your **Owner's Manual** for complete information.

Easy Fuel® System



With this system, you open the fuel door, insert the nozzle and begin fueling. It is self-sealing and therefore protected against dust, dirt, water, snow and ice. Wait 5 to 10 seconds from the time the refueling nozzle is shut-off until you remove the nozzle from the vehicle to allow residual fuel in the nozzle to drain into the tank. When using a portable fuel container, slowly insert the fuel funnel in the rear of the vehicle, inside the load compartment, underneath the load floor carpet and pour the fuel into the funnel.

Note: Do not use aftermarket funnels as they will not work with the Easy Fuel system and may cause damage. Properly clean the funnel after each use.

Automatic Engine Shutdown

Your vehicle is equipped with a feature that automatically shuts down the engine if it has been idling for an extended period of time. The ignition also turns off in order to save battery power. You can override this feature temporarily by pressing the brake or accelerator pedal, or by pressing OK or the RESET button in your information display. Refer to the **Information Displays** chapter of your **Owner's Manual** for more details.

Towing Your Vehicle

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to **Towing the Vehicle on Four Wheels** section in the **Towing** chapter of your **Owner's Manual** for more information.

Fuel Tank Capacity/Fuel Info

Your vehicle has a 15.5 gallon (58.5L) fuel tank. Use only UNLEADED gasoline with an 87 octane rating. Do not use ethanol (E85), diesel, fuel-methanol, leaded fuel or any other fuel because it could damage or impair the emission control system.

Tire Pressure Monitoring System

Your vehicle has a tire pressure monitoring system that lights a low tire pressure warning light in your instrument cluster when one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the **Inflating Your Tires** section in the **Wheels and Tires** chapter of your **Owner's Manual** for more information.



Location of Spare Tire and Tools

Your spare tire and tools are located beneath the carpeted load floor in the rear of your vehicle. The spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the **Changing a Road Wheel** section in the **Wheels and Tires** chapter of your **Owner's Manual**.

Fuel-efficient Transmission

Your vehicle has been designed to improve fuel economy by reducing fuel usage while coasting or decelerating. This may be perceived as a light to medium braking sensation when removing your foot from the accelerator pedal.

Rear Window Buffeting

When just one of the windows is open, you may hear a pulsing noise. Lower the opposite window until the noise subsides.



Electric Parking Brake



The operating switch (P) replaces the conventional handbrake, and is to the left of the steering column. To use, pull the switch. The brake system warning lamp will light to confirm that you applied the electric parking brake. You can release the electric parking brake manually by switching the ignition on, pressing the brake pedal and then pressing the electric parking brake switch. Refer to the **Brakes** chapter of your **Owner's Manual** for more details.

Climate Controlled Front Seats*



To use, press the heated or the cooled seat symbol located on the touchscreen to cycle through the various settings and off. Warmer or cooler settings are indicated by more lights. The climate controlled seats will function only when the engine is running.

Heated Steering Wheel*

Your vehicle may be equipped with a heated steering wheel. Press the icon in your touchscreen to turn this feature on and off.

Note: The wood trim* will not heat between the 10 and 2o'clock positions.

Rear Heated Seats*

The rear heated seat controls are on the rear of the center console. To use, press the heated seat button to cycle through the various heat settings and off. Warmer settings are indicated by more indicator lights. The rear heated seats will function only when the engine is running.

Tilting Head Restraints

You can adjust the front-row head restraints by pulling up to raise the head restraint. To lower, press the head restraint down while pressing and holding the guide sleeve adjust/release button. Tilt the head restraint forward for additional comfort by gently pulling the top of the head restraint. Once it is in the forward-most position, tilting it forward once more will release it to the upright position.

Note: Do not attempt to force the head restraint backward after it is tilted. Instead, continue tilting it forward until the head restraint releases to the upright position.

Second-row Seat Functionality

Fold the Seatback Down

Fold the outboard head restraints and lower the center head restraint first. With the seat empty, pull the lever up to fold the seatback forward. Pull the seatback upward to unfold the seatback.

Recline the Seatback Down

With the seat occupied, pull the lever up to recline the seatback.

Panoramic Vista Roof® with Power Sunscreen*

To open the moonroof, press the open button. It will stop short of the fully opened position. To open the moonroof fully, press the open button again. To close, press the close button. To vent the moonroof, press the vent button.

The sunscreen will automatically open with the moonroof, but if the moonroof is closed, you can open the sunscreen by pressing the button. To close it, press the close button.



Preproduction model shown

*if equipped

Congratulations on your decision to drive a Lincoln. The Lincoln Pledge provides you with valuable support so you can handle the challenges of the road with confidence and ease.

The following information is for United States clients. Canadian Roadside coverage and benefits may differ from the United States coverage. Canadian clients should refer to the **Lincoln Roadside Assistance** section of the Warranty Guide, call **1-800-387-9333** or visit the website at **www.LincolnCanada.com** for more details.

Lincoln Complimentary Maintenance

As part of our commitment to providing a new ownership experience, your vehicle comes with Lincoln Complimentary Maintenance. This maintenance plan is available on most vehicles sold in the United States and begins on your purchase date and at 0 miles (0 kilometers). It is limited based on mileage, time or number of service visits, whichever occurs first. That means when your information display alerts you when it is time for an oil change, you should bring in your vehicle for complimentary service. Visit **www.LincolnOwner.com** for full details.

Roadside Assistance

Contact Roadside Assistance **1-800-521-4140**, any time, 24 hours a day, 365 days a year. As part of the Lincoln Pledge, you will receive 24/7 Roadside Assistance nationwide (including Canada and Mexico), that begins from the warranty start date and lasts the life of the vehicle for the original owner only. Subsequent owners are eligible for an extended powertrain warranty coverage period of six years or 70,000 miles (112,655 kilometers) whichever occurs first.

*if equipped

Roadside Assistance Services Include

- ▶ **Towing:** Lincoln eligible vehicles will be towed to the client's selling or preferred dealer within 100 miles (161 kilometers) of the disablement location or to the nearest Lincoln dealer. If you request to be towed to a selling or preferred dealer that is more than 100 miles (161 kilometers) from the disablement location, you shall be responsible for any mileage costs in excess of 100 miles (161 kilometers).
- ▶ **Flat tire change:** Replacement of a flat tire with a usable spare available in your vehicle.
- ▶ **Battery jump start**
- ▶ **Lock-out assistance:** If you lose your key or intelligent transmitter, key replacement is your responsibility
- ▶ **Fuel delivery:** 2 gallons (7.5 liters) of gasoline, limited to two, no-charge occurrences within a 12-month period.
- ▶ **Winch out services:** Includes pulling a vehicle within 100 feet of a paved or county maintained road. No recoveries.

Lincoln Customer Relationship Center

If you have questions about your vehicle or the Lincoln Pledge, please contact your dealer. For additional help, you're invited to call our Lincoln Customer Relationship Center: **1-800-521-4140 (TDD for the hearing impaired 1-800-232-5952)** Monday through Friday, 8 a.m. – 8 p.m. and Saturday 9 a.m. – 5:30 p.m. EST.

Vehicle Warranty

For a detailed description of what is covered by your vehicle's New Vehicle Limited Warranty, refer to the **Warranty Guide** that is provided to you along with your **Owner's Manual**.