

INSTRUMENT PANEL

Use extreme caution when using any device or feature that may take your attention off the road. Your primary responsibility is the safe operation of the vehicle. Only use non-essential features and devices when it is safe to do so.

MULTI-FUNCTION LEVER

Rotate the end of the control up/down to increase/decrease the speed of the wipers.

RAIN SENSING WIPERS

These wipers automatically activate when moisture is present on the windshield and the control is set to any setting except OFF. The wiper speed will vary based on the amount of moisture detected on the windshield as well as the current interval setting. Ensure that the control is turned to OFF prior to entering a car wash. **Note:** For optimal wiper performance, clean your blades and glass regularly. Refer to your Owner's Guide for more information.

HEADLAMP CONTROLS

Turns the headlamps off.

Turns on parking, instrument panel, license plate and tail lamps.

Turns on low beam headlamps.

Autolamps: Automatically turns the exterior lamps on/off based on available daylight.

Turns on fog lamps by pulling the control towards you.

PANEL DIMMER CONTROL

Press the control up or down until the desired lighting level is reached. Press the control to the second detent to turn on the interior courtesy lights. The lights will remain on until the second detent down is pressed.

ADAPTIVE HEADLAMPS

These headlamps move in the same direction as your steering wheel to provide added visibility around curves.

AUTOMATIC HIGH BEAMS

During nighttime driving, the automatic high beam system automatically turns on your high beams if it is dark enough and no other traffic is present. When it detects an approaching vehicle's headlights or a preceding vehicle's tail lamps, the system turns off the high beams (low beams remain on) before they distract other drivers.

WARNING LIGHTS

SERVICE ENGINE SOON

Illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the On Board Diagnostics System (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

ABS WARNING

Illuminates briefly when the ignition is turned on. If the light remains on or continues to flash, a malfunction has been detected. Contact your authorized dealer as soon as possible and have the system serviced. Normal braking (less ABS) is still functional unless the warning light  is also illuminated.

AIRBAG READINESS

Illuminates briefly when the ignition is turned on. If this light fails to illuminate, remains on or continues to flash after the engine is started, contact your authorized dealer for service as soon as possible. A chime will also sound if there is a malfunction in the indicator light.

LOW TIRE PRESSURE WARNING

Illuminates when your tire pressure is low. If the light remains on, the tire pressure should be checked. If the light does not turn on at ignition or begins to flash, contact your authorized dealer as soon as possible.

ADVANCETRAC[®] STABILITY ENHANCEMENT SYSTEM WITH ROLL STABILITY CONTROL[™]

Helps you maintain stability and steerability of your vehicle during a variety of road conditions. If your vehicle becomes stuck, try turning off the AdvanceTrac[®] system (by pressing the control) to allow wheel spin and help increase momentum to help dig the vehicle out. Refer to your Owner's Guide for more information.

ADAPTIVE CRUISE CONTROL (if equipped)

Allows you to set a "gap distance" between yourself and the vehicle in front of you in the same lane, while your cruise control is active. Press <---> steering wheel controls to select one of three possible gap distances (Sporty, Normal or Comfort); the vehicle will then automatically apply the brakes when necessary to ensure that the specified distance is kept. For complete information on setting and using the adaptive cruise control as well as detection issues, refer to Adaptive cruise control in the Driver Controls chapter of your Owner's Guide.

MESSAGE CENTER

Displays important vehicle information through a constant monitoring of vehicle systems. The system will notify you of potential problems with a display of warnings followed by a long indicator chime. Use the INFO, SETUP and RESET buttons to access various menus and settings within the message center. Refer to your Owner's Guide for more information.



COLLISION WARNING SYSTEM (if equipped)

Uses a radar sensor to detect if vehicles ahead of you which are moving in the same direction may be a collision risk. The system will alert you with an audible chime and red warning light which will appear above the dash. If the risk of collision increases, the system will increase brake support to help reduce collision speed. The collision warning system is active at speeds above approximately 5 mph (8 km/h). For more information, refer to your Owner's Guide.

NAVIGATION SYSTEM (if equipped)




POWER ADJUSTABLE FOOT PEDALS

Press the bottom of the control  to move the pedals closer to you or the top of the control  to move the pedals further away from you. The pedals should only be adjusted when the vehicle is stopped and in Park (P).

AMBIENT LIGHTING

Press repeatedly to turn the feature on, cycle through your color options and turn the feature off.

Press the second control to adjust the color intensity. When activated, the foot well areas, cup holders and center console bin illuminates with the chosen color.

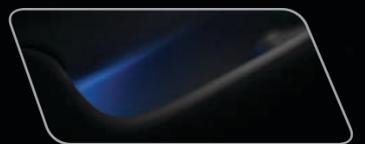

PUSH BUTTON START

Your vehicle is equipped with a Push Button Start which allows you to start your vehicle by simply pressing the ENGINE START button while pressing the brake pedal, provided your Intelligent Access (IA) key is present inside the vehicle or in the trunk.

Backup method of starting:

In the event that the battery is low in your Intelligent Access (IA) key, or if there is excessive radio frequency interference, you can start the car by placing the IA key in the backup slot in your center console utility compartment. Insert the IA key into the slot with buttons facing towards the rear of the vehicle and with key ring up. Then use the START button and brake pedal to start your vehicle as usual. The IA key can be removed from the backup slot once the vehicle is started, if desired.

HAZARD FLASHER



STEERING WHEEL CONTROLS

PADDLE SHIFTERS

Your six speed automatic transmission gives you the ability to manually change gears without taking your hands off the wheel. To use, move the gearshift lever from the Drive position (D) to the Manual position (M). To downshift, push the paddle shifters on the steering wheel control forward. To upshift, press the paddle shifters on the steering wheel rearward. The current gear will display in the instrument cluster. For more information, refer to your Owner's Guide.

MEDIA CONTROLS

Press **+ VOL -** to increase/decrease volume levels.

Press **⏮ ⏭** to access the previous/next radio station, CD track or preset satellite radio channel.

Press **MEDIA** repeatedly to access all possible media sources.

Press **🗣** to access voice recognition.

Press **📶** to access SYNC[®] phone features.

SPEED CONTROLS



TO SET THE SPEED: Press **ON**. Accelerate to the desired speed. Press **SET +** or **SET -** and take your foot off the accelerator.

TO SET A HIGHER SPEED: Press and hold **SET +** or press **SET +** repeatedly until the desired speed is reached.

TO SET A LOWER SPEED: Press and hold **SET -** or press **SET -** repeatedly until the desired speed is reached.

TO RETURN TO A PREVIOUSLY SET SPEED: Press **RESUME**.

TO TURN OFF: Depress the brake pedal or press **OFF**.

AUDIO SYSTEM

Your mobile media system allows you to listen to, record and save music, play DVDs (audio and video) and also access some climate control functions.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

JUKEBOX – This feature allows you to record and save your music to the 10 GB hard drive for later access. You can then access and play your music by specific tracks, artists, albums or genres. You can even choose to create and access your own playlists.

SYNC[®] – This is a hands-free communications and entertainment system with special phone and media features including 911 Assist[™] and Vehicle Health Reports. For more information, please refer to the SYNC[®] Supplement, the SYNC[®] section in the Navigation Supplement (if equipped) or visit www.SyncMyRide.com.

SIRIUS[®] satellite radio broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS[®] satellite radio channels, visit www.sirius.com in the United States, www.sirius-canada.ca in Canada, or call SIRIUS[®] at 1-888-539-7474. Satellite radio is only available with a valid SIRIUS[®] radio subscription.

HOME SCREEN


Your mobile media system has a homescreen where you can load, save and view up to 32 of your favorite pictures as well as view your current audio and climate control settings and the audio visualizer. To access, press the house icon at the bottom left hand corner of any screen.

For more information on this system, please refer to your Owner's Guide.

ESSENTIAL INFORMATION

EASY FUEL[™] "NO CAP" FUEL SYSTEM

With this system, you simply open the fuel filler door, insert the nozzle and begin fueling. It is self-sealing and therefore protected against dust, dirt, water, snow and ice. Wait five seconds from the time the refueling nozzle is shut-off until the nozzle is pulled back out of the fill pipe to allow residual fuel in the nozzle to drain into the tank. To use a portable fuel container, slowly insert the fuel funnel (located in the spare tire compartment), and pour the fuel into the funnel. When done, clean the funnel or properly dispose of it. Extra funnels can be purchased from your authorized dealer. **Do not** use aftermarket funnels as they will not work with the Easy Fuel[™] system and may cause damage.

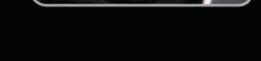

LOCATION OF SPARE TIRE AND TOOLS

Your vehicle is equipped with a temporary spare tire. The spare tire and jack are located under the carpeted floor panel in the rear of the vehicle. (If your vehicle is equipped with a third row seat that is stowed in the floor, you will need to unstore the seat in order to access the tire and jack.) The tire is designed for emergency use only and should be replaced as soon as possible.

FUEL TANK CAPACITY/FUEL INFO

Your vehicle has a fuel tank capacity of 18.6 gallons (70.4L). Your vehicle will run normally on 87 octane regular fuel. Premium fuel will provide improved performance. Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 10% ethanol. If you have a 3.5L V6 EcoBoost engine, your vehicle is designed to run on regular fuel with an octane rating of 87 or higher. For best overall performance, premium fuel with an octane rating of 91 or higher is recommended. The performance gained by using premium fuel will be most noticeable in hot weather or in severe duty applications such as towing a trailer. Some stations offer fuels posted as 'Regular' with an octane rating below 87, particularly in high altitude areas. Fuels with octane levels below 87 are not recommended for either engine. Do not be concerned if your engine sometimes knocks lightly. However, if it knocks heavily while you are using fuel with the recommended octane rating, see your authorized dealer to prevent any engine damage.

ROADSIDE ASSISTANCE

Your new Lincoln MKT comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lockout assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing, and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006.

TIRE PRESSURE

Check your tire pressure at least once a month and before long trips (including spare, if equipped). The recommended specifications are on the Safety Compliance Certification Label or Tire Label located on the B-Pillar or the edge of the driver's door. As an added safety feature, your vehicle has been equipped with a **Tire Pressure Monitoring System (TPMS)** that illuminates a low tire pressure warning light when one or more of your tires is significantly under-inflated. Refer to the Tires, Wheels and Loading chapter in your Owner's Guide for more information.

that will seal most punctures caused by nails or similar objects. Do not attempt to repair large punctures or damage to the tire's sidewall. The mobility kit provides a temporary seal allowing you to drive up to 120 miles at a maximum speed of 50 mph. After sealant use, the TPMS sensor and valve stem on the wheel must be replaced by an authorized Ford dealer.

Note: The sealant in the canister is to be used for one tire only. See your authorized dealer for replacement canisters.

CLIMATE CONTROL

Power/Driver Temperature – Press to turn on/off. Turn to increase/decrease the temperature on the driver side of the vehicle (when the passenger temperature control is active) or for the entire vehicle cabin (when the passenger temperature control is not active).

Heated and Cooled Driver/Passenger Seats – Push once to activate high heat/cool (three indicator lights), press twice for medium heat/cool (two indicator lights), press three times for low heat/cool (one indicator light) and press again to deactivate.

Passenger Temperature – Press to activate the passenger side climate control (dual zone). Turn the control to increase/decrease

temperature on the passenger side. Press again to turn off and return to single zone where the driver side temperature control determines the temperature for the entire vehicle.

AUTO – Press to activate automatic temperature control. The system will automatically determine fan speed, airflow location, A/C (on or off) and outside or recirculated air, to heat or cool the vehicle to reach the desired temperature. Press again to deactivate.

Fan Speed – Press **+** to increase or **-** to decrease fan speed.

: Distributes outside air through the windshield defroster and demister vents. Can be used to clear thin ice or fog from the windshield.

: Using recirculated air may reduce the amount of time needed to cool down the interior of the vehicle and may also help reduce undesirable odors from reaching the interior of the vehicle.

R : Press to activate and clear the rear window and side heated mirrors of thin ice and fog. Press again to deactivate.

Second Row Heated and Cooled Seats (if equipped) – These controls are located on the rear of the floor console. Press once to activate high heat/cool (three indicator lights), twice for medium heat/cool (two indicator lights) and three times for low heat/cool (one indicator light). Press again to turn off.

KEYLESS ENTRY

SECURICODE™ KEYLESS ENTRY SYSTEM

Allows you to lock or unlock the doors as well as open the liftgate without a key. Ensure that you have your five digit factory code located on your owner's wallet card in the glove box.

TO UNLOCK THE DRIVER'S DOOR:

Enter your five digit factory code and, within five seconds, press 3-4.

TO LOCK ALL VEHICLE DOORS:

Press and hold 7-8 and 9-0 at the same time for two seconds (you do not need to enter your factory code first).

INTELLIGENT ACCESS (IA) KEY

Intelligent Access keys allow you to unlock the vehicle door(s) or liftgate and start the car without using a key (provided your Intelligent Access key is within approximately three feet).

TO UNLOCK THE DRIVER'S DOOR:

Simply have the intelligent key within range (in your pocket or purse, for example) and press any button on the keyless entry keypad.

TO UNLOCK THE LIFTGATE:

Have the intelligent key within range and press the exterior trunk release button located just above the license plate.

TO START THE CAR:

Have the intelligent key within range, press the brake pedal and press the ENGINE START button next to the steering wheel.

Press once to lock all doors. Press again to confirm all doors are closed.

Press once to unlock the driver's door. Press again within five seconds to unlock all doors.

Press to activate the panic alarm. Press again or turn on the ignition to deactivate.

Press twice within three seconds to open the liftgate.

CAR FINDER: Press twice within three seconds to locate your vehicle. The horn will chirp and the turn lamps will flash.

The Intelligent Access key also contains a mechanical key blade which can be used to unlock the driver door if the battery runs low in the transmitter. Simply press the release button on the back of the transmitter and slide the key blade out.

ADDITIONAL FEATURES

REARVIEW CAMERA

This system provides a visual display of the area behind the vehicle. The display automatically appears in the touchscreen when the vehicle is in Reverse (R) and uses colors (green, yellow and red) to alert you of your proximity to objects. **Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail and limitations.

BLIND SPOT INFORMATION SYSTEM® (BLIS®) WITH CROSS TRAFFIC ALERT (CTA) (if equipped)

BLIS® uses radar sensors to help you determine if a vehicle may be in your blind spot zone (extending rearward from the front outside mirrors to approximately 10 ft. beyond the bumper) when driving on roads and freeways. The CTA feature alerts you if a car is coming towards you when you are backing out of a parking space. Refer to your Owner's Guide for more information.

REVERSE SENSING SYSTEM

The reverse sensing system may warn you if there is an object behind the vehicle. A warning tone will sound which increases in frequency as the object gets closer and then will sound continuously when the object is less than 10 inches away. The system is active when the vehicle is in Reverse (R) and traveling less than 3 mph (5 km/h). **Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail and limitations.

ACTIVE PARK ASSIST (if equipped)

The Active Park Assist system can detect an available parallel parking space and automatically steer the vehicle into that space. The system instructs the driver with visual and/or audible instructions with regard to braking, accelerating and shifting gears in order to safely park the vehicle. To initiate Active Park Assist, press the Auto P control on the center console and follow the system instructions as prompted by the message center. Use the turn signal to designate which side of the street to search for a spot. If the turn signal is not on, the system will automatically search the passenger side. To stop the parking procedure, grab the steering wheel or press the control again. **Note:** Park Assist does not replace the need to watch where the vehicle is

moving. Refer to your Owner's Guide for safety information, more detail and limitations.

ALL WHEEL DRIVE (AWD) (if equipped)

AWD is always active and uses all four wheels to power the vehicle, thereby increasing traction and enabling you to drive over terrain and in road conditions that a conventional two-wheel drive vehicle cannot. Your vehicle is not intended for off-road use. **Note:** Use only the provided spare tire. Using a different size could cause the AWD system to stop functioning and default to front wheel drive. Your AWD vehicle has special towing instructions. Refer to All Wheel Drive System in the Driving chapter of your Owner's Guide for more information.

IMPROVED FUEL ECONOMY WHILE COASTING OR DECELERATING

Your vehicle has been designed to improve fuel economy by reducing fuel usage while coasting or decelerating. This may be perceived as a light to medium braking sensation when removing your foot from the accelerator pedal.

SOS POST-CRASH ALERT™

This system provides audible and visual alarms when a crash causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate, press the hazard flasher control, or on your remote transmitter.

CONSOLE REFRIGERATOR/FREEZER (if equipped)

Your vehicle may be equipped with a refrigerator/freezer located in the second row console.

To access, flip the console lid forward and then lift off the cover. (Ensure that you replace the cover after you are done as it helps maintain a consistent cooling temperature.)

TO USE THE SYSTEM AS A REFRIGERATOR:

Press the COOL side of the control (A). The indicator light will illuminate when the refrigerator is active. In this mode, the system will cool to approximately 41° F (5° C). Press COOL again to turn off the refrigerator mode or press FREEZE to change to freezer mode. **Note:** The system will only work when the vehicle's ignition is on.

TO USE THE SYSTEM AS A FREEZER:

Press the FREEZE side of the control (A). The indicator light will illuminate when the freezer is active. The system will cool to approximately 23° F (-5° C). Press FREEZE again to turn off the freezer or COOL to switch to refrigerator mode.

MyKey™

Allows you to program certain driving restrictions on any standard key in order to promote good driving habits.

When MyKey™ is programmed:

- Belt-Minder® cannot be disabled and will sound continuously and the audio will be muted until the safety belt is buckled.
- Audible and visual low fuel warnings are provided.
- Audio volume can be limited.
- Vehicle speed can be limited.
- Audible and visual speed warnings can be configured at preselected speeds.
- Certain features cannot be turned off such as, Active Park Assist, Blind Spot Information System® (BLIS®) with Cross Traffic Alert and Forward collision warning.
- AdvanceTrac® cannot be programmed off.

For complete information, refer to MyKey™ in the Locks and Security chapter in your Owner's Guide.

Ford Motor Company, Customer Relationship Center
P.O. Box 6248 Dearborn, MI 48121 1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)



This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate sections when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Guide.



Lincoln MKT
May 2009
First Printing
Quick Reference Guide
Litho in USA

LINCOLN
QUICK REFERENCE GUIDE
MKT