

## WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

 


**United States**  
**Lincoln Customer Relationship Center**  
1-800-521-4140  
(TDD for the hearing impaired 1-800-232-5952)  
**lincolnowner.com**

**Canada**  
**Lincoln Customer Relationship Centre**  
1-800-387-9333  
**lincolncanada.com**

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

Lincoln MKX  
March 2015  
First Printing  
Quick Reference Guide  
Litho in USA  
GA1J 19G217 AA



**2016 MKX**



## Quick Reference Guide



THE LINCOLN MOTOR COMPANY

# The Lincoln Pledge<sup>1</sup>

The Lincoln Pledge is the collective promise of everyone at the Lincoln Motor Company—from our trusted service advisors to expert technicians to the voice on the other end of the line should you call—that we'll be there for you and your Lincoln wherever, whenever, if ever you need us. Here are some of the ways the Lincoln Pledge comes to life and makes the journey of owning a Lincoln a rewarding one.

### Lincoln Warranties

Be assured that everything between the bumpers of your Lincoln is covered for four years/50,000 miles<sup>2</sup> as well as a six-year/70,000-mile Powertrain Warranty for life.<sup>2</sup>

### Roadside Assistance for Life

If ever you need help on the road, the Lincoln Motor Company will be there for you with 24-hour/seven-days-a-week assistance nationwide.<sup>2</sup>

### Lincoln Complimentary Maintenance

The luxury of a two-year/24,000-mile maintenance plan including oil changes and tire rotations, scheduled to accommodate your busy life.<sup>2</sup>

### Complimentary Car Wash

As an added touch, after each service visit we're happy to provide your Lincoln back to you washed and ready for the road ahead.<sup>3</sup>

### Complimentary Loaner

Should your Lincoln require warranty service, we'll be there for you with a loaner vehicle.<sup>3</sup>

### Service Parts Warranty

We'll stand behind our service and you with a two-year, unlimited-mile warranty on both parts and labor.<sup>2</sup>

### Dedicated Support

**Lincoln Client Relationship Center  
and Roadside Assistance**  
**1-800-521-4140**

**TDD for the Hearing Impaired**  
**1-800-232-5952**

### LincolnOwner.com

- ▶ How-to and informational videos.
- ▶ Warranty and maintenance information.
- ▶ Make your payment or schedule service online.
- ▶ Shop for accessories.

### Join us in Conversation



Our caring agents are empowered to handle your call and concerns from beginning to end.

<sup>1</sup> Canadian Roadside coverage and benefits may differ from the United States coverage. Canadian clients should refer to the Lincoln Roadside Assistance section of the Warranty Guide, call **1-800-387-9333** or visit the website at **LincolnCanada.com** for more details.

<sup>2</sup> See dealer for complete details. Lincoln reserves the right to change program details at any time without obligations.

<sup>3</sup> Availability depends on dealership participation.

# Table of Contents

2016 MKX

Instrument Panel ..... 4 – 5

SYNC with MyLincoln Touch ..... 6 – 9

Convenience ..... 10 – 11

Comfort..... 12 – 13

Essential Information ..... 14 – 15

Function ..... 16 – 17

Lincoln Experiences ..... 18

Commonly Used Voice Commands .....19

lincolnowner.com

lincolncanada.com

MyLincoln Mobile

**LEARN MORE ABOUT YOUR NEW VEHICLE**

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed), and you can access even more information about your vehicle.



## 1 Power Tilt and Telescoping Steering Column\*

Use the 4-way control to adjust the steering wheel to your desired position.

## 2 Electric Parking Brake

The operating switch (P) replaces the conventional handbrake. It is to the left of the steering column. To use, pull the switch up. The brake system warning lamp lights to confirm that you applied the electric parking brake.

To release the electric parking brake manually, switch the ignition on, press the brake pedal and then press the electric parking brake switch down. Your vehicle can automatically release the electric parking brake after you close the driver door and accelerate, and the system does not detect any faults. If the electric parking brake warning lamp remains lit, you must release the electric parking brake manually. Refer to the **Brakes** chapter of your **Owner's Manual** for more information.

 
# Instrument Panel

2016 MKX

## 3 Information Display

Provide information about various systems on your vehicle. Use the left, 5-way controls located on the steering wheel to choose and confirm settings and messages. Refer to the **Information Displays** chapter in your **Owner's Manual** for more information.


## 4 Service Engine Soon Light

 Illuminates briefly when you switch the ignition on. If it remains on or blinks after you start the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

## 5 Steering Wheel Audio and Media Controls

Press **VOL** + or – to increase or decrease volume levels.

Press **SEEK** ◀ or ▶ to access the next or previous radio station preset, CD track or preset satellite radio channel.

Press  to access SYNC® phone features.

Press  to access voice recognition.

## 6 Push Button Shift Transmission

Your vehicle includes an electronic transmission. The shift controls are on the center stack.

### Putting Your Vehicle in Gear

- Fully press down on the brake pedal, then press and release one of the **PRNDS** controls to select your gear.
- The selected gearshift control lights and the information display shows the selected gear. Release the brake pedal and your transmission remains in the selected gear.

**Note:** When entering an automatic car wash, **always** put your vehicle into **Stay in Neutral** mode. To put your vehicle in **Stay in Neutral** mode, make sure your vehicle is stationary first, and then:

- Press the neutral (N) control on the shifter assembly once. The information display screen reads **“Press N Again to Enter Stay in Neutral mode”**.
- Press neutral (N) on the shifter assembly again. The message **“Stay in Neutral mode engaged”** appears in the information display and the neutral (N) control flashes continuously to confirm your selection.

To exit **Stay in Neutral** mode, fully press down on the brake pedal, then press and release another gear. Release the brake pedal and your transmission remains in the selected gear.

## 7 Push Button Start

Allows you to start your vehicle by pressing the **START STOP** button while fully pressing down on the brake pedal. Press the button again to switch the engine off.

**Note:** Your intelligent access transmitter must be inside the vehicle for keyless starting to work. If you exit the vehicle with the transmitter and the vehicle is running, the horn sounds.

## 8 Parking Aid Features

See pages 16 and 17 for more information.

## 9 Hazard Warning Control

## 10 AutoHold

See page 15 for more information.

## 11 Locking Glove Box


See page 12 for more information.



**SYNC is a hands-free, voice recognition system used for entertainment, information and communication. SYNC. Say the Word.**

Use the four-corner, four-color touchscreen to explore and interact with your vehicle. The touchscreen works the same way as traditional controls, knobs and buttons do. Press the various corners on your touchscreen to personalize the many features and settings of your vehicle all in one place. The system provides easy interaction with your cellular phone, multimedia entertainment, climate controls and navigation system\*.

## General Tips

- ▶ Press the home icon  at any time to return to your home screen.
- ▶ For additional support, refer to your **Owner's Manual**, visit the website or call the toll-free number. See the inside back cover of this guide for details.

## Before You Get Started

- ▶ If you have the navigation SD card\*, make sure that you insert it into the media port or your navigation cannot work.
- ▶ The touchscreen is sensitive, so make sure you press the desired icon accurately.

## Create Your Owner Account

- ▶ SYNC uses a wireless connection called **Bluetooth®** to communicate with your phone. Turn **Bluetooth** mode on in your phone's menu options. This lets your phone find SYNC.

- ▶ For more details on setting up your phone with SYNC, visit **SyncMyRide.com** (U.S.) or **SyncMyRide.ca** (Canada), or your phone manufacturer's website.
- ▶ Set up your owner account at **SyncMyRide.com** (U.S.) or **SyncMyRide.ca** (Canada). Register by following the on-screen instructions. After registering, you can see what complimentary services you are eligible for.

## Why You Need a SYNC Owner Account

A SYNC owner account allows you to receive the latest software updates. When you have questions, you get free customer support. Visit the website or call the toll-free number for more information. See the inside back cover of this guide for details.

## Pairing Your Cell Phone with SYNC

In order to use many of the features of SYNC, you must first pair and connect your phone with SYNC.

### To Pair Your Phone for the First Time

1. Make sure that your vehicle is in park (P) and you switch on your ignition and radio.
2. Touch **Add Phone** in the upper left corner of the touchscreen.



3. Make sure that **Bluetooth** is set to on and your cellular phone is in the proper mode.
4. When **Find SYNC** appears on the display, follow the directions on the screen. Select SYNC appears on your device and then a six-digit PIN also displays. If you are prompted to enter a PIN on your device, it does not support Secure Simple Pairing. To pair, enter the PIN displayed on the touchscreen. Skip the next step.

5. When SYNC finds your phone, it displays a six-digit PIN. Add the PIN into your phone.
6. The display indicates when the pairing is successful.

**Note:** The system may prompt you to:

- ▶ Set your phone as the primary or favorite (the primary phone receives messages and voicemail).
- ▶ Download your phone book (a requirement to use the full set of voice commands).
- ▶ Turn on 911 Assist®.

## Tips

- ▶ Make sure you accept the request from SYNC to access your phone.
- ▶ To pair subsequent phones, please refer to **Pairing Subsequent Cell Phones** in the SYNC chapter of your **Owner's Manual**.
- ▶ If you experience pairing problems, try performing a clean pairing by deleting your services from SYNC, deleting your phone pairing from SYNC, and then repeating the **Pairing Your Cell Phone with SYNC** process.



## Phone


Voice-control your phone for hands-free calling with your phone securely put away. With SYNC, you won't even need to know the phone number. Just say the name of the person you want from your contacts.


Your phone connects you with other features:

- ▶ Listen to text messages (phone-dependent feature).
- ▶ Transfer calls seamlessly from SYNC to phone as you get in or out of your vehicle.

**Note:** Your phone allows you to connect automatically with a 911 Operator in the event of an accident (you must switch on this feature prior to an event).

## Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button  and when prompted, say a voice command.

**Note:** You can also make phone calls by pressing the voice button . When prompted, give the voice command **"Dial"**, then say the phone number.

Answering Incoming Calls

Whenever you have an incoming call, the name and number of the person calling appears in your display. Press the phone button to answer an incoming call. You can hang up at any time by pressing the phone button.

Do Not Disturb Mode

This feature blocks incoming calls and text messages and saves them for later. You still have access to outgoing calls when this feature is active. Say the voice command “Do not disturb on” to enable and “Do not disturb off” to disable.



Navigation\*

Get started with your navigation system by pressing the upper-right, green corner. The available, voice-activated navigation system includes:

- ▶ SiriusXM Traffic™
- ▶ SiriusXM Travel Link™
- ▶ GPS (Global Positioning System) technology
- ▶ 3-D mapping
- ▶ Turn-by-turn navigation

Some features require activation. Refer to the **MyLincoln Touch** chapter of your **Owner’s Manual** for complete details.

Set a Destination

Set a destination through your touchscreen by using a street address, an intersection, a point of interest (POI) or a place on the map. The easiest way, however, is by voice.

1. Push the voice button. When prompted, say “Find an address”.
2. The system asks you to say the full address and then displays an example on-screen.
3. You can then speak the address naturally, such as: “One two three Main Street, Anytown”.



You can also use the touchscreen to enter a destination and narrow your choices by city or street as you type.

You can choose from up to three different types of routes:

- ▶ **Fastest:** Uses the fastest moving roads possible.
- ▶ **Shortest:** Uses the shortest distance possible.
- ▶ **Eco (EcoRoute):** Uses the most fuel-efficient route.

Tips

- ▶ Save your favorite locations by touching “Save to Favorites”.
- ▶ Change your map views from Direction Headed, North Up or 3-D.



Climate

Control the temperature, airflow direction, fan speed and other climate features for you and your front passenger through the touchscreen.

Set Your Temperature

- ▶ Touch the lower-right, blue Climate corner on the touchscreen.
- ▶ Set your exact, desired temperature by using the + or – buttons.

You can also use the voice controls to adjust the temperature. Say “Climate set temperature 72 degrees” and MyLincoln Touch makes the adjustment.



Entertainment

No matter how you store your music, SYNC makes it yours to enjoy when you are behind the wheel. Just press the lower-left, red corner of the touchscreen. From here, you can easily go between AM, FM, SiriusXM, and other media sources.



Set Your Radio Presets

- ▶ Touch the Entertainment corner on the touchscreen.
- ▶ Touch **FM**.
- ▶ Touch **Direct Tune**.
- ▶ Enter the desired station and touch **Enter**.
- ▶ Touch **Presets** and then touch and hold one of the memory preset buttons to save it.

The sound mutes and then returns after the system saves the station.

Bring in Your Own Music

Gain access to any audio source by voice and even control how each operates, like changing radio stations, CD tracks or music on one of the following devices:

- ▶ Smart-charging USB ports, located in the front console, on the center stack, and on the rear of the center console for rear-seat passengers.
- ▶ **Bluetooth®** streaming
- ▶ SD card\*

For additional support, refer to your **Owner’s Manual**, visit the website or call the toll-free number. See the inside front cover of this guide for details.

Using SYNC To Access Digital Media

SYNC has a media hub with multiple inputs allowing you to access personal media from your digital devices. Plug in your USB media devices such as phones and MP3 players and use SYNC to play all of your favorite music.

**Note:** SYNC indexes all of your music. The more music you have on your device, the longer it takes SYNC to index.

Using Voice Commands to Play Music

1. Plug your media player into your USB port.
2. Press the voice button. When prompted, say “USB”, then follow-up by saying a voice command.
3. The system repeats the command back to you and then plays the selected item.



SecuriCode™ Keyless Entry Keypad



The keypad is near the driver window. It lights when touched, and allows you to lock or unlock the doors and liftgate, recall memory features and arm or disarm the anti-theft alarm. To get started, locate your 5-digit factory code found on your owner's wallet card (in the glove box). Entering this code unlocks the driver door.

**To lock all doors:** Press and hold **7•8** and **9•0** at the same time with the driver door closed.

**To unlock all doors:** Enter your 5-digit code (either the factory code or your personal code), and then press **3•4** within five seconds.

**To release the liftgate:** Enter your 5-digit code (either the factory code or your personal code), and then press **5•6** within five seconds.

For complete information, refer to the **SecuriCode Keyless Entry Keypad** section in the **Locks** chapter of your **Owner's Manual**.

Intelligent Access

**Note:** The transmitter must be within 3 feet (1 meter) of the vehicle for intelligent access to function properly.

To unlock and open a door, pull an exterior door handle. Make sure not to touch the lock sensor area on the front of the handle.


To lock the doors, touch the top of the door handle.

To unlock and open a front door, pull the front exterior door handle.

The unlock sensor is on the back of the handle.

To lock the doors, touch the sensor on the top of the door handle.


Intelligent Access Remote Entry Icons

Press  once to lock all doors.

Press again within three seconds to confirm that you locked all doors.


Press  once to unlock the driver door.

Press again within three seconds to unlock all doors.

Press  to activate the panic alarm.

Press again or switch the ignition on to deactivate.

Press  twice within three seconds to open the liftgate.

**Car finder:** Press  twice within three seconds to locate your vehicle. The horn sounds and the direction indicators flash.

**Note:** The intelligent access transmitter also contains a mechanical key blade that you can use to unlock the driver door, if necessary.





SelectShift Automatic® Transmission with Paddle Activation

 
Gives you the ability to manually change gears if you like. To use, move the gearshift lever from drive (D) to sport (S).

Pull the right paddle (+) to upshift, pull the left paddle (–) to downshift.

Remote Start

Remote start allows you to start your vehicle using your transmitter. To start, press  and then press  twice within three seconds.

Once inside, apply the brake while pressing the **START STOP** button. Shift into drive (D) and go.

To switch the engine off from outside the vehicle after using your remote start, press  once.

An LED on the remote control provides status feedback of remote start or stop commands:

**Solid green:** The remote start was successful.


**Solid red:** The remote stop was successful and the engine is off.


**Blinking red:** The remote start or stop failed.



**Blinking green:** The system is waiting for a status update.

Power Liftgate

Your liftgate has an automatic open and closing feature.

To open remotely, press  twice on your remote control within three seconds.

To close or reverse the movement, press  twice again.

You can also operate the liftgate by pressing the  button on the instrument panel. The rear cargo area control lets you close the liftgate by pressing the  button.

To Set the Liftgate Open Height

1. Open the liftgate.
2. Manually move the liftgate to the desired height.

3. Press and hold the control button on the liftgate until you hear a tone, indicating programming is complete.

The system recalls the new open liftgate height when you use the power liftgate feature. To change the programmed height, repeat the procedure.

**Note:** You cannot program the height if the liftgate position is too low. Once you open the power liftgate, you can manually move it to a different height. When operating the power liftgate after you have programmed a lower height than full-open, you can fully open the liftgate by manually pushing it upward to the maximum open position.

Hands-free Liftgate Operation\*



1. Make sure you have your intelligent access transmitter within 3 feet (1 meter) of the liftgate.
2. Move your foot under and back from the rear bumper, similar to a kicking (front-to-back) motion. Do not move your foot sideways or the sensors may not detect the motion.

**Note:** In vehicles equipped with the towing package, you must kick your foot **between** the trailer hitch and the exhaust system. Do not kick under the hitch.





## Climate Controlled Front Seats



For heated front seats, press  repeatedly to cycle through the various heat modes and off. For cooled front seats, press  repeatedly to cycle through the various cooling modes and off.

**Note:** The cooled seats function only when the engine is running.

## Rear Heated Seats\*

The rear heated seat controls are located on the rear of the center console. Press  to select high or  to select low heat. Press the selected button again to switch the feature off.

## Easy Fold® Rear Folding Seats




The controls are on the left-hand rear quarter trim panel (accessible from the liftgate area). Press and hold either the left or right controls to lower the corresponding seatback. To return the seats to their upright position, manually rotate the seatbacks until they latch with a click into the upright position.


## Reclining Second-row Seats\*

With the seat occupied, pull the lever up to recline the seatback.

## Heated Steering Wheel\*

To access, press the Climate corner of the touchscreen. Press  to switch on and off.

## Power Adjustable Seats\*

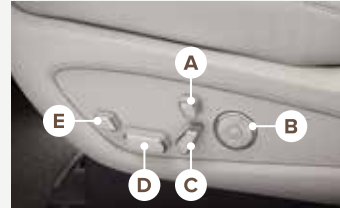

You can adjust your driver seat in a variety of ways:

- ▶ Press **A** to raise, lower, and tilt forward or back the head restraint.
- ▶ Press **B** to use the multi-contour seat functions; press **C** to change the backrest angle and move the upper back restraint pivot point forward and rearward.
- ▶ Press **D** to raise, lower, move forward or back or tilt the cushion; press **E** to adjust the cushion length.

The front seats also include a massaging feature. See the **Seats** chapter in your **Owner's Manual** for more details.

## Locking Glove Box\*



You can open the glove box by pressing the button located on the instrument panel.

**Note:** The electronic glove box does not function if the vehicle battery is dead, or after you switch the ignition off and lock the vehicle.




## Manual Entry

1. Open the passenger door.
2. Remove the end cap from the instrument panel.
3. Insert a pen or pencil into the latch device to release glove box.



## Moonroof\*

The moonroof controls are on the overhead console. To stop motion during operation, touch the control a second time.

## Moonroof Controls

-  **Moonroof open button:** Press and release to open. The moonroof stops short of the fully opened position. To open the moonroof fully, press and release the open button again.
-  **Moonroof close button:** Press and release to close.
-  **Moonroof vent button:** Press and release to vent.

## Sunshade Controls\*

-  **Sunshade open button:** Press and release to open. The power shade automatically opens with the moonroof. You can also open the power shade with the moonroof closed.
-  **Sunshade close button:** Press and release to close. The moonroof glass must be fully closed for the sunshade to close completely.

## Memory Function

Use the memory controls on the driver door to program and recall power-adjustable positions of the driver seat, mirrors, pedals and steering column\*. To program position **1**, switch the ignition on, and then adjust the power features to your desired position. Press and hold the **1** button until you hear a tone. Use this same procedure to set positions **2** and **3** using the respective controls. Recall the set memory positions by pressing the pre-set control.



You can also program your memory seats to your transmitter. That way, when you unlock your door with the transmitter, your memory features automatically move into your saved position. See the **Seats** chapter in your **Owner's Manual** for more details.

## Ambient Lighting\*

When you switch this feature on, ambient lighting illuminates select areas of your vehicle interior with a choice of colors.

To access and make adjustments:

1. Press the **Settings** icon > **Vehicle** > **Ambient Lighting**.
2. Touch the desired color.
3. Use the scroll bar to increase or decrease the intensity.

To switch the feature on or off, press the power button.

## Cargo Storage

The variety of cargo storage areas help keep frequently accessed items within reach and items protected:

- ▶ Utility tray on the outboard side of the driver seat.
- ▶ Bottle holders in the front door map pockets, and rear retractable cup holders fold away for easy storage.
- ▶ Ticket holder on the driver sunvisor.
- ▶ Center console pass throughs.
- ▶ Compartments behind the second-row seats and under the load floor.



Pre-Collision Assist



The system warns you of certain collision risks. The system’s sensor detects your vehicle’s rapid approach to other vehicles traveling in the same direction as your vehicle. When your vehicle rapidly approaches another vehicle, a red warning light flashes and a tone sounds.

You can adjust your warning system’s sensitivity to any one of three possible settings:

1. **Alert:** When activated, a red warning light flashes, an audible warning tone sounds and a warning message shows in the information display.
2. **Brake Support:** The brake support system assists the driver in reducing the collision speed by lightly applying the brakes. If the risk of collision further increases after the warning light illuminates, the brake support prepares the brake system for rapid braking. This may be apparent to the driver. The system does not automatically activate the brakes, but if you press the brake pedal, the system may apply full force, even if the brake pedal is lightly pressed.
3. **Active Braking:** Active braking may activate if the system determines that a collision is imminent. The system may help the driver reduce impact damage or avoid the crash completely.

**Note:** Driving aids do not replace the need to watch where the vehicle is moving and brake when necessary. Refer to your **Owner’s Manual** for safety information, more details and limitations.

Lane Keeping System

The system notifies you to stay in your lane through the steering system and the instrument cluster display when the front camera detects an unintentional drift out of your lane is likely to occur. The system automatically detects and tracks the road lane markings using a camera mounted behind the interior rear view mirror. Press the button located on the left steering wheel stalk to switch the system on or off. For more details, refer to the **Driving Aids** chapter of your **Owner’s Manual**.

Tire Pressure Monitoring System

Your vehicle has a tire pressure monitoring system that illuminates a low tire pressure warning light (ⓘ) in your instrument cluster when one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the **Tire Pressure Monitoring System** section in the **Wheels and Tires** chapter of your **Owner’s Manual** for more information.

Location of Spare Tire and Tools

Your spare tire and tools are located beneath the carpeted floor panel in the cargo area of your vehicle. The spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details, refer to the **Wheels and Tires** chapter of your **Owner’s Manual**.

Open Window Buffeting

You may hear a pulsing noise when just one of the windows is open. Lower the opposite window slightly to reduce this noise.

Easy Fuel® System

With this system, put your vehicle in park (P) and switch off the ignition. Open the fuel door, insert the nozzle and begin fueling. Wait about five to ten seconds after pumping fuel before removing the fuel filler nozzle. This allows residual fuel to drain back into the fuel tank and not spill onto the vehicle.

Running Out of Fuel

When using a portable fuel container, slowly insert the fuel funnel (located in the left-hand side, rear storage compartment), and pour the fuel into the funnel. When done, clean the funnel or properly dispose of it. You can purchase extra funnels from your authorized dealer. Do not use aftermarket funnels as they do not work with the Easy Fuel® system and may cause damage.

**Note:** Avoid running out of fuel because this situation may have an adverse effect on powertrain components.

Fuel Tank Capacity/Fuel Info

All-wheel drive vehicles have a 18.5 gallon (70.0L) fuel tank capacity and front-wheel drive vehicles have an 18.4 gallon (69.5L) fuel tank capacity. Use only UNLEADED fuel or UNLEADED fuel blended with a maximum of 15% ethanol and a minimum octane rating of 87. Do not use diesel, fuel-methanol, leaded fuel or any other fuel because it could damage or impair the emission control system.

Towing Your MKX

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to **Towing the Vehicle on Four Wheels** section in the **Towing** chapter of your **Owner’s Manual**.

Auto Hold

Auto Hold can assist you while stopping at traffic lights or while in traffic jams by holding the brakes when you bring your vehicle to a stop. Press the **Auto Hold** button to switch the system on. The **Auto Hold** button lights. When the system is on and actively holding the vehicle, **AUTO HOLD** displays in the instrument cluster.

When you press the accelerator pedal, Auto Hold automatically releases the brakes. In certain situations, Auto Hold may apply the electric parking brake and illuminate the brake warning lamp in the instrument cluster.

Auto Hold turns off when you power your vehicle down, or you can switch the feature off manually by pressing the **Auto Hold** button. Switch Auto Hold off if you are towing a trailer or having the vehicle towed.

See the **Brakes** chapter of your **Owner’s Manual** for more details.

Automatic Engine Shutdown

This feature automatically shuts down the engine if it has been idling for an extended period of time. The ignition also turns off in order to save battery power. Before your vehicle shuts down, a message appears in the information display showing a timer counting down. If you do not intervene within 30 seconds, your vehicle shuts down. Another message appears in the information display to inform you that your vehicle has shut down to save fuel. Start your vehicle as normal.

You can override this feature temporarily by pressing the brake or accelerator pedal, or by pressing OK or the RESET button in your information display. Refer to the **Information Displays** chapter of your **Owner’s Manual** for more details.




Rear View Camera\*



This system provides a video image of the area behind your vehicle. The display automatically appears in the touchscreen when the vehicle is in reverse (R) and uses green, yellow and red guides to alert you of your proximity to objects.

360 Degree Parking Aid Camera\*

The  button is on the instrument panel and allows you to toggle through different camera views. The front and rear cameras have multiple screens that include Normal View with 360, Normal View and Split View.

When in park (P), neutral (N) or drive (D), only the front images display when you press the button. When in reverse (R), only the rear images display when you press the button.

**Note:** The 360 degree camera system turns off when your vehicle is in motion at a low speed, except when in reverse (R).

**Note:** Mud, water or debris obstructs the camera's view. Clean the lenses (on the side mirrors and liftgate) with a soft, lint-free cloth and non-abrasive cleaner.



Front, Rear and Side Parking Aids\*


The sensing systems warn you of obstacles within a certain range of your vehicle. The systems turn on automatically whenever you switch the ignition on.


You can switch the rear parking aid system off through the information display menu or from the pop-up message that appears once you shift the transmission into reverse (R). You can switch the front parking aid off through the parking aid switch.


**Note:** Visibility aids do not replace the need to watch where the vehicle is moving.

Refer to your **Owner's Manual** for safety information, more details and limitations.

Active Park Assist and Park Out Assist\*

Detects an available parallel or perpendicular parking space and automatically steers the vehicle into the space (hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to park your vehicle, or enter traffic. The  button is on the center stack.


To use active park assist for parallel parking, press the  button once.

To use the system for perpendicular parking, press the  button twice.



\*if equipped

Active Park Assist and Park Out Assist\* (continued)

**Use the park out assist** feature when your vehicle is at rest in a parallel parking space. Press the  button, and then follow the instructions on the display. Use your direction indicator to signal which side of your vehicle you want to exit the parking space. After the system has directed your vehicle past the adjacent vehicle or object, it guides you to take control of the steering to complete the exit from the parking spot.

To stop the parking procedure, grab the steering wheel or press the control again. For complete information, refer to the **Parking Aids** chapter of your **Owner's Manual**.

**Note:** The driver is always responsible for controlling the vehicle, supervising the system, and intervening, if required.

Adaptive Steering\*

The adaptive steering system optimizes your vehicle's steering response based on your steering wheel input, changes in vehicle speed and other conditions. You can change the settings in the information display. Refer to your **Owner's Manual** for more details.

**Note:** The adaptive steering system includes a locking device that may make a sound when you start or switch off your vehicle. This is completely normal.

\*if equipped

Lincoln Drive Control

This feature intelligently integrates chassis and powertrain systems for personalized ride comfort, steering, handling, powertrain response and sound. Choose between two default settings or customize your own.

Factory default settings include Normal Handling and Normal Performance while you are in drive (D). Select sport (S) to engage Sport Handling and Sport Performance settings.

Customize your Handling and Performance settings through the information display by navigating through the information display menu to Settings, Vehicle, and then Drive Control to configure:

Handling

- ▶ **Comfort:** Provides lower steering efforts and a more fluid suspension.
- ▶ **Normal:** Delivers an engaging drive experience with confident handling.
- ▶ **Sport:** Increases handling and control with a sporty feel.

Performance

- ▶ **Normal:** Provides smooth power delivery and a refined sound.
- ▶ **Sport:** Increases engine and transmission responsiveness, while adding a more powerful engine tone.

# Lincoln Experiences

As you approach or leave your vehicle, key areas of your vehicle automatically adjust, including the following personalization features.

## Welcome Lighting

Lights select exterior lighting as you approach your vehicle. You can switch this feature on and off in your information display. See the **Information Display** chapter in your **Owner's Manual** for details.

## Auto-folding Exterior Mirrors\*

Automatically folds the exterior mirrors toward the glass when you place the transmission into park (P). When you place the transmission into drive (D), the mirrors fold back out automatically. Mirrors also fold when you push the power door lock control.

## Interior Lighting

Illuminates select interior lighting and ambient lighting including the push button start as you enter your vehicle. Once you start your vehicle, the information display and the touchscreen also light.

## Easy Entry

Automatically recalls your seat and power tilt and telescoping steering wheel positions when you push the keyless start ignition button.

## Easy Exit

Moves the driver seat rearward up to 2 inches (5 centimeters) and deflates the seat's side bolsters. Additionally, the power tilt and telescoping steering wheel moves to the full up position when the transmission is in park (P) and you switch off the keyless start ignition. The driver seat and steering column return to their previous positions, and the side bolsters re-inflate to their previous size when you push the keyless start ignition button.

## MyLincoln Mobile™\*


This smartphone-compatible app combines vehicle service, client support and driver convenience features. For more details, visit [support.lincoln.com/mylincolnmobile](http://support.lincoln.com/mylincolnmobile).



\*if equipped

# Commonly Used Voice Commands

SYNC® Say the Word.

Press the voice button  on your steering wheel and then say:



## Basic Commands

- ▶ What can I say?
- ▶ List of commands
- ▶ Main menu
- ▶ Previous
- ▶ Next
- ▶ Go back
- ▶ Exit
- ▶ Help



## Climate

- ▶ Climate control list of commands
- ▶ Climate <On/Off>
- ▶ Climate my temperature
- ▶ Climate auto temperature



## Phone

- ▶ Phone list of commands
- ▶ Dial
- ▶ Call <name> on cell/at home/at work
- ▶ Call voicemail
- ▶ Do not disturb <On/Off>
- ▶ Listen to text messages (phone-dependent feature)



## Entertainment

- ▶ Audio list of commands: You can also get detailed lists of commands for radio, USB, **Bluetooth®** audio, SiriusXM\* and SD card\*
- ▶ Radio
  - <On/Off>
  - FM <87.9-107.9>
  - FM preset <#>
- ▶ CD
  - Play track <1-512>
  - Shuffle <On/Off>
- ▶ USB
  - Play song <name>
  - Play album <name>
- ▶ SiriusXM
  - <Channel name>
  - Preset <#>



## Navigation\*

- ▶ Navigation list of commands
- ▶ Destination street address <number, name, city>
- ▶ Destination home
- ▶ Voice guidance <On/Off>
- ▶ Navigation voice volume <increase/decrease>
- ▶ Repeat instruction
- ▶ Show <map/north-up/heading-up/3-D>
- ▶ Travel Link list of commands
- ▶ Traffic
- ▶ Weather
- ▶ Movie listings
- ▶ Fuel prices
- ▶ Sports <headlines/scores/schedule>

Some services may not be available in your area. For additional support, refer to your Owner's Manual, visit the website or call the toll-free number. **U.S. customers:** Visit [SyncMyRide.com](http://SyncMyRide.com) or call **1-800-392-3673** (select Option 1 or 2 for language, then press 3). **Canadian customers:** Visit [SyncMyRide.ca](http://SyncMyRide.ca) or call **1-800-565-3673** (select Option 1 or 2 for language, then press 3).