2014 Infiniti Service and Maintenance Guide



TABLE OF CONTENTS



OWNER'S LITERATURE INFORMATION)

INDEX OF TOPICS	WHERE TO FIND INFORMATION
Radio/CD/Heater/AC Operation	Owner's Manual: chapter 4
Starting and Driving Your Vehicle	Owner's Manual: chapter 5
Security System Operation	Owner's Manual: chapter 2
Changing a Flat Tire	Owner's Manual: chapter 6
New Vehicle Limited Warranty	"2014 New Vehicle Limited Warranty" section in Warranty Information Booklet
Federal Emission Control Warranties	"Federal Vehicle Emission Control Limited Warranties" section in Warranty Information Booklet
California Emission Control Warranties	"California Vehicle Emission Control Warranties" section in Warranty Informati on Booklet
Tire Pressure/Rotation	Owner's Manual: chapter 8
Tire Warranties/Safety Information	Individual tire manufacturer warranty sections in Warranty Information Booklet
Consumer Affairs Assistance	"Nissan's Customer Care Program" section in Warranty Information Booklet
	Customer Care/Lemon Law Information Booklet*
Do It Yourself Information	Owner's Manual: chapter 8
General Maintenance	Owner's Manual: chapter 8

^{*} Not applicable outside of the United States

INFINITI MAINTENANCE



Maintain Your Investment

Preventative scheduled maintenance is an important investment to optimize the performance, durability, reliability, safety and resale value of your Infiniti. Scheduling your vehicle's maintenance at the recommended intervals will ensure your vehicle is running at its best. We want you to enjoy your Infiniti vehicle. This Service and Maintenance Guide is designed to help you make sure your vehicle receives proper and timely maintenance that is necessary. Key services are explained in detail, along with an outline of scheduled maintenance to help you maintain your vehicle. Your local Infiniti retailer can assist you in determining the best schedule based on your driving habits and local conditions.

Failure to perform scheduled maintenance may result in excluding portions of your vehicle from warranty coverage and may reduce the performance, durability, reliability, safety and/or resale value of your vehicle. See your Warranty Information Booklet and Owner's Manual for details.

WHY INFINITI SERVICE?*

To preserve the quality and safety of your vehicle, an authorized Infiniti retailer is recommended for maintenance or repair. Only an authorized Infiniti retailer offers you these advantages:

- Factory Trained and ASE certified technicians
- Immediate access to warranty service history and factory technical information
- Latest diagnostic, special tools and service techniques
- Genuine Infiniti Parts that meet Infiniti's demanding standards
- 12 month/12,000 mile parts and labor limited warranty when Genuine Infiniti Parts are installed by your retailer
- Complimentary Multi-Point Inspections (at participating retailers)
- Clear, up-front estimates
- Service Loan Car availability for scheduled warranty service.**
- Shuttle service/Courtesy van (at participating retailers)

We recommend relying on our trained Infiniti service specialists, who refer to their detailed knowledge of your Infiniti in every service they perform. Plus, they use Génuine Infiniti Parts, designed and engineered specifically to maintain your Infiniti's original integrity. That's the distinction of your authorized Infiniti retailer.



Your Service - Your Way



^{*} May differ or not apply outside the United States, please inquire of your retailer.

** Available during Basic New Vehicle Limited Warranty at participating Infiniti retailers. Subject to availability. Restrictions apply.

EXTENDED SERVICE PRODUCTS

Infiniti Elite Extended Protection Program*

Long-Term Coverage

Infiniti Elite Extended Protection Plans provide with long-term coverage to 8 years/120,000 miles. Coverage under the optional Infiniti Elite Extended Protection Plan and the Infiniti Limited Warranty begins with the delivery of the vehicle to the first retail buyer. Accordingly, your agreement may provide coverage for your vehicle for a portion of the same period as your New Vehicle Warranty. Upon expiration of the applicable Limited Warranties, the full spectrum of the Infiniti Elite Extended Protection Plan coverage is in force to the end of the time or mileage term. During the period of your Basic Warranty, the Infiniti Elite Extended Protection Plan provides you with Rental Car Coverage only.





Benefits You Can Count On SERVICE AT AUTHORIZED INFINITI RETAILERS/REPAIR FACILITIES.

With the Infiniti Elite Extended Protection Plan, service is completed by Infiniti-trained technicians.

UNLIMITED CLAIMS.

No limit on the number of claims for covered repairs.

^{*} This product is not available outside the United States.

EXTENDED SERVICE PRODUCTS

PROVIDES FOR THE COST OF GENUINE ORIGINAL EQUIPMENT REPLACEMENT PARTS.

Designed for use on Infiniti vehicles. No inferior substitutes.

EMERGENCY TOLL-FREE HELP.

If a breakdown occurs outside your area, you are covered. Just contact the nearest Infiniti retailer, or call the special toll-free number for assistance.

SUBSTITUTE TRANSPORTATION.

If a mechanical breakdown occurs and you require alternate transportation, Infiniti will reimburse you for actual expenses up to \$50 per day, to a maximum of 5 days and \$250 per service visit.



TRANSFERABLE TO A NEW OWNER.

Should you sell your Infiniti before your coverage expires, you can transfer your Infiniti Elite Extended Protection Plan,** thereby enhancing your vehicle's resale value.

CONVENIENT AND ECONOMICAL.

Coverage that costs only pennies per day. Your Infiniti retailer will be happy to include the cost in your monthly car payment.

^{**} A nominal transfer fee may apply. For details please refer to the Infiniti Elite Extended Protection Plan Vehicle Service Contract, or contact your Infiniti retailer.

GENUINE INFINITI COLLISION PARTS

If you have an accident, insist on Genuine Infiniti Collision Parts. If you want your vehicle to be restored using parts made to Infiniti's original exacting specifications — if you want it to last, help to protect your personal safety and to help hold its resale value, the solution is simple. Tell your insurance agent and your repair shop to use only Genuine Infiniti Collision Parts.

Many non-genuine parts are copies made from impressions of Infiniti parts and may not match the specifications and performance standards of Genuine Infiniti Parts. As a result, non-genuine parts may not look or fit right, and may be less safe.

The hood on your vehicle is a good example. Infiniti designed it with hood buckling creases to help prevent the hood from penetrating the interior of your vehicle in an accident. Non-genuine parts may not provide such built-in safeguards.

In some states, the law says you must be advised if nongenuine parts are used to repair your vehicle. **Why should you take a chance?**

Replacement Panel Limited Lifetime Corrosion Warranty*

See your participating Infiniti retailer for details.

If you have your collision damage repaired using Genuine Infiniti Outer Sheet Metal Panels you don't have to worry about corrosion. That's because these panels are warranted against inside out rust-through perforation for as long as you own your Infiniti. Another reason to insist on Genuine Infiniti Collision Repair Parts.

^{*} This warranty does not apply to vehicles or parts, not distributed by Nissan North America and/or sold outside the United States.

DETERMINING THE PROPER MAINTENANCE INTERVAL

As a condition of your vehicle's warranty, you are responsible for properly maintaining your vehicle. In maintaining your vehicle, you should use these guidelines to determine which maintenance schedule to use.

Standard maintenance; features 5,000 mile or 6 month, whichever comes first, service intervals and generally applies when you primarily operate your vehicle on the highway in temperate conditions. Premium maintenance is an Infiniti recommended optional upgrade that adds services when maintenance is performed.

Premium Maintenance;* performing the Premium upgrade services may optimize the performance, durability, reliability, and resale value of your vehicle. (Premium Maintenance items are available at every 30,000 miles or 36 months interval.)

Additional maintenance items for severe operating conditions; should be performed on vehicles that are driven under especially demanding conditions. Additional maintenance items should be performed if you primarily operate your vehicle under the following conditions:

- Repeated short trips of less than 5 miles in normal temperatures or less than 10 miles in freezing temperatures.
- Stop-and-go traffic in hot weather or low speed driving for long distances
- Driving in dusty conditions or on rough, muddy, or salt-spread roads
- Towing a trailer, or using a camper or car-top carrier

For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti dealer. See page 16 for more information on Multi-Point Inspections.

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

^{*} Premium Maintenance is an Infiniti-recommended option; You need not perform such maintenance in order to maintain the warranties which come with your Infiniti. Premium Maintenance may not be available outside the United States, please inquire of your dealer.

EXPLANATION OF SCHEDULED MAINTENANCE ITEMS

The following descriptions are provided to give you a better understanding of the scheduled maintenance items that should be regularly checked or replaced. The maintenance log indicates at which mileage/time intervals each item requires service.

In addition to scheduled maintenance, your Infiniti requires that some items be checked during normal day-to-day operation. You can find these items listed under "General Maintenance" in Chapter 8 of your Owner's manual.

Items marked with "*" are recommended by Infiniti for reliable vehicle operation. You are not required to perform such maintenance in order to maintain the emission warranty or manufacturer recall liability. Other maintenance items and intervals are required.

When applicable, additional information can be found in the "Do-it-yourself" section in Chapter 8 of your Owner's Manual.

NOTE: Nissan North America does not advocate the use of non-OEM approved aftermarket flushing systems and strongly advises against performing these services on a Infinti product. Many of the aftermarket flushing systems use non- OEM approved chemicals or solvents, the use of which has not been validated by Nissan North America.

For recommended fuel, lubricants, fluids, grease, and refrigerant refer to Chapter 9 in your Owner's Manual.

Emission Control System Maintenance:

Drive Belts*

Check engine drive belts for wear, fraying or cracking and for proper tension. Replace any damaged drive belts.

Engine Air Filter

Replace at specified intervals. When driving for prolonged periods in dusty conditions, check/replace the filter more frequently.

Engine Coolant*

Replace engine coolant at the specified interval. The recommended service interval of the factory-fill coolant is 105,000 miles (168,000 km) or 7 years, whichever comes first. When adding or replacing coolant, be sure to use only Genuine Nissan Long Life Antifreeze/Coolant (Blue) or equivalent with the proper mixture. (Refer to the owner's manual to determine the proper mixture for your area). Subse-

EXPLANATION OF SCHEDULED MAINTENANCE ITEMS

quent replacement of Genuine Nissan Long Life Antifreeze/Coolant (Blue) should occur every 75,000 miles (120,000 km) or 5 years, whichever comes first. NOTE: Mixing any other type of coolant or the use of non-distilled water will reduce the recommended service interval of the coolant.

Hybrid Electronic Vehicle (HEV) Inverter Coolant

Replace inverter coolant at the specified interval. The recommended service interval of the factory-fill coolant is 125,000 miles (200,000 km) or 15 years, whichever comes first. Subsequent replacement of Genuine Nissan Long Life Antifreeze/Coolant (Blue) should occur every 75,000 miles (120,000 km) or 5 years, whichever comes first. When adding or replacing coolant, be sure to use only Genuine Nissan Long Life Antifreeze/Coolant (Blue) or equivalent with the proper mixture. (Refer to

the Owner's Manual to determine the proper mixture for your area.)

NOTE: Mixing any other type of coolant or the use of non-distilled water will reduce the recommended service interval of the coolant.

Engine Oil and Oil Filter

Replace engine oil and oil filter at the specified intervals. For recommended oil grade and viscosity refer to Chapter 9 in your Owner's Manual.

Engine Valve Clearance*

Inspect only if valve noise increases. Adjust valve clearance if necessary.

Evaporative Emissions Control Vapor Lines*

Check vapor lines and connections for leaks or looseness. Tighten connections or replace parts as necessary.

Fuel Filter

Maintenance-free item (In-tank type filter).

Fuel Lines*

Check the fuel hoses, piping and connections for leaks, looseness, or deterioration. Tighten connections or replace parts as necessary.

Spark Plugs

Replace at specified intervals. Replacement Intervals for IPL models differ from non-IPL models. Install new plugs of the same type as originally equipped.

Chassis and Body Maintenance: Brake Lines and Cables

Visually inspect for proper installation. Check for chafing, cracks, deterioration, and signs of leaking. Replace any deteriorated or damaged parts immediately.

EXPLANATION OF SCHEDULED MAINTENANCE ITEMS

Brake Light and Cruise Control Switches

Inspect the clearance between the brake pedal and the switches.

Brake Calipers, Pads, Rotors

Check for wear, deterioration and fluid leaks. Replace any deteriorated or damaged parts immediately.

Exhaust System

Visually inspect the exhaust pipes, muffler and hangers for leaks, cracks, deterioration, and damage. Tighten connections or replace parts as necessary.

In-Cabin Microfilter

Replace at specified intervals. When driving for prolonged periods in dusty conditions, replace the filter more frequently.

Propeller Shaft(s)

Check for damage, looseness, and grease leakage (4WD/AWD/RWD).

Steering Gear and Linkage, Axle and Suspension Parts, Drive Shaft Boots

Check for damage, looseness, and leakage of oil or grease. Under severe driving conditions, inspect more frequently.

Tire Rotation

Tires should be rotated every 5,000 miles according to the instructions in the Owner's Manual (except Q60 Coupe Journey model with Sport Package, Q60 Coupe Sport 6MT, Q60 Coupe Journey models with Performance Tire & Wheel Package and all Q60 convertibles). When rotating tires, check for damage and uneven wear. Replace if necessary.

Transmission Fluid – Automatic or Manual, Differential Oil, Transfer Case Oil

Visually inspect for signs of leakage at specified intervals. If towing a trailer, using a camper or car-top carrier, or driving on rough or muddy roads, replace the transmission fluid/oil at every 20,000 miles or 24 months (60,000 miles for QX60 CVT fluid). 7-speed automatic transmission fluid is maintenance free.

OFF-ROAD MAINTENANCE (QX80 ONLY)

Check the following items more frequently after driving off-road through deep sand, mud or water:

- Brake pads and rotors
- Brake lines and hoses
- Differential oil, transmission fluid, and transfer case oil
- Steering linkage
- Propeller shafts and drive shafts
- Engine air filter
- In-cabin microfilter

MAINTENANCE SCHEDULES



The following Maintenance Schedule has been compiled by Infiniti to assist you in performing the recommended maintenance services and keeping appropriate records of services performed. Along with the related repair invoices, receipts, and other such records, a properly documented maintenance history could enhance the value of your vehicle should you ever wish to sell it. The services listed represent the minimal factory recommended requirements for each time/mileage interval, up to 120,000 miles / 144 months.

Beginning on page 43 you will find a maintenance log that should be used to track when and where services were performed. Ask your Service Consultant to stamp and update your log each time your vehicle is serviced.

COMPLIMENTARY MULTI-POINT INSPECTION*

For the ultimate in preventative maintenance, ask your Service Consultant for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer.

MPI's are performed by Infiniti factory trained Technicians who will provide you with a detailed report of your vehicles condition.

Driving your Infiniti should be as worry-free an experience as possible. Trust your Infiniti retailer to inspect and maintain your vehicle so you can take pride in knowing your vehicle is ready for the road ahead.

*Available at participating retailers

NOTE: Form shown is an example. Actual form may vary.



5,000 MILES OR 6 MONTHS

STANDARD MAINTENANCE Replace engine oil and filter Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions)

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

10,000 MILES OR 12 MONTHS

STANDARD MAINTENANCE	
Replace engine oil and filter Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions) Inspect the following: Automatic transmission fluid² Brake lines & cables Brake calipers, pads, rotors Brake light & cruise control switches³ CVT fluid Differential oil Drive shaft boots (4WD/AWD) Manual transmission oil Propeller shaft (4WD/AWD) Transfer case oil (4WD/AWD)	

Additional Maintenance Items for Severe Operating Conditions
Replace brake fluid Inspect the following: — Axle & suspension parts — Exhaust system — Front suspension ball joints — Steering gear and linkage — Steering linkage ball joints

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water.
2 Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.
3 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

15,000 MILES OR 18 MONTHS

STANDARD MAINTENANCE Replace engine oil and filter Replace in-cabin microfilter Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions)

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

20,000 MILES OR 24 MONTHS

STANDARD M	AINTENANCE
Replace engine oil and filter Replace brake fluid Lubricate Propeller shaft greas Rotate tires (refer to page 11 for Inspect the following: Automatic transmission fluid ^{2,3} Akle & suspension parts Brake lines & cables Brake calipers, pads, rotors Brake light & cruise control switches ⁴ CVT fluid Differential oil ² Drive shaft boots (4WD/AWD) Exhaust system	e (for QX80 4WD) ¹

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water.
2 Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.
3 Except models with 7-speed automatic transmission.

⁴ Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

25,000 MILES OR 30 MONTHS

STANDARD MAINTENANCE Replace engine oil and filter Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions)

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

30,000 MILES OR 36 MONTHS

STANDARD MAINTENANCE	T
Replace engine oil and filter Replace in-cabin microfilter Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions) Inspect the following: — Automatic transmission fluid² — Brake lines & cables — Brake calipers, pads, rotors — Brake light & cruise control switches³ — CVT fluid — Differential oil — Drive shaft boots (4WD/AWD) — Manual transmission oil — Propeller shaft (4WD/AWD/RWD) — Transfer case oil (4WD/AWD)	

Additional Maintenance Items for Severe Operating Conditions	
Replace brake fluid Inspect the following: — Axle & suspension parts — Exhaust system — Front suspension ball joints — Steering gear and linkage — Steering linkage ball joints	

- ☐ For Optional Premium Maintenance Upgrade information please see page 39.
- □ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.
- 1 The propeller shaft should be re-greased after being immersed in water.
 2 Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.
 3 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

35,000 MILES OR 42 MONTHS

STANDARD MAINTENANCE Replace engine oil and filter Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions)

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

40,000 MILES OR 48 MONTHS

STANDARD MAINTEN	ANCE
fluid ^{2,3} — Frr — Axle & suspension parts — joi — Brake lines & cables — Fu — Brake calipers, pads, ro- tors — te — Brake light & cruise con- trol switches ⁴ — Pr — CVT fluid — Av — Differential oil ² — St — Drive shaft boots (4WD/ AWD) — Engine drive belts — Tra	

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water.
2 Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.
3 Except models with 7-speed automatic transmission.

⁴ Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

45,000 MILES OR 54 MONTHS

Replace engine oil and filter Replace in-cabin microfilter Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions)

[☐] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

50,000 MILES OR 60 MONTHS

STANDARD MAINTENANCE	
Replace engine oil and filter Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions) Inspect the following: Automatic transmission fluid² Brake lines & cables Brake calipers, pads, rotors Brake light & cruise control switches³ CVT fluid Differential oil Drive shaft boots (4WD/AWD) Engine drive belts Manual transmission oil Propeller shaft (4WD/AWD/RWD) Transfer case oil (4WD/AWD)	

 □ Replace brake fluid □ Inspect the following: — Axle & suspension parts — Exhaust system — Front suspension ball joints — Steering gear and linkage — Steering linkage ball joints 	

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water.
2 Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.
3 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

55,000 MILES OR 66 MONTHS

STANDARD MAINTENANCE Replace engine oil and filter Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions)

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

60,000 MILES OR 72 MONTHS

[☐] For Optional Premium Maintenance Upgrade information please see page 39.

[☐] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water.
2 Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.
3 Except models with 7-speed automatic transmission.

⁴ Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

65,000 MILES OR 78 MONTHS

Replace engine oil and filter Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions)

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

70,000 MILES OR 84 MONTHS

Replace engine oil and filter Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions) Inspect the following: — Automatic transmission fluid ² — Axle & suspension parts — Brake lines & cables — Brake calipers, pads, rotors — Brake light & cruise control switches³ — CVT fluid — Differential oil — Drive shaft boots (4WD/AWD) — Engine drive belts — Manual transmission oil — Propeller shaft (4WD/AWD) — Transfer case oil (4WD/AWD)	STANDARD MAINTENANCE
	□ Lubricate Propeller shaft grease (for QX80 4WD)¹ □ Rotate tires (refer to page 11 for exceptions) □ Inspect the following: □ Automatic transmission fluid ² □ Axle & suspension parts □ Brake lines & cables □ Brake calipers, pads, rotors □ Brake light & cruise control switches³ □ CVT fluid □ Differential oil □ Drive shaft boots (4WD/AWD) □ Engine drive belts □ Manual transmission oil □ Propeller shaft (4WD/AWD/RWD)

Additional Maintenance Items for Severe Operating Conditions
Replace brake fluid Inspect the following: — Axle & suspension parts — Exhaust system — Front suspension ball joints — Steering gear and linkage — Steering linkage ball joints

NOTE: Refer to Page 9 for Engine Coolant maintenance information.

- □ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.
- 1 The propeller shaft should be re-greased after being immersed in water.
 2 Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.
 3 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

75,000 MILES OR 90 MONTHS

Replace engine oil and filter Replace in-cabin microfilter Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions)

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

80,000 MILES OR 96 MONTHS

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water.
2 Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.
3 Except models with 7-speed automatic transmission.

⁴ Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

85,000 MILES OR 102 MONTHS

Replace engine oil and filter Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions)

[☐] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

90,000 MILES OR 108 MONTHS

Additional Maintenance Items for Severe Operating Conditions	
Replace brake fluid Inspect the following: — Axle & suspension parts — Exhaust system — Front suspension ball joints — Steering gear and linkage — Steering linkage ball joints	

NOTE: Refer to Page 9 for Engine Coolant maintenance information.

- ☐ For Optional Premium Maintenance Upgrade information please see page 39.
- □ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.
- 1 The propeller shaft should be re-greased after being immersed in water.
 2 Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.
 3 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

95,000 MILES OR 114 MONTHS

Replace engine oil and filter Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions)

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

100,000 MILES OR 120 MONTHS

STANDARD MAINTENANCE				
Replace engine oil and filter Replace brake fluid Lubricate Propeller shaft greas Rotate tires (refer to page 11 for Inspect the following: Automatic transmission fluid ^{2,3} Axle & suspension parts Brake lines & cables Brake calipers, pads, rotors Brake light & cruise control switches ⁴ CVT fluid Differential oil ² Drive shaft boots (4WD/AWD) Engine drive belts				

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water.
2 Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads.
3 Except models with 7-speed automatic transmission.

⁴ Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

105,000 MILES OR 126 MONTHS

Replace engine oil and filter Replace in-cabin microfilter Replace spark plugs (except Q60 IPL) Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions)

Additional Maintenance Items for Severe Operating Conditions Inspect the following: — Axle & suspension parts — Brake calipers, pads, rotors — Drive shaft boots (4WD/AWD) — Exhaust system — Front suspension ball joints — Propeller shaft (4WD/AWD/RWD) — Steering gear and linkage — Steering linkage ball joints

NOTE: Refer to Page 9 for Engine Coolant maintenance information.

□ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

1 The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

110,000 MILES OR 132 MONTHS

STANDARD MAINTENANCE
Replace engine oil and filter Lubricate Propeller shaft grease (for QX80 4WD) ¹ Rotate tires (refer to page 11 for exceptions) Inspect the following: — Automatic transmission fluid ² — Brake lines & cables — Brake calipers, pads, rotors — Brake light & cruise control switches ³ — CVT fluid — Differential oil — Drive shaft boots (4WD/AWD) — Engine drive belts — Manual transmission oil — Propeller shaft (4WD/AWD/RWD) — Transfer case oil (4WD/AWD)

 □ Replace brake fluid □ Inspect the following: — Axle & suspension parts — Exhaust system — Front suspension ball joints — Steering gear and linkage 	Additional Maintenance Items for Severe Operating Conditions	
— Steering linkage ball joints	 Inspect the following: — Axle & suspension parts — Exhaust system — Front suspension ball joints 	

Equipment varies by model. Perform only those operations that apply to your vehicle.

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water.
2 Except models with 7-speed automatic transmission. Equipment varies by model. Perform only those operations that apply to your vehicle.
3 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

115,000 MILES OR 138 MONTHS

STANDARD MAINTENANCE Replace engine oil and filter Lubricate Propeller shaft grease (for QX80 4WD)¹ Rotate tires (refer to page 11 for exceptions)

Additional Maintenance Items for Severe Operating Conditions Inspect the following: Axle & suspension parts Brake calipers, pads, rotors Drive shaft boots (4WD/AWD) Exhaust system Front suspension ball joints Propeller shaft (4WD/AWD/RWD) Steering gear and linkage Steering linkage ball joints

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ The propeller shaft should be re-greased after being immersed in water. Equipment varies by model. Perform only those operations that apply to your vehicle.

120,000 MILES OR 144 MONTHS

STANDARD M	AINTENANCE
Replace engine oil and filter Replace engine air filter Replace brake fluid Replace in-cabin microfilter Replace spark plugs (only Q60 Lubricate Propeller shaft greas Rotate tires (refer to page 11 for Inspect the following: Automatic transmission fluid ^{2,3} Axle & suspension parts Brake lines & cables Brake calipers, pads, rotors Brake light & cruise control switches ⁴ CVT fluid ² Differential oil ² Differential oil ² Drive shaft boots (4WD/AWD) Engine drive belts Exhaust system	e (for QX80 4WD) ¹

NOTE: Refer to Page 10 for Hybrid Electronic Vehicle (HEV) Inverter Coolant maintenance information.

- ☐ For Optional Premium Maintenance Upgrade information please see page 39.
- ☐ For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.
- 1 The propeller shaft should be re-greased after being immersed in water.
- 2 Replace (not just inspect) oil/fluid if towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads. 3 Except models with 7-speed automatic transmission.
- 4 Inspect the clearance between the brake pedal and the switches (Q50, Q60 Coupe and Q60 Convertible).

Equipment varies by model. Perform only those operations that apply to your vehicle.

Optional Premium Maintenance Upgrade

30,000 MILES OR 36 MONTHS	
Premium Upgrade adds the following services to Standard Maintenance: Lubricate all locks/hinges Replace automatic transmission fluid¹ Replace differential oil Replace engine drive belts Replace manual transmission oil Replace radiator cap Replace transfer case oil (4WD/AWD) Replace wiper blades Inspect the following: — All lights — Headlights/adjust if necessary	

60,000 MILES OR 72 MONTHS
Premium Upgrade adds the following services to Standard Maintenance: Lubricate all locks/hinges Replace automatic transmission fluid 1 Replace differential oil Replace engine drive belts Replace manual transmission oil Replace radiator cap Replace transfer case oil (4WD/AWD) Replace wiper blades Inspect the following: All lights Headlights/adjust if necessary

[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ Except models with 7-speed automatic transmission.

Optional Premium Maintenance Upgrade)

90,000 MILES OR 108 MONTHS
Premium Upgrade adds the following services to Standard Maintenance: Lubricate all locks/hinges Replace automatic transmission fluid¹ Replace differential oil Replace engine drive belts Replace manual transmission oil Replace radiator cap Replace transfer case oil (4WD/AWD) Replace wiper blades Inspect the following: — All lights — Headlights/adjust if necessary


Premium Upgrade adds the following services to Standard Maintenance: Lubricate all locks/hinges Replace automatic transmission fluid 1 Replace differential oil Replace engine drive belts Replace manual transmission oil Replace radiator cap Replace transfer case oil (4WD/AWD)	120,000 MILES OR 144 MONTHS
Replace wiper blades Inspect the following: — All lights — Headlights/adjust if necessary	Maintenance: Lubricate all locks/hinges Replace automatic transmission fluid Replace differential oil Replace engine drive belts Replace manual transmission oil Replace radiator cap Replace transfer case oil (4WD/AWD) Replace wiper blades Inspect the following: All lights


[□] For the ultimate in preventative maintenance, ask your Service Advisor for a complimentary Multi-Point Inspection every time you visit your participating Infiniti retailer. See page 14 for more information on Multi-Point Inspections.

¹ Except models with 7-speed automatic transmission.


HEV Li-ion BATTERY REPLACEMENT RECORD


When replacing the Li-ion battery pack or module, be sure to record the ID in the space provided. In addition, when replacing 12 modules, record the oldest module ID.

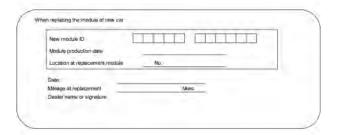

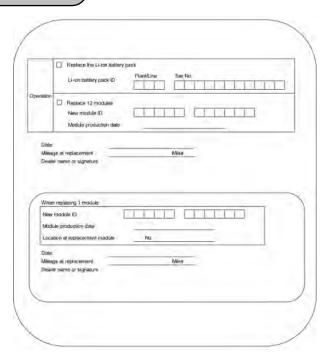

HEV Li-ion BATTERY REPLACEMENT RECORD

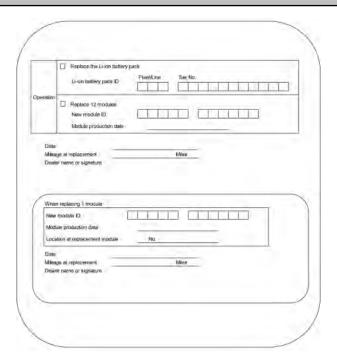

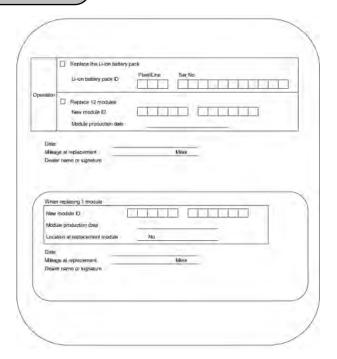

MAINTENANCE LOG

5,000 Miles or 6 Months Dealer Name: Date: Mileage: Dealer Stamp:	10,000 Miles or 12 Months Dealer Name: Date: Mileage: Dealer Stamp:	15,000 Miles or 18 Months Dealer Name: Date: Mileage: Dealer Stamp:
20,000 Miles or 24 Months Dealer Name: Date: Mileage: Dealer Stamp:	25,000 Miles or 30 Months Dealer Name: Date: Mileage: Dealer Stamp:	30,000 Miles or 36 Months Dealer Name: Date: Mileage: Dealer Stamp:
35,000 Miles or 42 Months Dealer Name: Date: Mileage: Dealer Stamp:	40,000 Miles or 48 Months Dealer Name: Date: Mileage: Dealer Stamp:	45,000 Miles or 54 Months Dealer Name: Date: Mileage: Dealer Stamp:

MAINTENANCE LOG

50,000 Miles or 60 Months Dealer Name: Date: Mileage: Dealer Stamp:	55,000 Miles or 66 Months Dealer Name: Date: Mileage: Dealer Stamp:	60,000 Miles or 72 Months Dealer Name: Date: Mileage: Dealer Stamp:
65,000 Miles or 78 Months Dealer Name: Date: Mileage: Dealer Stamp:	70,000 Miles or 84 Months Dealer Name: Date: Mileage: Dealer Stamp:	75,000 Miles or 90 Months Dealer Name: Date: Mileage: Dealer Stamp:
80,000 Miles or 96 Months Dealer Name: Date: Mileage: Dealer Stamp:	85,000 Miles or 102 Months Dealer Name: Date: Mileage: Dealer Stamp:	90,000 Miles or 108 Months Dealer Name: Date: Mileage: Dealer Stamp:

MAINTENANCE LOG)

95,000 Miles or 114 Months Dealer Name: Date: Mileage: Dealer Stamp:	100,000 Miles or 120 Months Dealer Name: Date: Mileage: Dealer Stamp:	105,000 Miles or 126 Months Dealer Name: Date: Mileage: Dealer Stamp:
110,000 Miles or 132 Months Dealer Name: Date: Mileage: Dealer Stamp:	115,000 Miles or 138 Months Dealer Name: Date: Mileage: Dealer Stamp:	120,000 Miles or 144 Months Dealer Name: Date: Mileage: Dealer Stamp:

MEMO

MEMO

VEHICLE IDENTIFICATION

Vehicle Identification Number (VIN)	
Delivery Date	Warranty Start Date
Mileage at Delivery	Model Year
Selling Dealer	Selling Dealer Phone



