

# STR

SECTION STR  
STARTING SYSTEM

## CONTENTS

<b>PRECAUTION</b>	2	<b>COMPONENT DIAGNOSIS</b>	10
<b>PRECAUTIONS</b>	2	<b>B TERMINAL CIRCUIT</b>	10
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	Description	10
Precaution Necessary for Steering Wheel Rotation After Battery Disconnect	2	Diagnosis Procedure	10
Precaution for Power Generation Variable Voltage Control System	3	<b>S CONNECTOR CIRCUIT</b>	11
<b>PREPARATION</b>	4	Description	11
<b>PREPARATION</b>	4	Diagnosis Procedure	11
Special Service Tool	4	<b>STARTING SYSTEM</b>	12
Commercial Service Tool	4	Wiring Diagram	12
<b>BASIC INSPECTION</b>	5	<b>SYMPTOM DIAGNOSIS</b>	17
<b>DIAGNOSIS AND REPAIR WORKFLOW</b>	5	<b>STARTING SYSTEM</b>	17
Work Flow	5	Symptom Table	17
<b>FUNCTION DIAGNOSIS</b>	8	<b>ON-VEHICLE REPAIR</b>	18
<b>STARTING SYSTEM</b>	8	<b>STARTER MOTOR</b>	18
System Diagram	8	Removal and Installation	18
System Description	8	<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b>	19
Component Parts Location	8	<b>STARTER MOTOR</b>	19
Component Description	9	Starter	19

## PRECAUTIONS

< PRECAUTION >

# PRECAUTION

## PRECAUTIONS

### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000005856238

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

### Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:0000000005856245

#### **NOTE:**

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

#### OPERATION PROCEDURE

1. Connect both battery cables.

##### **NOTE:**

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

## PRECAUTIONS

### < PRECAUTION >

5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT-III.

### Precaution for Power Generation Variable Voltage Control System

INFOID:000000003771784

STR

A

C

D

E

F

G

H

I

J

K

L

M

N

O

P

## PREPARATION

< PREPARATION >


# PREPARATION

## PREPARATION

### Special Service Tool


INFOID:000000003771785

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

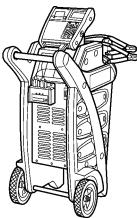Tool number (Kent Moore No.) Tool name	Description
— (—) Model GR-8 Multitasking Battery Diagnostic Station	 Tests Batteries, starting and charging system. For operating instructions, refer to diagnostic station instruction manual. AWIIA1239ZZ

### Commercial Service Tool

INFOID:000000003771786

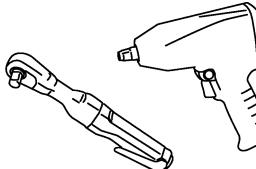Tool name	Description
Power tool	 Loosening bolts and nuts PBIC0190E

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

## BASIC INSPECTION


### DIAGNOSIS AND REPAIR WORKFLOW

#### Work Flow

INFOID:000000003771787

STR

#### OVERALL SEQUENCE

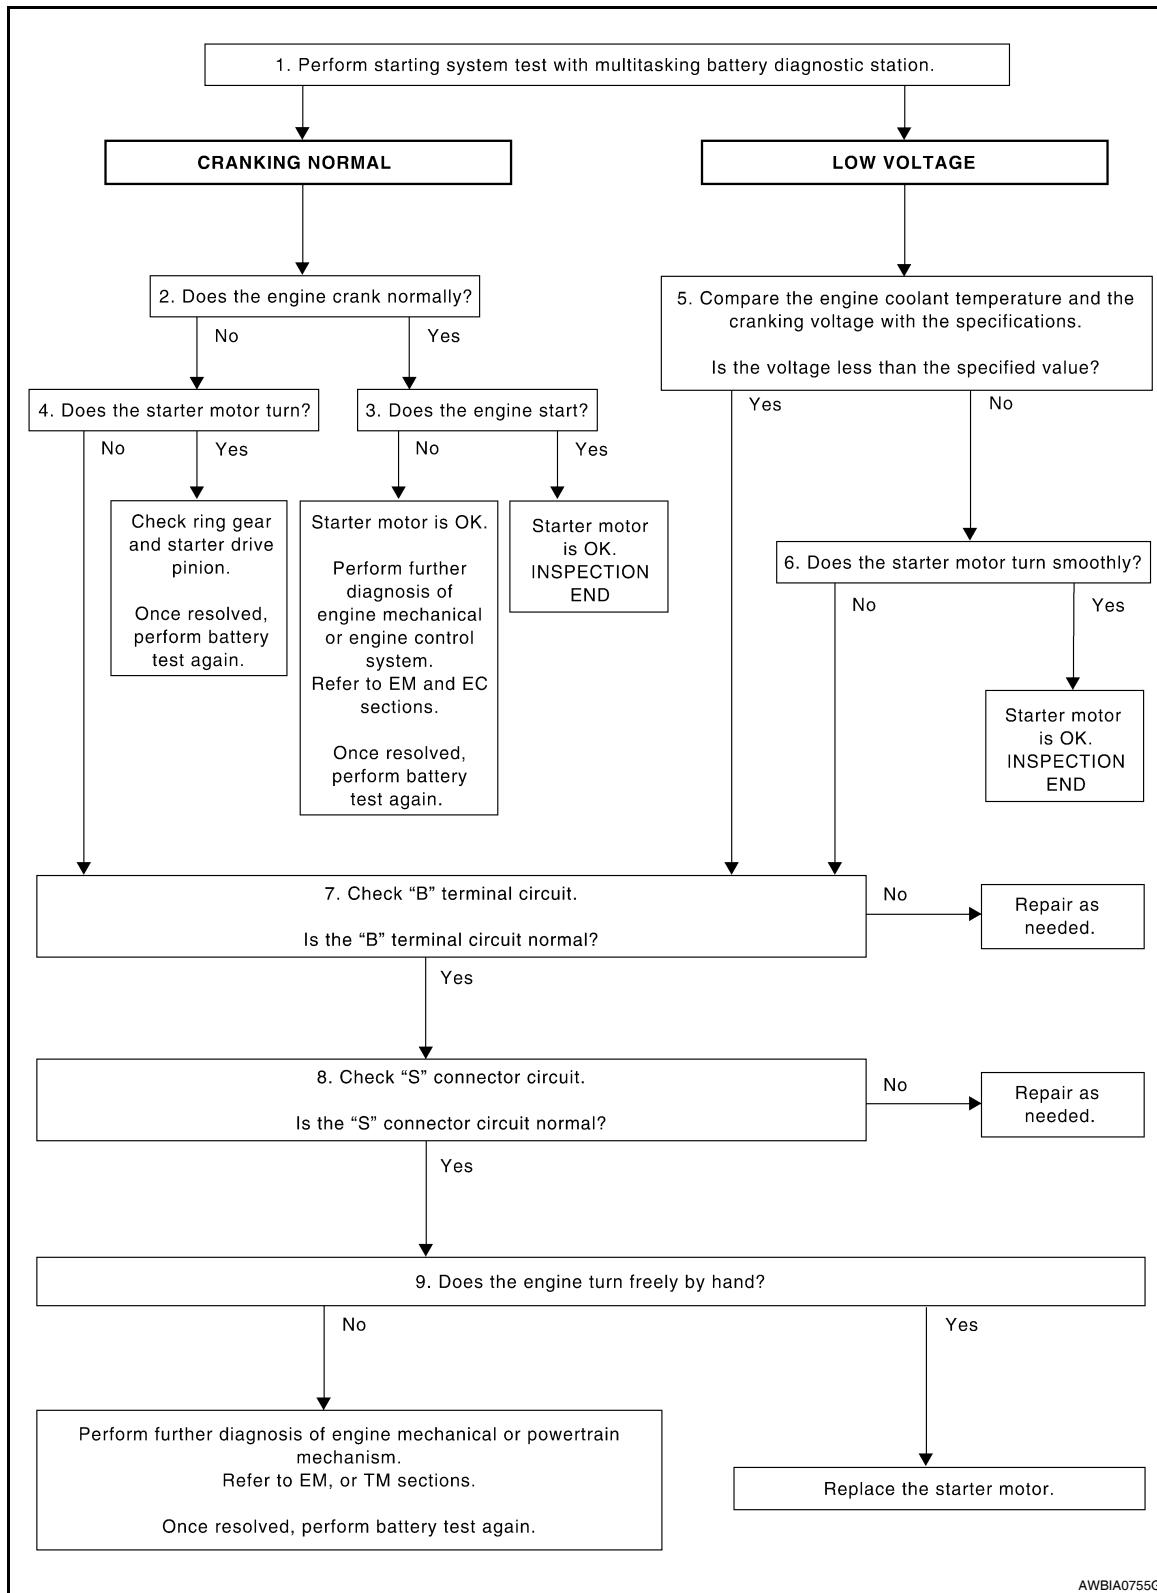

#### DETAILED FLOW

# DIAGNOSIS AND REPAIR WORKFLOW

## < BASIC INSPECTION >

### NOTE:

To ensure a complete and thorough diagnosis, the battery, starter motor and generator test segments must be done as a set from start to finish.

## 1. DIAGNOSIS WITH MULTITASKING BATTERY DIAGNOSTIC STATION

Perform the starting system test with multitasking battery diagnostic station. For details and operating instructions, refer to diagnostic station instruction manual.

### Test result

CRANKING NORMAL>>GO TO 2.

LOW VOLTAGE>>GO TO 5.

CHARGE BATTERY>>Perform the slow battery charging procedure. (Initial rate of charge is 10A for 12 hours.) Perform battery test again. Refer to diagnostic station instruction manual.

REPLACE BATTERY>>Before replacing battery, clean the battery cable clamps and battery posts. Perform battery test again. Refer to diagnostic station instruction manual. If second test result is "REPLACE BATTERY", then do so. Perform battery test again to confirm repair.

## 2. CRANKING CHECK

Check that the starter motor operates properly.

### Does the engine crank normally?

YES >> GO TO 3.

NO >> GO TO 4.

## 3. ENGINE START CHECK

Check that the engine starts.

### Does the engine start?

YES >> Starter motor is OK. Inspection End.

NO >> Perform further diagnosis of engine mechanical or engine control system. Refer to EM and EC sections. Once resolved, perform battery test again.

## 4. STARTER MOTOR ACTIVATION

Check that the starter motor operates.

### Does the starter motor turn?

YES >> Check ring gear and starter motor drive pinion. Once resolved, perform battery test again.

NO >> GO TO 7.

## 5. COMPARISON BETWEEN ENGINE COOLANT AND CRANKING VOLTAGE

Compare the engine coolant temperature and verify the cranking voltage is within specification.

### Minimum Specification of Cranking Voltage Referencing Coolant Temperature

Engine coolant temperature [°C (°F)]	Voltage [V]
-30 to -20 (-22 to -4)	8.6
-19 to -10 (-2 to 14)	9.1
-9 to 0 (16 to 32)	9.5
More than 1 (More than 34)	9.9

### Is the voltage less than the specified value?

YES >> GO TO 7.

NO >> GO TO 6.

## 6. STARTER OPERATION

Check the starter operation.

### Does the starter motor turn smoothly?

YES >> Starter motor is OK. Inspection End.

NO >> GO TO 7.

## 7. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [STR-10, "Diagnosis Procedure"](#).

### Is "B" terminal circuit normal?

# DIAGNOSIS AND REPAIR WORKFLOW

## < BASIC INSPECTION >

YES >> GO TO 8.

NO >> Repair as needed.

A

## 8.“S” CONNECTOR CIRCUIT INSPECTION

Check “S” connector circuit. Refer to [STR-11, "Diagnosis Procedure"](#).

STR

Is “S” connector circuit normal?

C

YES >> GO TO 9.

NO >> Repair as needed.

D

## 9.ENGINE ROTATION STATUS

Check that the engine can be rotated by hand.

F

Does the engine turn freely by hand?

G

YES >> Replace starter motor.

H

NO >> Perform further diagnosis of engine mechanical or powertrain mechanism. Refer to EM or TM sections. Once resolved, perform battery test again. Refer to diagnostic station instruction manual.

I

J

K

L

M

N

O

P

# STARTING SYSTEM


< FUNCTION DIAGNOSIS >

## FUNCTION DIAGNOSIS

### STARTING SYSTEM

#### System Diagram

INFOID:000000003771788

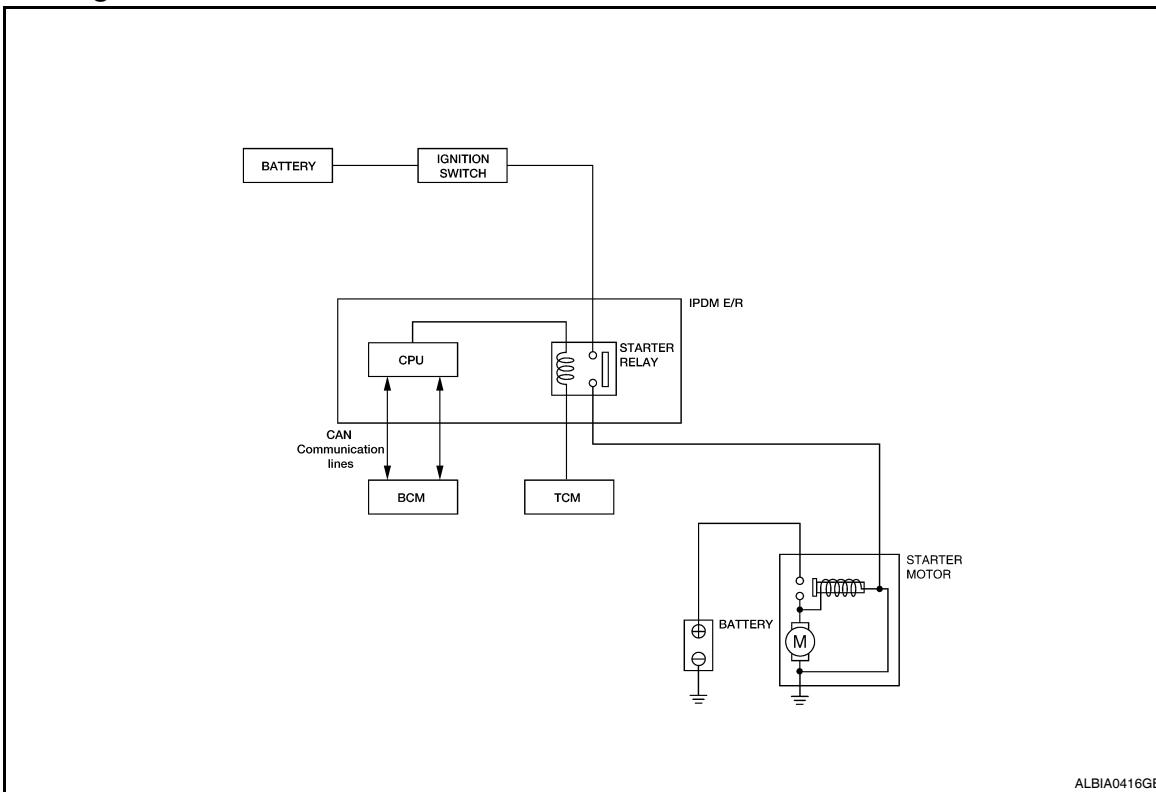

ALBIA0416GB


#### System Description

INFOID:000000003771789

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

#### Component Parts Location

INFOID:000000003771790

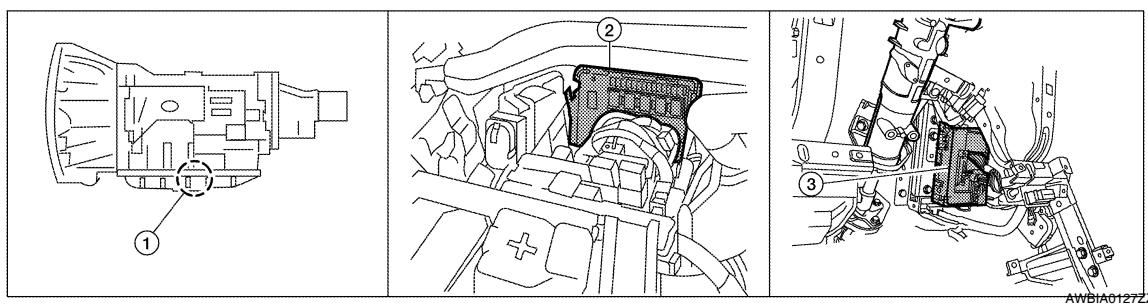

1. A/T assembly F9 (with built in TCM F502)
2. IPDM E/R E119, E120, E122, E124
3. BCM M18 (view with instrument panel lower LH panel removed)

# STARTING SYSTEM

< FUNCTION DIAGNOSIS >

## Component Description

INFOID:000000003771791

A

Component part	Description
TCM	TCM supplies power to the starter relay inside the IPDM E/R when the selector lever is shifted to the P or N position.
BCM	BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.
IPDM E/R	CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

## B TERMINAL CIRCUIT

< COMPONENT DIAGNOSIS >

# COMPONENT DIAGNOSIS

## B TERMINAL CIRCUIT

### Description

INFOID:000000003771792

Terminal "2" (B) is constantly supplied with battery power.

### Diagnosis Procedure

INFOID:000000003771793

#### CAUTION:

Perform diagnosis under the condition that the engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is depleted.


### 1. CHECK TERMINAL 2 POWER SUPPLY VOLTAGE

1. Turn ignition switch OFF.
2. Make sure that starter motor connector F27 terminal 2 connection is clean and tight.
3. Check voltage between starter motor connector F27 terminal 2 and ground.

(+)		(-)	Condition	Voltage
Connector	Terminal			
F27	2	Ground	While cranking the engine	Battery voltage

Is there battery voltage present?

- YES >> GO TO 2  
NO >> Check harness between battery and starter motor for open circuit.

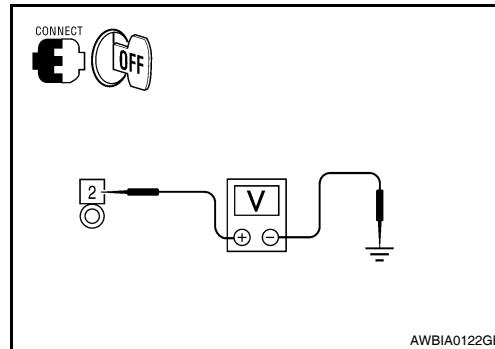

AWBIA0122GE


### 2. CHECK BATTERY CABLE (VOLTAGE DROP TEST)

1. Shift the transmission into park or neutral.
2. Check voltage between battery positive terminal and starter motor connector F27 terminal 2 while cranking the engine.

(+)		(-)	Condition	Voltage
Connector	Terminal			
F27	2	Battery (+) terminal	While cranking the engine	Less than 0.2V

Is the voltage drop less than 0.2V?

- YES >> GO TO 3  
NO >> Check harness between the battery and the starter motor for high resistance.

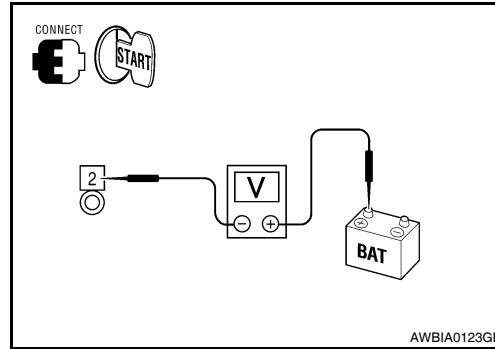

AWBIA0123GE


### 3. CHECK GROUND CIRCUIT STATUS (VOLTAGE DROP TEST)

Check voltage between starter motor case and battery negative terminal while cranking the engine.

(+)	(-)	Condition	Voltage
Starter motor case	Battery (-) terminal	While cranking the engine	Less than 0.2V

Is the voltage drop less than 0.2V?

- YES >> Terminal 2 circuit is OK. Further inspection necessary. Refer to [STR-5, "Work Flow"](#).  
NO >> Check the starter motor case to engine mounting for high resistance.

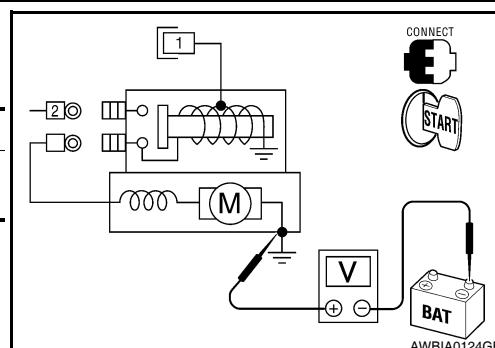

AWBIA0124GE

# S CONNECTOR CIRCUIT

< COMPONENT DIAGNOSIS >

## S CONNECTOR CIRCUIT

### Description

INFOID:000000003771794

Terminal "1" (S) is the power supply for the starter motor magnetic switch. Terminal 1 is supplied with power when the ignition switch is turned to the START position while the selector lever is in the P or N position.

STR

### Diagnosis Procedure

INFOID:000000003771795

#### **CAUTION:**


Perform diagnosis under the condition that engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

#### 1.CHECK STARTER MOTOR MAGNETIC SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter motor connector F28.
3. Shift transmission into park or neutral.
4. Check voltage between starter motor harness connector F28 terminal 1 and ground with the ignition switch in START.

(+) Connector		(-) Terminal	Condition	Voltage
F28	1	Ground	Ignition switch in START	Battery voltage

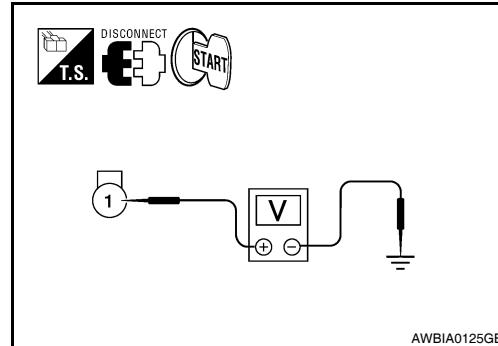

Is battery voltage present?

YES >> Magnetic switch circuit is OK. Further inspection necessary. Refer to [STR-5, "Work Flow"](#).

NO >> GO TO 2

#### 2.CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Check the IPDM E/R harness connector E120 and starter motor harness connector F28 for damage, bent pins and loose connections.

Is the inspection result normal?


YES >> GO TO 3

NO >> Repair the terminal and connector.

#### 3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect IPDM E/R connector E120 and starter motor connector F28.
2. Check continuity between starter motor harness connector F28 (A) terminal 1 and IPDM E/R harness connector E120 (B) terminal 19.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
F28	1	E120	19	Yes

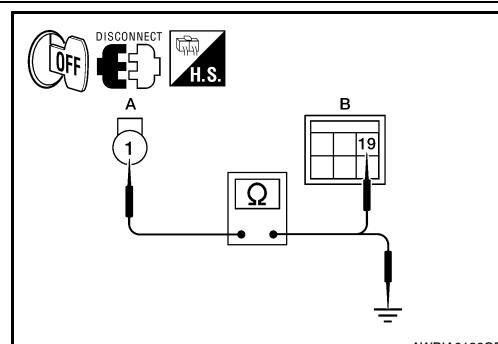

3. Check continuity between starter motor harness connector F28 (A) terminal 1 and ground.

A		—	Continuity
Connector	Terminal		
F28	1	Ground	No

Are the continuity test results as specified?

YES >> Further inspection necessary. Refer to [STR-5, "Work Flow"](#).

NO >> Repair the harness.

# STARTING SYSTEM

< COMPONENT DIAGNOSIS >


## STARTING SYSTEM

### Wiring Diagram

INFOID:0000000003771796

■ : DATA LINE

### STARTING SYSTEM

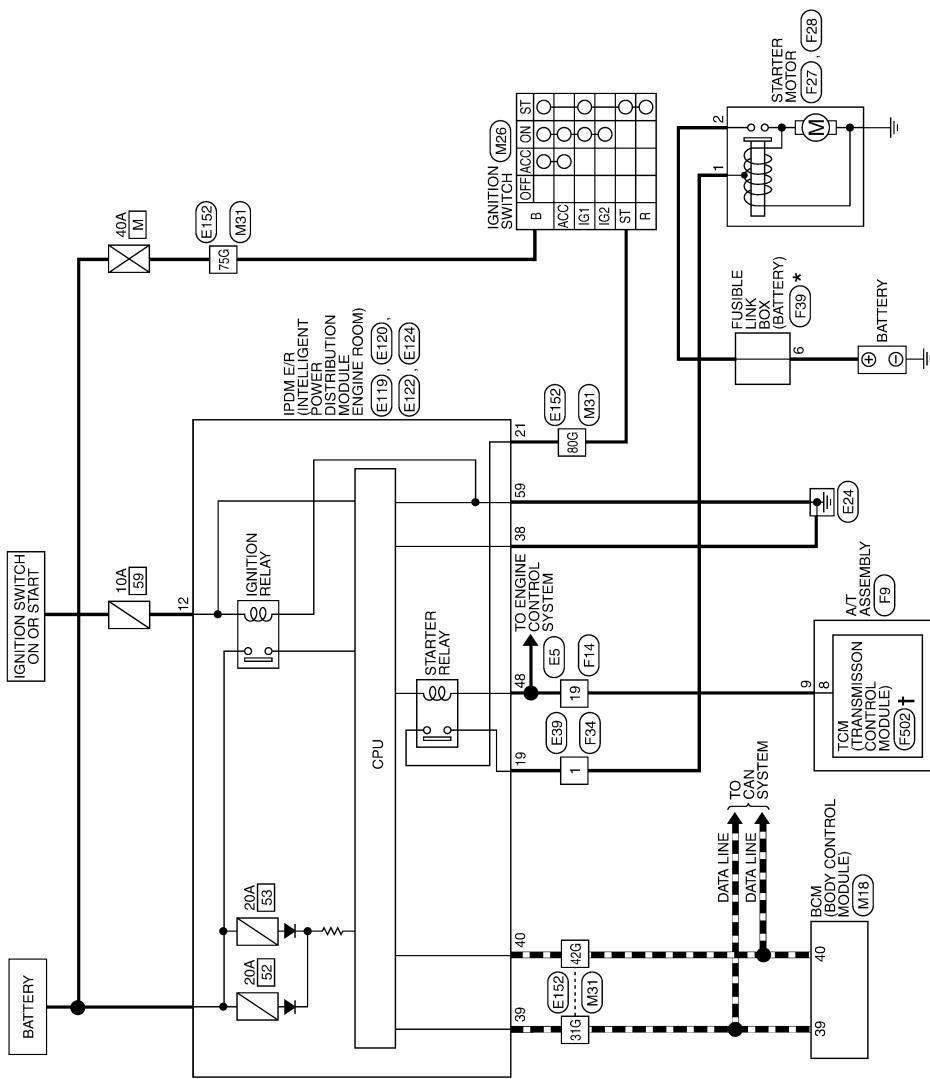

\* : THIS CONNECTOR IS AN INTEGRAL PART OF THE FUSEABLE LINK BOX (BATTERY).

† : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.


ABBWA0004GE

# STARTING SYSTEM

< COMPONENT DIAGNOSIS >

## STARTING SYSTEM CONNECTORS

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

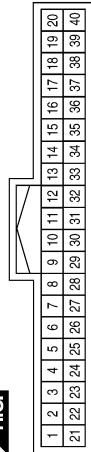


Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name	Color of Wire	Signal Name
39	L	CAN-H	B	G
40	P	CAN-L	S-T	BR

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE

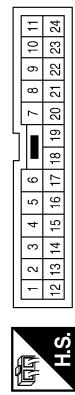


Terminal No.	Color of Wire	Signal Name
31G	L	-
42G	P	-
75G	G	-
80G	BR	-

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE

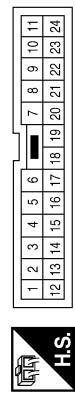

Terminal No.	Color of Wire	Signal Name
19	B/R	-

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE

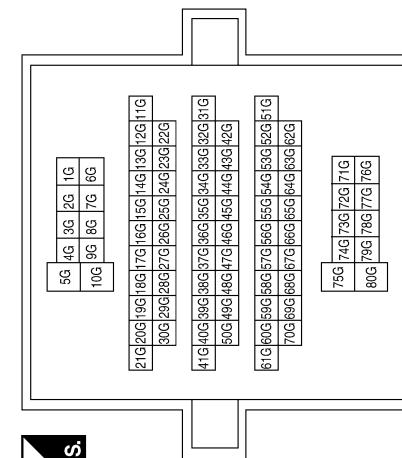

AABIA0056GB

A

STR

C

D

F

G

H

I

K

M

Z


O

P


# STARTING SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	E39
Connector Name	WIRE TO WIRE
Connector Color	WHITE

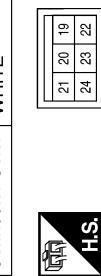


Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

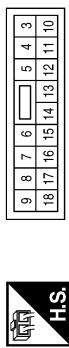


Terminal No.	Color of Wire	Signal Name
12	L/W	IGN SW(G)

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

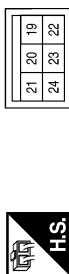

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

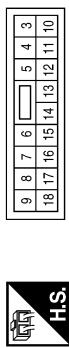


Terminal No.	Color of Wire	Signal Name
1	W/R	-

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

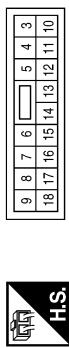

Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CANH
40	P	CANL
48	B/R	INHIBIT SW

# STARTING SYSTEM


< COMPONENT DIAGNOSIS >

Connector No.	E152	Connector No.	F9
Connector Name	WIRE TO WIRE	Connector Name	A/T ASSEMBLY
Connector Color	WHITE	Connector Color	GREEN



Terminal No.	Color of Wire	Signal Name
31G	L	-
42G	P	-
75G	G	-
80G	BR	-

Terminal No.	Color of Wire	Signal Name
9	B/R	-

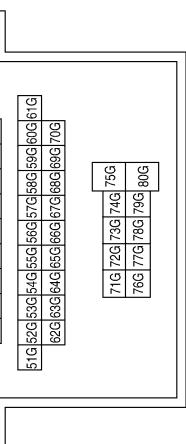

Connector No.	F14	Connector No.	F27
Connector Name	WIRE TO WIRE	Connector Name	STARTER MOTOR
Connector Color	WHITE	Connector Color	-



Terminal No.	Color of Wire	Signal Name
9	B/R	-



Terminal No.	Color of Wire	Signal Name
1	W/R	-



Terminal No.	Color of Wire	Signal Name
2	B/R	-



Terminal No.	Color of Wire	Signal Name
1	W/R	-



STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

Q

R

S

T

U

V

W

X

Y


Z

# STARTING SYSTEM

< COMPONENT DIAGNOSIS >

---

Connector No.	F34
Connector Name	WIRE TO WIRE
Connector Color	WHITE

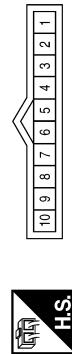

Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY



Terminal No.	10	9	8	7	6	5	4	3	2	1
--------------	----	---	---	---	---	---	---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	W/R	-

Hazardous

## STARTING SYSTEM

< SYMPTOM DIAGNOSIS >

# SYMPTOM DIAGNOSIS

## STARTING SYSTEM

### Symptom Table

INFOID:000000003771797

STR

Symptom	Reference
No normal cranking	
Starter motor does not rotate	Refer to <a href="#">STR-5, "Work Flow".</a>

C

D

E

F

G

H

I

J

K

L

M

N

O

P

< ON-VEHICLE REPAIR >

## ON-VEHICLE REPAIR


### STARTER MOTOR

#### Removal and Installation

INFOID:0000000003771798

##### REMOVAL

1. Remove the intake manifold. Refer to [EM-26, "Removal and Installation"](#).
2. Remove/disconnect the starter harness connectors.
3. Remove the two starter bolts, using power tools.
4. Remove the starter.

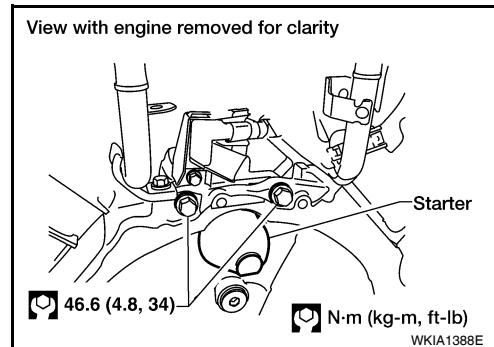

##### INSTALLATION

Installation is in the reverse order of removal.

##### CAUTION:

Tighten terminal nut carefully.

Terminal nut : 10.8 N·m (1.1 kg·m, 8 ft·lb)

## STARTER MOTOR

< SERVICE DATA AND SPECIFICATIONS (SDS)

# SERVICE DATA AND SPECIFICATIONS (SDS)

## STARTER MOTOR

### Starter

INFOID:000000003771799

STR

Application	All models
Manufacturer	Mitsubishi
Model number	M002T85571ZCKD
Type	Reduction gear type
System voltage	12V
No-load	Terminal voltage
	Current
	Revolution
Minimum diameter of commutator	31.4 mm (1.236 in)
Minimum length of brush	11.0 mm (0.433 in)
Brush spring tension	26.7-36.1 N (2.72 - 3.68 kg, 5.93 - 8.02 lb)
Clearance between pinion front edge and pinion stopper	0.5 - 2.0 mm (0.020 - 0.079 in)