

SECTION **ATC**

AUTOMATIC AIR CONDITIONER

A
B
C
D
E
F
G
H
I
J
K
L
M

CONTENTS

<p>PRECAUTIONS 5</p> <p> Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 5</p> <p> Precautions for Working with HFC-134a (R-134a).... 5</p> <p> Contaminated Refrigerant 5</p> <p> General Refrigerant Precautions 6</p> <p> Precautions for Leak Detection Dye 6</p> <p> A/C Identification Label 7</p> <p> Precautions for Refrigerant Connection 7</p> <p> FEATURES OF NEW TYPE REFRIGERANT CONNECTION 7</p> <p> O-RING AND REFRIGERANT CONNECTION..... 8</p> <p> Precautions for Servicing Compressor 11</p> <p> Precautions for Service Equipment 11</p> <p> RECOVERY/RECYCLING EQUIPMENT 11</p> <p> ELECTRONIC LEAK DETECTOR 11</p> <p> VACUUM PUMP 12</p> <p> MANIFOLD GAUGE SET 12</p> <p> SERVICE HOSES 12</p> <p> SERVICE COUPLERS 13</p> <p> REFRIGERANT WEIGHT SCALE 13</p> <p> CHARGING CYLINDER 13</p> <p> Wiring Diagrams and Trouble Diagnosis 13</p> <p>PREPARATION 14</p> <p> Special Service Tools 14</p> <p> HFC-134a (R-134a) Service Tools and Equipment. 14</p> <p> Commercial Service Tools 17</p> <p>REFRIGERATION SYSTEM 18</p> <p> Refrigerant Cycle 18</p> <p> REFRIGERANT FLOW 18</p> <p> Refrigerant System Protection 18</p> <p> REFRIGERANT PRESSURE SENSOR 18</p> <p> PRESSURE RELIEF VALVE 19</p> <p> Component Layout 20</p> <p> FRONT REFRIGERATION SYSTEM 20</p> <p> REAR REFRIGERATION SYSTEM 21</p>	<p>LUBRICANT 22</p> <p> Maintenance of Lubricant Quantity in Compressor.. 22</p> <p> LUBRICANT 22</p> <p> CHECKING AND ADJUSTING 22</p> <p>AIR CONDITIONER CONTROL 24</p> <p> Description 24</p> <p> Operation 24</p> <p> AIR MIX DOORS CONTROL 24</p> <p> FAN SPEED CONTROL 24</p> <p> INTAKE DOOR CONTROL 24</p> <p> MODE DOOR CONTROL 24</p> <p> DEFROSTER DOOR CONTROL 24</p> <p> MAGNET CLUTCH CONTROL 25</p> <p> SELF-DIAGNOSTIC SYSTEM 25</p> <p> Description of Control System 26</p> <p> Control Operation 26</p> <p> DISPLAY SCREEN 27</p> <p> AUTO SWITCH 27</p> <p> TEMPERATURE DIAL (DRIVER) 27</p> <p> TEMPERATURE DIAL (PASSENGER) 27</p> <p> RECIRCULATION SWITCH () 27</p> <p> DEFROSTER () SWITCH 27</p> <p> REAR WINDOW DEFOGGER SWITCH 27</p> <p> OFF SWITCH (HOLD FAN DOWN SWITCH UNTIL SYSTEM SHUTS OFF) 27</p> <p> A/C SWITCH 27</p> <p> MODE SWITCH 27</p> <p> FRONT FAN SWITCH 27</p> <p> REAR FAN SWITCH (FRONT) 27</p> <p> REAR TEMPERATURE/MODE DIAL (FRONT)... 27</p> <p> REAR TEMPERATURE/MODE DIAL (REAR) ... 28</p> <p> REAR FAN CONTROL SWITCH (REAR) 28</p> <p> Discharge Air Flow 29</p> <p> FRONT 29</p> <p> REAR 29</p> <p> System Description (Front) 30</p> <p> CONTROLS AND THEIR FUNCTIONS 30</p> <p> System Description (Rear) 31</p> <p> CONTROLS AND THEIR FUNCTIONS 31</p> <p> CAN Communication System Description 32</p>
--	--

ATC

TROUBLE DIAGNOSIS	33	DOOR MOTOR	78
CONSULT-II Function (BCM)	33	Defroster Door Motor Circuit	79
CONSULT-II BASIC OPERATION	33	SYMPTOM:	79
DATA MONITOR	34	INSPECTION FLOW	79
How to Perform Trouble Diagnosis for Quick and Accurate Repair	35	SYSTEM DESCRIPTION	80
WORK FLOW	35	COMPONENT DESCRIPTION	80
SYMPTOM TABLE	35	DIAGNOSTIC PROCEDURE FOR DEFROSTER DOOR MOTOR	81
Component Parts and Harness Connector Location..	37	Front Blower Motor Circuit	83
ENGINE COMPARTMENT	37	INSPECTION FLOW	83
FRONT PASSENGER COMPARTMENT	38	SYSTEM DESCRIPTION	84
REAR PASSENGER COMPARTMENT	39	COMPONENT DESCRIPTION	85
Schematic	40	DIAGNOSTIC PROCEDURE FOR BLOWER MOTOR	85
Wiring Diagram — A/C,A —	41	COMPONENT INSPECTION	89
Front Air Control Terminals and Reference Value..	51	Rear Blower Motor Circuit	90
PIN CONNECTOR TERMINAL LAYOUT	51	INSPECTION FLOW	90
TERMINALS AND REFERENCE VALUE FOR FRONT AIR CONTROL	51	SYSTEM DESCRIPTION	91
A/C System Self-diagnosis Function	53	DIAGNOSTIC PROCEDURE FOR REAR BLOWER MOTOR	91
DESCRIPTION	53	COMPONENT INSPECTION	99
Operational Check (Front)	56	Rear Air Control Circuit	101
CHECKING MEMORY FUNCTION	56	INSPECTION FLOW	101
CHECKING BLOWER	56	SYSTEM DESCRIPTION	102
CHECKING DISCHARGE AIR	57	DIAGNOSTIC PROCEDURE FOR REAR AIR CONTROL	102
CHECKING RECIRCULATION	57	Magnet Clutch Circuit	104
CHECKING TEMPERATURE DECREASE	57	INSPECTION FLOW	104
CHECKING TEMPERATURE INCREASE	58	SYSTEM DESCRIPTION	105
CHECK A/C SWITCH	58	DIAGNOSTIC PROCEDURE FOR MAGNET CLUTCH	105
CHECKING AUTO MODE	58	Insufficient Cooling	110
Operational Check (Rear)	59	INSPECTION FLOW	110
CHECKING BLOWER	59	PERFORMANCE TEST DIAGNOSES	111
CHECKING TEMPERATURE DECREASE	59	PERFORMANCE CHART	113
CHECKING TEMPERATURE INCREASE	59	TROUBLE DIAGNOSES FOR UNUSUAL PRES- SURE	114
Power Supply and Ground Circuit for Front Air Con- trol	60	Insufficient Heating	117
INSPECTION FLOW	60	INSPECTION FLOW	117
COMPONENT DESCRIPTION	61	Noise	118
DIAGNOSTIC PROCEDURE FOR A/C SYSTEM..	61	INSPECTION FLOW	118
Mode Door Motor Circuit	63	Self-diagnosis	120
INSPECTION FLOW	63	INSPECTION FLOW	120
SYSTEM DESCRIPTION	64	Memory Function	121
COMPONENT DESCRIPTION	65	INSPECTION FLOW	121
DIAGNOSTIC PROCEDURE FOR MODE DOOR MOTOR	65	Water Valve Circuit	121
Air Mix Door Motor Circuit	67	COMPONENT DESCRIPTION	121
INSPECTION FLOW	67	DIAGNOSTIC PROCEDURE FOR WATER VALVE	122
SYSTEM DESCRIPTION	68	COMPONENT INSPECTION	124
COMPONENT DESCRIPTION	69	Ambient Sensor Circuit	125
DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR (DRIVER)	69	COMPONENT DESCRIPTION	125
DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR (PASSENGER)	71	AMBIENT TEMPERATURE INPUT PROCESS..	125
DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR (REAR)	73	DIAGNOSTIC PROCEDURE FOR AMBIENT SENSOR	125
Intake Door Motor Circuit	76	COMPONENT INSPECTION	127
INSPECTION FLOW	76	In-vehicle Sensor Circuit	128
SYSTEM DESCRIPTION	77	COMPONENT DESCRIPTION	128
COMPONENT DESCRIPTION	78	DIAGNOSTIC PROCEDURE FOR IN-VEHICLE	
DIAGNOSTIC PROCEDURE FOR INTAKE			

SENSOR	129	INTAKE DOOR MOTOR	151	
COMPONENT INSPECTION	131	Removal and Installation	151	A
Optical Sensor Circuit	131	REMOVAL	151	
COMPONENT DESCRIPTION	131	INSTALLATION	151	
OPTICAL INPUT PROCESS	131	MODE DOOR MOTOR	152	B
DIAGNOSTIC PROCEDURE FOR OPTICAL		Removal and Installation	152	
SENSOR	132	REMOVAL	152	
Intake Sensor Circuit	133	INSTALLATION	152	C
COMPONENT DESCRIPTION	133	AIR MIX DOOR MOTOR	153	
DIAGNOSTIC PROCEDURE FOR INTAKE SEN-		Components	153	
SOR	133	Removal and Installation	153	
COMPONENT INSPECTION	134	FRONT AIR MIX DOOR MOTOR (DRIVER)	153	D
CONTROL UNIT	135	FRONT AIR MIX DOOR MOTOR (PASSENGER)	154	
Removal and Installation	135	REAR AIR MIX DOOR MOTOR	154	
FRONT AIR CONTROL	135	VARIABLE BLOWER CONTROL	155	E
REAR AIR CONTROL	135	Removal and Installation	155	
AMBIENT SENSOR	136	REMOVAL	155	
Removal and Installation	136	INSTALLATION	155	F
REMOVAL	136	REAR BLOWER MOTOR RESISTOR	156	
INSTALLATION	136	Removal and Installation	156	
IN-VEHICLE SENSOR	137	REMOVAL	156	
Removal and Installation	137	INSTALLATION	156	G
REMOVAL	137	DUCTS AND GRILLES	157	
INSTALLATION	137	Components	157	
OPTICAL SENSOR	138	Removal and Installation	160	H
Removal and Installation	138	CENTER CONSOLE HEAT DUCT AND REAR		
INTAKE SENSOR	139	FINISHER ASSEMBLY GRILLE	160	
Removal and Installation	139	DEFROSTER NOZZLE	160	I
REMOVAL	139	RH AND LH SIDE DEMISTER DUCT	160	
INSTALLATION	139	RH AND LH VENTILATOR DUCT	160	
BLOWER MOTOR	140	CENTER VENTILATOR DUCT	160	
Components	140	FLOOR DUCT	160	ATC
Removal and Installation	140	REAR OVERHEAD DUCTS	160	
FRONT BLOWER MOTOR	140	REAR FLOOR DUCT	161	
REAR BLOWER MOTOR	141	GRILLES	161	K
IN-CABIN MICROFILTER	142	REFRIGERANT LINES	162	
Removal and Installation	142	HFC-134a (R-134a) Service Procedure	162	
FUNCTION	142	SETTING OF SERVICE TOOLS AND EQUIP-		L
REPLACEMENT TIMING	142	MENT	162	
REPLACEMENT PROCEDURE	142	Components	164	
HEATER & COOLING UNIT ASSEMBLY	144	Removal and Installation for Compressor	166	M
Components	144	REMOVAL	166	
Removal and Installation	145	INSTALLATION	167	
FRONT HEATER AND COOLING UNIT ASSEM-		Removal and Installation for Compressor Clutch .	167	
BLY	145	REMOVAL	167	
REAR HEATER AND COOLING UNIT ASSEM-		INSPECTION	168	
BLY	146	INSTALLATION	168	
HEATER CORE	147	BREAK-IN OPERATION	170	
Components	147	Removal and Installation for Low-pressure Flexible		
Removal and Installation	148	Hose	170	
FRONT HEATER CORE	148	REMOVAL	170	
REAR HEATER CORE	149	INSTALLATION	170	
DEFROSTER DOOR MOTOR	150	Removal and Installation for High-pressure Flexible		
Removal and Installation	150	Hose	170	
REMOVAL	150	REMOVAL	170	
INSTALLATION	150	INSTALLATION	170	
		Removal and Installation for High-pressure Pipe .	170	
		REMOVAL	170	
		INSTALLATION	171	

Removal and Installation for Low-pressure Pipe .	171	INSTALLATION	177
REMOVAL	171	Removal and Installation for Front Expansion Valve	177
INSTALLATION	171	REMOVAL	177
Removal and Installation for Rear High- and Low-		INSTALLATION	177
pressure A/C and Heater Core Pipes	171	Removal and Installation for Rear Expansion Valve	177
REMOVAL	171	REMOVAL	177
INSTALLATION	172	INSTALLATION	178
Removal and Installation for Underfloor Rear High-		Checking for Refrigerant Leaks	178
and Low-pressure A/C and Heater Core Pipes ...	172	Checking System for Leaks Using the Fluorescent	
REMOVAL	172	Dye Leak Detector	178
INSTALLATION	173	Dye Injection	178
Removal and Installation for Refrigerant Pressure		Electronic Refrigerant Leak Detector	179
Sensor	173	PRECAUTIONS FOR HANDLING LEAK	
REMOVAL	173	DETECTOR	179
INSTALLATION	173	CHECKING PROCEDURE	180
Removal and Installation for Condenser	173	SERVICE DATA AND SPECIFICATIONS (SDS) ...	182
REMOVAL	173	Service Data and Specifications (SDS)	182
INSTALLATION	174	COMPRESSOR	182
Removal and Installation for Front Evaporator	175	LUBRICANT	182
REMOVAL	175	REFRIGERANT	182
INSTALLATION	176	ENGINE IDLING SPEED	182
Removal and Installation for Rear Evaporator	176	BELT TENSION	182
REMOVAL	177		

PRECAUTIONS

PRECAUTIONS

PFP:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EJS002BF

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions for Working with HFC-134a (R-134a)

EJS002BG

WARNING:

- CFC-12 (R-12) refrigerant and HFC-134a (R-134a) refrigerant are not compatible. If the refrigerants are mixed compressor failure is likely to occur. Refer [ATC-5, "Contaminated Refrigerant"](#) . To determine the purity of HFC-134a (R-134a) in the vehicle and recovery tank, use Refrigerant Recovery/Recycling Recharging equipment and Refrigerant Identifier.
- Use only specified lubricant for the HFC-134a (R-134a) A/C system and HFC-134a (R-134a) components. If lubricant other than that specified is used, compressor failure is likely to occur.
- The specified HFC-134a (R-134a) lubricant rapidly absorbs moisture from the atmosphere. The following handling precautions must be observed:
 - When removing refrigerant components from a vehicle, immediately cap (seal) the component to minimize the entry of moisture from the atmosphere.
 - When installing refrigerant components to a vehicle, do not remove the caps (unseal) until just before connecting the components. Connect all refrigerant loop components as quickly as possible to minimize the entry of moisture into system.
 - Only use the specified lubricant from a sealed container. Immediately reseal containers of lubricant. Without proper sealing, lubricant will become moisture saturated and should not be used.
 - Avoid breathing A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) from the A/C system using certified service equipment meeting requirements of SAE J2210 [HFC-134a (R-134a) recycling equipment], or J2209 [HFC-134a (R-134a) recovery equipment]. If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.
 - Do not allow the lubricant NISSAN A/C System Lubricant Type S (DH-PS) to come in contact with styrofoam parts. Damage may result.

Contaminated Refrigerant

EJS002BH

If a refrigerant other than pure HFC-134a (R-134a) is identified in a vehicle, your options are:

- Explain to the customer that environmental regulations prohibit the release of contaminated refrigerant into the atmosphere.
- Explain that recovery of the contaminated refrigerant could damage your service equipment and refrigerant supply.
- Suggest the customer return the vehicle to the location of previous service where the contamination may have occurred.

PRECAUTIONS

- If you choose to perform the repair, recover the refrigerant using only **dedicated equipment and containers. Do not recover contaminated refrigerant into your existing service equipment.** If your facility does not have dedicated recovery equipment, you may contact a local refrigerant product retailer for available service. This refrigerant must be disposed of in accordance with all federal and local regulations. In addition, replacement of all refrigerant system components on the vehicle is recommended.
- If the vehicle is within the warranty period, the air conditioner warranty is void. Please contact NISSAN Customer Affairs for further assistance.

General Refrigerant Precautions

EJS002BI

WARNING:

- **Do not release refrigerant into the air. Use approved recovery/recycling equipment to capture the refrigerant every time an air conditioning system is discharged.**
- **Always wear eye and hand protection (goggles and gloves) when working with any refrigerant or air conditioning system.**
- **Do not store or heat refrigerant containers above 52°C (125°F).**
- **Do not heat a refrigerant container with an open flame; if container warming is required, place the bottom of the container in a warm pail of water.**
- **Do not intentionally drop, puncture, or incinerate refrigerant containers.**
- **Keep refrigerant away from open flames: poisonous gas will be produced if refrigerant burns.**
- **Refrigerant will displace oxygen, therefore be certain to work in well ventilated areas to prevent suffocation.**
- **Do not pressure test or leak test HFC-134a (R-134a) service equipment and/or vehicle air conditioning systems with compressed air during repair. Some mixtures of air and HFC-134a (R-134a) have been shown to be combustible at elevated pressures. These mixtures, if ignited, may cause injury or property damage. Additional health and safety information may be obtained from refrigerant manufacturers.**

Precautions for Leak Detection Dye

EJS002BJ

- The A/C system contains a fluorescent leak detection dye used for locating refrigerant leaks. An ultraviolet (UV) lamp is required to illuminate the dye when inspecting for leaks.
- Always wear fluorescence enhancing UV safety goggles to protect your eyes and enhance the visibility of the fluorescent dye.
- The fluorescent dye leak detector is not a replacement for an electronic refrigerant leak detector. The fluorescent dye leak detector should be used in conjunction with an electronic refrigerant leak detector (J-41995).
- For your safety and the customer's satisfaction, read and follow all manufacturer's operating instructions and precautions prior to performing work.
- A compressor shaft seal should not be repaired because of dye seepage. The compressor shaft seal should only be repaired after confirming the leak with an electronic refrigerant leak detector (J-41995).
- Always remove any dye from the leak area after repairs are complete to avoid a misdiagnosis during a future service.
- Do not allow dye to come into contact with painted body panels or interior components. If dye is spilled, clean immediately with the approved dye cleaner. Fluorescent dye left on a surface for an extended period of time **cannot be removed**.
- Do not spray the fluorescent dye cleaning agent on hot surfaces (engine exhaust manifold, etc.).
- Do not use more than one refrigerant dye bottle (1/4 ounce / 7.4 cc) per A/C system.
- Leak detection dyes for HFC-134a (R-134a) and CFC-12 (R-12) A/C systems are different. Do not use HFC-134a (R-134a) leak detection dye in CFC-12 (R-12) A/C systems or CFC-12 (R-12) leak detection dye in HFC-134a (R-134a) A/C systems or A/C system damage may result.
- The fluorescent properties of the dye will remain for over three (3) years unless a compressor failure occurs.

PRECAUTIONS

EJS002BK

A/C Identification Label

Vehicles with factory installed fluorescent dye have this identification label on the underside of hood.

AIR CONDITIONER NISSAN			
		REFRIGERANT	COMPRESSOR LUBRICANT
TYPE (PART NO.)		HFC 134a (R134a)	NISSAN LUMINOUS OIL TYPE S (KLH00-PAGS0)
AMOUNT	W/OUT RR	0.70 ± 0.05 kg (1.54 ± 0.11 lbs)	200 ml. (6.8 oz.)
	W/RR	1.08 ± 0.05 kg (2.38 ± 0.11 lbs)	290 ml. (9.8 oz.)

CAUTION PRECAUTION

- REFRIGERANT UNDER HIGH PRESSURE.
- SYSTEM TO BE SERVICED BY QUALIFIED PERSONNEL.
- IMPROPER SERVICE METHODS MAY CAUSE PERSONAL INJURY.
- CONSULT SERVICE MANUAL.
- THIS AIR CONDITIONER SYSTEM COMPLIES WITH SAE J-639.

Nissan Motor Corporation in USA, Carson, CA
27090 7S000

WJIA0672E

Precautions for Refrigerant Connection


EJS002BL

A new type refrigerant connection has been introduced to all refrigerant lines except the following locations.

- Expansion valve to cooling unit
- Evaporator pipes to evaporator (inside cooling unit)
- Refrigerant pressure sensor

FEATURES OF NEW TYPE REFRIGERANT CONNECTION

- The O-ring has been relocated. It has also been provided with a groove for proper installation. This reduces the possibility of the O-ring being caught in, or damaged by, the mating part. The sealing direction of the O-ring is now set vertically in relation to the contacting surface of the mating part to improve sealing characteristics.
- The reaction force of the O-ring will not occur in the direction that causes the joint to pull out, thereby facilitating piping connections.


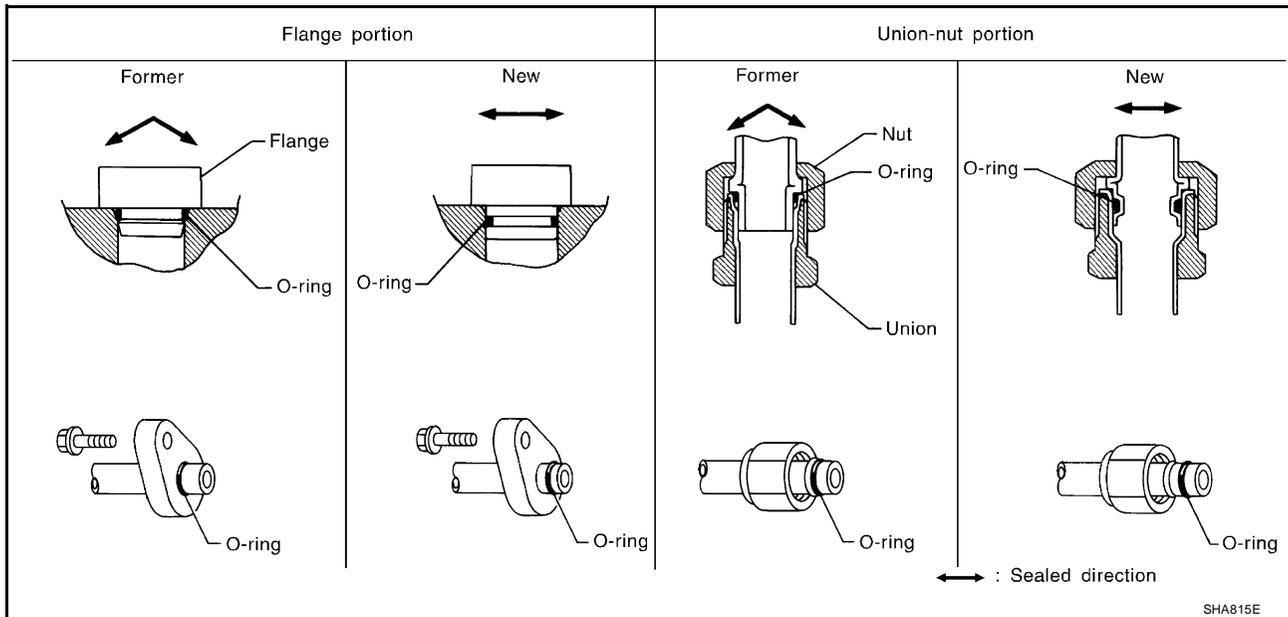


PRECAUTIONS

O-RING AND REFRIGERANT CONNECTION

Front A/C Compressor and Condenser

SEC. 214 • 271 • 274 • 276

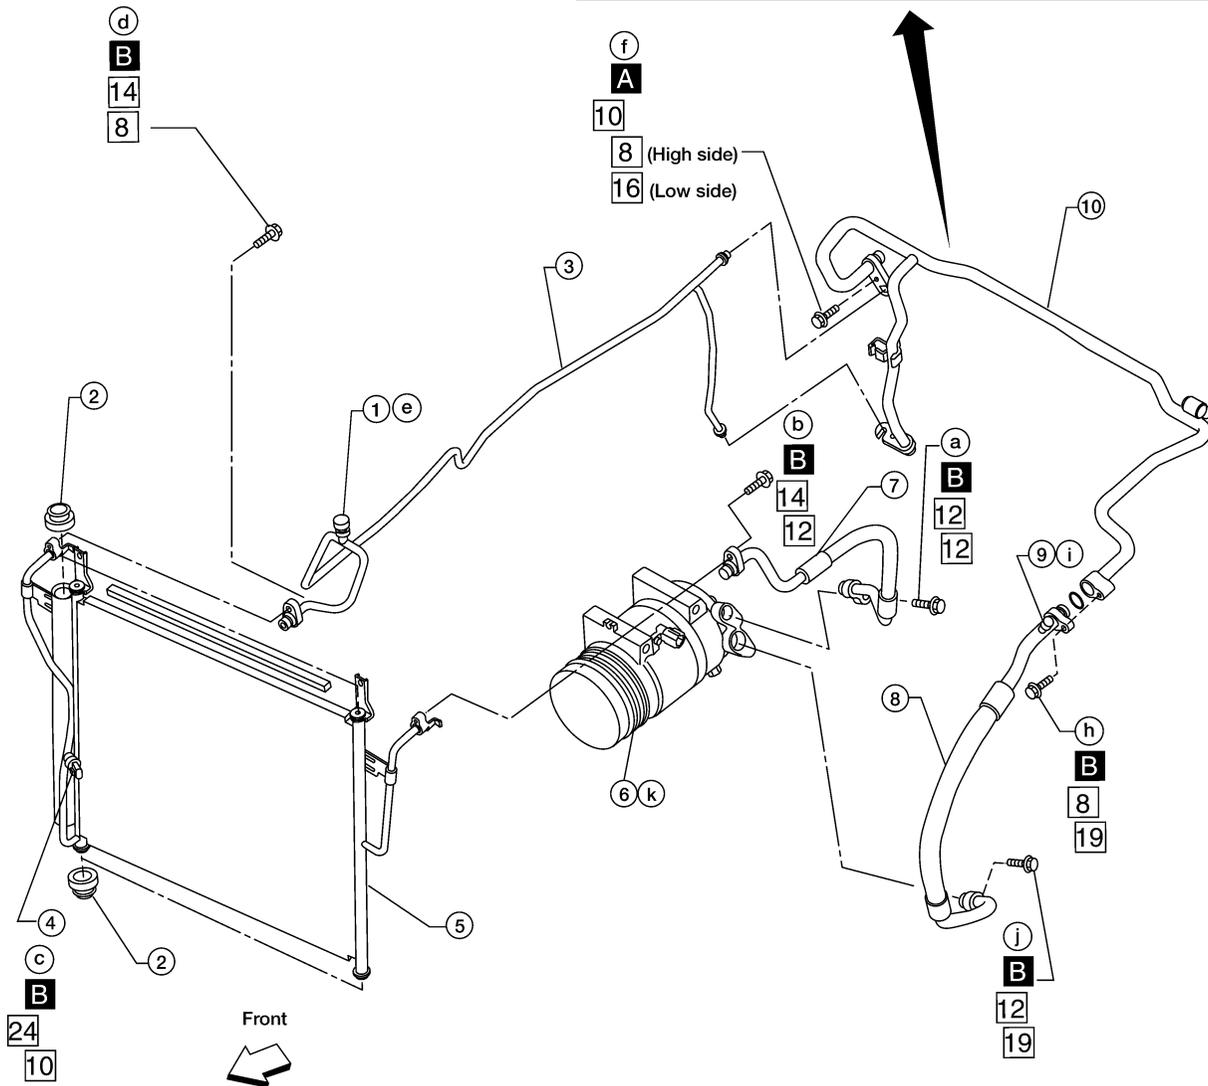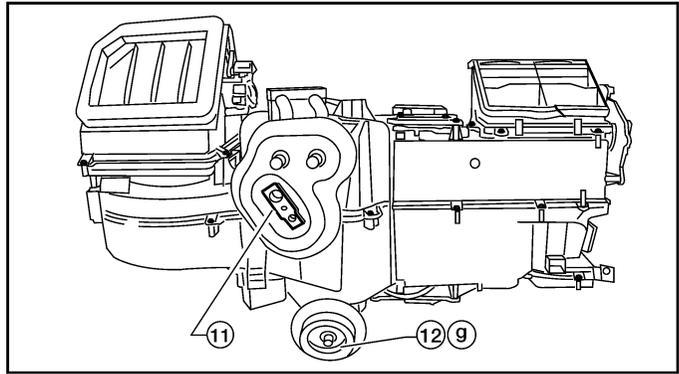

- : Refrigerant leak checking order (a-k)
- : Tightening torque
- □ : Wrench size
- : O-ring size
- ⊗ : N-m (kg-m, in-lb)
- A** ⊗ : 3.4 (0.35 , 30)
- B** ⊗ : 9.3 (0.95 , 82)


WJIA1578E

PRECAUTIONS

- | | | |
|--------------------------------|-------------------------------|-------------------------------|
| 1. High-pressure service valve | 2. Grommet | 3. High-pressure pipe |
| 4. Refrigerant pressure sensor | 5. Condenser | 6. Compressor shaft seal |
| 7. High-pressure flexible hose | 8. Low-pressure flexible hose | 9. Low-pressure service valve |
| 10. Low-pressure pipe | 11. Expansion valve (front) | 12. Drain hose |

Rear A/C

SEC. 214 • 271 • 274 • 276

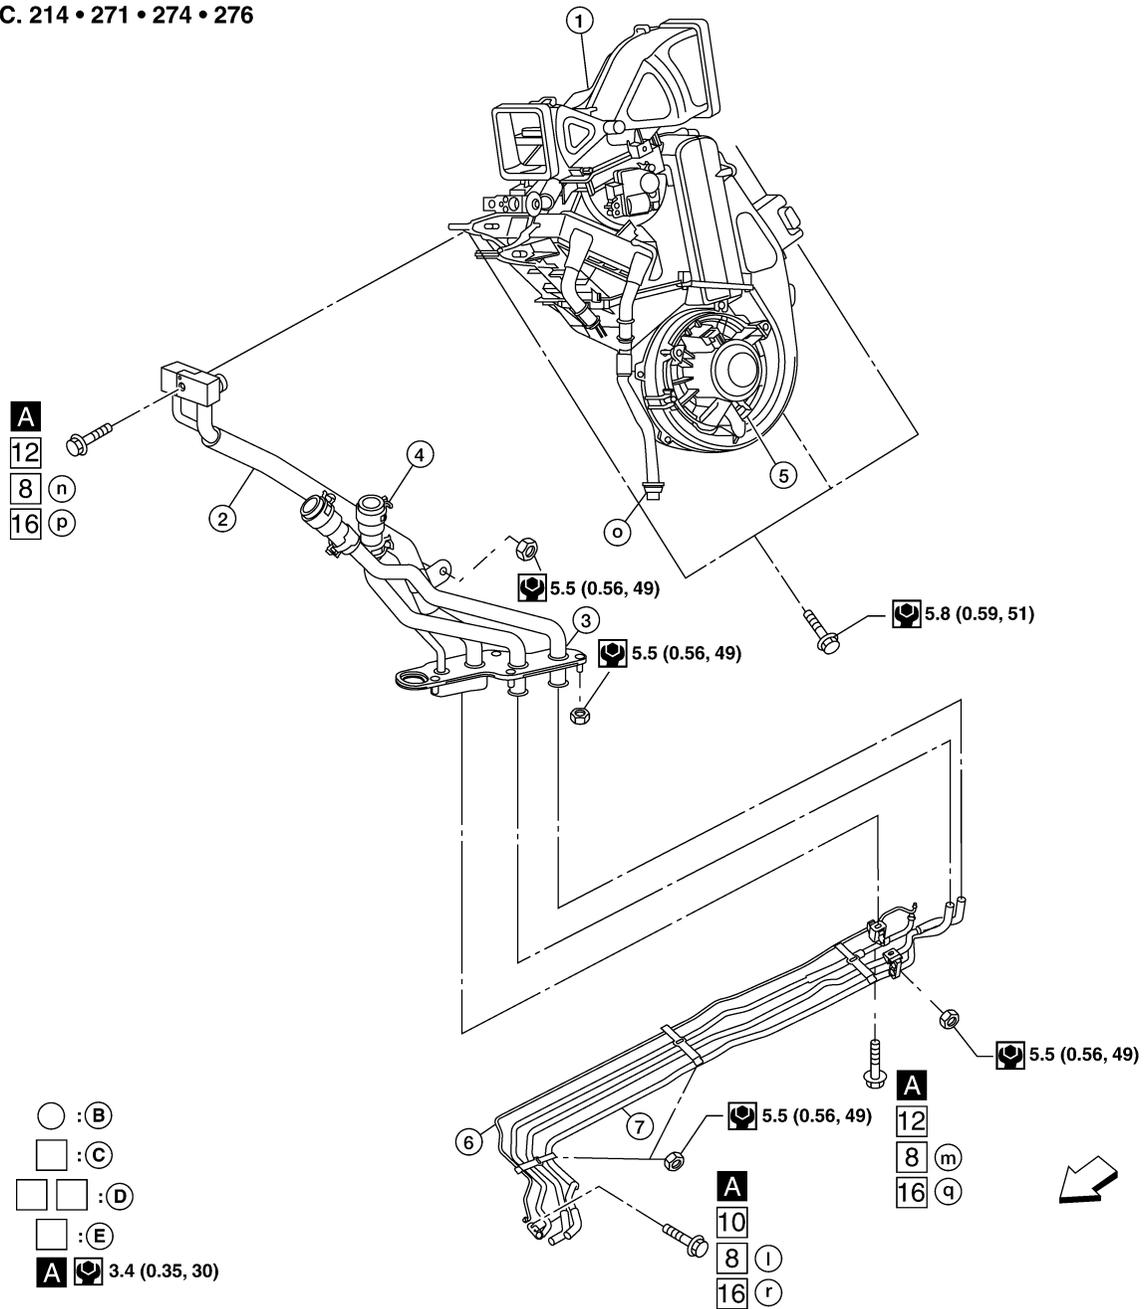

- : B
- : C
- □ : D
- : E
- A** Ⓜ 3.4 (0.35, 30)

- | | | |
|--|-------------------------------|--------------------------------|
| 1. Rear heater and cooling unit assembly | 2. Rear A/C pipes | 3. Rear A/C heater core pipes |
| 4. Rear heater core hose | 5. Rear blower motor | 6. Underfloor rear A/C pipes |
| 7. Underfloor rear heater core pipes | A. Bolt torque specifications | B. Leak checking order (l - r) |
| C. Tightening torque | D. Wrench size | E. O-ring size |
- ← Front


NOTE: The O-ring size 8 is the high-side and the O-ring size 16 is the low-side.

PRECAUTIONS

CAUTION:

The new and former refrigerant connections use different O-ring configurations. Do not confuse O-rings since they are not interchangeable. If a wrong O-ring is installed, refrigerant will leak at or around the connection.

O-Ring Part Numbers and Specifications

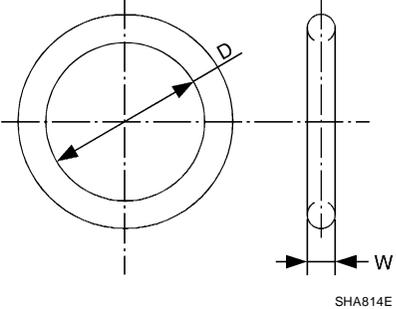	Conne- tion type	O-ring size	Part number*	D mm (in)	W mm (in)
	New	8	92471 N8210	6.8 (0.268)	1.85 (0.0728)
Former	10	J2476 89956	9.25 (0.3642)	1.78 (0.0701)	
New	12	92472 N8210	10.9 (0.429)	2.43 (0.0957)	
Former		92475 71L00	11.0 (0.433)	2.4 (0.094)	
New	16	92473 N8210	13.6 (0.535)	2.43 (0.0957)	
Former		92475 72L00	14.3 (0.563)	2.3 (0.091)	
New	19	92474 N8210	16.5 (0.650)	2.43 (0.0957)	
Former		92477 N8200	17.12 (0.6740)	1.78 (0.0701)	
New	24	92195 AH300	21.8 (0.858)	2.4 (0.094)	

*: Always check with the Parts Department for the latest parts information.

WARNING:

Make sure all refrigerant is discharged into the recycling equipment and the pressure in the system is less than atmospheric pressure. Then gradually loosen the discharge side hose fitting and remove it.


CAUTION:

When replacing or cleaning refrigerant cycle components, observe the following.

- When the compressor is removed, store it in the same position as it is when mounted on the car. Failure to do so will cause lubricant to enter the low pressure chamber.
- When connecting tubes, always use a torque wrench and a back-up wrench.
- After disconnecting tubes, immediately plug all openings to prevent entry of dirt and moisture.
- When installing an air conditioner in the vehicle, connect the pipes as the final stage of the operation. Do not remove the seal caps of pipes and other components until just before required for connection.
- Allow components stored in cool areas to warm to working area temperature before removing seal caps. This prevents condensation from forming inside A/C components.
- Thoroughly remove moisture from the refrigeration system before charging the refrigerant.
- Always replace used O-rings.
- When connecting tube, apply lubricant to circle of the O-rings shown in illustration. Be careful not to apply lubricant to threaded portion.
Lubricant name: NISSAN A/C System Oil Type DH-PS
Part number: KLH00-PAGS0
- O-ring must be closely attached to dented portion of tube.
- When replacing the O-ring, be careful not to damage O-ring and tube.
- Connect tube until you hear it click, then tighten the nut or bolt by hand until snug. Make sure that the O-ring is installed to tube correctly.

PRECAUTIONS

- After connecting line, conduct leak test and make sure that there is no leakage from connections. When the gas leaking point is found, disconnect that line and replace the O-ring. Then tighten connections of seal seat to the specified torque.

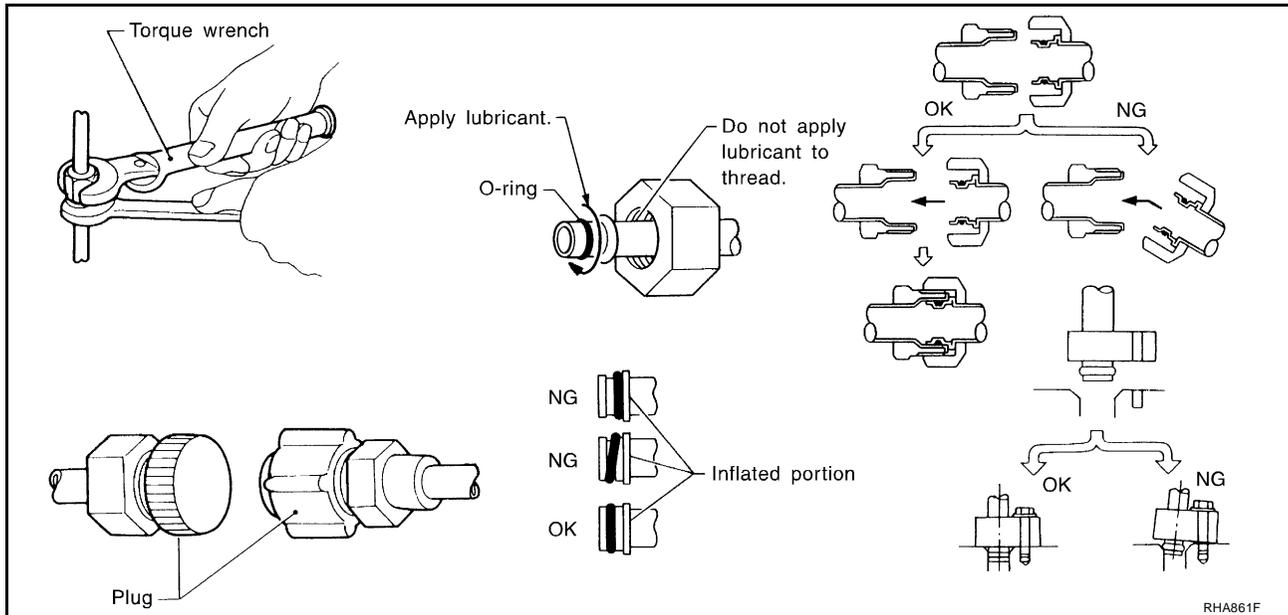

Precautions for Servicing Compressor

EJS002BM

- Plug all openings to prevent moisture and foreign matter from entering.
- When the compressor is removed, store it in the same position as it is when mounted on the car.
- When replacing or repairing compressor, follow "Maintenance of Lubricant Quantity in Compressor" exactly. Refer to [ATC-22, "Maintenance of Lubricant Quantity in Compressor"](#).
- Keep friction surfaces between clutch and pulley clean. If the surface is contaminated with lubricant, wipe it off by using a clean waste cloth moistened with thinner.
- After compressor service operation, turn the compressor shaft by hand more than 5 turns in both directions. This will equally distribute lubricant inside the compressor. After the compressor is installed, let the engine idle and operate the compressor for 1 hour.
- After replacing the compressor magnet clutch, apply voltage to the new one and check for normal operation. Refer to [ATC-167, "Removal and Installation for Compressor Clutch"](#).

Precautions for Service Equipment RECOVERY/RECYCLING EQUIPMENT

EJS002BN

Follow the manufacturer's instructions for machine operation and machine maintenance. Never introduce any refrigerant other than that specified into the machine.

ELECTRONIC LEAK DETECTOR

Follow the manufacturer's instructions for tester operation and tester maintenance.

PRECAUTIONS


VACUUM PUMP

The lubricant contained inside the vacuum pump is not compatible with the specified lubricant for HFC-134a (R-134a) A/C systems. The vent side of the vacuum pump is exposed to atmospheric pressure so the vacuum pump lubricant may migrate out of the pump into the service hose. This is possible when the pump is switched off after evacuation (vacuuming) and hose is connected to it.

To prevent this migration, use a manual valve situated near the hose-to-pump connection, as follows.


- Usually vacuum pumps have a manual isolator valve as part of the pump. Close this valve to isolate the service hose from the pump.
- For pumps without an isolator, use a hose equipped with a manual shut-off valve near the pump end. Close the valve to isolate the hose from the pump.
- If the hose has an automatic shut off valve, disconnect the hose from the pump: as long as the hose is connected, the valve is open and lubricating oil may migrate.

Some one-way valves open when vacuum is applied and close under a no vacuum condition. Such valves may restrict the pump's ability to pull a deep vacuum and are not recommended.

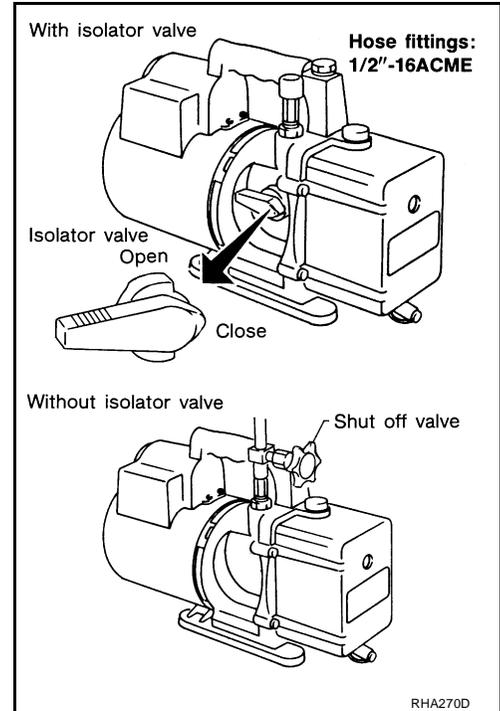


MANIFOLD GAUGE SET

Be certain that the gauge face indicates HFC-134a (R-134a or 134a). Make sure the gauge set has 1/2"-16 ACME threaded connections for service hoses. Confirm the set has been used only with refrigerant HFC-134a (R-134a) along with specified lubricant.

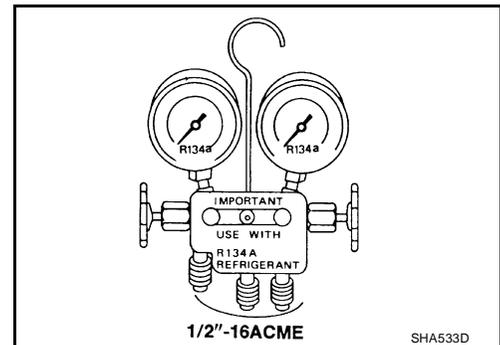

SERVICE HOSES

Be certain that the service hoses display the markings described (colored hose with black stripe). All hoses must include positive shut-off devices (either manual or automatic) near the end of the hoses opposite the manifold gauge.

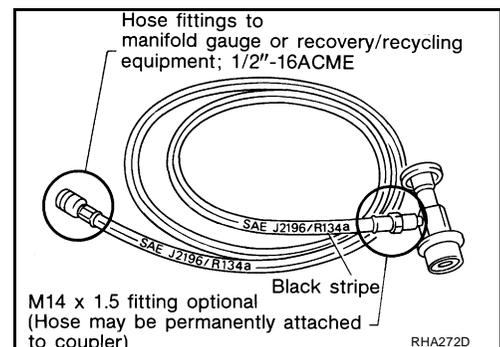


PRECAUTIONS

SERVICE COUPLERS


Never attempt to connect HFC-134a (R-134a) service couplers to a CFC-12 (R-12) A/C system. The HFC-134a (R-134a) couplers will not properly connect to the CFC-12 (R-12) system. If an improper connection is attempted, discharging and contamination may occur.

Shut-off valve rotation	A/C service valve
Clockwise	Open
Counterclockwise	Close

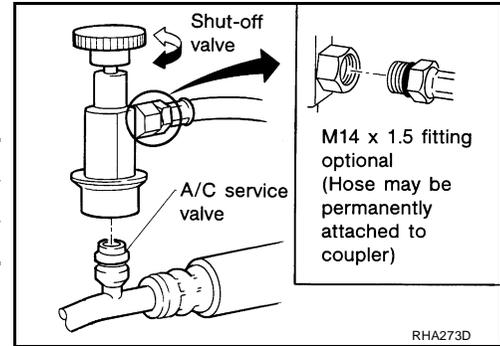

REFRIGERANT WEIGHT SCALE

Verify that no refrigerant other than HFC134a (R-134a) and specified lubricants have been used with the scale. If the scale controls refrigerant flow electronically, the hose fitting must be 1/2"-16 ACME.

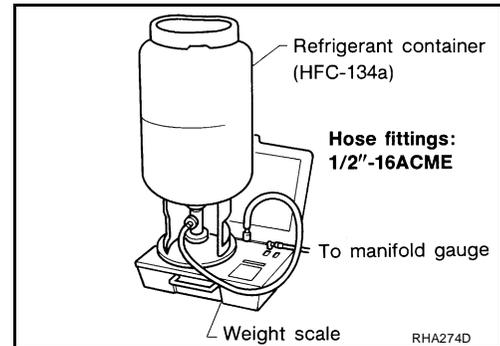

CHARGING CYLINDER

Using a charging cylinder is not recommended. Refrigerant may be vented into air from cylinder's top valve when filling the cylinder with refrigerant. Also, the accuracy of the cylinder is generally less than that of an electronic scale or of quality recycle/recharge equipment.

Wiring Diagrams and Trouble Diagnosis

EJS002B0

ATC

When you read wiring diagrams, refer to the following:

- [GI-15, "How to Read Wiring Diagrams"](#)
- [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#)

When you perform trouble diagnosis, refer to the following:

- [GI-11, "How to Follow Trouble Diagnoses"](#)
- [GI-27, "How to Perform Efficient Diagnosis for an Electrical Incident"](#)

PREPARATION

PREPARATION


PF0:00002

Special Service Tools


EJS002BP

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

Tool number (Kent-Moore No.) Tool name	Description
— (J-38873-A) Drive plate installer	Installing pulley and drive plate
KV99233130 (J-29884) Pulley puller	Removing pulley

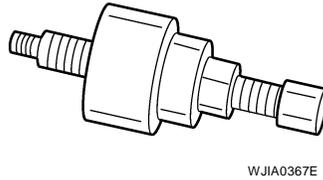

WJIA0367E

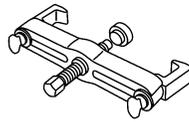

LHA172

HFC-134a (R-134a) Service Tools and Equipment

EJS002BQ


Never mix HFC-134a refrigerant and/or its specified lubricant with CFC-12 (R-12) refrigerant and/or its lubricant.

Separate and non-interchangeable service equipment must be used for handling each type of refrigerant/lubricant.

Refrigerant container fittings, service hose fittings and service equipment fittings (equipment which handles refrigerant and/or lubricant) are different between CFC-12 (R-12) and HFC-134a (R-134a). This is to avoid mixed use of the refrigerants/lubricant.

Adapters that convert one size fitting to another must never be used refrigerant/lubricant contamination will occur and compressor failure will result.

Tool number (Kent-Moore No.) Tool name	Description
HFC-134a (R-134a) refrigerant	Container color: Light blue Container marking: HFC-134a (R-134a) Fitting size: Thread size ● large container 1/2"-16 ACME
KLH00-PAGS0 (—) Nissan A/C System Oil Type DH-PS	Type: Poly alkylene glycol oil (PAG), type DH-PS Application: HFC-134a (R-134a) swash plate compressors (Nissan only) Lubricity: 40 mℓ (1.4 US fl oz, 1.4 Imp fl oz)
KV991J0130 (ACR2005-NI) ACR A/C Service Center	Refrigerant recovery, recycling and recharging

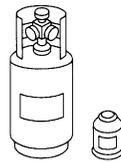

S-NT196




S-NT197




WJIA0293E

PREPARATION

Tool number (Kent-Moore No.) Tool name	Description	
(J-41995) Electronic refrigerant leak detector	Power supply: ● DC 12V (battery terminal)	A B C D
(J-43926) Refrigerant dye leak detection kit Kit includes: (J-42220) UV lamp and UV safety goggles (J-41459) Refrigerant dye injector (J-41447) HFC-134a (R-134a) Fluorescent leak detection dye (Box of 24, 1/4 ounce bottles) (J-43872) Refrigerant dye cleaner	Power supply: ● DC 12V (battery terminal)	E F G H
(J-42220) UV lamp and UV safety goggles	Power supply: ● DC 12V (battery terminal) For checking refrigerant leak when fluorescent dye is installed in A/C system. Includes: UV lamp and UV safety goggles	I ATC
(J-41447) HFC-134a (R-134a) Fluorescent leak detection dye (Box of 24, 1/4 ounce bottles)	Application: For HFC-134a (R-134a) PAG oil Container: 1/4 ounce (7.4cc) bottle (Includes self-adhesive dye identification labels for affixing to vehicle after charging system with dye.)	K L M
(J-41459) HFC-134a (R-134a) Dye injector Use with J-41447, 1/4 ounce bottle	For injecting 1/4 ounce of fluorescent leak detection dye into A/C system.	
(J-43872) Refrigerant dye cleaner	For cleaning dye spills.	

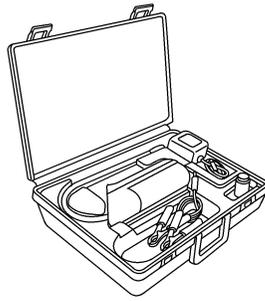

AHA281A

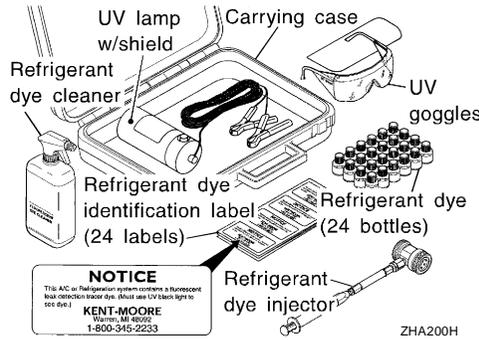

ZHA200H




SHA438F



Refrigerant dye
(24 bottles)

SHA439F



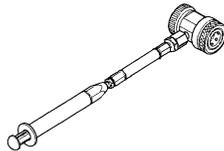


SHA440F



SHA441F




PREPARATION

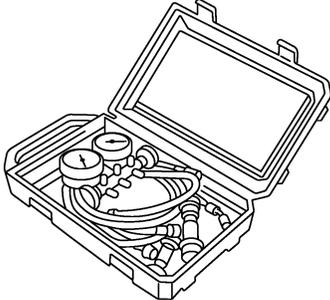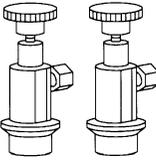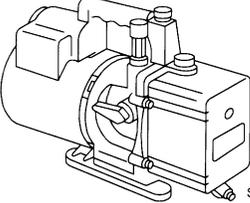Tool number (Kent-Moore No.) Tool name	Description
(J-39183-C) Manifold gauge set (with hoses and couplers) <div style="text-align: center;">  <p style="text-align: right; font-size: small;">RJIA0196E</p> </div>	Identification: <ul style="list-style-type: none"> ● The gauge face indicates R-134a. Fitting size-Thread size ● 1/2"-16 ACME
Service hoses <ul style="list-style-type: none"> ● High side hose (J-39500-72B) ● Low side hose (J-39500-72R) ● Utility hose (J-39500-72Y) <div style="text-align: center;">  <p style="text-align: right; font-size: small;">S-NT201</p> </div>	Hose color: <ul style="list-style-type: none"> ● Low side hose: Blue with black stripe ● High side hose: Red with black stripe ● Utility hose: Yellow with black stripe or green with black stripe Hose fitting to gauge: <ul style="list-style-type: none"> ● 1/2"-16 ACME
Service couplers <ul style="list-style-type: none"> ● High side coupler (J-39500-20A) ● Low side coupler (J-39500-24A) <div style="text-align: center;">  <p style="text-align: right; font-size: small;">S-NT202</p> </div>	Hose fitting to service hose: <ul style="list-style-type: none"> ● M14 x 1.5 fitting is optional or permanently attached.
(J-39699) Refrigerant weight scale <div style="text-align: center;">  <p style="text-align: right; font-size: small;">S-NT200</p> </div>	For measuring of refrigerant Fitting size-Thread size <ul style="list-style-type: none"> ● 1/2"-16 ACME
(J-39649) Vacuum pump (Including the isolator valve) <div style="text-align: center;">  <p style="text-align: right; font-size: small;">S-NT203</p> </div>	Capacity: <ul style="list-style-type: none"> ● Air displacement: 4 CFM ● Micron rating: 20 microns ● Oil capacity: 482 g (17 oz) Fitting size-Thread size ● 1/2"-16 ACME

PREPARATION

Commercial Service Tools

EJS002BR

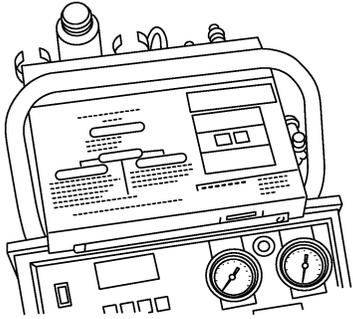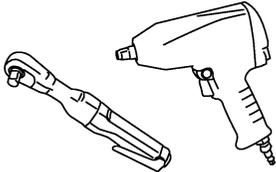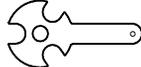Tool name	Description
<p>(J-41810-NI) Refrigerant identifier equipment- (R-134a)</p>  <p style="text-align: right;">RJIA0197E</p>	<p>For checking refrigerant purity and system contamination</p>
<p>Power tool</p>  <p style="text-align: right;">PBIC0190E</p>	<p>Loosening bolts and nuts</p>
<p>(J-44614) Clutch disc holding tool</p>  <p style="text-align: right;">WHA230</p>	<p>Clutch disc holding tool</p>

A
B
C
D
E
F
G
H
I

ATC

K
L
M

REFRIGERATION SYSTEM

REFRIGERATION SYSTEM

PFP:KA990

Refrigerant Cycle REFRIGERANT FLOW

EJS002BS

The refrigerant flows in the standard pattern, that is, through the compressor, the condenser with liquid tank, through the front and rear evaporators, and back to the compressor. The refrigerant evaporation through the evaporator coils are controlled by front and rear externally equalized expansion valves, located inside the front and rear evaporator cases.

Refrigerant System Protection REFRIGERANT PRESSURE SENSOR


EJS002BT

The refrigerant system is protected against excessively high or low pressures by the refrigerant pressure sensor, located on the condenser. If the system pressure rises above or falls below the specifications, the refrigerant pressure sensor detects the pressure inside the refrigerant line and sends a voltage signal to the ECM. The ECM deenergizes the A/C relay to disengage the magnetic compressor clutch when pressure on the high pressure side detected by refrigerant pressure sensor is over about 2,746 kPa (28 kg/cm² , 398 psi), or below about 120 kPa (1.22 kg/cm² , 17.4 psi).

REFRIGERATION SYSTEM

PRESSURE RELIEF VALVE

The refrigerant system is also protected by a pressure relief valve, located in the rear head of the compressor. When the pressure of refrigerant in the system increases to an abnormal level [more than 2,990 kPa (30.5 kg/cm² , 433.6 psi)], the release port on the pressure relief valve automatically opens and releases refrigerant into the atmosphere.

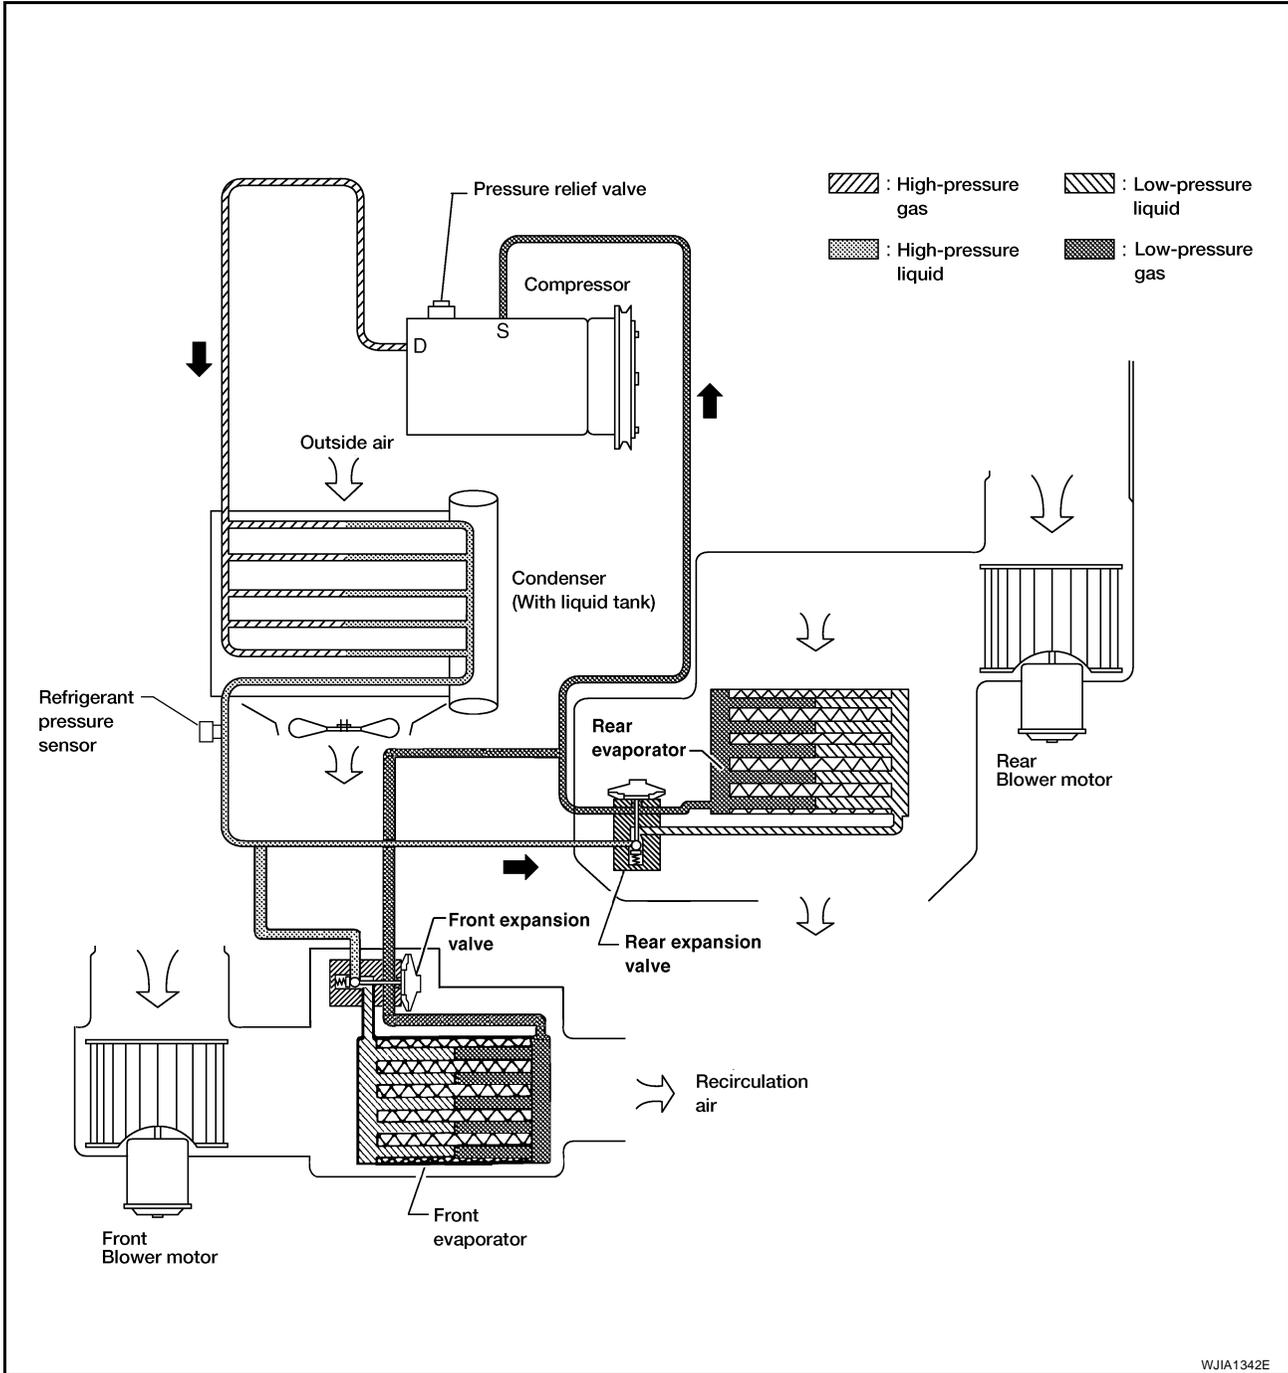


A
B
C
D
E
F
G
H
I
ATC
K
L
M

REFRIGERATION SYSTEM

EJS002BU

Component Layout FRONT REFRIGERATION SYSTEM

SEC. 270 • 271

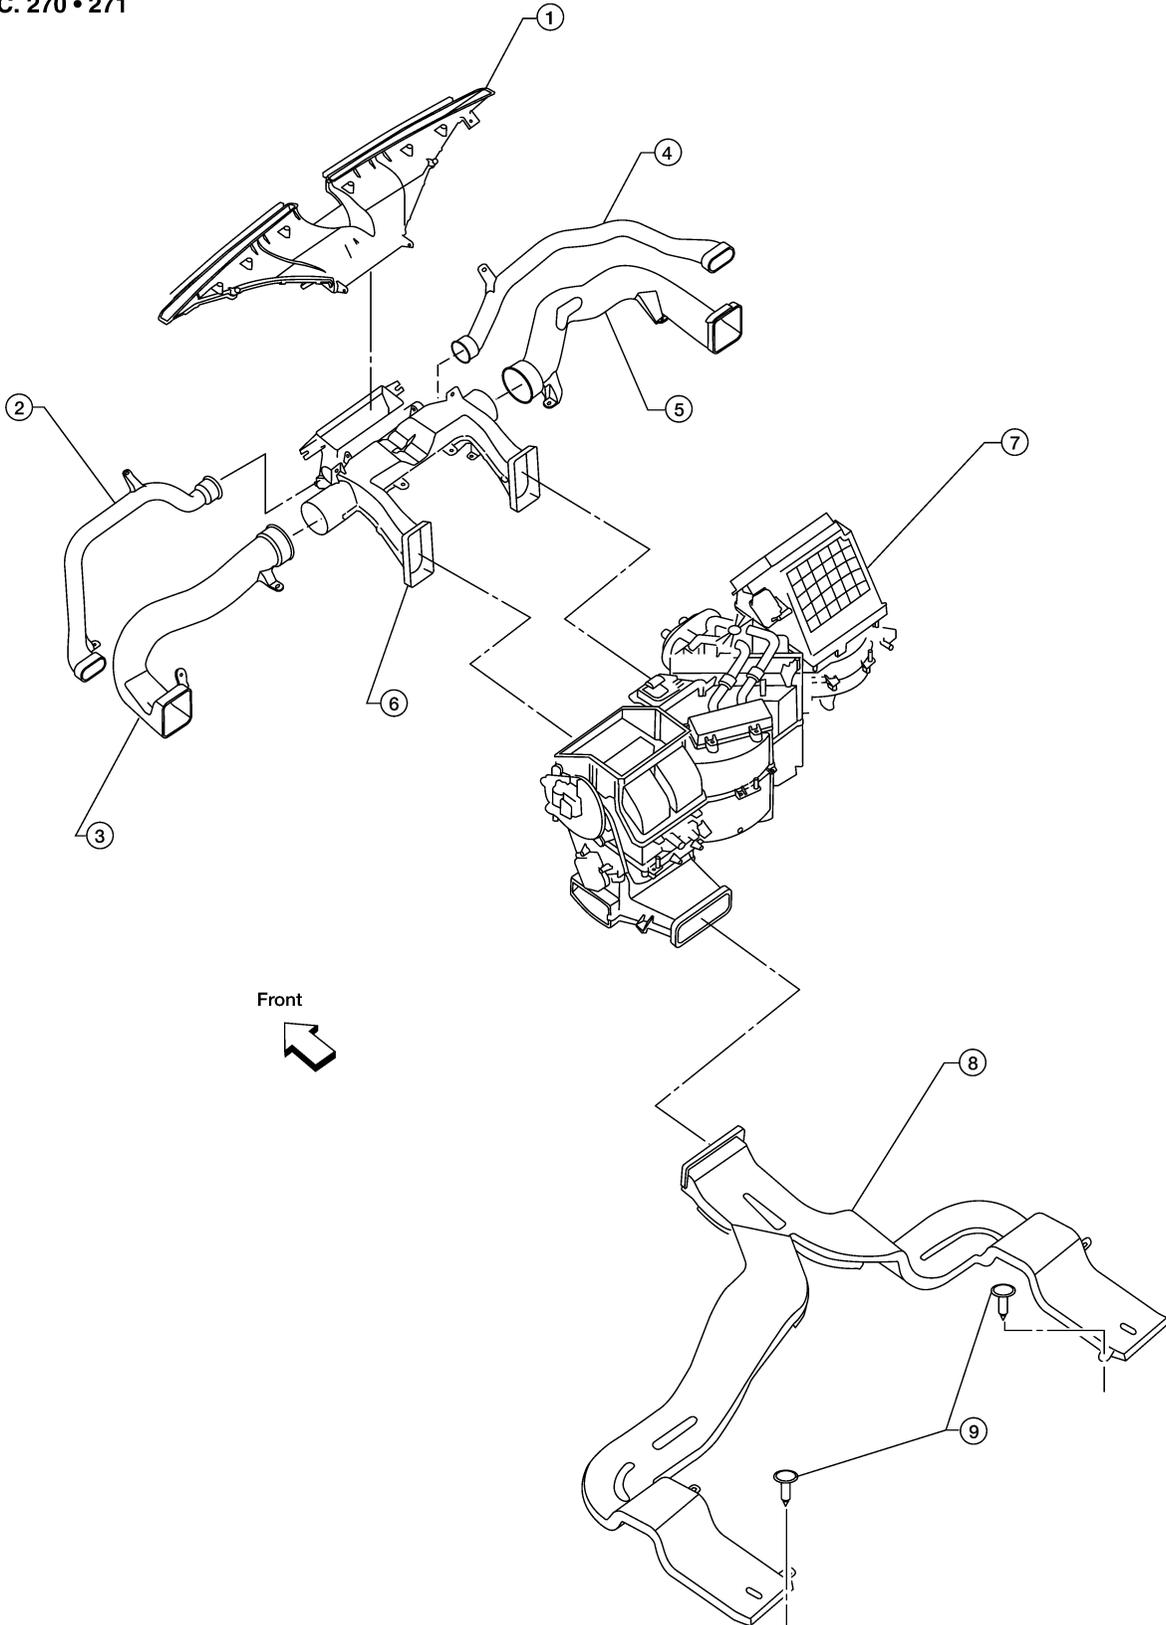

LJJA0141E

LUBRICANT

Maintenance of Lubricant Quantity in Compressor

EJS002BV

The lubricant in the compressor circulates through the system with the refrigerant. Add lubricant to compressor when replacing any component or after a large refrigerant leakage has occurred. It is important to maintain the specified amount.

If lubricant quantity is not maintained properly, the following malfunctions may result:

- Lack of lubricant: May lead to a seized compressor
- Excessive lubricant: Inadequate cooling (thermal exchange interference)

LUBRICANT

Name: NISSAN A/C System Lubricant Type S (DH-PS)

Part number: KLH00-PAGS0

CHECKING AND ADJUSTING

CAUTION:

If excessive lubricant leakage is noted, do not perform the lubricant return operation.

Start the engine and set the following conditions:

test condition

- **Engine speed: Idling to 1,200 rpm**
- **A/C switch: On**
- **Blower speed: Max. position**
- **Temp. control: Optional [Set so that intake air temperature is 25 to 30° C (77 to 86°F).]**
- **Intake position: Recirculation ()**
- **Perform lubricant return operation for about ten minutes**

Adjust the lubricant quantity according to the following table.

Lubricant Adjusting Procedure for Components Replacement Except Compressor

After replacing any of the following major components, add the correct amount of lubricant to the system.

Amount of Lubricant to be Added

Part replaced	Lubricant to be added to system		Remarks
	Amount of lubricant mℓ (US fl oz, Imp fl oz)		
Front evaporator	75 (2.5, 2.6)		—
Rear evaporator	75 (2.5, 2.6)		—
Condenser	75 (2.5, 2.6)		—
Liquid tank	5 (0.2, 0.2)		Add if compressor is not replaced.
In case of refrigerant leak	30 (1.0, 1.1)		Large leak
	—		Small leak *1

*1: If refrigerant leak is small, no addition of lubricant is needed.


Lubricant Adjustment Procedure for Compressor Replacement

1. Before connecting recovery/recycling equipment to vehicle, check recovery/recycling equipment gauges. No refrigerant pressure should be displayed. If NG, recover refrigerant from equipment lines.
2. Connect recovery/recycling equipment to vehicle. Confirm refrigerant purity in supply tank using recovery/recycling equipment and refrigerant identifier. If NG, refer to [ATC-5, "Contaminated Refrigerant"](#) .
3. Confirm refrigerant purity in vehicle A/C system using recovery/recycling equipment and refrigerant identifier. If NG, refer to [ATC-5, "Contaminated Refrigerant"](#) .
4. Discharge refrigerant into the refrigerant recovery/recycling equipment. Measure lubricant discharged into the recovery/recycling equipment.
5. Drain the lubricant from the “old” (removed) compressor into a graduated container and recover the amount of lubricant drained.
6. Drain the lubricant from the “new” compressor into a separate, clean container.

LUBRICANT

7. Measure an amount of new lubricant installed equal to amount drained from "old" compressor. Add this lubricant to "new" compressor through the suction port opening.
8. Measure an amount of new lubricant equal to the amount recovered during discharging. Add this lubricant to "new" compressor through the suction port opening.
9. If the liquid tank also needs to be replaced, add an additional 5 mℓ (0.2 US fl oz, 0.2 Imp fl oz) of lubricant at this time.

Do not add this 5 mℓ (0.2 US fl oz, 0.2 Imp fl oz) of lubricant if only replacing the compressor.

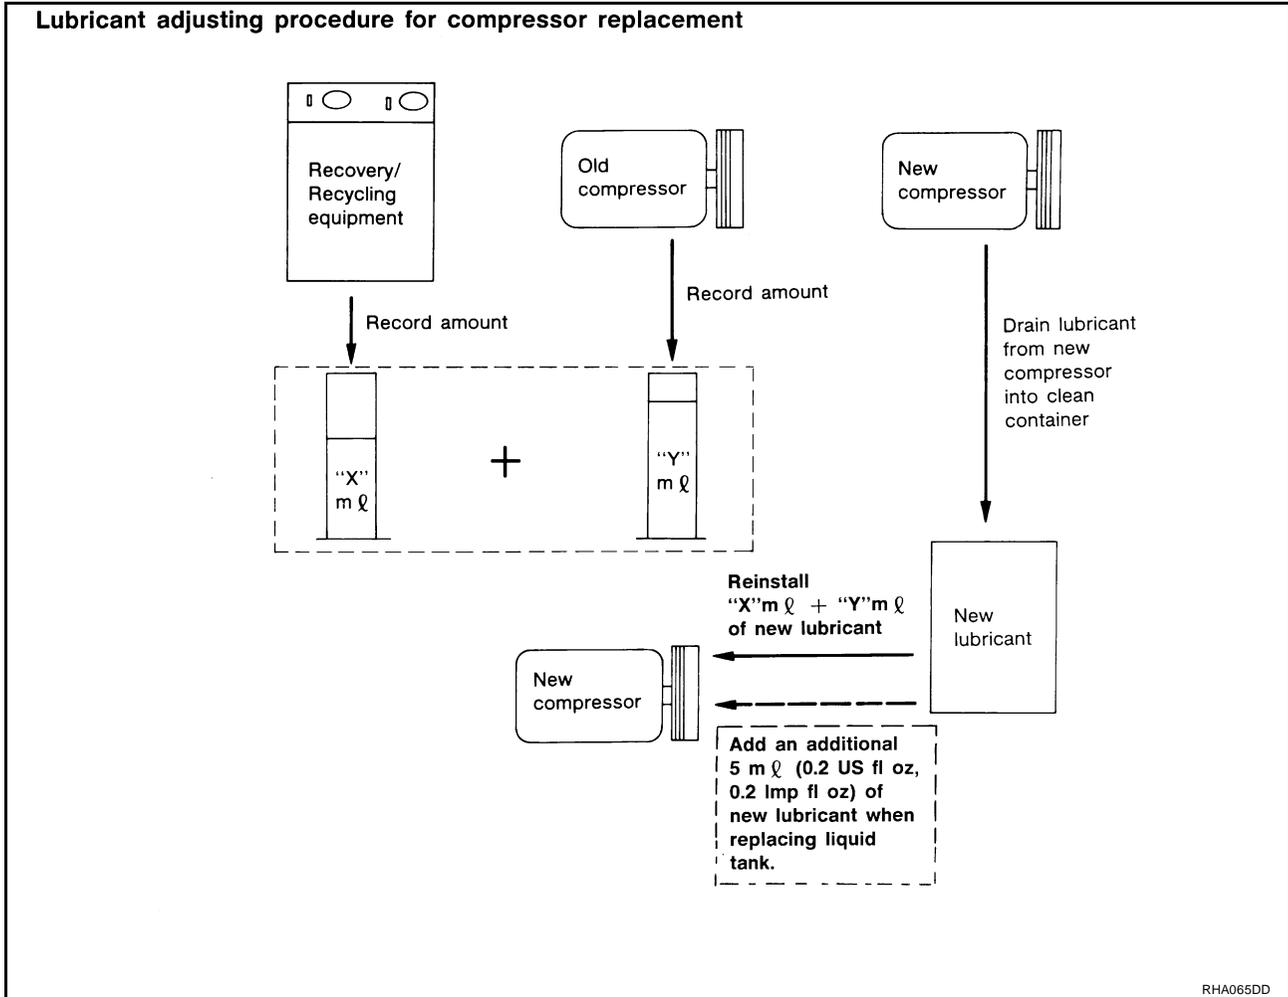

A
B
C
D
E
F
G
H
I
ATC
K
L
M

AIR CONDITIONER CONTROL

PFP:27500

Description

EJS002BW

The front air control provides automatic regulation of the vehicle's interior temperature. The system is based on the driver's and passenger's selected "set temperature", regardless of the outside temperature changes. This is done by utilizing a microcomputer that is part of the front air control, which receives input signals from the following five sensors:

- Ambient sensor
- In-vehicle sensor
- Intake sensor
- Optical sensor (one sensor for driver and passenger side)
- PBR (position balanced resistor)

The front air control uses these signals (including the set temperature) to automatically control:

- Outlet air volume
- Air temperature
- Air distribution

The front air control also provides separate regulation of the vehicle's interior temperature for the rear passenger area. The system is based on the temperature and rear blower settings selected on the front air control rear fan switch (front) and rear temperature/mode dial (front), or from the rear fan switch (rear) and rear temperature/mode dial (rear) on the rear air control, when the rear fan switch (front) is set to the rear (R) position.

The front air control or rear air control is used to select:

- Outlet air volume
- Air temperature/mode distribution

Operation

EJS002BX

AIR MIX DOORS CONTROL

The air mix doors are automatically controlled so that in-vehicle temperature is maintained at a predetermined value by the temperature setting, ambient temperature, in-vehicle temperature and amount of sunload.

FAN SPEED CONTROL

Blower speed is automatically controlled based on temperature setting, ambient temperature, in-vehicle temperature, intake temperature, amount of sunload and air mix door position.

When AUTO switch is pressed, the blower motor starts to gradually increase air flow volume (if required).

When engine coolant temperature is low, the blower motor operation is delayed to prevent cool air from flowing.

INTAKE DOOR CONTROL

The intake door is automatically controlled by the temperature setting, ambient temperature, in-vehicle temperature, intake temperature, amount of sunload and ON-OFF operation of the compressor.

MODE DOOR CONTROL


The mode door is automatically controlled by the temperature setting, ambient temperature, in-vehicle temperature, intake temperature and amount of sunload.

DEFROSTER DOOR CONTROL

The defroster door is controlled by turning the defroster dial to front defroster.

AIR CONDITIONER CONTROL

MAGNET CLUTCH CONTROL

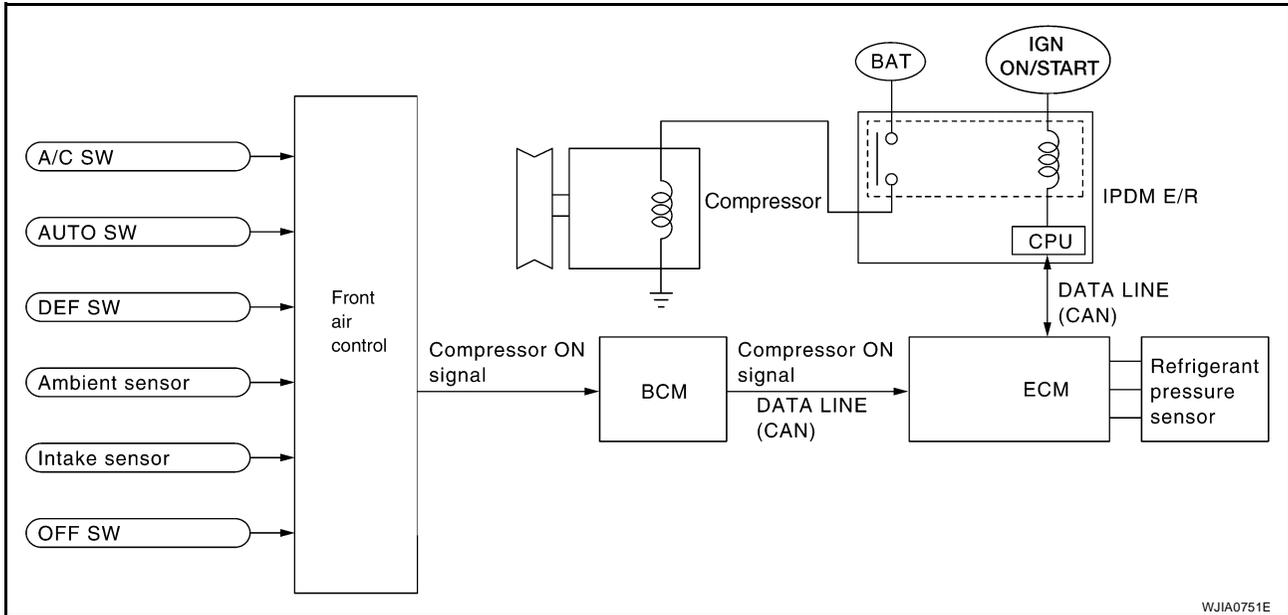

When the A/C or DEF switch is activated, the front air control outputs a compressor ON signal to the BCM. Upon receiving this input, the BCM sends a compressor ON signal to the ECM via CAN communication lines. The ECM then judges whether the compressor can be turned ON, based on each sensor status (refrigerant pressure sensor signal, throttle angle sensor, etc.). If it determines the compressor can be turned ON, a compressor ON signal is sent to the IPDM E/R via CAN communication lines. Upon receipt of a compressor ON signal, the IPDM E/R turns ON the A/C relay which engages the magnet clutch and operates the A/C compressor.

SELF-DIAGNOSTIC SYSTEM


A self-diagnostic system is built into the front air control to quickly locate the cause of symptoms. Refer to [ATC-53, "A/C System Self-diagnosis Function"](#)

AIR CONDITIONER CONTROL

EJS002BY

Description of Control System

The control system consists of input sensors, switches, the front air control (microcomputer) and outputs. The relationship of these components is shown in the figure below:

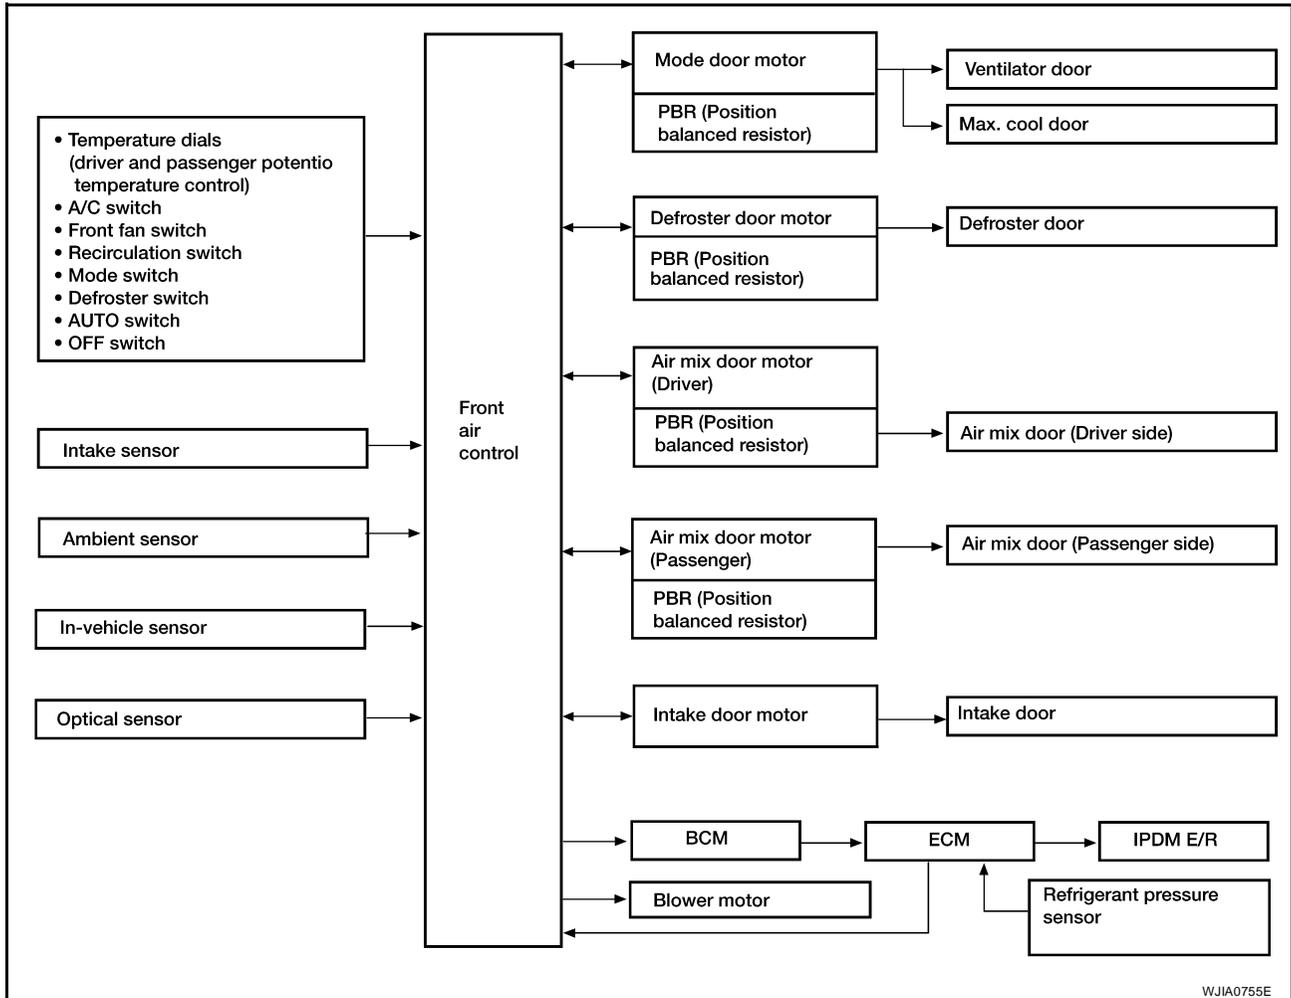


WJIA0755E

Control Operation

EJS002BZ

Front air control

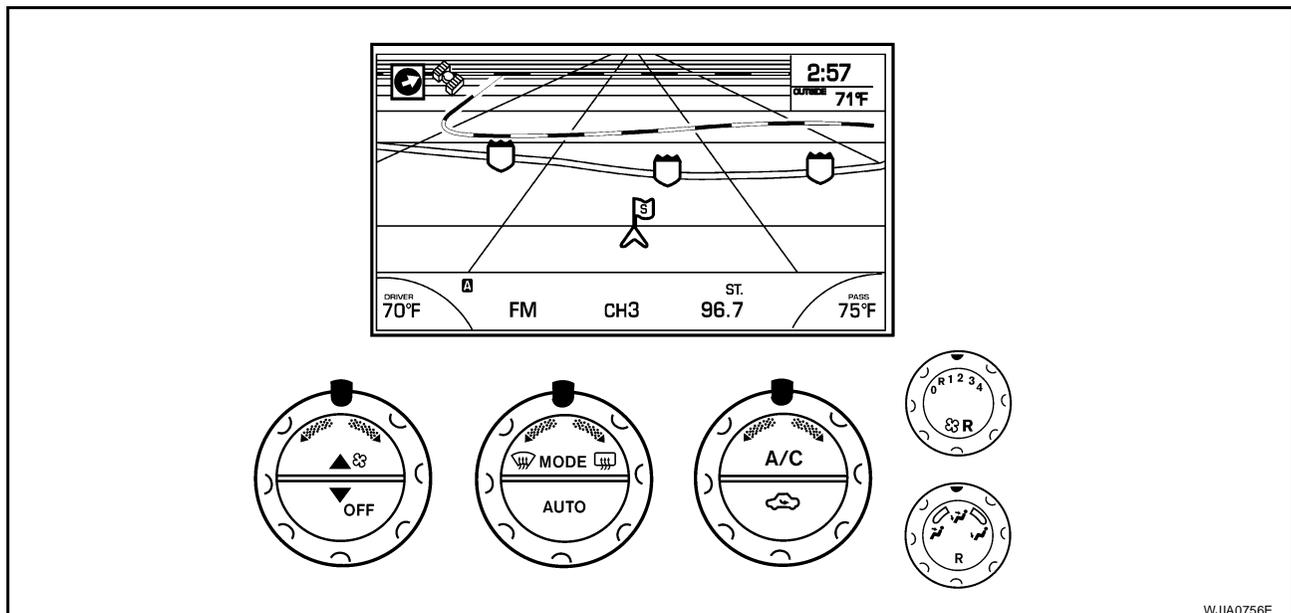

WJIA0756E

AIR CONDITIONER CONTROL

DISPLAY SCREEN

Displays the operational status of the system.

A

AUTO SWITCH

- The compressor, intake door, air mix doors, outlet doors and blower speed are automatically controlled so that the in-vehicle temperature will reach, and be maintained at the set temperature selected by the operator.

B

TEMPERATURE DIAL (DRIVER)

Increases or decreases the driver zone temperature.

C

TEMPERATURE DIAL (PASSENGER)

Increases or decreases the passenger zone temperature.

D

RECIRCULATION SWITCH ()

- When pressed an indicator turns ON in the display, and air inlet is set to recirculation mode.
- Recirculation mode is cancelled by pressing the switch again, turning ON the front defroster, pressing the OFF switch, or pressing the A/C switch to turn off the A/C system and compressor.

E

DEFROSTER () SWITCH

Positions the air outlet doors to the defrost position. Also positions the intake door to the outside air position.

F

REAR WINDOW DEFOGGER SWITCH

When switch is ON, rear window is defogged.

G

OFF SWITCH (HOLD FAN DOWN SWITCH UNTIL SYSTEM SHUTS OFF)

The compressor and blower are OFF, the intake door is set to the outside air position, and the air outlet doors are set to the foot (75% foot and 25% defrost) position.

H

A/C SWITCH

The compressor is ON or OFF.

(Pressing the A/C switch when the AUTO switch is ON will turn off the A/C switch and compressor.)

I

MODE SWITCH

Controls the air discharge outlets.

ATC

FRONT FAN SWITCH

Manually controls the blower speed. Seven speeds are available for manual control (as shown on the display screen).

K

REAR FAN SWITCH (FRONT)

Manually controls the rear blower speed. Four speeds are available for manual control. When the rear fan switch (front) is in the off (0) position, the rear blower motor cannot operate. Position (R) allows control of rear blower speed and rear temperature/mode operation to be transferred to rear air control.

L


REAR TEMPERATURE/MODE DIAL (FRONT)

Increases or decreases the rear zone temperature and adjusts the mode simultaneously. FLOOR is full hot setting, FLOOR/PANEL is warm setting, and PANEL is full cold setting.

M

AIR CONDITIONER CONTROL

Rear Air Control

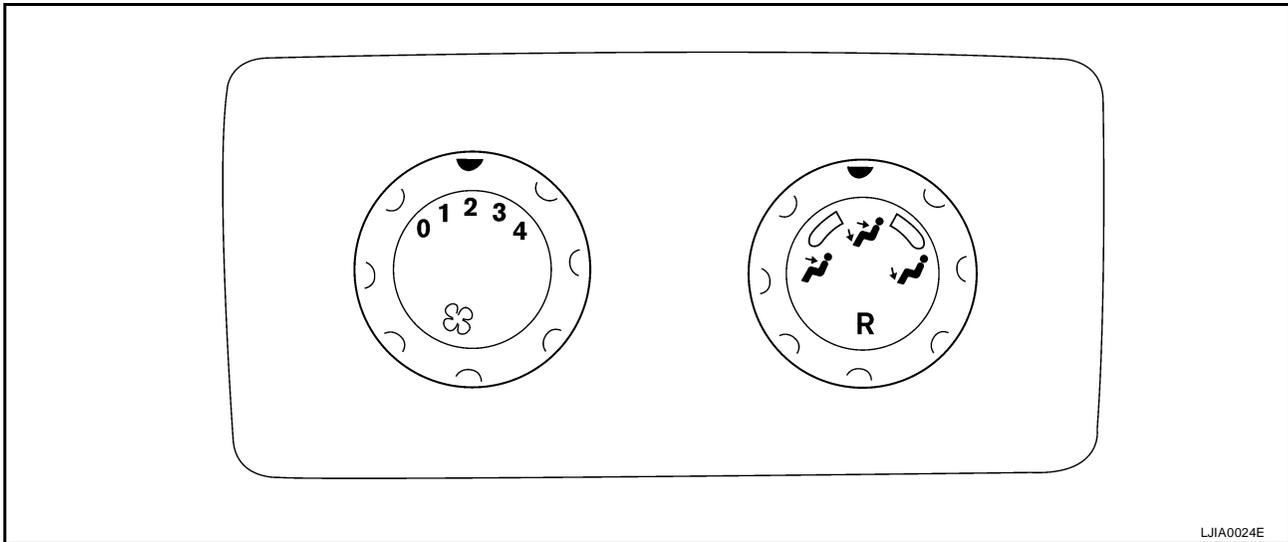

REAR TEMPERATURE/MODE DIAL (REAR)

Increases or decreases the rear zone temperature and adjusts the mode simultaneously. FLOOR is full hot setting, FLOOR/PANEL is warm setting, and PANEL is full cold setting. Operates only with rear fan switch (front) is in the (R) position.


REAR FAN CONTROL SWITCH (REAR)

When the rear fan switch (front) is in the (R) position, it allows the rear fan switch (rear) to control the blower motor speed. In any other position (1-4), the rear fan switch (front) controls the rear blower motor speed regardless of the rear fan switch (rear) position.

AIR CONDITIONER CONTROL

Discharge Air Flow FRONT

EJS002C0

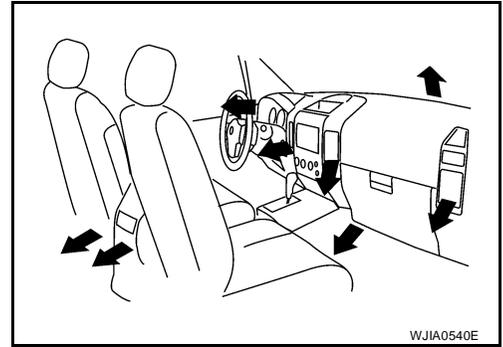


Discharge air flow

Mode door position	Air outlet/distribution		
	Vent	Foot	Defroster
	100%	—	—
	50%	50%	—
	—	75%(100%)	25% (—)
	—	60%	40%
	—	—	100%

() : Manually control

WJIA0528E

REAR

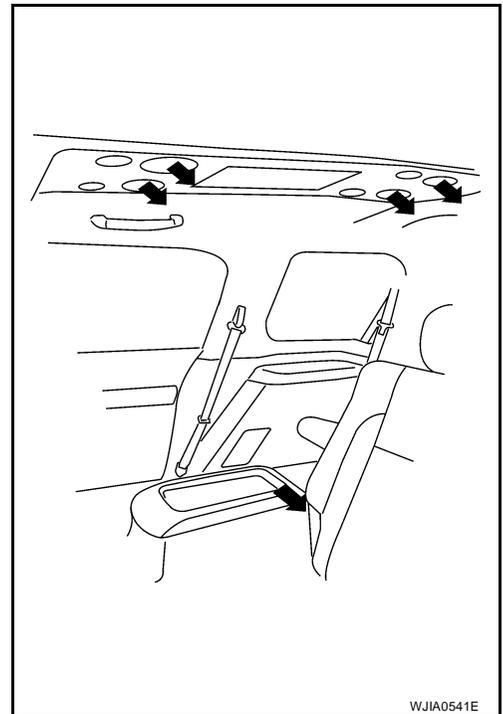

Discharge air flow

Mode door position	Air outlet/distribution	
	Vent	Foot
	100%	—
	50%	50%
	—	100%

WJIA0893E


A
B
C
D
E
F
G
H
I
K
L
M

ATC

AIR CONDITIONER CONTROL

System Description (Front) CONTROLS AND THEIR FUNCTIONS

EJS002C1

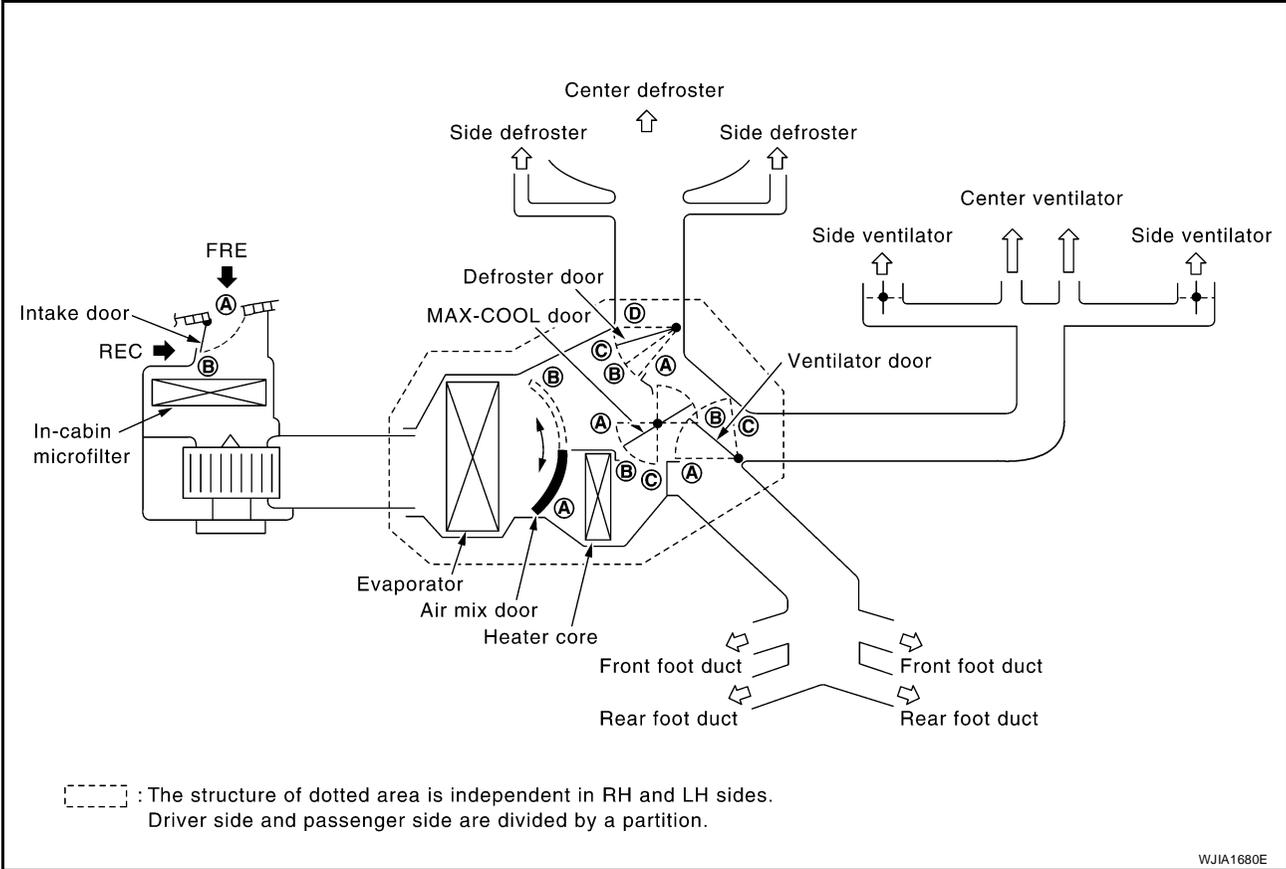

WJIA1680E


Position or switch	MODE SW				DEF SW		REC SW		Temperature dial		
	VENT	B/L	FOOT	D/F	ON	OFF	ON	OFF			
						FRONT			COLD	~	HOT
Ventilator door	(A)	(B)	(C)	(C)	(C)	FRONT	—	—	—	—	—
MAX-COOL door	(A)	(B)	(B)	(B)	(C)		—	—	—	—	—
Defroster door	(D)	(D)	(D _{or} C)	(B)	(A)		—	—	—	—	—
Intake door	—				(B)		(A)	(B)	—	—	—
Air mix door	—				—		—	(A)	(B)	(A)	(B)

WJIA0757E


AIR CONDITIONER CONTROL

System Description (Rear) CONTROLS AND THEIR FUNCTIONS

EJS002C2

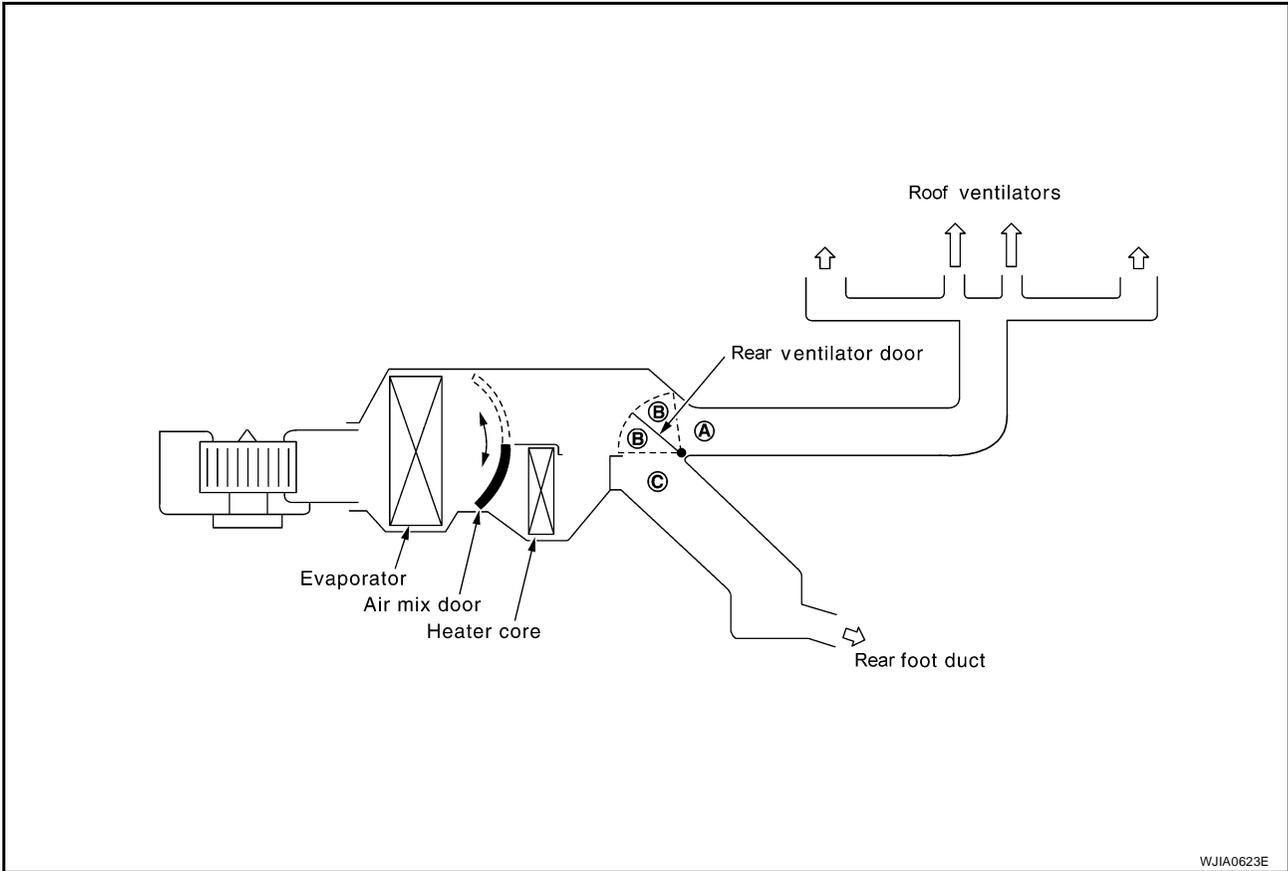

WJIA0623E

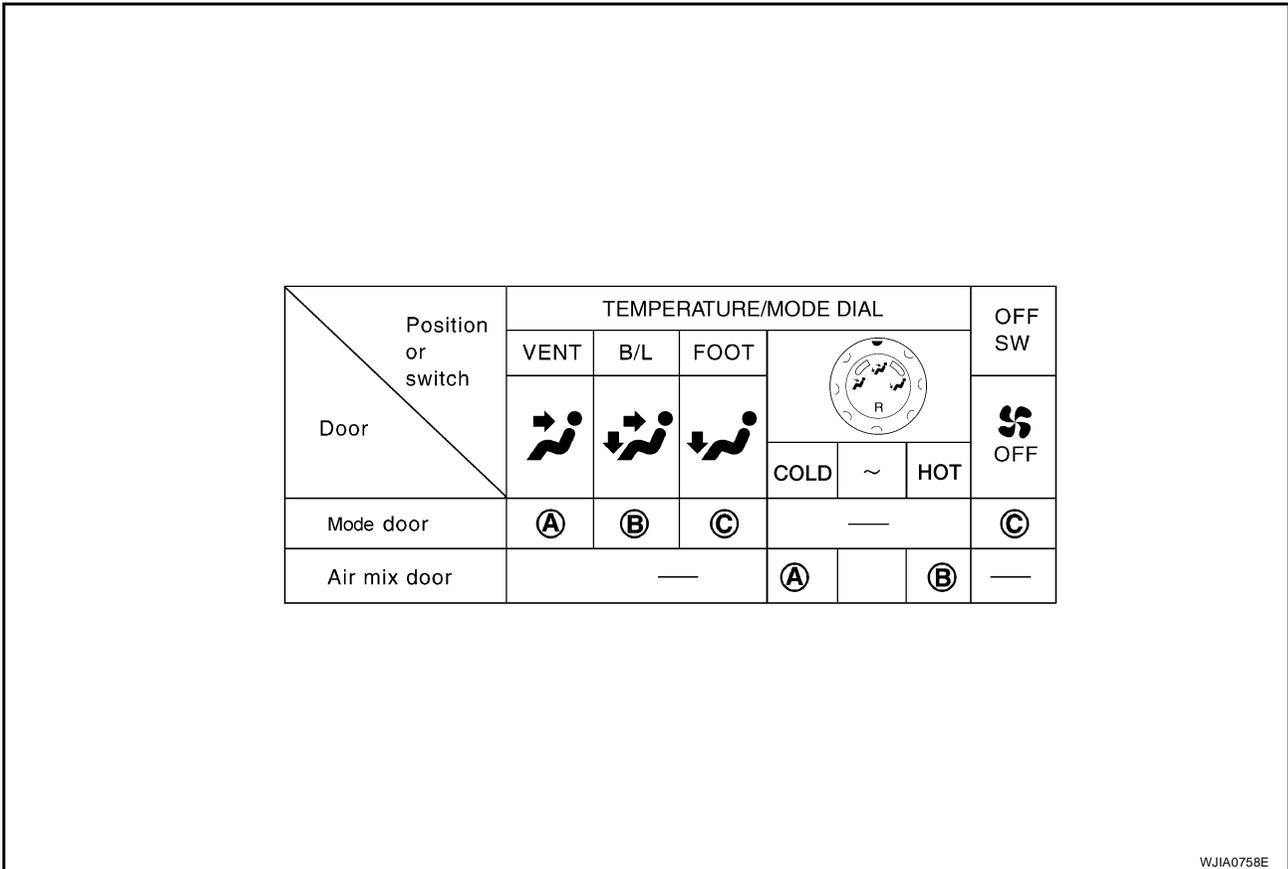

WJIA0758E

A
B
C
D
E
F
G
H
I

ATC

K
L
M

CAN Communication System Description

EJS002C3

Refer to [LAN-5, "CAN COMMUNICATION"](#) .

TROUBLE DIAGNOSIS

TROUBLE DIAGNOSIS

PFP:00004

CONSULT-II Function (BCM)

EJS002C4

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn the ignition switch ON.

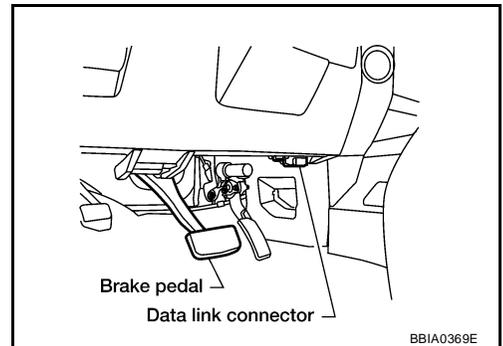

2. Touch "START (NISSAN BASED VHCL)".

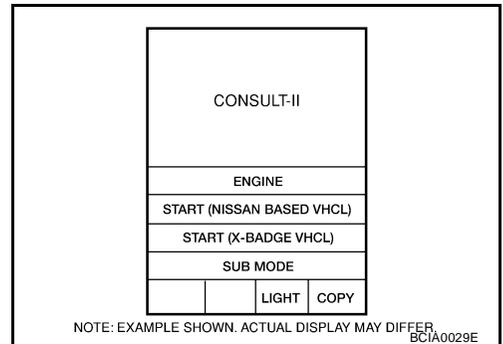

3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

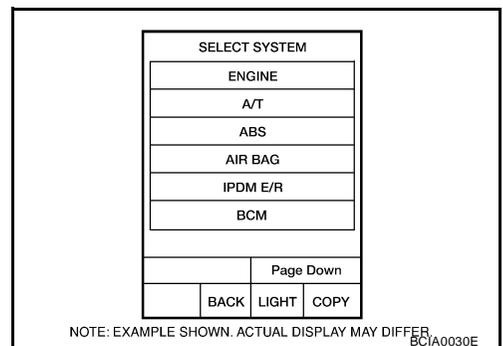


TROUBLE DIAGNOSIS


DATA MONITOR

Operation Procedure

1. Touch "AIR CONDITIONER" on "SELECT TEST ITEM" screen.

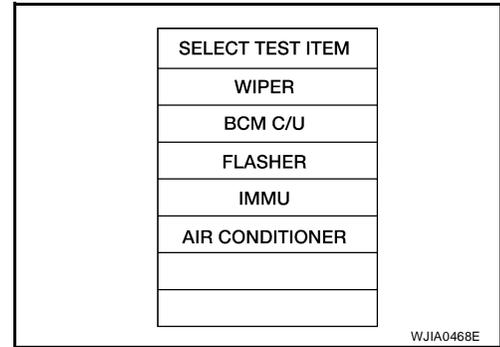

2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.

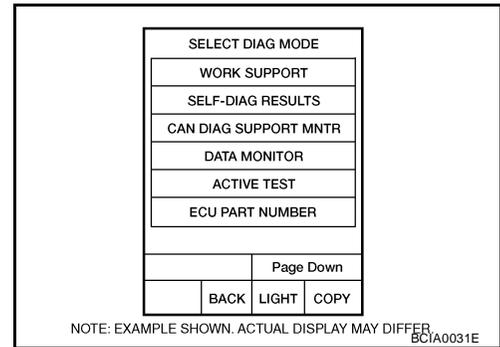


3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "DATA MONITOR" screen.

All signals	Monitors all the items.
Selection from menu	Selects and monitors the individual item selected.

4. Touch "START".

5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.

6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

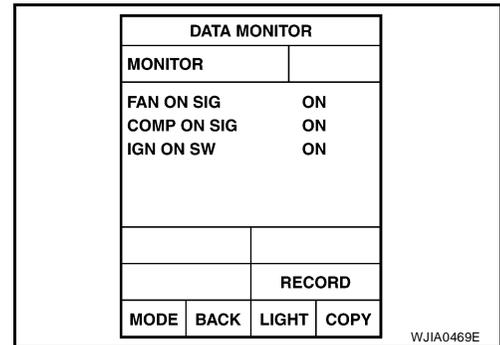


Display Item List

Monitor item name "operation or unit"	Contents
IGN ON SW "ON/OFF"	Displays "IGN Position (ON)/OFF, ACC Position (OFF)" status as judged from ignition switch signal.
COMP ON SIG "ON/OFF"	Displays "COMP (ON)/COMP (OFF)" status as judged from air conditioner switch signal.
FAN ON SIG "ON/OFF"	Displays "FAN (ON)/FAN (OFF)" status as judged from blower motor switch signal.

TROUBLE DIAGNOSIS

How to Perform Trouble Diagnosis for Quick and Accurate Repair WORK FLOW

EJS002C5

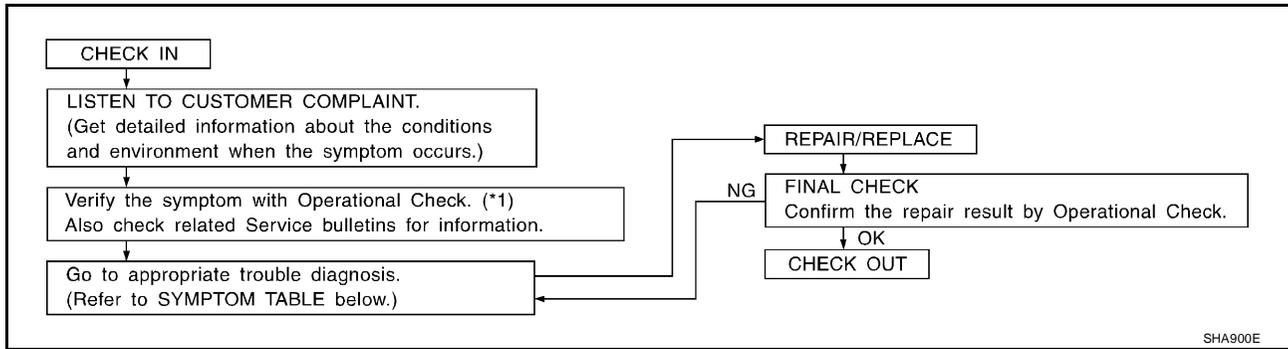

*1 [ATC-56, "Operational Check \(Front\)"](#)
or [ATC-59, "Operational Check
\(Rear\)"](#) .

SYMPTOM TABLE

Symptom	Reference Page	
A/C system does not come on.	Go to Trouble Diagnosis Procedure for A/C System.	ATC-60, "Power Supply and Ground Circuit for Front Air Control"
A/C system display is malfunctioning.	Go to "Navigation System".	AV-61, "NAVIGATION SYSTEM"
A/C system cannot be controlled.	Go to Self-diagnosis Function.	ATC-53, "A/C System Self-diagnosis Function"
Air outlet does not change.	Go to Trouble Diagnosis Procedure for Mode Door Motor.	ATC-63, "Mode Door Motor Circuit"
Mode door motor is malfunctioning.		
Discharge air temperature does not change.	Go to Trouble Diagnosis Procedure for Air Mix Door Motor.	ATC-67, "Air Mix Door Motor Circuit"
Air mix door motor is malfunctioning.		
Intake door does not change.	Go to Trouble Diagnosis Procedure for Intake Door Motor.	ATC-76, "Intake Door Motor Circuit"
Intake door motor is malfunctioning.		
Defroster door motor is malfunctioning.	Go to Trouble Diagnosis Procedure for Defroster Door Motor.	ATC-79, "Defroster Door Motor Circuit"
Front blower motor operation is malfunctioning.	Go to Trouble Diagnosis Procedure for Front Blower Motor.	ATC-83, "Front Blower Motor Circuit"
Rear blower motor operation is malfunctioning.	Go to Trouble Diagnosis Procedure for Rear Blower Motor.	ATC-90, "Rear Blower Motor Circuit"
Rear discharge air temperature and/or air outlet does not change.	Go to Trouble Diagnosis Procedure for Rear Air Control circuit.	ATC-101, "Rear Air Control Circuit"
Magnet clutch does not engage.	Go to Trouble Diagnosis Procedure for Magnet Clutch.	ATC-104, "Magnet Clutch Circuit"
Insufficient cooling	Go to Trouble Diagnosis Procedure for Insufficient Cooling.	ATC-110, "Insufficient Cooling"
Insufficient heating	Go to Trouble Diagnosis Procedure for Insufficient Heating.	ATC-117, "Insufficient Heating"
Noise	Go to Trouble Diagnosis Procedure for Noise.	ATC-118, "Noise"


TROUBLE DIAGNOSIS

Symptom	Reference Page	
Self-diagnosis cannot be performed.	Go to Trouble Diagnosis Procedure for Self-diagnosis.	ATC-120, "Self-diagnosis"
Memory function does not operate.	Go to Trouble Diagnosis Procedure for Memory Function.	ATC-121, "Memory Function"

TROUBLE DIAGNOSIS

Component Parts and Harness Connector Location ENGINE COMPARTMENT

EJS002C6

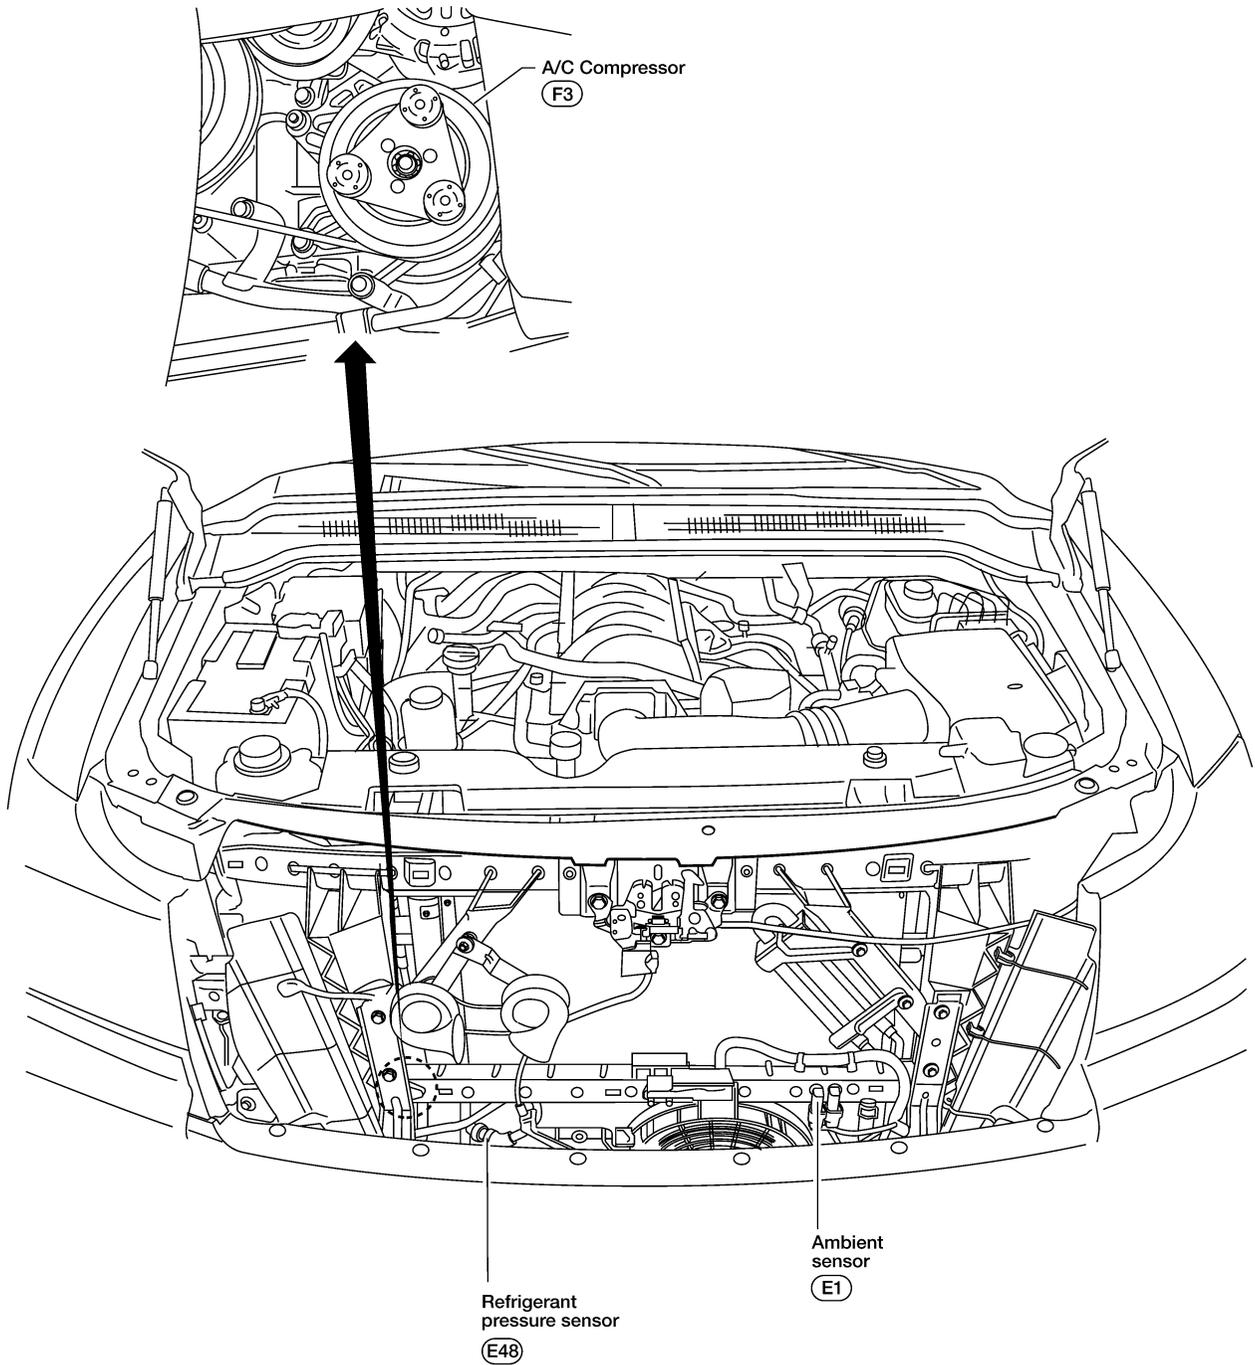

A

B

C

D

E

F

G

H

I

ATC

K


L

M

WJIA0833E

TROUBLE DIAGNOSIS


FRONT PASSENGER COMPARTMENT

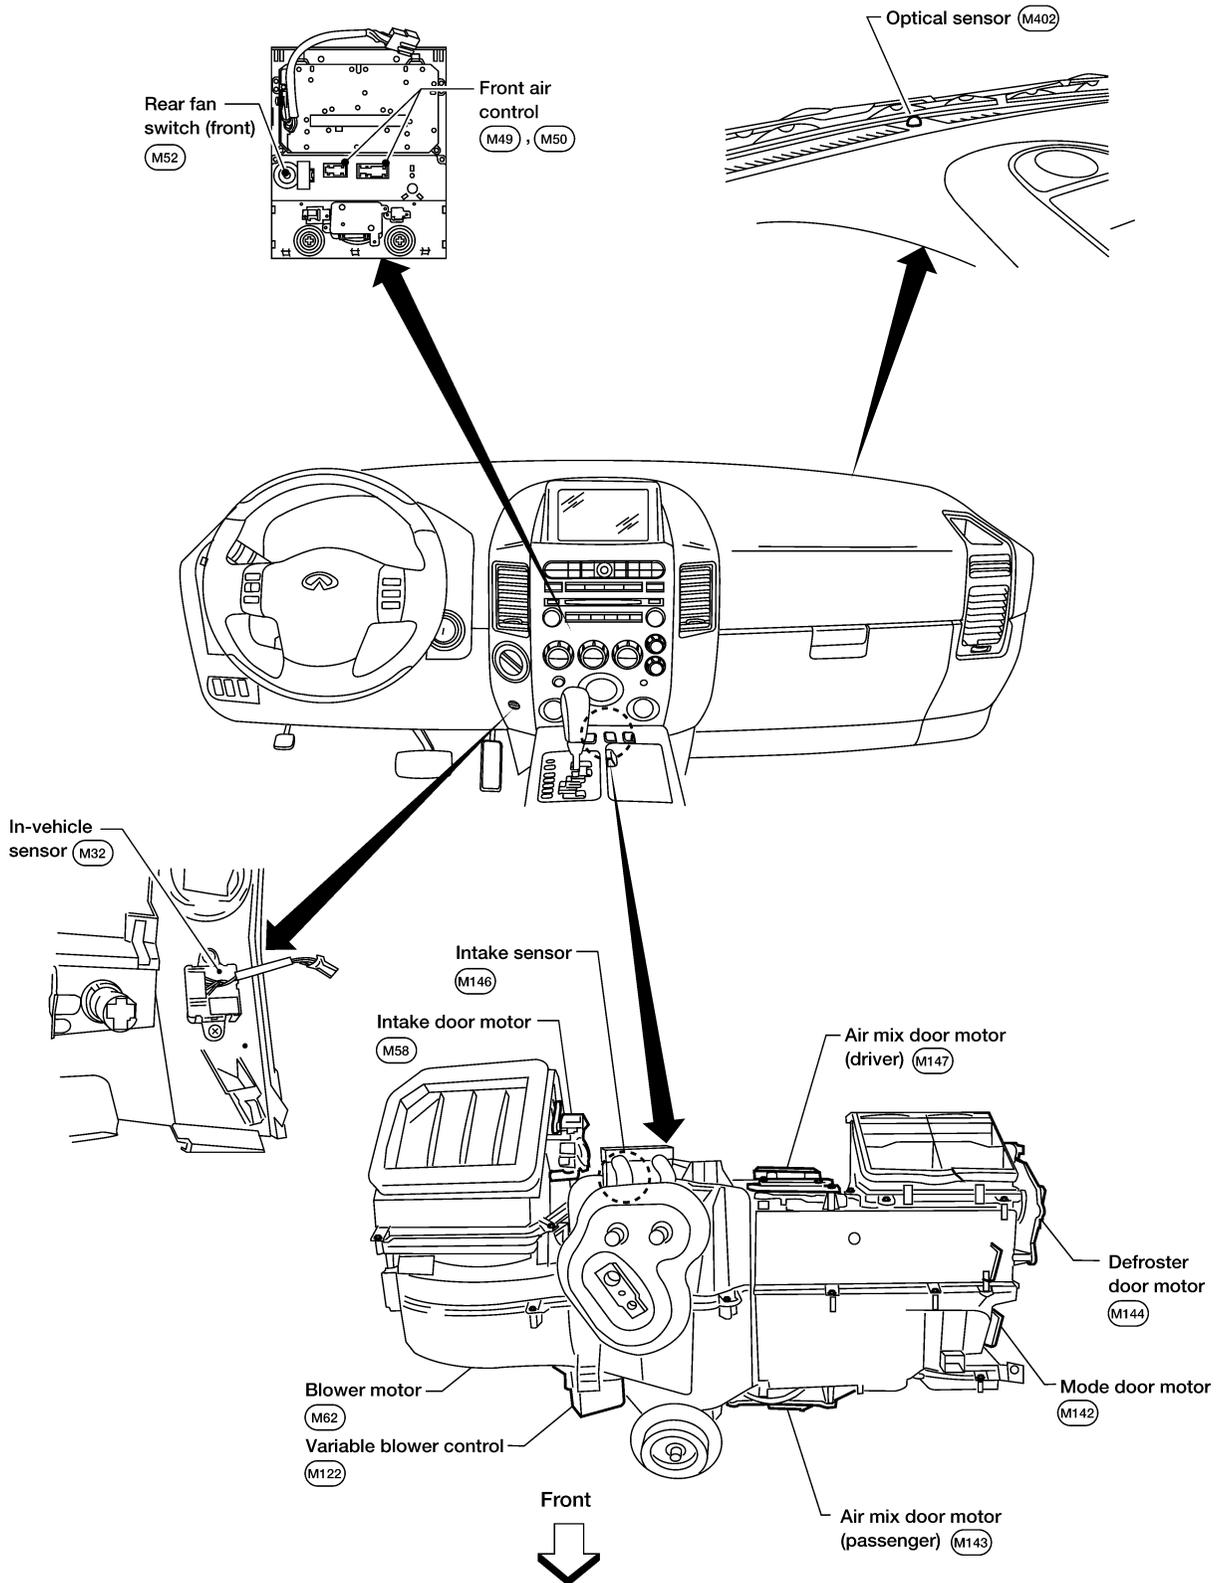

WJIA0834E

TROUBLE DIAGNOSIS

REAR PASSENGER COMPARTMENT

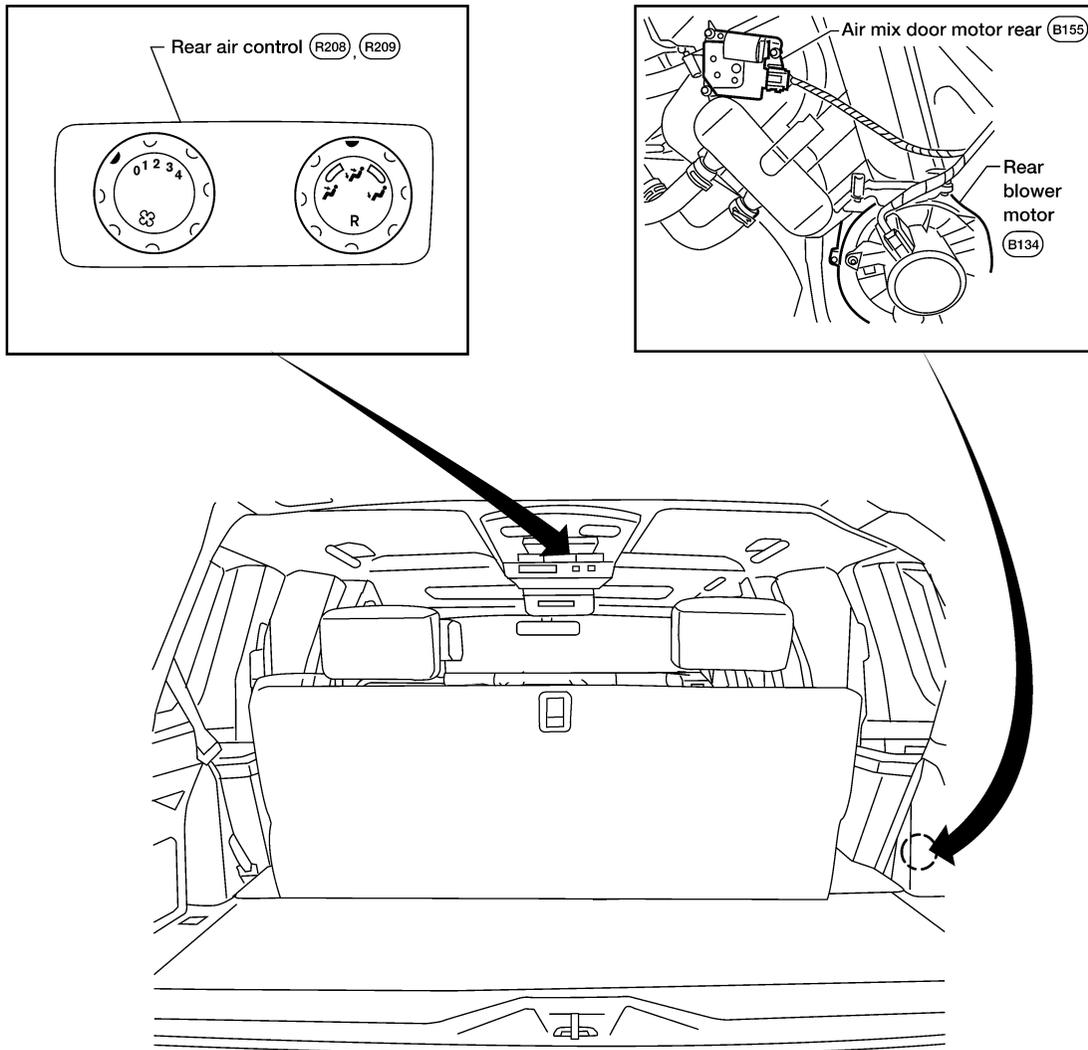

A

B

C

D

E

F

G

H

I

ATC

K

L


M

WJIA0835E

TROUBLE DIAGNOSIS

Schematic

EJS002C7

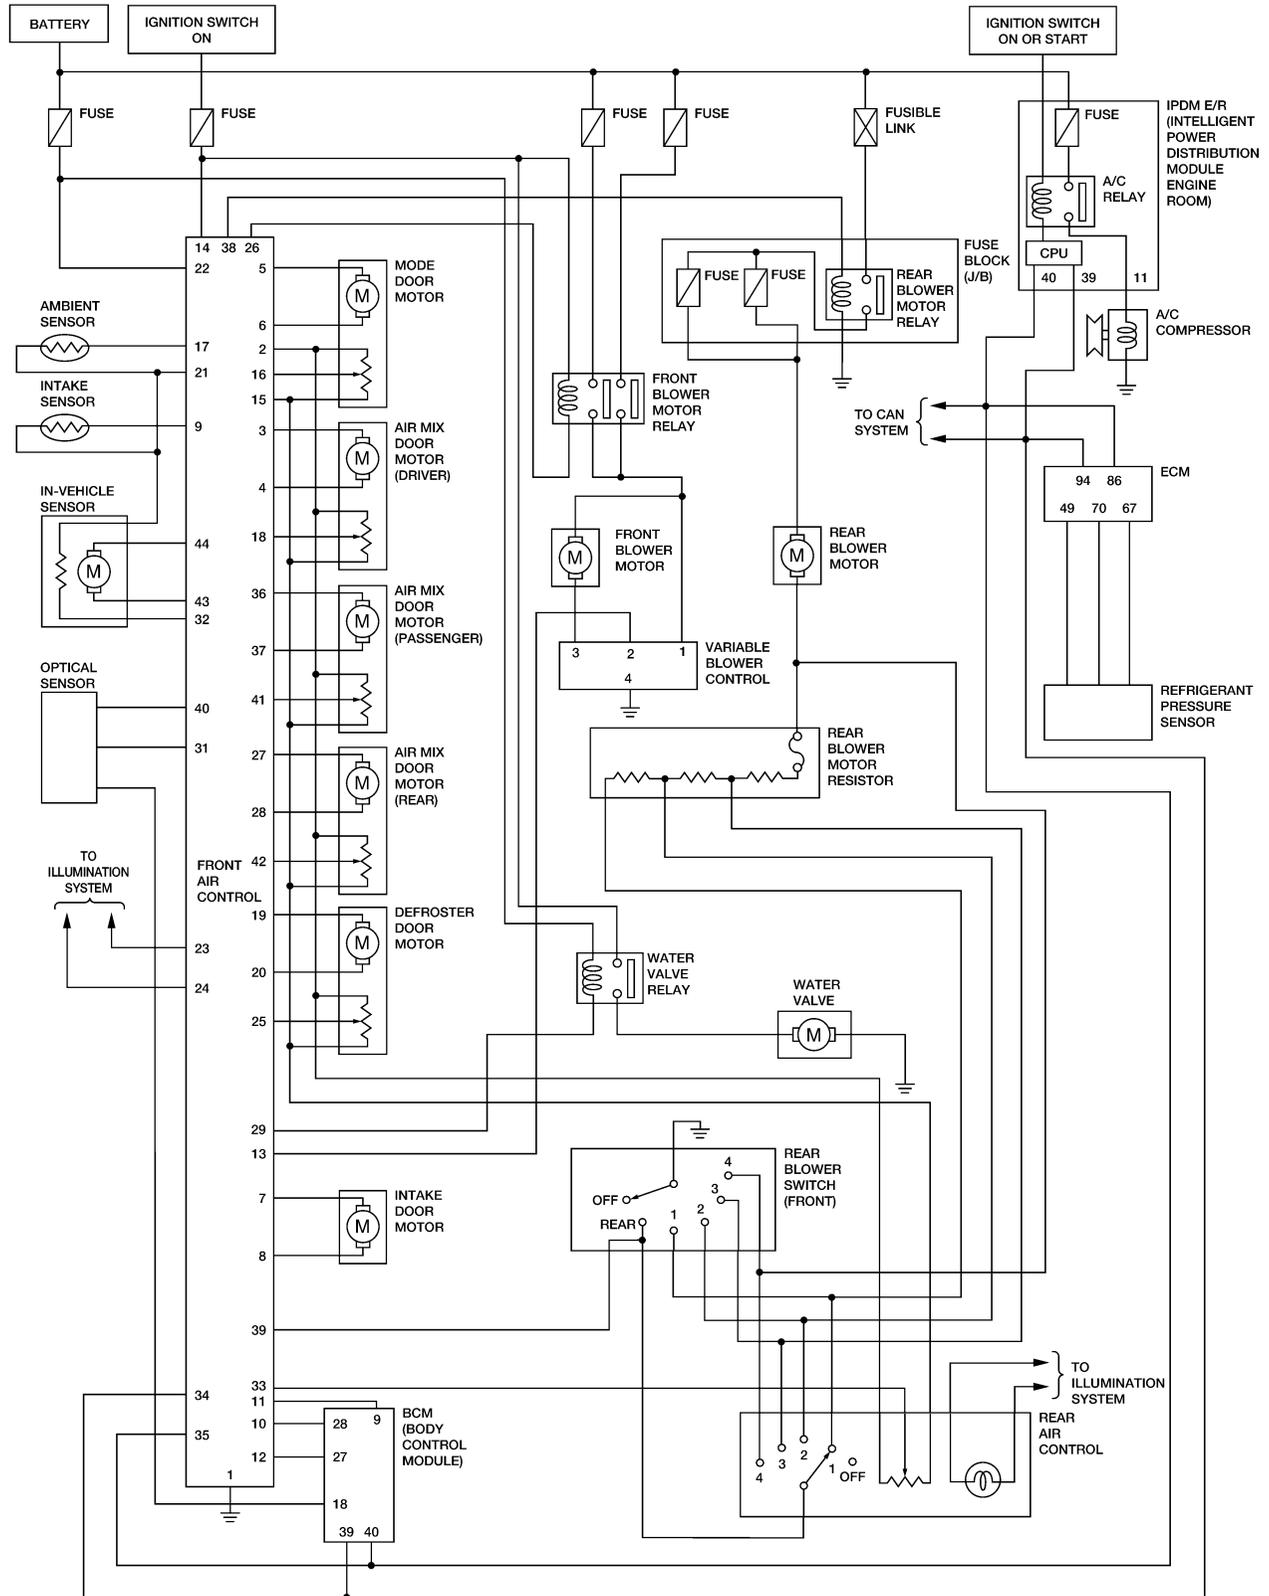



WJWA0206E

TROUBLE DIAGNOSIS

Wiring Diagram — A/C,A —



EJS002C8

ATC-A/C,A-01

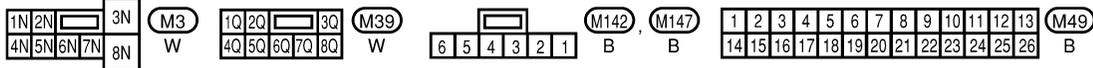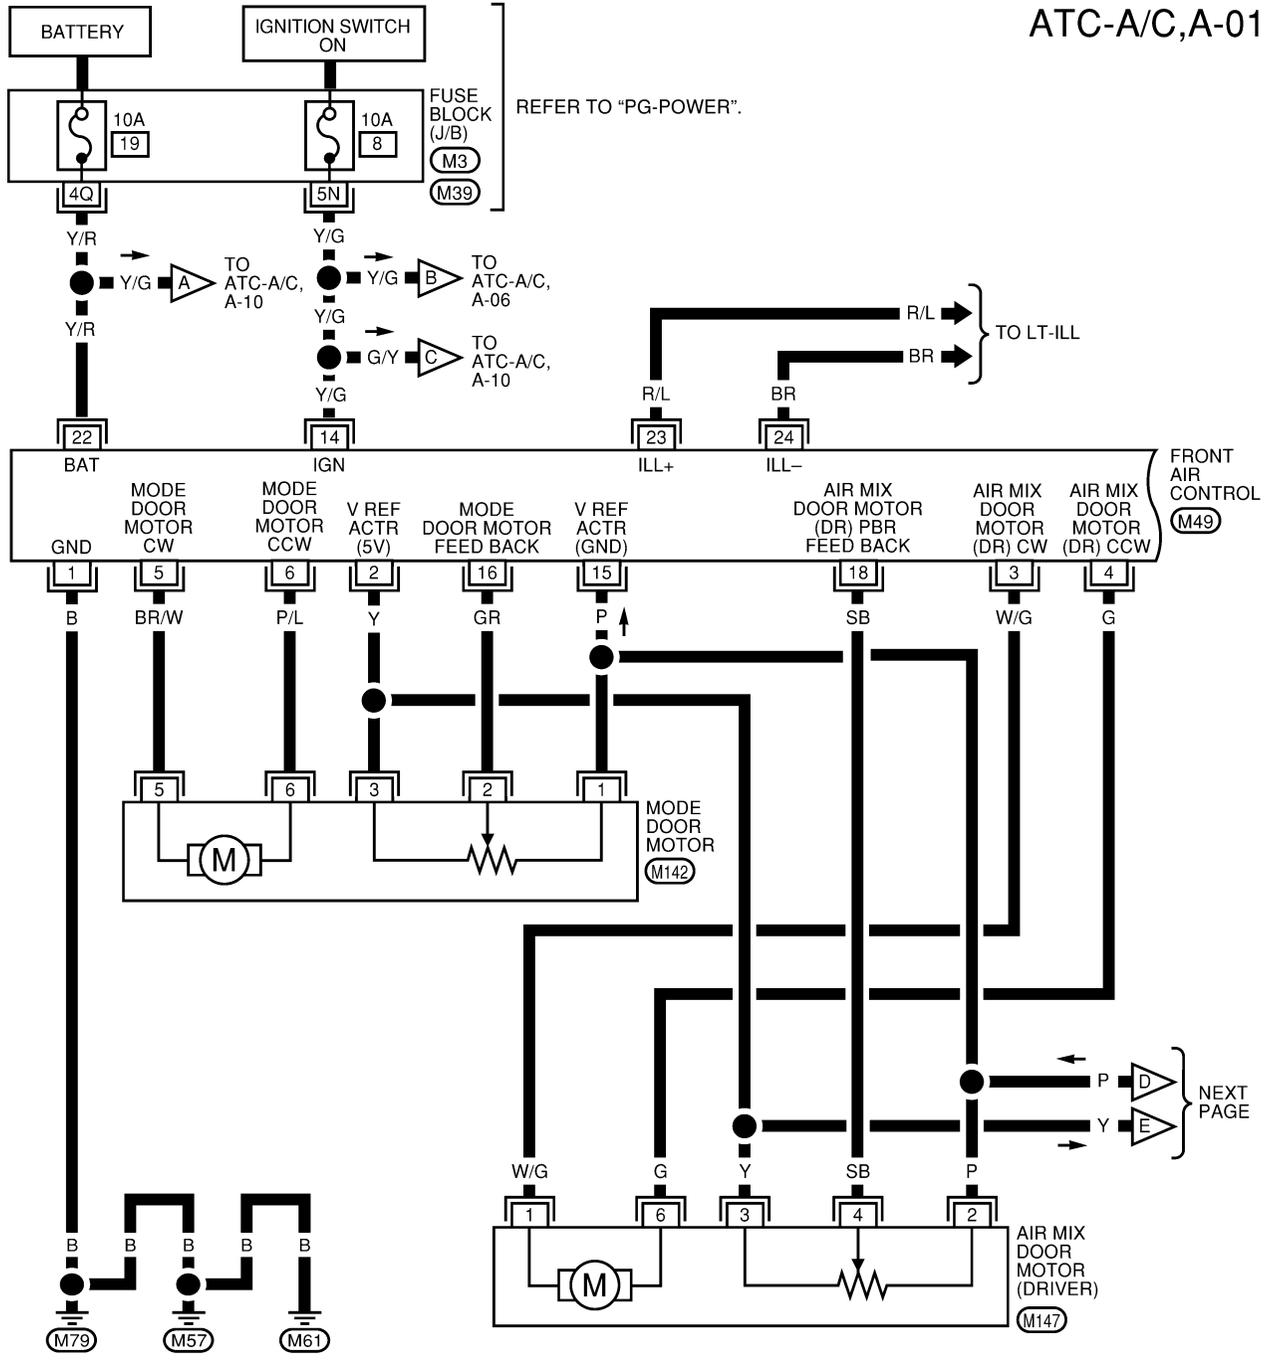

TROUBLE DIAGNOSIS

ATC-A/C,A-02

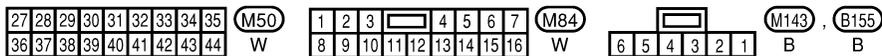
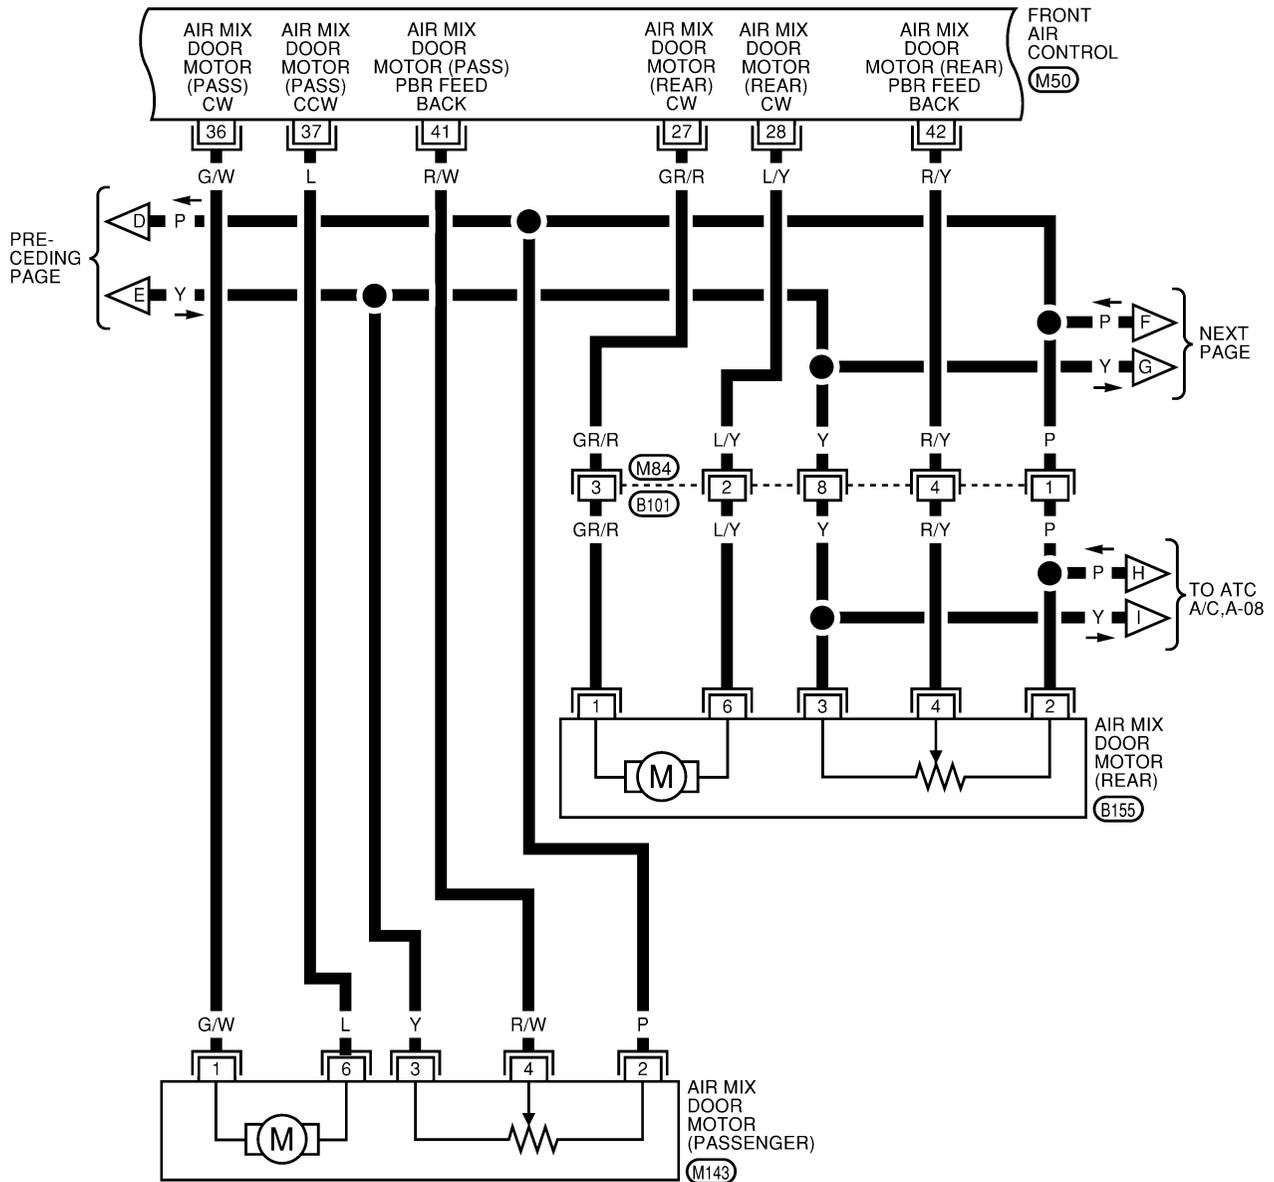


WJWA0119E

TROUBLE DIAGNOSIS

ATC-A/C,A-03





▬ : DATA LINE

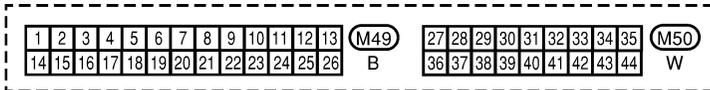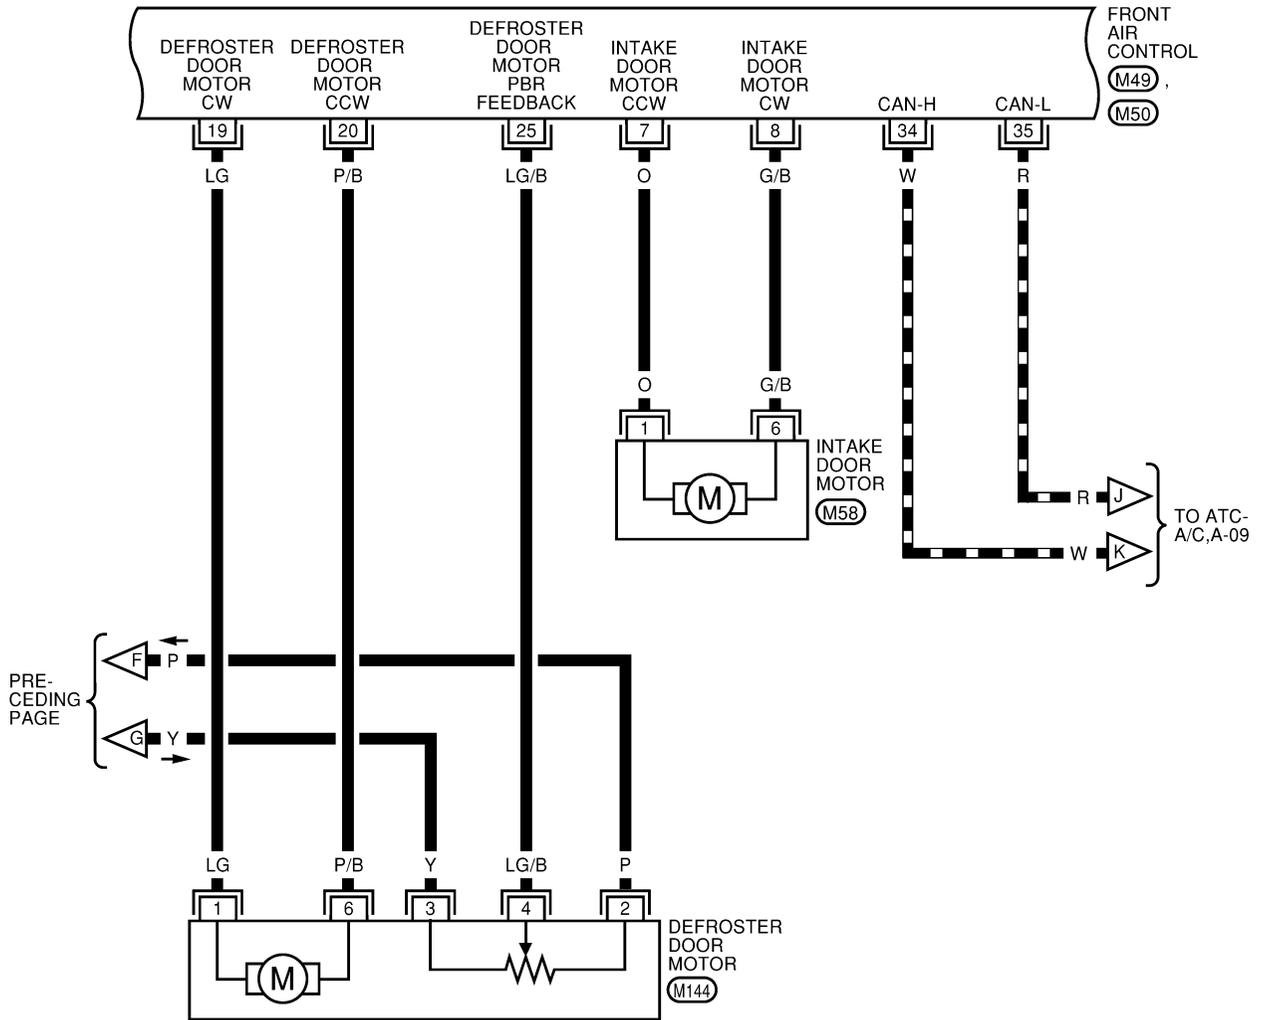

WJWA0120E

TROUBLE DIAGNOSIS

ATC-A/C,A-04

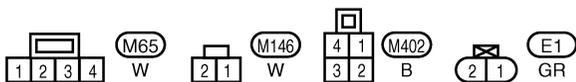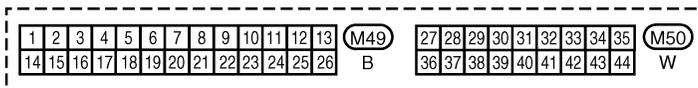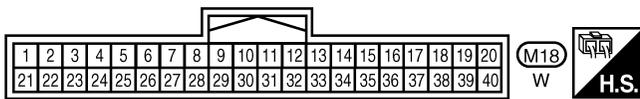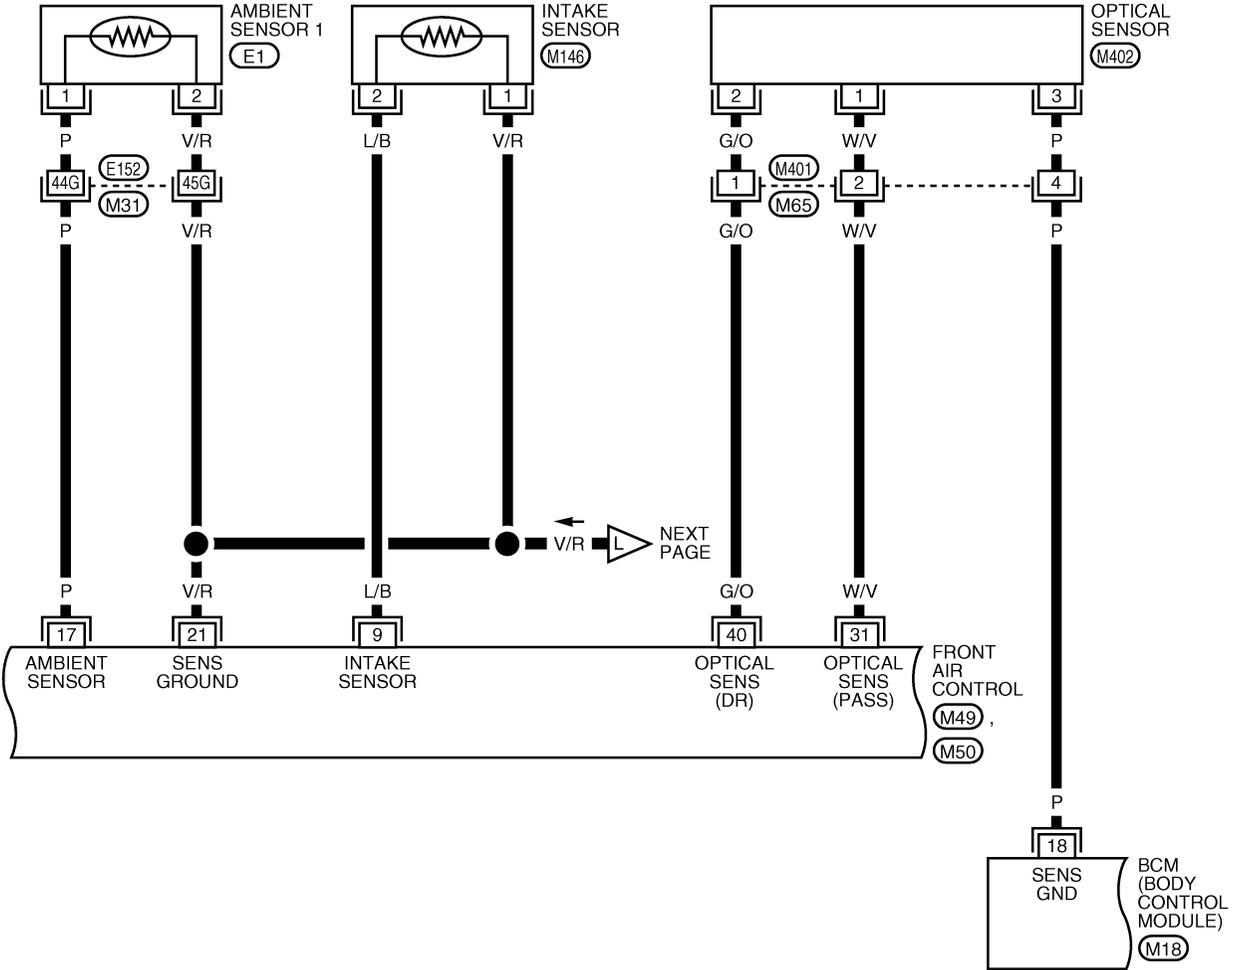

REFER TO THE FOLLOWING.


(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WJWA0121E


TROUBLE DIAGNOSIS

ATC-A/C,A-05

A
B
C
D
E
F
G
H
I
K
L
M

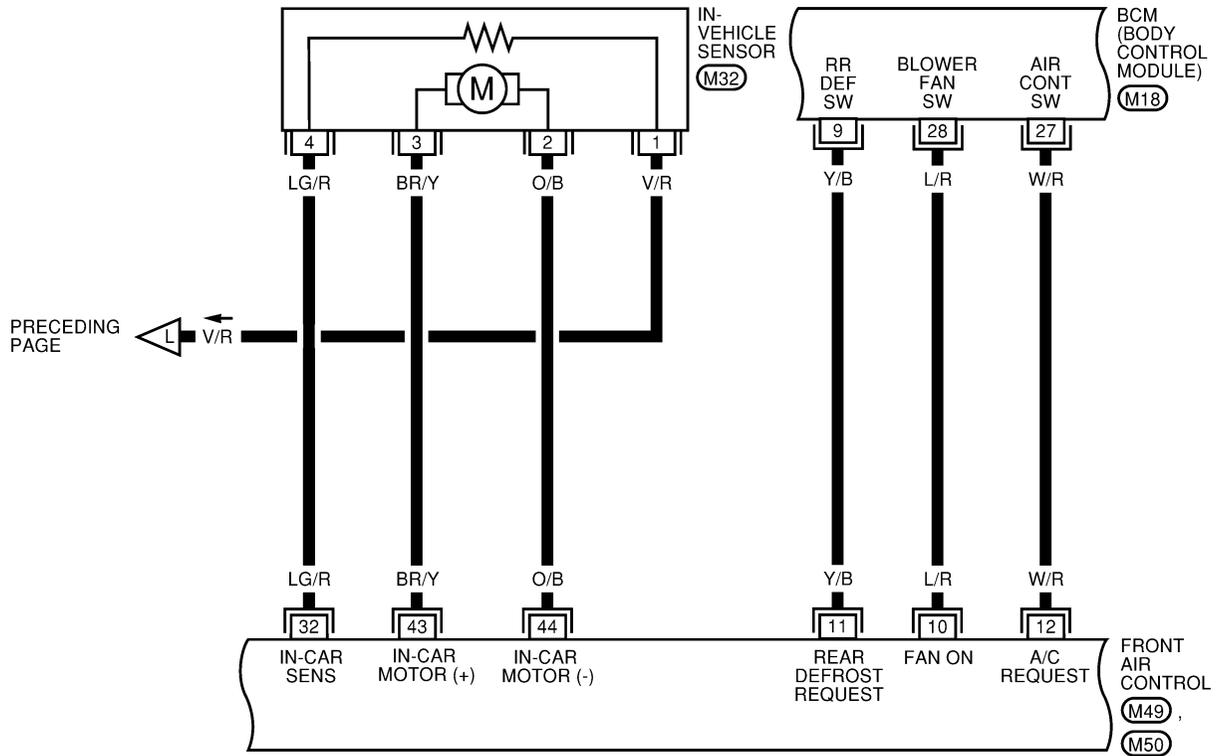


ATC

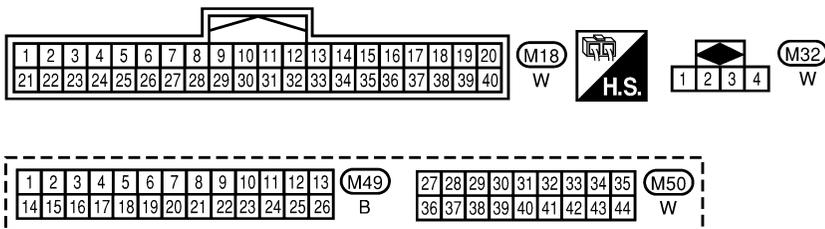

WJWA0122E

TROUBLE DIAGNOSIS

ATC-A/C,A-06

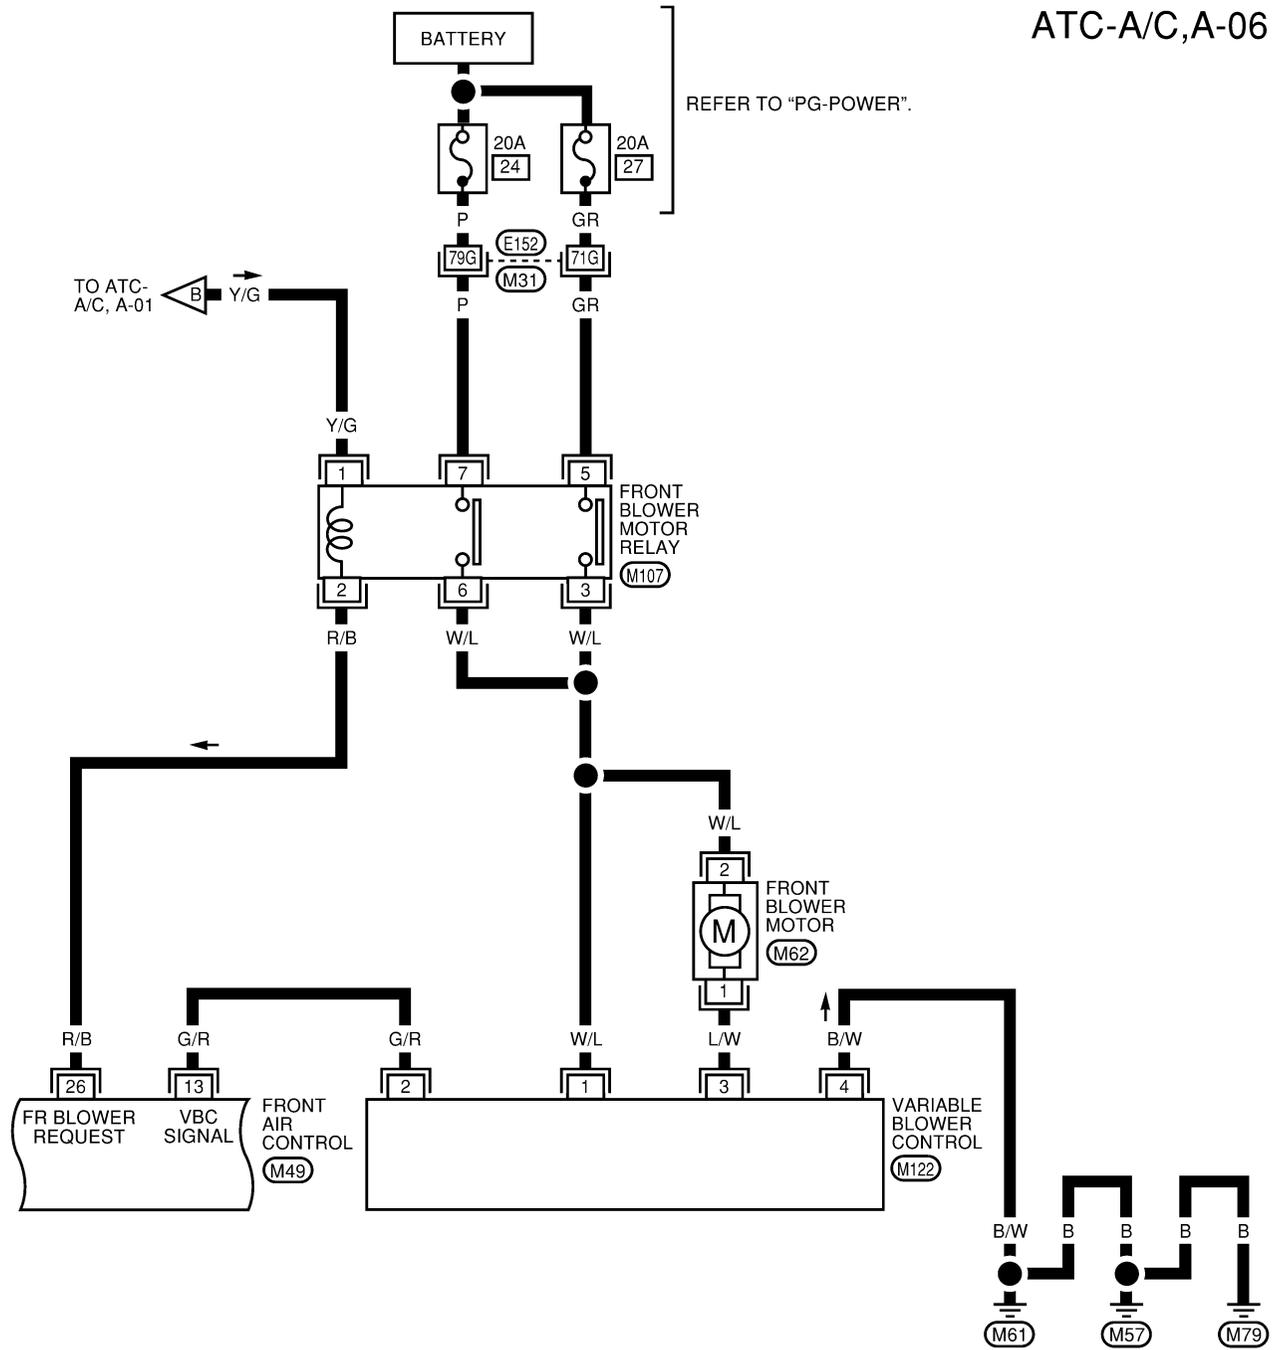

REFER TO "PG-POWER".

TO ATC-A/C, A-01
B Y/G

REFER TO THE FOLLOWING.
 (M31) - SUPER
 MULTIPLE JUNCTION (SMJ)

1	2	3	4	5	6	7	8	9	10	11	12	13	(M49)
14	15	16	17	18	19	20	21	22	23	24	25	26	B

2	1	(M62)
B		


1	2	3	4	(M122)
B				

1	2	(M107)
5	7	BR
3	6	

WJWA0123E

TROUBLE DIAGNOSIS

ATC-A/C,A-07






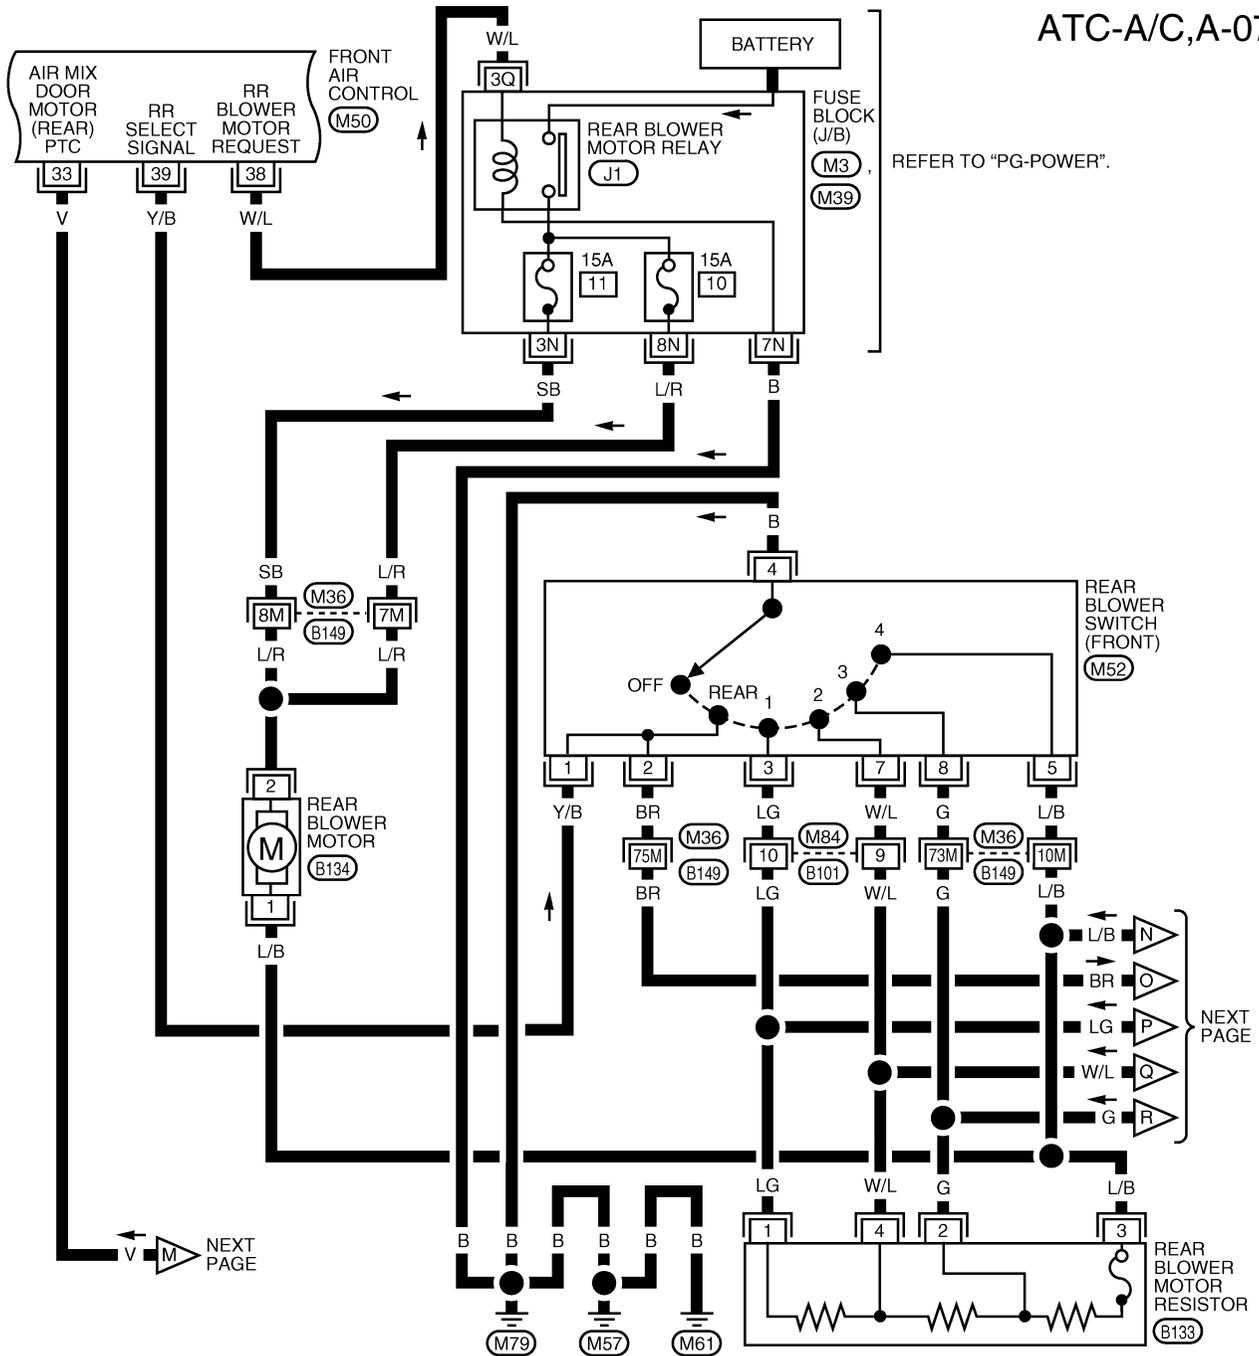


A
B
C
D
E
F
G
H
I
K
L
M

ATC

REFER TO THE FOLLOWING.



(M36) - SUPER MULTIPLE JUNCTION (SMJ)

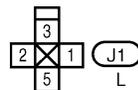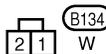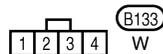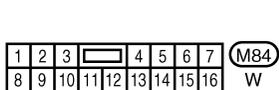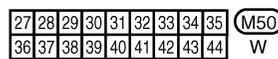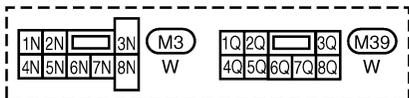

WJWA0161E

TROUBLE DIAGNOSIS

ATC-A/C,A-09

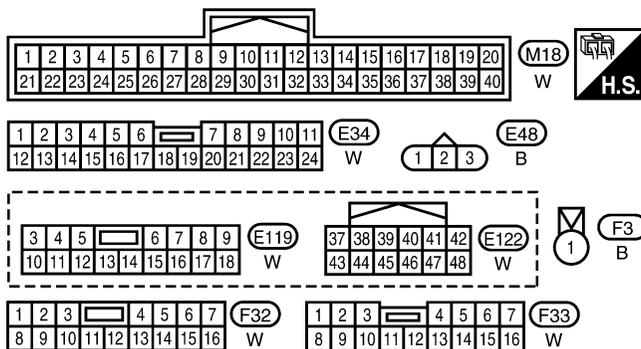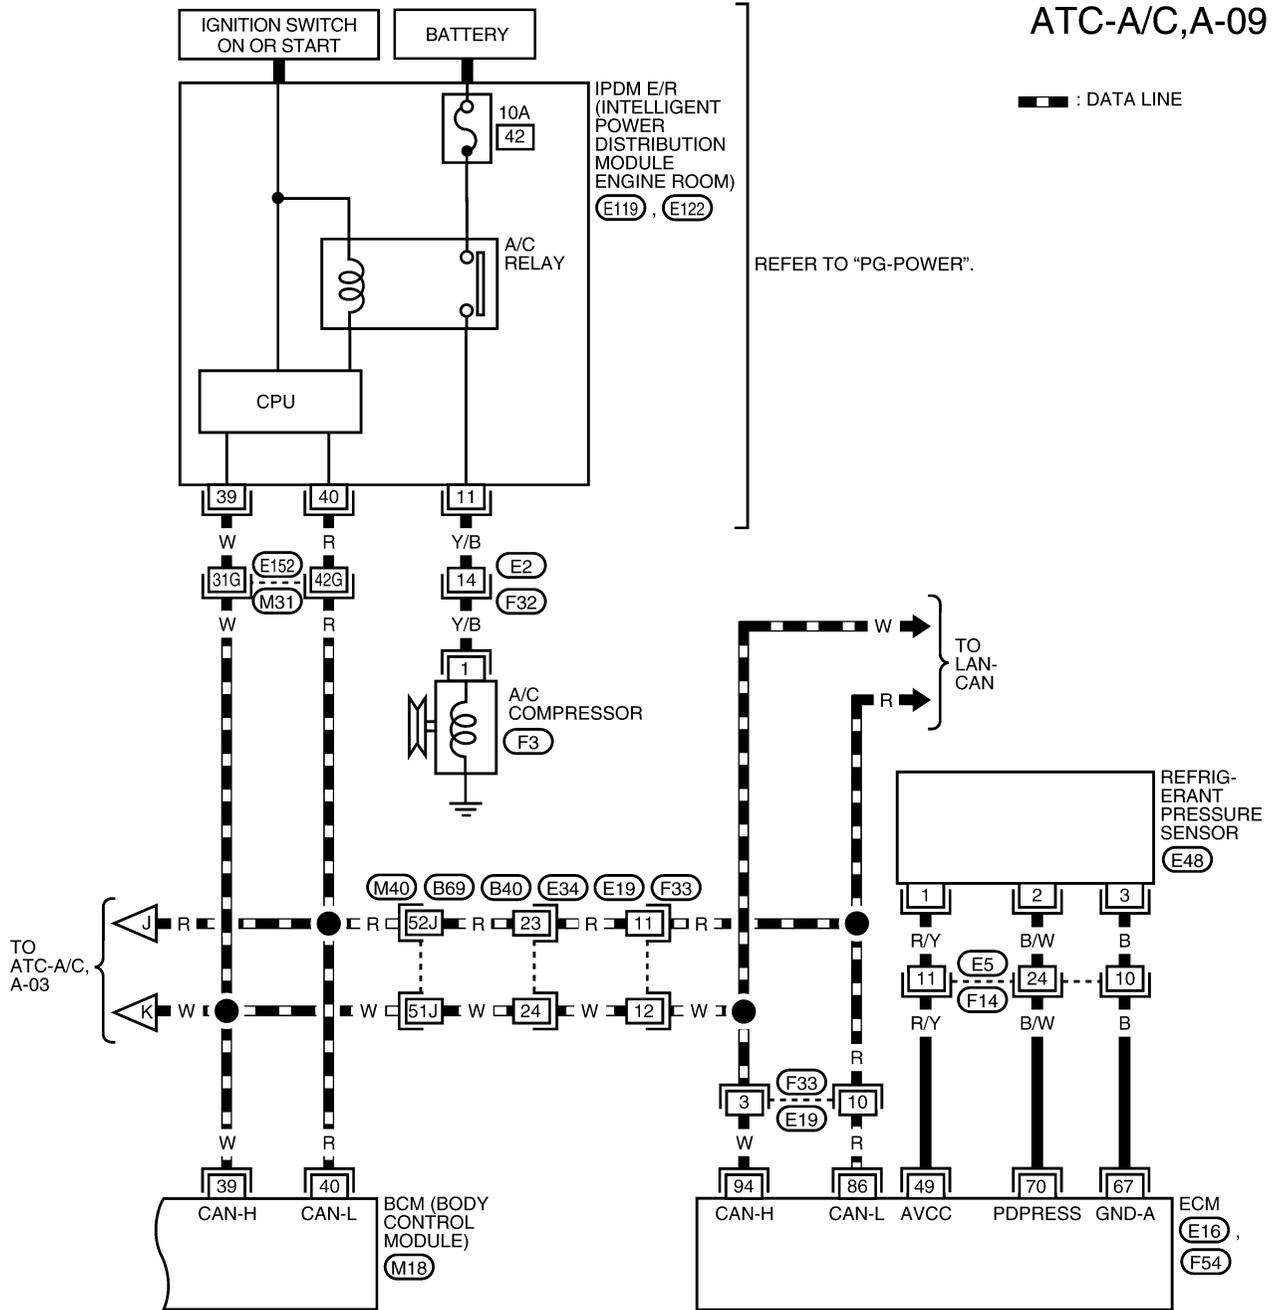

REFER TO THE FOLLOWING.



(E16), (F54) - ELECTRICAL UNITS

(M31), (M40) - SUPER MULTIPLE JUNCTION (SMJ)

WJWA0126E

TROUBLE DIAGNOSIS

ATC-A/C,A-10

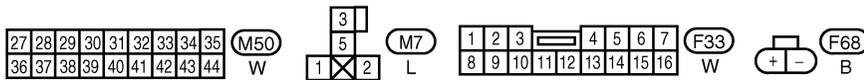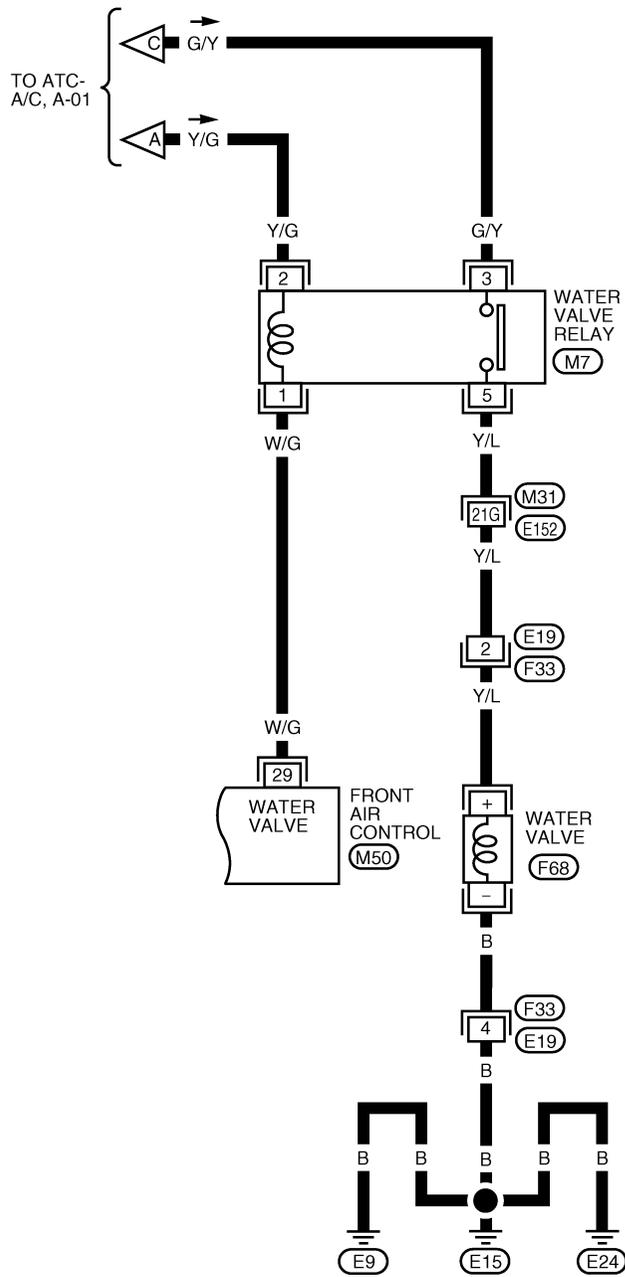

REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)


WJWA0136E

TROUBLE DIAGNOSIS


EJS002C9

Front Air Control Terminals and Reference Value

Measure voltage between each terminal and ground by following Terminals and Reference Value for Front Air Control.

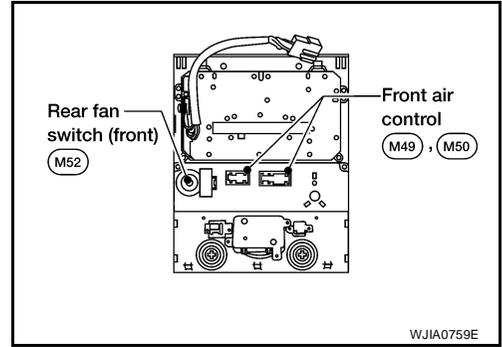

PIN CONNECTOR TERMINAL LAYOUT

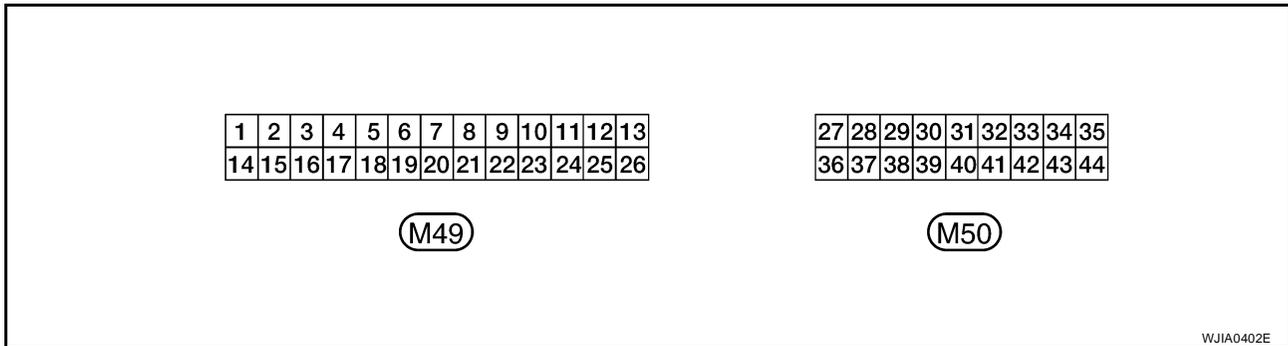


TERMINALS AND REFERENCE VALUE FOR FRONT AIR CONTROL

Terminal No.	Wire color	Item	Ignition switch	Condition	Voltage (V) (Approx.)
1	B	Ground	-	-	0V
2	Y	Power supply for each door motor PBR	ON	-	0 - 5V
3	W/G	Air mix door motor (Driver) CW	ON	Clockwise rotation	Battery voltage
4	G	Air mix door motor (Driver) CCW	ON	Counterclockwise rotation	Battery voltage
5	BR/W	Mode door motor CW	ON	Clockwise rotation	Battery voltage
6	P/L	Mode door motor CCW	ON	Counterclockwise rotation	Battery voltage
7	O	Intake door motor CCW	ON	Counterclockwise rotation	Battery voltage
8	G/B	Intake door motor CW	ON	Clockwise rotation	Battery voltage
9	L/B	Intake sensor	ON	-	0 - 5V
10	L/R	Fan ON signal	ON	Fan switch OFF	5V
				Fan switch ON	0V
11	Y/B	Rear defroster request	ON	-	Battery voltage
12	W/R	Compressor ON signal	ON	A/C switch OFF	5V
				A/C switch ON	0V
13	G/R	Variable blower control	ON	-	0 - 5V
14	Y/G	Power supply for IGN	ON	-	Battery voltage
15	P	Ground for each door motor PBR	ON	-	0 - 5V
16	GR	Mode door motor PBR feedback	ON	-	0 - 5V
17	P	Ambient sensor	ON	-	0 - 5V
18	SB	Air mix door motor (Driver) PBR feedback	ON	-	0 - 5V
19	LG	Defroster door motor CW	ON	Clockwise rotation	Battery voltage
20	P/B	Defroster door motor CCW	ON	Counterclockwise rotation	Battery voltage

A
B
C
D
E
F
G
H
I
K
L
M

ATC

TROUBLE DIAGNOSIS

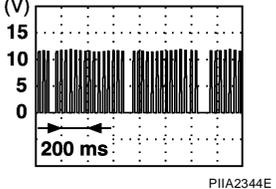Terminal No.	Wire color	Item	Ignition switch	Condition	Voltage (V) (Approx.)
21	V/R	Sensor ground	ON	-	0 - 5V
22	Y/R	Power supply for BAT	-	-	Battery voltage
23	R/L	Power supply for illumination	ON	Park lamps ON	Battery voltage
24	BR	Illumination ground	-	Park lamps ON	
25	LG/B	Defroster door motor feedback	ON	-	0 - 5V
26	R/B	Front blower motor request	ON	Front blower motor OFF	Battery voltage
				Front blower motor ON	0V
27	GR/R	Air mix door motor (Rear) CW	ON	Clockwise rotation	Battery voltage
28	L/Y	Air mix door motor (Rear) CCW	ON	Counterclockwise rotation	Battery voltage
29	W/G	Water valve	ON	Water valve open	0V
				Water valve closed	5V
31	W/V	Optical sensor (Passenger)	ON	-	0 - 5V
32	LG/R	In-vehicle sensor signal	ON	-	0 - 5V
33	V	Air mix door motor (Rear) set point	ON	-	0 - 5V
34	W	CAN-H	ON	-	-
35	R	CAN-L	ON	-	-
36	G/W	Air mix door motor (Passenger) CW	ON	Clockwise rotation	Battery voltage
37	L	Air mix door motor (Passenger) CCW	ON	Counter clockwise rotation	Battery voltage
38	W/L	Rear blower motor request	ON	Rear blower motor OFF	Battery voltage
				Rear blower motor ON	0V
39	Y/B	Rear select signal	ON	-	0 - 5V
40	G/O	Optical sensor (Driver)	ON	-	0 - 5V
41	R/W	Air mix door motor (Passenger) PBR feedback	ON	-	0 - 5V
42	R/Y	Air mix door motor (Rear) PBR feedback	ON	-	0 - 5V
43	BR/Y	In-vehicle sensor motor (power)	ON	-	Battery voltage
44	O/B	In-vehicle sensor motor (ground)	ON	-	0V

TROUBLE DIAGNOSIS

EJS002CA


A/C System Self-diagnosis Function DESCRIPTION

Using Front Air Control Switches

NOTE:

Ambient temperature must be at least 10° C (50° F) to run self-diagnosis.

The self-diagnostic system diagnoses sensors, door motors, blower motor, etc. Refer to applicable sections (items) for details. Shifting from usual control to the self-diagnostic system is accomplished by turning the ignition switch ON and pressing the fan (down) switch while turning the passenger temperature dial in either direction (hold momentarily). Within 3 seconds of doing this, press the AUTO switch. The front blower speed indication bars will flash and the ambient temperature display will indicate 0° during the self-diagnosis. Fault codes (if any are present) will be displayed in the ambient temperature display area. Refer to [ATC-55, "SELF-DIAGNOSIS CODE CHART"](#) .

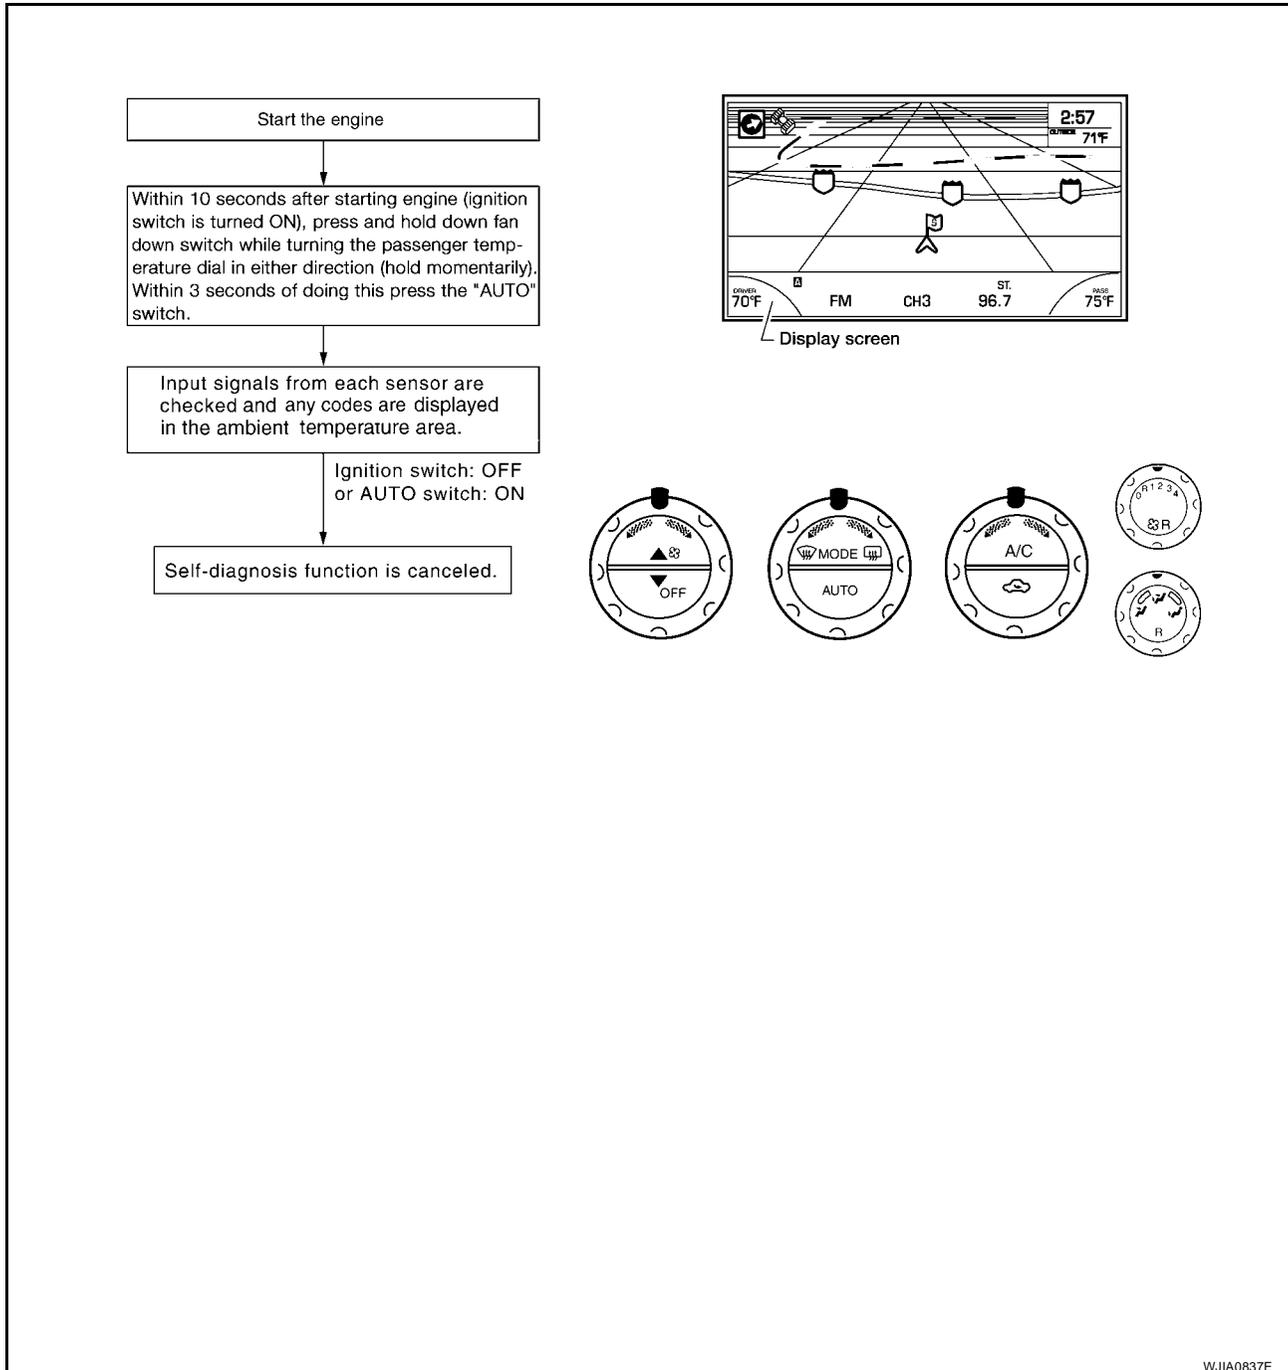

WJIA0837E

A
B
C
D
E
F
G
H
I
K
L
M

ATC


TROUBLE DIAGNOSIS

Using Confirmation/Adjustment Mode (NAVI)


NOTE:

Ambient temperature must be at least 10° C (50° F) to run self-diagnosis.


1. Start engine.
2. Turn the audio system off.
3. While pressing the "PAUSE/MUTE" button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self diagnosis mode is started, a short beep will be heard.)
 - Shifting from current screen to previous screen is performed by pressing "PREV" button.

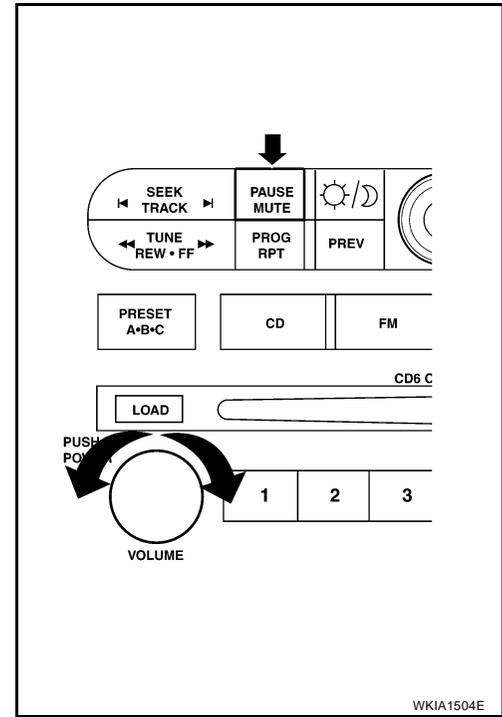

4. The initial self-diagnosis screen will be shown, and items "Self-Diagnosis (DCU)", "Self-Diagnosis (NAVI)", "Confirmation/Adjustment" and "CAN DIAG SUPPORT MONITOR" will become selective.

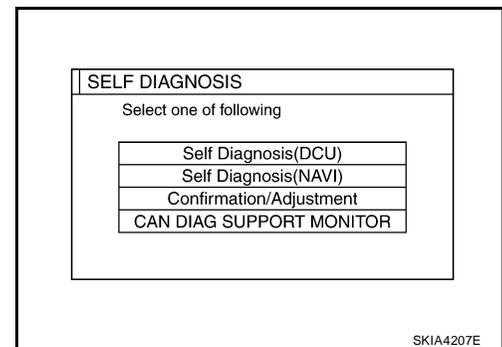

5. When "Confirmation/Adjustment" is selected on the initial self-diagnosis screen, the operation will enter CONFIRMATION/ADJUSTMENT mode. In this mode, check and adjustment of each item will become possible.
6. The initial trouble diagnosis screen will be shown, and items "display Diagnosis", "Vehicle Signals", "Auto Climate Control" and "Navigation" will become selective.

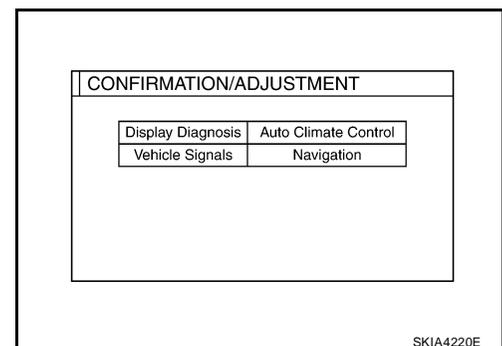

7. Select the "Auto Climate Control" switch on "CONFIRMATION/ADJUSTMENT" screen to display the "Auto Climate Control" diagnosis screen to begin diagnosis. The front blower speed indication bars will flash and the ambient temperature display will indicate 0° during the self-diagnosis. Fault codes (if any are present) will be displayed in the ambient temperature display area. Refer to [ATC-55. "SELF-DIAGNOSIS CODE CHART"](#).

TROUBLE DIAGNOSIS

SELF-DIAGNOSIS CODE CHART

Code No.	Reference page	
02	EE changed by calibration	ATC-135, "FRONT AIR CONTROL"
03	Battery voltage out of range	SC-4, "BATTERY"
04	Mode switch circuit open or short	ATC-135, "FRONT AIR CONTROL"
05	Blower motor malfunction	ATC-83, "Front Blower Motor Circuit"
12	Air mix door motor (Passenger) circuit malfunction	ATC-71, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR (PASSENGER)"
20	BCM not responding to A/C request	ATC-104, "Magnet Clutch Circuit"
21	BCM not responding to rear defroster request	GW-78, "REAR WINDOW DEFOGGER"
22	Air mix door motor (Driver) circuit malfunction	ATC-69, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR (DRIVER)"
30	In-vehicle sensor circuit out of range (low)	ATC-128, "In-vehicle Sensor Circuit"
31	In-vehicle sensor circuit out of range (high)	
34	Air mix door motor (Driver) PBR circuit malfunction	ATC-69, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR (DRIVER)"
36	Air mix door motor (Passenger) PBR circuit malfunction	ATC-71, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR (PASSENGER)"
38	Air mix door motor (rear) circuit malfunction	ATC-73, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR (REAR)"
40	Ambient sensor circuit short	ATC-125, "Ambient Sensor Circuit"
41	Ambient sensor circuit open	
44	In-vehicle sensor motor circuit open	ATC-128, "In-vehicle Sensor Circuit"
46	In-vehicle sensor motor circuit short	
50	Optical sensor (Driver) circuit open or short	ATC-131, "Optical Sensor Circuit"
52	Optical sensor (Passenger) circuit open or short	
56	Intake sensor circuit short	ATC-133, "Intake Sensor Circuit"
57	Intake sensor circuit open	
62	Defroster door motor circuit malfunction	ATC-79, "Defroster Door Motor Circuit"
72	Intake door motor circuit malfunction	ATC-76, "Intake Door Motor Circuit"
80	CAN bus malfunction	LAN-5, "CAN COMMUNICATION"
81	CAN BCM message missing	
82	Intake door motor circuit malfunction	ATC-76, "Intake Door Motor Circuit"
90	Stuck button	ATC-135, "FRONT AIR CONTROL"
92	Mode door motor circuit malfunction	ATC-63, "Mode Door Motor Circuit"

A
B
C
D
E
F
G
H
I
K
L
M

ATC

TROUBLE DIAGNOSIS

EJS002CB


Operational Check (Front)

The purpose of the operational check is to confirm that the system operates properly.


Conditions : Engine running and at normal operating temperature

CHECKING MEMORY FUNCTION

1. Set the temperature to 90°F or 32°C.
2. Press OFF switch [hold fan (down) switch down until system shuts OFF].
3. Turn ignition switch OFF.
4. Turn ignition switch ON.

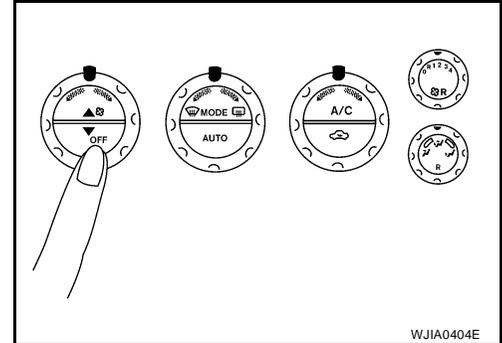


5. Press the AUTO switch.
6. Confirm that the set temperature remains at previous temperature.

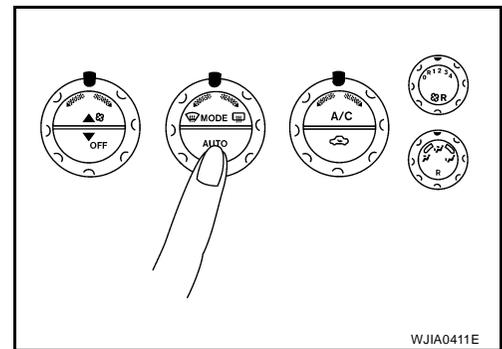

7. Press OFF switch [hold fan (down) switch down until system shuts OFF].

If NG, go to trouble diagnosis procedure for [ATC-121, "Memory Function"](#).

If OK, continue with next check.

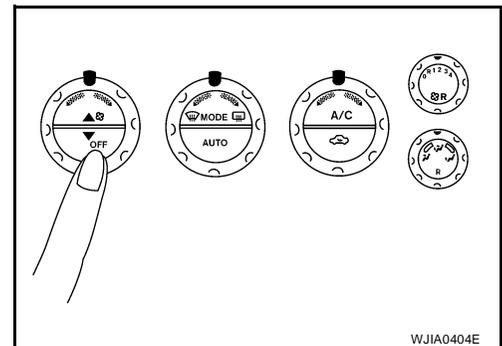


CHECKING BLOWER

1. Press fan (up) switch. Blower should operate on low speed. The front blower speed symbol should have one bar lit (on display).
2. Press fan (up) switch again, and continue checking blower speed and blower symbol until all speeds are checked.
3. Leave blower on maximum speed.

If NG, go to trouble diagnosis procedure for [ATC-85, "DIAGNOSTIC PROCEDURE FOR BLOWER MOTOR"](#).


If OK, continue with next check.

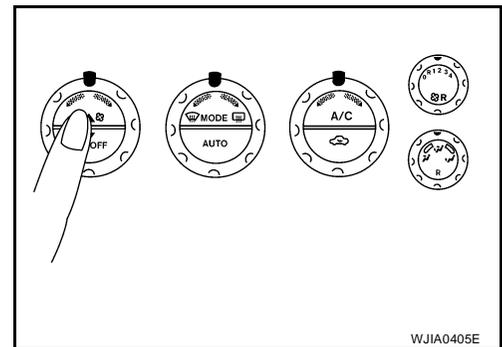

TROUBLE DIAGNOSIS

CHECKING DISCHARGE AIR

1. Press MODE switch four times and then rotate the DEF dial counterclockwise.
2. Each position indicator should change shape (on display).

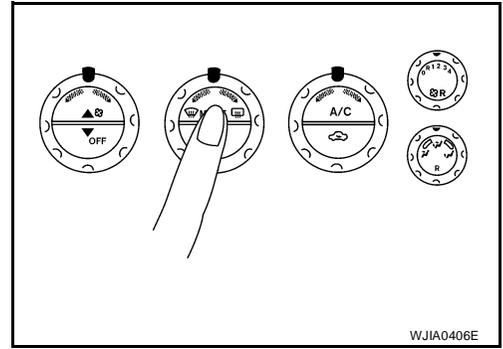

3. Confirm that discharge air comes out according to the air distribution table. Refer to [ATC-29, "Discharge Air Flow"](#).

Mode door position is checked in the next step.

If NG, go to trouble diagnosis procedure for [ATC-63, "Mode Door Motor Circuit"](#).

If OK, continue with next check.

NOTE:

Confirm that the compressor clutch is engaged (sound or visual inspection) and intake door position is at fresh when the DEF or D/F is selected.

Discharge air flow			
Mode door position	Air outlet/distribution		
	Vent	Foot	Defroster
	100%	–	–
	50%	50%	–
	–	75%(100%)	25% (–)
	–	60%	40%
	–	–	100%

(): Manually control

WJIA0528E

CHECKING RECIRCULATION


1. Press recirculation () switch one time. Recirculation indicator should illuminate.
2. Press recirculation () switch one more time. Fresh () indicator should illuminate.
3. Listen for intake door position change (blower sound should change slightly).

If NG, go to trouble diagnosis procedure for [ATC-76, "Intake Door Motor Circuit"](#).

If OK, continue with next check.

NOTE:

Confirm that the compressor clutch is engaged (sound or visual inspection) and intake door position is at fresh when the DEF or D/F is selected.

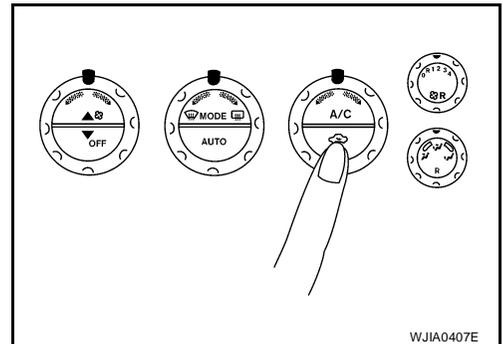


CHECKING TEMPERATURE DECREASE

1. Rotate temperature dial counterclockwise (driver or passenger) until 18°C (60°F) is displayed.
2. Check for cold air at appropriate discharge air outlets.

If NG, listen for sound of air mix door motor operation. If OK, go to trouble diagnosis procedure for [ATC-110, "Insufficient Cooling"](#). If air mix door motor appears to be malfunctioning, go to [ATC-69, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR \(DRIVER\)"](#) or [ATC-71, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR \(PASSENGER\)"](#).

If OK, continue with next check.

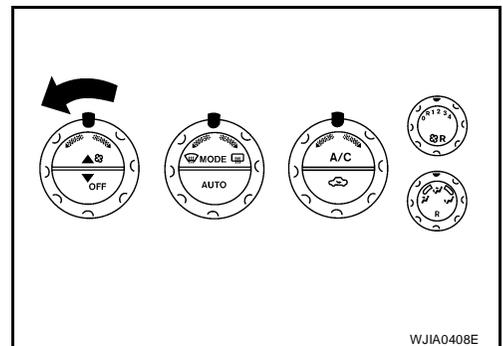


TROUBLE DIAGNOSIS

CHECKING TEMPERATURE INCREASE

1. Rotate temperature dial clockwise (driver or passenger) until 32°C (90°F) is displayed.
2. Check for hot air at appropriate discharge air outlets.

If NG, listen for sound of air mix door motor operation. If OK, go to trouble diagnosis procedure for [ATC-117, "Insufficient Heating"](#) . If air mix door motor appears to be malfunctioning, go to [ATC-69, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR \(DRIVER\)"](#) or [ATC-71, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR \(PASSENGER\)"](#) .

If OK, continue with next check.

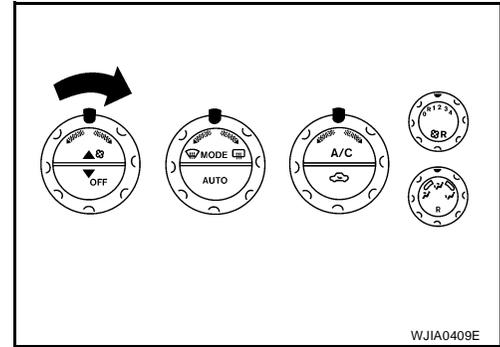


CHECK A/C SWITCH

1. Press A/C switch.
2. A/C switch indicator will turn ON.
 - Confirm that the compressor clutch engages (sound or visual inspection).

If NG, go to trouble diagnosis procedure for [ATC-104, "Magnet Clutch Circuit"](#) .

If OK, continue with next check.

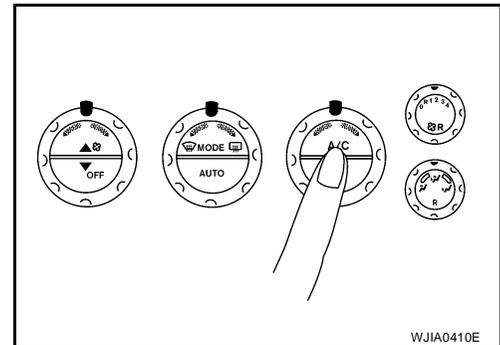


CHECKING AUTO MODE

1. Press AUTO switch.
2. Display should indicate AUTO.
 - If ambient temperature is warm, and selected temperature is cool, confirm that the compressor clutch engages (sound or visual inspection). (Discharge air and blower speed will depend on ambient, in-vehicle, and set temperatures.)

If NG, go to trouble diagnosis procedure for [ATC-60, "Power Supply and Ground Circuit for Front Air Control"](#) , then if necessary, trouble diagnosis procedure for [ATC-104, "Magnet Clutch Circuit"](#) .

If all operational checks are OK (symptom cannot be duplicated), go to malfunction Simulation Tests in [ATC-35, "How to Perform Trouble Diagnosis for Quick and Accurate Repair"](#) and perform tests as outlined to simulate driving conditions environment. If symptom appears. Refer to [ATC-35, "How to Perform Trouble Diagnosis for Quick and Accurate Repair"](#) , [ATC-35, "SYMPTOM TABLE"](#) and perform applicable trouble diagnosis procedures.

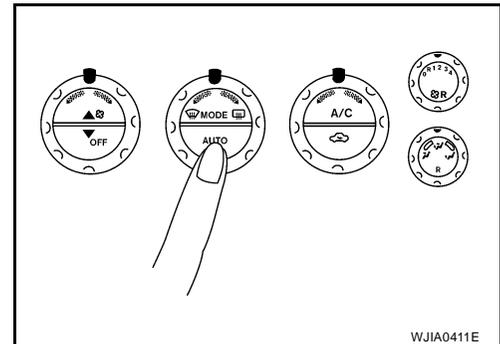

TROUBLE DIAGNOSIS

EJS002CC

Operational Check (Rear)

The purpose of the operational check is to confirm that the system operates properly.


Conditions : Engine running and at normal operating temperature

CHECKING BLOWER

1. Turn the rear fan switch (front) clockwise to "1". The rear blower should operate on low speed.
2. Turn the rear fan switch (front) clockwise again to switch position "2", "3", and "4" until all speeds are checked.
3. Leave blower on maximum speed.

If NG, go to trouble diagnosis procedure for [ATC-90, "Rear Blower Motor Circuit"](#) .

If OK, continue with next check.

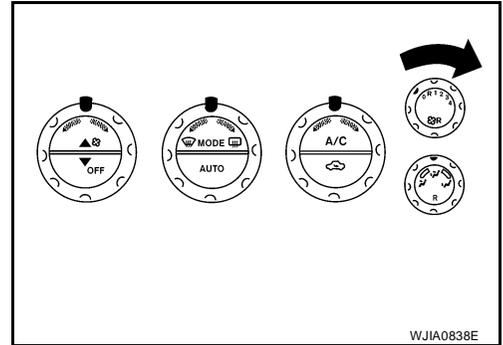


CHECKING TEMPERATURE DECREASE

1. Rotate rear temperature/mode dial (front) fully counterclockwise.
2. Check for cold air at appropriate discharge air outlets (headliner outlets).

If NG, listen for sound of air mix door motor operation. If OK, go to trouble diagnosis procedure for [ATC-110, "Insufficient Cooling"](#) . If air mix door motor appears to be malfunctioning, go to [ATC-73, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR \(REAR\)"](#) .

If OK, continue with next check.

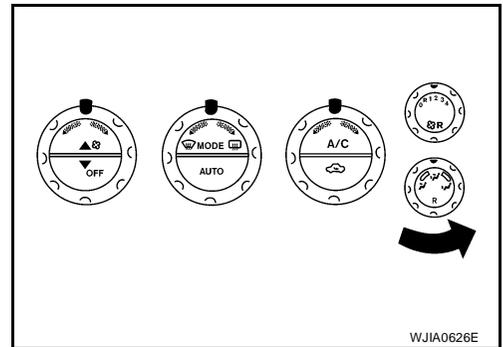


CHECKING TEMPERATURE INCREASE

1. Rotate rear temperature/mode dial (front) clockwise.
2. Check for hot air at appropriate discharge air outlets (floor outlets).

If NG, listen for sound of air mix door motor operation. If OK, go to trouble diagnosis procedure for [ATC-117, "Insufficient Heating"](#) . If air mix door motor appears to be malfunctioning, go to [ATC-73, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR \(REAR\)"](#) .

If OK, continue with next check.

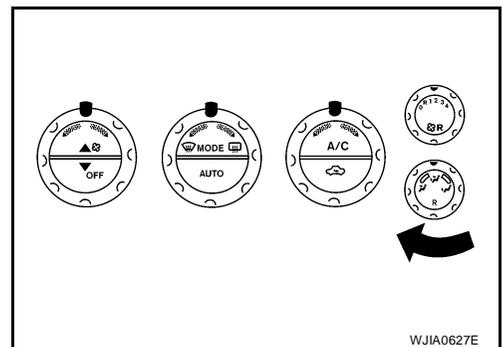

A
B
C
D
E
F
G
H
I
K
L
M

ATC

TROUBLE DIAGNOSIS


EJS002CD

Power Supply and Ground Circuit for Front Air Control

SYMPTOM: A/C system does not come on.

INSPECTION FLOW

1. Confirm symptom by performing the following operational check.

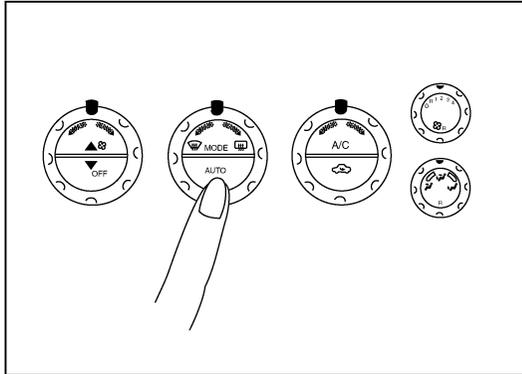

OPERATIONAL CHECK – AUTO mode

- Press AUTO switch.
 - Display should indicate AUTO.
- Confirm that the compressor clutch engages (Sound or visual inspection).
(Discharge air and blower speed will depend on ambient, in-vehicle and set temperatures.)

If OK (symptom cannot be duplicated), perform complete operational check (*2).
If NG (symptom is confirmed), continue with STEP-2 following.

2. Check for any service bulletins.

3. Check Main Power Supply and Ground Circuit. (*1)

4. Replace front air control.

*1 [ATC-60, "Power Supply and Ground Circuit for Front Air Control"](#)

*2 [ATC-56, "Operational Check \(Front\)"](#)
or [ATC-59, "Operational Check \(Rear\)"](#)

WJIA0764E

TROUBLE DIAGNOSIS


COMPONENT DESCRIPTION

Front Air Control

The front air control has a built-in microcomputer which processes information sent from various sensors needed for air conditioner operation. The air mix door motors, mode door motor, intake door motor, defroster door motor, blower motor and compressor are then controlled.


The front air control is unitized with control mechanisms. When the various switches and temperature dials are operated, data is input to the front air control.

Self-diagnostic functions are also built into the front air control to provide quick check of malfunctions in the auto air conditioner system.

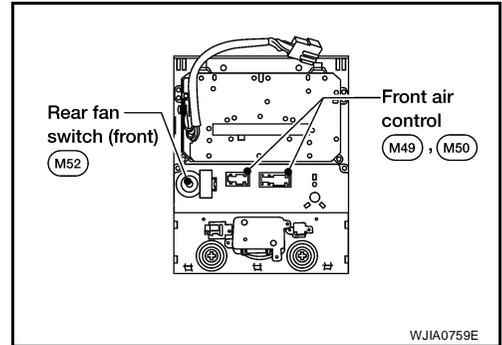


Potential Temperature Control (PTC)

There are two PTCs (passenger and driver) built into the front air control. They can be set at an interval of 0.5°C (1.0°F) in the 18°C (65°F) to 30°C (85°F) temperature range by rotating the temperature dial. The set temperature is displayed.

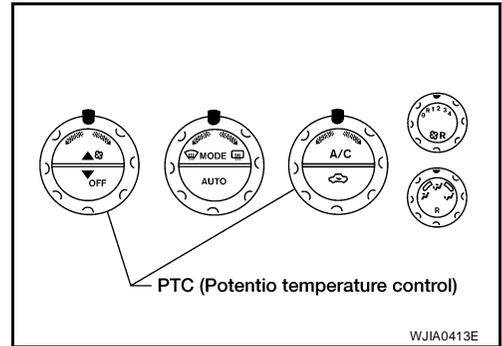

DIAGNOSTIC PROCEDURE FOR A/C SYSTEM

SYMPTOM: A/C system does not come on.

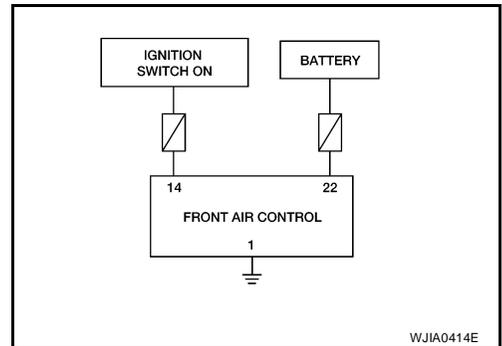

A
B
C
D
E
F
G
H
I
K
L
M


ATC

TROUBLE DIAGNOSIS

1. CHECK POWER SUPPLY CIRCUITS FOR FRONT AIR CONTROL

1. Disconnect front air control connector M49.
2. Check voltage between front air control harness connector M49 terminals 14 (Y/G) and 22 (Y/R), and ground.

Terminals		Ignition switch position			
(+)		(-)	OFF	ACC	ON
Front air control connector	Terminal No. (Wire color)				
M49	14 (Y/G)	Ground	Approx. 0V	Approx. 0V	Battery voltage
	22 (Y/R)		Battery voltage	Battery voltage	Battery voltage

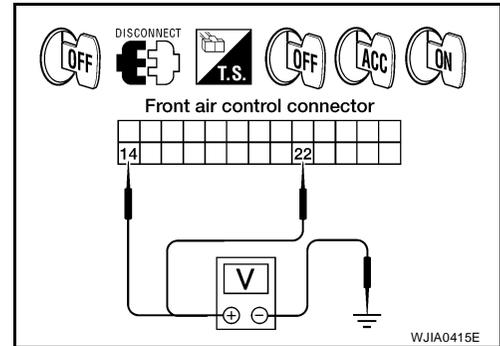

OK or NG

OK >> GO TO 2.

NG >> Check 10A fuses [No. 8 and 19, located in the fuse block (J/B)]. Refer to [PG-76, "FUSE BLOCK-JUNCTION BOX\(J/B\)"](#) .

- If fuses are OK, check harness for open circuit. Repair or replace as necessary.
- If fuses are NG, replace fuse and check harness for short circuit. Repair or replace as necessary.

2. CHECK GROUND CIRCUIT FOR FRONT AIR CONTROL


1. Turn ignition switch OFF.
2. Check continuity between front air control harness connector M49 terminal 1 (B) and ground.

1 - Ground : Continuity should exist.

OK or NG

OK >> Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .

NG >> Repair harness or connector.

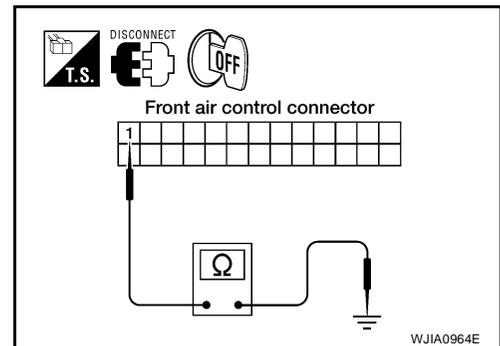

TROUBLE DIAGNOSIS

EJS002CE


Mode Door Motor Circuit

SYMPTOM:

- Air outlet does not change.
- Mode door motor does not operate normally.

INSPECTION FLOW

1. Confirm symptom by performing the following operational check.

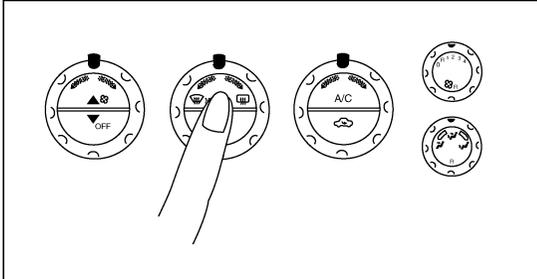

OPERATIONAL CHECK – Discharge air

- Press MODE switch four times and rotate DEF switch counterclockwise.
- Each position indicator should change shape. (on display)

Discharge air flow


Mode door position	Air outlet/distribution		
	Vent	Foot	Defroster
	100%	–	–
	50%	50%	–
	–	75%(100%)	25% (–)
	–	60%	40%
	–	–	100%

c. Confirm that discharge air comes out according to the air distribution table at left.

Refer to "Discharge Air Flow" (*1).

NOTE:

- If OK (symptom cannot be duplicated), perform complete operational check (*2).
- If NG (symptom is confirmed), continue with STEP-2 following.
- Confirm that the compressor clutch is engaged (visual inspection) and intake door position is at FRESH when DEF or D/F is selected.

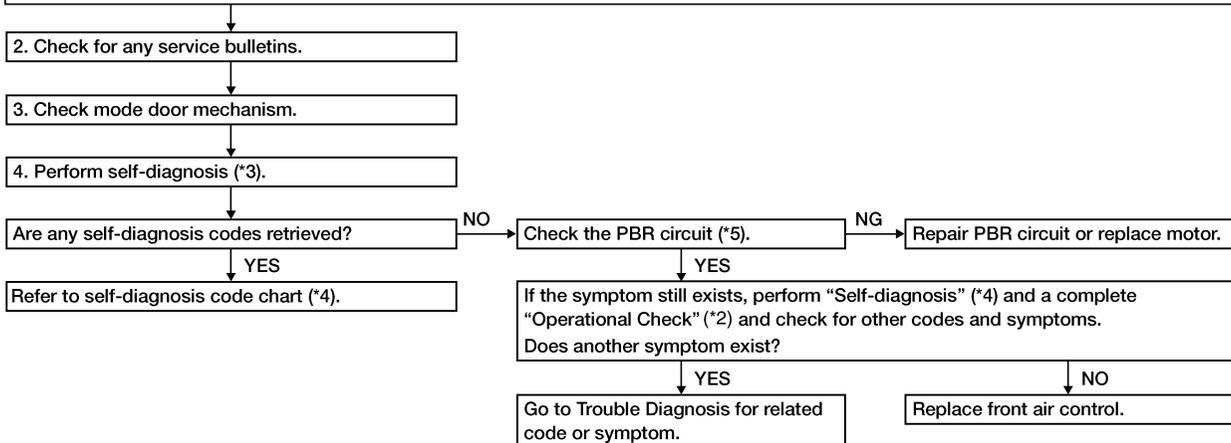

*1 [ATC-29, "Discharge Air Flow"](#)

*2 [ATC-56, "Operational Check \(Front\)"](#)

*3 [ATC-53, "A/C System Self-diagnosis Function"](#)

*4 [ATC-55, "SELF-DIAGNOSIS CODE CHART"](#)

*5 [ATC-65, "DIAGNOSTIC PROCEDURE FOR MODE DOOR MOTOR"](#)

WJIA0766E

TROUBLE DIAGNOSIS

SYSTEM DESCRIPTION

Component Parts


Mode door control system components are:

- Front air control
- Mode door motor
- PBR (built into mode door motor)
- In-vehicle sensor
- Ambient sensor
- Optical sensor
- Intake sensor


System Operation

The mode door position (vent, B/L, foot, defrost/floor, and defrost) is set by the front air control by means of the mode door motor. When a mode door position is selected on the front air control, voltage is applied to one circuit of the mode door motor while ground is applied to the other circuit, causing the mode door motor to rotate. The direction of rotation is determined by which circuit has voltage applied to it, and which one has ground applied to it. The front air control monitors the mode door position by measuring the voltage signal on the PBR circuit.

In AUTO mode the mode door position is set by the front air control which determines the proper position based on inputs from the in-vehicle sensor, ambient sensor, optical sensor, intake sensor, and the temperature selected by the driver or passenger.

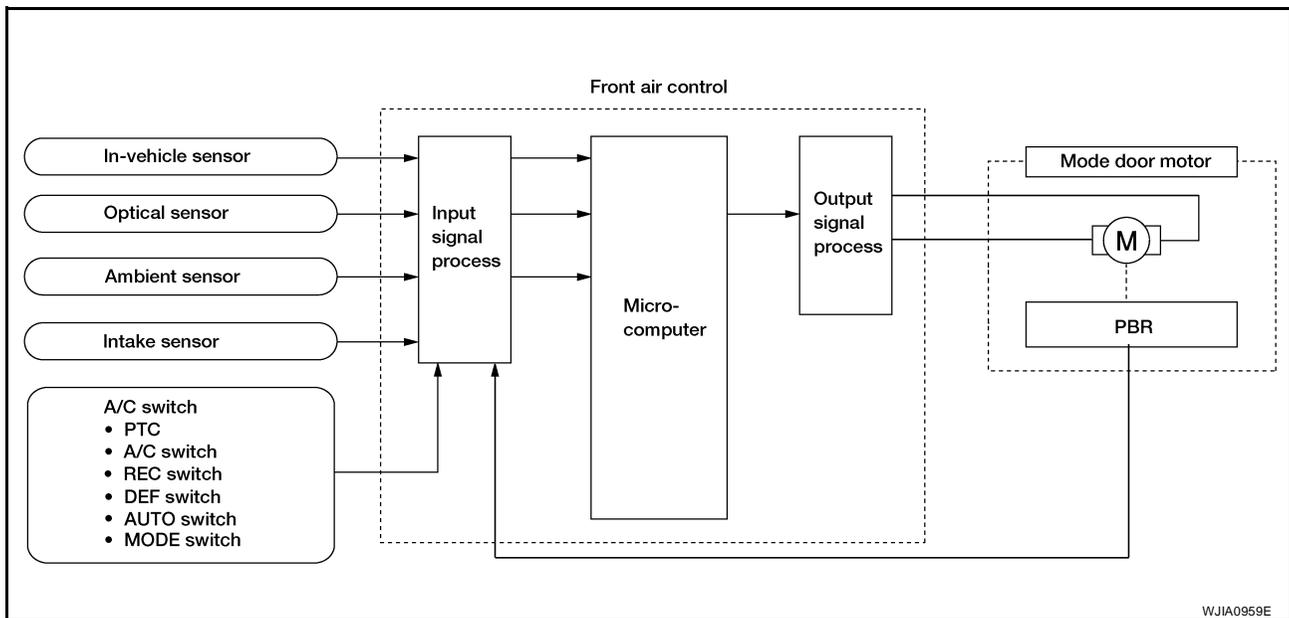

Mode Door Control Specification

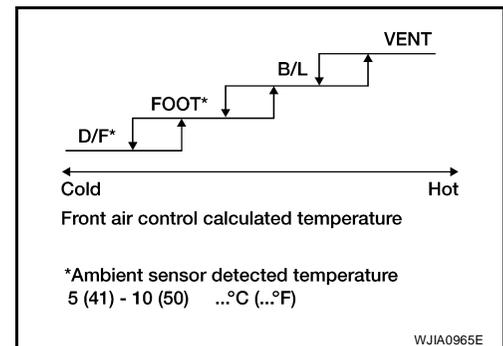


TROUBLE DIAGNOSIS

COMPONENT DESCRIPTION

Mode Door Motor

The mode door motor is attached to the heater & cooling unit. It rotates so that air is discharged from the outlet as indicated by the front air control. Motor rotation is conveyed to a link which activates the mode door.

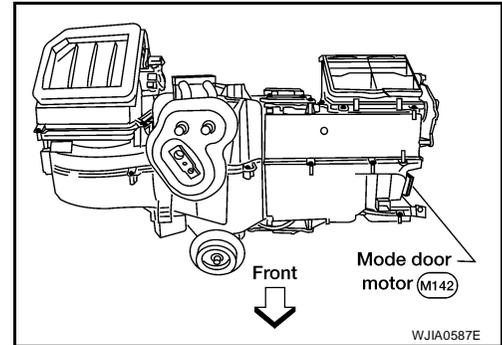

DIAGNOSTIC PROCEDURE FOR MODE DOOR MOTOR

1. CHECK RESULT FROM FRONT AIR CONTROL SELF-DIAGNOSIS

Self-diagnosis code 92 is present. Refer to [ATC-53, "A/C System Self-diagnosis Function"](#).

YES or NO

YES >> GO TO 2.

NO >> GO TO 3.

2. CHECK POWER SUPPLY AND GROUND CIRCUITS FOR MODE DOOR MOTOR

1. Turn ignition switch OFF.
2. Disconnect front air control connector M49 and mode door motor connector M142.
3. Check continuity between front air control harness connector M49 terminal 5 (BR/W) and mode door motor connector M142 terminal 5 (BR/W) and between front air control harness connector M49 terminal 6 (P/L) and mode door motor connector M142 terminal 6 (P/L).

5 - 5 : Continuity should exist.

6 - 6 : Continuity should exist.

OK or NG

OK >> Replace mode door motor. Refer to [ATC-152, "Removal and Installation"](#).

NG >> Repair or replace harness as necessary.

3. CHECK PBR REFERENCE SIGNAL VOLTAGE



1. Disconnect mode door motor connector M142.
2. Turn ignition switch ON.
3. Check voltage between mode door motor harness connector M142 terminal 3 (Y) and ground.

3 - Ground : Approx. 5V

OK or NG

OK >> GO TO 5.

NG >> GO TO 4.

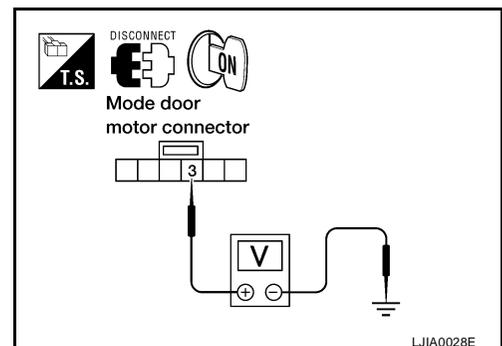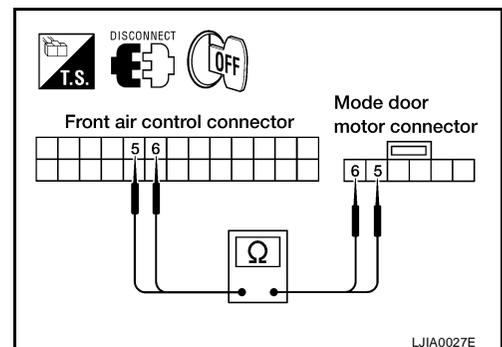

TROUBLE DIAGNOSIS

4. CHECK PBR REFERENCE VOLTAGE CIRCUIT BETWEEN MODE DOOR AND FRONT AIR CONTROL


1. Turn ignition switch OFF.
2. Disconnect front air control connector M49.
3. Check continuity between mode door motor harness connector M142 terminal 3 (Y) and front air control harness connector M49 terminal 2 (Y).

3 - 2 : Continuity should exist.

OK or NG

OK >> Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#).

NG >> Repair or replace harness as necessary.

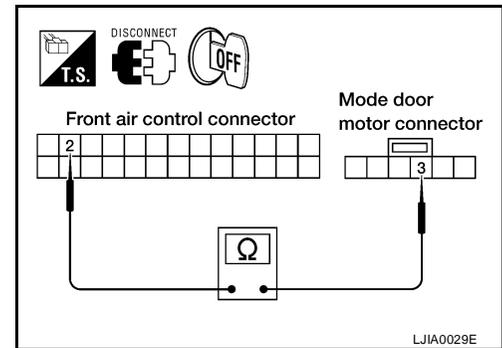

LJIA0029E

5. CHECK PBR GROUND REFERENCE CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect front air control connector M49.
3. Check continuity between mode door motor harness connector M142 terminal 1 (P) and front air control harness connector M49 terminal 15 (P).

1 - 15 : Continuity should exist.

OK or NG

OK >> GO TO 6.

NG >> Repair or replace harness as necessary.

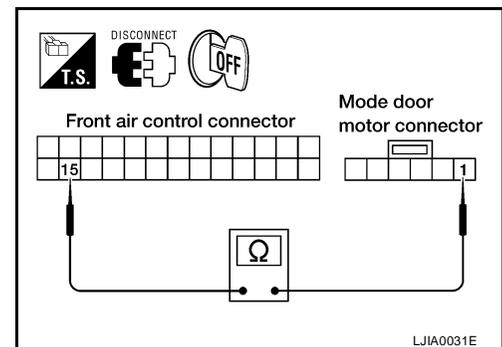

LJIA0031E

6. CHECK PBR FEEDBACK SIGNAL


1. Reconnect front air control connector and mode door motor connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M49 terminal 16 (GR) and ground.
4. Press mode switch through all modes.

16 - Ground : Approx. 0 - 5V

OK or NG

OK >> Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#).

NG >> GO TO 7.

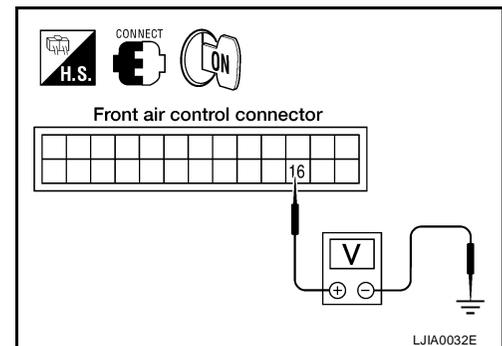

LJIA0032E

7. CHECK PBR FEEDBACK CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect mode door motor connector M142 and front air control harness connector M49.
3. Check continuity between mode door motor harness connector M142 terminal 2 (GR) and front air control harness connector M49 terminal 16 (GR).

2 - 16 : Continuity should exist.

OK or NG

OK >> Replace mode door motor. Refer to [ATC-152, "MODE DOOR MOTOR"](#).

NG >> Repair or replace harness as necessary.

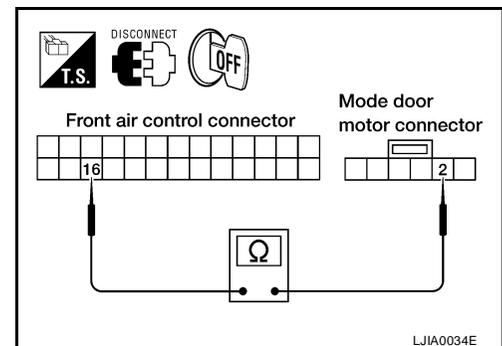

LJIA0034E

TROUBLE DIAGNOSIS


EJS002CF

Air Mix Door Motor Circuit

SYMPTOM:

- Discharge air temperature does not change.
- Air mix door motor does not operate.

INSPECTION FLOW

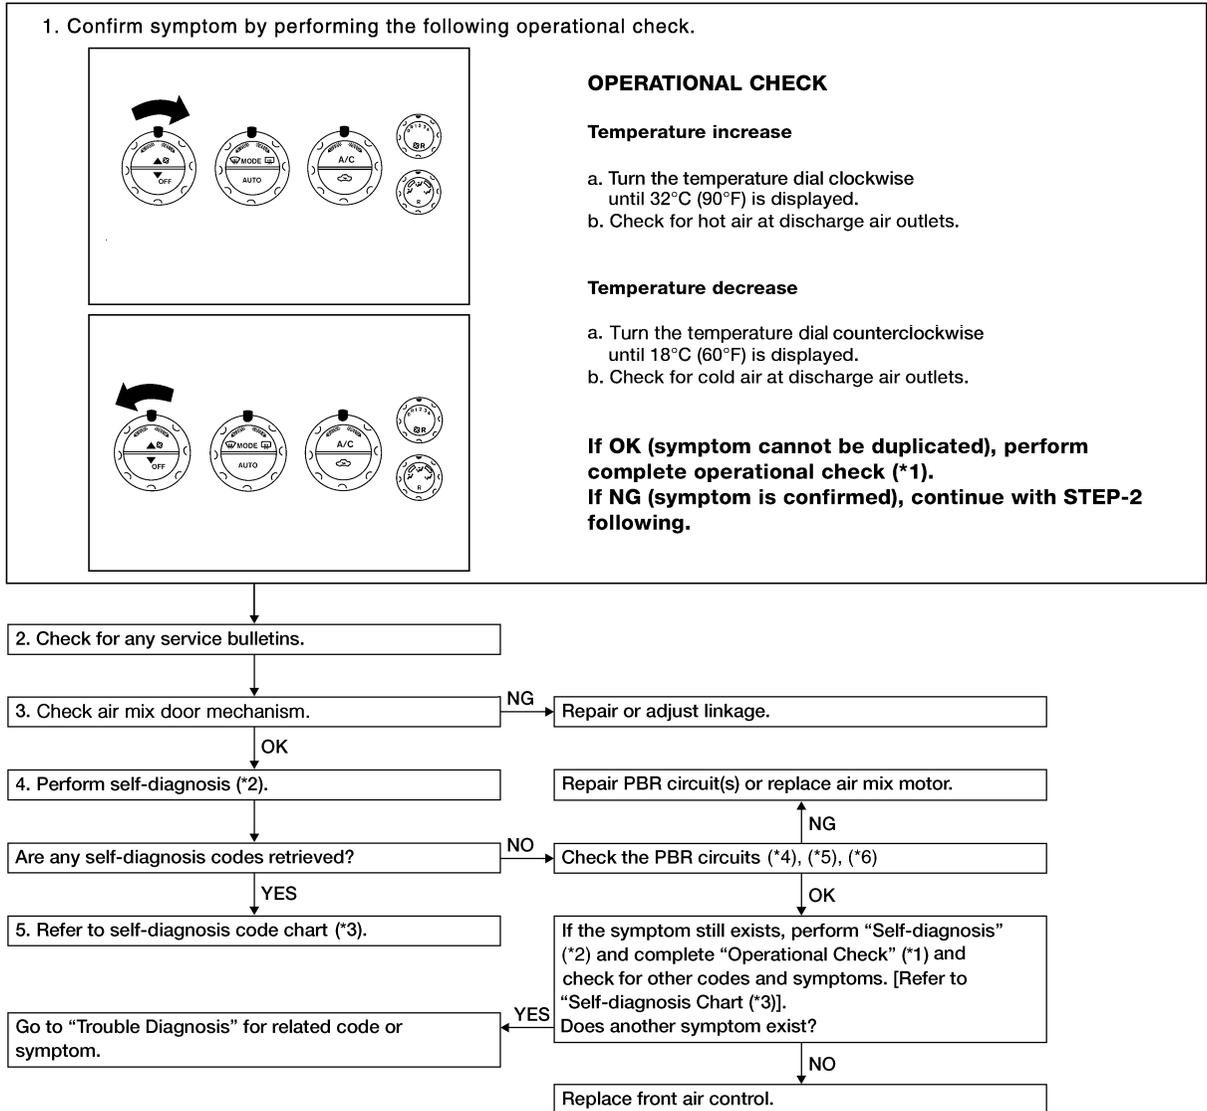

*1 [ATC-56, "Operational Check \(Front\)"](#) or [ATC-59, "Operational Check \(Rear\)"](#)

*4 [ATC-69, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR \(DRIVER\)"](#)

*2 [ATC-53, "A/C System Self-diagnosis Function"](#)

*5 [ATC-71, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR \(PASSENGER\)"](#)

*3 [ATC-55, "SELF-DIAGNOSIS CODE CHART"](#)

*6 [ATC-73, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR \(REAR\)"](#)

WJIA0768E

TROUBLE DIAGNOSIS

SYSTEM DESCRIPTION

Component Parts

Air mix door control system components are:


- Front air control
- Air mix door motors (driver, passenger, and rear)
- PBR (built-into air mix door motors)
- In-vehicle sensor
- Ambient sensor
- Optical sensor
- Intake sensor

System Operation


The front air control receives data from the temperature selected by the driver side, passenger side, and rear. The front air control then applies a voltage to one circuit of the appropriate air mix door motor, while ground is applied to the other circuit, causing the appropriate air mix door motor to rotate. The direction of rotation is determined by which circuit has voltage applied to it, and which one has ground applied to it. The front air control monitors the air mix door positions by measuring the voltage signal on the PBR circuits of each door.

In AUTO mode the air mix, intake, mode door, and defrost door positions are set by the front air control which determines the proper position based on inputs from the in-vehicle sensor, ambient sensor, optical sensor, intake sensor, and the temperature selected by the driver and front and rear passengers.

Subsequently, HOT/COLD or DEFROST/VENT or FRESH/RECIRCULATION operation is selected. The new door position data is returned to the front air control.

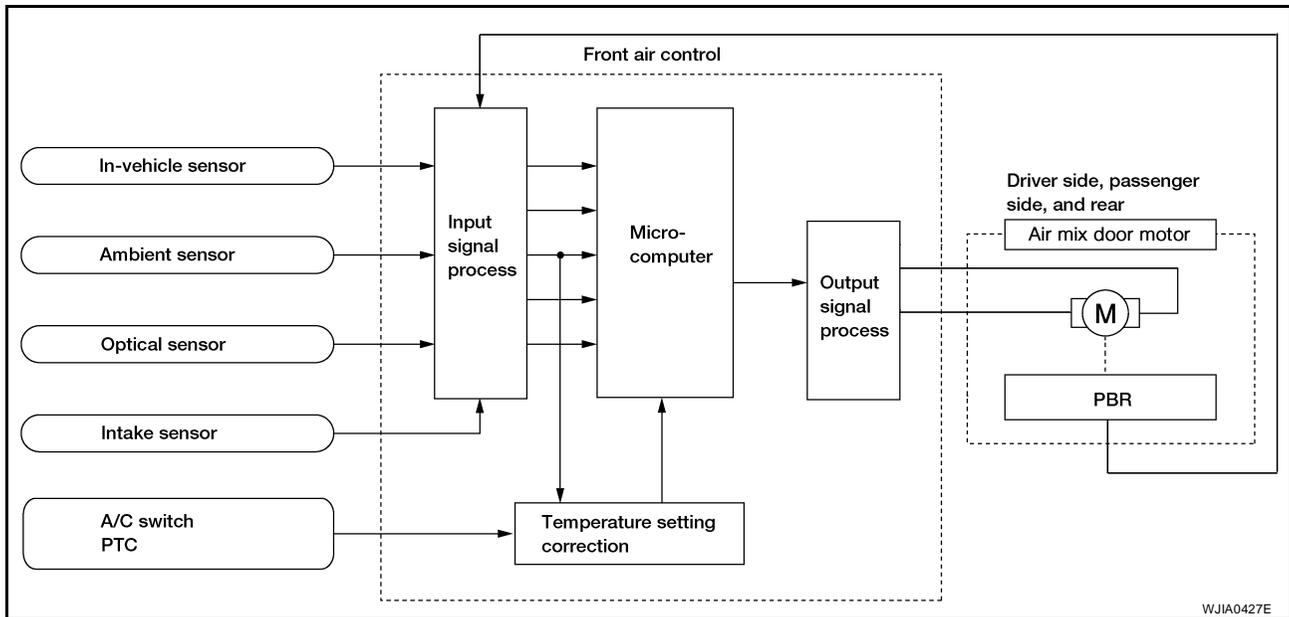

Air Mix Door Control Specification



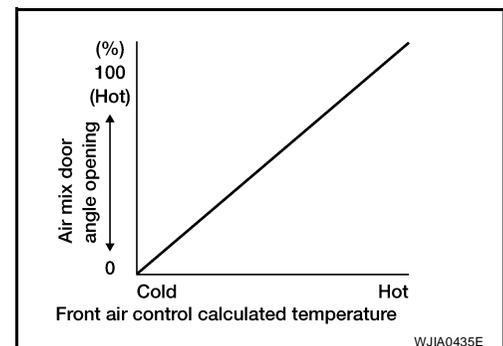


TROUBLE DIAGNOSIS

COMPONENT DESCRIPTION

Air Mix Door Motors

The driver and front passenger air mix door motors are attached to the front heater & cooling unit. The rear air mix door motor is attached to the rear heater & cooling unit. These motors rotate so that the air mix door is opened or closed to a position set by the front (or rear) air control. Motor rotation is then conveyed through a shaft and the air mix door position is then fed back to the front air control by the PBR built into the air mix door motors.

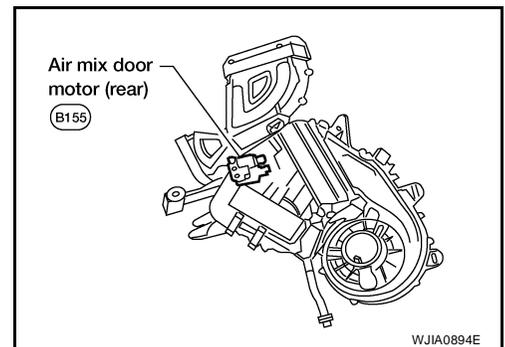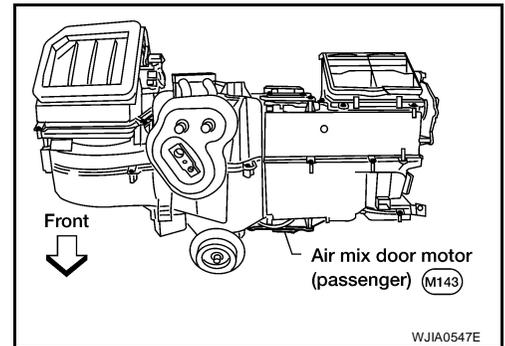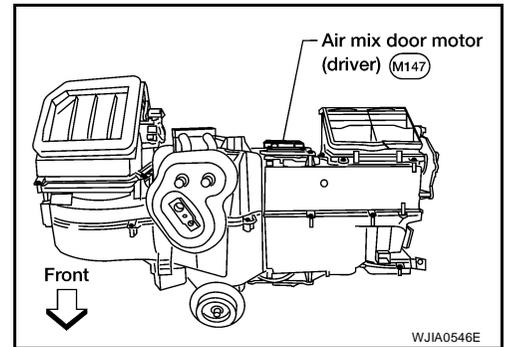

DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR (DRIVER)

1. CHECK RESULT FROM FRONT AIR CONTROL SELF-DIAGNOSIS

Self-diagnosis code 22 is present. Refer to [ATC-53, "A/C System Self-diagnosis Function"](#).

YES or NO

- YES >> GO TO 2.
- NO >> GO TO 3.

A
B
C
D
E
F
G
H
I
ATC
K
L
M

TROUBLE DIAGNOSIS

2. CHECK POWER SUPPLY CIRCUITS FOR AIR MIX DOOR MOTOR (DRIVER)

1. Turn ignition switch OFF.
2. Disconnect front air control connector M49 and air mix door motor (Driver) connector M147.
3. Check continuity between front air control harness connector M49 terminal 3 (W/G) and 4 (G) and air mix door motor (Driver) harness connector M147 terminal 1 (W/G) and 6 (G).


3 - 1 : Continuity should exist.

4 - 6 : Continuity should exist.

OK or NG

OK >> Replace air mix door motor (Driver). Refer to [ATC-153](#), "[FRONT AIR MIX DOOR MOTOR \(DRIVER\)](#)".

NG >> Repair or replace harness as necessary.

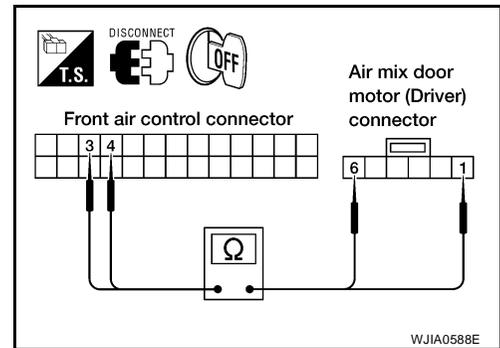

3. CHECK PBR REFERENCE SIGNAL VOLTAGE


1. Turn ignition switch OFF.
2. Disconnect air mix door motor (Driver) connector M147.
3. Turn ignition switch ON.
4. Check voltage between air mix door motor (Driver) harness connector M147 terminal 3 (Y) and ground.

3 - Ground : Approx. 5V

OK or NG

OK >> GO TO 5.

NG >> GO TO 4.

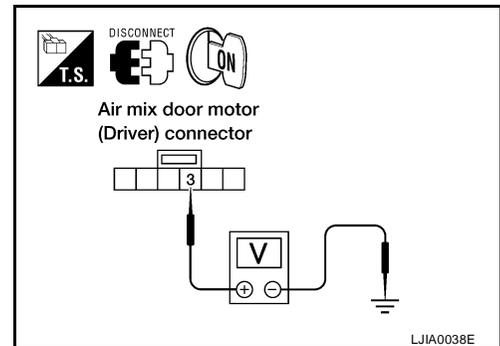

4. CHECK PBR REFERENCE VOLTAGE CIRCUIT BETWEEN AIR MIX DOOR MOTOR (DRIVER) AND FRONT AIR CONTROL


1. Turn ignition switch OFF.
2. Disconnect front air control connector M49.
3. Check continuity between air mix door motor (Driver) harness connector M147 terminal 3 (Y) and front air control harness connector M49 terminal 2 (Y).

3 - 2 : Continuity should exist.

OK or NG

OK >> Replace front air control. Refer to [ATC-135](#), "[FRONT AIR CONTROL](#)".

NG >> Repair or replace harness as necessary.

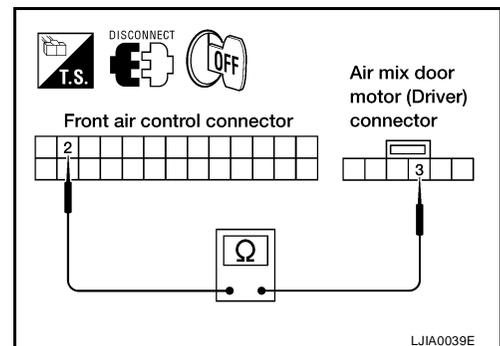

5. CHECK PBR GROUND REFERENCE CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect front air control connector M49.
3. Check continuity between air mix door motor (Driver) harness connector M147 terminal 2 (P) and front air control harness connector M49 terminal 15 (P).

2 - 15 : Continuity should exist.

OK or NG

OK >> GO TO 6.

NG >> Repair or replace harness as necessary.

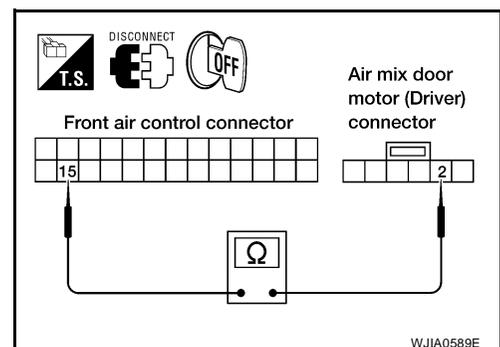

TROUBLE DIAGNOSIS


6. CHECK PBR FEEDBACK SIGNAL

1. Reconnect front air control connector and air mix door motor (Driver) connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M49 terminal 18 (SB) and ground.
4. Rotate temperature dial (Driver) through complete range.

18 - Ground : Approx. 0V - 5V

OK or NG

- OK >> Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .
- NG >> GO TO 7.

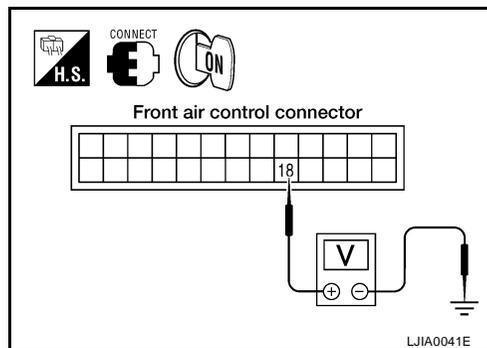


7. CHECK PBR FEEDBACK CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect air mix door motor (Driver) connector M147 and front air control connector M49.
3. Check continuity between air mix door motor (Driver) harness connector M147 terminal 4 (SB) and front air control harness connector M49 terminal 18 (SB).

4 - 18 Continuity should exist.

OK or NG

- OK >> Replace air mix door motor (Driver). Refer to [ATC-153, "FRONT AIR MIX DOOR MOTOR \(DRIVER\)"](#) .
- NG >> Repair or replace harness as necessary.

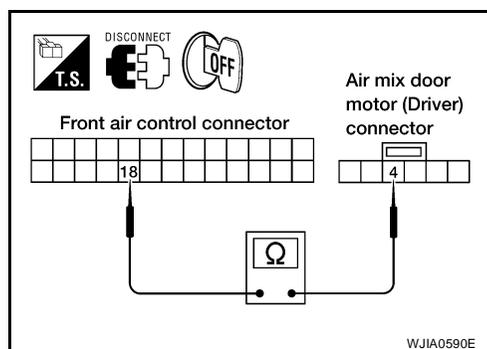

DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR (PASSENGER)

1. CHECK RESULT FROM FRONT AIR CONTROL SELF-DIAGNOSIS

Self-diagnosis code 12 is present. Refer to [ATC-53, "A/C System Self-diagnosis Function"](#) .

YES or NO

- YES >> GO TO 2.
- NO >> GO TO 3.

2. CHECK POWER SUPPLY CIRCUIT FOR AIR MIX DOOR MOTOR (PASSENGER)


1. Turn ignition switch OFF.
2. Disconnect front air control connector M50 and air mix door motor (Passenger) connector M143.
3. Check continuity between front air control harness connector M50 terminal 36 (G/W) and 37 (L) and air mix door motor (Passenger) connector M143 terminal 1 (G/W) and 6 (L).

36 - 1 Continuity should exist.

37 - 6 Continuity should exist.

OK or NG

- OK >> Replace air mix door motor (Passenger). Refer to [ATC-154, "FRONT AIR MIX DOOR MOTOR \(PASSENGER\)"](#) .
- NG >> Repair or replace harness as necessary.

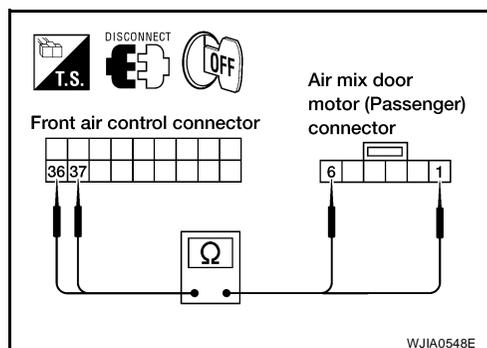

TROUBLE DIAGNOSIS


3. CHECK PBR REFERENCE SIGNAL VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect air mix door motor (Passenger) connector M143.
3. Turn ignition switch ON.
4. Check voltage between air mix door motor (Passenger) harness connector M143 terminal 3 (Y) and ground.

3 - Ground : Approx.5V

OK or NG

- OK >> GO TO 5.
NG >> GO TO 4.

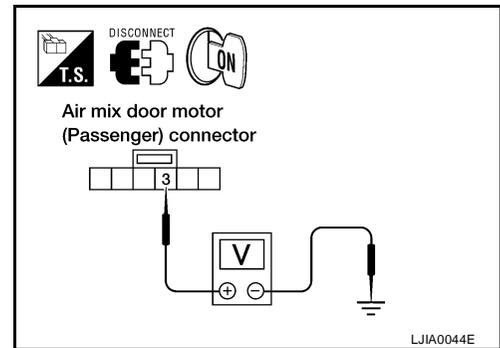


4. CHECK PBR REFERENCE VOLTAGE CIRCUIT BETWEEN AIR MIX DOOR (PASSENGER) AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector M49.
3. Check continuity between air mix door motor (Passenger) harness connector M143 terminal 3 (Y) and front air control harness connector M49 terminal 2 (Y).

3 - 2 Continuity should exist.

OK or NG

- OK >> Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .
NG >> Repair or replace harness as necessary.

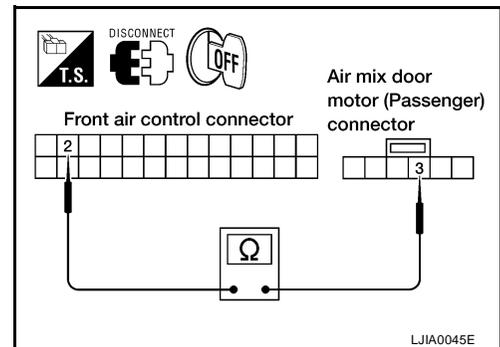


5. CHECK PBR GROUND REFERENCE CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front air control connector M49.
3. Check continuity between air mix door motor (Passenger) harness connector M143 terminal 2 (P) and front air control harness connector M49 terminal 15 (P).

2 - 15 Continuity should exist.

OK or NG

- OK >> GO TO 6.
NG >> Repair or replace harness as necessary.

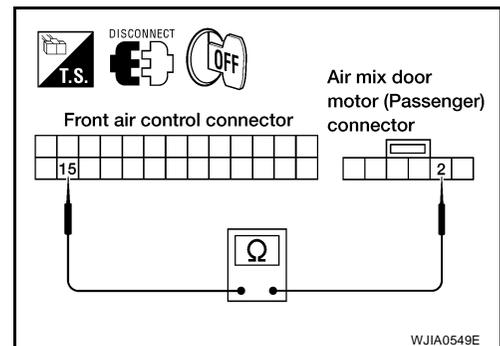


6. CHECK PBR FEEDBACK SIGNAL

1. Reconnect front air control connector and air mix door motor (Passenger) connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M50 terminal 41 (R/W) and ground.
4. Rotate temperature dial (Passenger) through complete range.

41 - Ground : Approx. 0 - 5V

OK or NG

- OK >> Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .
NG >> GO TO 7.

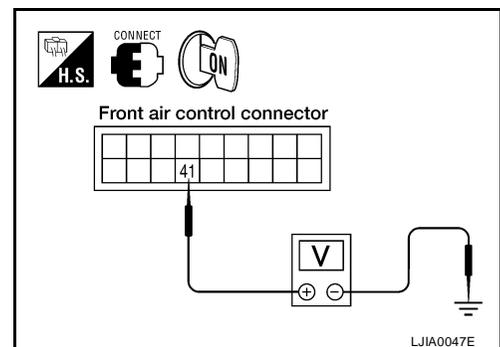

TROUBLE DIAGNOSIS

7. CHECK PBR FEEDBACK CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect air mix door motor (Passenger) connector M143 and front air control connector M50.
3. Check continuity between air mix door motor (Passenger) harness connector M143 terminal 4 (R/W) and front air control harness connector M50 terminal 41 (R/W).

4 - 41 : Continuity should exist.

OK or NG

OK >> Replace air mix door motor (Passenger). Refer to [ATC-154, "FRONT AIR MIX DOOR MOTOR \(PASSENGER\)"](#)

NG >> Repair or replace harness as necessary.

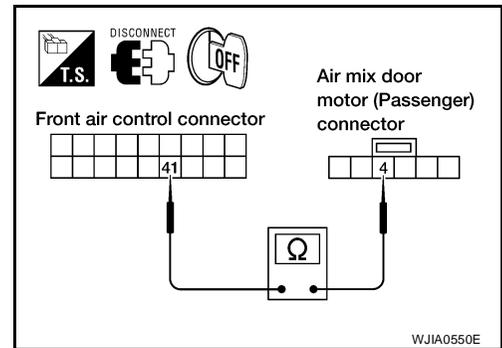

DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR (REAR)

1. CHECK RESULT FROM FRONT AIR CONTROL SELF-DIAGNOSIS

Self-diagnosis code 38 is present. Refer to [ATC-53, "A/C System Self-diagnosis Function"](#).

YES or NO

YES >> GO TO 2.

NO >> GO TO 3.

2. CHECK POWER SUPPLY CIRCUIT FOR AIR MIX DOOR MOTOR (REAR)

1. Turn ignition switch OFF.
2. Disconnect front air control connector M50 and air mix door motor (Rear) connector B155.
3. Check continuity between front air control harness connector M50 terminal 27 (GR/R) and air mix door motor (Rear) harness connector B155 terminal 1 (GR/R) and between front air control harness connector M50 terminal 28 (L/Y) and air mix door motor (Rear) harness connector B155 terminal 6 (L/Y).


27 - 1 Continuity should exist.

28 - 6 Continuity should exist.

OK or NG

OK >> Replace air mix door motor (Rear). Refer to [ATC-154, "REAR AIR MIX DOOR MOTOR"](#).

NG >> Repair or replace harness as necessary.

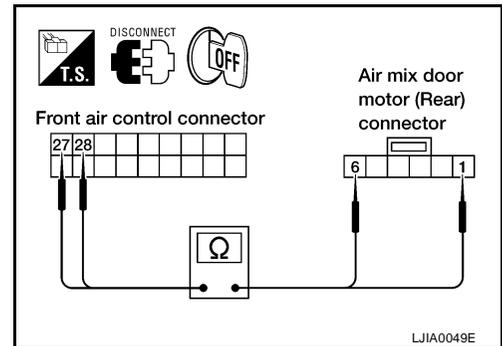

3. CHECK PBR REFERENCE SIGNAL VOLTAGE


1. Turn ignition switch OFF.
2. Disconnect air mix door motor (Rear) connector B155.
3. Turn ignition switch ON.
4. Check voltage between air mix door motor (Rear) harness connector B155 terminal 3 (Y) and ground.

3 - Ground : Approx. 5V

OK or NG

OK >> GO TO 5.

NG >> GO TO 4.

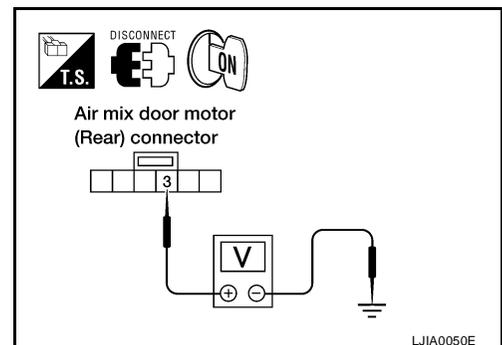

TROUBLE DIAGNOSIS

4. CHECK PBR REFERENCE VOLTAGE CIRCUIT BETWEEN AIR MIX DOOR MOTOR (REAR) AND FRONT AIR CONTROL


1. Turn ignition switch OFF.
2. Disconnect front air control connector M49.
3. Check continuity between air mix door motor (Rear) harness connector B155 terminal 3 (Y) and front air control harness connector M49 terminal 2 (Y).

3 - 2 **Continuity should exist.**

OK or NG

OK >> Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .

NG >> Repair or replace harness as necessary.

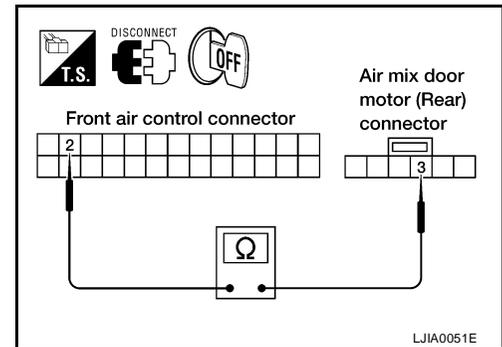

5. CHECK PBR GROUND REFERENCE CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect front air control connector M49.
3. Check continuity between air mix door motor (Rear) harness connector B155 terminal 2 (P) and front air control harness connector M49 terminal 15 (P).

2 - 15 **Continuity should exist.**

OK or NG

OK >> GO TO 6.

NG >> Repair or replace harness as necessary.

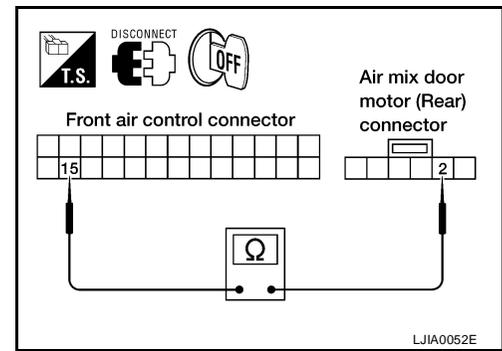

6. CHECK PBR FEEDBACK SIGNAL


1. Reconnect front air control connector and air mix door motor (Rear) connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M50 terminal 42 (R/Y) and ground.
4. Rotate rear temperature/mode dial (Front) through complete range.

42 - Ground **: Approx. 0 - 5V**

OK or NG

OK >> Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .

NG >> GO TO 7.

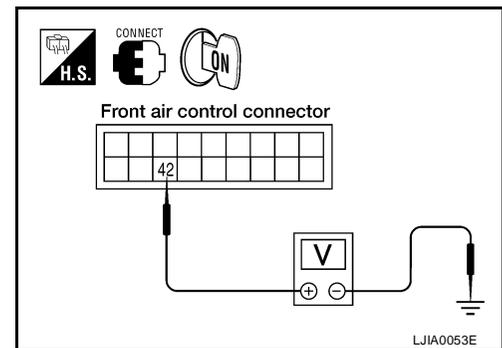

TROUBLE DIAGNOSIS

7. CHECK PBR FEEDBACK CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect air mix door motor (Rear) connector B155 and front air control connector M50.
3. Check continuity between air mix door motor (Rear) harness connector B155 terminal 4 (R/Y) and front air control harness connector M50 terminal 42 (R/Y).

4 - 42

Continuity should exist.

OK or NG

- OK >> Replace air mix door motor (Rear) [ATC-154, "REAR AIR MIX DOOR MOTOR"](#) .
- NG >> Repair or replace harness as necessary.

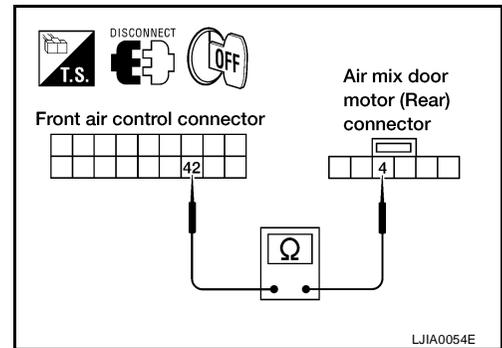

A
B
C
D
E
F
G
H
I
K
L
M

ATC

TROUBLE DIAGNOSIS


EJS002CG

Intake Door Motor Circuit

SYMPTOM:

- Intake door does not change.
- Intake door motor does not operate normally.

INSPECTION FLOW

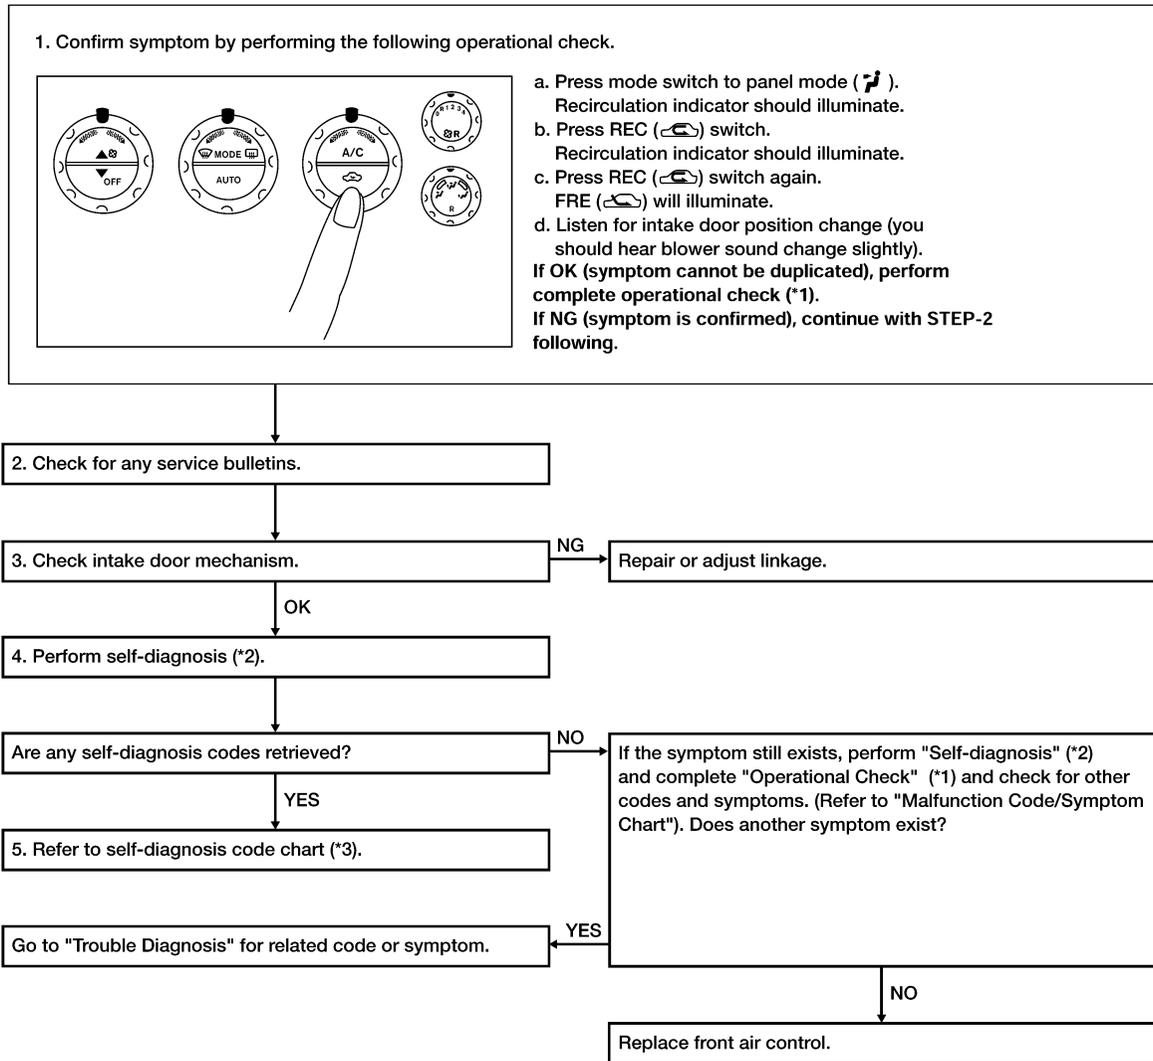

*1 [ATC-56, "Operational Check \(Front\)"](#)

*2 [ATC-53, "A/C System Self-diagnosis Function"](#)

*3 [ATC-55, "SELF-DIAGNOSIS CODE CHART"](#)

WJIA0767E

TROUBLE DIAGNOSIS

SYSTEM DESCRIPTION

Component Parts


Intake door control system components are:

- Front air control
- Intake door motor
- PBR (built into intake door motor)
- In-vehicle sensor
- Ambient sensor
- Optical sensor
- Intake sensor


System Operation

The intake door control determines the intake door position based on the position of the recirculation switch. When the recirculation switch is depressed the intake door motor rotates closing off the fresh air inlet and recirculating the cabin air. If the recirculation switch is depressed again, the intake door motor rotates in the opposite direction, again allowing fresh air into the cabin.

In the AUTO mode, the front air control determines the intake door position based on the ambient temperature, the intake air temperature and the in-vehicle temperature. When the DEFROST, or OFF switches are pushed or A/C switch is OFF, the front air control sets the intake door at the fresh position.

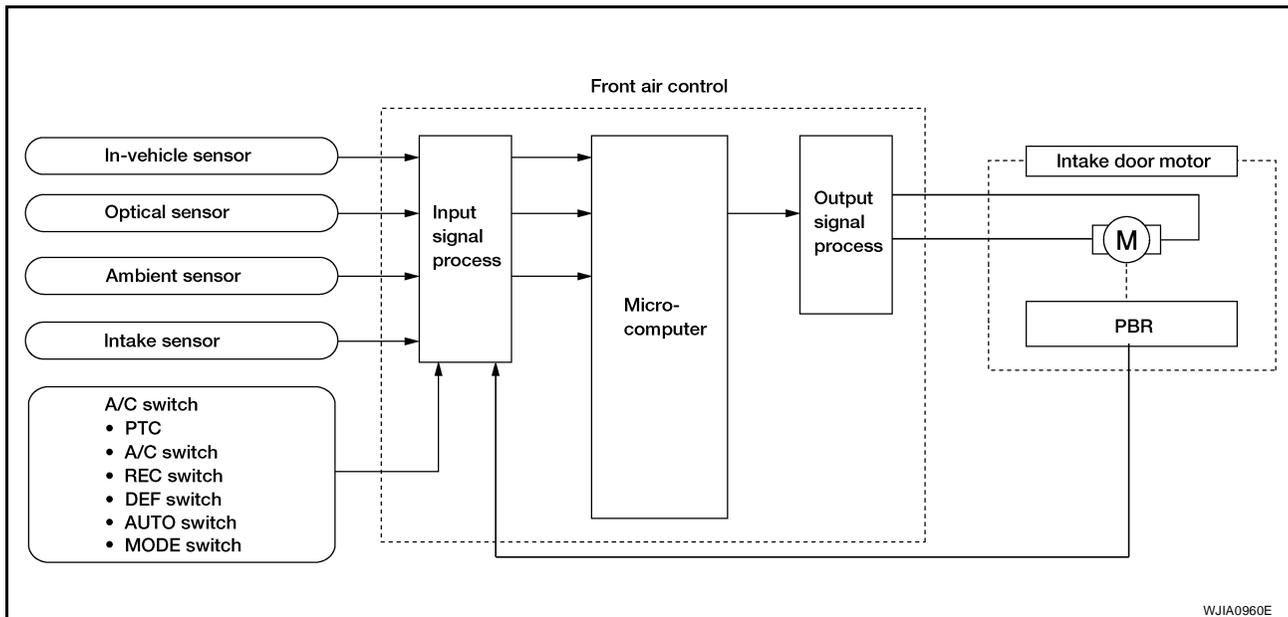

Intake Door Control Specification

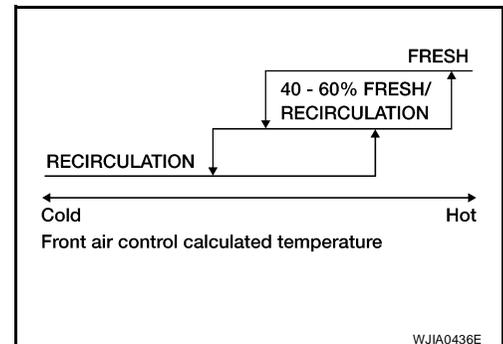

TROUBLE DIAGNOSIS


EJS002CH

Defroster Door Motor Circuit

SYMPTOM:

- Defroster door does not change.
- Defroster door motor does not operate normally.

INSPECTION FLOW

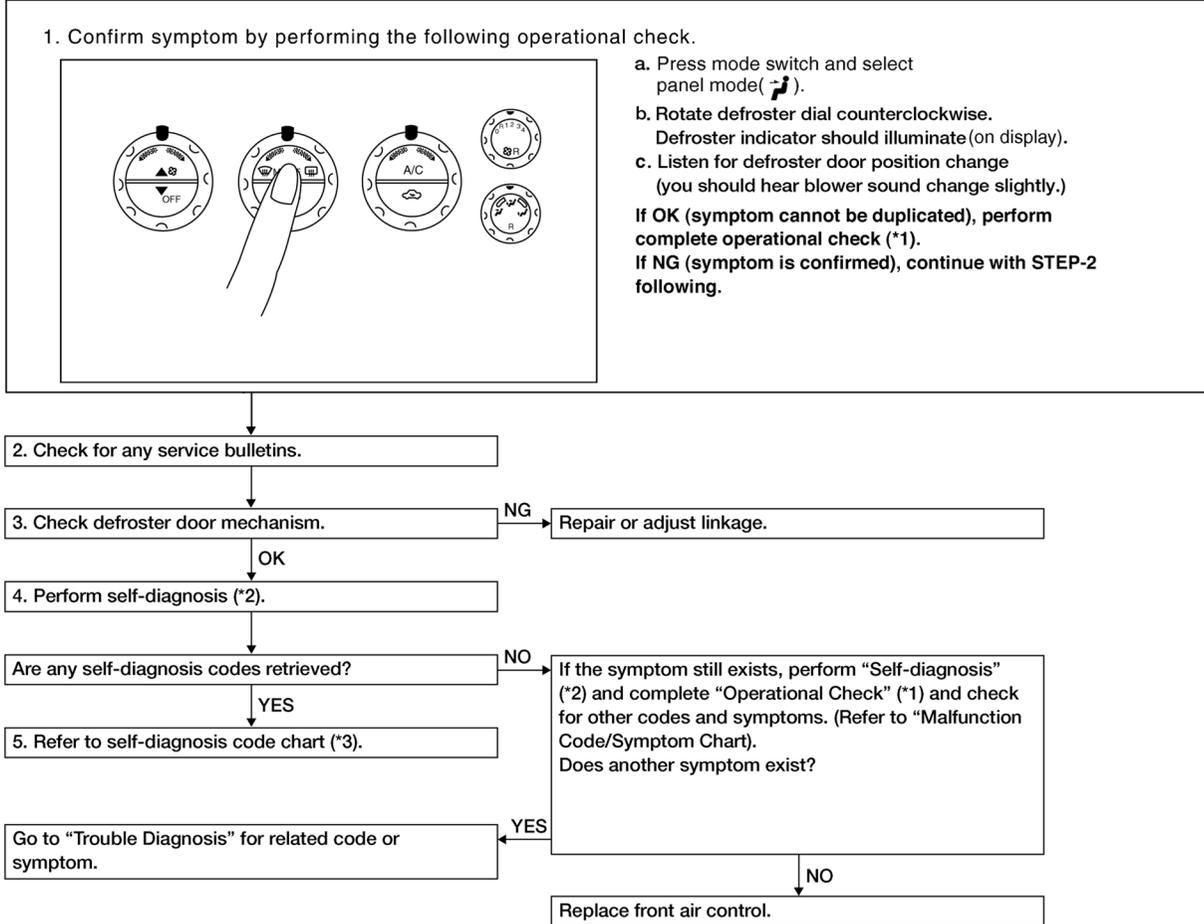

*1 [ATC-56, "Operational Check \(Front\)"](#)

*2 [ATC-53, "A/C System Self-diagnosis Function"](#)

*3 [ATC-55, "SELF-DIAGNOSIS CODE CHART"](#)

LJIA0062E

TROUBLE DIAGNOSIS

SYSTEM DESCRIPTION

Component Parts


Defroster door control system components are:

- Front air control
- Defroster door motor
- PBR (Built into defroster door motor)
- In-vehicle sensor
- Ambient sensor
- Optical sensor
- Intake sensor

System Operation

The front air control determines defroster door position based on the position of the defroster switch. When the defroster switch is rotated counterclockwise, the defroster door motor rotates directing air to the defroster ducts. When any mode other than defroster is selected, the defroster motor rotates in the opposite direction closing off air flow to the defroster ducts.

In the AUTO mode, the front air control determines defroster door position based on the ambient temperature, the intake air temperature and the in-vehicle temperature.

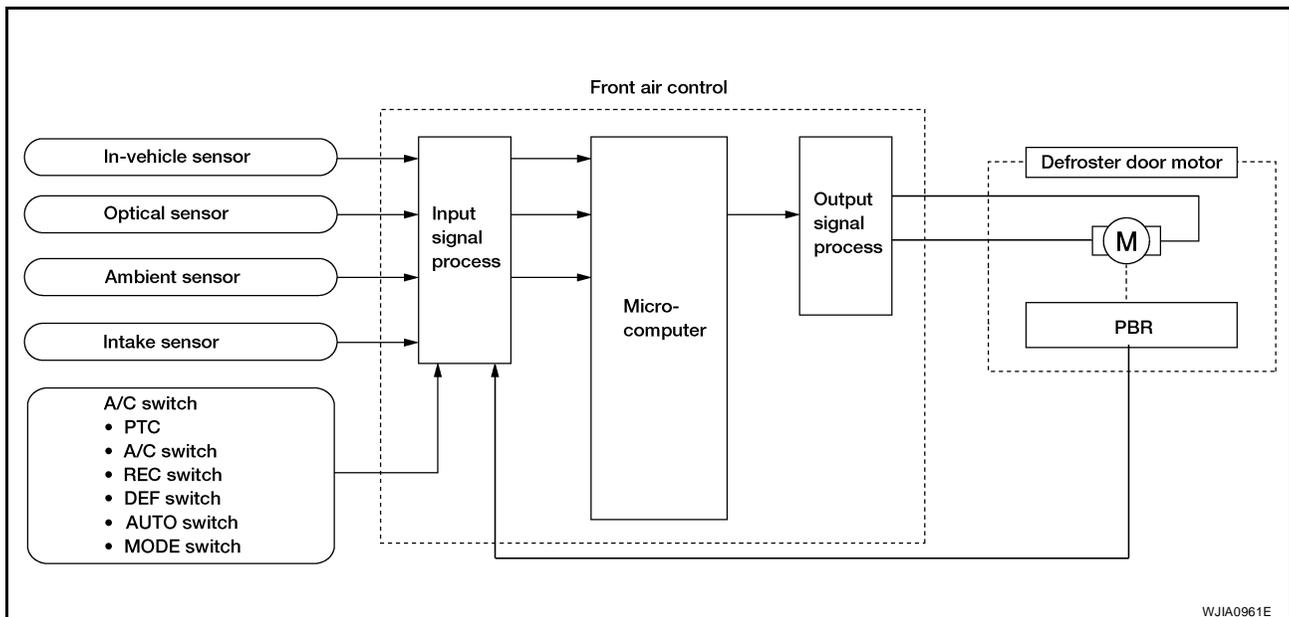


WJIA0961E

COMPONENT DESCRIPTION

Defroster door motor

The defroster door motor is attached to the front heater & cooling unit. The front air control sends a voltage to rotate to the defroster door directing the air flow either to the defroster ducts, or to the floor ducts, depending on which way the voltage and ground are applied to the motor leads. Motor rotation is conveyed to a lever which activates the defroster door.

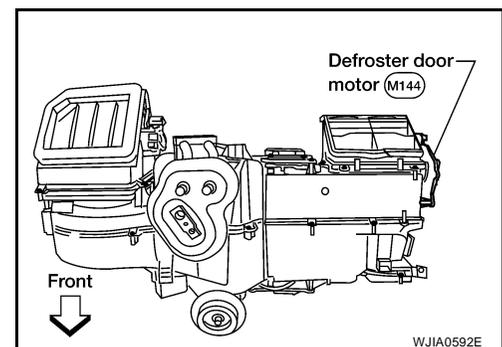

WJIA0592E

TROUBLE DIAGNOSIS

DIAGNOSTIC PROCEDURE FOR DEFROSTER DOOR MOTOR

1. CHECK RESULT FROM FRONT AIR CONTROL SELF-DIAGNOSIS

Self-diagnosis code 62 is present. Refer to [ATC-53, "A/C System Self-diagnosis Function"](#) .


YES or NO

- YES >> GO TO 2.
- NO >> GO TO 3.

2. CHECK POWER SUPPLY CIRCUIT FOR DEFROSTER DOOR MOTOR

1. Turn ignition switch OFF.
2. Disconnect front air control connector M49 and defroster door motor connector M144.
3. Check continuity between front air control harness connector M49 terminal 19 (LG) and defroster door motor harness connector M144 terminal 1 (LG) and between front air control harness connector M49 terminal 20 (P/B) and defroster door motor connector M144 terminal 6 (P/B).

19 - 1 : Continuity should exist.
20 - 6 : Continuity should exist.

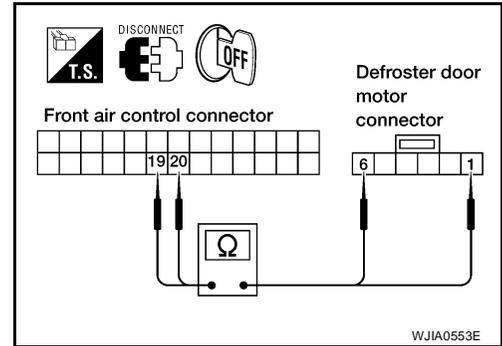

OK or NG

- OK >> Replace defroster door motor. Refer to [ATC-150, "Removal and Installation"](#) .
- NG >> Repair or replace harness as necessary.


3. CHECK PBR REFERENCE SIGNAL VOLTAGE

1. Disconnect defroster door motor harness connector M144.
2. Turn ignition switch ON.
3. Check voltage between defroster door motor harness connector M144 terminal 3 (Y) and ground.

3 - Ground : Approx. 5V

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 4.

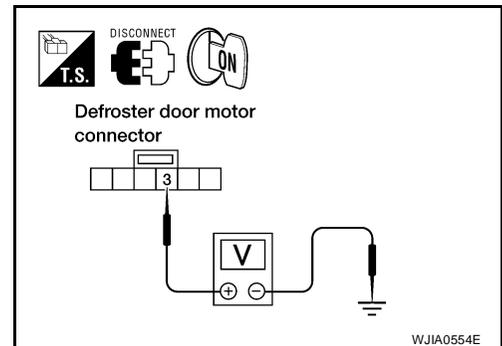


4. CHECK PBR REFERENCE VOLTAGE CIRCUIT BETWEEN DEFROSTER DOOR MOTOR AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector M49.
3. Check continuity between defroster door motor harness connector M144 terminal 3 (Y) and front air control harness connector M49 terminal 2 (Y).

3 - 2 : Continuity should exist.

OK or NG

- OK >> Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .
- NG >> Repair or replace harness as necessary.

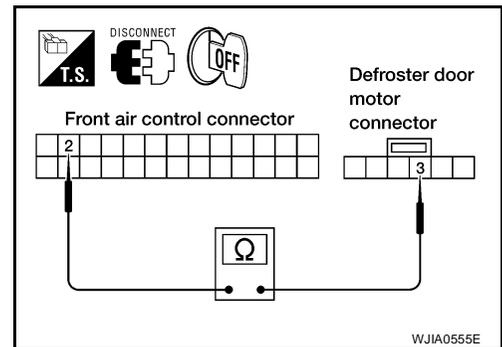

TROUBLE DIAGNOSIS


5. CHECK PBR GROUND REFERENCE CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front air control connector M49.
3. Check continuity between defroster door motor harness connector M144 terminal 2 (P) and front air control harness connector M49 terminal 15 (P).

2 - 15 : Continuity should exist.

OK or NG

- OK >> GO TO 6.
NG >> Repair or replace harness as necessary.

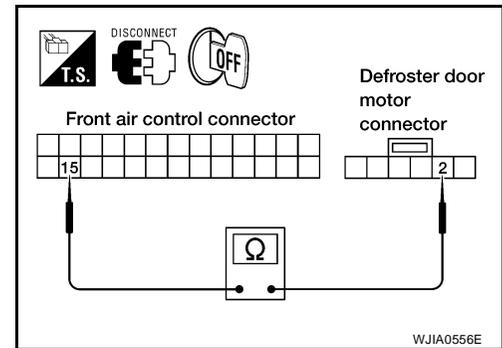


6. CHECK PBR FEEDBACK SIGNAL

1. Reconnect front air control connector and defroster door motor connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M49 terminal 25 (LG/B) and ground.
4. Change mode between floor, defroster, and panel.

25 - Ground : Approx. 0 - 5V

OK or NG

- OK >> Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .
NG >> GO TO 7.

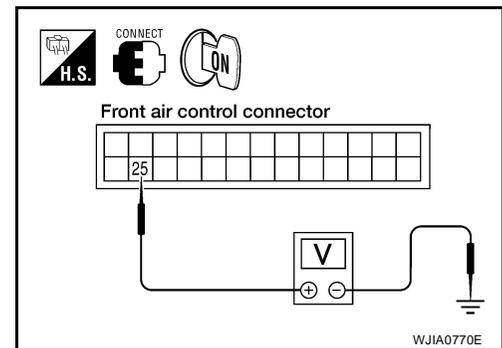


7. CHECK PBR FEEDBACK CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect defroster door motor connector M144 and front air control connector M49.
3. Check continuity between defroster door motor harness connector M144 terminal 4 (LG/B) and front air control harness connector M49 terminal 25 (LG/B).

4 - 25 : Continuity should exist.

OK or NG

- OK >> Replace defroster door motor. Refer to [ATC-150, "Removal and Installation"](#) .
NG >> Repair or replace harness as necessary.

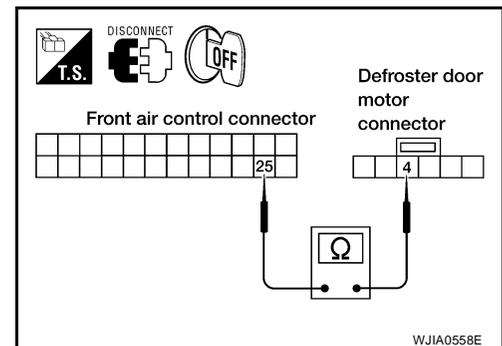

TROUBLE DIAGNOSIS


EJS002C1

Front Blower Motor Circuit

SYMPTOM:

- Blower motor operation is malfunctioning.

INSPECTION FLOW

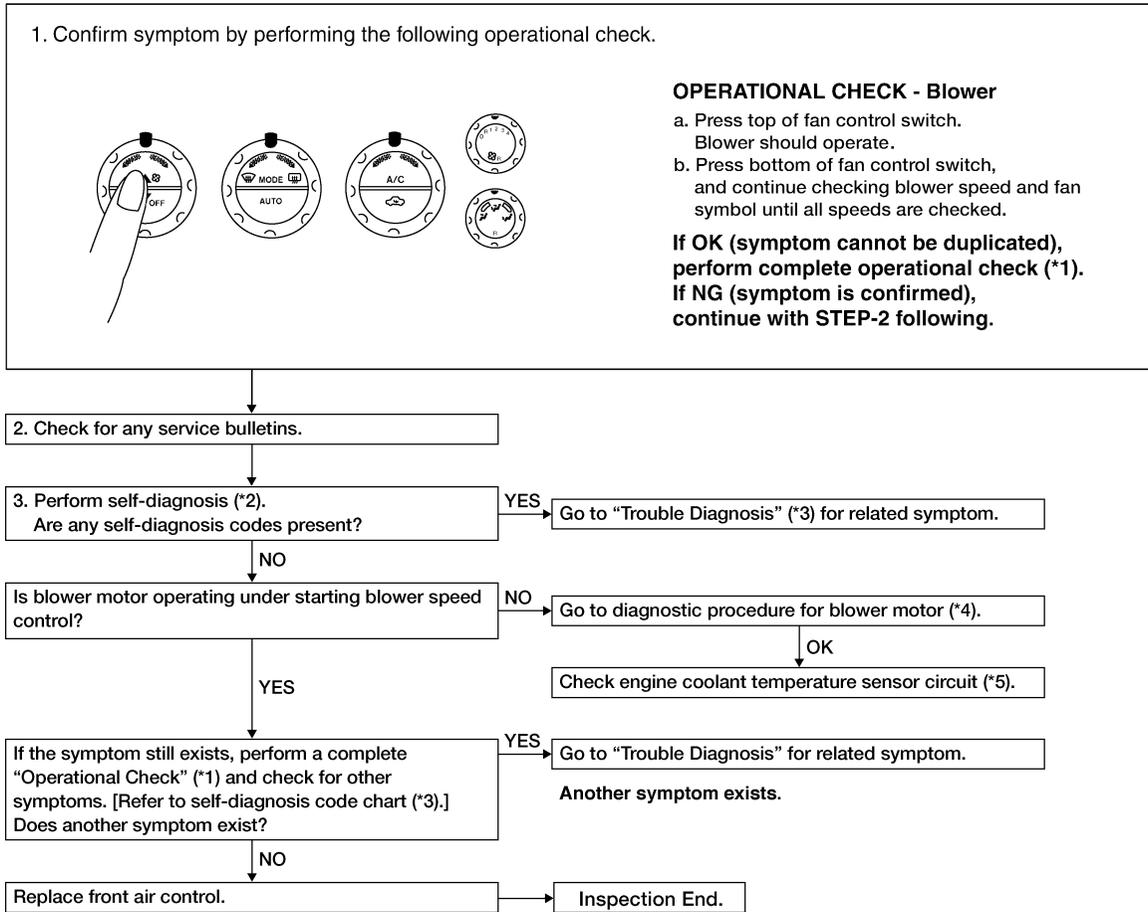

*1 [.ATC-56, "Operational Check \(Front\)"](#)

*4 [ATC-85, "DIAGNOSTIC PROCEDURE FOR BLOWER MOTOR"](#)

*2 [ATC-53, "A/C System Self-diagnosis Function"](#)

*5 [EC-410, "DTC P1217 ENGINE OVER TEMPERATURE"](#)

*3 [ATC-55, "SELF-DIAGNOSIS CODE CHART"](#)

WJIA0771E

A
B
C
D
E
F
G
H
I
K
L
M

ATC

TROUBLE DIAGNOSIS


SYSTEM DESCRIPTION

Component Parts

Blower speed control system components are:

- Front air control
- Front blower motor
- In-vehicle sensor
- Ambient sensor
- Optical sensor
- Intake sensor

System Operation

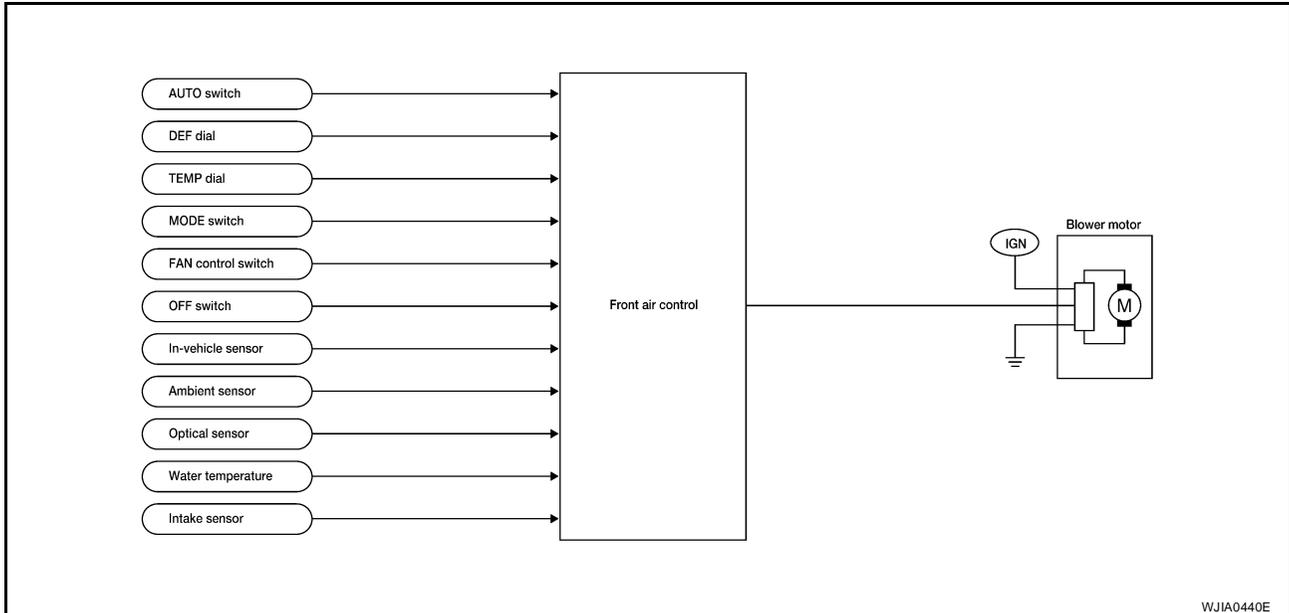

WJIA0440E

Automatic Mode

In the automatic mode, the blower motor speed is calculated by the front air control and variable blower control based on input from the in-vehicle sensor, optical sensor, intake sensor and ambient sensor, and potentiometer temperature control (PTC).

When the air flow is increased, the duty ratio of the blower motor's drive signal is changed at 8%/sec. to prevent a sudden increase in air flow.

In addition to manual air flow control and the usual automatic air flow control, starting air flow control, low water temperature starting control and high passenger compartment temperature starting control are available.

Starting Blower Speed Control

Start up from cold soak condition (Automatic mode).

In a cold start up condition where the engine coolant temperature is below 50°C (122°F), the blower will not operate at blower speed 1 for a short period of time (up to 210 seconds). The exact start delay time varies depending on the ambient and engine coolant temperatures.

In the most extreme case (very low ambient temperature) the blower starting delay will be 210 seconds as described above. After the coolant temperature reaches 50°C (122°F), or the 210 seconds has elapsed, the blower speed will increase to the objective blower speed.

Start up from normal operating or hot soak condition (Automatic mode).


The blower will begin operation momentarily after the AUTO switch is pushed. The blower speed will gradually rise to the objective speed over a time period of 3 seconds or less (actual time depends on the objective blower speed).

TROUBLE DIAGNOSIS

Blower Speed Compensation - Sunload

When the in-vehicle temperature and the set temperature are very close, the blower will be operating at low speed. The speed will vary depending on the sunload. During conditions of low or no sunload, the blower operates at low speed. During high sunload conditions, the front air control causes the blower speed to increase.


Blower Speed Control Specification

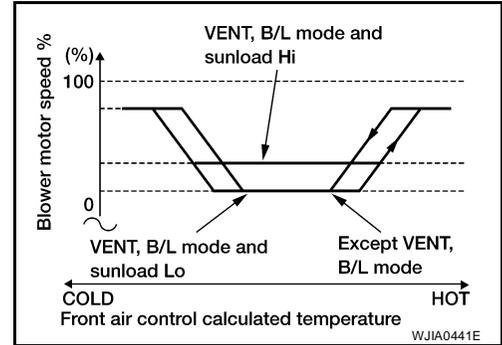

COMPONENT DESCRIPTION


Variable Blower Control

The variable blower control is located on the front heater and cooling unit. The variable blower control receives a gate voltage from the front air control to steplessly maintain the blower motor voltage in the 0 to 5 volt range (approx.).

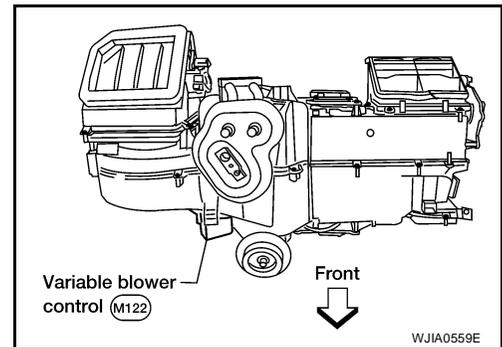

DIAGNOSTIC PROCEDURE FOR BLOWER MOTOR

SYMPTOM: Blower motor operation is malfunctioning under starting blower speed control.

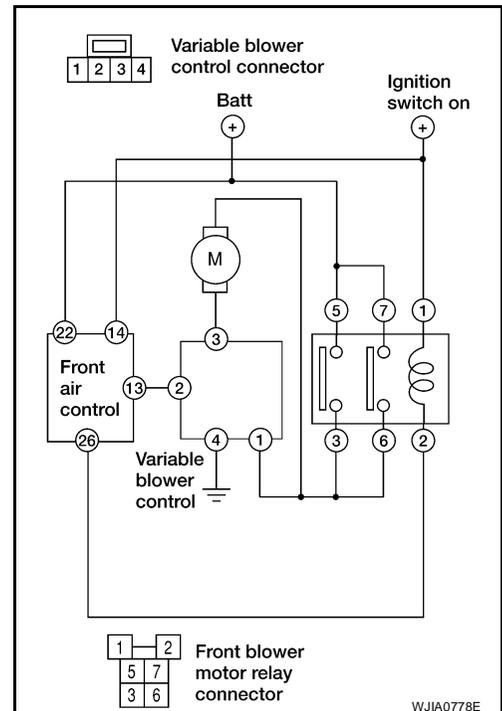

TROUBLE DIAGNOSIS

1. CHECK FUSES

Check 20A fuses [No. 24 and 27 (located in the fuse and fusible link box)]. For fuse layout. Refer to [PG-77, "FUSE AND FUSIBLE LINK BOX"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> GO TO 10.


2. CHECK FRONT BLOWER MOTOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front blower motor connector M62.
3. Turn ignition switch ON.
4. Press the MODE switch to select any mode except OFF.
5. Set front fan switch to high.
6. Check voltage between front blower motor harness connector M62 terminal 2 (W/L) and ground.

2 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 12.
- NG >> GO TO 3.

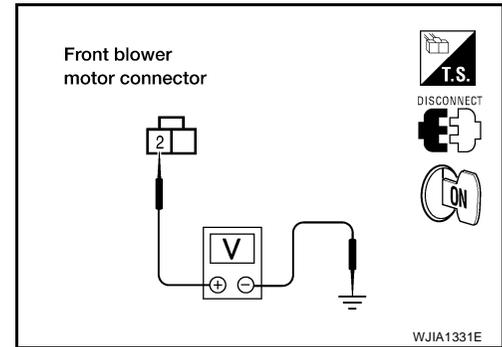


3. CHECK FRONT BLOWER MOTOR RELAY (SWITCH SIDE) POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front blower motor relay M107.
3. Check voltage between front blower motor relay harness connector M107 terminals 5 (GR) and 7 (P), and ground.

5, 7 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 4.
- NG >> Repair harness or connector.

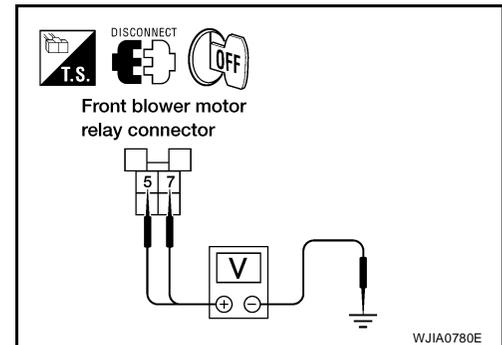

4. CHECK FRONT BLOWER MOTOR RELAY

Refer to [ATC-89, "Front Blower Motor Relay"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Replace front blower motor relay.


5. CHECK FRONT BLOWER MOTOR RELAY (SWITCH SIDE) CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect blower motor relay connector M107 and front blower motor connector M62.
3. Check continuity between front blower motor relay harness connector M107 terminals 3 (W/L) and 6 (W/L) and front blower motor harness connector M62 terminal 2 (W/L).

3, 6 - 2 : Continuity should exist.

OK or NG

- OK >> GO TO 6.
- NG >> Repair harness or connector.

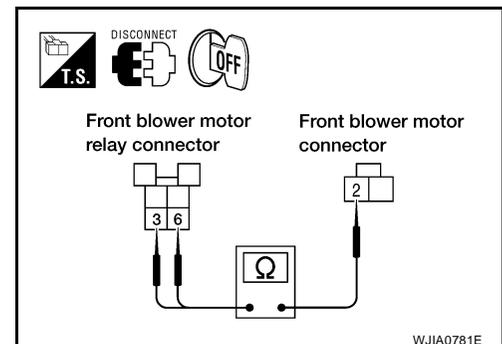

TROUBLE DIAGNOSIS


6. CHECK VARIABLE BLOWER CONTROL POWER SUPPLY CIRCUIT FOR OPEN

1. Disconnect variable blower control connector M122.
2. Check continuity between front blower motor relay harness connector M107 terminals 3 (W/L) and 6 (W/L), and variable blower control harness connector M122 terminal 1 (W/L).

3, 6 - 1 : Continuity should exist.

OK or NG

- OK >> GO TO 7.
- NG >> Repair harness or connector.

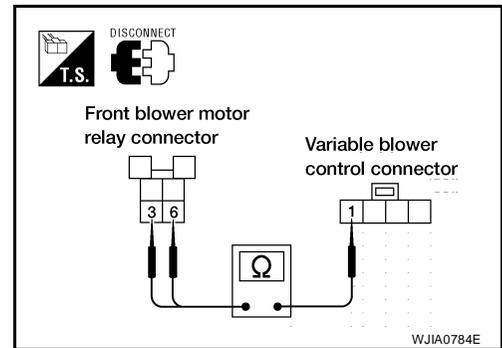


7. CHECK VARIABLE BLOWER CONTROL SIGNAL CIRCUIT

1. Disconnect front air control connector M49.
2. Check continuity between front air control harness connector M49 terminal 13 (G/R) and variable blower control harness connector M122 terminal 2 (G/R).

13 - 2 : Continuity should exist.

OK or NG

- OK >> GO TO 8.
- NG >> Repair harness or connector.

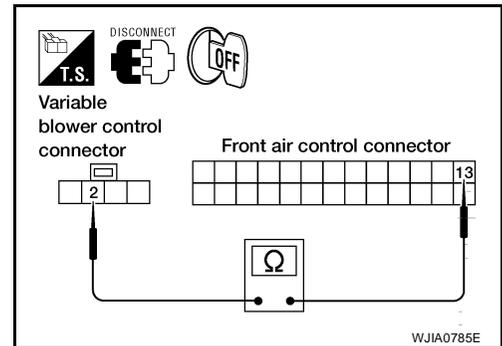


8. CHECK FRONT BLOWER MOTOR RELAY (COIL SIDE) POWER SUPPLY

1. Turn ignition switch ON.
2. Check voltage between front blower motor relay harness connector M107 terminal 1 (Y/G) and ground.

1 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 9.
- NG >> Repair harness or connector.

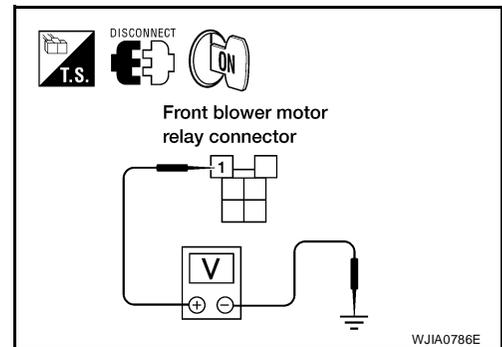


9. CHECK FRONT BLOWER MOTOR RELAY (COIL SIDE) GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between front blower motor relay harness connector M107 terminal 2 (R/B) and front air control harness connector M49 terminal 26 (R/B).

2 - 26 : Continuity should exist.

OK or NG

- OK >> Replace front air control. Refer to [ATC-135. "FRONT AIR CONTROL"](#).
- NG >> Repair harness or connector.

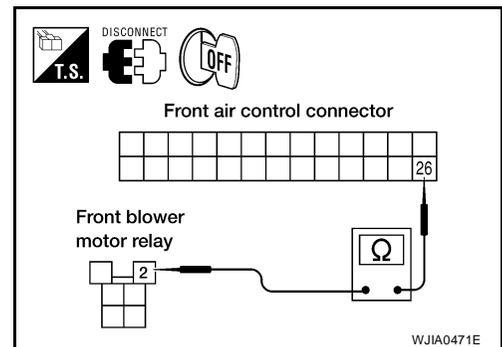

TROUBLE DIAGNOSIS

10. REPLACE FUSES

1. Replace fuses.
2. Activate the front blower motor.
3. Do fuses blow?

YES or NO

- YES >> GO TO 11.
NO >> Inspection End.


11. CHECK FRONT BLOWER MOTOR POWER SUPPLY CIRCUIT FOR SHORT

1. Turn ignition switch OFF.
2. Disconnect variable blower control connector M122.
3. Check continuity between variable blower control harness connector M122 terminal 1 (W/L) and ground.

1 - Ground. : **Continuity should not exist.**

OK or NG

- OK >> GO TO 12.
NG >> Repair harness or connector.

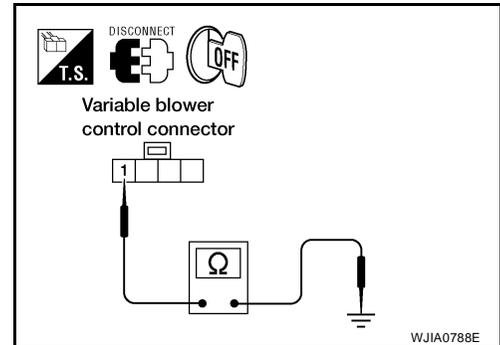


12. CHECK VARIABLE BLOWER CONTROL SIGNAL CIRCUIT

1. Disconnect front air control connector M49.
2. Check continuity between front air control harness connector M49 terminal 13 (G/R) and variable blower control harness connector M122 terminal 2 (G/R).

13 - 2 : **Continuity should exist.**

OK or NG

- OK >> Check blower motor, if OK replace variable blower control. Refer to [ATC-89, "Front Blower Motor"](#) .
NG >> Repair harness or connector.

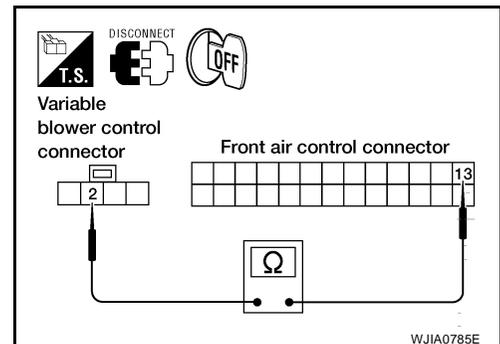


TROUBLE DIAGNOSIS

COMPONENT INSPECTION

Front Blower Motor Relay


Check continuity between terminals by supplying 12 volts and ground to coil side terminals of relay.

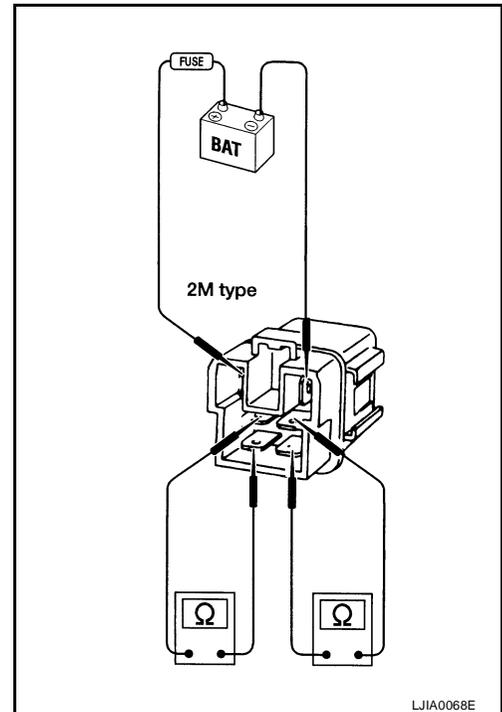

Front Blower Motor

Confirm smooth rotation of the blower motor.

- Ensure that there are no foreign particles inside the blower unit.
- Apply 12 volts to terminal 2 and ground to terminal 1 and verify that the motor operates freely and quietly.

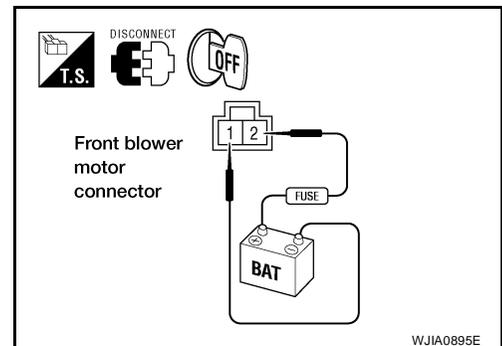

A
B
C
D
E
F
G
H

I

ATC

K

L

M

TROUBLE DIAGNOSIS


EJS002CJ

Rear Blower Motor Circuit

SYMPTOM:

- Blower motor operation is malfunctioning.

INSPECTION FLOW

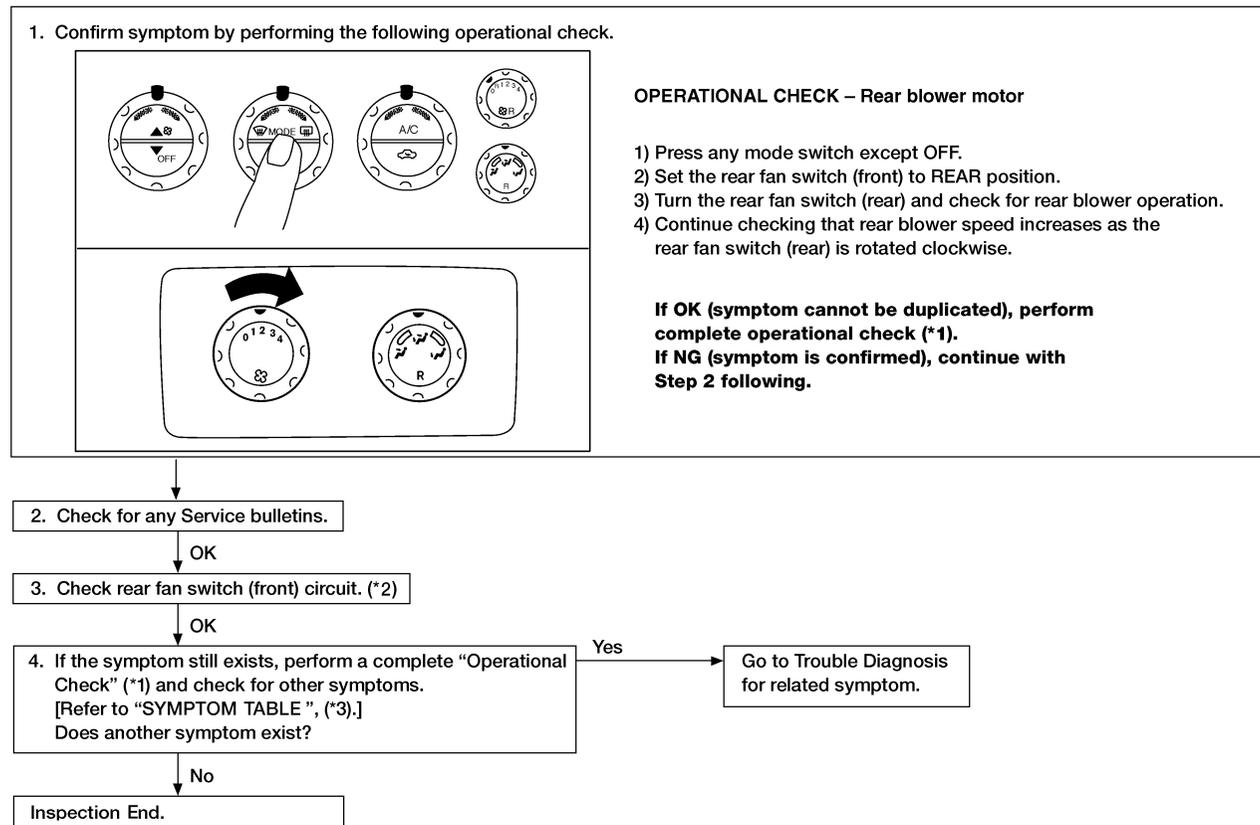

WJIA0791E

*1 [ATC-59, "Operational Check \(Rear\)"](#) *2 [ATC-99, "Rear Fan Switch \(Front\)"](#) *3 [ATC-35, "SYMPTOM TABLE"](#)

TROUBLE DIAGNOSIS


SYSTEM DESCRIPTION

Component Parts

Rear blower speed control system components are:

- Front air control
- Rear fan switch (front)
- Rear fan switch (rear)
- Rear blower motor resistor
- Rear blower motor
- Rear blower motor relay

System Operation

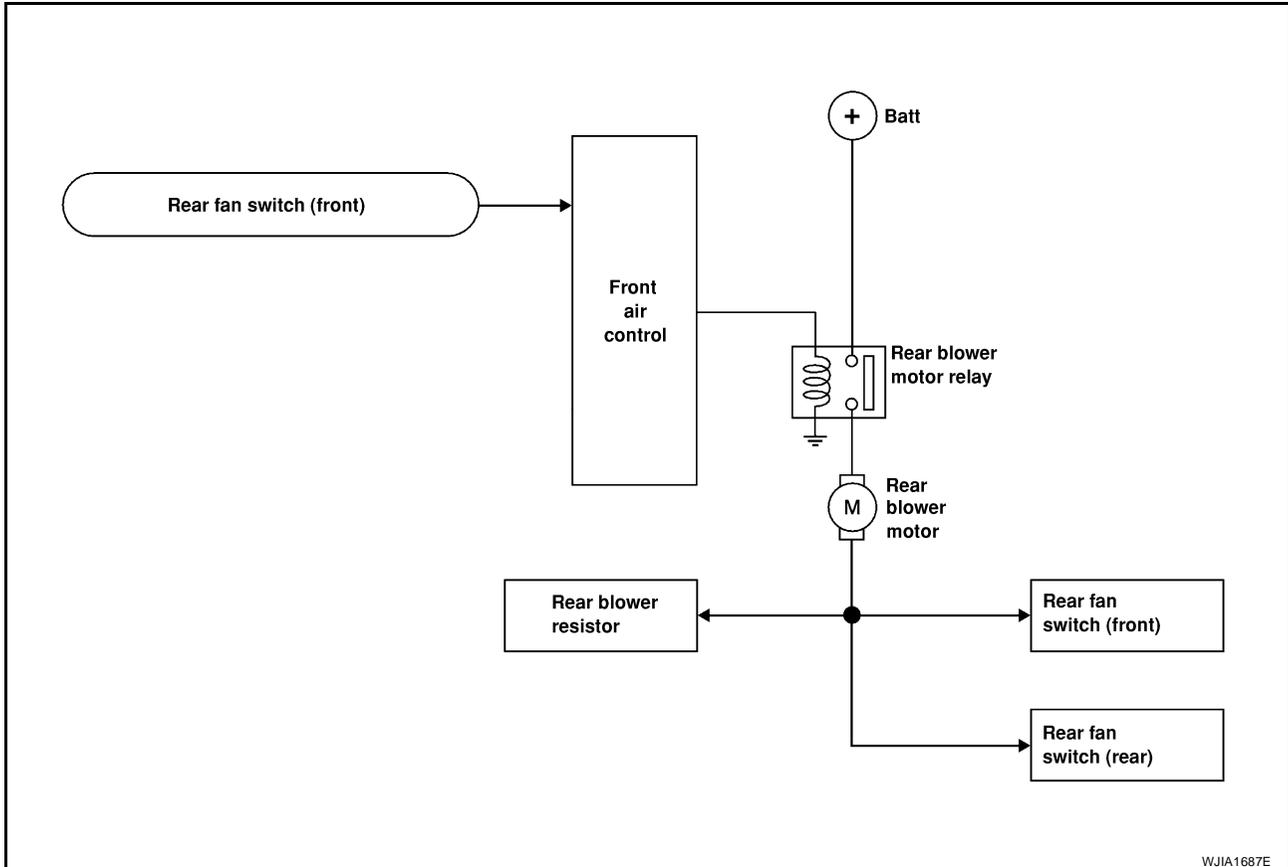

NOTE:

The rear heat or A/C cannot operate unless the front heat or A/C is on.

Rear Blower Control

When the rear fan switch (front) is in the off (O) position, the rear blower motor cannot operate.

When the rear fan switch (front) is in the rear (R) position, it allows the rear fan switch (rear) to control the rear blower motor speed. In any other position (1-4), the rear fan switch (front) controls the rear blower motor speed regardless of the rear fan switch (rear) position.

DIAGNOSTIC PROCEDURE FOR REAR BLOWER MOTOR

Rear Fan Switch (Rear) Circuit

SYMPTOM:

- Rear blower motor does not rotate when rear fan switch (front) is set to rear (R) position.

TROUBLE DIAGNOSIS

1. CHECK REAR BLOWER MOTOR OPERATION

Blower motor rotates normally when rear fan switch (front) is set at 1 - 4 speed.

OK or NG

OK >> GO TO 2.

NG >> Refer to [ATC-93, "Trouble Diagnosis Procedure For Rear Blower Motor \(1 - 4 Speed\)"](#) .

2. CHECK REAR FAN SWITCH (FRONT)

Refer to [ATC-99, "Rear Fan Switch \(Front\)"](#) .

OK or NG

OK >> GO TO 3.

NG >> Replace rear fan switch (front). Refer to [ATC-135, "FRONT AIR CONTROL"](#)

3. CHECK REAR FAN SWITCH (REAR)

Refer to [ATC-99, "Rear Fan Switch \(Rear\)"](#) .

OK or NG

OK >> GO TO 4.

NG >> Replace rear fan switch (rear). Refer to [ATC-135, "REAR AIR CONTROL"](#) .

4. CHECK CIRCUIT CONTINUITY


1. Turn ignition switch OFF.
2. Disconnect rear fan switch (front) connector M52 and rear fan switch (rear) (Rear air control) connector R208.
3. Check voltage between rear fan switch (front) harness connector M52 terminal 2 (BR) and rear fan switch (rear) (Rear air control) harness connector R208 terminal 10 (BR).

2 - 10 : Continuity should exist.

OK or NG

OK >> Inspection End.

NG >> Repair harness or connector.

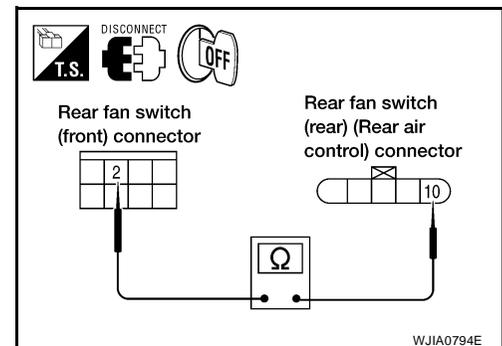

TROUBLE DIAGNOSIS


Trouble Diagnosis Procedure For Rear Blower Motor (1 - 4 Speed)

SYMPTOM:

- Rear blower motor does not rotate when rear fan switch (front) is set at 1 - 4 speed.

Inspection Flow

1. Confirm symptom by performing the following operational check.

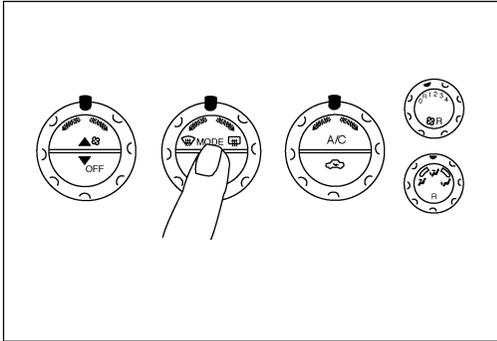

OPERATIONAL CHECK – Rear blower motor

- 1) Press any mode switch except OFF.
- 2) Set the rear fan switch (front) to rear blower speed position 1 and check for rear blower operation.
- 3) Continue checking that rear blower speed increases as the rear fan switch (front) is set to rear blower speed positions 2-4 .

If OK (symptom cannot be duplicated), perform complete operational check (*1).
If NG (symptom is confirmed), continue with STEP-2 following.

2. Check for any Service bulletins.

OK

3. Check rear blower motor (1-4 speed) circuit. (*2)

OK

4. If the symptom still exists, perform a complete "Operational Check" (*1) and check for other symptoms. [Refer to "SYMPTOM TABLE", (*3).] Does another symptom exist?

Yes

Go to Trouble Diagnosis for related symptom.

No

Inspection End.

*1 [ATC-59, "Operational Check \(Rear\)"](#)

*2 [ATC-93, "Trouble Diagnosis Procedure For Rear Blower Motor \(1 - 4 Speed\)"](#)

*3 [ATC-35, "SYMPTOM TABLE"](#)

WJIA0795E

TROUBLE DIAGNOSIS

1. DIAGNOSTIC PROCEDURE

Blower motor rotates normally at each speed.

OK or NG

- OK >> Inspection End.
- NG >> 1. Does not rotate at any speed, GO TO 2.
- 2. Does not rotate at 1 - 3 speed, GO TO 13.
- 3. Does not rotate at 4 speed, GO TO 18.

2. CHECK FUSES

Check 15A fuses [Nos. 10 and 11, located in the fuse block (J/B)]. Refer to [PG-76, "FUSE BLOCK-JUNCTION BOX\(J/B\)"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 8.


3. CHECK REAR BLOWER MOTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect rear blower motor connector B134.
3. Select any rear blower speed except OFF.
4. Turn ignition switch ON.
5. Check voltage between rear blower motor harness connector B134 terminal 2 (L/R) and ground.

1 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 11.
- NG >> GO TO 4.

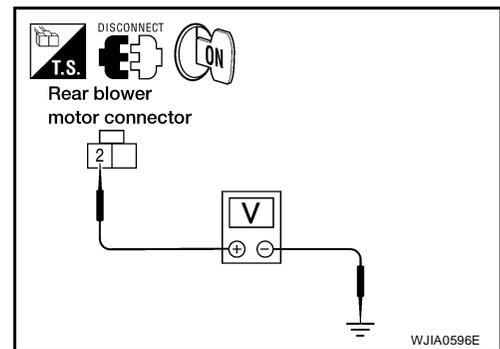

4. CHECK REAR BLOWER MOTOR RELAY

Refer to [ATC-99, "Rear Blower Motor Relay"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Replace rear blower motor relay.


5. CHECK REAR BLOWER MOTOR POWER FROM RELAY TO REAR BLOWER MOTOR

1. Turn ignition switch OFF.
2. Reconnect rear blower motor connector.
3. Disconnect rear blower motor relay J1.
4. Turn ignition switch ON.
5. Set rear fan switch (front) to any position except off (0), rear (R), or 4 - speed.
6. Momentarily (no more than 4 seconds), connect a jumper wire between rear blower motor relay connector J1 terminals 3 and 5.

Rear blower motor should rotate.

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 10.

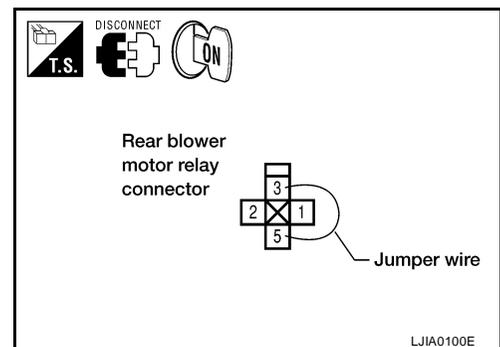

TROUBLE DIAGNOSIS


6. CHECK REAR BLOWER MOTOR RELAY (COIL SIDE) POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect fuse block (J/B) connector M39.
3. Turn ignition switch ON.
4. Set rear fan switch (front) to any position except off (O), rear (R), or 4 - speed.
5. Check voltage between fuse block (J/B) harness connector M39 terminal 3Q (W/L) and ground.

1 - Ground : **Battery voltage should exist.**

OK or NG

- OK >> GO TO 7.
NG >> GO TO 20.

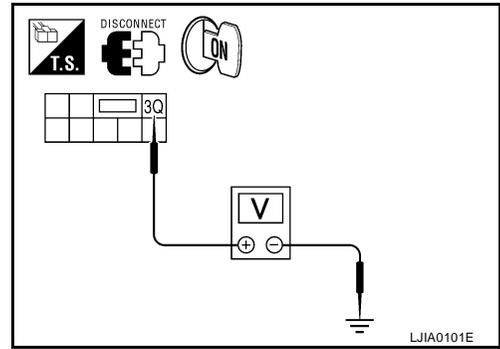


7. CHECK REAR BLOWER MOTOR RELAY (COIL SIDE) GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect fuse block (J/B) connector M3.
3. Check continuity between fuse block (J/B) harness connector M3 terminal 7N (B) and ground.

7N - Ground : **Continuity should exist.**

OK or NG

- OK >> Replace fuse block (J/B).
NG >> Repair harness or connector.

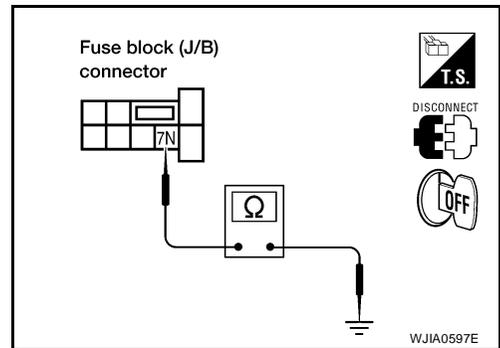

8. REPLACE FUSE

Refer to [PG-76, "FUSE BLOCK-JUNCTION BOX\(J/B\)"](#) .
Fuse should not open when rear blower motor is activated.

OK or NG

- OK >> Inspection End.
NG >> GO TO 9.


9. CHECK REAR BLOWER MOTOR POWER SUPPLY CIRCUIT FOR SHORT

1. Turn ignition switch OFF.
2. Disconnect battery cables and rear blower motor connector B134.
3. Check continuity between rear blower motor harness connector B134 terminal 2 (L/R) and ground.

2 - Ground : **Continuity should not exist.**

OK or NG

- OK >> Check rear blower motor. Refer to [ATC-100, "Rear Blower Motor"](#) .
NG >> Repair harness or connector.

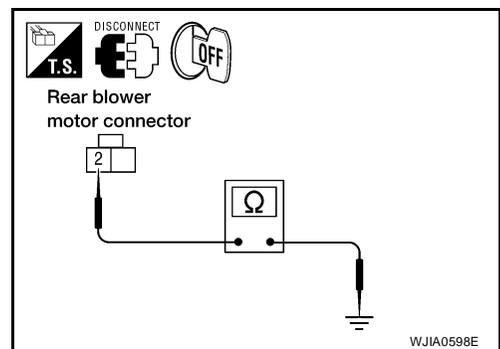

A
B
C
D
E
F
G
H
I
K
L
M

ATC

TROUBLE DIAGNOSIS

10. CHECK REAR BLOWER MOTOR RELAY (SWITCH SIDE) POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect fuse block (J/B) connector M3 and rear blower motor connector B134.
3. Check continuity between fuse block (J/B) harness connector M3 terminal 3N (SB) and 8N (L/R) and rear blower motor harness connector B134 terminal 2 (L/R).

3N, 8N - 2 : Continuity should exist.

OK or NG

OK >> GO TO 20.

NG >> Repair harness or connector.

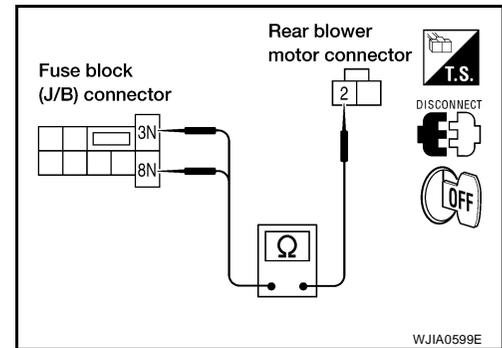

11. CHECK REAR BLOWER MOTOR

Refer to [ATC-100, "Rear Blower Motor"](#) .

OK or NG

OK >> GO TO 12.

NG >> Replace rear blower motor. Refer to [ATC-141, "REAR BLOWER MOTOR"](#) .

12. CHECK REAR FAN SWITCH (FRONT)

Refer to [ATC-99, "Rear Fan Switch \(Front\)"](#) .

OK or NG

OK >> GO TO 15.

NG >> Replace rear fan switch (front). Refer to [ATC-135, "FRONT AIR CONTROL"](#) .

13. CHECK REAR BLOWER MOTOR RESISTOR

Refer to [ATC-100, "Rear Blower Motor Resistor"](#) .

OK or NG

OK >> GO TO 14.

NG >> Replace rear blower motor resistor. Refer to [ATC-156, "Removal and Installation"](#) .

14. CHECK REAR FAN SWITCH (FRONT) CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect rear fan switch (front) M52.
3. Reconnect rear blower motor resistor harness connector B133.
4. Turn ignition switch ON.
5. Check voltage between each rear fan switch (front) connector M52 terminals 3 (LG), 7 (W/L), and 8 (G), and ground.

Terminal No.		Voltage (Approx.)
(+)	(-)	
3	Ground	12V
7		
8		

OK or NG

OK >> GO TO 17.

NG >> GO TO 16.

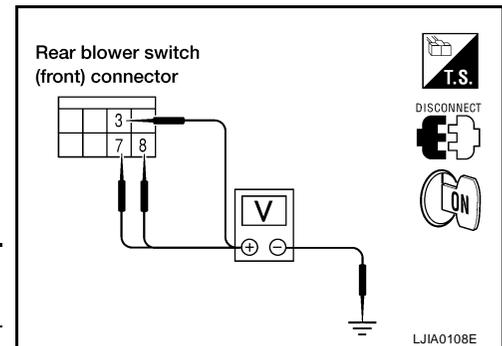

TROUBLE DIAGNOSIS


15. CHECK REAR BLOWER MOTOR GROUND CIRCUIT TO REAR BLOWER MOTOR RESISTOR

1. Turn ignition switch OFF.
2. Disconnect rear blower motor connector B134 and rear blower motor resistor connector B133.
3. Check continuity between rear blower motor connector B134 terminal 1 (L/B) and rear blower motor resistor harness connector B133 terminal 3 (L/B).

1 - 3 : Continuity should exist.

4. Check continuity between rear blower motor connector B134 terminal 1 (L/B) and ground.

1 - Ground : Continuity should not exist.

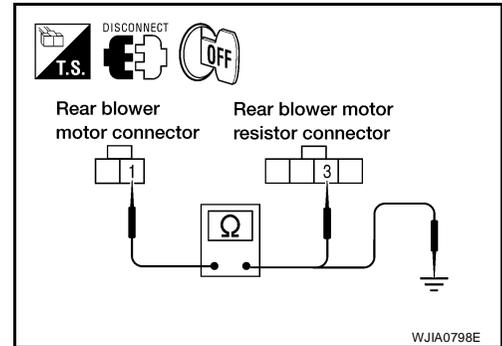

OK or NG


OK >> GO TO 16.

NG >> Repair harness or connector.

16. CHECK REAR FAN SWITCH (FRONT) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear fan switch (front) connector M52.
3. Check continuity between rear fan switch (front) connector M52 terminals 3 (LG), 7 (W/L), and 8 (G), and rear blower motor resistor connector B133 terminals 1 (LG), 4 (W/L), and 2 (G).

Terminal No.		Continuity
Rear fan switch (front)	Rear blower motor resistor	
3	1	Should exist
7	4	
8	2	

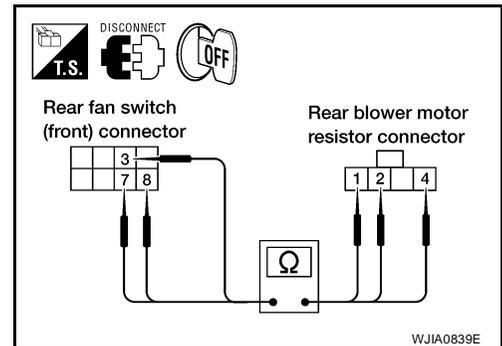

OK or NG


OK >> Inspection End.

NG >> Repair harness or connector.

17. CHECK REAR FAN SWITCH (FRONT) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear fan switch (rear) (Rear air control) connector R208.
3. Check continuity between rear fan switch (front) connector M52 terminals 3 (LG), 5 (L/B), 7 (W/L), and 8 (G), and rear fan switch (rear) (Rear air control) connector R208 terminals 9 (LG), 6 (L/B), 8 (W/L), and 7 (G).

Terminal No.		Continuity
Rear fan switch (front)	Rear fan switch (rear)	
3	9	Should exist
5	6	
7	8	
8	7	

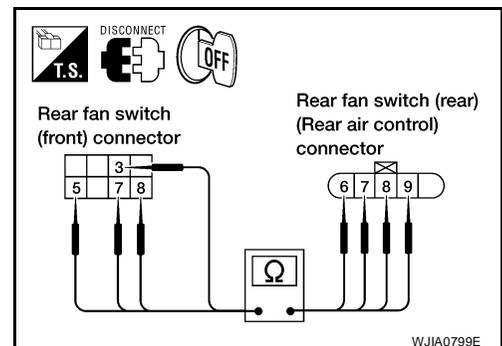

OK or NG

OK >> GO TO 18.

NG >> Repair harness or connector.

TROUBLE DIAGNOSIS

18. CHECK REAR FAN SWITCH (FRONT)

Refer to [ATC-99, "Rear Fan Switch \(Front\)"](#) .

OK or NG

OK >> GO TO 19.

NG >> Replace rear fan switch (front). Refer to [ATC-135, "FRONT AIR CONTROL"](#) .

19. CHECK REAR FAN SWITCH (REAR)

Refer to [ATC-99, "Rear Fan Switch \(Rear\)"](#) .

OK or NG

OK >> Inspection End.

NG >> Replace rear fan switch (rear). Refer to [ATC-135, "REAR AIR CONTROL"](#) .

20. CHECK CIRCUIT BETWEEN FRONT AIR CONTROL AND FUSE BLOCK (J/B) [REAR BLOWER MOTOR RELAY (COIL SIDE) POWER]


1. Disconnect front air control connector M50 and fuse block (J/B) connector M39.
2. Check continuity between front air control harness connector M50 terminal 38 (W/L) and fuse block (J/B) connector M39 terminal 3Q (W/L).

38 - 3Q : Continuity should exist.

OK or NG

OK >> Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#)

NG >> Repair harness or connector.

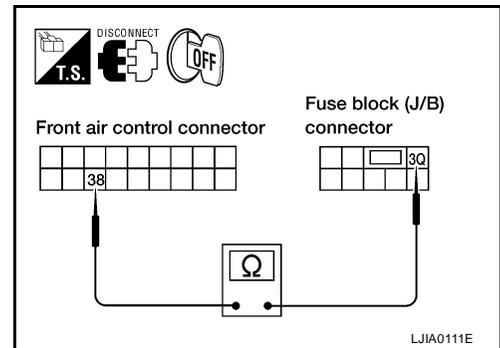


TROUBLE DIAGNOSIS

COMPONENT INSPECTION


Rear Blower Motor Relay

Check circuit continuity between terminals by supplying 12 volts and ground to coil side terminals of relays.

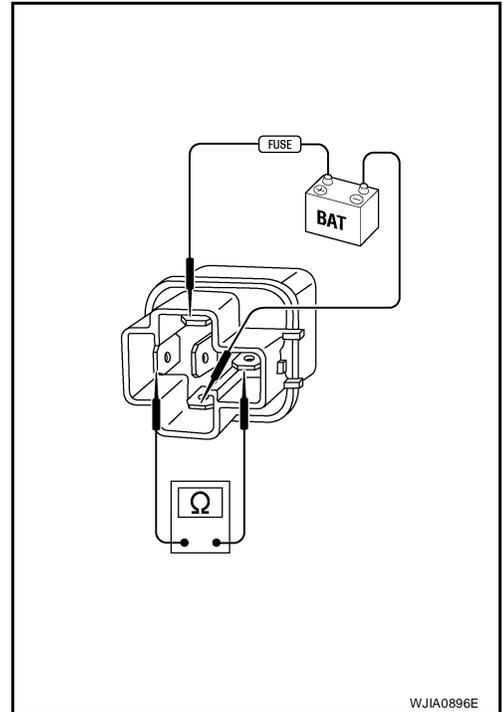


Rear Fan Switch (Rear)

Check continuity between terminals at each switch position.

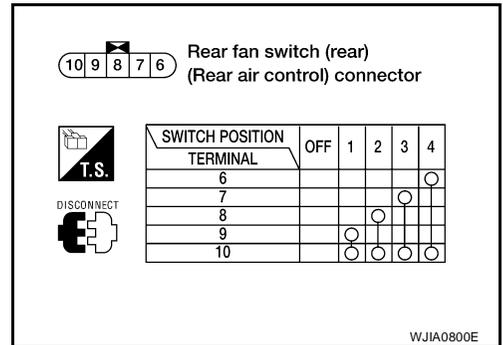

Rear Fan Switch (Front)

Check continuity between terminals at each switch position.

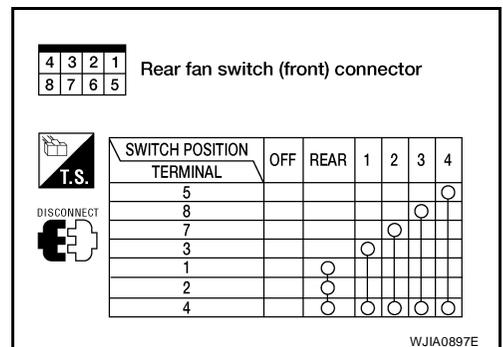


A
B
C
D
E
F
G
H
I
K
L
M

ATC

TROUBLE DIAGNOSIS


Rear Blower Motor

Check that there are no foreign particles inside the intake unit.
Apply 12 volts to terminal 2 and ground to terminal 1 and ensure that the blower motor rotates freely and quietly.

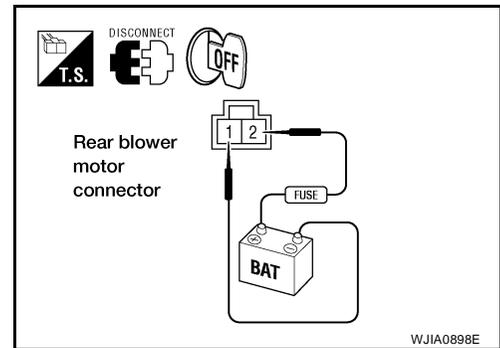

Rear Blower Motor Resistor

Check continuity between terminals. There will be resistance, but there should not be an open or short between any two terminals.

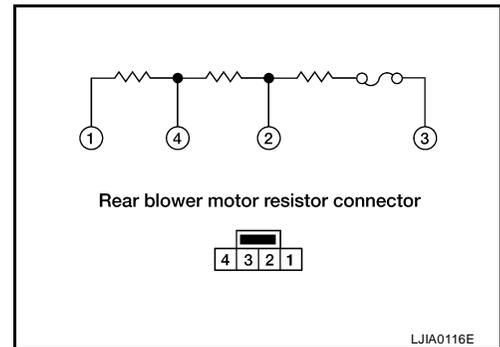

TROUBLE DIAGNOSIS



EJS002CK

Rear Air Control Circuit

SYMPTOM:

- Temperature cannot be adjusted from the rear air control.

INSPECTION FLOW

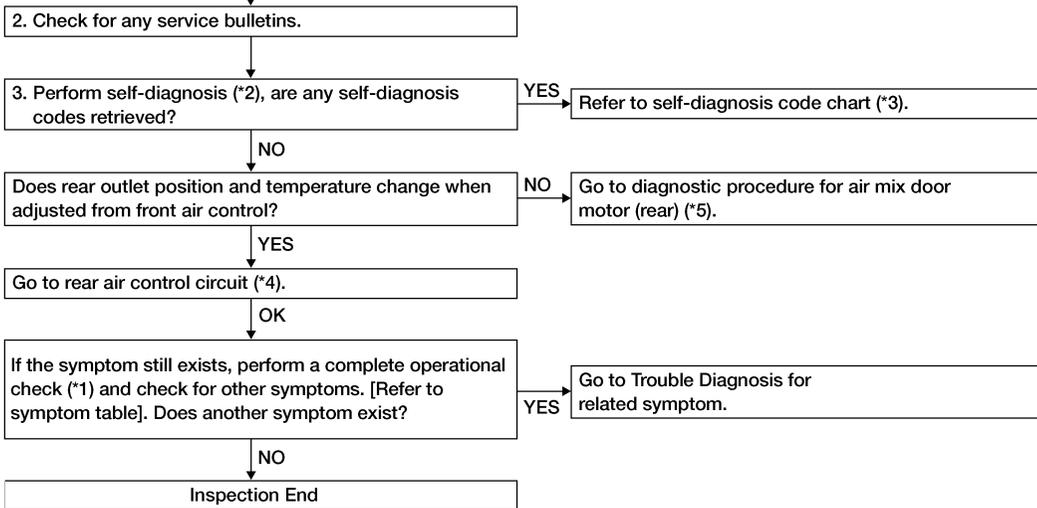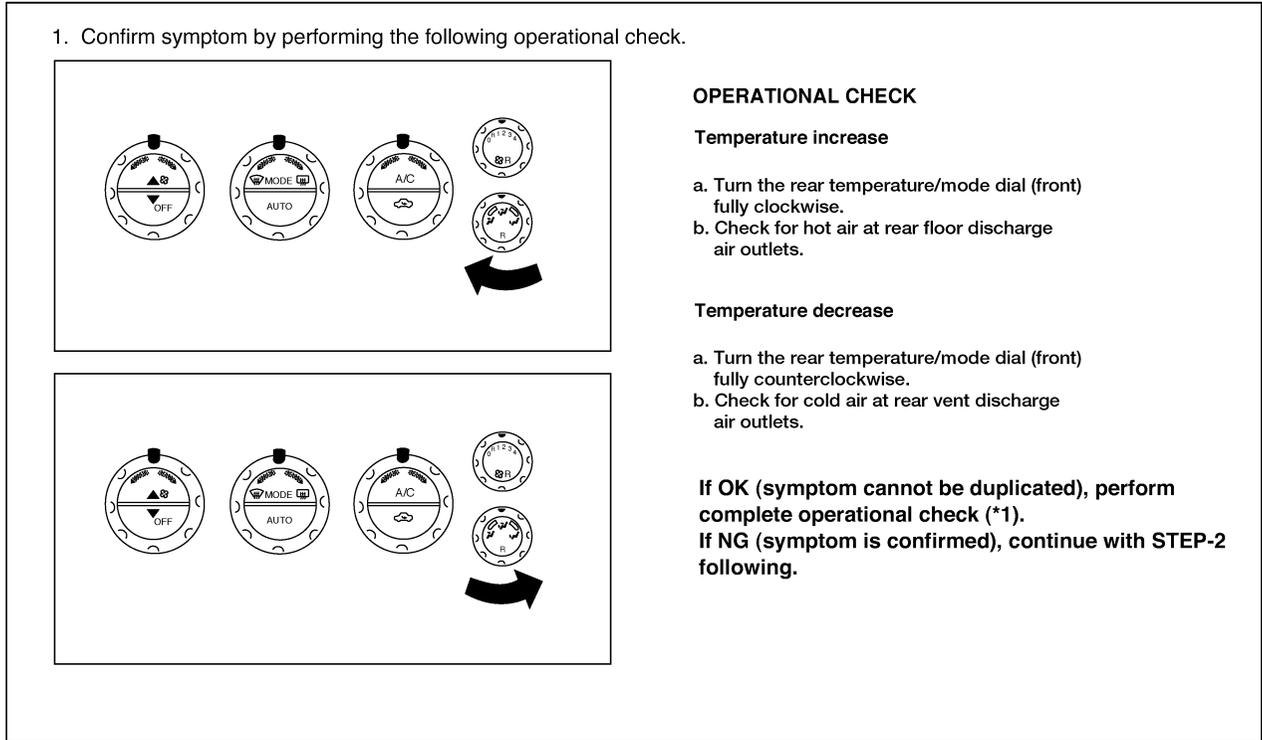

*1 [ATC-59, "Operational Check \(Rear\)"](#)

*2 [ATC-53, "A/C System Self-diagnosis Function"](#)

*3 [ATC-55, "SELF-DIAGNOSIS CODE CHART"](#)

*4 [ATC-102, "DIAGNOSTIC PROCEDURE FOR REAR AIR CONTROL"](#)

*5 [ATC-73, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR \(REAR\)"](#)

WJIA0801E

TROUBLE DIAGNOSIS


SYSTEM DESCRIPTION

Component Parts

Rear air control system components are:

- Front air control
- Rear air control
- Air mix door motor (rear)
- Rear blower motor relay
- Rear blower motor resistor
- Rear blower motor

System Operation

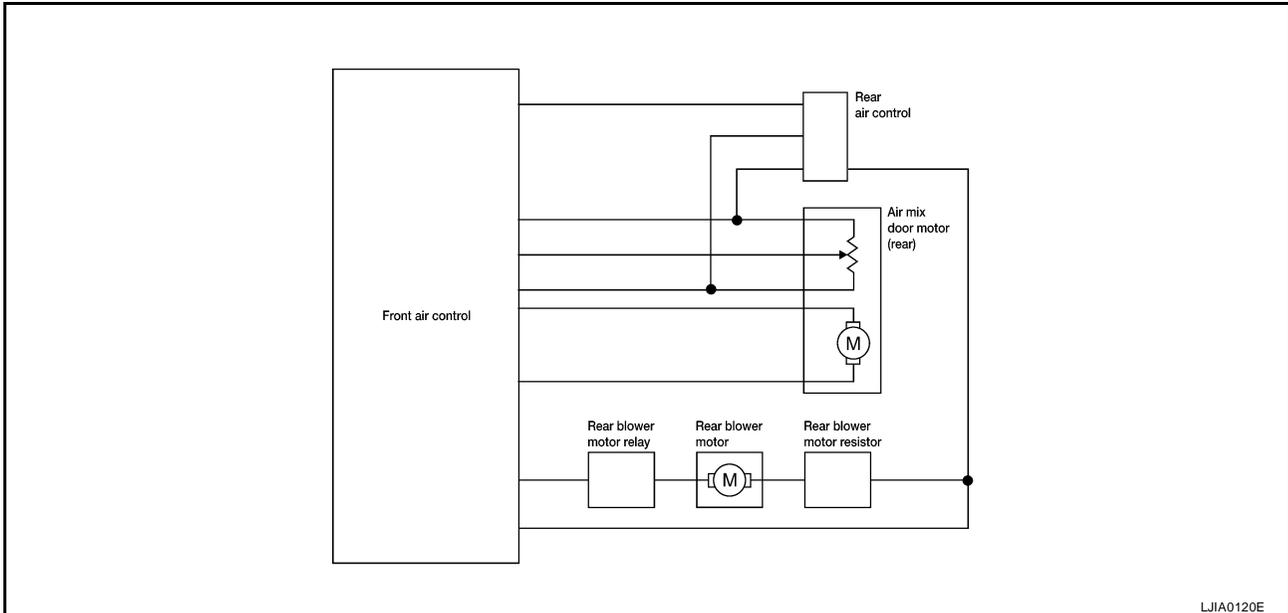

Rear Air Control

When the rear fan switch (front) (integral to the front air control) is in the rear (R) position the rear blower motor speeds and the rear temperature/mode are controlled by the rear fan switch (rear) and the rear temperature/mode dial (rear) (both integral to the rear air control).

DIAGNOSTIC PROCEDURE FOR REAR AIR CONTROL

SYMPTOM:

- Blower motor operation is malfunctioning. Refer to [ATC-90, "Rear Blower Motor Circuit"](#) .
- Temperature/mode operation is malfunctioning.

1. CHECK OPERATION FROM FRONT AIR CONTROL

Does rear temperature/mode operate normally from front air control?

YES or NO

YES >> GO TO 2.

NO >> Refer to [ATC-73, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR \(REAR\)"](#) .


TROUBLE DIAGNOSIS

EJS002CL

Magnet Clutch Circuit

SYMPTOM: Magnet clutch does not engage.

INSPECTION FLOW

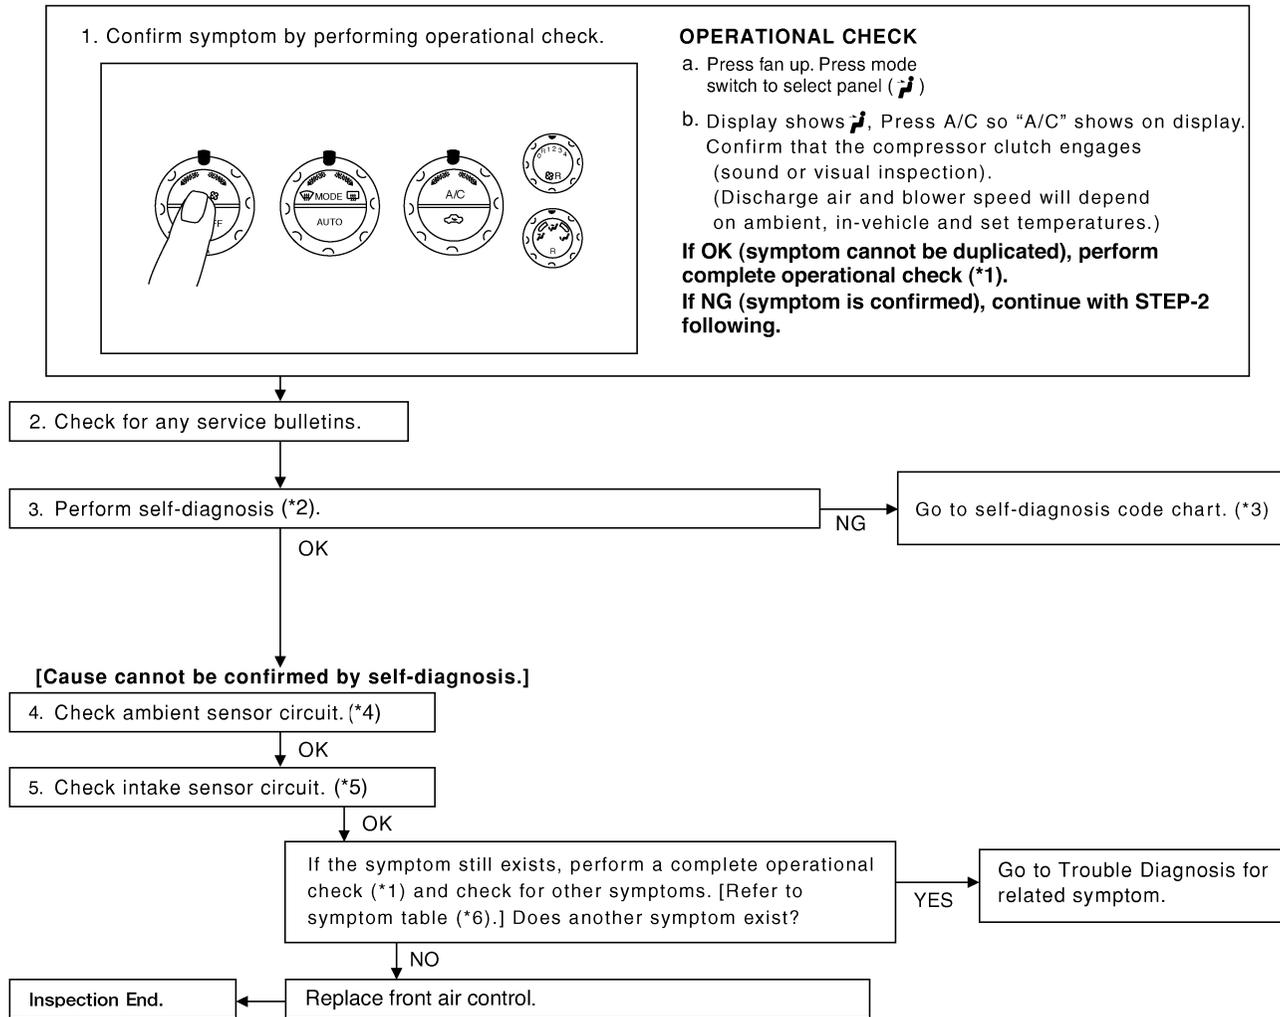

WJIA0962E

- *1 [ATC-56. "Operational Check \(Front\)"](#) *2 [ATC-53. "A/C System Self-diagnosis Function"](#) *3 [ATC-55. "SELF-DIAGNOSIS CODE CHART"](#)
 *4 [ATC-125. "Ambient Sensor Circuit"](#) *5 [ATC-133. "Intake Sensor Circuit"](#) *6 [ATC-35. "SYMPTOM TABLE"](#)

TROUBLE DIAGNOSIS

SYSTEM DESCRIPTION

The front air control controls compressor operation based on ambient and intake temperature and a signal from ECM.

Low Temperature Protection Control


The front air control will turn the compressor ON or OFF as determined by a signal detected by the intake sensor and the ambient sensor.

When intake air temperature is higher than the preset value, the compressor turns ON. The compressor turns OFF when intake air temperature is lower than the preset value. That preset value is dependent on the ambient temperature, refer to the following table.

Ambient temperature °C (°F)	Compressor ON intake temperature °C (°F)	Compressor OFF intake temperature °C (°F)
0 (32)	5.5 (41.9)	5.0 (41.0)
10 (50)	4.5 (40.1)	4.0 (39.2)
20 (68)	2.5 (36.5)	2.0 (35.6)
30 (86)	2.0 (35.6)	1.0 (33.8)
40 (104)	2.0 (35.6)	0.5 (32.9)
50 (122)	2.0 (35.6)	0.5 (32.9)

DIAGNOSTIC PROCEDURE FOR MAGNET CLUTCH

SYMPTOM: Magnet clutch does not engage when A/C switch is ON.

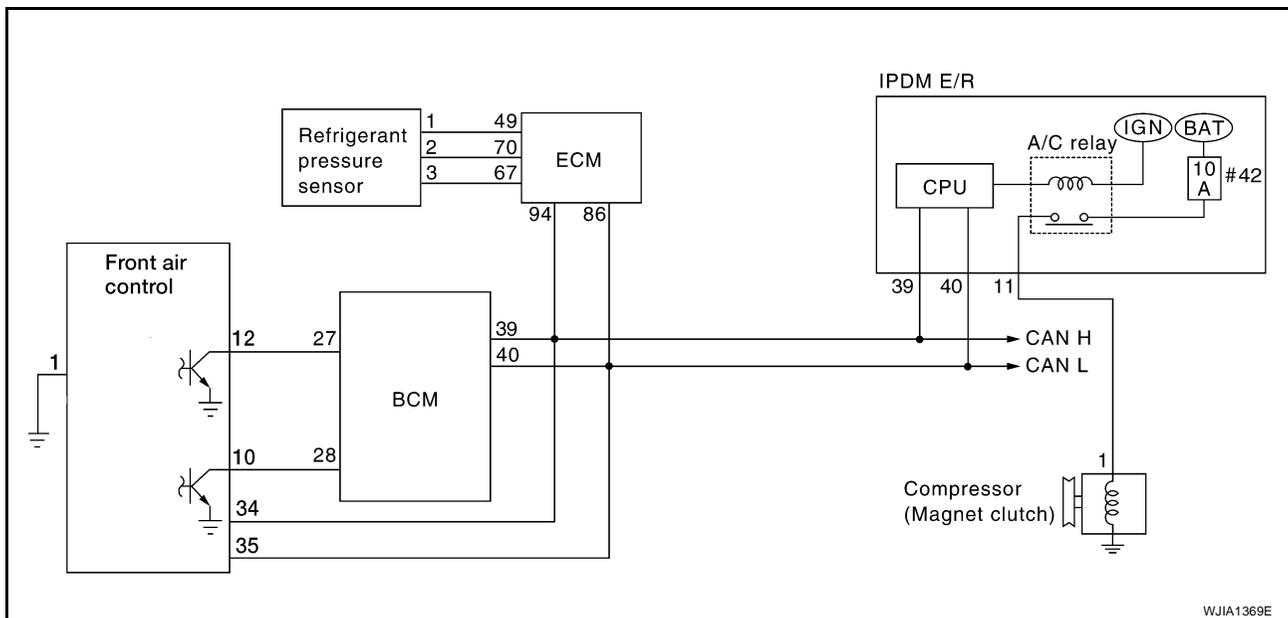

1. CHECK INTAKE AND AMBIENT SENSOR CIRCUITS

Check intake and ambient sensors. Refer to [ATC-53, "A/C System Self-diagnosis Function"](#) .

OK or NG

OK >> GO TO 2.

NG >> ● Malfunctioning intake sensor. Refer to [ATC-133, "Intake Sensor Circuit"](#) .

● Malfunctioning ambient sensor. Refer to [ATC-125, "Ambient Sensor Circuit"](#) .

TROUBLE DIAGNOSIS

2. PERFORM AUTO ACTIVE TEST

Refer to [PG-23, "Auto Active Test"](#) .
Does magnet clutch operate?

YES or NO

YES >> ● WITH CONSULT-II
GO TO 5.

● WITHOUT CONSULT-II
GO TO 6.

NO >> Check 10A fuse (No. 42, located in IPDM E/R), and GO TO 3.

3. CHECK CIRCUIT CONTINUITY BETWEEN IPDM E/R AND COMPRESSOR


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector E119 and compressor (magnet clutch) connector F3.
3. Check continuity between IPDM E/R harness connector E119 terminal 11 (Y/B) and compressor harness connector F3 terminal 1 (Y/B).

11 – 1 : Continuity should exist.

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

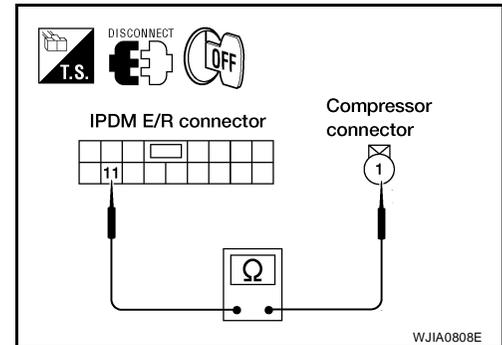


4. CHECK MAGNET CLUTCH CIRCUIT

Check for operation sound when applying battery voltage direct current to terminal.

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) .

NG >> Replace magnet clutch. Refer to [ATC-167, "Removal and Installation for Compressor Clutch"](#) .

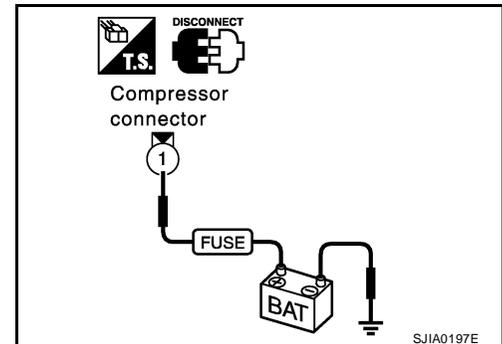

5. CHECK BCM INPUT (COMPRESSOR ON) SIGNAL

Check compressor ON/OFF signal. Refer to [ATC-33, "CONSULT-II Function \(BCM\)"](#) .


A/C SW ON : COMP ON SIG ON

A/C SW OFF : COMP ON SIG OFF

OK or NG

OK >> GO TO 8.

NG >> GO TO 6.

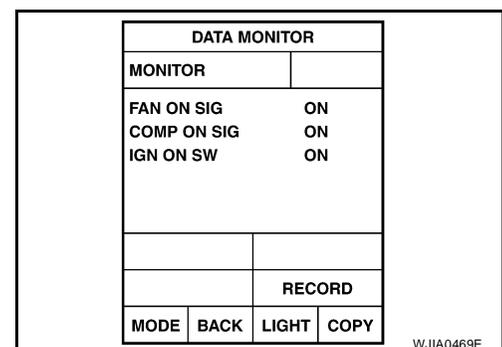

TROUBLE DIAGNOSIS

6. CHECK CIRCUIT CONTINUITY BETWEEN BCM AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect BCM connector M18 and front air control connector M49.
3. Check continuity between BCM harness connector M18 terminal 27 (W/R) and front air control harness connector M49 terminal 12 (W/R).


27 - 12

Continuity should exist.

OK or NG

OK >> GO TO 7.

NG >> Repair harness or connector.

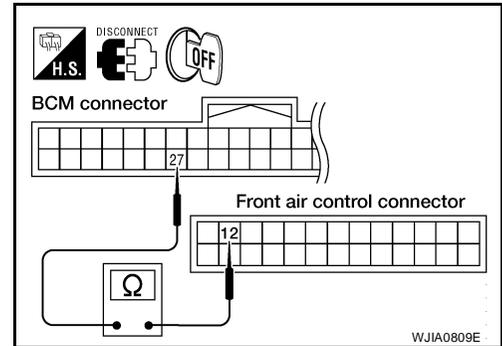

7. CHECK VOLTAGE FOR FRONT AIR CONTROL (COMPRESSOR ON SIGNAL)

1. Reconnect BCM connector and front air control connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M49 terminal 12 (W/R) and ground.


Terminals		(-)	Condition	Voltage (Approx.)
(+) Front air control connector				
Terminal No. (Wire color)				
M49	12 (W/R)	Ground	A/C switch: ON	0V
			A/C switch: OFF	5V

OK or NG

OK >> GO TO 8.

NG-1 >> If the voltage is approx. 5V when A/C switch is ON, replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#).

NG-2 >> If the voltage is approx. 0V when A/C switch is OFF, replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#).

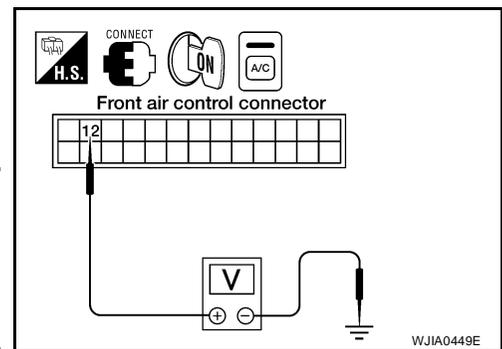

A
B
C
D
E
F
G
H
I
K
L
M

ATC

TROUBLE DIAGNOSIS

8. CHECK REFRIGERANT PRESSURE SENSOR


WITH CONSULT-II

1. Start engine.
2. Check voltage of refrigerant pressure sensor. Refer to [ATC-33, "CONSULT-II Function \(BCM\)"](#) .

WITHOUT CONSULT-II

1. Start engine.
2. Check voltage between ECM harness connector F54 terminal 70 (B/W) and ground.

Terminals		(-)	Condition	Voltage
(+) (+)				
ECM con- nector	Terminal No. (Wire color)			
F54	70 (B/W)	Ground	A/C switch: ON	Approx. 0.36 - 3.88V

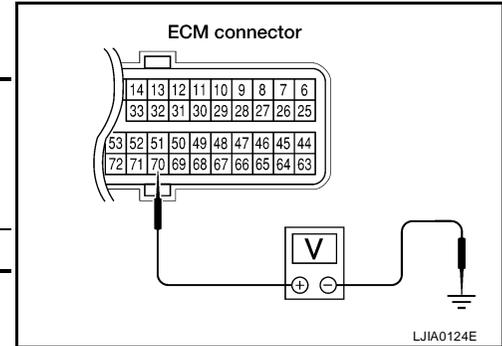

OK or NG

OK >> WITH CONSULT-II
GO TO 9.

- WITHOUT CONSULT-II
GO TO 10.

NG >> Refer to [EC-607, "REFRIGERANT PRESSURE SENSOR"](#) .

9. CHECK BCM INPUT (FAN ON) SIGNAL


Check FAN ON/OFF signal while changing the front switch position.
Refer to [ATC-33, "CONSULT-II Function \(BCM\)"](#) .

FRONT FAN SWITCH ON : FAN ON SIG ON
FRONT FAN SWITCH OFF : FAN ON SIG OFF

OK or NG

OK >> GO TO 12.

NG >> GO TO 10.

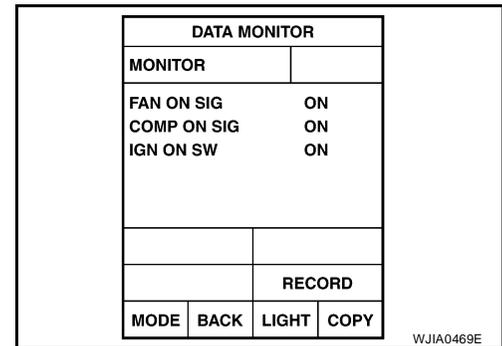

10. CHECK CIRCUIT CONTINUITY BETWEEN BCM AND FRONT AIR CONTROL


1. Turn ignition switch OFF.
2. Disconnect BCM connector M18 and front air control connector M49.
3. Check continuity between BCM harness connector M18 terminal 28 (L/R) and front air control harness connector M49 terminal 10 (L/R).

28 - 10 Continuity should exist.

OK or NG

OK >> GO TO 11.

NG >> Repair harness or connector.

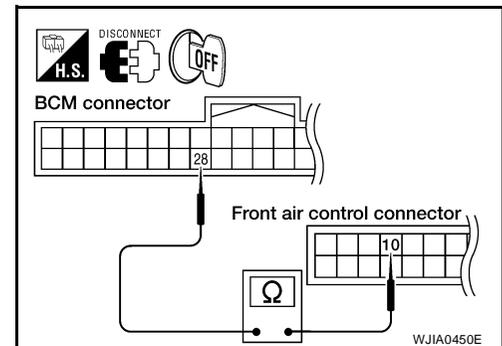


TROUBLE DIAGNOSIS

11. CHECK VOLTAGE FOR FRONT AIR CONTROL (FAN ON SIGNAL)

1. Reconnect BCM connector and front air control connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M49 terminal 10 (L/R) and ground.

Terminals		(-)	Condition	Voltage (Approx.)
(+) Front air control connector				
Terminal No. (Wire color)				
M49	10 (L/R)	Ground	A/C switch: ON Blower motor operates	0V
			A/C switch: OFF	5V

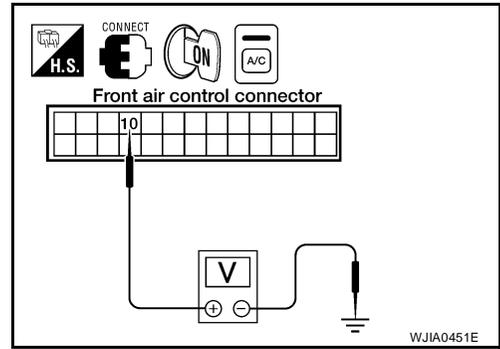

OK or NG

- OK >> Check CAN communication. Refer to [ATC-32, "CAN Communication System Description"](#) .
- NG-1 >> If the voltage is approx. 5V when blower motor is ON, replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .
- NG-2 >> If the voltage is approx. 0V when blower motor is OFF, replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#) .

A
B
C
D
E
F
G
H
I
K
L
M

ATC


TROUBLE DIAGNOSIS

EJS002CM

Insufficient Cooling

SYMPTOM: Insufficient cooling

INSPECTION FLOW

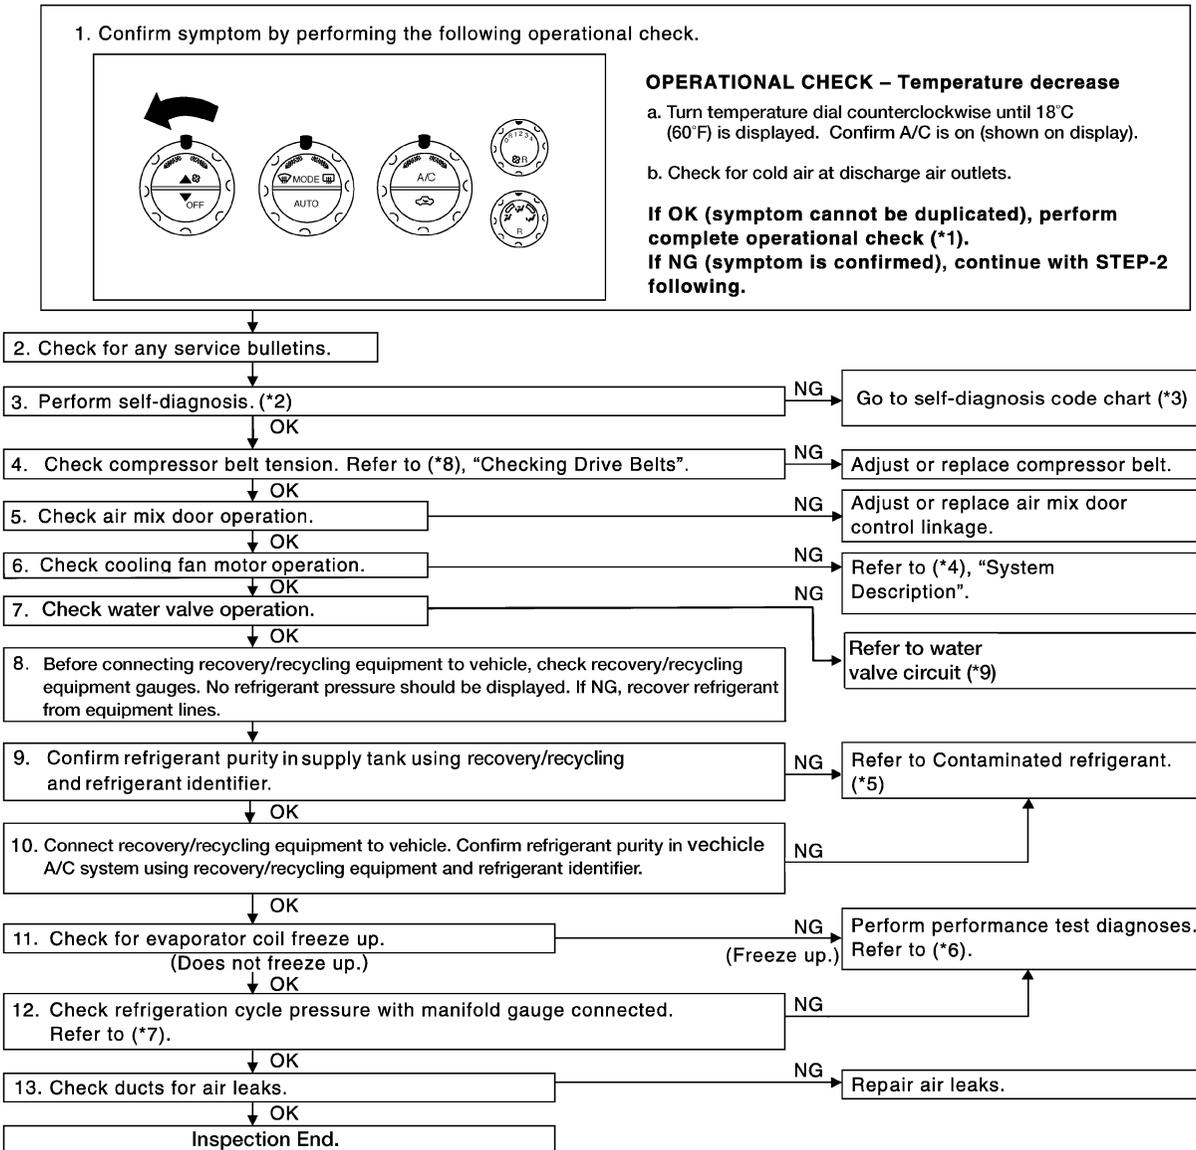

WJIA0963E

*1 [.ATC-56. "Operational Check \(Front\)"](#)

*2 [ATC-53. "A/C System Self-diagnosis Function"](#)

*3 [ATC-55. "SELF-DIAGNOSIS CODE CHART"](#)

*4 [EC-410. "SYSTEM DESCRIPTION"](#)

*5 [ATC-5. "Contaminated Refrigerant"](#)

*6 [.ATC-111. "PERFORMANCE TEST DIAGNOSES"](#)


*7 [ATC-113. "Test Reading"](#)

*8 [MA-12. "Checking Drive Belts"](#)

*9 [ATC-121. "Water Valve Circuit"](#)

TROUBLE DIAGNOSIS

PERFORMANCE TEST DIAGNOSES

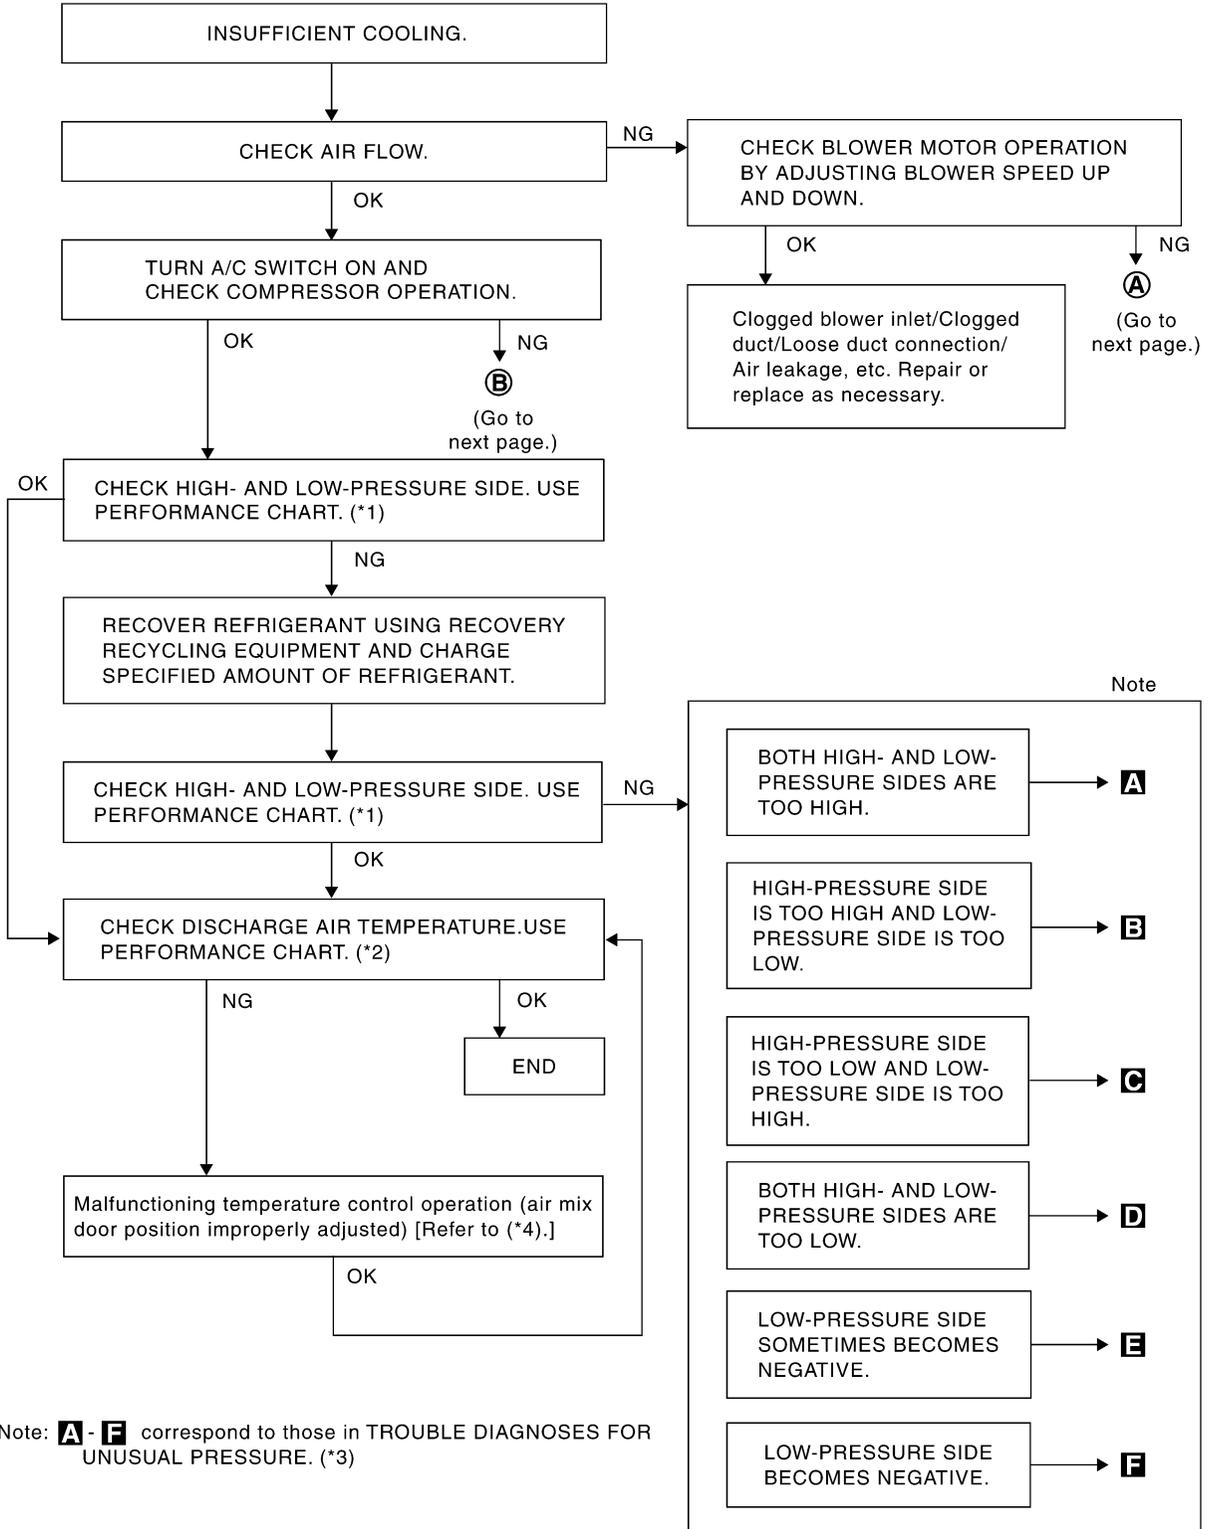

*1 [ATC-113, "PERFORMANCE CHART"](#)


*2 [ATC-113, "PERFORMANCE CHART"](#)

*3 [ATC-114, "Trouble Diagnoses for Unusual Pressure"](#)

*4 [ATC-67, "Air Mix Door Motor Circuit"](#)

RJIA1601E

TROUBLE DIAGNOSIS

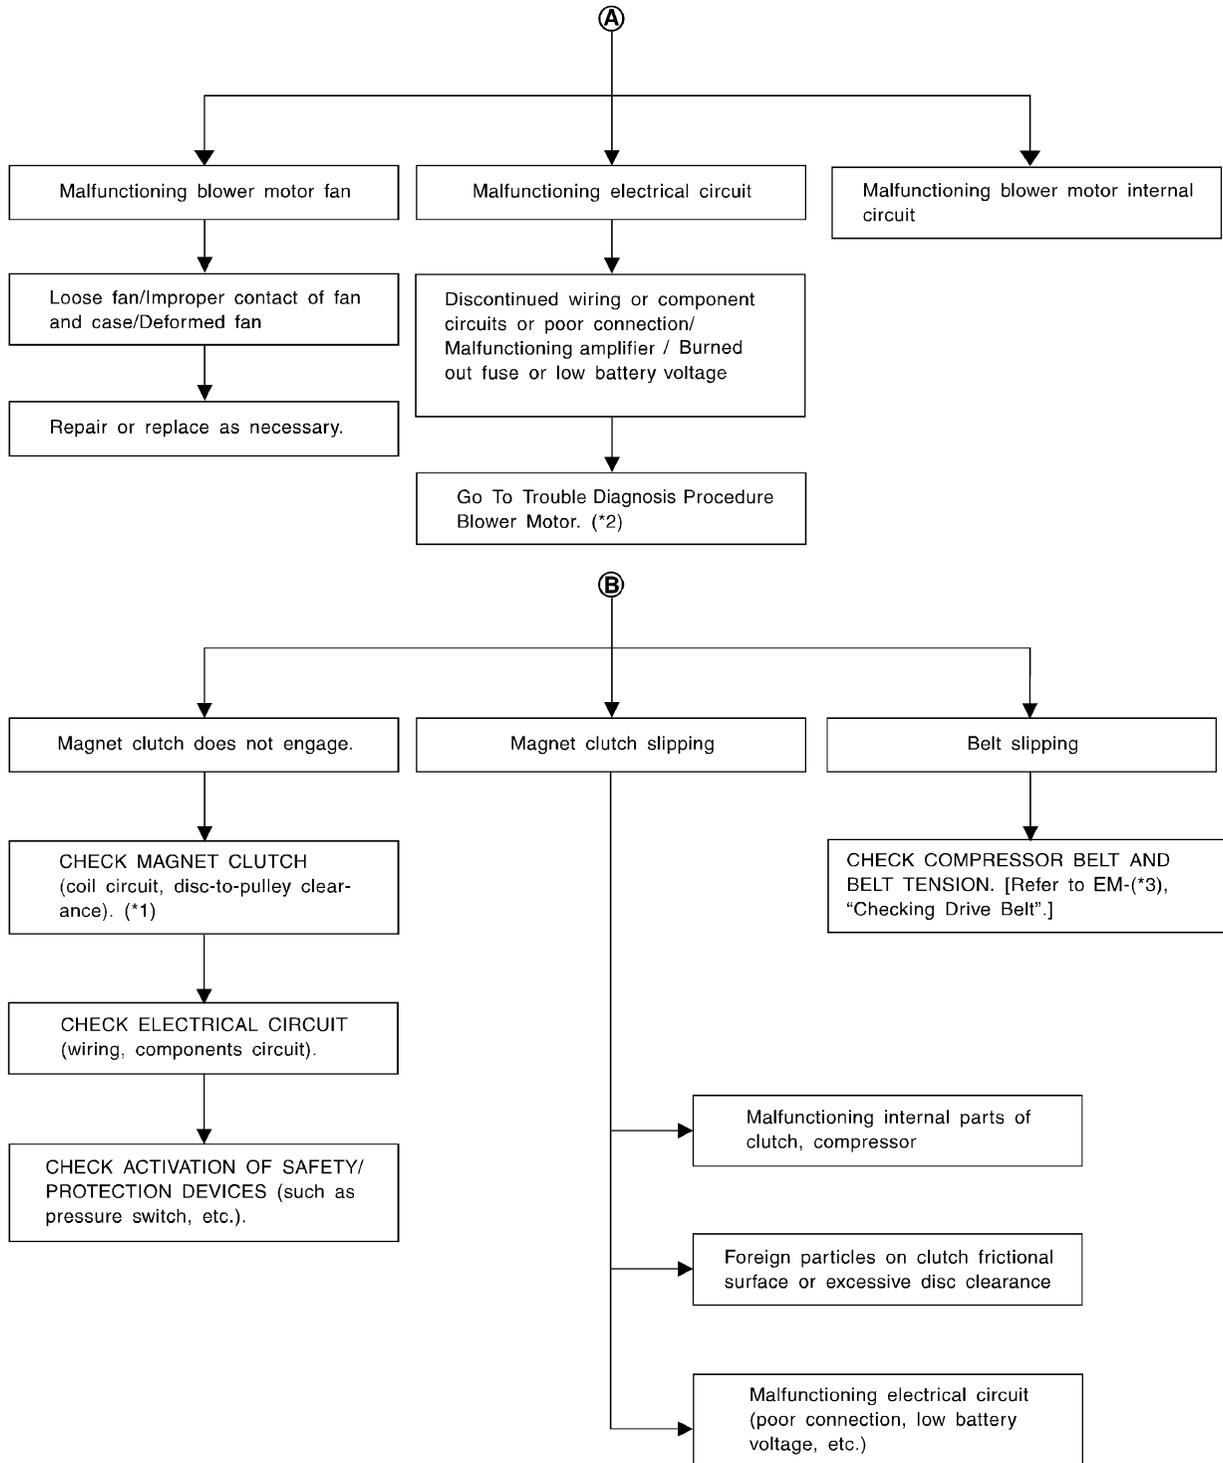

WJIA0361E

*1 [ATC-167, "Removal and Installation for Compressor Clutch"](#)

*2 [ATC-83, "Front Blower Motor Circuit"](#)

*3 [MA-12, "Checking Drive Belts"](#)

TROUBLE DIAGNOSIS

PERFORMANCE CHART

Test Condition

Testing must be performed as follows:

Vehicle location	Indoors or in the shade (in a well-ventilated place)
Doors	Closed
Door window	Open
Hood	Open
TEMP.	Max. COLD
Mode switch	 (Ventilation) set
Recirculation (REC) switch	 (Recirculation) set
 Fan (blower) speed	Max. speed set
Engine speed	Idle speed

Operate the air conditioning system for 10 minutes before taking measurements.

Test Reading

Recirculating-to-discharge Air Temperature Table

Inside air (Recirculating air) at blower assembly inlet		Discharge air temperature at center ventilator °C (°F)
Relative humidity %	Air temperature °C (°F)	
50 - 60	20 (68)	5.3 - 6.5 (42 - 44)
	25 (77)	9.7 - 11.5 (49 - 53)
	30 (86)	13.8 - 16.3 (57 - 61)
	35 (95)	18.0 - 21.2 (64 - 70)
	40 (104)	22.2 - 25.7 (72 - 78)
60 - 70	20 (68)	6.5 - 7.7 (44 - 46)
	25 (77)	11.5 - 13.3 (53 - 56)
	30 (86)	16.3 - 18.8 (61 - 66)
	35 (95)	21.2 - 24.0 (70 - 75)
	40 (104)	25.7 - 29.2 (78 - 85)

Ambient Air Temperature-to-operating Pressure Table


Ambient air		High-pressure (Discharge side) kPa (kg/cm ² , psi)	Low-pressure (Suction side) kPa (kg/cm ² , psi)
Relative humidity %	Air temperature °C (°F)		
50 - 70	20 (68)	680 - 840 (6.94 - 8.57, 98.6 - 121.8)	160 - 198 (1.63 - 2.02, 23.2 - 28.7)
	25 (77)	800 - 985 (8.16 - 10.05, 116.0 - 142.8)	198 - 245 (2.02 - 2.50, 28.7 - 35.5)
	30 (86)	940 - 1,150 (9.59 - 11.73, 136.3 - 166.8)	225 - 278 (2.30 - 2.84, 32.6 - 40.3)
	35 (95)	1,160 - 1,410 (11.83 - 14.38, 168.2 - 204.5)	273 - 335 (2.78 - 3.42, 39.6 - 48.6)
	40 (104)	1,325 - 1,620 (13.52 - 16.52, 192.1 - 234.9)	325 - 398 (3.32 - 4.06, 47.1 - 57.7)

TROUBLE DIAGNOSIS


TROUBLE DIAGNOSES FOR UNUSUAL PRESSURE

Whenever system's high and/or low side pressure(s) is/are unusual, diagnose using a manifold gauge. The marker above the gauge scale in the following tables indicates the standard (usual) pressure range. Since the standard (usual) pressure, however, differs from vehicle to vehicle, refer to preceding table (Ambient air temperature-to-operating pressure table).

Both High- and Low-pressure Sides are Too High

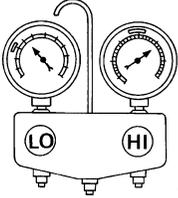
Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Both high- and low-pressure sides are too high.</p>  <p>AC359A</p>	Pressure is reduced soon after water is splashed on condenser.	Excessive refrigerant charge in refrigeration cycle	Reduce refrigerant until specified pressure is obtained.
	Air suction by cooling fan is insufficient.	Insufficient condenser cooling performance ↓ 1. Condenser fins are clogged. 2. Improper fan rotation of cooling fan	<ul style="list-style-type: none"> Clean condenser. Check and repair cooling fan as necessary.
	<ul style="list-style-type: none"> Low-pressure pipe is not cold. When compressor is stopped high-pressure value quickly drops by approximately 196 kPa (2 kg/cm², 28 psi). It then decreases gradually thereafter. 	Poor heat exchange in condenser (After compressor operation stops, high-pressure decreases too slowly.) ↓ Air in refrigeration cycle	Evacuate and recharge system.
	Engine tends to overheat.	Engine cooling systems malfunction.	Check and repair engine cooling system.
	<ul style="list-style-type: none"> An area of the low-pressure pipe is colder than areas near the evaporator outlet. Plates are sometimes covered with frost. 	<ul style="list-style-type: none"> Excessive liquid refrigerant on low-pressure side Excessive refrigerant discharge flow Expansion valve is open a little compared with the specification. ↓ Improper expansion valve adjustment	Replace expansion valve.

High-pressure Side is Too High and Low-pressure Side is Too Low

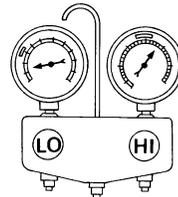Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>High-pressure side is too high and low-pressure side is too low.</p>  <p>AC360A</p>	Upper side of condenser and high-pressure side are hot, however, liquid tank is not so hot.	High-pressure tube or parts located between compressor and condenser are clogged or crushed.	<ul style="list-style-type: none"> Check and repair or replace malfunctioning parts. Check lubricant for contamination.


TROUBLE DIAGNOSIS

High-pressure Side is Too Low and Low-pressure Side is Too High

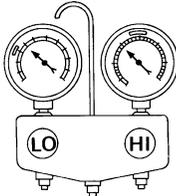Gauge indication	Refrigerant cycle	Probable cause	Corrective action
High-pressure side is too low and low-pressure side is too high.  AC356A	High- and low-pressure sides become equal soon after compressor operation stops.	Compressor pressure operation is improper. ↓ Damaged inside compressor packings.	Replace compressor.
	No temperature difference between high- and low-pressure sides.	Compressor pressure operation is improper. ↓ Damaged inside compressor packings.	Replace compressor.

A
B
C
D


Both High- and Low-pressure Sides are Too Low

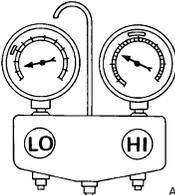Gauge indication	Refrigerant cycle	Probable cause	Corrective action
Both high- and low-pressure sides are too low.  AC353A	<ul style="list-style-type: none"> There is a big temperature difference between receiver drier outlet and inlet. Outlet temperature is extremely low. Liquid tank inlet and expansion valve are frosted. 	Liquid tank inside is slightly clogged.	<ul style="list-style-type: none"> Replace liquid tank. Check lubricant for contamination.
	<ul style="list-style-type: none"> Temperature of expansion valve inlet is extremely low as compared with areas near liquid tank. Expansion valve inlet may be frosted. Temperature difference occurs somewhere in high-pressure side. 	High-pressure pipe located between receiver drier and expansion valve is clogged.	<ul style="list-style-type: none"> Check and repair malfunctioning parts. Check lubricant for contamination.
	Expansion valve and liquid tank are warm or only cool when touched.	Low refrigerant charge. ↓ Leaking fittings or components.	Check refrigerant system for leaks. Refer to ATC-178, "Checking for Refrigerant Leaks" .
	There is a big temperature difference between expansion valve inlet and outlet while the valve itself is frosted.	Expansion valve closes a little compared with the specification. ↓ 1. Improper expansion valve adjustment. 2. Malfunctioning expansion valve. 3. Outlet and inlet may be clogged.	<ul style="list-style-type: none"> Remove foreign particles by using compressed air. Check lubricant for contamination.
	An area of the low-pressure pipe is colder than areas near the evaporator outlet.	Low-pressure pipe is clogged or crushed.	<ul style="list-style-type: none"> Check and repair malfunctioning parts. Check lubricant for contamination.
	Air flow volume is too low.	Evaporator is frozen.	<ul style="list-style-type: none"> Check intake sensor circuit. Refer to ATC-133, "Intake Sensor Circuit". Replace compressor.


E
F
G
H
I
ATC
K
L
M

TROUBLE DIAGNOSIS

Low-pressure Side Sometimes Becomes Negative

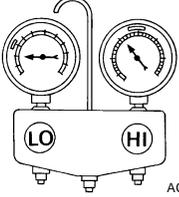Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Low-pressure side sometimes becomes negative.</p>  <p style="text-align: right; font-size: small;">AC354A</p>	<ul style="list-style-type: none"> ● Air conditioning system does not function and does not cyclically cool the compartment air. ● The system constantly functions for a certain period of time after compressor is stopped and restarted. 	<p>Refrigerant does not discharge cyclically.</p> <p>↓</p> <p>Moisture is frozen at expansion valve outlet and inlet.</p> <p>↓</p> <p>Water is mixed with refrigerant.</p>	<ul style="list-style-type: none"> ● Drain water from refrigerant or replace refrigerant. ● Replace liquid tank.

Low-pressure Side Becomes Negative

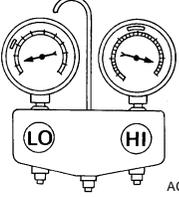Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Low-pressure side becomes negative.</p>  <p style="text-align: right; font-size: small;">AC362A</p>	<p>Liquid tank or front/rear side of expansion valve's pipe is frosted or dewed.</p>	<p>High-pressure side is closed and refrigerant does not flow.</p> <p>↓</p> <p>Expansion valve or liquid tank is frosted.</p>	<p>Leave the system at rest until no frost is present. Start it again to check whether or not the malfunction is caused by water or foreign particles.</p> <ul style="list-style-type: none"> ● If water is the cause, initially cooling is okay. Then the water freezes causing a blockage. Drain water from refrigerant or replace refrigerant. ● If due to foreign particles, remove expansion valve and remove the particles with dry and compressed air (not shop air). ● If either of the above methods cannot correct the malfunction, replace expansion valve. ● Replace liquid tank. ● Check lubricant for contamination.


TROUBLE DIAGNOSIS

EJS002CN

Insufficient Heating

SYMPTOM: Insufficient heating

INSPECTION FLOW

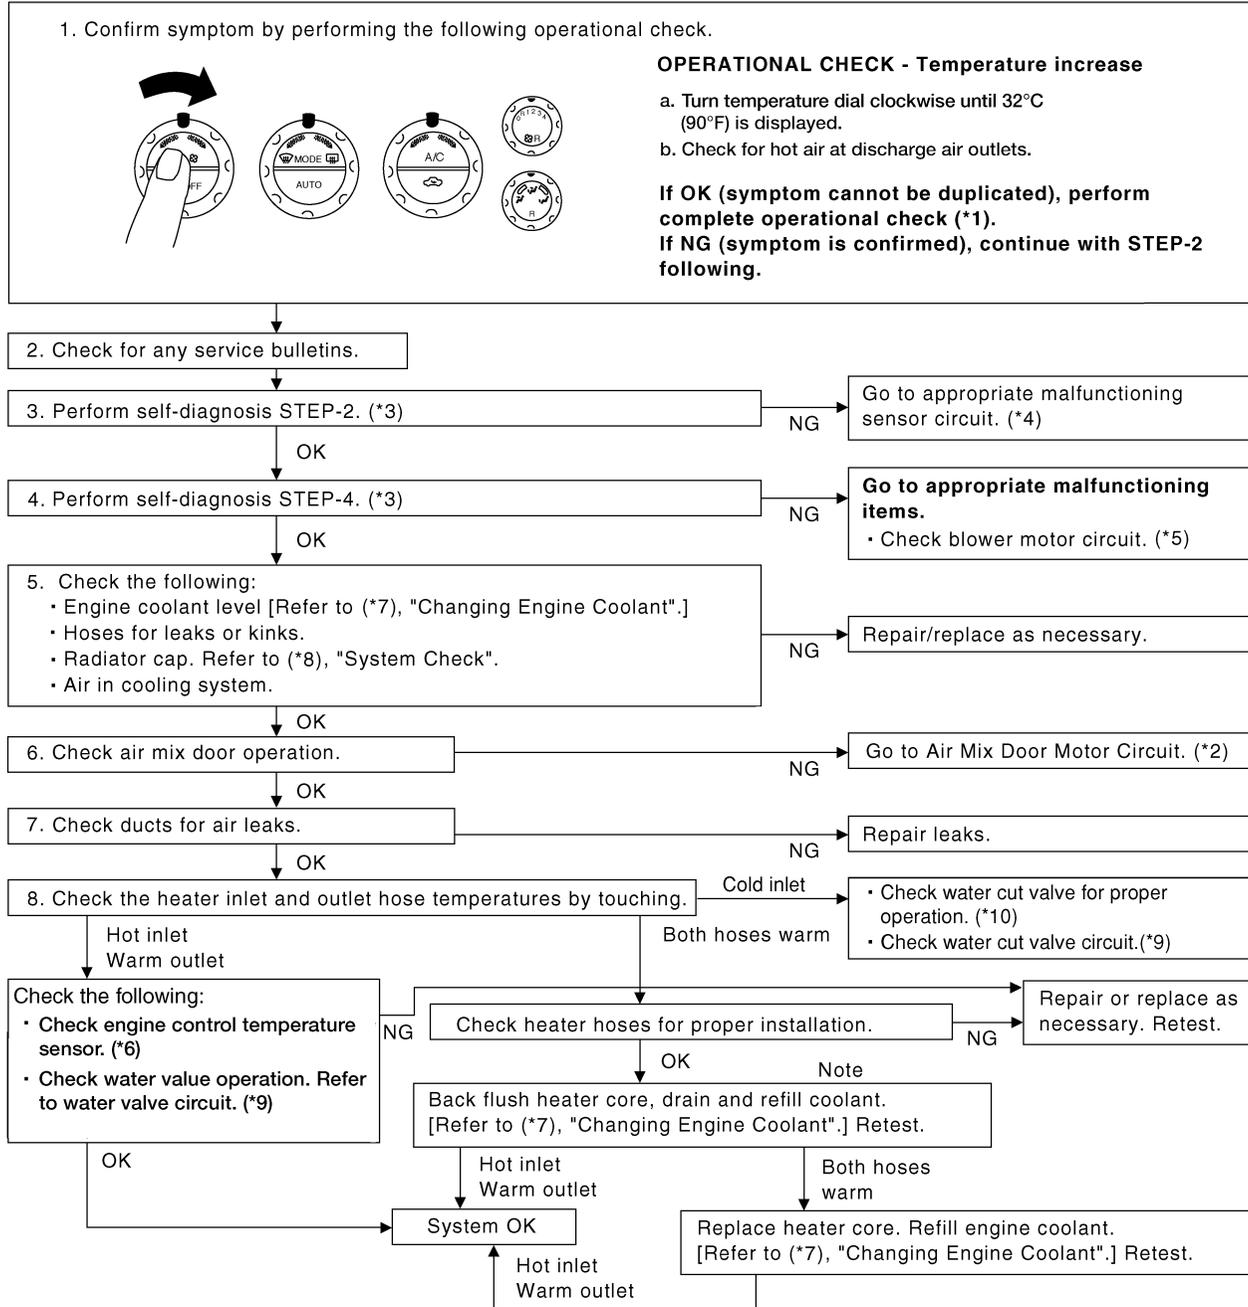

A
B
C
D
E
F
G
H
I
K
L
M

ATC

WJIA0812E

- *1 [.ATC-56, "Operational Check \(Front\)" or ATC-59, "Operational Check \(Rear\)"](#)
- *2 [ATC-67, "Air Mix Door Motor Circuit"](#)
- *3 [ATC-53, "A/C System Self-diagnosis Function"](#)
- *4 [ATC-53, "A/C System Self-diagnosis Function"](#)
- *5 [ATC-83, "Front Blower Motor Circuit"](#)
- *6 [EC-165, "DTC P0117, P0118 ECT SENSOR"](#)
- *7 [MA-12, "Changing Engine Coolant"](#)
- *8 [CO-8, "CHECKING RESERVOIR CAP"](#)
- *9 [ATC-121, "Water Valve Circuit"](#)
- *10 [CO-4, "OVERHEATING CAUSE ANALYSIS"](#)


TROUBLE DIAGNOSIS

EJS002CO

Noise

SYMPTOM: Noise

INSPECTION FLOW

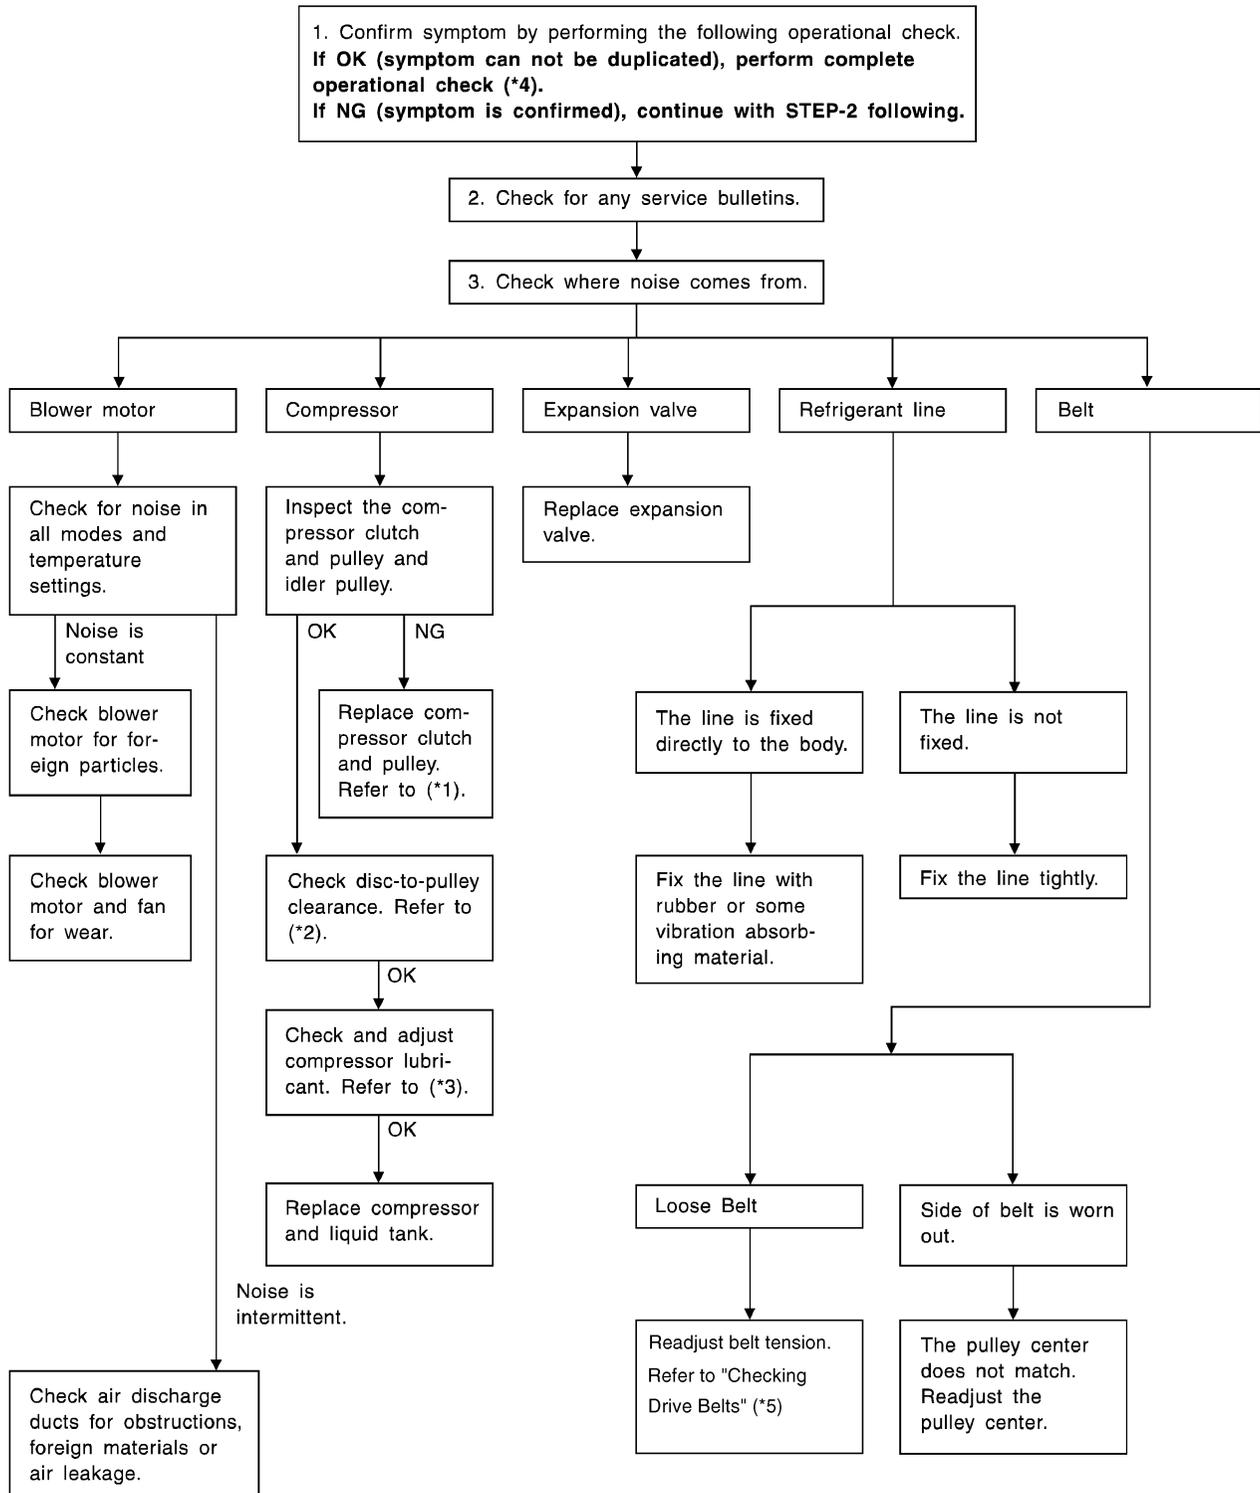

TROUBLE DIAGNOSIS

*1 [ATC-167, "REMOVAL"](#)

*2 [ATC-168, "INSTALLATION"](#)

*3 [ATC-22, "Maintenance of Lubricant Quantity in Compressor"](#)

*4 [ATC-56, "Operational Check \(Front\)"](#)
or [ATC-59, "Operational Check \(Rear\)"](#)

*5 [MA-12, "Checking Drive Belts"](#)

A

B

C

D

E

F

G

H

I

ATC

K

L

M


TROUBLE DIAGNOSIS

EJS002CP

Self-diagnosis

SYMPTOM: Self-diagnosis cannot be performed.

INSPECTION FLOW

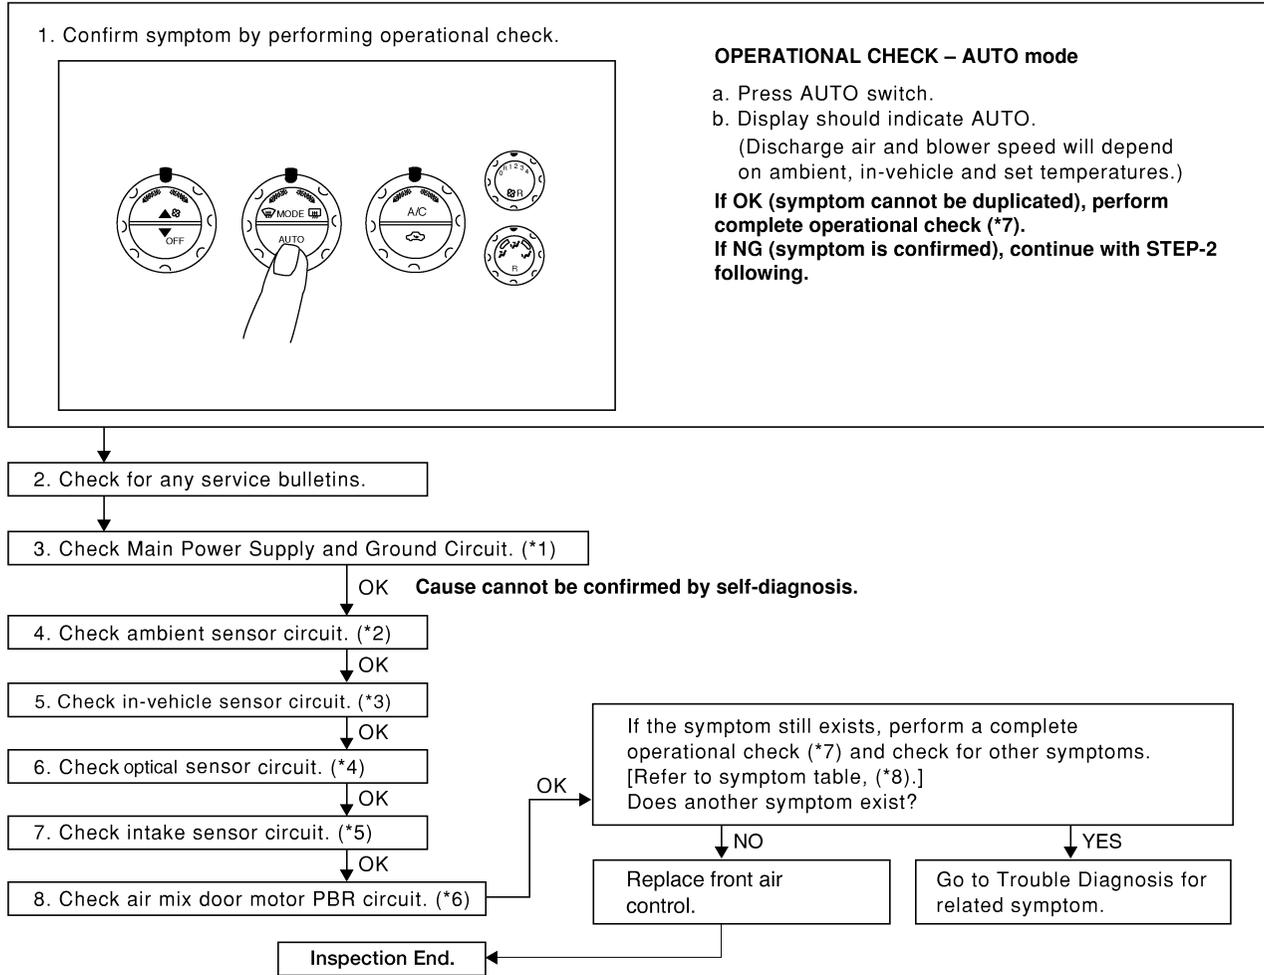

WJIA0813E

- *1 [ATC-60, "Power Supply and Ground Circuit for Front Air Control"](#) *2 [ATC-125, "Ambient Sensor Circuit"](#) *3 [ATC-128, "In-vehicle Sensor Circuit"](#)
*4 [ATC-131, "Optical Sensor Circuit"](#) *5 [ATC-133, "Intake Sensor Circuit"](#) *6 [ATC-67, "Air Mix Door Motor Circuit"](#)
*7 [ATC-56, "Operational Check \(Front\)"](#) *8 [ATC-35, "SYMPTOM TABLE"](#)

TROUBLE DIAGNOSIS


EJS002CQ

Memory Function

SYMPTOM: Memory function does not operate.

INSPECTION FLOW

1. Confirm symptom by performing the following operational check.

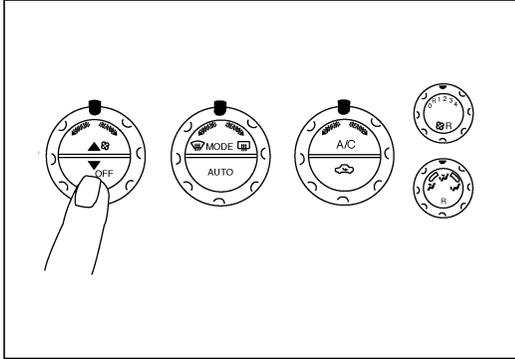

OPERATIONAL CHECK – Memory function

- Set the temperature 90°F or 32°C.
- Press OFF switch.
- Turn the ignition off.
- Turn the ignition on.
- Press the AUTO switch.
- Confirm that the set temperature remains at previous temperature.
- Press OFF switch.

If OK (symptom cannot be duplicated), perform complete operational check (*2).

If NG (symptom is confirmed), continue with STEP-2 following.

2. Check for any service bulletins.

3. Check Main Power Supply and Ground Circuit. (*1)

OK

4. Replace front air control.

5. FINAL CHECK
Go to self-diagnosis procedure (*3).

*1 [ATC-60, "Power Supply and Ground Circuit for Front Air Control"](#)

*2 [ATC-56, "Operational Check \(Front\)"](#)

*3 [ATC-53, "A/C System Self-diagnosis Function"](#)


WJIA0797E

Water Valve Circuit COMPONENT DESCRIPTION

EJS002CR

Water Valve

The water valve cuts the flow of engine coolant to the front and rear heater cores to allow for maximum cooling during A/C operation. It is controlled by the front air control through the water valve relay.

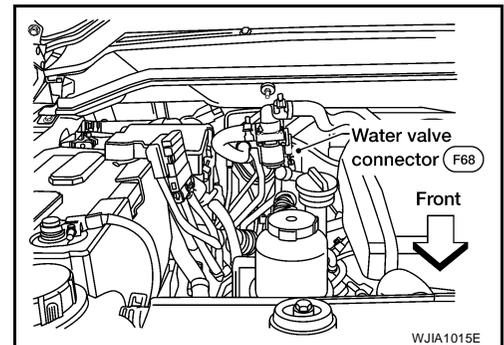

WJIA1015E


TROUBLE DIAGNOSIS

DIAGNOSTIC PROCEDURE FOR WATER VALVE

1. CHECK WATER VALVE RELAY POWER INPUT CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect water valve relay connector M7.
3. Turn ignition switch ON.
4. Check voltage between water valve relay harness connector terminals and ground.

Terminals		Ignition switch position	
(+)			
Water valve relay connector	Terminal No. (Wire color)	(-)	
M7	2 (Y/G)	Ground	Battery voltage
	3 (G/Y)		0V

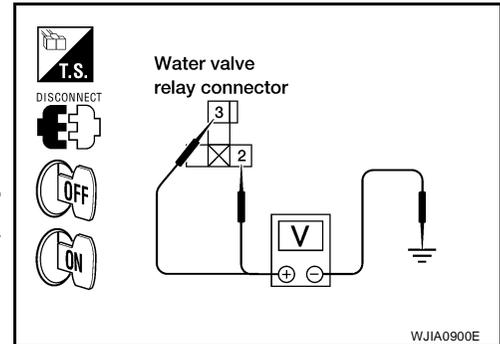


OK or NG

- OK >> GO TO 2.
 NG >> Repair harness or connector.

2. CHECK WATER VALVE CONTROL

1. Turn ignition switch ON.
2. Select MAX A/C with mode switch.
3. Check continuity between water valve relay harness connector M7 terminal 1 (W/G) and ground, as MAX A/C is switched OFF and ON.

Terminals		Condition	Continuity
(+)			
Water valve relay connector	Terminal No. (Wire color)	(-)	
M7	1 (W/G)	Ground	MAX A/C: ON
			MAX A/C: OFF

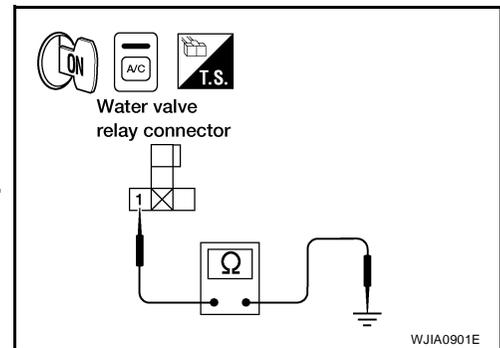

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 3.


3. CHECK WATER VALVE CONTROL OUTPUT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front air control connector M50.
3. Check continuity between water valve relay harness connector M7 terminal 1 (W/G) and front air control harness connector M50 terminal 29 (W/G).

1 - 29 : Continuity should exist.

4. Check continuity between water valve relay harness connector M7 terminal 1 (W/G) and ground.

1 - Ground : Continuity should not exist.

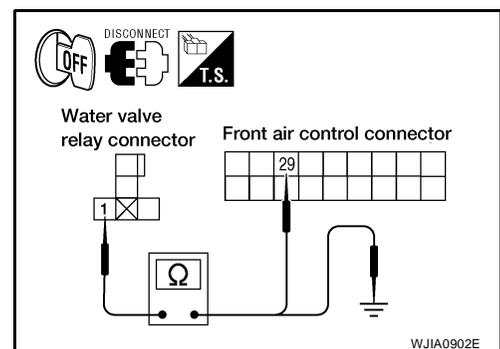

OK or NG

- OK >> Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .
 NG >> Repair harness or connector.

TROUBLE DIAGNOSIS

4. CHECK WATER VALVE RELAY

Check water valve relay. Refer to [ATC-124, "Water Valve Relay"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Replace water valve relay.


5. CHECK WATER VALVE GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect water valve connector E141.
3. Check continuity between water valve harness connector E141 terminal - (B) and ground.

(-) - Ground : Continuity should exist.

OK or NG

- OK >> GO TO 6.
- NG >> Repair harness or connector.

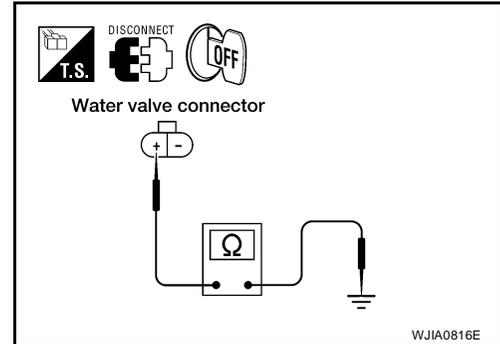

6. CHECK WATER VALVE POWER CIRCUIT

1. Check continuity between water valve relay connector terminal 5 (Y/L) and water valve connector E141 terminal + (Y/L)


5 - + : Continuity should exist.

2. Check continuity between water valve relay harness connector M7 terminal 5 (Y/L) and ground.

5 - Ground : Continuity should not exist.

OK or NG

- OK >> Replace water valve.
- NG >> Repair harness or connector.

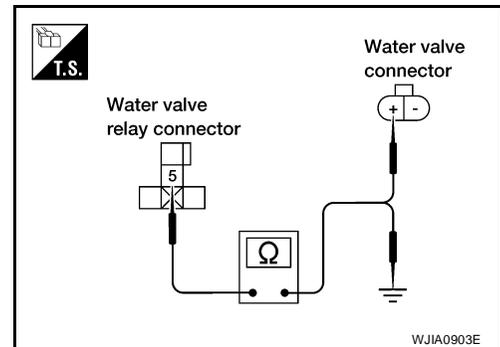

A
B
C
D
E
F
G
H
I
K
L
M


ATC

TROUBLE DIAGNOSIS

COMPONENT INSPECTION

Water Valve Relay

Check continuity between terminals by supplying 12 volts and ground to coil side terminals of relay.

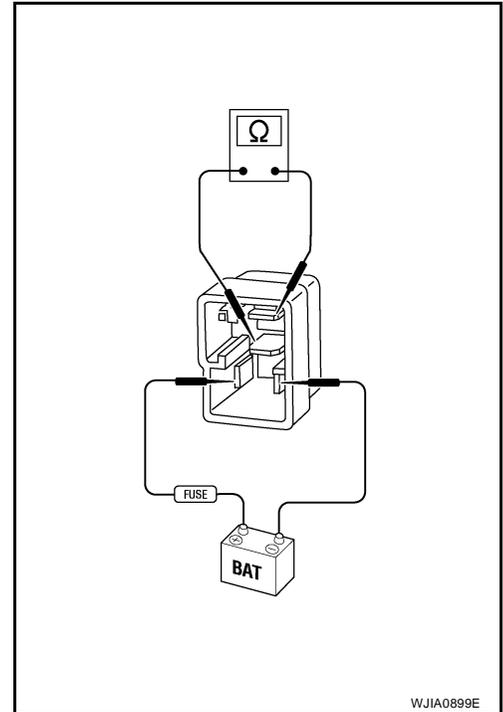


TROUBLE DIAGNOSIS

EJS002CS

Ambient Sensor Circuit COMPONENT DESCRIPTION

Ambient Sensor

The ambient sensor is attached on the radiator core support (left side). It detects ambient temperature and converts it into a value which is then input into the front air control.

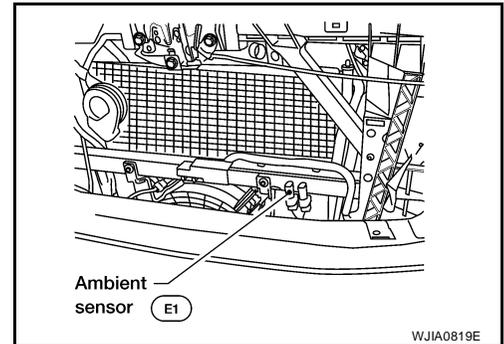


AMBIENT TEMPERATURE INPUT PROCESS

The front air control includes a processing circuit for the ambient sensor input. However, when the temperature detected by the ambient sensor increases quickly, the processing circuit retards the front air control function. It only allows the front air control to recognize an ambient temperature increase of 0.33°C (0.6°F) per 100 seconds.

This prevents constant adjustments due to momentary conditions, such as stopping after high speed driving. Although the actual ambient temperature has not changed, the temperature detected by the ambient sensor will increase. This is because the heat from the engine compartment can radiate to the front grille area, location of the ambient sensor.

DIAGNOSTIC PROCEDURE FOR AMBIENT SENSOR

SYMPTOM: Ambient sensor circuit is open or shorted. (40 or 41 is indicated as a result of conducting the front air control self-diagnosis)

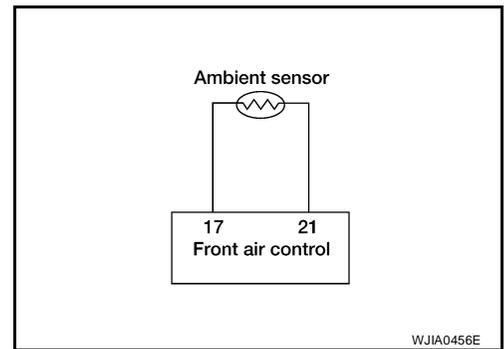


1. CHECK VOLTAGE BETWEEN AMBIENT SENSOR AND GROUND

1. Disconnect ambient sensor connector E1.
2. Turn ignition switch ON.
3. Check voltage between ambient sensor harness connector E1 terminal 1 (P) and ground.

1 - Ground : Approx. 5V

OK or NG

- OK >> GO TO 2.
- NG >> GO TO 4.

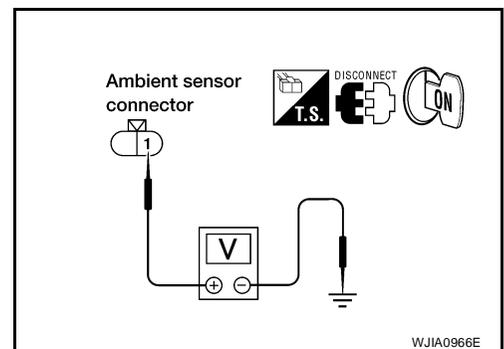

TROUBLE DIAGNOSIS

2. CHECK CIRCUIT CONTINUITY BETWEEN AMBIENT SENSOR AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector M49.
3. Check continuity between ambient sensor harness connector E1 terminal 2 (V/R) and front air control harness connector M49 terminal 21 (V/R).


2 - 21

: Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

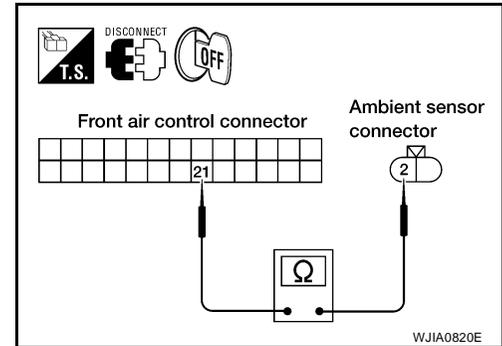

3. CHECK AMBIENT SENSOR

Refer to [ATC-127, "Ambient Sensor"](#) .

OK or NG

OK >> 1. Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .

2. Go to self-diagnosis [ATC-53, "A/C System Self-diagnosis Function"](#) and perform self-diagnosis.

NG >> 1. Replace ambient sensor. Refer to [ATC-136, "AMBIENT SENSOR"](#) .

2. Go to self-diagnosis [ATC-53, "A/C System Self-diagnosis Function"](#) and perform self-diagnosis.

4. CHECK CIRCUIT CONTINUITY BETWEEN AMBIENT SENSOR AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector M49.
3. Check continuity between ambient sensor harness connector E1 terminal 1 (P) and front air control harness connector M49 terminal 17 (P).

1 - 17

: Continuity should exist.

4. Check continuity between ambient sensor harness connector E1 terminal 2 (V/R) and ground.

1 - Ground


: Continuity should not exist.

OK or NG

OK >> 1. Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .

2. Go to self-diagnosis [ATC-53, "A/C System Self-diagnosis Function"](#) and perform self-diagnosis.

NG >> Repair harness or connector.

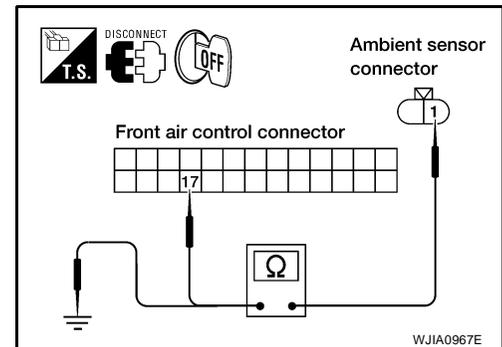

TROUBLE DIAGNOSIS


COMPONENT INSPECTION

Ambient Sensor

After disconnecting ambient sensor connector E1, measure resistance between terminals 2 and 1 at sensor component side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	12.60
-10 (14)	9.92
-5 (23)	7.80
0 (32)	6.19
5 (41)	4.95
10 (50)	3.99
15 (59)	3.24
20 (68)	2.65
25 (77)	2.19
30 (86)	1.81
35 (95)	1.51
40 (104)	1.27
45 (113)	1.07

If NG, replace ambient sensor.

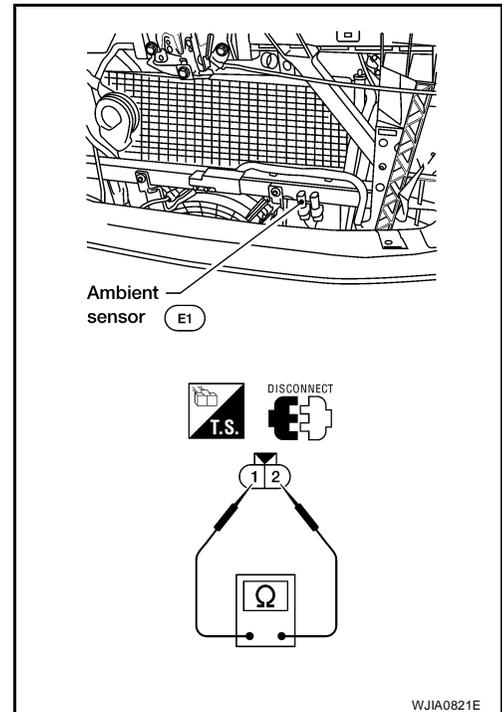

A
B
C
D
E
F
G
H
I

ATC

K
L
M



TROUBLE DIAGNOSIS

EJS002CT

In-vehicle Sensor Circuit COMPONENT DESCRIPTION

In-vehicle Sensor


The in-vehicle sensor is located on cluster lid D. It converts variations in temperature of passenger compartment air (drawn in through the integrated fan) into a value. It is then input into the front air control.

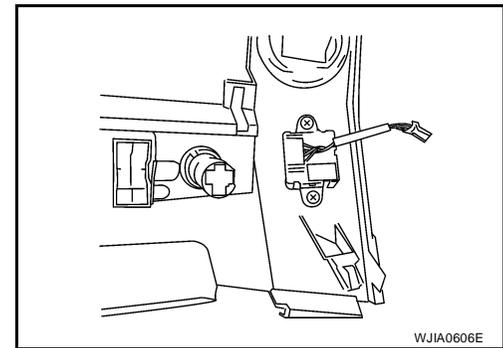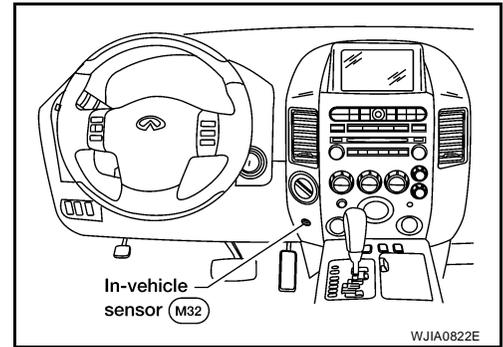

TROUBLE DIAGNOSIS

DIAGNOSTIC PROCEDURE FOR IN-VEHICLE SENSOR

SYMPTOM: In-vehicle sensor circuit is open or shorted. (30 or 31 is indicated as a result of conducting self-diagnosis).

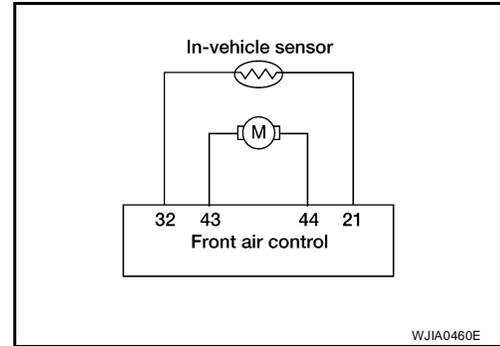

1. CHECK IN-VEHICLE SENSOR CIRCUIT

Are diagnostic codes 44 or 46 present?

YES or NO

- YES >> GO TO 6.
- NO >> GO TO 2.


2. CHECK VOLTAGE BETWEEN IN-VEHICLE SENSOR AND GROUND

1. Disconnect in-vehicle sensor connector M32.
2. Turn ignition switch ON.
3. Check voltage between in-vehicle sensor harness connector M32 terminal 4 (LG/R) and ground.

4 - Ground : Approx. 5V

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 5.

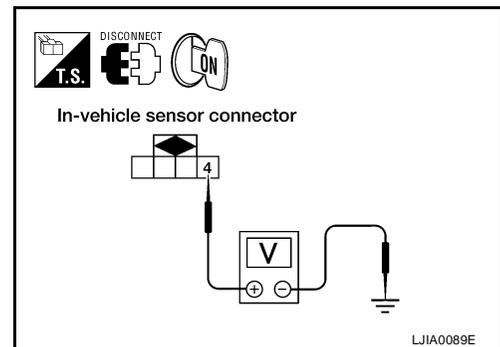


3. CHECK CIRCUIT CONTINUITY BETWEEN IN-VEHICLE SENSOR AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector M49.
3. Check continuity between in-vehicle sensor harness connector M32 terminal 1 (V/R) and front air control harness connector M49 terminal 21 (V/R).

1 - 21 : Continuity should exist.

OK or NG

- OK >> GO TO 4.
- NG >> Repair harness or connector.

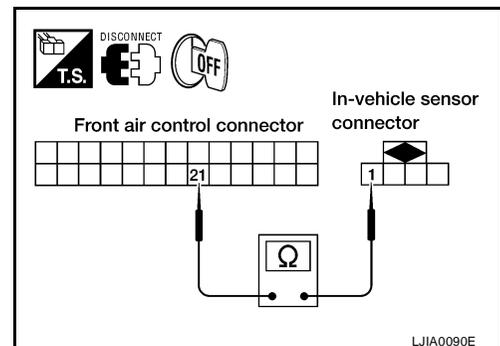

4. CHECK IN-VEHICLE SENSOR

Refer to [ATC-131, "In-vehicle Sensor"](#) .

OK or NG

- OK >> 1. Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .
2. Go to [ATC-53, "A/C System Self-diagnosis Function"](#) and perform self-diagnosis.
- NG >> 1. Replace in-vehicle sensor. Refer to [ATC-137, "IN-VEHICLE SENSOR"](#) .
2. Go to [ATC-53, "A/C System Self-diagnosis Function"](#) and perform self-diagnosis.

TROUBLE DIAGNOSIS


5. CHECK CIRCUIT CONTINUITY BETWEEN IN-VEHICLE SENSOR AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector M50.
3. Check continuity between in-vehicle sensor harness connector M32 terminal 4 (LG/R) and front air control harness connector M50 terminal 32 (LG/R).

4 - 32 : Continuity should exist.

4. Check continuity between in-vehicle sensor harness connector M32 terminal 4 (LG/R) and ground.

4 - Ground Continuity should not exist.

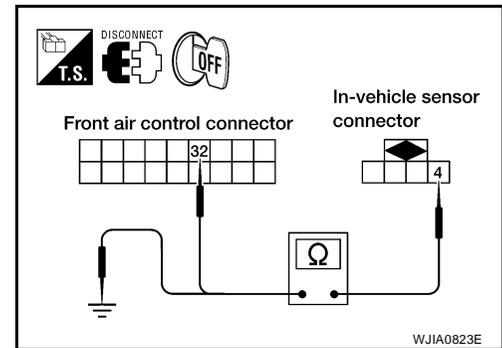

OK or NG

- OK >> 1. Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .
2. Go to self-diagnosis [ATC-53, "A/C System Self-diagnosis Function"](#) and perform self-diagnosis.

NG >> Repair harness or connector.

6. CHECK CIRCUIT CONTINUITY BETWEEN IN-VEHICLE SENSOR MOTOR AND FRONT AIR CONTROL (SELF-DIAGNOSIS CODES 44 OR 46)


1. Turn ignition switch OFF.
2. Disconnect front air control connector M50 and in-vehicle sensor connector M32.
3. Check continuity between in-vehicle sensor harness connector M32 terminal 2 (O/B) and 3 (BR/Y) and front air control harness connector M50 terminal 44 (O/B) and 43 (BR/Y).

2 - 44 : Continuity should exist.

3 - 43 : Continuity should exist.

4. Check continuity between in-vehicle sensor harness connector M32 terminal 2 (O/B) and 3 (BR/Y) and ground.

2, 3 - Ground :Continuity should not exist.

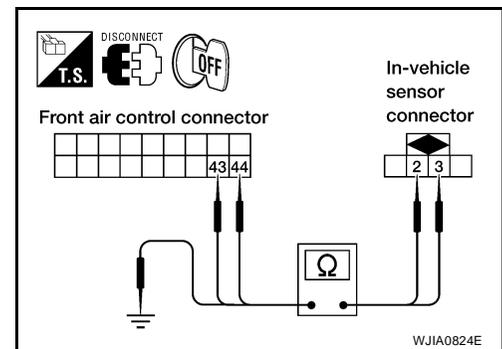

OK or NG

- OK >> 1. Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .
2. Go to [ATC-53, "A/C System Self-diagnosis Function"](#) and perform self-diagnosis.

NG >> Repair harness or connector.

TROUBLE DIAGNOSIS

COMPONENT INSPECTION

In-vehicle Sensor


After disconnecting in-vehicle sensor connector M32, measure resistance between terminals 1 and 4 at sensor component side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	21.40
-10 (14)	16.15
-5 (23)	12.29
0 (32)	9.41
5 (41)	7.27
10 (50)	5.66
15 (59)	4.45
20 (68)	3.51
25 (77)	2.79
30 (86)	2.24
35 (95)	1.80
40 (104)	1.45
45 (113)	1.18


If NG, replace in-vehicle sensor.

Optical Sensor Circuit COMPONENT DESCRIPTION

The optical sensor is located on the top center of the instrument panel. It detects sunload entering through windshield by means of a photo diode. The sensor converts the sunload into a current value which is then input into the front air control.

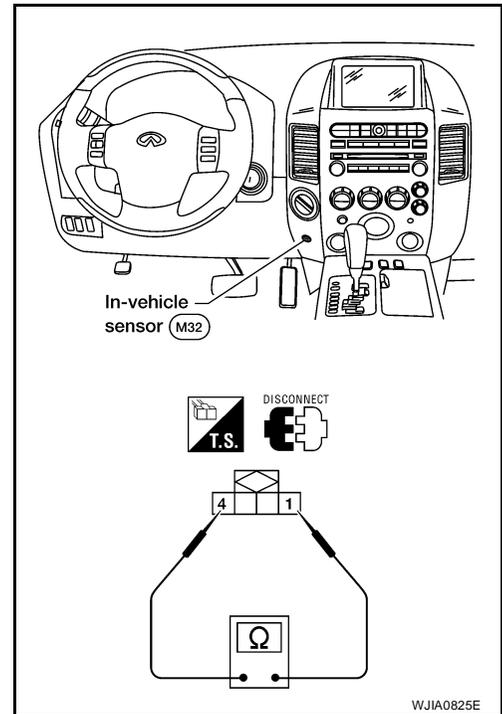

EJS002CU

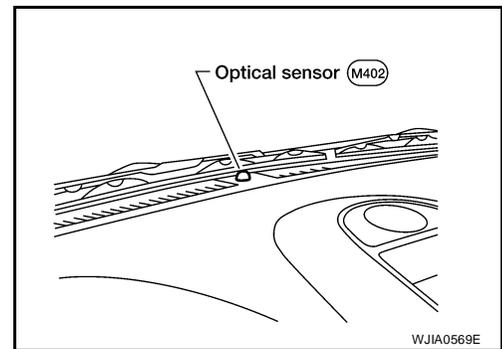

WJIA0569E

OPTICAL INPUT PROCESS

The front air control includes a processing circuit which averages the variations in detected sunload over a period of time. This prevents adjustments in the ATC system operation due to small or quick variations in detected sunload.

For example, consider driving along a road bordered by an occasional group of large trees. The sunload detected by the optical sensor will vary whenever the trees obstruct the sunlight. The processing circuit averages the detected sunload over a period of time, so that the (insignificant) effect of the trees momentarily obstructing the sunlight does not cause any change in the ATC system operation. On the other hand, shortly after entering a long tunnel, the system will recognize the change in sunload, and the system will react accordingly.

A
B
C
D
E
F
G
H
I


ATC

K
L
M

TROUBLE DIAGNOSIS

DIAGNOSTIC PROCEDURE FOR OPTICAL SENSOR

SYMPTOM: Optical sensor circuit is open or shorted. [50 (Driver) or 52 (Passenger) is indicated as a result of conducting self-diagnosis.]

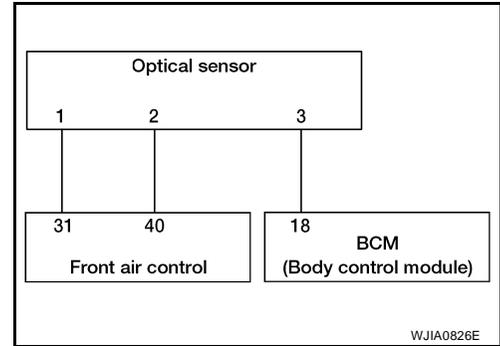

1. CHECK CIRCUIT CONTINUITY BETWEEN OPTICAL SENSOR AND FRONT AIR CONTROL


1. Turn ignition switch OFF.
2. Disconnect front air control connector M50 and optical sensor connector M402.
3. Check continuity between optical sensor harness connector M402 terminal 1 (W/V) and 2 (G/O) and front air control harness connector M50 terminal 31 (W/V) and 40 (G/O).

1 - 31 : Continuity should exist.

2 - 40 : Continuity should exist.

4. Check continuity between optical sensor harness connector M402 terminal 1 (W/V) and 2 (G/O) and ground.

1, 2 - Ground. : Continuity should not exist.

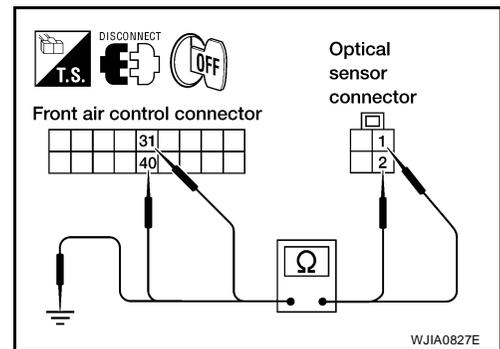

OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.


2. CHECK CIRCUIT CONTINUITY BETWEEN OPTICAL SENSOR AND BCM

1. Disconnect BCM connector M18.
2. Check continuity between optical sensor harness connector M402 terminal 3 (P) and BCM harness connector M18 terminal 18 (P).

3 - 18 : Continuity should exist.

3. Check continuity between optical sensor harness connector M402 terminal 3 (P) and ground.

3 - Ground : Continuity should not exist.

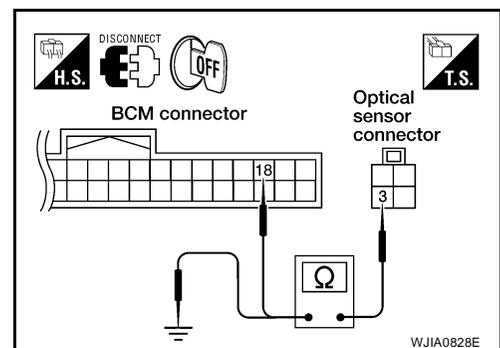

OK or NG

OK >> Replace optical sensor. Refer to [ATC-138, "OPTICAL SENSOR"](#) .

NG >> Repair harness or connector.


TROUBLE DIAGNOSIS

EJS002CV

Intake Sensor Circuit COMPONENT DESCRIPTION


Intake Sensor

The intake sensor is located on the front heater & cooling unit. It converts temperature of air after it passes through the evaporator into a resistance value which is then input to the front air control.

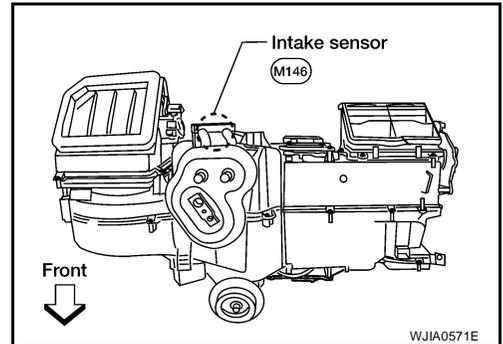

DIAGNOSTIC PROCEDURE FOR INTAKE SENSOR

SYMPTOM: Intake sensor circuit is open or shorted. (56 or 57 is indicated as a result of conducting self-diagnosis).

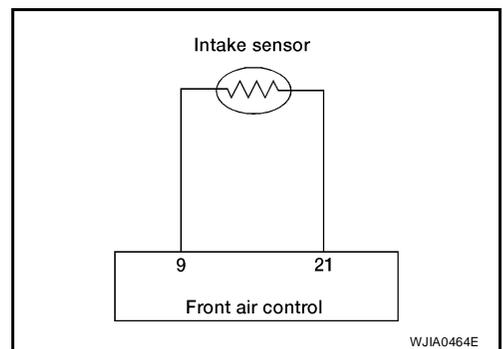


1. CHECK VOLTAGE BETWEEN INTAKE SENSOR AND GROUND

1. Disconnect intake sensor connector M146.
2. Turn ignition switch ON.
3. Check voltage between intake sensor harness connector M146 terminal 2 (L/B) and ground.

2 - Ground : Approx. 5V

OK or NG

- OK >> GO TO 2.
- NG >> GO TO 4.

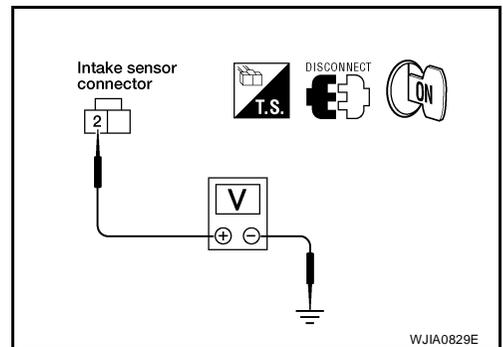


2. CHECK CIRCUIT CONTINUITY BETWEEN INTAKE SENSOR AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector M49.
3. Check continuity between intake sensor harness connector M146 terminal 1 (V/R) and front air control harness connector M49 terminal 21 (V/R).

1 - 21 : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

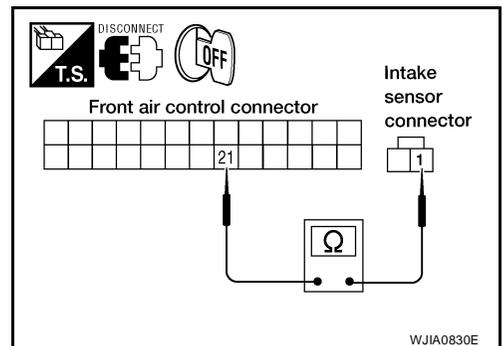

A
B
C
D
E
F
G
H
I
ATC
K
L
M

TROUBLE DIAGNOSIS

3. CHECK INTAKE SENSOR

Refer to [ATC-134, "Intake Sensor"](#) .

OK or NG

- OK >> 1. Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .
 2. Go to self-diagnosis [ATC-53, "A/C System Self-diagnosis Function"](#) and perform self-diagnosis.
- NG >> 1. Replace intake sensor. Refer to [ATC-139, "INTAKE SENSOR"](#) .
 2. Go to self-diagnosis [ATC-53, "A/C System Self-diagnosis Function"](#) and perform self-diagnosis.


4. CHECK CIRCUIT CONTINUITY BETWEEN INTAKE SENSOR AND FRONT AIR CONTROL

- Turn ignition switch OFF.
- Disconnect front air control connector M49.
- Check continuity between intake sensor harness connector M146 terminal 2 (L/B) and front air control harness connector M49 terminal 9 (L/B).

2 - 9 : Continuity should exist.

- Check continuity between intake sensor harness connector M146 terminal 2 (L/B) and ground.

2 - Ground : Continuity should not exist.

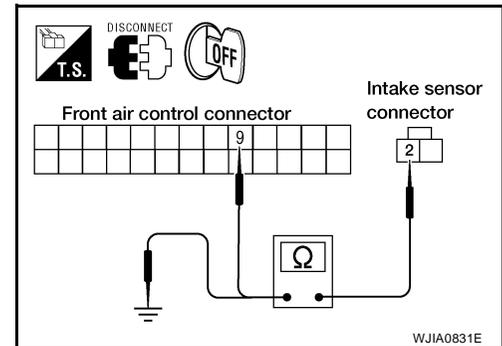

OK or NG

- OK >> 1. Replace front air control. Refer to [ATC-135, "FRONT AIR CONTROL"](#) .
 2. Go to self-diagnosis [ATC-53, "A/C System Self-diagnosis Function"](#) and perform self-diagnosis.
- NG >> Repair harness or connector.


COMPONENT INSPECTION

Intake Sensor

After disconnecting intake sensor connector, measure resistance between terminals 1 and 2 at sensor harness side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	209.0
-10 (14)	160.0
-5 (23)	123.0
0 (32)	95.8
5 (41)	74.9
10 (50)	58.9
15 (59)	46.7
20 (68)	37.3
25 (77)	30.0
30 (86)	24.2
35 (95)	19.7
40 (104)	16.1
45 (113)	13.2

If NG, replace intake sensor.

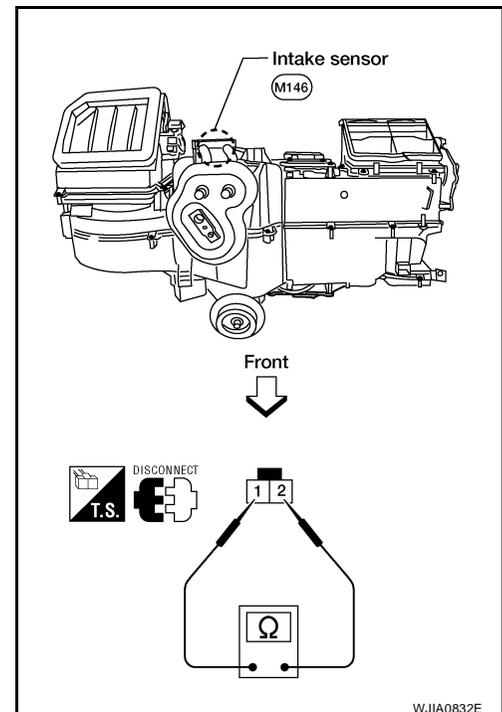

CONTROL UNIT

CONTROL UNIT


PFP:27500

Removal and Installation FRONT AIR CONTROL

EJS002CW

Removal

1. Remove the five control knobs from the front air control unit.
2. Remove the cluster lid C. Refer to [IP-12, "Cluster Lid C"](#) .
3. Remove the four screws securing the front air control unit to cluster lid C.
4. Remove the front air control unit.

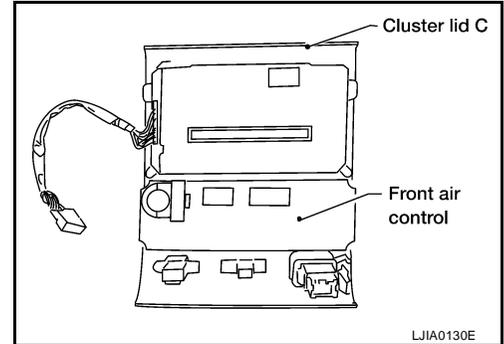


Installation

Installation is in the reverse order of removal.

REAR AIR CONTROL

Removal

1. Remove the overhead console from the headliner. Refer to [EI-37, "HEADLINING"](#) .
2. Remove the four screws and remove the rear air control.

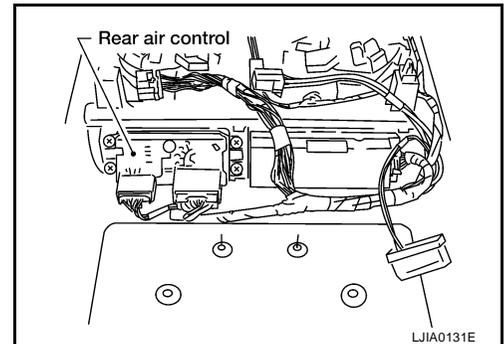

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
K
L
M

ATC

AMBIENT SENSOR

AMBIENT SENSOR

PF2:27722

Removal and Installation

EJS002CX


REMOVAL

1. Disconnect the ambient sensor electrical connector.

NOTE:

The ambient sensor is located behind the front bumper, in front of the condenser.

2. Release the ambient sensor clip and then remove the ambient sensor.

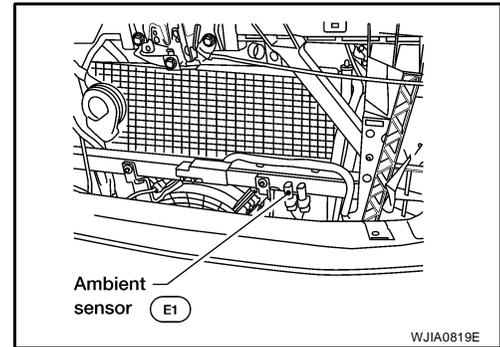

INSTALLATION

Installation is in the reverse order of removal.

IN-VEHICLE SENSOR


IN-VEHICLE SENSOR

PFP:27720

Removal and Installation

EJS002CY

1. Remove the cluster lid D. Refer to [IP-12, "Cluster Lid D"](#) .
2. Remove the two screws and remove the in-vehicle sensor.

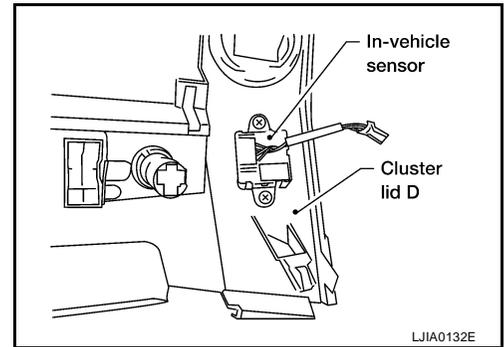

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
K
L
M

ATC

OPTICAL SENSOR


OPTICAL SENSOR

PFP:28576

Removal and Installation

EJS002CZ

The optical sensor is located in the top center of the instrument panel. Refer to [LT-64, "Removal and Installation of Optical Sensor"](#) .

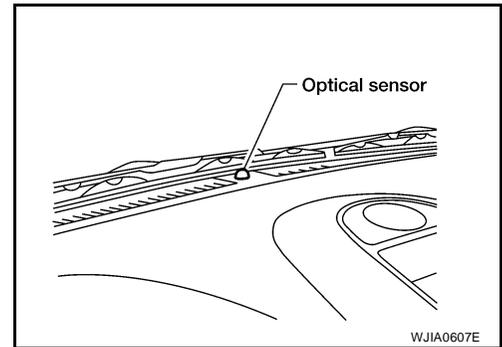

INTAKE SENSOR

PFP:27723

INTAKE SENSOR

Removal and Installation

EJS002D0


REMOVAL

1. Remove the instrument panel. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) .
2. Disconnect the intake sensor electrical connector.

NOTE:

The intake sensor is located on the top of the front heater and cooling unit assembly next to the A/C evaporator cover.

3. Twist the intake sensor to remove the intake sensor from the front heater and cooling unit assembly.

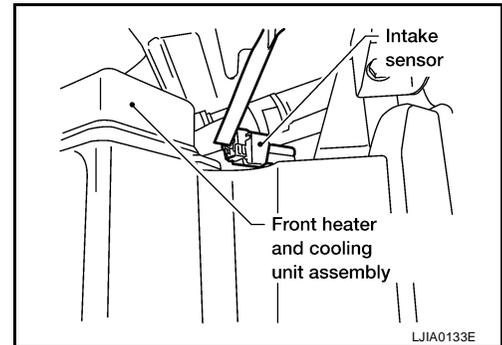

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
K
L
M

ATC

BLOWER MOTOR


PFP:27226

EJS002D1

BLOWER MOTOR


Components

Front Blower Motor

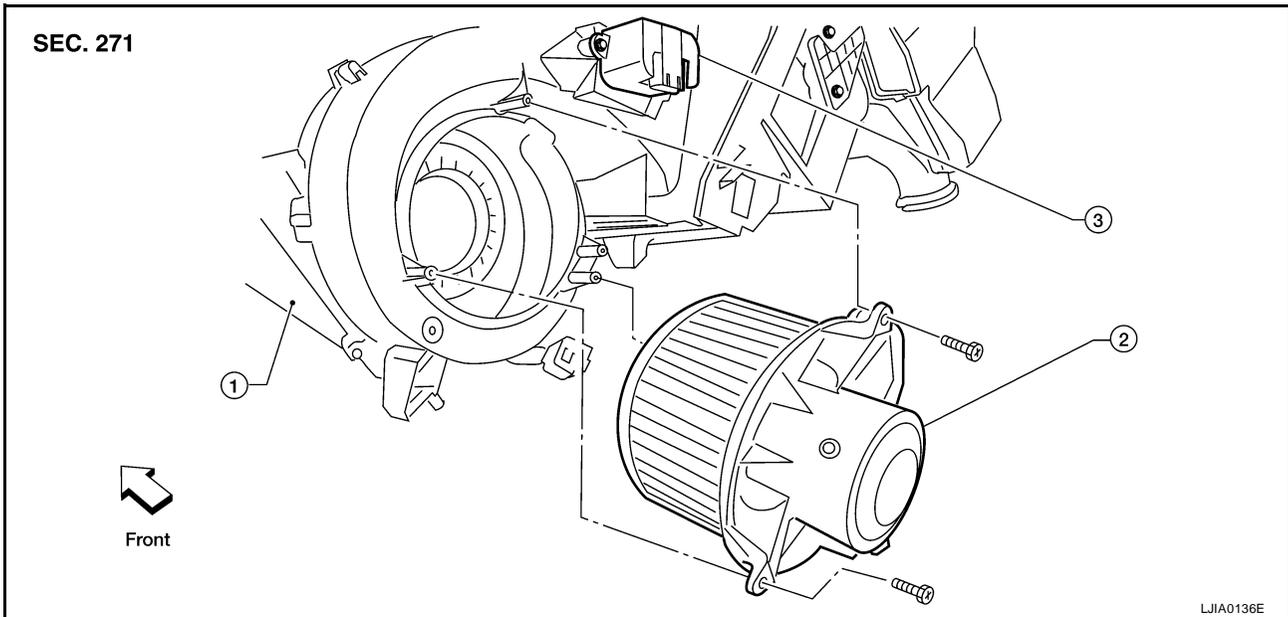

1. Front heater and cooling unit assembly
2. Front blower motor
3. Variable blower control

Rear Blower Motor

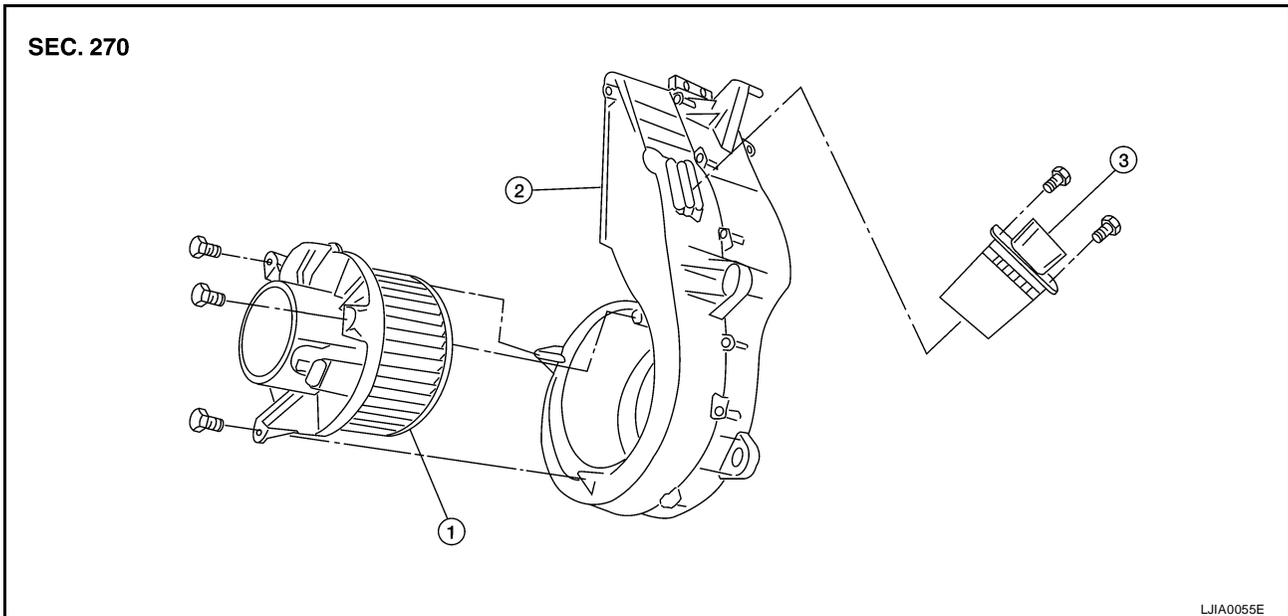

1. Rear blower motor
2. Rear blower motor case
3. Rear blower motor resistor

Removal and Installation

FRONT BLOWER MOTOR

EJS002D2

Removal

1. Remove the glove box assembly. Refer to [IP-14, "Instrument Lower Cover RH and Glove Box"](#) .
2. Disconnect the front blower motor electrical connector.
3. Remove the three screws and remove the front blower motor.

Installation


Installation is in the reverse order of removal.

BLOWER MOTOR

REAR BLOWER MOTOR

Removal

1. Remove the rear RH interior trim panel. Refer to [EI-35, "CENTER PILLAR LOWER FINISHER"](#) .
2. Disconnect the rear blower motor electrical connector.
3. Remove the three screws and remove the rear blower motor.

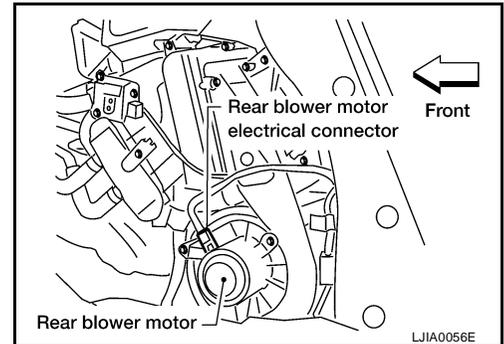

Installation

Installation is in the reverse order of removal.

A

B

C

D

E

F

G

H

I

ATC

K

L

M

IN-CABIN MICROFILTER


IN-CABIN MICROFILTER

PFP:27277

Removal and Installation FUNCTION

EJS002D3

The air inside the passenger compartment is filtered by the in-cabin microfilters when the heater or A/C controls are set on either the recirculation or fresh mode. The two in-cabin microfilters are located in the front heater and cooling unit assembly. The rear heater and cooling unit assembly only draws in air from the passenger compartment to recirculate into the passenger compartment, so the rear heater and cooling unit assembly is not equipped with in-cabin microfilters.

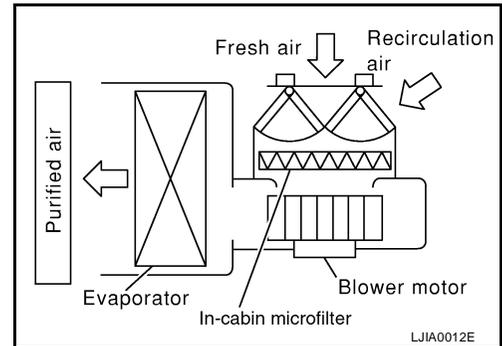


REPLACEMENT TIMING


Replacement of the two in-cabin microfilters is recommended on a regular interval depending on the driving conditions. Refer to [MA-6, "PERIODIC MAINTENANCE"](#). It may also be necessary to replace the two in-cabin microfilters as part of a component replacement if the in-cabin microfilters are damaged.

REPLACEMENT PROCEDURE

1. Remove the two lower glove box hinge pins to remove the glove box from the instrument panel and let it hang from the cord.

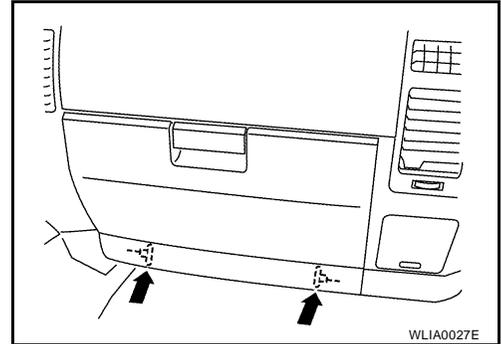


2. Remove the screw and remove the in-cabin microfilter cover.
3. Remove the in-cabin microfilters from the front heater and cooling unit assembly housing.

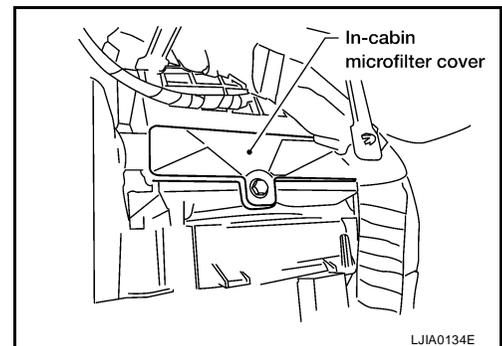

4. Insert the first new in-cabin microfilter into the front heater and cooling unit assembly housing and slide it over to the right. Insert the second new in-cabin microfilter into the front heater and cooling unit assembly housing.


NOTE:

The in-cabin microfilters are marked with air flow arrows. The end of the microfilter with the arrow should face the rear of the vehicle. The arrows should point downward.

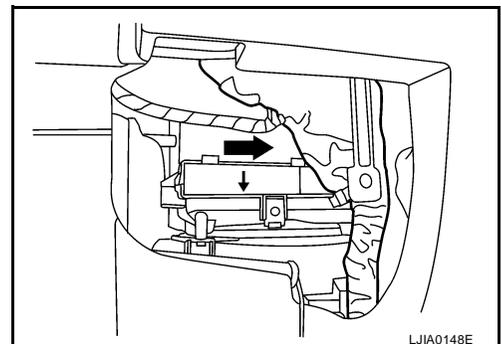


IN-CABIN MICROFILTER

5. Install the in-cabin microfilter cover.

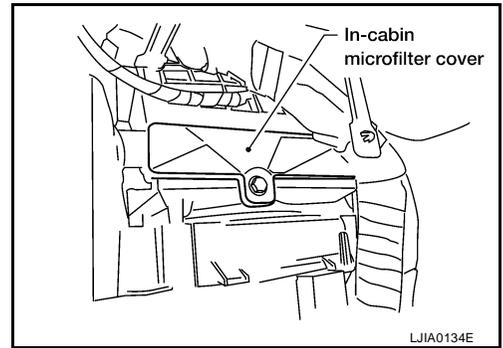

6. Install the lower glove box in the instrument panel and secure it with the two hinge pins.

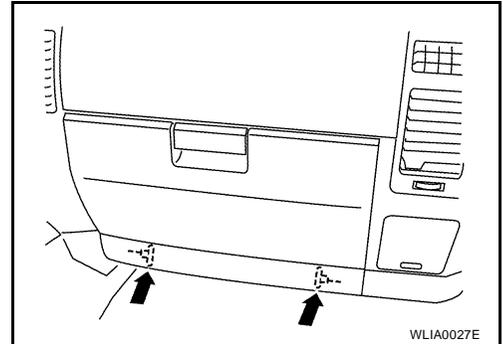

A
B
C
D
E
F
G
H
I
K
L
M

ATC

HEATER & COOLING UNIT ASSEMBLY


HEATER & COOLING UNIT ASSEMBLY

PF2:27110

Components

EJS002D4

Front Heater and Cooling Unit Assembly

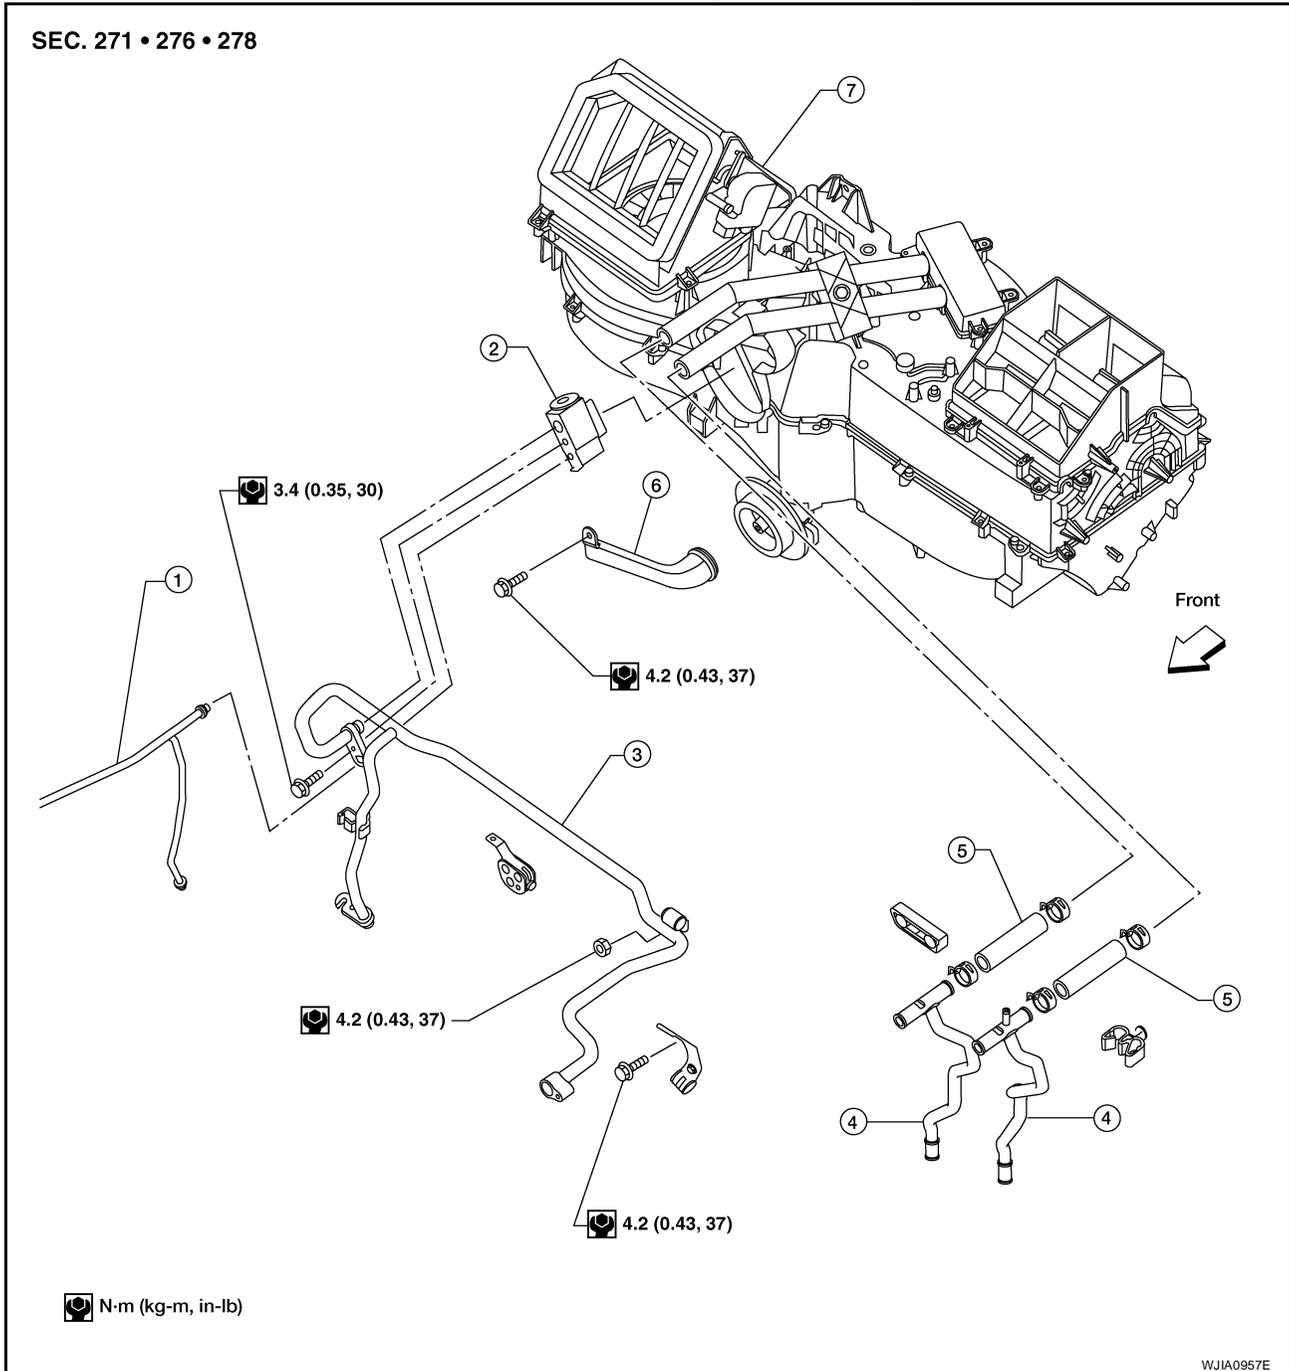

- | | | |
|---|---------------------------|--------------------------|
| 1. High-pressure A/C pipe | 2. Front expansion valve | 3. Low-pressure A/C pipe |
| 4. Front heater core pipe | 5. Front heater core hose | 6. A/C drain hose |
| 7. Front heater and cooling unit assembly | | |

HEATER & COOLING UNIT ASSEMBLY

4. Remove the exhaust system. Refer to [EX-3, "Removal and Installation"](#) .
5. Disconnect the front heater hoses from the front heater core.
6. Disconnect the high/low pressure pipes from the front expansion valve.
7. Move the two front seats to the rearmost position on the seat track.
8. Remove the instrument panel and console panel. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) .
9. Remove the steering column. Refer to [PS-10, "Removal and Installation"](#) .
10. Disconnect the instrument panel wire harness at the RH and LH in-line connector brackets, and the fuse block (J/B) electrical connectors. Refer to [PG-40, "Harness Layout"](#) .
11. Disconnect the steering member from each side of the vehicle body.
12. Remove the front heater and cooling unit assembly with it attached to the steering member, from the vehicle.

CAUTION:

Use care not to damage the seats and interior trim panels when removing the front heater and cooling unit assembly with it attached to the steering member.

13. Remove the front heater and cooling unit assembly from the steering member.

Installation

Installation is in the reverse order of removal.

CAUTION:

- Replace the O-ring of the low-pressure pipe and high-pressure pipe with a new one, and apply compressor oil to it when installing it.
- After charging the refrigerant, check for leaks.


NOTE:

- Fill the engine cooling system with the specified coolant mixture. Refer to [MA-13, "REFILLING ENGINE COOLANT"](#) .
- Recharge the A/C system. Refer to [ATC-162, "Evacuating System and Charging Refrigerant"](#) .

REAR HEATER AND COOLING UNIT ASSEMBLY

Removal

1. Discharge the refrigerant from the A/C system. Refer to [ATC-162, "Discharging Refrigerant"](#) .
2. Drain the coolant from the engine cooling system. Refer to [MA-12, "DRAINING ENGINE COOLANT"](#) .
3. Disconnect the rear heater core hoses from the rear heater core.
4. Disconnect the rear A/C pipes from the rear expansion valve.
5. Remove the rear RH interior trim panel. Refer to [EI-34, "Removal and Installation"](#) .
6. Disconnect the following electrical connectors:
 - Rear blower motor
 - Rear blower motor resistor
 - Rear air mix door motor
7. Disconnect the ducts from the rear heater and cooling unit assembly.
8. Remove the rear heater and cooling unit assembly.

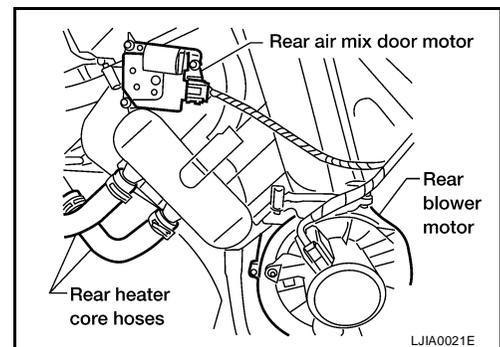

Installation

Installation is in the reverse order of removal.

CAUTION:

- Replace the O-ring of the low-pressure pipe and high-pressure pipe with a new one, and apply compressor oil to it when installing it.
- After charging the refrigerant, check for leaks.

NOTE:

- Fill the engine cooling system with the specified coolant mixture. Refer to [MA-13, "REFILLING ENGINE COOLANT"](#) .
- Recharge the A/C system. Refer to [ATC-162, "Evacuating System and Charging Refrigerant"](#) .

HEATER CORE


HEATER CORE Components

PFP:27140

EJS002D6

Front Heater and Cooling Unit Assembly

SEC. 271

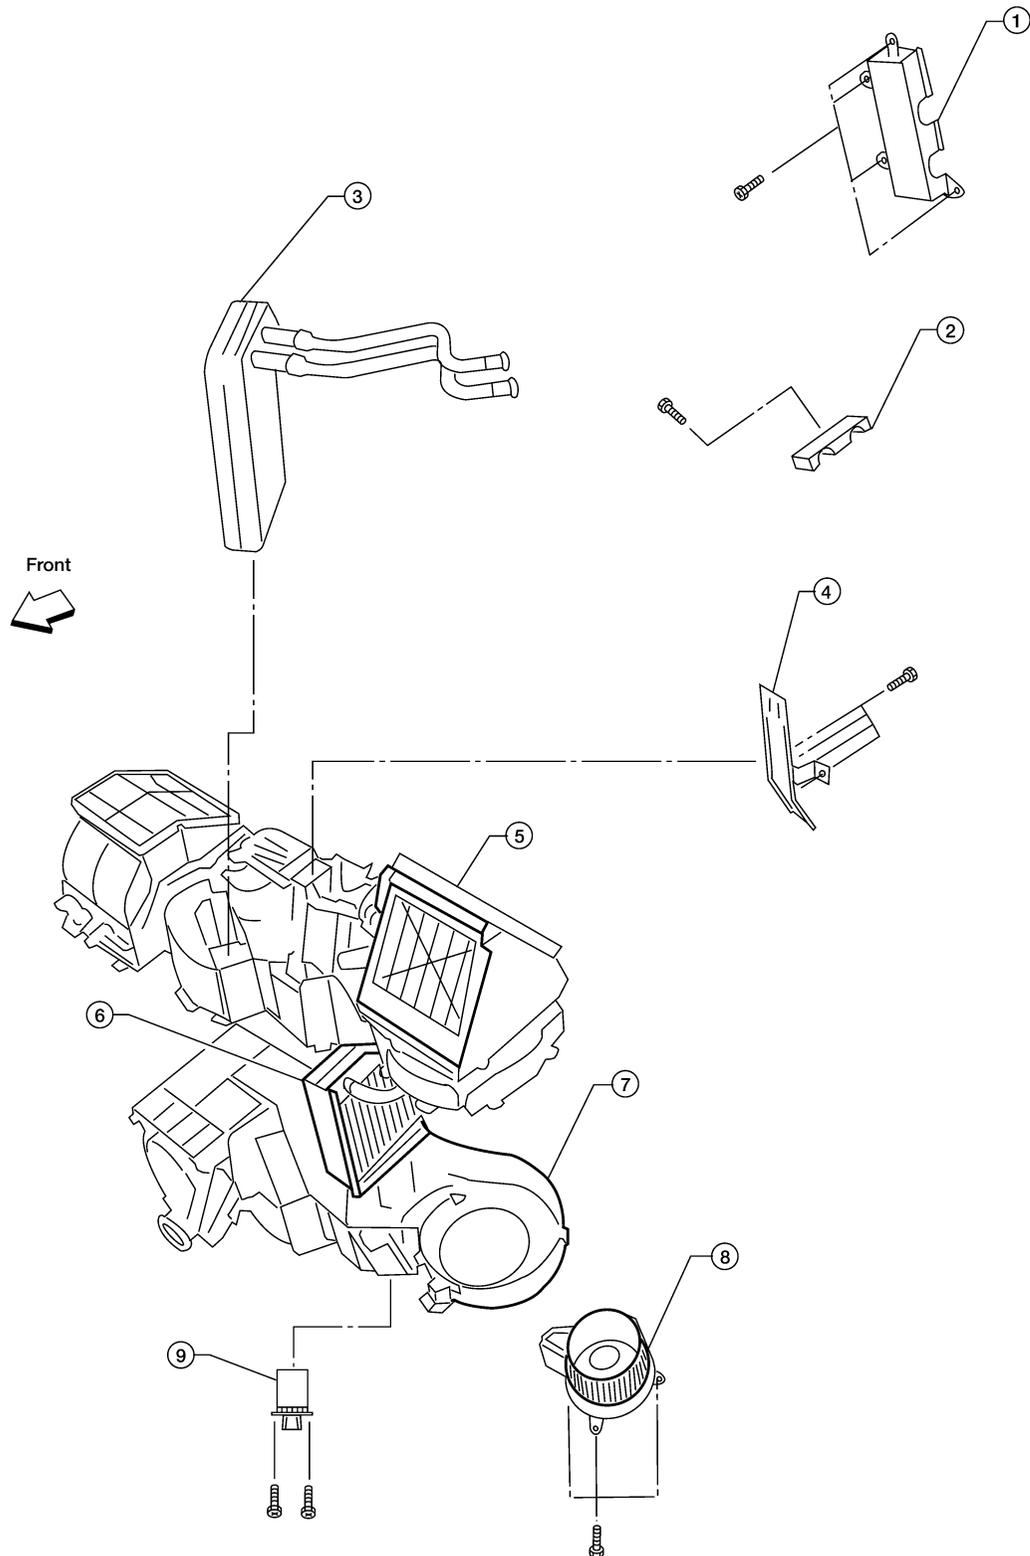

- | | | |
|---------------------------------------|---------------------------------------|----------------------------|
| 1. Heater core cover | 2. Heater core pipe bracket | 3. Heater core |
| 4. Upper bracket | 5. Upper heater and cooling unit case | 6. A/C evaporator |
| 7. Lower heater and cooling unit case | 8. Blower motor | 9. Variable blower control |


LJIA0138E

A
B
C
D
E
F
G
H
I
ATC
K
L
M

HEATER CORE

Rear Heater and Cooling Unit Assembly

SEC. 274

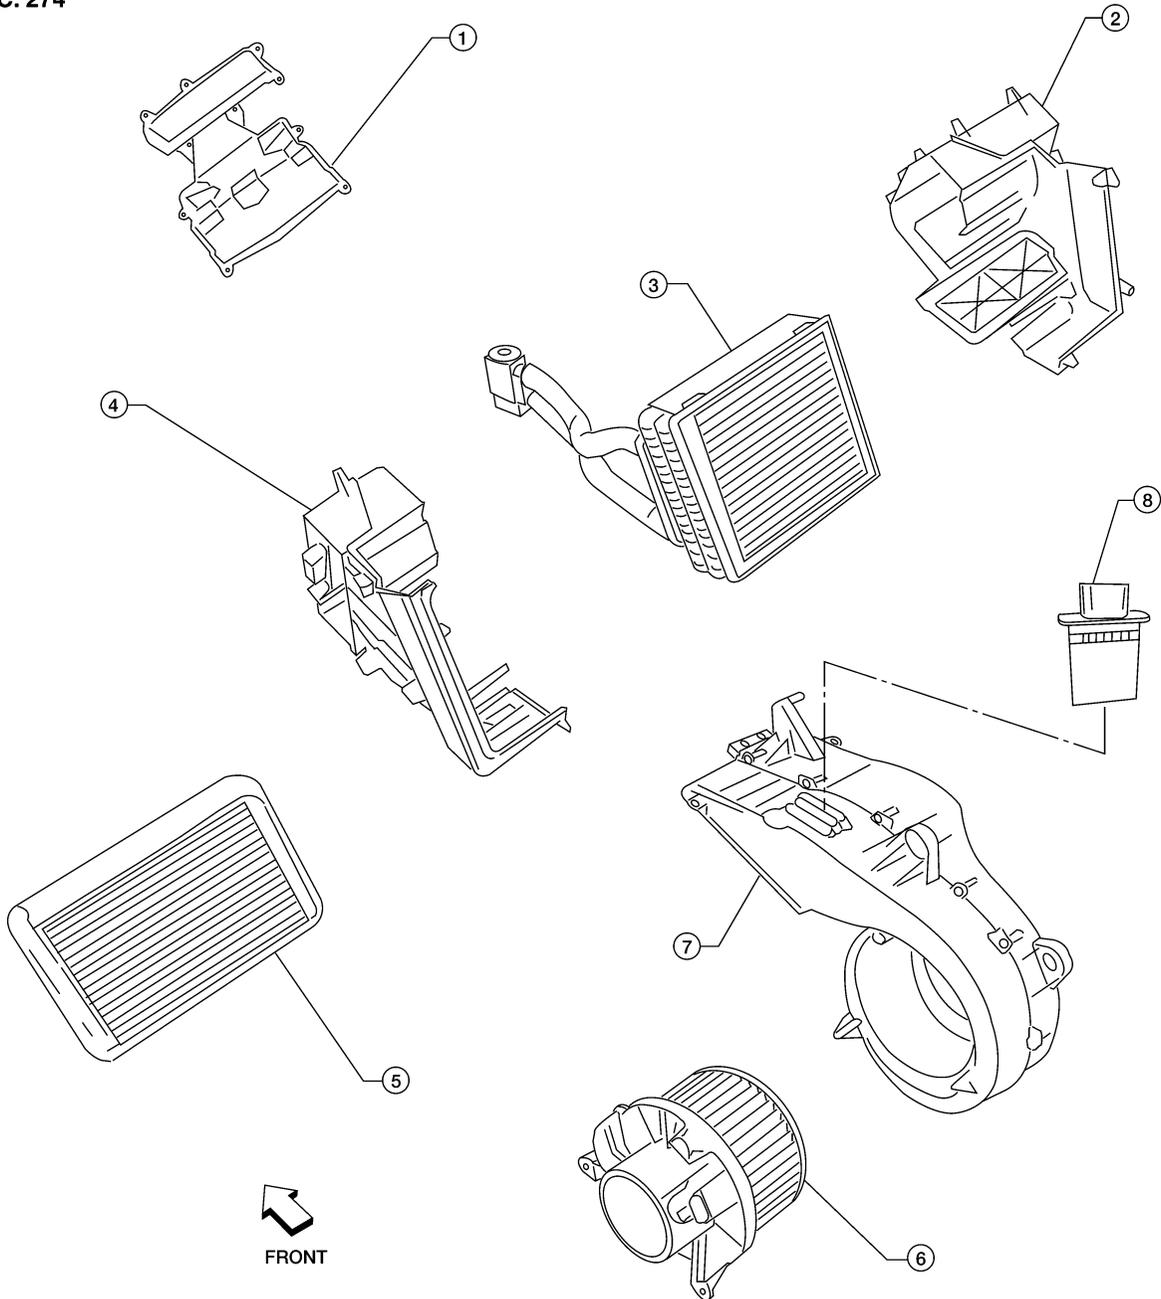

- | | | |
|----------------------|------------------------------------|-----------------|
| 1. Front cover | 2. Evaporator and heater core case | 3. Evaporator |
| 4. Side cover | 5. Heater core | 6. Blower motor |
| 7. Blower motor case | 8. Blower motor resistor | |

LJIA0135E

Removal and Installation FRONT HEATER CORE

EJS002D7

Removal


1. Remove the front heater and cooling unit assembly. Refer to [ATC-145, "FRONT HEATER AND COOLING UNIT ASSEMBLY"](#).
2. Remove the four screws and remove the upper bracket.
3. Remove the four screws and remove the heater core cover.
4. Remove the heater core pipe bracket.

HEATER CORE

5. Remove the heater core.

NOTE:

If the in-cabin microfilters are contaminated from coolant leaking from the heater core, replace the in-cabin microfilters with new ones before installing the new heater core.

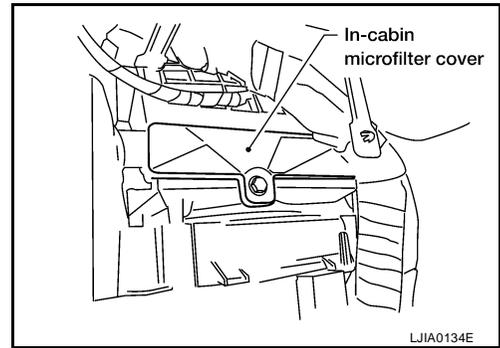


Installation

Installation is in the reverse order of removal.


REAR HEATER CORE

Removal

1. Partially drain the engine cooling system. Refer to [MA-12, "DRAINING ENGINE COOLANT"](#) .
2. Remove the rear RH interior trim panel. Refer to [EI-34, "Removal and Installation"](#) .
3. Disconnect the rear heater hoses from the heater core.

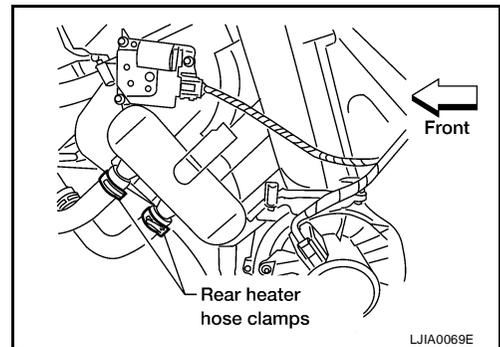

4. Remove the rear heater core bracket.
5. Remove the heater core.

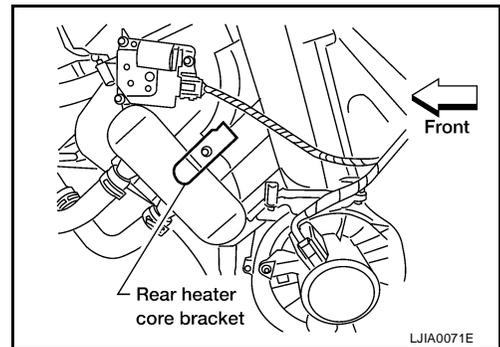

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
K
L
M

ATC

DEFROSTER DOOR MOTOR


DEFROSTER DOOR MOTOR

PF2:27733

Removal and Installation

EJS002D8

Defroster Door Motor - Front Heater and Cooling Unit Assembly

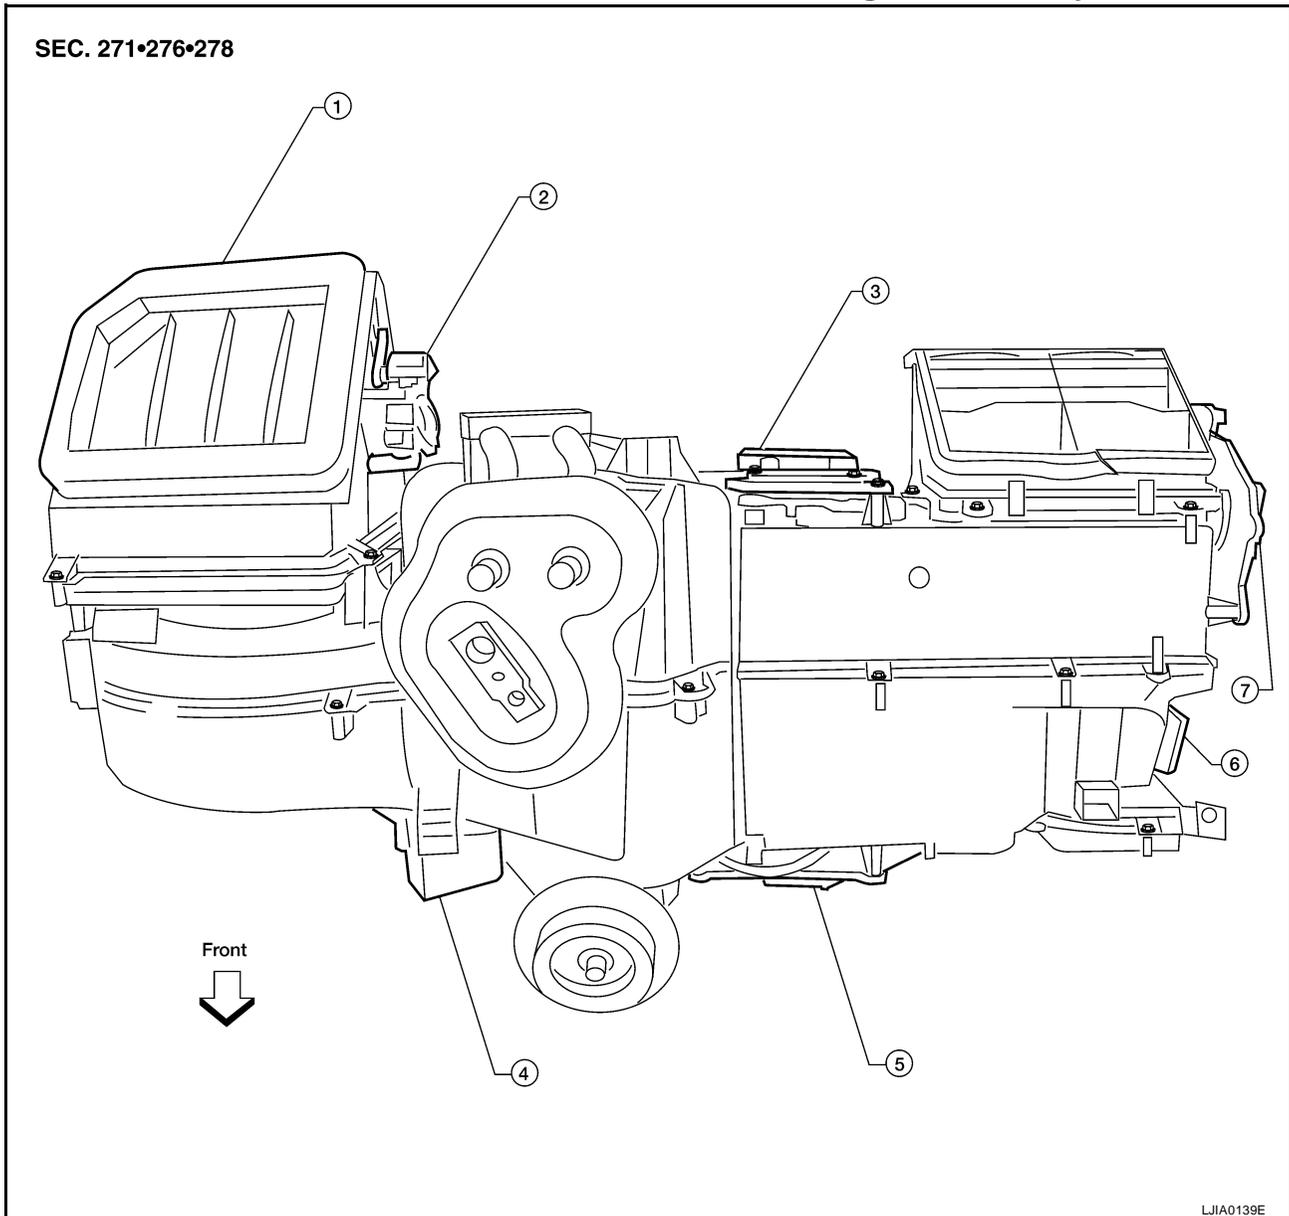

- | | | |
|---|-----------------------------------|--------------------------------|
| 1. Front heater and cooling unit assembly | 2. Intake door motor | 3. Air mix door motor (driver) |
| 4. Variable blower control | 5. Air mix door motor (passenger) | 6. Mode door motor |
| 7. Defroster door motor | | |

REMOVAL

1. Remove the front heater and cooling unit assembly. Refer to [ATC-145, "FRONT HEATER AND COOLING UNIT ASSEMBLY"](#).
2. Remove the steering member from the front heater and cooling unit assembly.
3. Disconnect the defroster door motor electrical connector.
4. Remove the three screws and remove the defroster door motor.

INSTALLATION

Installation is in the reverse order of removal.


INTAKE DOOR MOTOR

PF2:27730

EJS002D9

INTAKE DOOR MOTOR Removal and Installation

Intake Door Motor - Front Heater and Cooling Unit Assembly

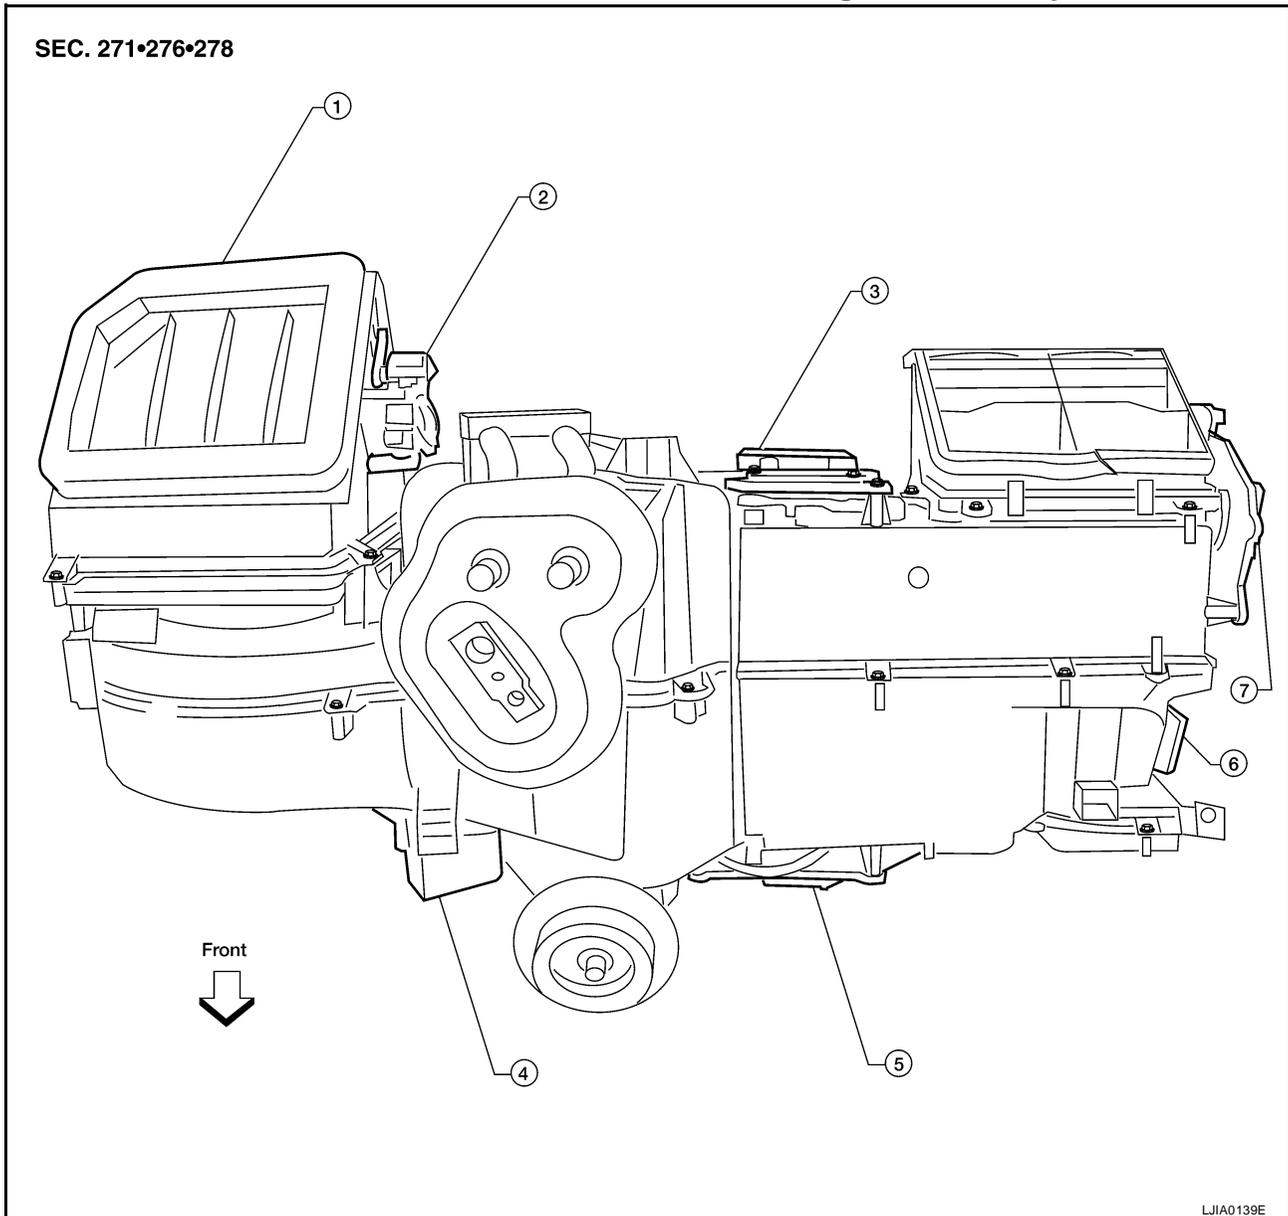

- | | | |
|---|-----------------------------------|--------------------------------|
| 1. Front heater and cooling unit assembly | 2. Intake door motor | 3. Air mix door motor (driver) |
| 4. Variable blower control | 5. Air mix door motor (passenger) | 6. Mode door motor |
| 7. Defroster door motor | | |

REMOVAL

1. Remove the front heater and cooling unit assembly. Refer to [ATC-145, "FRONT HEATER AND COOLING UNIT ASSEMBLY"](#) .
2. Remove the steering member from the front heater and cooling unit assembly.
3. Disconnect the intake door motor electrical connector.
4. Remove the three screws and remove the intake door motor.

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
K
L
M

ATC

MODE DOOR MOTOR


MODE DOOR MOTOR

PF2:27731

Removal and Installation

EJS002DA

Mode Door Motor - Front Heater and Cooling Unit Assembly

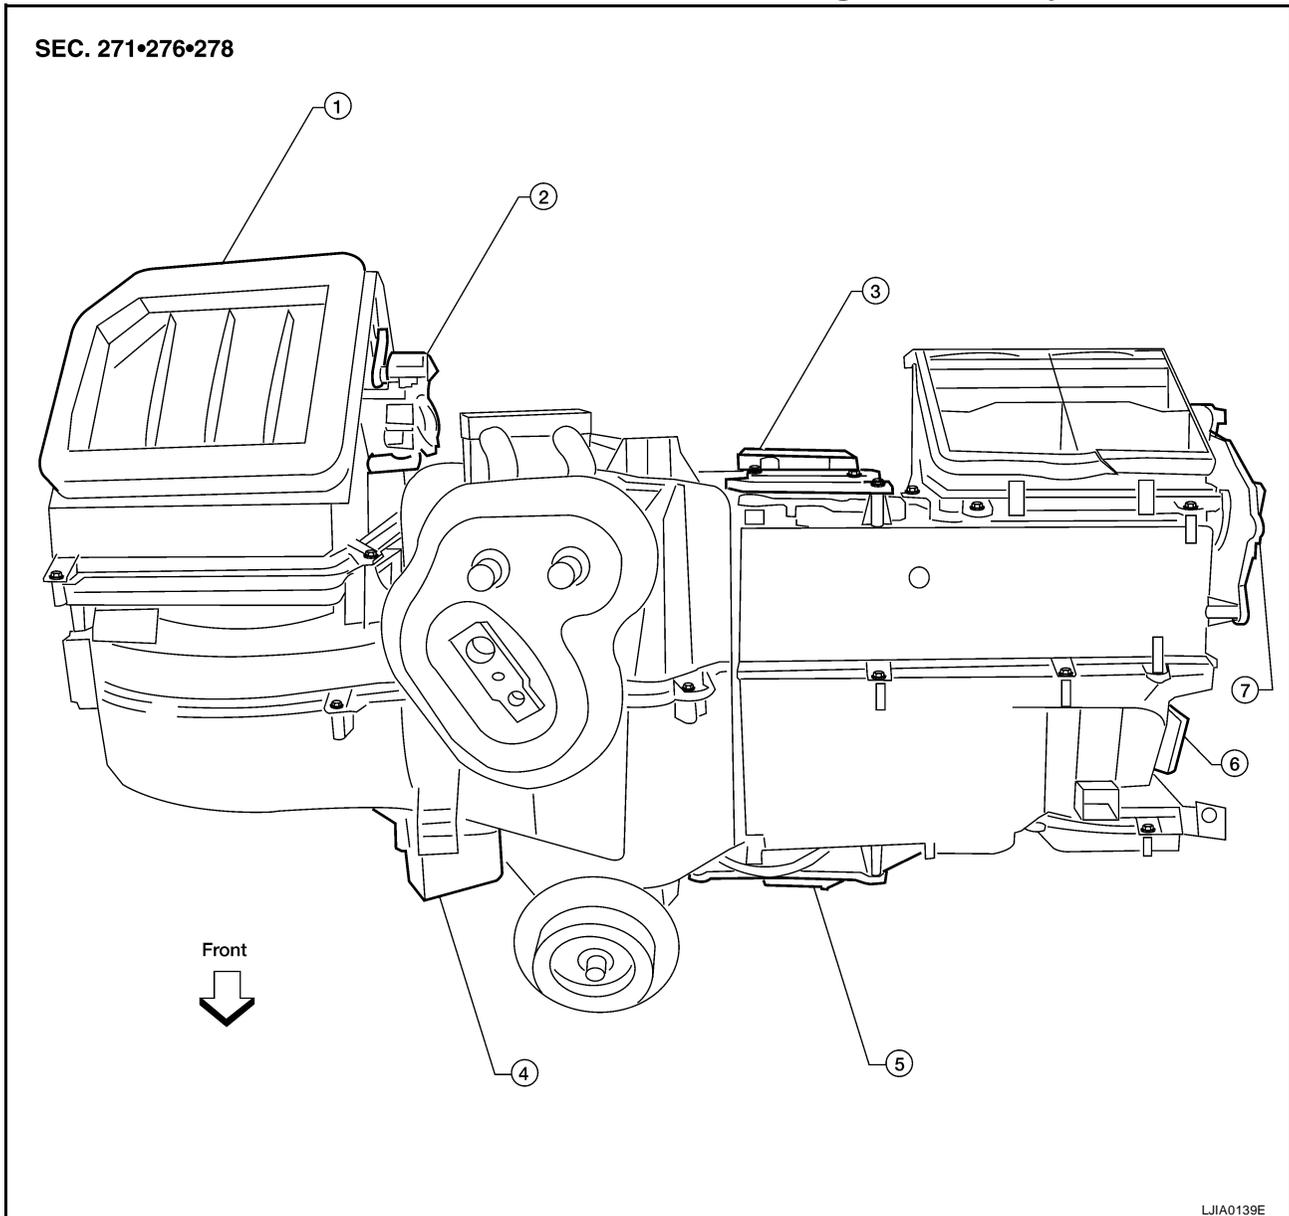

- | | | |
|---|-----------------------------------|--------------------------------|
| 1. Front heater and cooling unit assembly | 2. Intake door motor | 3. Air mix door motor (driver) |
| 4. Variable blower control | 5. Air mix door motor (passenger) | 6. Mode door motor |
| 7. Defroster door motor | | |

REMOVAL

1. Remove the front heater and cooling unit assembly. Refer to [ATC-145, "FRONT HEATER AND COOLING UNIT ASSEMBLY"](#).
2. Remove the steering member from the front heater and cooling unit assembly.
3. Disconnect the mode door motor electrical connector.
4. Remove the two screws and remove the mode door motor.

INSTALLATION

Installation is in the reverse order of removal.

AIR MIX DOOR MOTOR


AIR MIX DOOR MOTOR

PF2:27732

Components

EJS002DB

Air Mix Door Motors - Front Heater and Cooling Unit Assembly

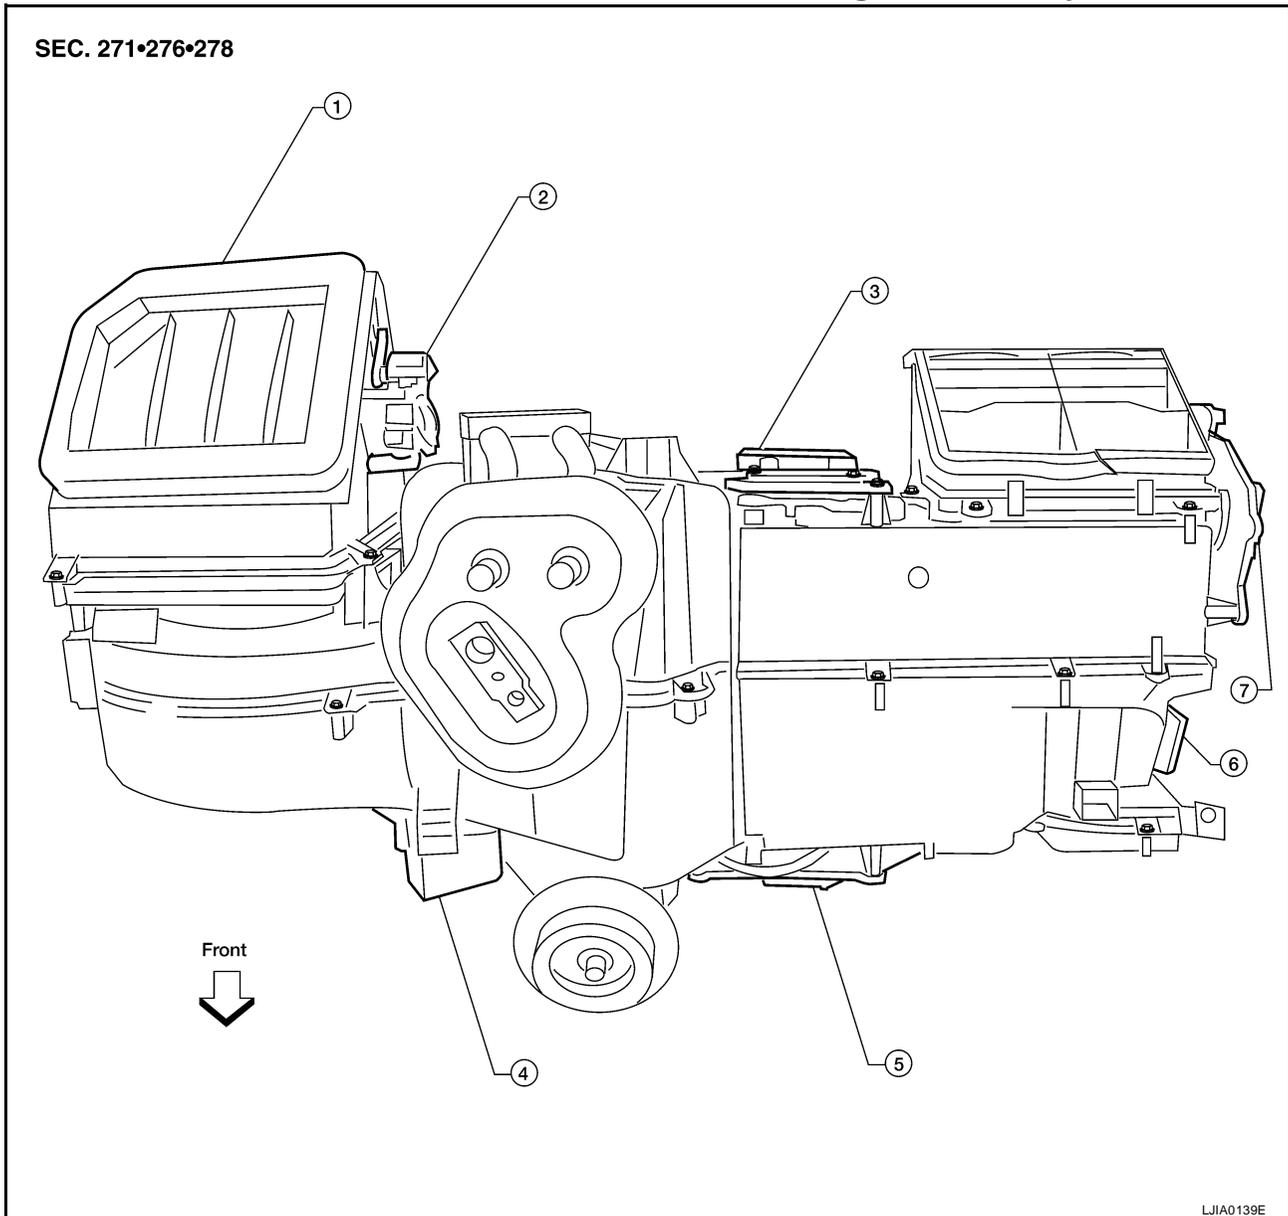

- | | | |
|---|-----------------------------------|--------------------------------|
| 1. Front heater and cooling unit assembly | 2. Intake door motor | 3. Air mix door motor (driver) |
| 4. Variable blower control | 5. Air mix door motor (passenger) | 6. Mode door motor |
| 7. Defroster door motor | | |

Removal and Installation

FRONT AIR MIX DOOR MOTOR (DRIVER)

EJS002DC

Removal

1. Remove the front heater and cooling unit assembly. Refer to [ATC-145, "FRONT HEATER AND COOLING UNIT ASSEMBLY"](#).
2. Remove the steering member from the front heater and cooling unit assembly.
3. Disconnect the air mix door motor electrical connector.
4. Remove the three screws and remove the air mix door motor.

Installation

Installation is in the reverse order of removal.

AIR MIX DOOR MOTOR

FRONT AIR MIX DOOR MOTOR (PASSENGER)

Removal

1. Remove the front heater and cooling unit assembly. Refer to [ATC-145, "FRONT HEATER AND COOLING UNIT ASSEMBLY"](#) .
2. Remove the steering member from the front heater and cooling unit assembly.
3. Disconnect the air mix door motor electrical connector.
4. Remove the three screws and remove the air mix door motor.


Installation

Installation is in the reverse order of removal.

REAR AIR MIX DOOR MOTOR

Removal

1. Remove the RH rear interior trim panel. Refer to [EI-34, "Removal and Installation"](#) .
2. Disconnect the rear air mix door motor electrical connector.
3. Remove the three screws and remove the rear air mix door motor.

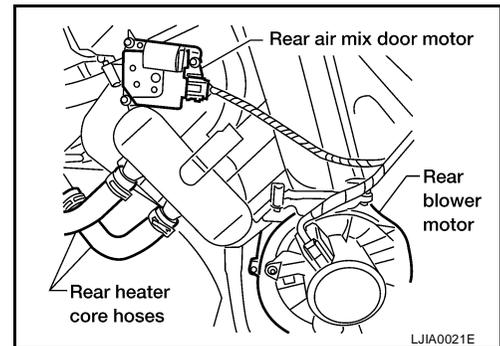

Installation

Installation is in the reverse order of removal.

VARIABLE BLOWER CONTROL


VARIABLE BLOWER CONTROL

PF2:27200

Removal and Installation

EJS002DD

Variable Blower Control - Front Heater and Cooling Unit Assembly

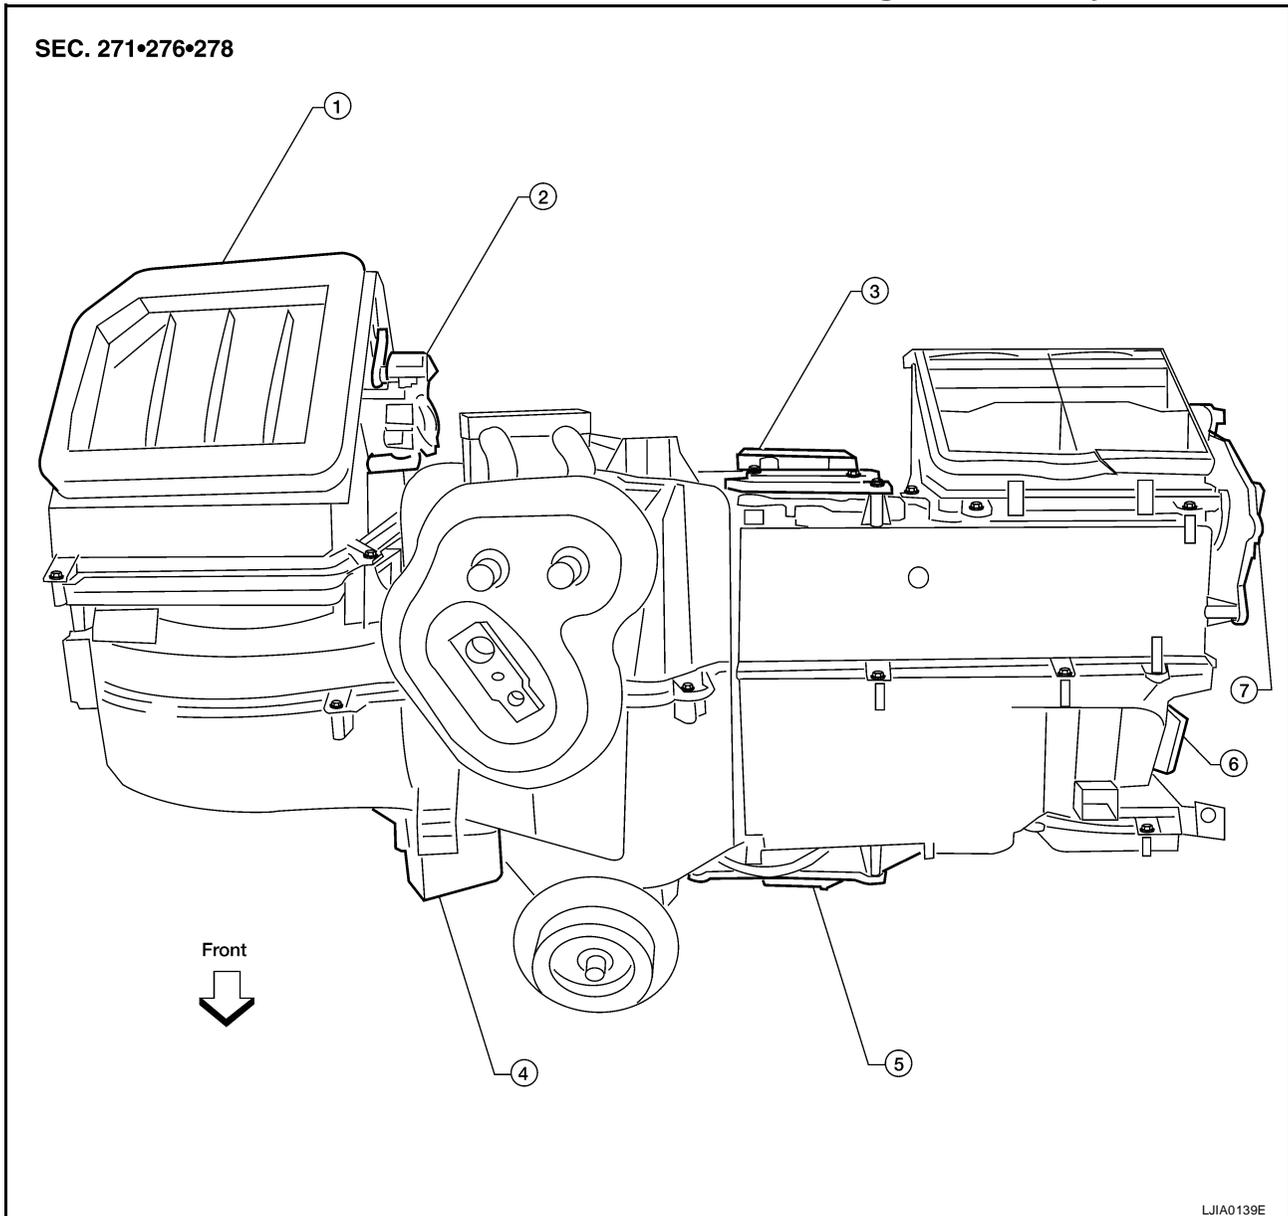

- | | | |
|---|-----------------------------------|--------------------------------|
| 1. Front heater and cooling unit assembly | 2. Intake door motor | 3. Air mix door motor (driver) |
| 4. Variable blower control | 5. Air mix door motor (passenger) | 6. Mode door motor |
| 7. Defroster door motor | | |

REMOVAL

1. Remove the front heater and cooling unit assembly. Refer to [ATC-145, "FRONT HEATER AND COOLING UNIT ASSEMBLY"](#).
2. Remove the steering member from the front heater and cooling unit assembly.
3. Disconnect the variable blower control electrical connector.
4. Remove the two screws and remove the variable blower control.

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
K
L
M

ATC

REAR BLOWER MOTOR RESISTOR


REAR BLOWER MOTOR RESISTOR

PF2:27150

Removal and Installation

EJS002DE

Rear Blower Motor Resistor

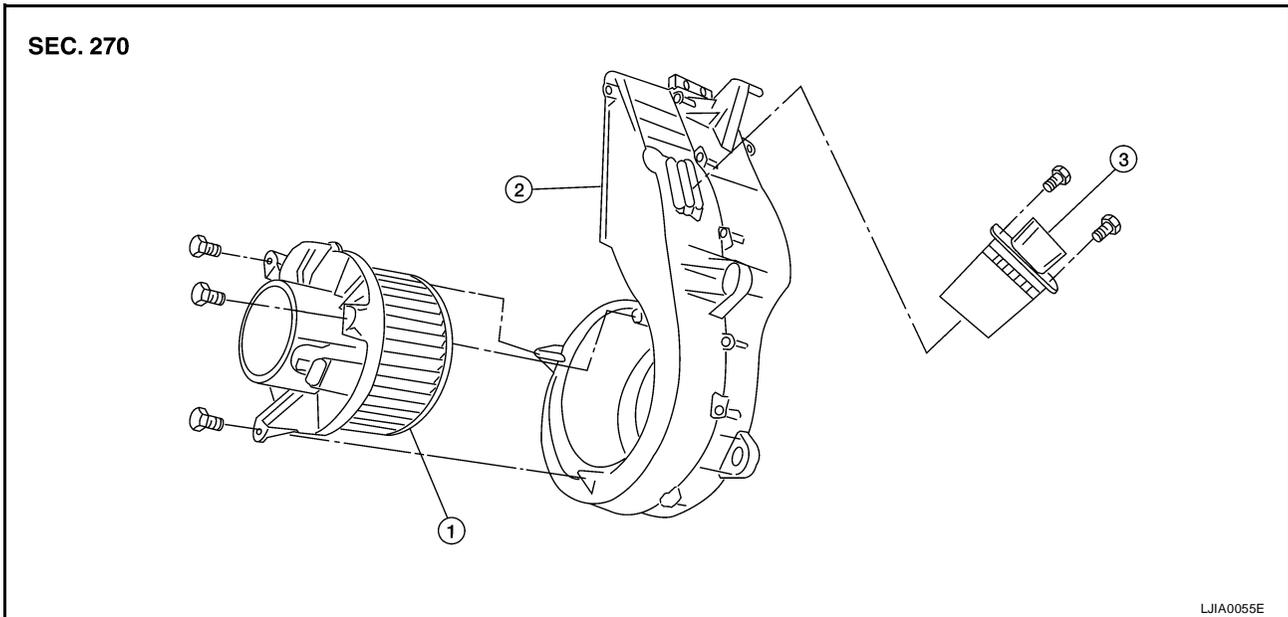

1. Rear blower motor

2. Rear blower motor case

3. Rear blower motor resistor

REMOVAL

1. Remove the rear RH interior trim panel. Refer to [EI-34, "Removal and Installation"](#) .
2. Disconnect the rear blower motor resistor electrical connector.
3. Remove the two screws and remove the rear blower motor resistor.

INSTALLATION

Installation is in the reverse order of removal.

DUCTS AND GRILLES

DUCTS AND GRILLES


PFP:27860

Components

EJS002DF

Ducts - Front Heater and Cooling Unit Assembly

SEC. 270 • 271

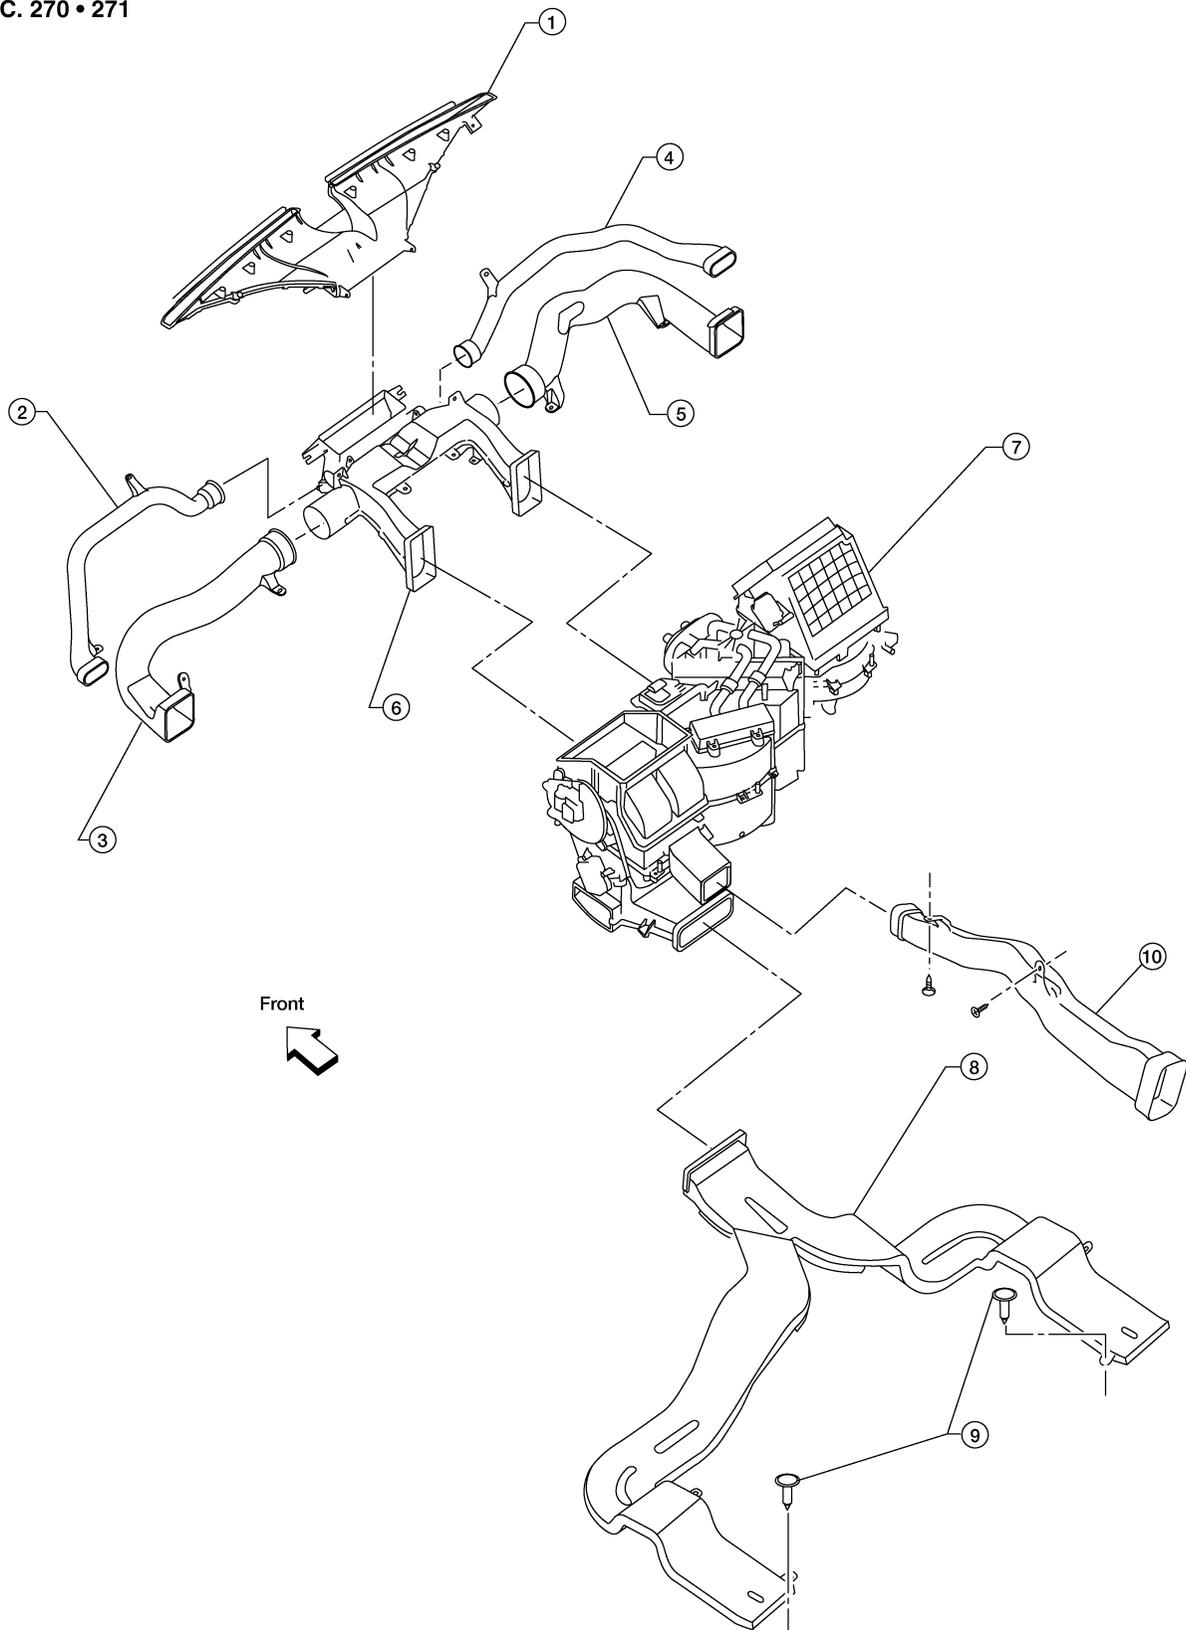


A
B
C
D
E
F
G
H
I
K
L
M

ATC

DUCTS AND GRILLES

- | | | |
|---|--------------------------|---------------------------|
| 1. Defroster nozzle | 2. LH side demister duct | 3. LH ventilator duct |
| 4. RH side demister duct | 5. RH ventilator duct | 6. Center ventilator duct |
| 7. Front heater and cooling unit assembly | 8. Floor duct | 9. Clips |
| 10. Heat duct | | |

Ducts - Rear Heater and Cooling Unit Assembly

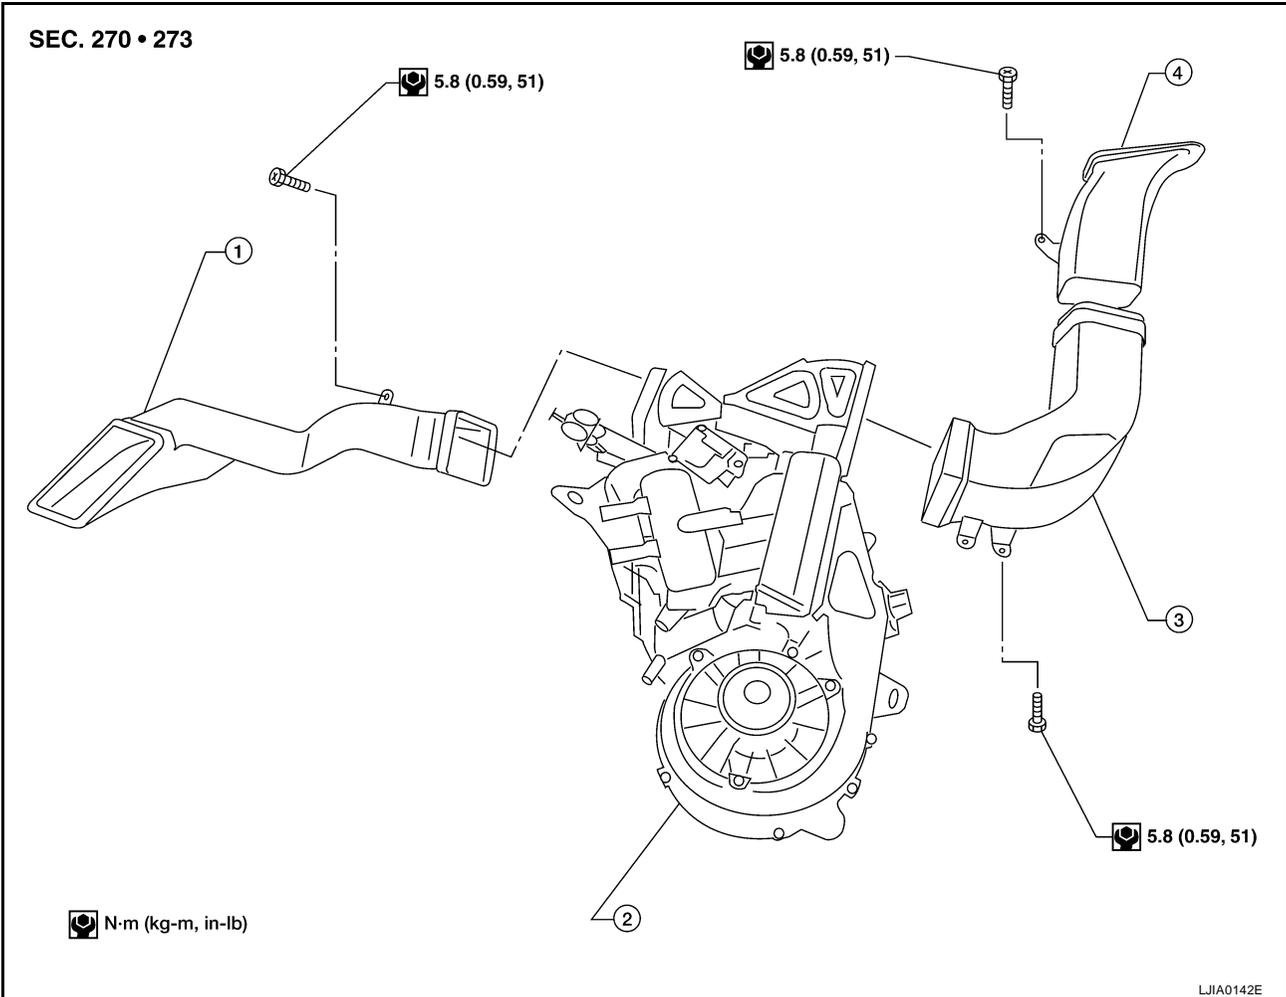


- | | | |
|-----------------------------|--|-----------------------------|
| 1. Rear floor duct | 2. Rear heater and cooling unit assembly | 3. Rear lower overhead duct |
| 4. Rear upper overhead duct | | |

DUCTS AND GRILLES

Grilles

SEC. 685 • 970

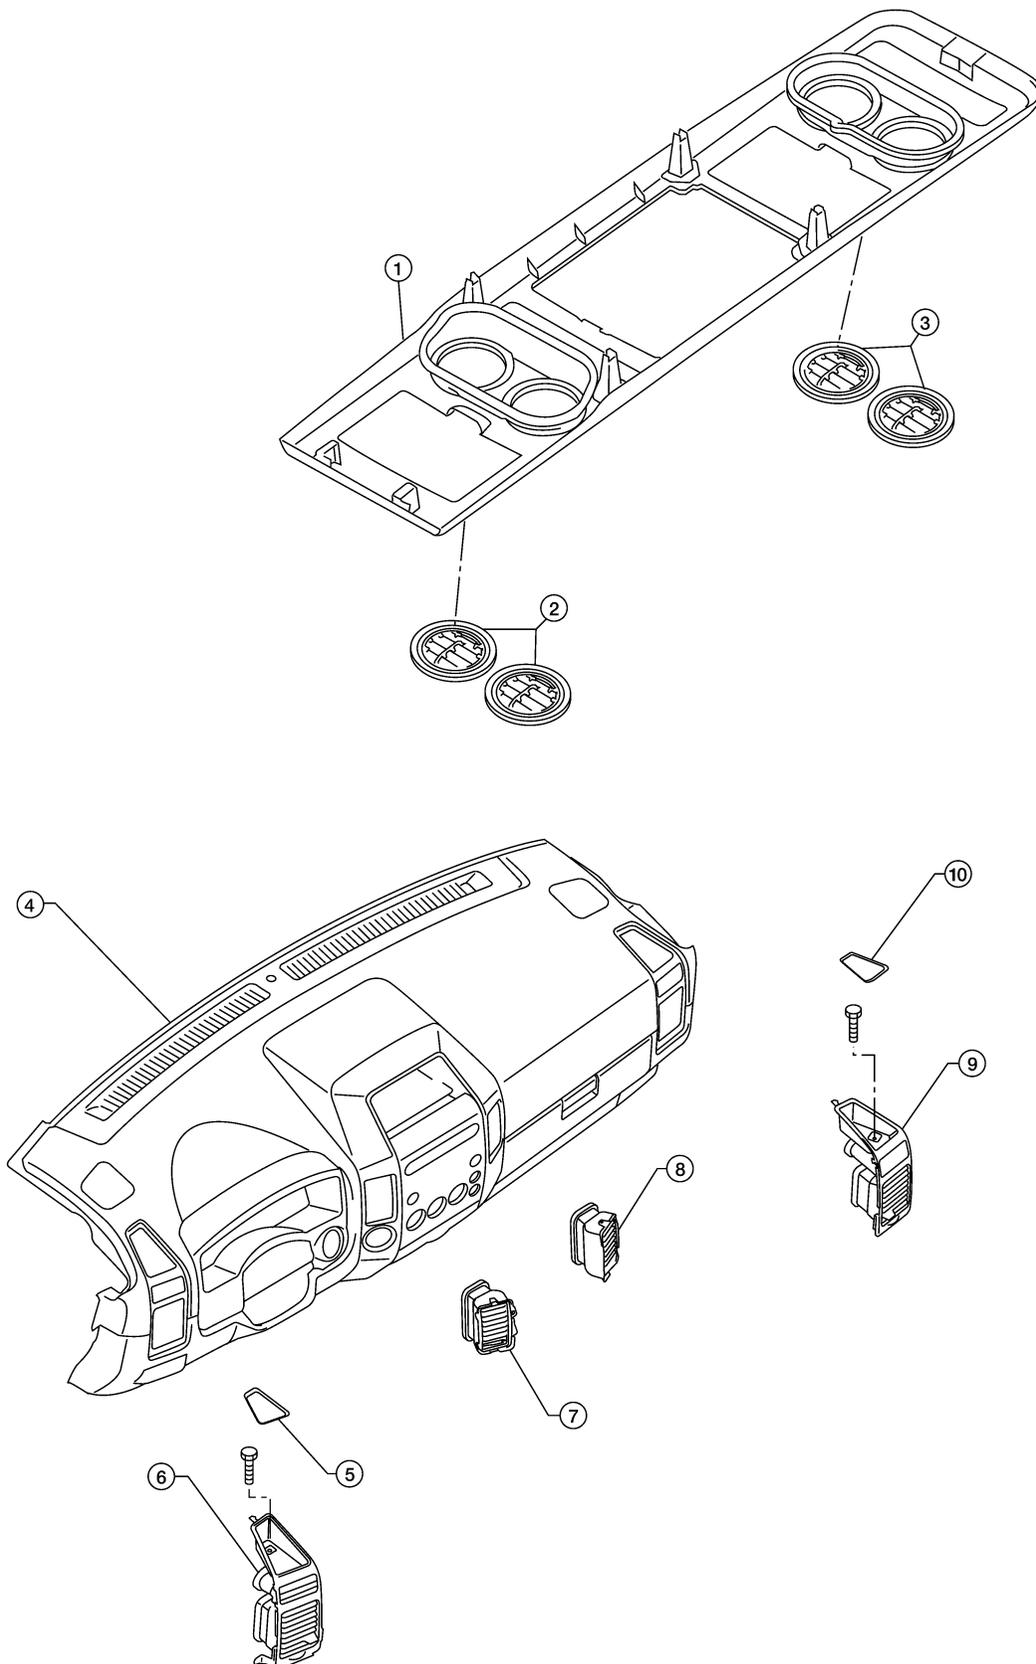

A
B
C
D
E
F
G
H
I
ATC
K
L
M

- 1. Overhead console trim panel
- 2. Overhead console front grilles (front)
- 3. Overhead console rear grilles (rear)
- 4. Instrument panel
- 5. Storage tray bottom cover (LH)
- 6. LH side ventilator and demister grille
- 7. LH side ventilator and demister grille
- 8. LH side ventilator and demister grille
- 9. LH side ventilator and demister grille
- 10. LH side ventilator and demister grille

LJIA0140E

DUCTS AND GRILLES

-
- 7. LH ventilator grille
 - 8. RH ventilator grille
 - 9. RH side ventilator and demister grille
 - 10. Storage tray bottom cover (RH)

Removal and Installation CENTER CONSOLE HEAT DUCT AND REAR FINISHER ASSEMBLY GRILLE

EJS002DG

Removal

The center console must be removed and disassembled to remove the heat duct and rear finisher assembly grille. Refer to [IP-15, "Center Console"](#) .

Installation

Installation is in the reverse order of removal.

DEFROSTER NOZZLE

Removal

1. Remove the instrument panel trim. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) .
2. Remove the defroster nozzle.

Installation

Installation is in the reverse order of removal.

RH AND LH SIDE DEMISTER DUCT

Removal

1. Remove the instrument panel trim. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) .
2. Remove the RH or LH side demister duct.

Installation

Installation is in the reverse order of removal.

RH AND LH VENTILATOR DUCT

Removal

1. Remove the instrument panel trim. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) .
2. Remove the RH or LH ventilator duct.

Installation

Installation is in the reverse order of removal.

CENTER VENTILATOR DUCT

Removal

1. Remove the instrument panel trim. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) .
2. Remove the defroster nozzle.
3. Remove the RH and LH side demister ducts.
4. Remove the RH and LH ventilator ducts.
5. Remove the center ventilator duct.

Installation

Installation is in the reverse order of removal.

FLOOR DUCT

Removal

1. Remove the floor carpet. Refer to [EI-36, "Removal and Installation"](#) .
2. Remove the two clips and remove the floor duct.

Installation

Installation is in the reverse order of removal.

REAR OVERHEAD DUCTS

Removal

1. Remove the rear RH interior trim panel. Refer to [EI-34, "Removal and Installation"](#) .
2. Remove the headliner. Refer to [EI-37, "Removal and Installation"](#) .

DUCTS AND GRILLES

NOTE:

The rear headliner duct connected to the rear upper overhead duct is part of the headlining trim panel and is replaced as an assembly. Refer to [EI-37, "Removal and Installation"](#) .

3. Remove the two bolts and remove the rear lower and upper overhead ducts.

Installation

Installation is in the reverse order of removal.

REAR FLOOR DUCT**Removal**

1. Remove the rear RH interior trim panel. Refer to [EI-34, "Removal and Installation"](#) .
2. Reposition the floor carpet out of the way.
3. Remove the two bolts and remove the rear floor duct.

Installation

Installation is in the reverse order of removal.

GRILLES**Removal**

1. Remove the interior trim panel as necessary. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) or [EI-37, "Removal and Installation"](#) .
2. Remove the grille from the interior trim panel.

NOTE:

To remove the overhead console front and rear grilles, turn the grille counter-clockwise to release the grille from the overhead console trim panel.

Installation

Installation is in the reverse order of removal.

A

B

C

D

E

F

G

H

I

ATC

K

L

M

REFRIGERANT LINES

PFP:92600

EJS002DH


REFRIGERANT LINES

HFC-134a (R-134a) Service Procedure SETTING OF SERVICE TOOLS AND EQUIPMENT

Discharging Refrigerant

WARNING:


Avoid breathing A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) refrigerant from the A/C system using certified service equipment meeting requirements of SAE J2210 HFC-134a (R-134a) recycling equipment or SAE J2201 HFC-134a (R-134a) recovery equipment. If an accidental system discharge occurs, ventilate the work area before resuming service. Additional health and safety information may be obtained from the refrigerant and lubricant manufacturers.

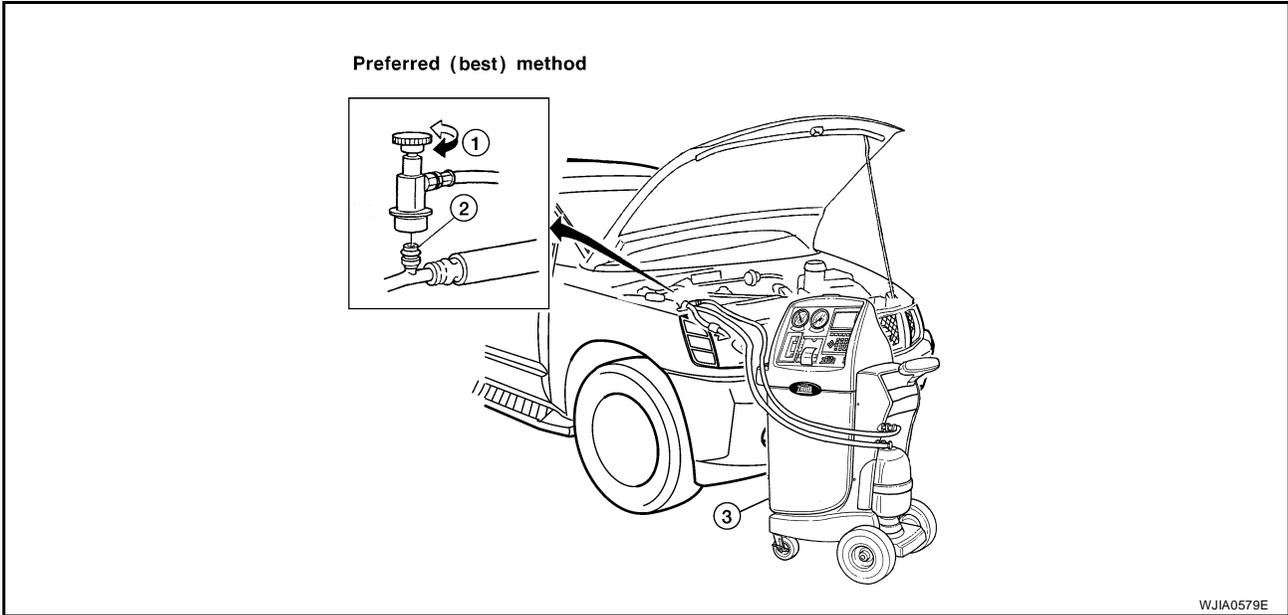

WJIA0579E

- 1. Shut-off valve
- 2. A/C service valve
- 3. Recovery/recycling equipment


Evacuating System and Charging Refrigerant

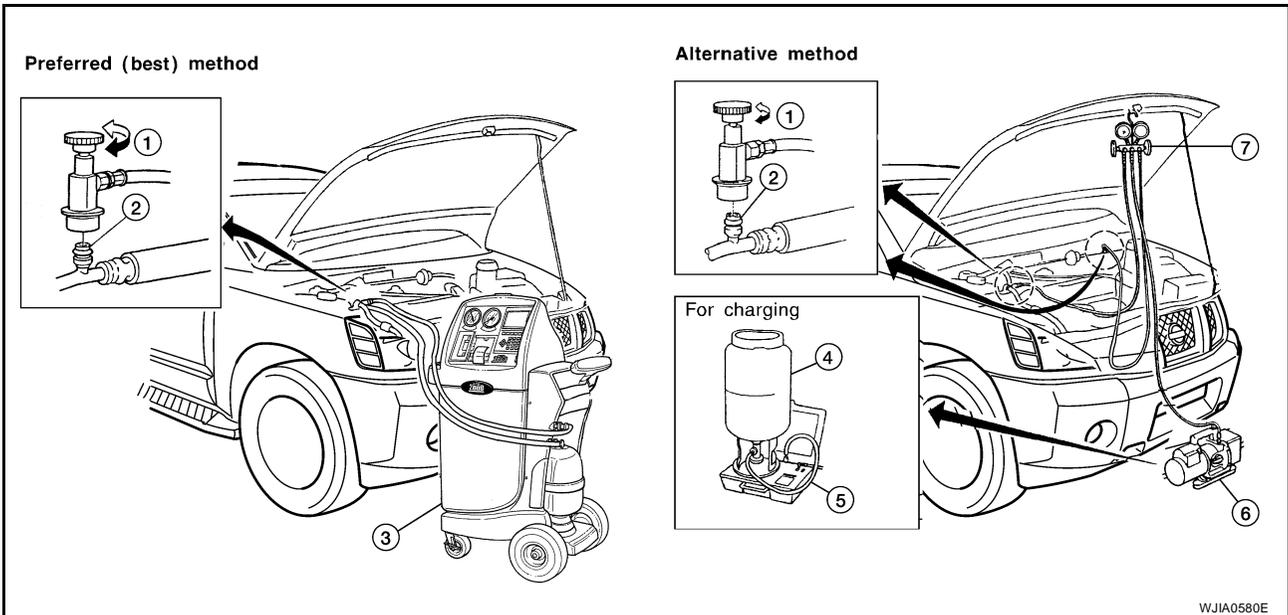

WJIA0580E

- 1. Shut-off valve
- 2. A/C service valve
- 3. Recovery/recycling equipment
- 4. Refrigerant container (HFC-134a)
- 5. Weight scale (J-39650)
- 6. Evacuating vacuum pump (J-39699)
- 7. Manifold gauge set (J-39183)

REFRIGERANT LINES

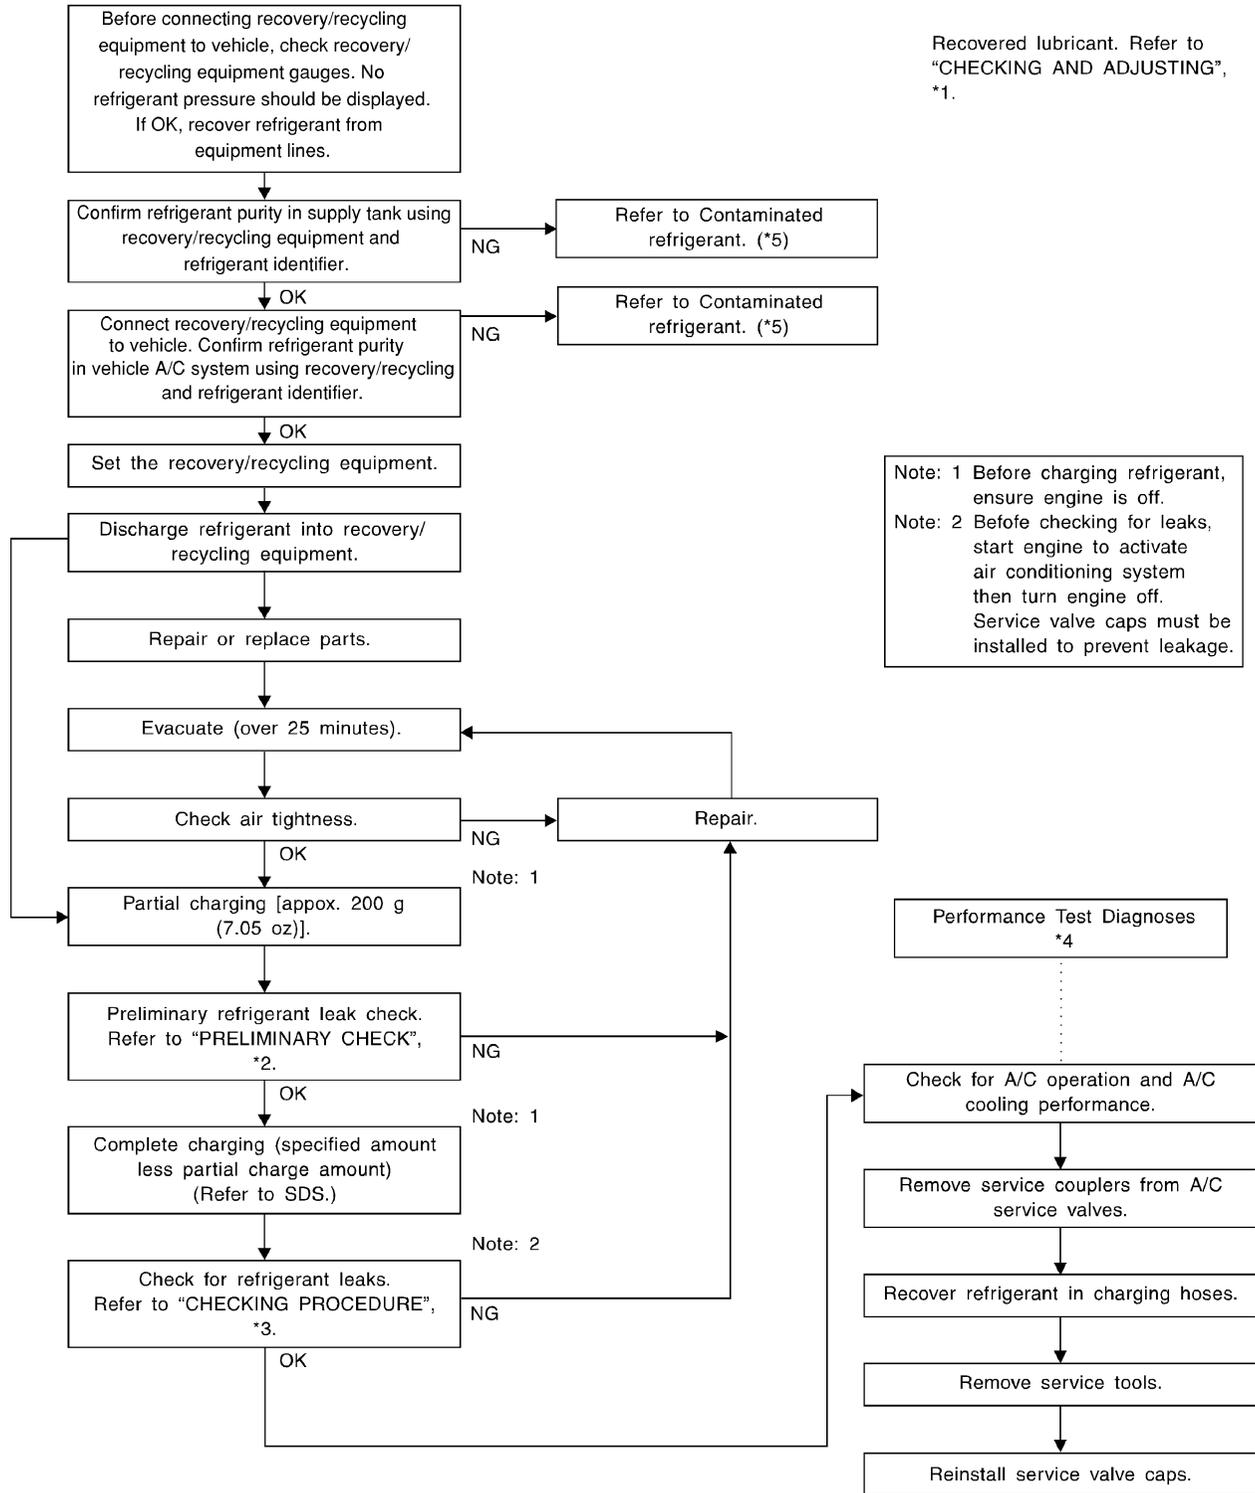

*1 [ATC-22, "CHECKING AND ADJUSTING"](#) .

*2 [ATC-178, "Checking for Refrigerant Leaks"](#).

*3 [ATC-178, "Checking for Refrigerant Leaks"](#).

*4 [ATC-111, "PERFORMANCE TEST DIAGNOSES"](#).

*5 [ATC-5, "Contaminated Refrigerant"](#).

WJIA0530E



REFRIGERANT LINES

Components

EJS002D1

Front A/C Compressor and Condenser

SEC. 214 • 271 • 274 • 276

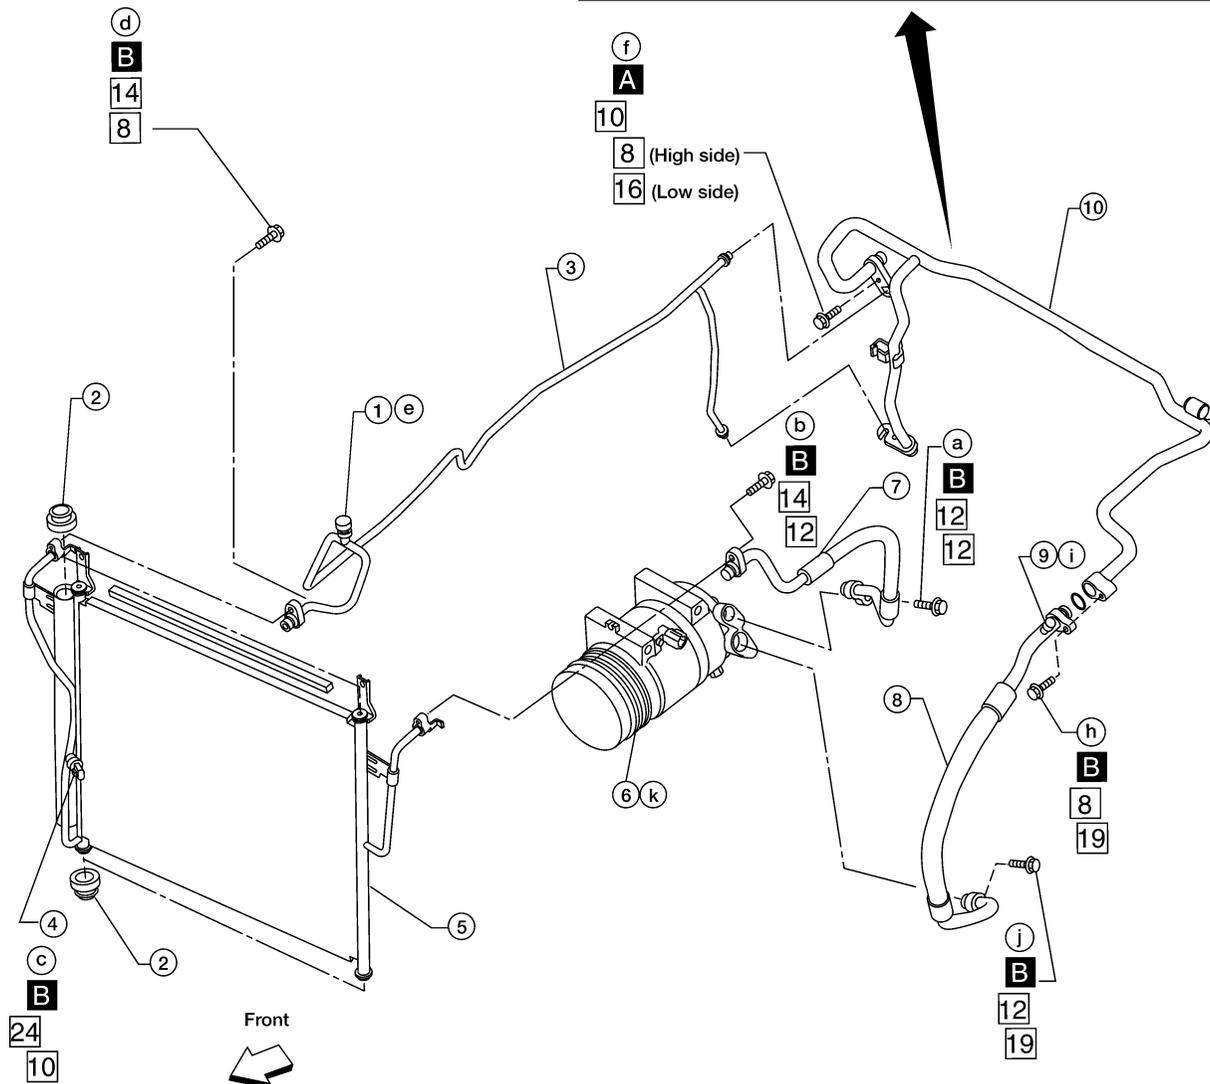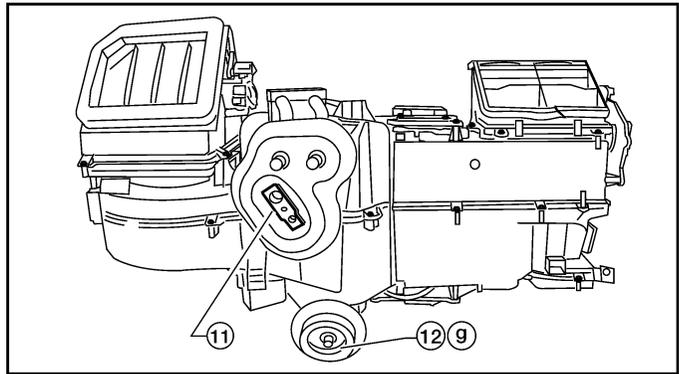

- : Refrigerant leak checking order (a-k)
- : Tightening torque
- □ : Wrench size
- : O-ring size
- ⊗ : N·m (kg-m, in-lb)
- A ⊗ : 3.4 (0.35, 30)
- B ⊗ : 9.3 (0.95, 82)


WJIA1578E

REFRIGERANT LINES

- | | | |
|--------------------------------|-------------------------------|-------------------------------|
| 1. High-pressure service valve | 2. Grommet | 3. High-pressure pipe |
| 4. Refrigerant pressure sensor | 5. Condenser | 6. Compressor shaft seal |
| 7. High-pressure flexible hose | 8. Low-pressure flexible hose | 9. Low-pressure service valve |
| 10. Low-pressure pipe | 11. Expansion valve (front) | 12. Drain hose |

Rear A/C

SEC. 214 • 271 • 274 • 276

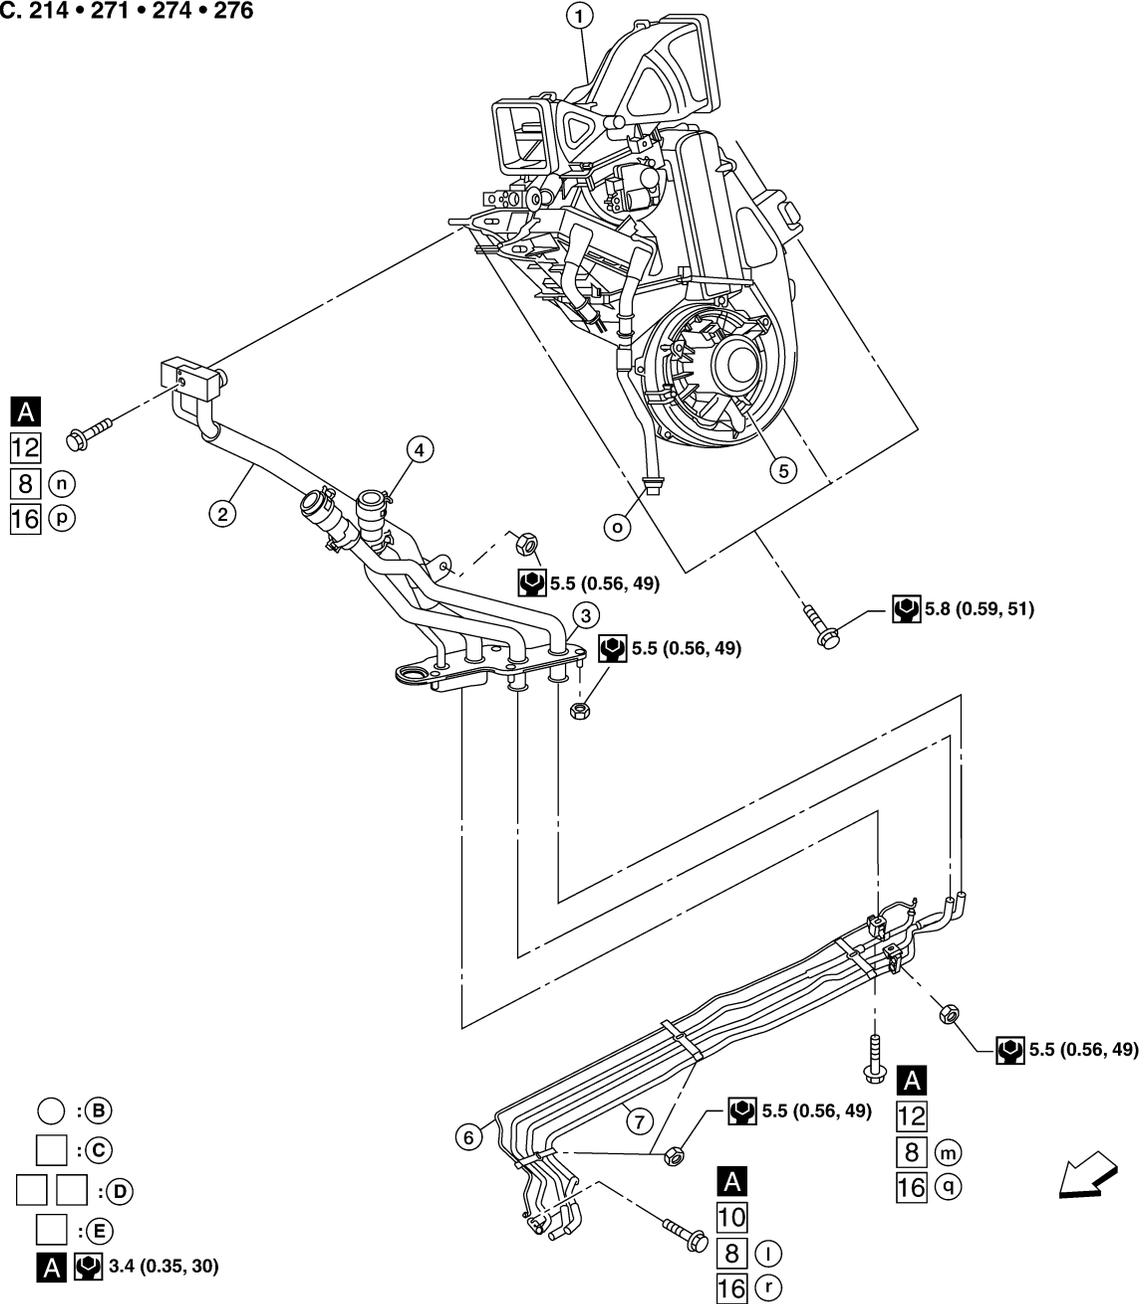

- | | | |
|--|-------------------------------|--------------------------------|
| 1. Rear heater and cooling unit assembly | 2. Rear A/C pipes | 3. Rear A/C heater core pipes |
| 4. Rear heater core hose | 5. Rear blower motor | 6. Underfloor rear A/C pipes |
| 7. Underfloor rear heater core pipes | A. Bolt torque specifications | B. Leak checking order (l - r) |
| C. Tightening torque | D. Wrench size | E. O-ring size |
- ⇐ Front

NOTE: The O-ring size 8 is the high-side and the O-ring size 16 is the low-side.


NOTE:
Refer to [ATC-7, "Precautions for Refrigerant Connection"](#) .

REFRIGERANT LINES

Removal and Installation for Compressor

EJS002DJ

A/C Compressor Mounting

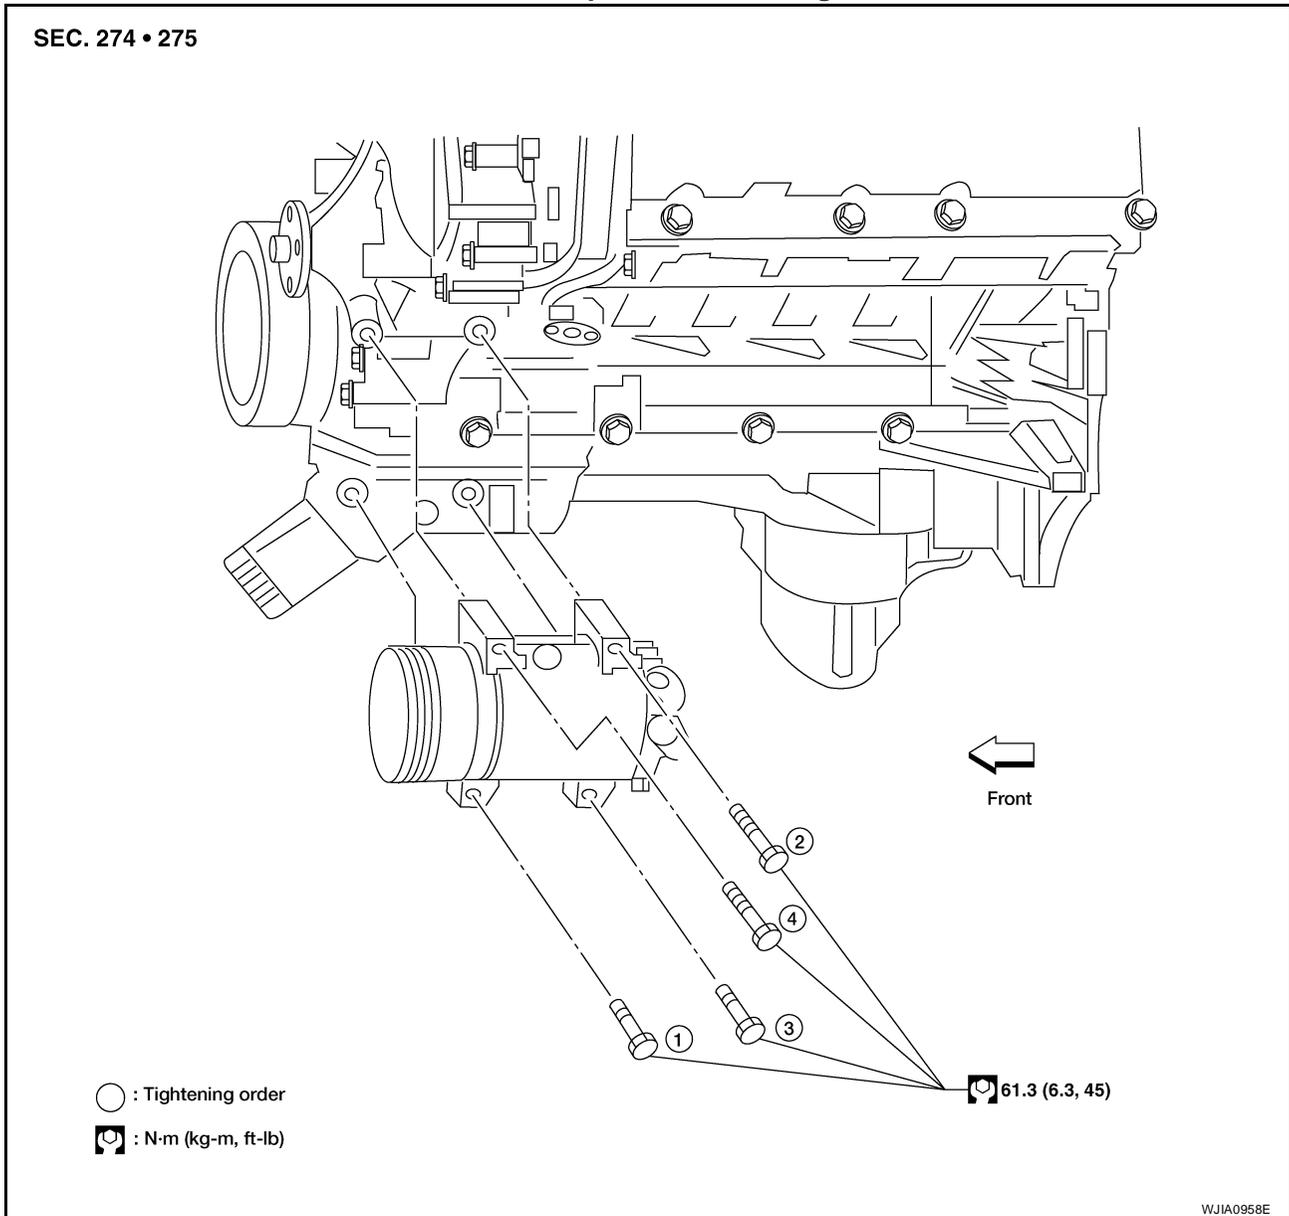

REMOVAL

1. Discharge the refrigerant. Refer to [ATC-162, "HFC-134a \(R-134a\) Service Procedure"](#) .
2. Remove the front right wheel and tire assembly. Refer to [WT-6, "Rotation"](#) .
3. Remove the engine under cover and the splash shield using power tool.
4. Remove the engine air cleaner and air ducts. Refer to [EM-14, "REMOVAL"](#) .
5. Remove the drive belt. Refer to [EM-12, "Removal"](#) .
6. Disconnect the compressor electrical connector.
7. Disconnect the high-pressure flexible hose and low-pressure flexible hose from the compressor.

CAUTION:

Cap or wrap the joint of the hose with suitable material such as vinyl tape to avoid the entry of contaminants.

8. Remove the compressor bolts and nut using power tools.

REFRIGERANT LINES

INSTALLATION

Installation is in the reverse order of removal.


CAUTION:

- Replace the O-ring of the low-pressure flexible hose and high-pressure flexible hose with a new one, apply compressor oil to the O-rings before installation.
- After recharging the A/C system with refrigerant, check for leaks.

Removal and Installation for Compressor Clutch

EJS002DK

Magnet Clutch Assembly

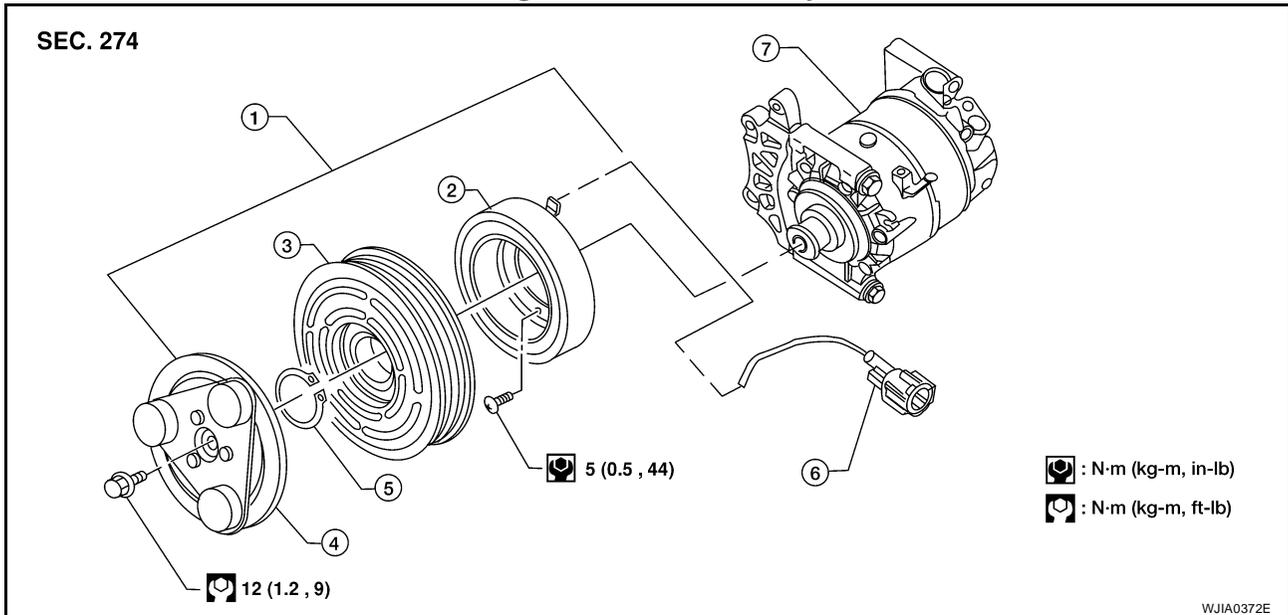

- | | | |
|---------------------------|----------------|---------------------------------|
| 1. Magnet clutch assembly | 2. Magnet coil | 3. Pulley |
| 4. Clutch disc | 5. Snap ring | 6. Thermal protector (built in) |
| 7. Compressor | | |

REMOVAL


1. Remove the compressor. Refer to [ATC-166, "Removal and Installation for Compressor"](#).
2. Remove the center bolt while holding the clutch disc stationary using Tool as shown.

Tool number : J-44614

3. Remove the clutch disc.



4. Remove the snap ring using external snap ring pliers or suitable tool.

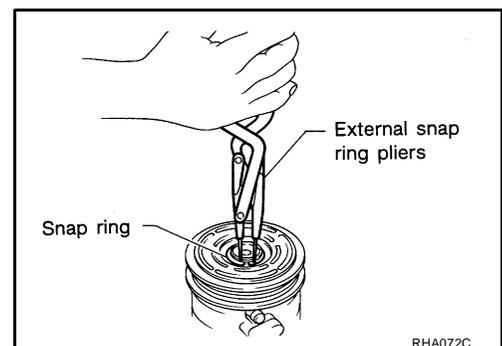

A
B
C
D
E
F
G
H
I

ATC


K
L
M

REFRIGERANT LINES


5. Remove the pulley using Tool with a small adapter. Position the small adapter on the end of the drive shaft and the center of the puller on the small adapter.

CAUTION:

To prevent deformation of the pulley groove, the puller claws should be hooked under the pulley groove and not into the pulley groove.

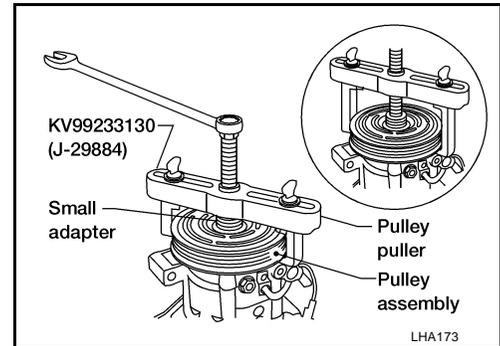


6. Remove the magnet coil harness clip using a screwdriver, remove the three magnet coil fixing screws and remove the magnet coil.

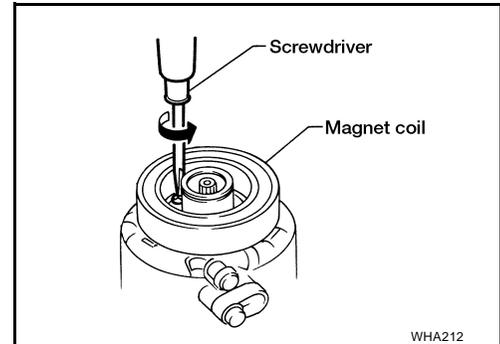

INSPECTION

Clutch Disc

If the contact surface shows signs of damage due to excessive heat, replace clutch disc and pulley.

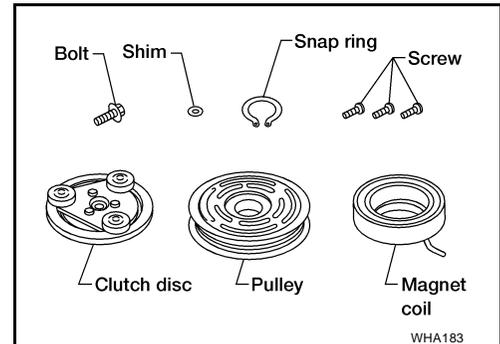

Pulley

Check the appearance of the pulley assembly. If contact surface of pulley shows signs of excessive grooving, replace clutch disc and pulley. The contact surfaces of the pulley assembly should be cleaned with a suitable solvent before reinstallation.

Coil


Check magnet coil for loose connections or any cracked insulation.

INSTALLATION

1. Install the magnet coil.

CAUTION:


Be sure to align the magnet coil pin with the hole in the compressor front head.

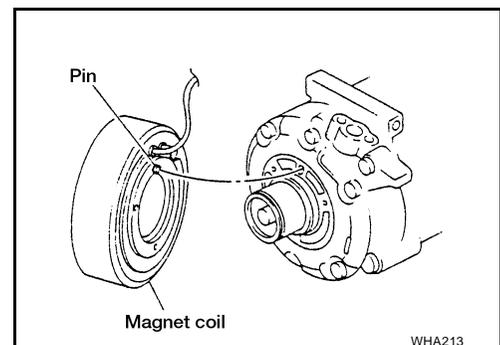


REFRIGERANT LINES

2. Install the magnet coil harness clip using a screwdriver.
3. Install the pulley assembly using Tool and a wrench, then install the snap ring using snap ring pliers.

Tool number : — (J-38873-A)

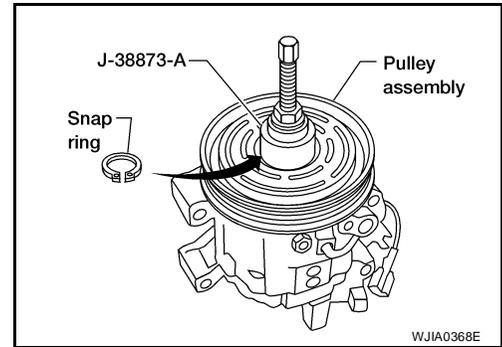

4. Install the clutch disc on the compressor shaft, together with the original shim(s). Press the clutch disc down by hand.

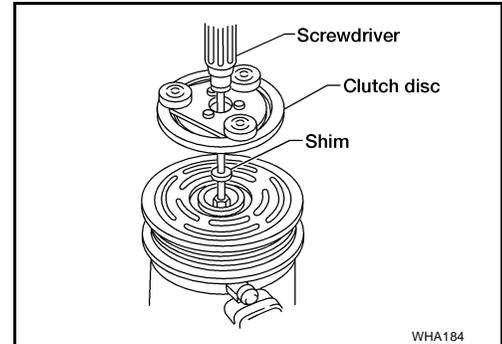


5. Install the clutch pulley bolt using Tool, to prevent the clutch disc from turning and tighten the bolt to specification. Refer to [ATC-164, "Components"](#).

Tool number : J-44614

CAUTION:


After tightening the clutch pulley bolt, check that the clutch pulley rotates smoothly.

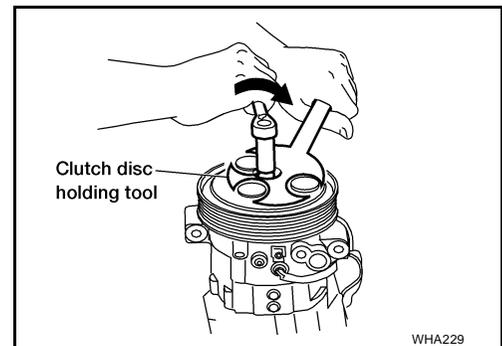

6. Check the pulley clearance all the way around the clutch disc as shown.

Clutch disc-to-pulley clearance : 0.3 - 0.6 mm (0.012 - 0.024 in)

7. If the specified clearance is not obtained, replace the adjusting spacer to readjust.
8. Connect the compressor electrical connector.
9. Install the drive belt. Refer to [EM-13, "Installation"](#).
10. Install the engine under cover and the splash shield.

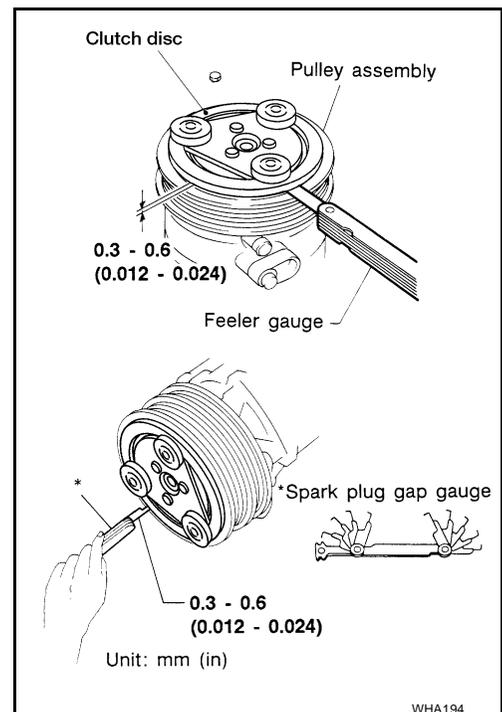

REFRIGERANT LINES

BREAK-IN OPERATION

When replacing compressor clutch assembly, always conduct the break-in operation. This is done by engaging and disengaging the clutch about 30 times. Break-in operation raises the level of transmitted torque.

Removal and Installation for Low-pressure Flexible Hose

EJS002DL

REMOVAL

1. Remove the engine room cover using power tools.
2. Remove the engine air cleaner and air ducts. Refer to [EM-14, "REMOVAL"](#) .
3. Remove the cowl top extension. Refer to [EI-18, "COWL TOP"](#) .
4. Discharge the refrigerant. Refer to [ATC-162, "HFC-134a \(R-134a\) Service Procedure"](#) .

CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of contaminants.

5. Remove the low-pressure flexible hose. Refer to [ATC-164, "Components"](#) .

INSTALLATION

Installation is in the reverse order of removal.

Refer to [ATC-164, "Components"](#) .

CAUTION:

- Replace the O-ring of the low-pressure flexible hose with a new one, then apply compressor oil to it when installing it.
- After charging refrigerant, check for leaks.

Removal and Installation for High-pressure Flexible Hose

EJS002DM

REMOVAL

1. Remove the engine under cover.
2. Remove the engine air cleaner and air ducts. Refer to [EM-14, "REMOVAL"](#) .
3. Discharge the refrigerant. Refer to [ATC-162, "HFC-134a \(R-134a\) Service Procedure"](#) .
4. Remove the high-pressure flexible hose. Refer to [ATC-164, "Components"](#) .

CAUTION:

Cap or wrap the joint of the hose with suitable material such as vinyl tape to avoid the entry of contaminants.

INSTALLATION

Installation is in the reverse order of removal.

Refer to [ATC-164, "Components"](#) .

CAUTION:

- Replace the O-ring of the high-pressure flexible hose with a new one, then apply compressor oil to it when installing it.
- After charging refrigerant, check for leaks.

Removal and Installation for High-pressure Pipe

EJS002DN

REMOVAL

1. Remove the cowl top extension. Refer to [EI-18, "COWL TOP"](#) .
2. Disconnect the battery negative cable.
3. Reposition the IPDM E/R aside.
4. Remove the front right wheel and tire assembly. Refer to [WT-6, "Rotation"](#) .
5. Position aside the front floor insulator.
6. Discharge the refrigerant. Refer to [ATC-162, "HFC-134a \(R-134a\) Service Procedure"](#) .
7. Remove the low pressure pipe. Refer to [ATC-171, "Removal and Installation for Low-pressure Pipe"](#) .
8. Remove the high-pressure pipe. Refer to [ATC-164, "Components"](#) .

CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of contaminants.

REFRIGERANT LINES

INSTALLATION

Installation is in the reverse order of removal.
Refer to [ATC-164, "Components"](#) .

CAUTION:

- Replace the O-ring of the high-pressure pipe with a new one, then apply compressor oil to it when installing it.
- After charging refrigerant, check for leaks.

Removal and Installation for Low-pressure Pipe

EJS002DO

REMOVAL

1. Discharge the refrigerant. Refer to [ATC-162, "HFC-134a \(R-134a\) Service Procedure"](#) .
2. Remove the cowl top and the cowl top extension. Refer to [EI-18, "COWL TOP"](#) .
3. Remove the low-pressure pipe. Refer to [ATC-164, "Components"](#) .

CAUTION:

Cap or wrap the joint of the pipes with suitable material such as vinyl tape to avoid the entry of contaminants.

INSTALLATION

Installation is in the reverse order of removal.
Refer to [ATC-164, "Components"](#) .

CAUTION:

- Replace the O-ring of the high/low-pressure pipe with a new one, then apply compressor oil to it when installing it.
- After charging refrigerant, check for leaks.

Removal and Installation for Rear High- and Low-pressure A/C and Heater Core Pipes

EJS0060M

REMOVAL

1. Discharge the refrigerant. Refer to [ATC-162, "HFC-134a \(R-134a\) Service Procedure"](#) .
2. Drain the coolant from the engine cooling system. Refer to [CO-8, "Changing Engine Coolant"](#) .
3. Disconnect the underfloor rear heater hoses (1 and 2) from the rear heater pipes underneath the vehicle.


- ←: Front

4. Remove the rear high- and low-pressure pipes bolt (A) to disconnect the rear high- and low-pressure pipes from the underfloor rear high- and low-pressure pipes underneath the vehicle.

CAUTION:

Cap or wrap the joint of the pipes with suitable material such as vinyl tape to avoid the entry of air.

5. Remove the rear high- and low-pressure pipes nuts (B) underneath the vehicle.

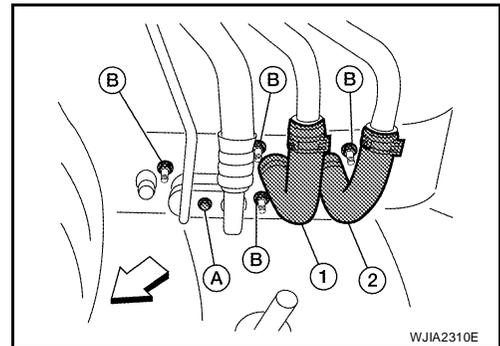


WJIA2310E

NOTE:

The remaining steps are performed inside the rear luggage area of the vehicle.

6. Remove the luggage side finisher lower RH. Refer to [EI-39, "LUGGAGE FLOOR TRIM"](#) .
7. Disconnect the rear heater core hoses (1 and 2) from the rear heater core (3).


- ←: Front

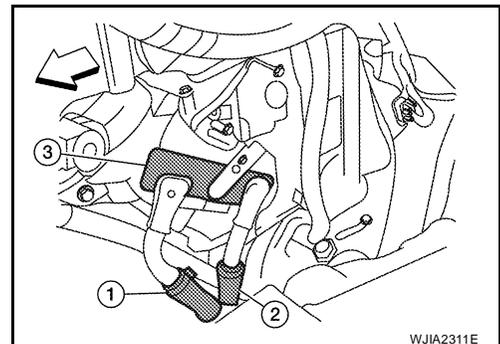

WJIA2311E

REFRIGERANT LINES


8. Remove the rear high- and low-pressure pipes bracket bolt (A) to release the bracket.
- Rear blower motor (1)
 - ⇐: Front

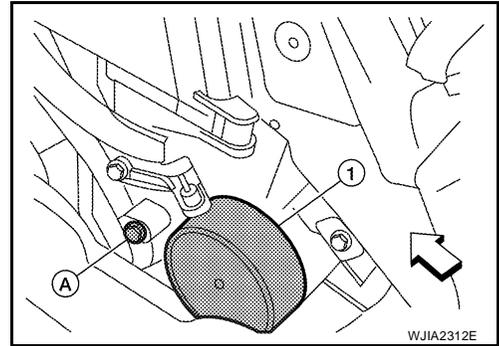


9. Remove the rear high- and low-pressure pipes bolt (A) to disconnect the rear high- and low-pressure pipes from the rear expansion valve (1).
- ⇐: Front

CAUTION:

Cap or wrap the joint of the pipes with suitable material such as vinyl tape to avoid the entry of air.

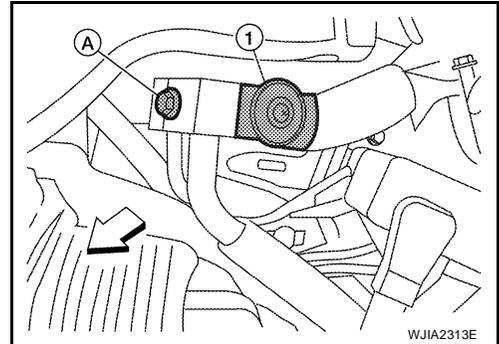

10. Disconnect the following electrical connectors:
- Rear air mix door motor (1)
 - Rear blower motor resistor (2)
 - Rear blower motor (3)
 - ⇐: Front

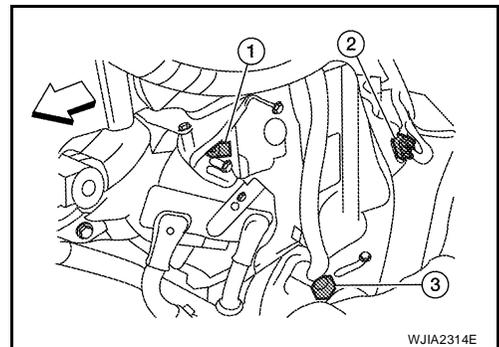

11. Disconnect the ducts from the rear heater and cooling unit assembly. Refer to [ATC-157, "Components"](#) .
12. Remove the rear heater and cooling unit assembly.
- CAUTION:**
Cap or wrap the joint of the pipes with suitable material such as vinyl tape to avoid the entry of air.
13. Remove the rear high- and low-pressure A/C pipes.

INSTALLATION

Installation is in the reverse order of removal.
Refer to [ATC-164, "Components"](#) .

CAUTION:

- Replace the O-ring of the high/low-pressure pipe with a new one, then apply compressor oil to it when installing it.
- After charging refrigerant, check for leaks.

Removal and Installation for Underfloor Rear High- and Low-pressure A/C and Heater Core Pipes

EJS0060N

REMOVAL

1. Drain the coolant from the engine cooling system. Refer to [CO-8, "Changing Engine Coolant"](#) .
2. Disconnect the battery negative terminal.
3. Disconnect the generator harness.
4. Discharge the refrigerant. Refer to [ATC-162, "HFC-134a \(R-134a\) Service Procedure"](#) .

REFRIGERANT LINES

5. Remove the front and rear bumper fascia. Refer to [EI-13, "FRONT BUMPER"](#) (front), [EI-15, "REAR BUMPER"](#) (rear).
6. Reposition the front fender protector out of the way. Refer to [EI-23, "FENDER PROTECTOR"](#).
7. Disconnect the chassis harness connector.
8. Remove the spare wheel and tire.
9. Remove the tailpipe and tailpipe hanger bracket. Refer to [EX-3, "Removal and Installation"](#).
10. Remove the seatbelt latch anchor. Refer to [RSU-25, "Components"](#).
11. Remove the front floor heat shield.
12. Disconnect each end of the underfloor rear high- and low-pressure A/C and heater core pipes. Refer to [ATC-164, "Components"](#).
CAUTION:
Cap or wrap the joint of the pipes with suitable material such as vinyl tape to avoid the entry of air.
13. Set two suitable jacks at the RH body mount points to support the vehicle body when it is separated from the RH side of the frame.
14. Remove the RH body mount bolts. Refer to [BL-159, "Body Mounting"](#).
15. Use the vehicle hoist to lower the RH side of the frame from the RH side of the body [approximately 305 mm (12 in)] until there is sufficient clearance to remove the underfloor rear high- and low-pressure A/C and heater core pipes from between the body and the frame.
16. Remove the underfloor rear high- and low-pressure A/C and heater core pipes from the back of the vehicle.

INSTALLATION

Installation is in the reverse order of removal.
Refer to [ATC-164, "Components"](#).

CAUTION:

- Replace the O-ring of the high/low-pressure pipe with a new one, then apply compressor oil to it when installing it.
- After charging refrigerant, check for leaks.

Removal and Installation for Refrigerant Pressure Sensor

EJS002DP


ATC

REMOVAL

1. Discharge the refrigerant. Refer to [ATC-162, "HFC-134a \(R-134a\) Service Procedure"](#).
2. Disconnect the refrigerant pressure sensor electrical connector and remove the refrigerant pressure sensor from the condenser.

CAUTION:

Be careful not to damage the condenser fins.

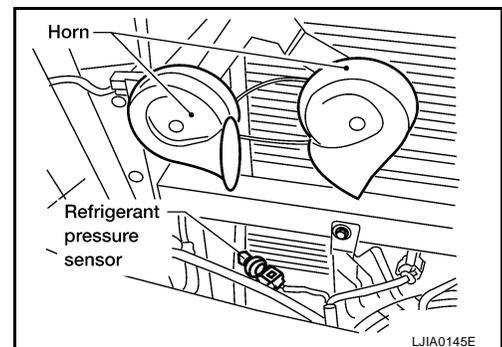

INSTALLATION

Installation is in the reverse order of removal.
Refer to [ATC-164, "Components"](#).

CAUTION:

- Be careful not to damage the condenser fins.
- Replace the O-ring of the refrigerant pressure sensor with a new one, then apply compressor oil to it when installing it.
- After charging refrigerant, check for leaks.

Removal and Installation for Condenser

EJS002DQ

REMOVAL

1. Discharge the refrigerant. Refer to [ATC-162, "HFC-134a \(R-134a\) Service Procedure"](#).

REFRIGERANT LINES

2. Remove the radiator. Refer to [CO-10, "Removal and Installation"](#) .

CAUTION:


Be careful not to damage the core surface of the condenser and the radiator.

3. Disconnect the high-pressure flexible hose and the high-pressure pipe from the condenser.

CAUTION:

Cap or wrap the joint of the hose and pipe with suitable material such as vinyl tape to avoid the entry of contaminants.

4. Disconnect the refrigerant pressure sensor connector.
 - Remove the refrigerant pressure sensor from the condenser as necessary.
5. Lift the condenser out of the mounting grommets to remove the condenser.

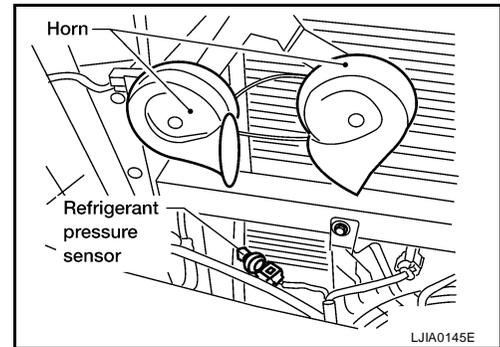

INSTALLATION

Installation is in the reverse order of removal.

Refer to [ATC-164, "Components"](#) .

CAUTION:

- Replace the O-rings of the high-pressure pipe, refrigerant pressure sensor, and the high-pressure flexible hose with new ones, then apply compressor oil to them after installing them.
- After charging refrigerant, check for leaks.
- Replace the grommets as necessary.


REFRIGERANT LINES

Removal and Installation for Front Evaporator

EJS002DR

Front Heater and Cooling Unit Assembly

SEC. 271

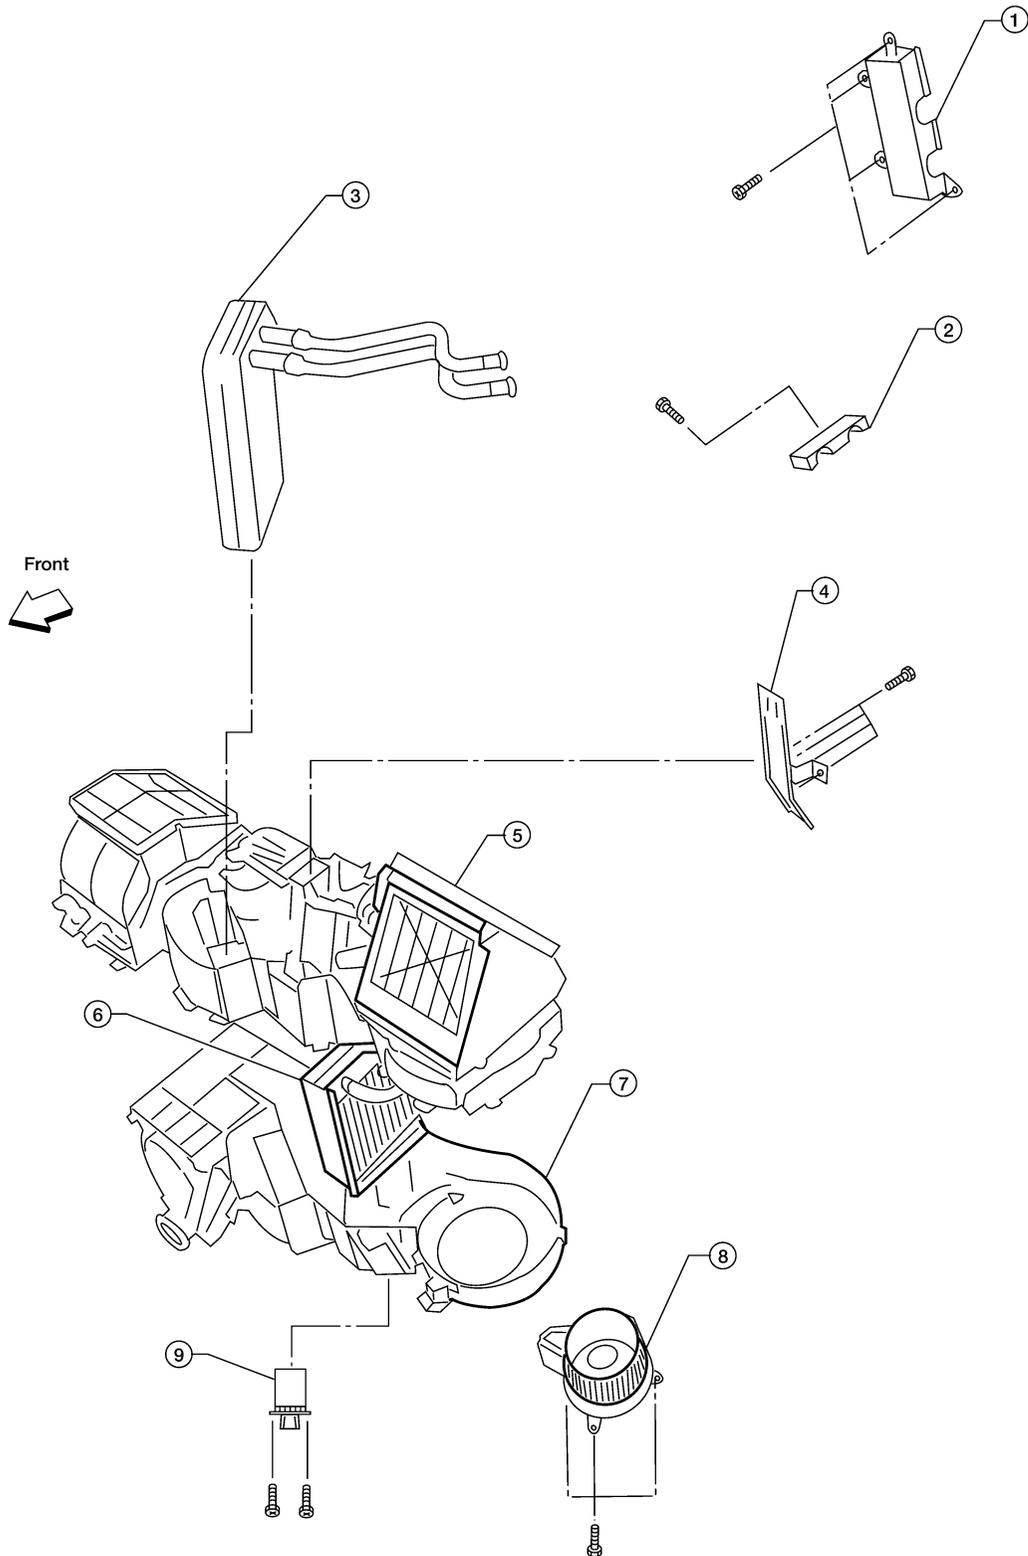

- | | | |
|---------------------------------------|---------------------------------------|----------------------------|
| 1. Heater core cover | 2. Heater core pipe bracket | 3. Heater core |
| 4. Upper bracket | 5. Upper heater and cooling unit case | 6. A/C evaporator |
| 7. Lower heater and cooling unit case | 8. Blower motor | 9. Variable blower control |

LJIA0138E

REMOVAL

1. Remove the front heater core. Refer to [ATC-148, "FRONT HEATER CORE"](#) .

A
B
C
D
E
F
G
H
I
ATC
K
L
M

REFRIGERANT LINES

2. Remove the defroster mode door arm.
3. Separate the heater core and cooling unit case.
4. Remove the evaporator.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:


Replace the O-rings on the low-pressure flexible hose and the high-pressure pipe with new ones. Apply compressor oil to the O-rings before installing them.

Removal and Installation for Rear Evaporator

EJS002DS

Rear Heater and Cooling Unit Assembly

SEC. 274

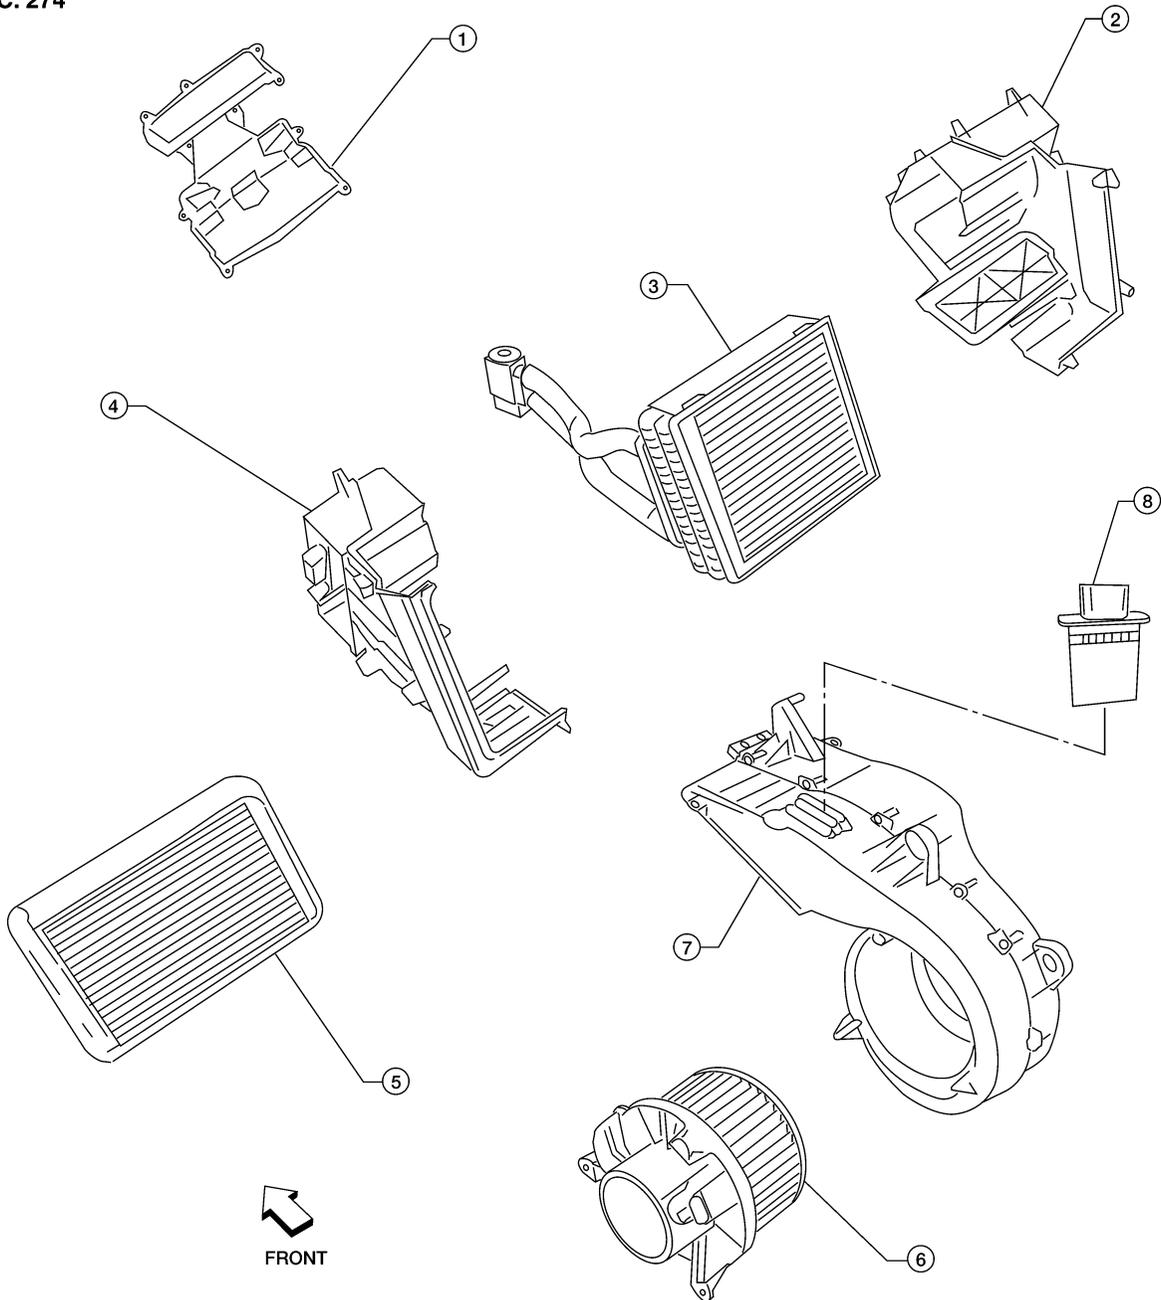

1. Front cover
4. Side cover
7. Blower motor case

2. Evaporator and heater core case
5. Heater core
8. Rear blower motor resistor


3. Evaporator
6. Rear blower motor

LJJA0135E

REFRIGERANT LINES

REMOVAL

1. Remove the rear heater and cooling unit assembly from the vehicle. Refer to [ATC-146, "REAR HEATER AND COOLING UNIT ASSEMBLY"](#) .
2. Remove the rear blower motor.
3. Remove the rear blower speed resistor.
4. Remove the rear air mix door motor.
5. Remove the rear duct and blend door assembly. Refer to [ATC-160, "DEFROSTER NOZZLE"](#) .
6. Disassemble the rear heater and cooling unit assembly to remove the evaporator.

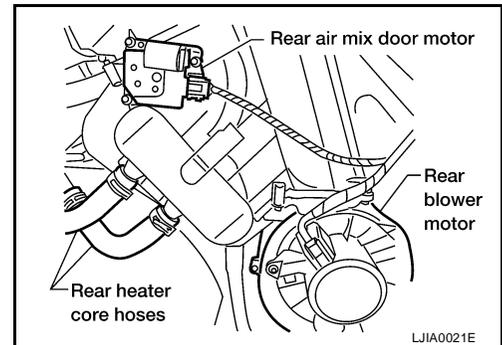

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:


- Replace the O-rings on the rear A/C pipes with new ones. Apply compressor oil to the O-rings before installing them.
- After charging refrigerant, check for leaks.

Removal and Installation for Front Expansion Valve

EJS002DT

REMOVAL

1. Discharge the refrigerant. Refer to [ATC-162, "HFC-134a \(R-134a\) Service Procedure"](#) .
2. Remove the front heater and cooling unit assembly. Refer to [ATC-145, "FRONT HEATER AND COOLING UNIT ASSEMBLY"](#) .
3. Remove the cooler grommet.
4. Remove the expansion valve.

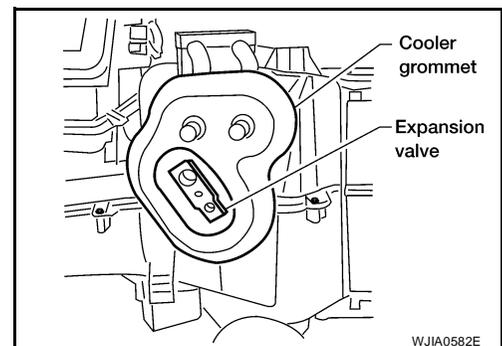

INSTALLATION

Installation is in the reverse order of removal.

- | | |
|--|--|
| Expansion valve bolts | : 4 N·m (0.41 kg-m, 35 in-lb) |
| A/C refrigerant pipe to expansion valve bolt | : Refer to ATC-164, "Components" . |

CAUTION:

- Replace the O-rings on the A/C refrigerant pipes with new ones, then apply compressor oil to them when installing them.
- After charging refrigerant, check for leaks.

Removal and Installation for Rear Expansion Valve

EJS002DU

REMOVAL

1. Discharge the refrigerant. Refer to [ATC-162, "HFC-134a \(R-134a\) Service Procedure"](#) .
2. Remove the rear RH interior side trim panel. Refer to [EI-34, "Removal and Installation"](#) .
3. Disconnect the A/C refrigerant pipes from the expansion valve.

REFRIGERANT LINES

CAUTION:

Cap or wrap the A/C refrigerant pipe ends with a suitable material such as vinyl tape to avoid the entry of contaminants.

4. Remove the expansion valve.

INSTALLATION

Installation is in the reverse order of removal.

Expansion valve bolts	: 4 N·m (0.41 kg-m, 35 in-lb)
A/C refrigerant pipe to expansion valve bolt	: Refer to ATC-164, "Components" .

CAUTION:

- Replace the O-rings on the A/C refrigerant pipes with new ones, then apply compressor oil to them when installing them.
- After charging refrigerant, check for leaks.

Checking for Refrigerant Leaks

EJS002DV

Perform a visual inspection of all refrigeration parts, fittings, hoses and components for signs of A/C lubricant leakage, damage, and corrosion. Any A/C lubricant leakage may indicate an area of refrigerant leakage. Allow extra inspection time in these areas when using either an electronic refrigerant leak detector (J-41995) or fluorescent dye leak detector (J-42220).

If any dye is observed using a fluorescent dye leak detector (J-42220), confirm the leak using a electronic refrigerant leak detector (J-41995). It is possible that the dye is from a prior leak that was repaired and not properly cleaned.

When searching for leaks, do not stop when one leak is found but continue to check for additional leaks at all system components and connections.

When searching for refrigerant leaks using an electronic refrigerant leak detector (J-41995), move the probe along the suspected leak area at 25 - 50 mm (1 - 2 in) per second and no further than 6 mm (1/4 in) from the component.

CAUTION:

Moving the electronic refrigerant leak detector probe slower and closer to the suspected leak area will improve the chances of finding a leak.

Checking System for Leaks Using the Fluorescent Dye Leak Detector

EJS002DW

1. Check the A/C system for leaks using the fluorescent dye leak detector and safety goggles (J-42220) in a low sunlight area (area without windows preferable). Illuminate all components, fittings and lines. The dye will appear as a bright green/yellow area at the point of leakage. Fluorescent dye observed at the evaporator drain opening indicates an evaporator core assembly leak (tubes, core or expansion valve).
2. If the suspected area is difficult to see, use an adjustable mirror or wipe the area with a clean shop rag or cloth, then inspect the shop rag or cloth with the fluorescent dye leak detector (J-42220) for dye residue.
3. After the leak is repaired, remove any residual dye using refrigerant dye cleaner (J-43872) to prevent future misdiagnosis.
4. Perform a system performance check and then verify the leak repair using a electronic refrigerant leak detector (J-41995).

NOTE:

- Other gases in the work area or substances on the A/C components, for example, anti-freeze, windshield washer fluid, solvents and lubricants, may falsely trigger the leak detector. Make sure the surfaces to be checked are clean.
- Clean with a dry cloth or blow off with shop air.
- Do not allow the sensor tip of the electronic refrigerant leak detector (J-41995) to contact with any substance. This can also cause false readings and may damage the detector.

Dye Injection

EJS002DX

NOTE:

This procedure is only necessary when recharging the system or when the compressor has seized and must be replaced.

1. Check the A/C system static (at rest) pressure. Pressure must be at least 345 kPa (3.52 kg/cm² , 50 psi).

REFRIGERANT LINES

2. Pour one bottle 7.4 cc (1/4 ounce) of the HFC-134a (R-134a) fluorescent leak detection dye (J-41447) into the HFC-134a (R-134a) dye injector (J-41459).

CAUTION:

If repairing the A/C system or replacing a component, pour the HFC-134a (R-134a) fluorescent leak detection dye (J-41447) directly into the open system connection and proceed with the service procedures.

3. Connect the refrigerant dye injector (J-41459) to the low-pressure service valve.
4. Start the engine and switch the A/C system ON.
5. When the A/C system is operating (compressor running), inject one bottle 7.4 cc (1/4 ounce) of HFC-134a (R-134a) fluorescent leak detection dye (J-41447) through the low-pressure service valve using HFC-134a (R-134a) dye injector (J-41459). Refer to the manufacturer's operating instructions.
6. With the engine still running, disconnect the HFC-134a (R-134a) dye injector (J-41459) from the low-pressure service valve.
7. Operate the A/C system for a minimum of 20 minutes to mix the HFC-134a (R-134a) fluorescent leak detection dye (J-41447) with the A/C system oil. Depending on the leak size, operating conditions and location of the leak, it may take from minutes to days for the HFC-134a (R-134a) fluorescent leak detection dye to penetrate an A/C system leak and become visible.


Electronic Refrigerant Leak Detector PRECAUTIONS FOR HANDLING LEAK DETECTOR

EJS002DY


NOTE:

When performing a refrigerant leak check, use a electronic refrigerant leak detector (J-41995) or equivalent. Ensure that the electronic refrigerant leak detector (J-41995) is calibrated and set properly according to the manufacturer's operating instructions.

The electronic refrigerant leak detector (J-41995) is a delicate device. To use the leak detector properly, read the manufacturer's operating instructions and perform any specified maintenance.

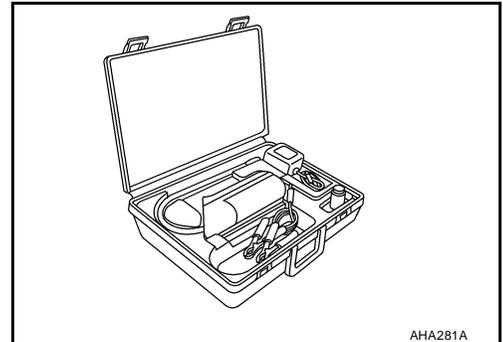

1. Position the probe approximately 5 mm (3/16 in) away from the point to be checked as shown.

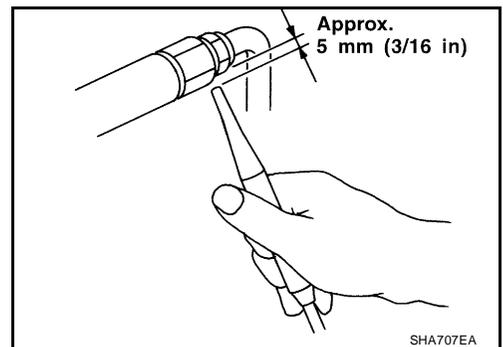


A
B
C
D
E
F
G
H
I
K
L
M


ATC

REFRIGERANT LINES

- When checking for leaks, circle each fitting completely with the probe as shown.

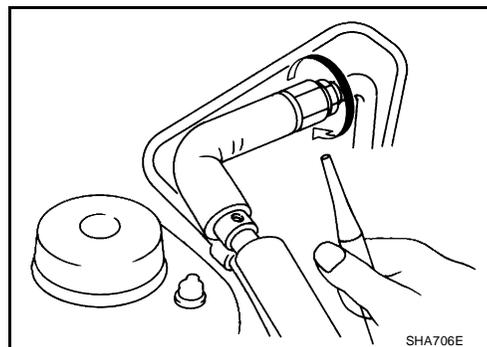

- Move the probe along each component at a speed of approximately 25 - 50 mm (1 - 2 in)/second as shown.

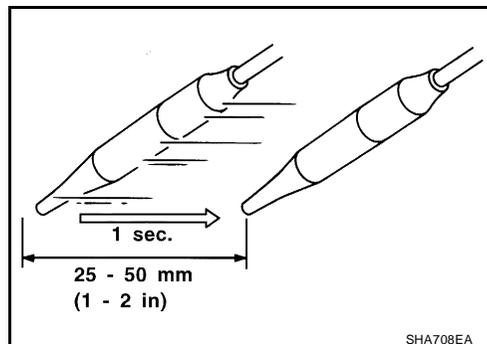

CHECKING PROCEDURE

NOTE:

To prevent inaccurate or false readings, make sure there is no refrigerant vapor, shop chemicals, or cigarette smoke in the vicinity of the vehicle. Perform the leak test in a calm area (low air/wind movement) so that the leaking refrigerant is not dispersed.

- Turn the engine OFF.
- Connect the manifold gauge set (J-39183-C) to the A/C service ports. Refer to [ATC-162, "SETTING OF SERVICE TOOLS AND EQUIPMENT"](#) .
- Check if the A/C refrigerant pressure is at least 345 kPa (3.52 kg/cm² , 50 psi) above a temperature of 16°C (61°F). If less than specification, recover/evacuate and recharge the system with the specified amount of refrigerant. Refer to [ATC-162, "HFC-134a \(R-134a\) Service Procedure"](#) .

NOTE:

At temperatures below 16°C (61°F), leaks may not be detected since the system may not reach 345 kPa (3.52 kg/cm² , 50 psi) pressure.

- Perform the leak test from the high-pressure side (front A/C compressor discharge "a" to evaporator inlet "f", or rear piping connection "l") to the low-pressure side (front A/C evaporator drain hose "g" to shaft seal "k", and rear A/C evaporator drain hose "o" to piping connection "r"). Refer to [ATC-164, "Components"](#) . Clean the component to be checked and carefully move the electronic refrigerant leak detector probe completely around the following connections and components.

- Compressor
- Check the high and low-pressure pipe and hose fittings, relief valve, and compressor shaft seal
- Check the liquid tank
- Check the refrigerant pressure sensor
- Check all around the service valves. Check that the service valve caps are tightly screwed on to the service valves (to prevent leaks).

NOTE:

After removing manifold gauge set (J-39183-C) from the service valves, wipe any residue from the service valves to prevent any false readings by the electronic refrigerant leak detector (J-41995).

- Evaporator
With engine OFF, turn blower fan on "High" for at least 15 seconds to dissipate any refrigerant trace in the heater and cooling unit assembly. Wait a minimum of 10 minutes accumulation time (refer to the manufacturer's recommended procedure for actual wait time) before inserting the electronic refrigerant leak detector probe into the heater and cooling unit assembly drain hose.

REFRIGERANT LINES

NOTE:

Keep the probe inserted for at least 10 seconds. Use caution not to contaminate the probe tip with water or dirt that may be in the drain hose.


5. If a leak is detected, verify at least once by blowing compressed air into the area of the suspected leak, then repeat the leak check.
6. Do not stop when one leak is found. Continue to check for additional leaks at all system components and connections.
7. If no leaks are found, perform steps 8 - 11.
8. Start the engine.
9. Set the heater A/C controls as follows:

NOTE:

For the automatic system, turn OFF the automatic controls and set the heater A/C controls manually.

- a. A/C switch to ON
 - b. Air flow to VENT mode
 - c. Intake position to RECIRCULATION mode
 - d. Temperature to MAX cold
 - e. Fan speed to HIGH
10. Run the engine at 1,500 rpm for at least 2 minutes.
 11. Turn the engine OFF and perform the leak check again following steps 4 through 6 above.

Refrigerant leaks should be checked immediately after turning the engine OFF. Begin with the leak detector at the compressor. The pressure on the high pressure side will gradually drop after the refrigerant circulation stops and pressure on the low pressure side will gradually rise, as shown in the graph. Some leaks are more easily detected when the pressure is high.

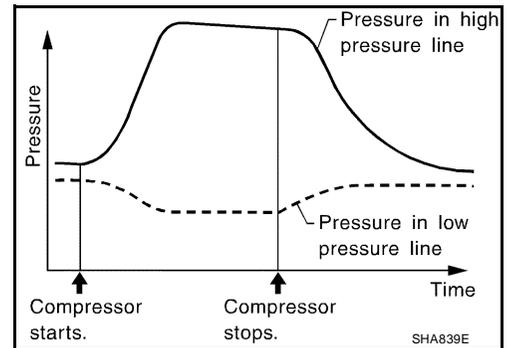

12. Before connecting the recovery/recycling equipment to the vehicle, check the recovery/recycling equipment gauges. No refrigerant pressure should be displayed. If pressure is displayed, recover the refrigerant from the equipment lines and then check the refrigerant purity.
13. Confirm refrigerant purity in supply tank using recovery/recycling equipment and refrigerant identifier equipment (J-41810-NI).
14. Confirm the refrigerant purity in the vehicle's A/C system using recovery/recycling equipment and refrigerant identifier equipment (J-41810-NI).
15. Discharge the A/C system using recovery/recycling equipment. Repair the leaking fitting or component as necessary.
16. Evacuate and recharge the A/C system and perform the leak test to confirm that there are no refrigerant leaks.
17. Conduct the Operational Check to ensure system works properly. Refer to [ATC-56, "Operational Check \(Front\)"](#) .

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

PFP:00030

Service Data and Specifications (SDS) COMPRESSOR

EJS002DZ

Make	ZEXEL VALEO CLIMATE CONTROL
Model	DKS-17D
Type	Swash plate
Displacement cm ³ (cu in) / revolution	175.5 (10.7) / revolution
Cylinder bore × stroke mm (in)	30.5 (1.20) x 24.0 (0.94)
Direction of rotation	Clockwise (viewed from drive end)
Drive belt	Poly V

LUBRICANT

Name	NISSAN A/C System Lubricant Type S (DH-PS)	
Part number	KLH00-PAGS0	
Capacity mℓ (US fl oz, Imp fl oz)	Total in system	290 (9.8, 10.2)
	Compressor (service part) charging amount	Refer to ATC-22, "Lubricant Adjustment Procedure for Compressor Replacement" .

REFRIGERANT

Type	HFC-134a (R-134a)
Capacity kg (lb)	1.08 ± 0.05 (2.38 ± 0.11)

ENGINE IDLING SPEED

Refer to [EC-32, "Idle Speed and Ignition Timing Check"](#) .

BELT TENSION

Refer to [MA-12, "DRIVE BELT TENSION"](#) .