# **California Proposition 65 Warning**

**WARNING:** This product contains or emits chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.

#### **Event Data Recorders**

# This vehicle is equipped with an event data recorder (EDR).

The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:

- · How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened:
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- · How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

The data belongs to the vehicle owner and may not be accessed by anyone else except as legally required or with the permission of the vehicle owner

### **Service Diagnostic Recorders**

This vehicle is equipped with service-related devices that record information about powertrain performance. The data can be used to verify emissions law requirements and/or help technicians diagnose and solve service problems. It may also be combined with data from other sources for research purposes, but it remains confidential.

#### **California Perchlorate Contamination Prevention Act**

The airbags, seat belt tensioners, and CR type batteries in this vehicle may contain perchlorate materials - special handling may apply. See <a href="https://www.dtsc.ca.gov/hazardouswaste/perchlorate/">www.dtsc.ca.gov/hazardouswaste/perchlorate/</a>

As you read this manual, you will find information that is preceded by a NOTICE symbol. This information is intended to help you avoid damage to your vehicle, other property, or the environment.

# A Few Words About Safety

Your safety, and the safety of others, is very important. And operating this vehicle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all the hazards associated with operating or maintaining your vehicle. You must use your own good judgement.

You will find this important safety information in a variety of forms, including:

- Safety Labels on the vehicle.
- Safety Messages preceded by a safety alert symbol and one of three signal words: DANGER, WARNING, or CAUTION.
  These signal words mean:

**ADANGER** 

You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.

**AWARNING** 

You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

**ACAUTION** 

You CAN be HURT if you don't follow instructions

- Safety Headings such as Important Safety Precautions.
- Safety Section such as Safe Driving.
- **Instructions** how to use this vehicle correctly and safely.

This entire book is filled with important safety information - please read it carefully.

This owner's manual should be considered a permanent part of the vehicle and should remain with the vehicle when it is sold.

This owner's manual covers all models of your vehicle. You may find descriptions of equipment and features that are not on your particular model.

Images throughout this owner's manual (including the front cover) represent features and equipment that are available on some, but not all, models. Your particular model may not have some of these features

This owner's manual is for vehicles sold in the United States and Canada.

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd. reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation.

## **> Safe Driving** P. 27

For Safe Driving P. 28 Seat Belts P. 32 Airbags P. 39

#### **→** Instrument Panel P. 69

Indicators P. 70 Gauges and Multi-Information Display P. 86

#### Controls P. 103

Setting the Clock P. 104 Locking and Unlocking the Doors P. 105

Opening and Closing the Moonroof P. 123
Adjusting the Seats P. 135 Interior Lights/Interior Convenience Items P. 141

# **→** Features P. 151

Audio System P. 152 Audio System Basic Operation P. 155

HomeLink® Universal Transceiver\* P. 187

#### **Driving** P. 219

Before Driving P. 220 Towing a Trailer P. 225 Multi-View Rear Camera P. 253 Refueling P. 254

#### → Maintenance P. 259

Before Performing Maintenance P. 260 Maintenance Minder™ P. 263

Checking and Maintaining Wiper Blades P. 292 Climate Control System Maintenance P. 305

#### Handling the Unexpected P. 311

Tools P. 312 If a Tire Goes Flat P. 313

Overheating P. 335 Indicator, Coming On/Blinking P. 337

#### **▶** Information P. 345

Specifications P. 346 Identification Numbers P. 348 Emissions Testing P. 351 Warranty Coverages P. 353

			h	
Child Safety P. 54	Exhaust Gas Hazard P. 66	Safety Labels P. 67		
			h. 'II	
			1	_
			l' ,()	
Opening and Closing the Trunk P. 114 Operating the Switches Around the Steeri Climate Control System P. 146	Security System P. 118 ng Wheel P. 124	Opening and Closing the Windows P. 120 Adjusting the Mirrors P. 133		
Climate Control System P. 146			"	
			$\ _{\mathrm{lin}}$	
Audio Error Messages* P. 180 Bluetooth® HandsFreeLink® P. 189	General Information on the Audio System	P. 183		
			.att11	۰
				_
When Driving P. 226	Braking P. 248	Parking Your Vehicle P. 252		
Fuel Economy P. 256	Accessories and Modifications P. 257			
			1	
Maintenance Under the Hood P. 268	Replacing Light Bulbs P. 282		.(1	Ha
Checking and Maintaining Tires P. 294 Cleaning P. 306	12 Volt Battery P. 303	Remote Transmitter Care P. 304	الرال	
			ال 'ال	
Engine Does Not Start P. 329 Fuses P. 341	Jump Starting P. 332 Emergency Towing P. 344	Shift Lever Does Not Move P. 334		

Reporting Safety Defects P. 350

Client Service Information P. 356

Devices that Emit Radio Waves P. 349

Authorized Manuals P. 355

# Contents

Quick Reference Guide P. 4

Safe Driving P. 27

Instrument Panel P. 69

Controls P. 103

Features P. 151

Driving P. 219


Maintenance P. 259


Handling the Unexpected P. 311

Information P. 345


Index P. 357


# **Visual Index**

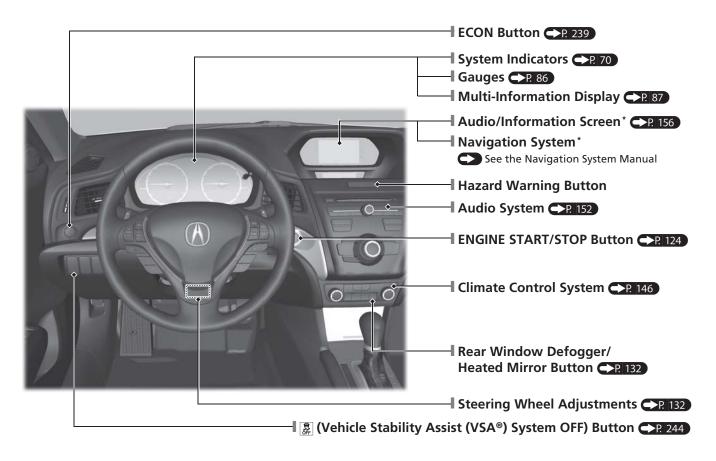

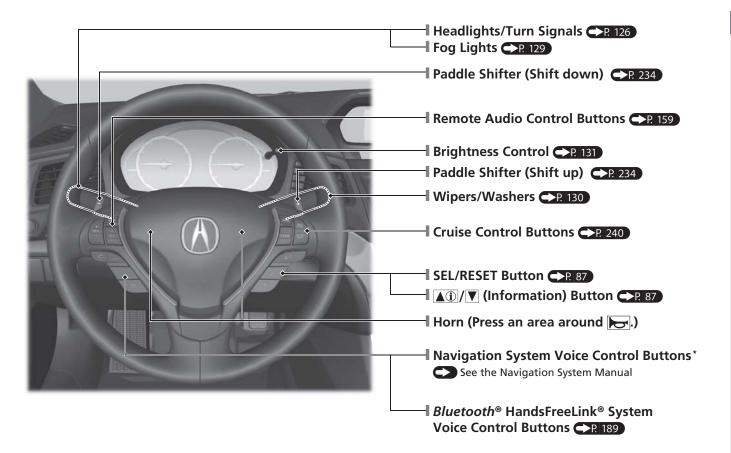



# **Visual Index**

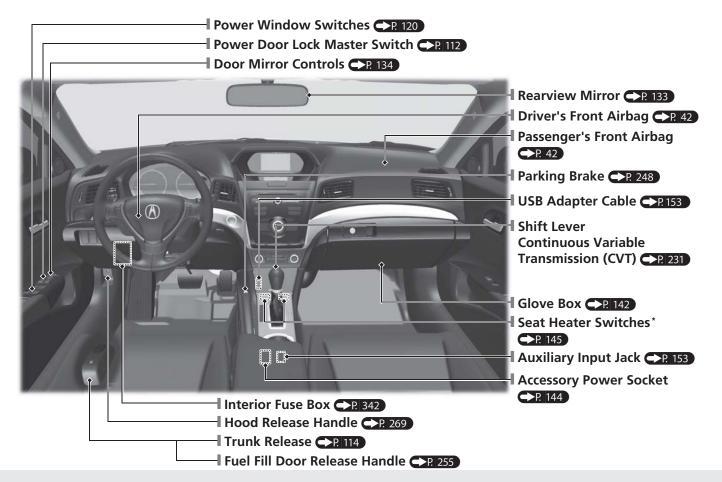

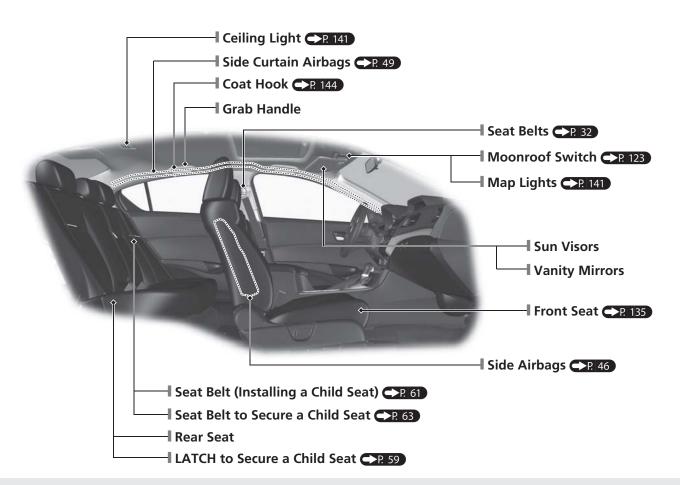


# **Visual Index**

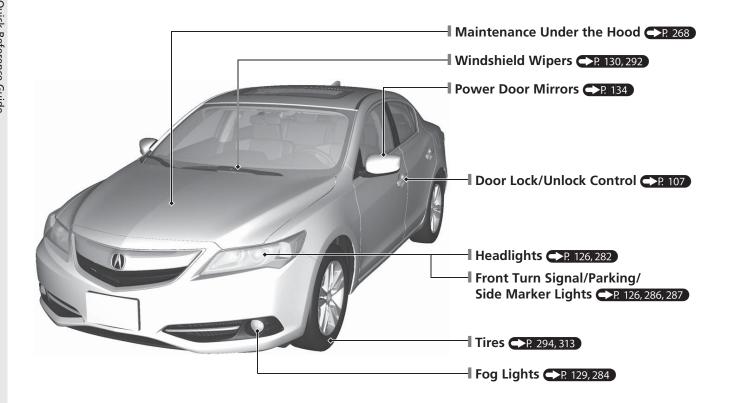

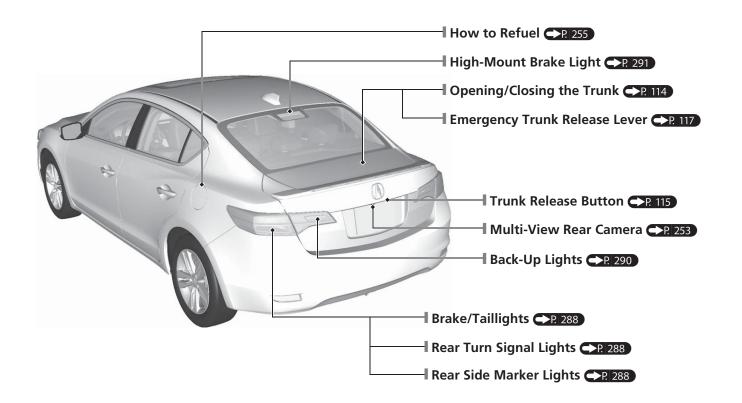

# **Eco Assist System**

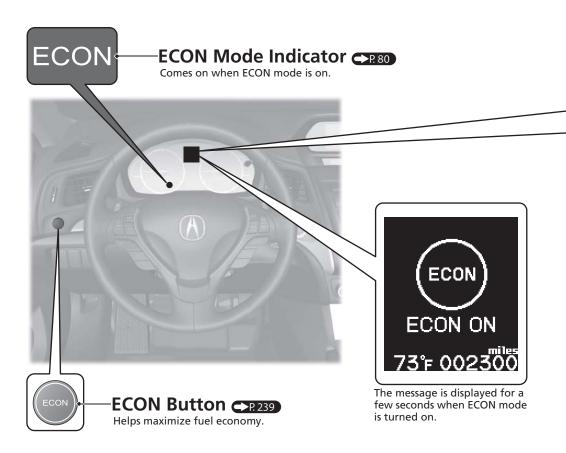


# **Lifetime Points**

• Comes on when the vehicle is turned off.



# Fuel Economy Indicator P.90

 Keep the sphere from being too small. The bigger the sphere is while driving, the higher the fuel economy becomes.

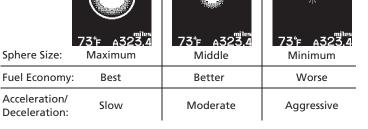


# The Acura Hybrid System

The main power source for the Acura hybrid system is the engine. The IMA motor assists the engine to improve fuel economy, based on current operating conditions.

# Tips to Improve Fuel Economy To help your vehicle's fuel economy:

- Avoid aggressive acceleration/braking
- Monitor the fuel economy indicator displayed on the multi-information display.

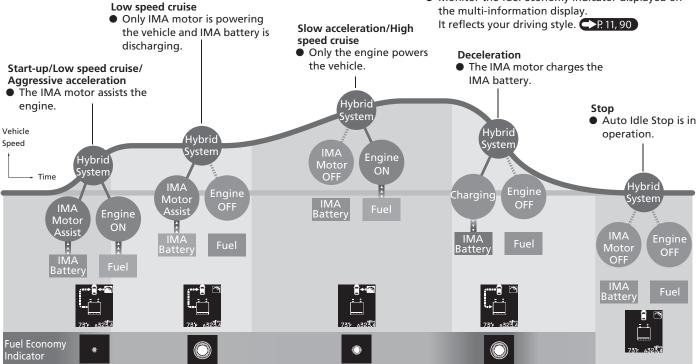


# To Keep the IMA Battery in Good Condition

Drive your vehicle at least once a month, and drive for more than 30 minutes at a time. Parking your vehicle for an extended period can cause the IMA battery to weaken or decrease the IMA battery life.

# **Safety Precautions**

Do not cover the air intake.

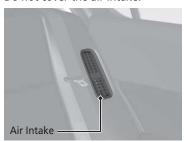

If the air intake is obstructed during vehicle operation, the IMA battery can become too hot. To protect the battery. the system may start limiting IMA battery output power and cause the Acura hybrid system and 12 volt battery charging system indicators to come on.


IMA System Indicator P. 77



12 Volt Battery Charging System Indicator P. 72

#### Do not touch the Acura hybrid system

A high voltage current runs through the Acura hybrid system. Consult your authorized dealer when maintenance or repair is needed.

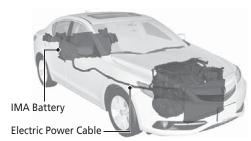

#### If a crash occurs

- Be careful of electric shock hazard.
  - ▶ If a crash severely damaged your vehicle, there is a possibility of electrical shock. Do not touch the Acura hybrid system components or their wiring (orange).
- Avoid contact with IMA battery fluid.
  - The battery fluid may leak as a result of a severe crash. Avoid any skin or eye contact with the fluid. The battery fluid is corrosive. If you accidentally touch it, flush the affected area(s) with a large quantity of water for at least five minutes, and medical attention immediately.
- Use a fire extinguisher for an electrical fire.
  - Attempting to extinguish an electrical fire with a small quantity of water can be dangerous.

### When the vehicle is disposed

• The IMA battery is a Lithium ion battery. Acura collects and recycles used IMA batteries - consult with your dealer for proper battery disposal in the event your vehicle is not repairable.

# Safe Driving

# Airbags (TR39)

 Your vehicle is fitted with airbags to help protect you and your passengers during a moderate-to-severe collision.

# Child Safety P.54

- All children 12 and younger should be seated in the rear seat.
- Smaller children should be properly restrained in a forward-facing child seat.
- Infants must be properly restrained in a rear-facing child seat.

# –Exhaust Gas Hazard ←₽.66

 Your vehicle emits dangerous exhaust gases that contain carbon monoxide. Do not run the engine in confined spaces where carbon monoxide gas can accumulate.

# Seat Belts ( ) R32

- Fasten your seat belt and sit upright well back in the seat.
- Check that your passengers are wearing their seat belts correctly.

# Before Driving Checklist P. 220

 Before driving, check that the front seats, head restraints, steering wheel, and mirrors have been properly adjusted.



Fasten your lap belt as low as possible.

# Instrument Panel

# Gauges (Nulti-Information Display (Nulti-Informa

### **System Indicators**











VSA® OFF Indicator

Door and Trunk Open Indicator


Immobilizer System Indicator

BRAKE Canada


Parking Brake and Brake System Indicator (Red)

Canada

**Brake System** Indicatór (Amber)

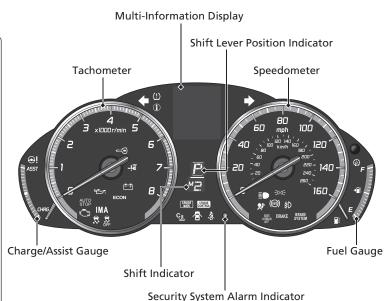

# **System Indicators**

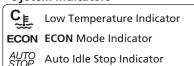 

**IMA** System Indicator

IMA

# **Lights Indicators**

≥00 Lights On Indicator **High Beam Indicator** 

Fog Light Indicator

# **System Indicators**



Keyless Access System Indicator











Indicator SIDE AIRBAG

0FF Side Airbag Off U.S. Indicator



CRUISE MAIN CRUISE MAIN Indicator



System Message Indicator

# Controls CRIOS

# ENGINE START/STOP Button (\$\infty\$):124

Press the button to change the vehicle's power mode.



# Turn Signals P. 126

Turn Signal Control Lever



# Lights P. 126


**Light Control Switches** 



# **Wipers and Washers**



Wiper/Washer Control Lever

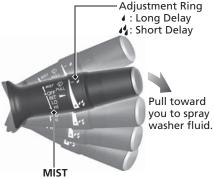

OFF


**INT**: Low speed with intermittent

**LO**: Low speed wipe **HI**: High speed wipe

Indicator

# Steering Wheel R132

 To adjust, pull the adjustment lever towards you, adjust to the desired position, then lock the lever back in place.

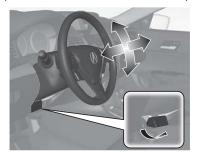

# Unlocking the Front Doors from the Inside

#### **◯** P. 111

 Pull either front door inner handle to unlock and open it in one motion.



# Trunk P114



Trunk Release


- To unlock and open the trunk:
- Pull the trunk release.
- Press the trunk release button on the keyless access remote.
- Press the trunk release button on the trunk lid.

# **Power Door Mirrors**

#### →P. 134

- With the power mode in ON, move the selector switch to L or R.
- Push the appropriate edge of the adjustment switch to adjust the mirror.




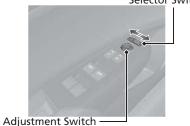

# Power Windows CRIZO

- With the power mode in ON, open and close the power windows.
- If the power window lock button is in the off position, each passenger's window can be opened and closed with its own switch.
- If the power window lock button is in the on position (indicator is on), each passenger's window switch is disabled.

Power Window Lock Button

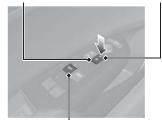


Window Switch

# Climate Control System P. 146

- Press the **AUTO** button to activate the climate control system.
- Press the SOFF button to turn the system on or off.
- Press the button to defrost the windshield.

#### On models with navigation system

The climate control system is voice operable. See the Navigation System Manual for complete details.

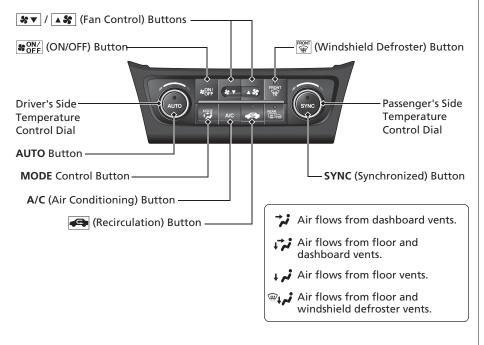

# Clock CP 104

#### Models without navigation system

- Press the CLOCK (AUX) button until the displayed time begins flashing.
- Press Preset 4 (Hour) or 5 (Minute) to set the time. Press Preset 6 (Reset) to set the time to the nearest hour.
- Press the CLOCK button again to set the time.


#### Models with navigation system


The navigation system receives signals from GPS satellites, updating the clock automatically.

# Features CRIST

# Audio system P. 152 For navigation system operation

See the Navigation System Manual

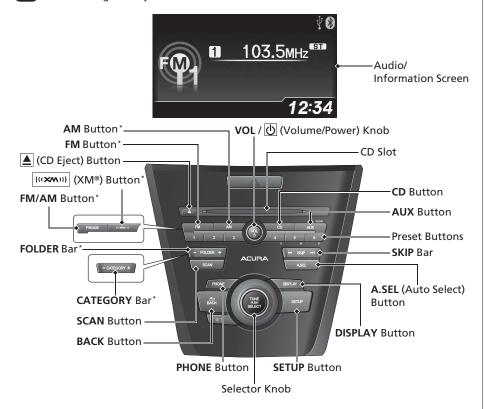

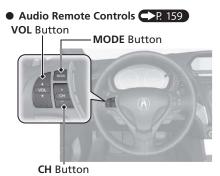

- MODE Button
   Press to change the audio mode: FM1/
   FM2/AM/XM1\*/XM2\*/CD/AUX.
- CH (Channel) Button
   Radio:Press to change the preset station.
   Press and hold to select the next or previous strong station.

# CD/USB device:

Press to skip to the beginning of the next song or return to the beginning of the current song. Press and hold to change a folder.

# Driving (CR219)

# **Continuous Variable Transmission** (CVT) (CVT)

• Shift to P and depress the brake pedal when starting the engine. Shift Lever

Shifting

**P** Park

Turn off or start the engine. Transmission is locked.

Reverse

Used when reversing.

Neutral

Transmission is not locked.

 
Drive

Normal driving.

• 7-speed mode can be used temporarily.

### S Drive (S) Used for:

- Better acceleration
- Increased engine braking
- Going up or down hills
- Driving in the 7-speed manual shift mode
- Driving in L mode

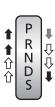



Depress the brake pedal and press the release button to move out of P.

Release Button



Press the release button to move the shift lever.



Move the shift lever without pressing the release button.

# 7-Speed Manual Shift Mode P. 233

• Allows you to manually shift the transmission up or down without removing your hands from the steering wheel.

# Shift Lever Position Indicator Selected Speed Number

M Indicator

Shift Down Paddle Shifter



Shift Up + Paddle Shifter



#### When the shift lever is in D

 Pulling a paddle shifter temporarily changes the mode from continuous variable transmission (CVT) to 7-speed manual shift mode. The selected speed number is displayed in the shift indicator.

### When the shift lever is in S

 Pulling a paddle shifter changes the mode from continuous variable transmission (CVT) to 7-speed manual shift mode. The M indicator and the selected speed number are displayed in the shift indicator.

#### L (Low) Mode P 235

- Use Low to get more power when climbing steep hills.
- With the shift lever in S, pull the + and paddle shifters at the same time until the shift indicator display changes to L.



# VSA® OFF Button ←>P.244

- The vehicle stability assist (VSA®) system helps stabilize the vehicle during cornering, and helps maintain traction while accelerating on loose or slippery road surfaces.
- VSA® comes on automatically every time you start the engine.
- To turn VSA® on or off, press and hold the button until you hear a beep.

# Cruise Control R 240

- Cruise control allows you to maintain a set speed without keeping your foot on the accelerator pedal.
- To use cruise control, press the CRUISE button, then press DECEL/SET once you have achieved the desired speed (above 25 mph or 40 km/h).

# Tire Pressure Monitoring System (TPMS) R245

 
#### U.S. models only

- The TPMS monitors tire pressure.
- The TPMS is turned on automatically every time you start the engine.

# Refueling P.254

Fuel recommendation: Unleaded premium gasoline with a pump octane number 91 or higher recommended

Fuel tank capacity: 13.2 US gal (50 L)

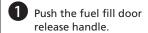



- 2 Turn the fuel fill cap slowly to remove the cap.
- Place the cap in the holder on the fuel fill door.
- 4 After refueling, screw the cap back on until it clicks at least once.



# Maintenance Caree

# Under the Hood →P.268


- Check engine oil, engine coolant, and windshield washer fluid. Add when necessary.
- Check brake fluid.
- Check the 12 volt battery condition monthly.
- Pull the hood release handle under the corner of the dashboard.



Locate the hood latch lever, slide the lever and lift up the hood.



When finished, close the hood and make sure it is firmly locked in place.

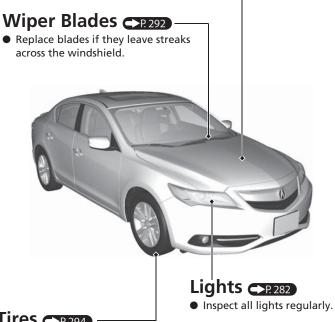

# Tires P. 294

- Inspect tires and wheels regularly.
- Check tire pressures regularly.
- Install snow tires for winter driving.

# Handling the Unexpected Carrin

# Flat Tire CREIB

 Park in a safe location and repair the flat tire using the tire repair kit.



# Indicators Come On

## →P. 337

 Identify the indicator and consult the owner's manual.




# Engine Won't Start (\$\)29

 If the battery is dead, jump start using a booster battery.



# Blown Fuse R341

 Check for a blown fuse if an electrical device does not operate.

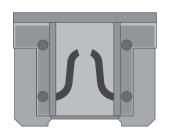

# Overheating (\*\*)

 Park in a safe location. If you do not see steam under the hood, open the hood, and let the engine cool down.

 


# Emergency Towing >P.344

 Call a professional towing service if you need to tow your vehicle.



# What to Do If

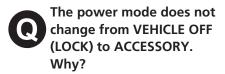



- The steering wheel may be locked.
- Move the steering wheel left and right after pressing the ENGINE START/STOP button.



The power mode does not change from ON to VEHICLE OFF (LOCK). Why?



The shift lever should be moved to P.



Why does the brake pedal pulsate slightly when applying the brakes?

 


 
This can occur when the ABS activates, and does not indicate a problem. Apply firm, steady pressure on the brake pedal. Never pump the brake pedal.

The rear door cannot be opened from inside the vehicle. Why?




Check if the childproof lock is in the LOCK position. If so, open the rear door with the outside door handle. To cancel this function, push the lever to the UNLOCK position.

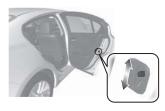


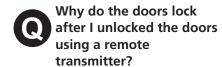




  If you do not open the doors within 30 seconds, the doors are relocked automatically for security.

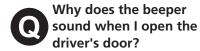

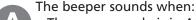

 - The power mode is in ACCESSORY.
- The exterior lights are left on.
- The Auto Idle Stop is in operation.

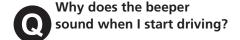




The beeper sounds when:

- Driver and/or front passenger are not wearing their seat belts.
- The parking brake lever is not fully released.

Why do I hear a screeching sound when I apply the brake pedal?



 The brake pads may need to be replaced. Have your vehicle inspected by a dealer.

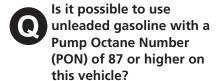



Unleaded gasoline with a Pump Octane Number (PON) of 91 or higher is recommended.

Use of lower octane gasoline can cause occasional metallic knocking noise in the engine and will result in decreased engine performance.

Use of gasoline with a pump octane less than 87 can lead to engine damage.

# Safe Driving

You can find many safety recommendations throughout this chapter, and throughout this manual.

For Safe Driving	
Important Safety Precautions	28
Your Vehicle's Safety Features	3(
Seat Belts	
About Your Seat Belts	32
Fastening a Seat Belt	35
Seat Belt Inspection	38
Airbags	
Airbag System Components	39
Types of Airbags	42
Front Airbags (SRS)	42
Side Airbags	46

Side Curtain Airbags	4
Airbag System Indicators	5(
Airbag Care	53
Child Safety	
Protecting Child Passengers	5
Safety of Infants and Small Children !	5
Safety of Larger Children	6
Exhaust Gas Hazard	
Carbon Monoxide Gas	61
Safety Labels	
Label Locations	6

# For Safe Driving

The following pages explain your vehicle's safety features and how to use them properly. The safety precautions below are ones that we consider to be among the most important.

# **Important Safety Precautions**

#### ■ Always wear your seat belt

A seat belt is your best protection in all types of collisions. Airbags are designed to supplement seat belts, not replace them. So even though your vehicle is equipped with airbags, make sure you and your passengers always wear your seat belts, and wear them properly.

#### Restrain all children

Children ages 12 and under should ride properly restrained in a back seat, not the front seat. Infants and small children should be restrained in a child seat. Larger children should use a booster seat and a lap/shoulder seat belt until they can use the belt properly without a booster seat.

### ■ Be aware of airbag hazards

While airbags can save lives, they can cause serious or fatal injuries to occupants who sit too close to them, or are not properly restrained. Infants, young children, and short adults are at the greatest risk. Be sure to follow all instructions and warnings in this manual.

#### ■ Don't drink and drive

Alcohol and driving don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and drive, and don't let your friends drink and drive, either.

#### 

Some states, provinces and territories prohibit the use of cell phones other than hands-free devices by the driver while driving.

# ■ Pay appropriate attention to the task of driving safely

Engaging in cell phone conversation or other activities that keep you from paying close attention to the road, other vehicles, and pedestrians could lead to a crash. Remember, situations can change quickly, and only you can decide when it is safe to divert some attention away from driving.


### ■ Control your speed

Excessive speed is a major factor in crash injuries and deaths. Generally, the higher the speed, the greater the risk, but serious injuries can also occur at lower speeds. Never drive faster than is safe for current conditions, regardless of the maximum speed posted.

## ■ Keep your vehicle in safe condition

Having a tire blowout or a mechanical failure can be extremely hazardous. To reduce the possibility of such problems, check your tire pressures and condition frequently, and perform all regularly scheduled maintenance.

# **Your Vehicle's Safety Features**

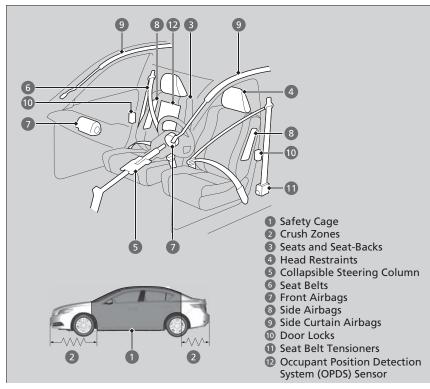

The following checklist will help you take an active role in protecting yourself and your passengers.

#### ∑Your Vehicle's Safety Features

Your vehicle is equipped with many features that work together to help protect you and your passengers during a crash.

Some features do not require any action on your part. These include a strong steel framework that forms a safety cage around the passenger compartment, front and rear crush zones, a collapsible steering column, and tensioners that tighten the front seat belts in a sufficient crash.

However, you and your passengers cannot take full advantage of these features unless you remain seated in the correct position and always wear your seat belts. In fact, some safety features can contribute to injuries if they are not used properly.

# Safety Checklist

For the safety of you and your passengers, make a habit of checking these items each time before you drive.

After everyone has entered the vehicle, be sure all doors are closed and locked.
 Locking the doors helps prevent an occupant from being ejected and an outsider from unexpectedly opening a door.

### **■ Locking/Unlocking the Doors from the Inside** P. 111

Adjust your seat to a position suitable for driving. Be sure the front seats are
adjusted as far to the rear as possible while allowing the driver to control the
vehicle. Sitting too close to a front airbag can result in serious or fatal injury in a
crash.

#### Adjusting the Seats P. 135

Adjust head restraints to the proper position. Head restraints are most effective
when the center of the head restraint aligns with the center of your head. Taller
persons should adjust their head restraint to the highest position.

### **Adjusting the Head Restraints** P. 138

• Always wear your seat belt, and make sure you wear it properly. Confirm that any passengers are properly belted as well.

#### Fastening a Seat Belt P. 35


 Protect children by using seat belts or child seats according to a child's age, height and weight.

**≧** Child Safety P. 54

#### Safety Checklist

If the door and trunk open indicator is on, a door and/or the trunk is not completely closed. Close all doors and the trunk tightly until the indicator goes off.

#### **Door and Trunk Open Indicator** P. 75

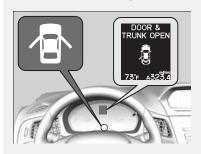

# **About Your Seat Belts**

Seat belts are the single most effective safety device because they keep you connected to the vehicle so that you can take advantage of many built-in safety features. They also help keep you from being thrown against the inside of the vehicle, against other passengers, or out of the vehicle. When worn properly, seat belts also keep your body properly positioned in a crash so that you can take full advantage of the additional protection provided by the airbags.

In addition, seat belts help protect you in almost every type of crash, including:

- frontal impacts
- side impacts
- rear impacts
- rollovers

# ■ Lap/shoulder seat belts

All five seating positions are equipped with lap/shoulder seat belts with emergency locking retractors. In normal driving the retractor lets you move freely while keeping some tension on the belt. During a collision or sudden stop the retractor locks to restrain your body. The front passenger's and rear seat belts also have a lockable retractor for use with child seats.

Installing a Child Seat with a Lap/Shoulder Seat Belt P. 61

# **AWARNING**

Not wearing a seat belt properly increases the chance of serious injury or death in a crash, even though your vehicle has airbags.

Be sure you and your passengers always wear seat belts and wear them properly.

Seat belts cannot completely protect you in every crash. But in most cases, seat belts can reduce your risk of serious injury.

Most states and all Canadian provinces and territories require you to wear seat belts.

### ■ Proper use of seat belts

Follow these guidelines for proper use:

- All occupants should sit upright, well back in the seat, and remain in that position
  for the duration of the trip. Slouching and leaning reduces the effectiveness of
  the belt and can increase the chance of serious injury in a crash.
- Never place the shoulder part of a lap/shoulder seat belt under your arm or behind your back. This could cause very serious injuries in a crash.
- Two people should never use the same seat belt. If they do, they could be very seriously injured in a crash.
- Do not put any accessories on the seat belts. Devices intended to improve comfort or reposition the shoulder part of a seat belt can reduce the protective capability and increase the chance of serious injury in a crash.

### Seat Belt Reminder



Your vehicle monitors front seat belt use. If the power mode is set to ON before the driver's seat belt is fastened, a beeper will sound and the indicator will blink. If the driver does not fasten the belt before the beeper stops, the indicator will remain on.

The beeper will also periodically sound and the indicator will blink while driving until the driver's and front passenger's seat belts are fastened.

#### ■ About Your Seat Belts

If a rear seat passenger moves around and extends the seat belt, the lockable retractor may activate. If this happens, release the retractor by unfastening the seat belt and allow the belt to retract completely. Then refasten the belt

#### Seat Belt Reminder

The indicator will also come on if a front passenger does not fasten their seat belt within 6 seconds after the power mode is set to ON.

When no one is sitting in the front passenger's seat, or a child or small adult is riding there, the indicator will not come on.

This is because the weight sensors in the seat cannot detect their presence.

# Automatic Seat Belt Tensioners

The front seats are equipped with automatic seat belt tensioners to enhance safety.

The tensioners automatically tighten the front seat belts during a moderate-tosevere frontal collision, sometimes even if the collision is not severe enough to inflate the front airbags.



#### 

The seat belt tensioners can only operate once. If a tensioner is activated, the SRS indicator will come on. Have a dealer replace the tensioner and thoroughly inspect the seat belt system as it may not offer protection in a subsequent crash.

During a moderate-to-severe side impact, the tensioner on that side of the vehicle also activates.


# **Fastening a Seat Belt**

After adjusting a front seat to the proper position, and while sitting upright and well back in the seat:

#### Adjusting the Seats P. 135



1. Pull the seat belt out slowly.

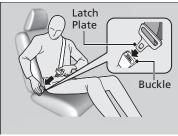

- 2. Insert the latch plate into the buckle, then tug on the belt to make sure the buckle is secure.
  - ► Make sure that the belt is not twisted or caught on anything.

#### >> Fastening a Seat Belt

No one should sit in a seat with an inoperative seat belt or one that does not appear to be working correctly. Using a seat belt that is not working properly may not protect the occupant in a crash. Have a dealer check the belt as soon as possible.

Never insert any foreign objects into the buckle or retractor mechanism.

Continued 35



- 3. Position the lap part of the belt as low as possible across your hips, then pull up on the shoulder part of the belt so the lap part fits snugly. This lets your strong pelvic bones take the force of a crash and reduces the chance of internal injuries.
- **4.** If necessary, pull up on the belt again to remove any slack, then check that the belt rests across the center of your chest and over your shoulder. This spreads the forces of a crash over the strongest bones in your upper body.

#### ▶ Fastening a Seat Belt

## **AWARNING**

Improperly positioning the seat belts can cause serious injury or death in a crash.


Make sure all seat belts are properly positioned before driving.

To release the belt, push the red **PRESS** button then guide the belt by hand until it has retracted completely.

When exiting the vehicle, be sure the belt is out of the way and will not get caught by closing the door.

# Adjusting the Shoulder Anchor

The front seats have adjustable shoulder anchors to accommodate taller and shorter occupants.

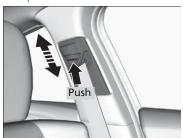

- **1.** Move the anchor up and down while holding the release button.
- **2.** Position the anchor so that the belt rests across the center of your chest and over your shoulder.


#### ■ Adjusting the Shoulder Anchor

The shoulder anchor height can be adjusted to four levels. If the belt contacts your neck, lower the height one level at a time.

After an adjustment, make sure that the shoulder anchor position is secure.

# Advice for Pregnant Women

If you are pregnant, the best way to protect yourself and your unborn child when driving or riding in a vehicle is to always wear a seat belt and keep the lap part of the belt as low as possible across the hips.

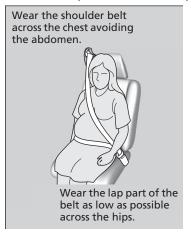

#### ■ Advice for Pregnant Women

Each time you have a checkup, ask your doctor if it is okay for you to drive.

To reduce the risk of injuries to both you and your unborn child that can be caused by an inflating front airbag:

- When driving, sit upright and adjust the seat as far back as possible while allowing full control of the vehicle.
- When sitting in the front passenger's seat, adjust the seat as far back as possible.

# **Seat Belt Inspection**

Regularly check the condition of your seat belts as follows:

- Pull each belt out fully, and look for frays, cuts, burns, and wear.
- Check that the latches work smoothly and the belts retract easily.
  - ▶ If a belt does not retract easily, cleaning the belt may correct the problem. Only use a mild soap and warm water. Do not use bleach or cleaning solvents. Make sure the belt is completely dry before allowing it to retract.

Any belt that is not in good condition or working properly will not provide proper protection and should be replaced as soon as possible.

A belt that has been worn during a crash may not provide the same level of protection in a subsequent crash. Have your seat belts inspected by a dealer after any collision.


Seat Belt Inspection

## **AWARNING**

Not checking or maintaining seat belts can result in serious injury or death if the seat belts do not work properly when needed.

Check your seat belts regularly and have any problem corrected as soon as possible.

# **Airbag System Components**

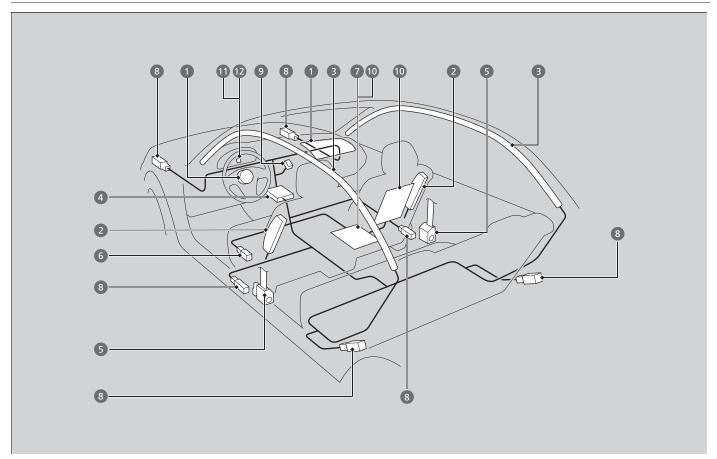

The front, front side, and side curtain airbags are deployed according to the direction and severity of impact. The airbag system includes:

- Two SRS (Supplemental Restraint System) front airbags. The driver's airbag is stored in the center of the steering wheel; the front passenger's airbag is stored in the dashboard. Both are marked SRS AIRBAG.
- 2 Two side airbags, one for the driver and one for a front passenger. The airbags are stored in the outer edges of the seatbacks. Both are marked SIDE AIRBAG.
- Two side curtain airbags, one for each side of the vehicle. The airbags are stored in the ceiling, above the side windows. The front and rear pillars are marked SIDE CURTAIN AIRBAG.

- An electronic control unit that continually monitors and can record information about the sensors, the airbag activators, the seat belt tensioners, and driver and front passenger seat belt use when the power mode is in ON.
- Automatic front seat belt tensioners. The driver's and front passenger's seat belts incorporate sensors that detect whether or not they are fastened.
- A driver's seat position sensor. If the seat is too far forward, the airbag will inflate with less force.
- Weight sensors in the front passenger's seat. The front passenger's airbag will be turned off if the weight on the seat is 65 lbs (29 kg) or less (the weight of an infant or small child).

- Impact sensors that can detect a moderate to severe front or side impact.
- An indicator on the dashboard that alerts you that the front passenger's front airbag has been turned off.
- Sensors that can detect if a child or small statured adult is in the deployment path of the front passenger's side airbag.
- An indicator on the instrument panel that alerts you to a possible problem with your airbag system or seat belt tensioners.
- ② An indicator on the instrument panel that alerts you that the front passenger's side airbag has been turned off.

### Important Facts About Your Airbags

Airbags can pose serious hazards. To do their job, airbags must inflate with tremendous force. So, while airbags help save lives, they can cause burns, bruises, and other minor injuries, and sometimes even fatal ones if occupants are not wearing their seat belts properly and sitting correctly.

**What you should do:** Always wear your seat belt properly, and sit upright and as far back from the steering wheel as possible while allowing full control of the vehicle. A front passenger should move their seat as far back from the dashboard as possible.

Remember, however, that no safety system can prevent all injuries or deaths that can occur in a severe crash, even when seat belts are properly worn and the airbags deploy.

**Do not place hard or sharp objects between yourself and a front airbag.** Carrying hard or sharp objects on your lap, or driving with a pipe or other sharp object in your mouth, can result in injuries if your front airbag inflates.

**Do not attach or place objects on the front airbag covers.** Objects on the covers marked **SRS AIRBAG** could interfere with the proper operation of the airbags or be propelled inside the vehicle and hurt someone if the airbags inflate.

#### 

Do not attempt to deactivate your airbags. Together, airbags and seat belts provide the best protection.

When driving, keep hands and arms out of the deployment path of the front airbag by holding each side of the steering wheel. Do not cross an arm over the airbag cover.

# **Types of Airbags**

Your vehicle is equipped with three types of airbags:

- Front airbags: Airbags in front of the driver's and front passenger's seats.
- **Side airbags:** Airbags in the driver's and front passenger's seat-backs.
- **Side curtain airbags:** Airbags above the side windows.

Each is discussed in the following pages.

# Front Airbags (SRS)

The front SRS airbags inflate in a moderate-to-severe frontal collision to help protect the head and chest of the driver and/or front passenger.

**SRS** (Supplemental Restraint System) indicates that the airbags are designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.

### Housing Locations

The front airbags are housed in the center of the steering wheel for the driver, and in the dashboard for the front passenger. Both airbags are marked **SRS AIRBAG**.

### ∑Types of Airbags

The airbags can inflate whenever the power mode is in ON.

After an airbag inflates in a crash, you may see a small amount of smoke. This is from the combustion process of the inflator material and is not harmful. People with respiratory problems may experience some temporary discomfort. If this occurs, get out of the vehicle as soon as it is safe to do so.

#### 

# **Dual-Stage, Multiple-Threshold Front Airbags** (SRS)

Your vehicle is equipped with dual-stage, multiplethreshold front airbags (SRS).

During a frontal crash severe enough to cause one or both front airbags to deploy, the airbags can inflate at different rates, depending on the severity of the crash, whether or not the seat belts are latched, and/ or other factors. Frontal airbags are designed to supplement the seat belts to help reduce the likelihood of head and chest injuries in frontal crashes.


43

### Operation

Front airbags are designed to inflate during moderate-to-severe frontal collisions. When the vehicle decelerates suddenly, the sensors send information to the control unit which signals one or both front airbags to inflate.

A frontal collision can be either head-on or angled between two vehicles, or when a vehicle crashes into a stationary object, such as a concrete wall.

# ■ How the Front Airbags Work

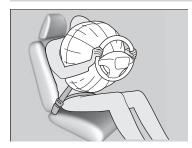

While your seat belt restrains your torso, the front airbag provides supplemental protection for your head and chest.

The front airbags deflate immediately so that they won't interfere with the driver's visibility or the ability to steer or operate other controls.

The total time for inflation and deflation is so fast that most occupants are not aware that the airbags deployed until they see them lying in front of them.

#### 

Although the driver's and front passenger's airbags normally inflate within a split second of each other, it is possible for only one airbag to deploy. This can happen if the severity of a collision is at the margin, or threshold, that determines whether or not the airbags will deploy. In such cases, the seat belt will provide sufficient protection, and the supplemental protection offered by the airbag would be minimal.

### ■ When front airbags should not deploy

**Minor frontal crashes:** Front airbags were designed to supplement seat belts and help save lives, not to prevent minor scrapes, or even broken bones that might occur during a less than moderate-to-severe frontal crash.

**Side impacts:** Front airbags can provide protection when a sudden deceleration causes a driver or front passenger to move towards the front of the vehicle. Side airbags and side curtain airbags have been specifically designed to help reduce the severity of injuries that can occur during a moderate-to-severe side impact which can cause the driver or passenger to move towards the side of the vehicle.

**Rear impacts:** Head restraints and seat belts are your best protection during a rear impact. Front airbags cannot provide any significant protection and are not designed to deploy in such collisions.

**Rollovers:** Seat belts and, in vehicles equipped with a rollover sensor, side airbags and side curtain airbags offer the best protection in a rollover. Because front airbags could provide little if any protection, they are not designed to deploy during a rollover.

### ■ When front airbags deploy with little or no visible damage


Because the airbag system senses sudden deceleration, a strong impact to the vehicle framework or suspension might cause one or more of the airbags to deploy. Examples include running into a curb, the edge of a hole, or other low fixed object that causes a sudden deceleration in the vehicle chassis. Since the impact is underneath the vehicle, damage may not be readily apparent.

# ■ When front airbags may not deploy, even though exterior damage appears severe

Since crushable body parts absorb crash energy during an impact, the amount of visible damage does not always indicate proper airbag operation. In fact, some collisions can result in severe damage but no airbag deployment because the airbags would not have been needed or would not have provided protection even if they had deployed.


### Advanced Airbags

Your front airbags have advanced features to help reduce the likelihood of airbag related injuries to smaller occupants.

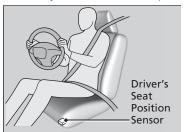

The driver's advanced front airbag system includes a seat position sensor.

If the seat is too far forward, the airbag inflates with less force, regardless of the severity of the impact.

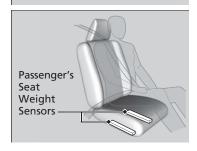

The passenger's advanced front airbag system has weight sensors.

Although we recommend against carrying an infant or small child in front, if the sensors detect the weight of a child (up to about 65 lbs or 29 kg), the system will automatically turn off the passenger's front airbag.

#### ■ Advanced Airbags

If there is a problem with the driver's seat position sensor, the SRS indicator will come on and the airbag will inflate with full (normal) force, regardless of the driver's seating position.

For both advanced front airbags to work properly:

- Do not spill any liquid on or under the seats.
- Do not put any object under the passenger's seat.
- Make sure any objects are positioned properly on the floor. Improperly positioned objects can interfere with the advanced airbag sensors.
- All occupants should sit upright and wear their seat belts properly.
- Do not place any cover over the passenger side dashboard.

Make sure the floor mat behind the front passenger's seat is hooked to the floor mat anchor. An improperly placed mat can interfere with the advanced airbag sensors

Floor Mats P. 307

# **Side Airbags**

The side airbags help protect the upper torso of the driver or a front passenger during a moderate-to-severe side impact.


# Housing Locations



The side airbags are housed in the outside edge of the driver's and passenger's seat-backs.

Both are marked **SIDE AIRBAG**.

# Operation

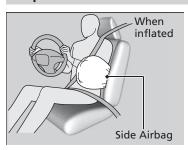

When the sensors detect a moderate-tosevere side impact, the control unit signals the side airbag on the impact side to immediately inflate.

#### Side Airbags

Do not attach accessories on or near the side airbags. They can interfere with the proper operation of the airbags, or hurt someone if an airbag inflates.

If the impact is on the passenger side, the airbag deploys even if there is no passenger's in the passenger seat.

Do not cover or replace the front seat-back covers without consulting a dealer.

Improperly replacing or covering front seat-back covers can prevent your side airbags from properly deploying during a side impact.

47

### ■ When a side airbag deploys with little or no visible damage

Because the airbag system senses sudden acceleration, a strong impact to the side of the vehicle's framework can cause a side airbag to deploy. In such cases, there may be little or no damage, but the side impact sensors detected a severe enough impact to deploy the airbag.

# ■ When a side airbag may not deploy, even though visible damage appears severe

It is possible for a side airbag to not deploy during an impact that results in apparently severe damage. This can occur when the point of impact was towards the far front or rear of the vehicle, or when the vehicle's crushable body parts absorbed most of the crash energy. In either case, the side airbag would not have been needed nor provided protection even if it had deployed.

### ■ Side Airbag Cutoff System

To reduce the likelihood that a front passenger may be injured by an inflating side airbag, the passenger side airbag is automatically turned off when:

- The height sensors detect a child or short-statured adult is seated in the front passenger seat.
- The position sensor detects that the front passenger is leaning into the deployment path of the side airbag.

When the side airbag cutoff system is activated, the side airbag off indicator comes on.


Side Airbag Off Indicator P. 52

### Side Airbag Off Indicator

If the side airbag off indicator comes on, have the passenger sit upright. A few seconds after the passenger is sitting properly, the side airbag will automatically be turned on, and the indicator will go off.

If the front passenger is a child, stop when it is safe to do so, and have the child sit properly restrained in a rear seat.

#### Side Airbag Cutoff System

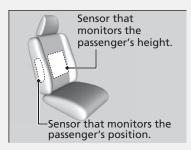


The sensors that monitor the front passenger's height and body position may not work if:

- The seat-back is wet
- The passenger is touching a metal or other electrical conductive object
- A seat cushion is on the seat
- The passenger is wearing excessively thick clothing

# **Side Curtain Airbags**

The side curtain airbags help protect the heads of the driver and passengers in outer seating positions during a moderate-to-severe side impact.

### Housing Locations

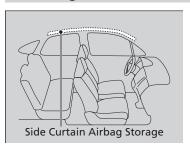

The side curtain airbags are located in the ceiling above the side windows on both sides of the vehicle.



The side curtain airbag is designed to deploy in a moderate-to-severe side impact.

#### Side Curtain Airbags

The side curtain airbags are most effective when an occupant is wearing their seat belt properly and sitting upright, well back in their seat.

Do not attach any objects to the side windows or roof pillars as they can interfere with the proper operation of the side curtain airbags.

### ■ When side curtain airbags deploy in a frontal collision


One or both side curtain airbags may inflate in a moderate-to-severe angled frontal collision.

In this case, the side curtain airbags will deploy slightly after the front airbags.

# **Airbag System Indicators**

If a problem occurs in the airbag system, the SRS indicator will come on and a message appears on the multi-information display.

### SRS (Supplemental Restraint System) Indicator

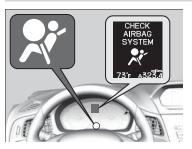

■ When the power mode is set to ON The indicator comes on for a few seconds, then goes off. This tells you the system is working properly.

If the indicator comes on at any other time, or does not come on at all, have the system checked by a dealer as soon as possible. If you don't, your airbags and seat belt tensioners may not work properly when they are needed.

SRS (Supplemental Restraint System) Indicator

# **AWARNING**

Ignoring the SRS indicator can result in serious injury or death if the airbag systems or tensioners do not work properly.

Have your vehicle checked by a dealer as soon as possible if the SRS indicator alerts you to a possible problem.

## Passenger Airbag Off Indicator



# ■ When the passenger airbag off indicator comes on

The indicator comes on to alert you that the passenger's front airbag has been turned off. This occurs when the front passenger's weight sensors detect 65 lbs (29 kg) or less, the weight of an infant or small child, on the seat.

Infants and small children should always ride properly restrained in a back seat. 

Child Safety P. 54

Objects placed on the seat can also cause the indicator to come on.

If the front passenger seat is empty, the passenger's front airbag will not deploy and the indicator will not come on.

#### 

If the indicator comes on with no front passenger and no objects on the passenger's seat, or with an adult riding there, something may be interfering with the weight sensors. Such as:


- An object hanging on the seat or in the seat-back pocket.
- A child seat or other object pressing against the rear of the seat-back.
- A rear passenger pushing or pulling on the back of the front passenger's seat.
- The front seat or seat-back is forced back against an object on the seat or floor behind it.
- An object placed under the front passenger's seat.

If none of these conditions exist, have your vehicle checked by a dealer as soon as possible.

The passenger airbag off indicator may come on and goes off repeatedly if the total weight on the seat is near the airbag cutoff threshold.

# ■ Side Airbag Off Indicator

### ■ When the side airbag off indicator comes on

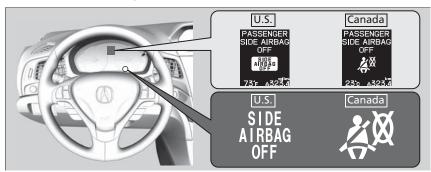

This indicator comes on if the passenger's side airbag has been turned off because the passenger is too small to be sitting in the front seat, is slouching or not sitting upright, or has leaned into the airbag's deployment path.

Unless the passenger is a smaller statured adult or a child, the indicator should go off when the passenger returns to a proper upright sitting position.

#### Side Airbag Off Indicator

When you set the power mode to ON, the indicator should come on for a few seconds and then go out. If it doesn't come on, stays on, or comes on while driving without a passenger in the front seat, have the system checked by a dealer as soon as possible.

# **Airbag Care**

You do not need to, and should not, perform any maintenance on or replace any airbag system components yourself. However, you should have your vehicle inspected by a dealer in the following situations:

### ■ When the airbags have deployed

If an airbag has inflated, the control unit and other related parts must be replaced. Similarly, once an automatic seat belt tensioner has been activated, it must be replaced.

#### ■ When the vehicle has been in a moderate-to-severe collision

Even if the airbags did not inflate, have your dealer inspect the following: the driver's seat position sensor, weight sensors in the passenger's seat, front seat belt tensioners, and each seat belt that was worn during the crash.

### ■ Do not remove or modify a front seat without consulting a dealer

This would likely disable the driver's seat position sensor or the passenger's weight sensors. If it is necessary to remove or modify a front seat to accommodate a person with disabilities, contact an Acura dealer, or for U.S. vehicles, Acura Client Relations at 1-800-382-2238 and for Canadian vehicles, Canadian Acura Client Service at 1-888-9-ACURA-9.

#### 

We recommend against the use of salvaged airbag system components, including the airbag, tensioners, sensors, and control unit.

# **Child Safety**

# **Protecting Child Passengers**

Each year, many children are injured or killed in vehicle crashes because they are either unrestrained or not properly restrained. In fact, vehicle accidents are the number one cause of death of children ages 12 and under.

To reduce the number of child deaths and injuries, every state, Canadian province and territory requires that infants and children be properly restrained when they ride in a vehicle.

### **Children should sit properly restrained in a rear seat.** This is because:



- An inflating front or side airbag can injure or kill a child sitting in the front seat.
- A child in the front seat is more likely to interfere with the driver's ability to safely control the vehicle.
- Statistics show that children of all sizes and ages are safer when they are properly restrained in a rear seat.

# **AWARNING**

Children who are unrestrained or improperly restrained can be seriously injured or killed in a crash.

Any child too small for a seat belt should be properly restrained in a child seat. A larger child should be properly restrained with a seat belt, using a booster seat if necessary.

The National Highway Traffic Safety Administration and Transport Canada recommend that all children ages 12 and under be properly restrained in a rear seat. Some states or provinces/territories have laws restricting where children may ride.

- Any child who is too small to wear a seat belt correctly must be restrained in an approved child seat that is properly secured to the vehicle using either the lap belt portion of the lap/shoulder belt or the lower anchors of the LATCH system.
- Never hold a child on your lap because it is impossible to protect them in the event of a collision.
- Never put a seat belt over yourself and a child. During a crash, the belt would likely press deep into the child and cause serious or fatal injuries.
- Never let two children use the same seat belt. Both children could be very seriously injured in a crash.
- Do not allow children to operate the doors, windows or seat adjustments.
- Do not leave children in the vehicle unattended, especially in hot weather when
  the inside of the vehicle can get hot enough to kill them. They could also activate
  vehicle controls causing it to move unexpectedly.

▶ Protecting Child Passengers

## **AWARNING**

Allowing a child to play with a seat belt or wrap one around their neck can result in serious injury or death.

Instruct children not to play with any seat belt and make sure any unused seat belt a child can reach is buckled, fully retracted, and locked.

To deactivate a lockable retractor, release the buckle and allow the seat belt to wind up all the way.


To remind you of the passenger's front airbag hazards and child safety, your vehicle has warning labels on the dashboard (U.S. models) and on the front visors. Please read and follow the instructions on these labels.

Safety Labels P. 67

# Safety of Infants and Small Children

### ■ Protecting Infants

An infant must be properly restrained in a rear-facing, reclining child seat until the infant reaches the seat maker's weight or height limit for the seat, and the infant is at least one year old.

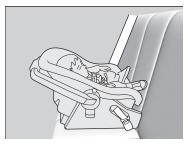

■ Positioning a rear-facing child seat Child seats must be placed and secured in a rear seating position.

When properly installed, a rear-facing child seat may prevent the driver or a front passenger from moving their seat all the way back, or from locking their seat-back in the desired position.

It can also interfere with proper operation of the passenger's advanced front airbag system.

**Airbags** P. 39

If this occurs, we recommend that you install the child seat directly behind the front passenger's seat, move the seat as far forward as needed, and leave it unoccupied. Or, you may wish to get a smaller rear-facing child seat.

▶ Protecting Infants

# **AWARNING**

Placing a rear-facing child seat in the front seat can result in serious injury or death during a crash.


Always place a rear-facing child seat in the rear seat, not the front.

Rear-facing child seats should never be installed in a forward facing position.

Always refer to the child seat manufacturer's instructions before installation.

## ■ Protecting Smaller Children

If a child is at least one year old and within the weight range indicated by the child seat manufacturer, the child should be properly restrained in a firmly secured forward-facing child seat.

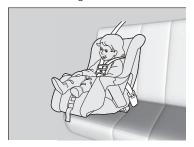

■ Forward-facing child seat placement We strongly recommend placing a forward-facing child seat in a rear seating position.

Placing a forward-facing child seat in the front seat can be hazardous, even with advanced front airbags that automatically turn the passenger's front airbag off. A rear seat is the safest place for a child.

▶ Protecting Smaller Children

## **AWARNING**

Placing a forward-facing child seat in the front seat can result in serious injury or death if the front airbag inflates.

If you must place a forward-facing child seat in front, move the vehicle seat as far back as possible, and properly restrain the child.

Educate yourself about the laws and regulations regarding child seat use where you are driving, and follow the child seat manufacturer's instructions.

Many experts recommend use of a rear-facing seat for a child up to two years old if the child's height and weight are appropriate for a rear-facing seat.

### ■ Selecting a Child Seat

Most child seats are LATCH-compatible (Lower Anchors and Tethers for CHildren). Some have a rigid-type connector, while others have a flexible-type connector. Both are equally easy to use. Some existing and previously owned child seats can only be installed using the seat belt. Whichever type you choose, follow the child seat manufacturer's use and care instructions as well as the instructions in this manual. Proper installation is key to maximizing your child's safety.

In seating positions and vehicles not equipped with LATCH, a LATCH compatible child seat can be installed using the seat belt and a top tether for added security. This is because all child seats are required to be designed so that they can be secured with a lap belt or the lap part of a lap/shoulder belt. In addition, the child seat manufacturer may advise that a seat belt be used to attach a LATCH-compatible seat once a child reaches a specified weight. Please read the child seat owner's manual for proper installation instructions.

#### ■ Important consideration when selecting a child seat

Make sure the child seat meets the following three requirements:

- The child seat is the correct type and size for the child.
- The child seat is the correct type for the seating position.
- The child seat is compliant with Federal Motor Vehicle Safety Standard 213 or Canadian Motor Vehicle Safety Standard 213.

#### Selecting a Child Seat

Installation of a LATCH-compatible child seat is simple.


LATCH-compatible child seats have been developed to simplify the installation process and reduce the likelihood of injuries caused by incorrect installation.

### ■ Installing a LATCH-Compatible Child Seat

A LATCH-compatible child seat can be installed in either of the two outer rear seats. A child seat is attached to the lower anchors with either the rigid or flexible type of connectors.





**1.** Locate the lower anchors under the marks

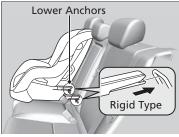

- 2. Place the child seat on the vehicle seat then attach the child seat to the lower anchors according to the instructions that came with the child seat.
  - ➤ When installing the child seat, make sure that the lower anchors are not obstructed by the seat belt or any other object.

Continued 59

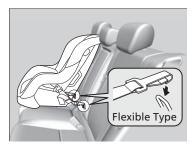

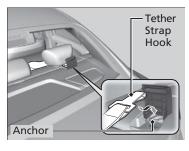

- **3.** Open the tether anchor cover behind the head restraint.
- **4.** Raise the head restraint to its highest position, then route the tether strap between the head restraint legs, and secure the tether strap hook onto the anchor.
- **5.** Tighten the tether strap as instructed by the child seat maker.
- **6.** Make sure the child seat is firmly secured by rocking it forward and back and side to side; little movement should be felt.
- **7.** Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated, and the belt is fully retracted and locked.

#### 

For your child's safety, when using a child seat installed using the LATCH system, make sure that the seat is properly secured to the vehicle. A child seat that is not properly secured will not adequately protect a child in a crash and may cause injury to the child or other vehicle occupants.

### ■ Installing a Child Seat with a Lap/Shoulder Seat Belt



- 1. Place the child seat on the vehicle seat.
- **2.** Route the seat belt through the child seat according to the seat maker's instructions, and insert the latch plate into the buckle.
  - Insert the latch plate fully until it clicks.

☑Installing a Child Seat with a Lap/Shoulder Seat Belt

A child seat that is not properly secured will not adequately protect a child in a crash and may cause injury to the child or other vehicle occupants.





- **3.** Slowly pull the shoulder part of the belt all the way out until it stops. This activates the lockable retractor.
- **4.** Let the seat belt completely wind up into the retractor, then try to pull it out to make sure the retractor is locked.
  - ▶ If you are able to pull the shoulder belt out, the lockable retractor is not activated. Pull the seat belt all the way out, and repeat steps 3 – 4.
- **5.** Grab the shoulder part of the seat belt near the buckle, and pull up to remove any slack from the lap part of the belt.
  - When doing this, place your weight on the child seat and push it into the vehicle seat.



- **6.** Make sure the child seat is firmly secured by rocking it forward and back and side to side; little movement should be felt.
- **7.** Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated, and the belt is fully retracted and locked.

≥ Installing a Child Seat with a Lap/Shoulder Seat Belt


To deactivate a lockable retractor, release the buckle and allow the seat belt to wind up all the way.

### Adding Security with a Tether

Tether

Strap


Hook

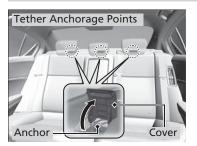

**Outer Position** 

A tether anchorage point is provided behind each rear seating position. A child seat that is installed with a seat belt and comes with a tether can use the tether for additional security.

- **1.** Locate the appropriate tether anchorage point and lift the cover.
- **2.** Raise the head restraint to its highest position, then route the tether strap through the head restraint legs. Make sure the strap is not twisted.

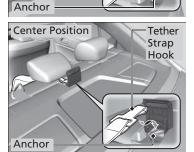

- **3.** Secure the tether strap hook onto the anchor.
- **4.** Tighten the tether strap as instructed by the child seat manufacturer.

#### ■ Adding Security with a Tether

Since a tether can provide additional security to the lap/shoulder seat belt installation, we recommend using a tether whenever one is available.

# **Safety of Larger Children**

# **■ Protecting Larger Children**

The following pages give instructions on how to check proper seat belt fit, what kind of booster seat to use if one is needed, and important precautions for a child who must sit in front.

## ■ Checking Seat Belt Fit

When a child is too big for a child seat, secure the child in a rear seat using the lap/ shoulder seat belt. Have the child sit upright and all the way back, then answer the following questions.



#### ■ Checklist

- Do the child's knees bend comfortably over the edge of the seat?
- Does the shoulder belt cross between the child's neck and arm?
- Is the lap part of the seat belt as low as possible, touching the child's thighs?
- Will the child be able to stay seated like this for the whole trip?

If you answer yes to all these questions, the child is ready to wear the lap/shoulder seat belt correctly. If you answer no to any question, the child needs to ride on a booster seat until the seat belt fits properly without a booster seat.

Safety of Larger Children

# **AWARNING**

Allowing a child age 12 or under to sit in front can result in injury or death if the passenger's front airbag inflates.

If a larger child must ride in front, move the vehicle seat as far to the rear as possible, have the child sit up properly and wear the seat belt properly, using a booster seat if needed.

#### Booster Seats



If a lap/shoulder seat belt cannot be used properly, position the child in a booster seat in a rear seating position. For the child's safety, check that the child meets the booster seat manufacturer's recommendations.

### Protecting Larger Children-Final Checks

Your vehicle has a rear seat where children can be properly restrained. If you ever have to carry a group of children, and a child must ride in front:

- Make sure you read and fully understand the instructions and safety information in this manual.
- Move the front passenger seat as far back as possible.
- Have the child sit upright and well back in the seat.
- Check that the seat belt is properly positioned so that the child is secure in the seat.

#### ■ Monitoring child passengers

We strongly recommend that you keep an eye on child passengers. Even older, more mature children sometimes need to be reminded to fasten their seat belts and sit up properly.

#### ≫ Booster Seats

When installing a booster seat, make sure to read the instructions that came with it, and install the seat accordingly.

There are high- and low-type booster seats. Choose a booster seat that allows the child to wear the seat belt correctly.

Some U.S. states and Canadian provinces and territories require children to use a booster seat until they reach a given age or weight (e.g. 6 years or 60 lbs). Be sure to check current laws in the state or province, or territory where you intend to drive.

# **Exhaust Gas Hazard**

### **Carbon Monoxide Gas**

The engine exhaust from this vehicle contains carbon monoxide, a colorless, odorless, and highly toxic gas. As long as you properly maintain your vehicle, carbon monoxide gas will not get into the interior.

#### ■ Have the exhaust system inspected for leaks whenever

- The exhaust system is making an unusual noise.
- The exhaust system may have been damaged.
- The vehicle is raised for an oil change.

When you operate a vehicle with the trunk open, airflow can pull exhaust gas into the interior and create a hazardous condition. If you must drive with the trunk open, open all the windows and set the climate control system as shown below.

- 1. Select the fresh air mode.
- 2. Select the mode.
- 3. Set the fan speed to high.
- **4.** Set the temperature control to a comfortable setting.

Adjust the climate control system in the same manner if you sit in your parked vehicle with the engine running.

## **AWARNING**

Carbon monoxide gas is toxic.

Breathing it can cause unconsciousness and even kill you.

Avoid any enclosed areas or activities that expose you to carbon monoxide.

An enclosed area such as a garage can quickly fill up with carbon monoxide gas.


Do not run the engine with the garage door closed. Even when the garage door is open, drive out of the garage immediately after starting the engine.

# Safety Labels

### **Label Locations**

These labels are in the locations shown. They warn you of potential hazards that can cause serious injury or death. Read these labels carefully.

If a label comes off or becomes hard to read (except for the U.S. dashboard label which may be removed by the owner), contact a dealer for a replacement.

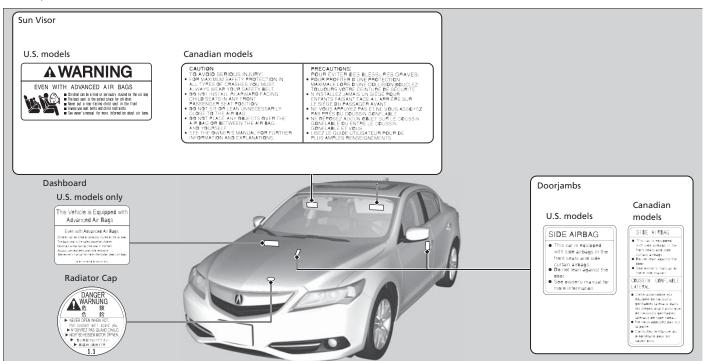

# **Instrument Panel**

This chapter describes the buttons, indicators, and gauges that are used while driving.

Indicators	7
Multi-Information Display Warnin	g and
Information Messages	8
Gauges and Multi-Information D	isplay
Gauges	8
Multi-Information Display	8

Indicator	Name	On/Blinking	Explanation	Message
U.S. BRAKE  Canada  (Red)	Parking Brake and Brake System Indicator (Red)	<ul> <li>Comes on for a few seconds when you set the power mode to ON, then goes off if the parking brake has been released.</li> <li>Comes on when the parking brake is applied, and goes off when it is released.</li> <li>Comes on when the brake fluid level is low.</li> <li>Comes on if there is a problem with the brake system.</li> <li>The beeper sounds and the indicator comes on if you drive with the parking brake not fully released.</li> </ul>	<ul> <li>Comes on while driving - Make sure the parking brake is released. Check the brake fluid level.</li> <li>What to do when the indicator comes on while driving P. 339</li> <li>Comes on along with the ABS indicator - Have the vehicle checked by a dealer.</li> <li>If the Brake System Indicator (Red) Comes On P. 339</li> </ul>	RELEASE PARKING BRAKE  73°F A323.4  LOW BRAKE FLUID  BRAKE  73°F A323.4  CHECK BRAKE SYSTEM  BRAKE SYSTEM  BRAKE  73°F A323.4

Indicator	Name	On/Blinking	Explanation	Message
U.S.  BRAKE SYSTEM  Canada  (Amber)	Brake System Indicator (Amber)	<ul> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Comes on if there is a problem with the cooperative control with regenerative braking.</li> </ul>	Stays on constantly - Have the vehicle checked by a dealer. Normal braking is not affected.	CHECK BRAKE SYSTEM BRAKE SYSTEM 73°F A323.4  Canada CHECK BRAKE SYSTEM  (!) 23°C A323.4
<b>!</b>	Malfunction Indicator Lamp	<ul> <li>Comes on when you set the power mode to ON, and goes off either when the engine starts or after several seconds if the engine is not started. If "readiness codes" have not been set, it blinks five times before it goes off.</li> <li>Comes on if there is a problem with the emissions control system.</li> <li>Blinks when a misfire in the engine's cylinders is detected.</li> </ul>	<ul> <li>Readiness codes are part of the on board diagnostics for the emissions control systems.</li> <li>Testing of Readiness Codes P. 351</li> <li>Comes on while driving - Have the vehicle checked by a dealer.</li> <li>Blinks while driving - Stop in a safe place where there are no flammable objects. Stop the engine for 10 minutes or more, and wait for it to cool down. Then, take the vehicle to a dealer.</li> <li>If the Malfunction Indicator Lamp Comes On or Blinks P. 338</li> </ul>	CHECK EMISSION SYSTEM  T3° A323.4

Indicator	Name	On/Blinking	Explanation	Message
==	12 Volt Battery Charging System Indicator	<ul> <li>Comes on when you set the power mode to ON, and goes off when the engine starts.</li> <li>Comes on when the 12 volt battery is not charging.</li> </ul>	• Comes on while driving - Turn off the climate control system and rear defogger in order to reduce electricity consumption.  ▶ If the Charging System Indicator Comes On P. 337	CHECK CHARGING SYSTEM - + 73°F A323.4
	Shift Lever Position Indicator	<ul> <li>Indicates the current shift lever position.</li> </ul>	<b>ᠫ Shifting</b> P. 231	-
	Transmission Indicator	Blinks if the transmission system has a problem.	Blinks while driving - Avoid sudden starts and acceleration and have the vehicle checked by a dealer immediately.	CHECK TRANSMISSION  TABLE  73°F A323.4
M <u>C</u>	<b>M</b> (7-speed manual shift mode) Indicator/ Shift Indicator	• Comes on when the 7-speed manual shift mode is applied.	<b>▶ 7-Speed Manual Shift Mode</b> P. 233	-

Indicator	Name	On/Blinking	Explanation	Message
	Seat Belt Reminder Indicator	<ul> <li>Comes on and the beeper sounds if you are not wearing a seat belt when you set the power mode to ON.</li> <li>If the front passenger is not wearing a seat belt, the indicator comes on a few seconds later.</li> <li>Blinks while driving if either you or the front passenger has not fastened a seat belt. The beeper sounds and the indicator blinks at regular intervals.</li> </ul>	<ul> <li>The beeper stops and the indicator goes off when you and the front passenger fasten their seat belts.</li> <li>Stays on after you or the front passenger has fastened the seat belt - A detection error may have occurred in the sensor. Have the vehicle checked by a dealer.</li> <li>Seat Belt Reminder P. 33</li> </ul>	FASTEN SEAT BELT  73°F A323.4  FASTEN PASSENGER SEAT BELT  73°F A323.4
	Low Fuel Indicator	<ul> <li>Comes on when the fuel reserve is running low (approximately 1.9 U.S. gal./7.5 Liter left).</li> <li>Blinks if there is a problem with the fuel gauge.</li> </ul>	<ul> <li>Comes on - Refuel your vehicle as soon as possible.</li> <li>Blinks - Have the vehicle checked by a dealer.</li> </ul>	LOW FUEL
(ABS)	Anti-lock Brake System ( <b>ABS</b> ) Indicator	<ul> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>If it comes on at any other time, there is a problem with the ABS.</li> </ul>	• Stays on constantly - Have the vehicle checked by a dealer. With this indicator on, your vehicle still has normal braking ability but no anti-lock function.  ■ Anti-lock Brake System (ABS) P. 250	CHECK ABS SYSTEM (ABS) 73°F A323.4

Indicator	Name	On/Blinking	Explanation	Message
	Supplemental Restraint System Indicator	<ul> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Comes on if a problem with any of the following is detected:</li> <li>Supplemental restraint system</li> <li>Side airbag system</li> <li>Side curtain airbag system</li> <li>Seat belt tensioner</li> </ul>	Stays on constantly or does not come on at all - Have the vehicle checked by a dealer.	CHECK AIRBAG SYSTEM 73°F A323.4
	Vehicle Stability Assist (VSA®) System Indicator	<ul> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Blinks when VSA® is active.</li> <li>Comes on if there is a problem with the VSA® system, hill start assist system, creep aid system, or brake assist system.</li> </ul>	• Stays on constantly - Have the vehicle checked by a dealer.  ▶ Vehicle Stability Assist (VSA®), aka Electronic Stability Control (ESC), System P. 243	CHECK VSA SYSTEM  73°F A323.4  CHECK HILL START ASSIST SYSTEM  73°F A323.4
OFF	Vehicle Stability Assist (VSA®) OFF Indicator	<ul> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Comes on when you deactivate VSA®.</li> </ul>	▶ VSA® On and Off P. 244	_

Indicator	Name	On/Blinking	Explanation	Message
T7:	Low Oil Pressure Indicator	<ul> <li>Comes on when you set the power mode to ON, and goes off when the engine starts.</li> <li>Comes on when the engine oil pressure is low.</li> </ul>	• Comes on while driving - Immediately stop in a safe place.  ☑ If the Low Oil Pressure Indicator Comes On P. 337	CHECK ENGINE OIL LEVEL ********************************
	Door and Trunk Open Indicator	<ul> <li>Comes on for a few seconds if you set the power mode to ON, then goes off.</li> <li>Comes on if any door or the trunk is not completely closed.</li> <li>The beeper sounds and the indicator comes on if any door is opened while driving.</li> </ul>	Goes off when all doors and the trunk are closed.	DOOR & TRUNK OPEN
<b>⊕!</b>	Electric Power Steering (EPS) System Indicator	<ul> <li>Comes on when you set the power mode to ON, and goes off when the engine starts.</li> <li>Comes on if there is a problem with the EPS system.</li> </ul>	Stays on constantly or does not come on at all - Have the vehicle checked by a dealer.  If the Electric Power Steering (EPS) System Indicator Comes On P. 339	CHECK POWER STEERING SYSTEM  73°F A323.4
AUTO STOP	Auto Idle Stop Indicator	Blinks when Auto Idle Stop is in operation. The engine automatically shuts off.	<b>▶</b> Auto Idle Stop P. 236	_

Indicator	Name	On/Blinking	Explanation	Message
U.S. models only	Low Tire Pressure/ TPMS Indicator	<ul> <li>Comes on for a few seconds when you set the power mode to ON.</li> <li>Comes on if the tire pressure of any of the tires becomes significantly low.</li> <li>Blinks for about one minute, and then stays on if there is a problem with the TPMS or when a compact spare tire is temporarily installed.</li> </ul>	<ul> <li>Comes on while driving - Stop in a safe place, check tire pressures, and inflate the tire(s) if necessary.</li> <li>Blinks and remains on - Have the vehicle checked by a dealer.</li> <li>☑ If the Low Tire Pressure/TPMS Indicator Comes On or Blinks P. 340</li> </ul>	CHECK TIRE PRESSURE  73°F A323.4  CHECK TPMS SYSTEM  TPMS  73°F A323.4
i	System Message Indicator	<ul> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Comes on along with a beep when a problem is detected. A system message on the multi-information display appears at the same time.</li> </ul>	<ul> <li>While the indicator is on, press the ▲①/▼ (information) button to see the message again.</li> <li>Refer to the Indicators information in this chapter when a system message appears on the multi-information display. Take the appropriate action for the message.</li> <li>The multi-information display does not return to the normal screen unless the warning is canceled, or the ▲①/▼ button is pressed.</li> </ul>	-

Indicator	Name	On/Blinking	Explanation	Message
IMA	<b>IMA</b> System Indicator	<ul> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Comes on if there is a problem with the hybrid system.</li> </ul>	<ul> <li>Remains on or does not come on at all-Avoid high speed driving and have the vehicle checked by a dealer as soon as possible.</li> <li>If the IMA Indicator Comes On P. 340</li> </ul>	CHECK IMA SYSTEM IMA 73°F A323.4
<b>+ +</b>	Turn Signal Indicators	<ul> <li>Blink when you operate the turn signal lever.</li> <li>Blink along with all turn signals if you press the hazard warning button.</li> </ul>	• Does not blink or blinks rapidly - A turn signal light bulb has blown. Change the bulb immediately.  ■ Replacing Light Bulbs P. 286, 288	-
	High-Beam Indicator	Comes on when the high beam headlights are on.	_	_
<u></u> 0 0€	Lights On Indicator	• Comes on whenever the light switch is on, or in <b>AUTO</b> when the exterior lights are on.	<ul> <li>If you set the power mode to ACCESSORY or VEHICLE OFF (LOCK) while the exterior lights are on, a chime sounds when the driver's door is opened.</li> </ul>	-
10	Fog Light Indicator	• Comes on when the fog lights are on.	_	_

Indicator	Name	On/Blinking	Explanation	Message
U.S.  SIDE AIRBAG OFF Canada	Side Airbag Off Indicator	<ul> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Comes on when the passenger side airbag system is automatically shut off.</li> </ul>	<ul> <li>It does not mean there is a problem with your side airbags.</li> <li>Comes on when nobody is sitting in the passenger seat - Have the vehicle checked by a dealer.</li> <li>Comes on when someone is sitting in the seat - Have the passenger sit properly.</li> </ul>	U.S.  PASSENGER SIDE AIRBAG OFF AIRBAG OFF AIRBAG OFF ASSENGER SIDE AIRBAG OFF
c=== <b>(##</b> )	Immobilizer System Indicator	<ul> <li>Comes on briefly when you set the power mode to ON, then goes off.</li> <li>Comes on if the immobilizer system cannot recognize the key information.</li> </ul>	<ul> <li>Blinks - You cannot start the engine. Set the power mode to VEHICLE OFF (LOCK), then select the ON mode again.</li> <li>Repeatedly blinks - The system may be malfunctioning. Have the vehicle checked by a dealer.</li> <li>Do not attempt to alter this system or add other devices to it. Electrical problems can occur.</li> </ul>	-

Indicator	Name	On/Blinking	Explanation	Message
Indicator	Security System Alarm Indicator	Blinks when the Security System Alarm has been set.	Security System Alarm P. 118	-
~j	Keyless Access System Indicator	<ul> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Comes on as soon as a problem is detected in the keyless access system or keyless starting system.</li> </ul>	Have your vehicle checked by a dealer.	CHECK KEYLESS ACCESS SYSTEM
C <sub>E</sub>	Low Temperature Indicator	Comes on when the engine coolant temperature is low.	• If the indicator stays on after the engine has reached normal operating temperature, there may be a problem with the temperature sensors. Have the vehicle inspected by a dealer.	-

Indicator	Name	On/Blinking	Explanation	Message
ECON	<b>ECON</b> Mode Indicator	<ul> <li>Comes on for a few seconds when you set the power mode to ON, then goes off.</li> <li>Comes on when the <b>ECON</b> mode is on.</li> </ul>	<b>■ ECON Button</b> P. 239	ECON ON 73°F 002300
CRUISE MAIN	CRUISE MAIN Indicator	• Comes on when you press the <b>CRUISE</b> button.	<b>⊋</b> Cruise Control P. 240	_
CRUISE CONTROL	CRUISE CONTROL Indicator	• Comes on if you have set a speed for cruise control.	<b>☑ Cruise Control</b> P. 240	-

# **Multi-Information Display Warning and Information Messages**

The following messages appear only on the multi-information display. Press the  $\boxed{\blacktriangle \textcircled{\scriptsize{1}}}/\boxed{\blacktriangledown}$  (information) button to see the message again with the system message indicator on.

Message	Condition	Explanation
TIGHTEN FUEL CAP PAS 73° A323.4	Appears when the fuel fill cap is loose or is not installed.	<b>☑ Check/Tighten Fuel Cap Message</b> P. 338
LOW WASHER FLUID 23°C A323.4	Appears when the washer fluid is low.	<ul> <li>Refill washer fluid.</li> <li>▶ Refilling Window Washer Fluid P. 281</li> </ul>
SERVICE DUE SOON A12345 73°F A323.4	<ul> <li>Appears when the scheduled maintenance is due soon.</li> <li>Consequently, SERVICE DUE NOW and SERVICE PAST DUE follow.</li> </ul>	<b>▶ Maintenance Minder™</b> P. 263

Message	Condition	Explanation
KEEP DRIVING TO CHARGE HYBRID BATTERY	Appears when the IMA battery is significantly low.	Drive continuously or, if necessary, allow the vehicle to idle in an open area until the message disappears.
ENGINE TOO HOT E 73°F A325.4	Appears when the engine coolant temperature gets abnormally high.	<b>D Overheating</b> P. 335
ENGINE TEMPERATURE NEAR LIMIT	Appears when the engine coolant temperature gets high.	Drive slowly to prevent overheating.
CHECK CHARGING SYSTEM - + 73°F A323.4	<ul> <li>Appears when there is a problem with the sensor on the battery.</li> <li>Appears when the 12 volt battery is not charging.</li> </ul>	<ul> <li>Have your vehicle checked by a dealer.</li> <li>Checking the 12 Volt Battery P. 303</li> <li>Appears along with the 12 volt battery charging system indicator - Turn off the climate control system and rear defogger to reduce electricity consumption.</li> <li>If the Charging System Indicator Comes On P. 337</li> </ul>

Message	Condition	Explanation
CHECK STARTER SYSTEM STARTER SYSTEM 73°F A323.4  Canada  CHECK STARTER SYSTEM  1.23°C A323.4	Appears when the starter system has a problem.	As a temporary measure, press and hold the ENGINE START/STOP button for 15 seconds while pressing the brake pedal and manually start the engine.  Have the vehicle checked by a dealer.
TO TURN VEHICLE OFF: PUSH TWICE	<ul> <li>Appears after the driver's door is opened when the power mode is in ACCESSORY.</li> </ul>	• Press the <b>ENGINE START/STOP</b> button twice with your foot off the brake pedal to change the power mode to VEHICLE OFF (LOCK).
ACCESSORY MODE	Appears when the power mode is in ACCESSORY.	_

Message	Condition	Explanation
KEYLESS REMOTE NOT DETECTED  73°F A323.4	• Appears when you close the door with the power mode in ON without the keyless access remote inside the vehicle.	<ul> <li>Disappears when you bring the keyless remote back inside the vehicle and close the door.</li> <li>★ Keyless Access Remote Reminder P. 125</li> </ul>
CHANGE KEYLESS REMOTE BATTERY  A T T T T T T T T T T T T T T T T T T	• Appears when the keyless access remote battery becomes weak.	<ul> <li>Replace the battery as soon as possible.</li> <li>▶ Replacing the Button Battery P. 304</li> </ul>
TO TURN ACCESSORY ON:PUSH	• Appears three seconds after the <b>TO START ENGINE</b> message appears.	<b>▶ Starting the Engine</b> P. 226
TO START ENGINE: BRAKE + PUSH	• Appears after you unlock and open the driver's door.	<b>▶ Starting the Engine</b> P. 226

Message	Condition	Explanation
TO UNLOCK WHEEL: PUSH+ROTATE +	Appears when the steering wheel is locked.	Move the steering wheel left and right after pressing the ENGINE START/STOP button.
SHIFT TO PARK	<ul> <li>Appears if you push the ENGINE START/STOP button to turn the engine off without the shift lever in P.</li> </ul>	<ul> <li>Push the ENGINE START/STOP button twice after moving the shift lever to P.</li> </ul>
TO START. HOLD REMOTE NEAR START BUTTON	<ul> <li>Appears if the keyless access remote battery is too weak to start the engine or the key is not within operating range to start the engine.</li> <li>A beeper sounds six times.</li> </ul>	<b>If the Keyless Access Remote Battery is Weak</b> P. 330

# Gauges and Multi-Information Display

# Gauges

Gauges include the speedometer, tachometer, fuel gauge, and related indicators. They are displayed when the power mode is in ON.

# Speedometer

Displays your driving speed in mph or km/h.

### Tachometer

Shows the number of engine revolutions per minute.

# Fuel Gauge

Displays the amount of fuel left in the fuel tank.

# Charge/Assist Gauge

### ■ IMA Motor Assist (ASST)

The degree to which the IMA motor is assisting the engine is displayed by the needle on the **ASST** side.

#### ■ Battery Charge in Progress (CHRG)

The degree to which the IMA battery is being charged is displayed by the needle on the **CHRG** side.

The remaining battery charge level is displayed on the multi-information display.

**▶ IMA Battery Charge Level Indicator/Power Flow Monitor** P. 93

#### ∑Fuel Gauge

#### NOTICE

You should refuel when the needle approaches E. Running out of fuel can cause the engine to misfire, damaging the catalytic converter.


The actual amount of remaining fuel may differ from the fuel gauge reading.


# **Multi-Information Display**

The multi-information display shows the odometer, trip meter, outside temperature indicator, and other gauges. It also displays important messages such as warnings and other helpful information.

# **■** Switching the Display

Press the  $\boxed{\blacksquare}$  (information) button or the **SEL/RESET** button to change the display.

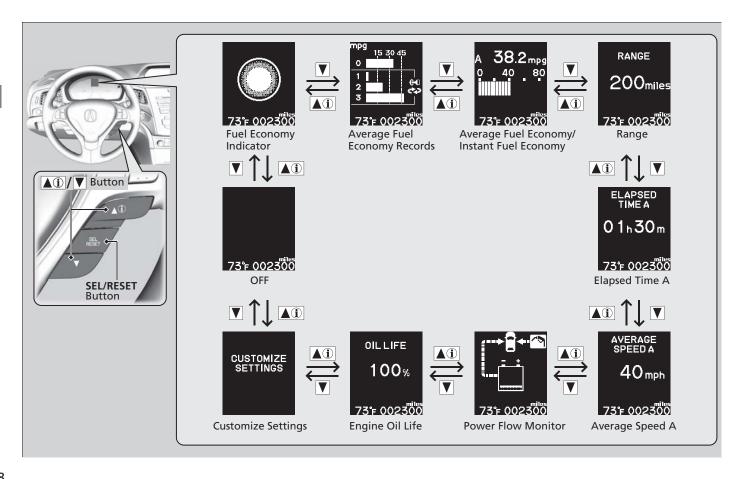

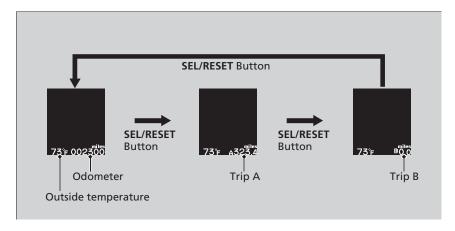

## Odometer

Shows the total number of miles or kilometers that your vehicle has accumulated.

## ■ Trip Meter

Shows the total number of miles or kilometers driven since the last reset. Meters A and B can be used to measure two separate trips.

### ■ Resetting a trip meter

To reset a trip meter, display it, then press and hold the **SEL/RESET** button. The trip meter is reset to **0.0**.

#### ∑Trip Meter

Switch between trip meter A and trip meter B by pressing the **SEL/RESET** button.

### Outside Temperature

Shows the outside temperature in Fahrenheit (U.S.) or Celsius (Canada).


### ■ Adjusting the outside temperature display

Adjust the temperature reading up to  $\pm 5^{\circ}F$  or  $\pm 3^{\circ}C$  if the temperature reading seems incorrect.

### ■ Fuel Economy Indicator

The fuel economy indicator changes its size while driving. The indicator shrinks with aggressive acceleration and deceleration, and grows back bigger again as fuel economy gets better, and the halo appears around it when driving in the most fuel efficient style.

Keep the indicator size as big as possible.

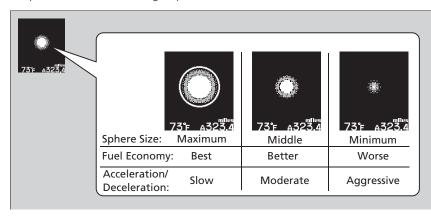

#### Outside Temperature


The temperature sensor is in the front bumper. Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 19 mph (30 km/h).

It may take several minutes for the display to be updated after the temperature reading has stabilized.

Use the multi-information display's customized features to correct the temperature.

Customized Features P. 95

### Average Fuel Economy Records

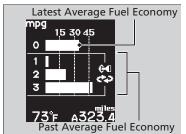

Shows the average fuel economy for the last three driving cycles (1-3), and the current driving cycle (0) in mpg or I/100 km.

Each time you set the power mode to ON, the display is updated, and the oldest record is deleted

### Average Fuel Economy

Shows the estimated average fuel economy of each trip meter in mpg (U.S.) or I/100 km (Canada). The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

# ■ Instant Fuel Economy

Shows the instant fuel economy as a bar graph in mpg or I/100 km.

# Range

Shows the estimated distance you can travel on the remaining fuel. This distance is estimated from the fuel economy of your previous trips.

# Elapsed Time

Shows the time elapsed since Trip A or Trip B was reset.

#### ■ Average Fuel Economy

You can change when to reset the average fuel economy is reset.

Customized Features P. 95

#### ∑Elapsed Time

You can change when to reset the elapsed time.

# Average Speed


Shows the average speed in mph or km/h since Trip A or Trip B was reset.

### 

You can change when to reset the average speed.

### ■ IMA Battery Charge Level Indicator/Power Flow Monitor

Displays engine and IMA motor power flow and whether the system is assisting the engine or charging the battery.

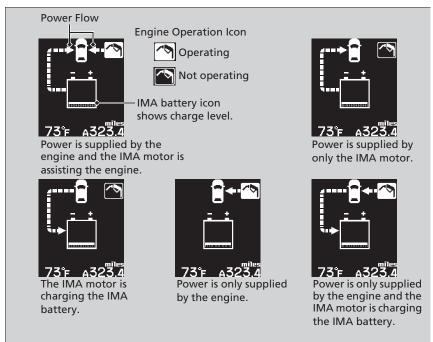

#### ≥ IMA Battery Charge Level Indicator/Power Flow Monitor

The IMA battery charge level may decrease rapidly under the following conditions:

- When the 12 volt battery has been replaced.
- When the IMA battery has been disconnected.
- When the IMA battery control system corrects its reading.

The charge level reading will be corrected automatically while driving.

If the IMA battery becomes too hot or too cold, the battery stops outputting to protect itself from damages. This disables the hybrid system assist and Auto Idle Stop, even though the battery is wellcharged.

It takes a short time to normalize the IMA battery's output power depending on the weather.

# **■** Engine Oil Life

Shows the remaining oil life and Maintenance Minder  $^{\!\mathsf{TM}}.$ 


**▶ Maintenance Minder™** P. 263

### Customized Features

Use the multi-information display to customize certain features.

#### ■ How to customize

Press the **A )**/**v** button to select **CUSTOMIZE SETTINGS** while the power mode is in ON.

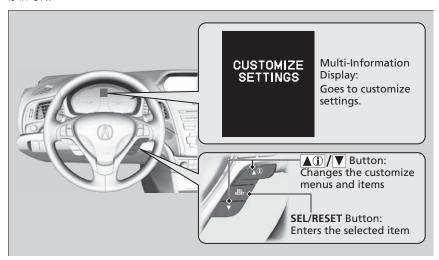

#### ∑Customized Features


To customize other features, press the ▲①/▼ button.

**≥** List of customizable options P. 97

When you customize settings: Shift to  $\boxed{P}$ 

#### ■ Customization flow

Press the **A**()/**V** button to select **CUSTOMIZE SETTINGS** and press the **SEL**/**RESET** button.

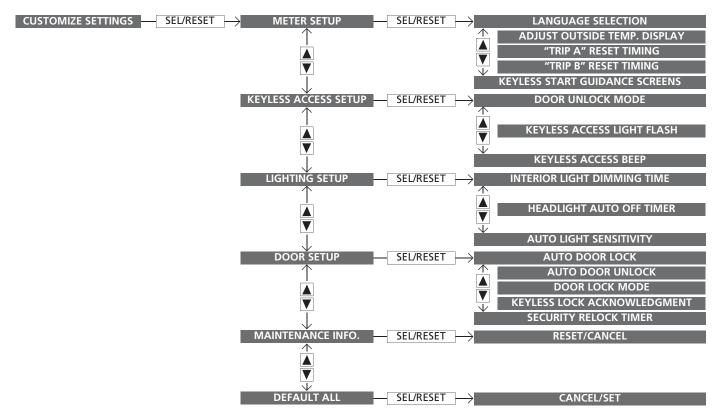

# ■ List of customizable options

Setup Group	Customizable Features	Description	Selectable settings
	LANGUAGE SELECTION	Changes the displayed language.	ENGLISH*1/FRENCH/ SPANISH
	ADJUST OUTSIDE TEMP. DISPLAY	Adjusts the temperature reading by a few degrees.	-5°F ~ ±0°F*1 ~ +5°F (U.S.)
METER SETUP			-3°C ~ ±0°C*1 ~ +3°C (Canada)
	"TRIP A" RESET TIMING	Changes the setting of how to reset trip meter A, average fuel economy A, average speed A, and elapsed time A.	WITH REFUEL/IGN OFF/ MANUALLY RESET*1
	"TRIP B" RESET TIMING	Changes the setting of how to reset trip meter B, average fuel economy B, average speed B, and elapsed time B.	WITH REFUEL/IGN OFF/ MANUALLY RESET*1
	KEYLESS START GUIDANCE SCREENS	Changes the display of the keyless start guidance screens.	ON*1/OFF
KEYLESS ACCESS SETUP	DOOR UNLOCK MODE	Changes which doors unlock when you grab the driver's door handle.	DRIVER DOOR ONLY*1/ALL DOORS
	KEYLESS ACCESS LIGHT FLASH	Causes some exterior lights to blink when you unlock/lock the doors.	ON*1/OFF
	KEYLESS ACCESS BEEP	Causes the beeper to sound when you unlock/lock the doors.	ON*1/OFF

<sup>\*1:</sup> Default Setting

97


Setup Group	Customizable Features	Description	Selectable settings	
	INTERIOR LIGHT DIMMING TIME	Changes the length of time the interior lights stay on after you close the doors.	60sec/30sec*1/15sec	
LIGHTING SETUP	HEADLIGHT AUTO OFF TIMER	Changes the length of time the exterior lights stay on after you close the driver's door.	60sec/30sec/15sec*1/0sec	
	AUTO LIGHT SENSITIVITY	Changes the timing for the headlights to come on.	MAX/HIGH/MID*1/LOW/MIN	
DOOR SETUP	AUTO DOOR LOCK	Changes the setting for when the doors automatically lock.	WITH VEH SPD*1/SHIFT FROM P/OFF	
	AUTO DOOR UNLOCK	Changes the setting for when the doors automatically unlock.	DRIVER DOOR with SHIFT to P*1/ ALL DOORS with SHIFT to P/ DRIVER DOOR with IGN OFF/ALL DOORS with IGN OFF/OFF	
	DOOR LOCK MODE	Sets up either the driver's door or all doors to unlock on the first operation of the remote or Built-in key.	DRIVER DOOR*1/ALL DOORS	
	KEYLESS LOCK ACKNOWLEDGMENT	LOCK/UNLOCK - The exterior lights flash LOCK (2nd push) - The beeper sounds	ON*1/OFF	
	SECURITY RELOCK TIMER	Changes the time it takes for the doors to relock and the security system to set after you unlock the vehicle without opening any door.	90sec/60sec/30sec*1	

<sup>\*1:</sup>Default Setting


Setup Group	Customizable Features	Description	Selectable settings
MAINTENANCE INFO.		Resets the Maintenance Minder <sup>TM</sup> .	RESET/CANCEL
DEFAULT ALL		Sets/Cancels all the customized settings as default.	CANCEL/SET

### **■** Example of customization settings

The steps for changing the "TRIP A" RESET TIMING setting to ON are shown below. The default setting for "TRIP A" RESET TIMING is MANUALLY RESET.

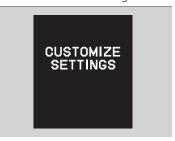

1. Press and release the ▲①/▼ button until **CUSTOMIZE SETTINGS** appears on the display.

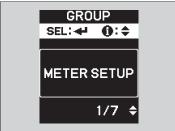

- 2. Press the **SEL/RESET** button to go into the **METER SETUP** group.
- 3. Press the **SEL/RESET** button again.
  - ► **LANGUAGE SELECTION** appears first on the display.



- **4.** Press the ▲①/▼ button until "TRIP A" **RESET TIMING** appears on the display, then press the **SEL/RESET** button.
  - ► The display switches to the SETUP screen, where you can select WITH REFUEL, IGN OFF, MANUALLY RESET, or EXIT.





- Press the ▲①/▼ button and select
   MANUALLY RESET, then press the SEL/ RESET button.
  - ➤ The **MANUALLY RESET** setup screen appears, then the display returns to the customize item screen.
- **6.** Press the ▲①/▼ button until **EXIT** appears on the display, then press the **SEL/RESET** button.
- **7.** Repeat Step 6 until you return to the normal screen.

# **Controls**

This chapter explains how to operate the various controls necessary for driving.

Setting the Clock	104
Locking and Unlocking the Doors	
Key Types and Functions	105
Low Keyless Access Remote Signal	
Strength	106
Locking/Unlocking the Doors from	the
Outside	107
Locking/Unlocking the Doors from	the
Inside	
Childproof Door Locks	112
Auto Door Locking/Unlocking	
Opening and Closing the Trunk	114
Security System	
Immobilizer System	118

Security System Alarm	118
pening and Closing the Windows.	120
pening and Closing the Moonroof	123
perating the Switches Around th	ıe
Steering Wheel	
ENGINE START/STOP Button	124
Turn Signals	126
Light Switches	
Fog Lights	129
Daytime Running Lights	
Wipers and Washers	
Brightness Control	
Rear Defogger/Heated Door Mirror Button	
Adjusting the Steering Wheel	
Adjusting the steeling Wheel	132


Adjusting the Mirrors Interior Rearview Mirror	13
Power Door Mirrors	
Adjusting the Seats	
Adjusting the Seat Positions 13	5
Interior Lights/Interior Convenience	
Items	
Interior Lights 14	
Interior Convenience Items 14	-2
Climate Control System	
Using Automatic Climate Control 14	6
Synchronized Mode14	8
Automatic Climate Control Sensors 14	19

# Setting the Clock

### Clock

### Models without navigation system

You can adjust the time in the clock display, with the power mode in ON.

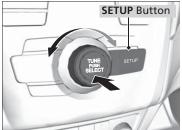



- **1.** Press the **SETUP** button.
- 2. Rotate to select **Adjust Clock** on the screen.
- **3.** Press 🛎. **Adjust Clock** appears.
- **4.** Rotate ♂ to select the item you want to adjust (12/24 hour mode, hour, minute). Then press ♂.
- **5.** Rotate 🛜 to make the adjustment.
- **6.** Press 

  to enter your selection. The display returns to **Adjust Clock**. Repeat steps 4 to 6 to adjust other items.
- 7. To enter the selection, rotate 🅱 and select Set, then press 🕉.

#### 

These indications are used to show how to operate the selector knob.

#### Models with navigation system

The clock is automatically updated through the navigation system, so the time does not need to be adjusted.

# Locking and Unlocking the Doors

# **Key Types and Functions**

This vehicle comes with the following keys:

### Keys

#### ■ Keyless access remote



Built-in Key

Release Button

Use the keyless access remote to start and stop the engine, to lock and unlock the doors and to open the trunk.

There is a **PANIC** button in the remote transmitter.

The built-in key can be used to lock/unlock the doors when the keyless access remote battery becomes weak and the power door lock/unlock operation is disabled.

To remove the built-in key, pull it out while pressing the release button. To reinstall the built-in key, push the built-in key into the keyless access remote until it clicks.

#### 

All the keys have an immobilizer system. The immobilizer system helps to protect against vehicle theft.

#### **Immobilizer System** P. 118

The keys contain precision electronics.

Adhere to the following advice to prevent damage to the electronics:

- Do not leave the keys in direct sunlight, or in locations with high temperature or high humidity.
- Do not drop the keys or set heavy objects on them.
- Keep the keys away from liquids.
- Do not take the keys apart except for replacing the battery.

If the circuits in the keys are damaged, the engine may not start, and the keyless access system may not work.

If the keys do not work properly, have them inspected by a dealer.

### Key Number Tag



Contains a number that you will need if you purchase a replacement key.

# **Low Keyless Access Remote Signal Strength**

The vehicle transmits radio waves to locate the keyless access remote when locking/unlocking the doors, opening the trunk, or to start the engine.

In the following cases, locking/unlocking the doors, opening the trunk, or starting the engine may be inhibited or operation may be unstable:

- Strong radio waves are being transmitted by nearby equipment.
- You are carrying the keyless access remote together with telecommunications equipment, laptop computers, cell phones, or wireless devices.
- A metallic object is touching or covering the keyless access remote.

#### 

Keep the key number tag separate from the key in a safe place outside of your vehicle.

If you wish to purchase an additional key, contact a dealer.

If you lose your key and you cannot start the engine, contact a dealer

#### ∑Low Keyless Access Remote Signal Strength


Communication between the keyless access remote and the vehicle consumes the keyless access remote's battery.

Battery life is about two years, but this varies depending on regularity of use.

The battery is depleted whenever the keyless access remote is receiving strong radio waves. Avoid placing it near electrical appliances such as televisions and personal computers.

# Locking/Unlocking the Doors from the Outside

### Using the Remote Transmitter

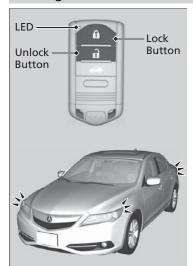

#### ■ Locking the doors

Press the LOCK button.

#### Once:

Some exterior lights flash, all the doors lock, and the security system sets.

# Twice (within five seconds after the first push):

► The beeper sounds and verifies the security system is set.

#### ■ Unlocking the doors

Press the UNLOCK button.

#### Once:

Some exterior lights flash twice, and the driver's door unlocks.

#### Twice:

► The remaining doors unlock.

#### ∑Locking/Unlocking the Doors from the Outside

You can lock or unlock doors using the remote transmitter or keyless access system only when the power mode is in VEHICLE OFF.

#### ■ Using the Remote Transmitter

If you do not open a door within 30 seconds of unlocking the vehicle with the remote transmitter, the doors will automatically relock.

You can change the relock timer setting.

Customized Features P. 95

If the interior light switch is in the door activated position, the interior lights come on when you press the UNLOCK button

No doors opened: The lights fade out after 30 seconds.


Doors relocked with the remote: The lights go off immediately.

#### Interior Lights P. 141

The remote transmitter uses low-power signals, so the operating range may vary depending on the surroundings.

The remote will not lock the vehicle when a door is open.


# Using the Keyless Access System

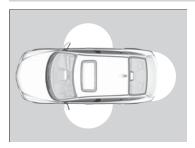

When you carry the keyless access remote, you can lock/unlock the doors and open the trunk.

You can lock/unlock the doors within a radius of about 32 inches (80 cm) of the outside door handle. You can open the trunk within about 32 inches (80 cm) radius from the trunk release button

### ■ Locking the vehicle

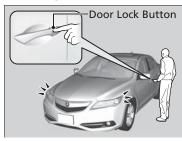

Press the door lock button on the front door.

Some exterior lights flash; the beeper sounds; all the doors lock; and the security system sets.

#### 

If the distance at which it works varies, the battery is probably low.

If the LED does not come on when you press a button, the battery is dead.


#### Replacing the Button Battery P. 304


You can customize the door lock mode and keyless lock acknowledgement setting.

#### Customized Features P. 95

- Do not leave the keyless access remote in the vehicle when you get out. Carry it with you.
- Even if you are not carrying the keyless access remote, you can lock/unlock the doors while someone else with the remote is within range.
- The door may be unlocked if the door handle is covered with water in heavy rain or in a car wash if the keyless access remote is within range.
- If you grip a front door handle wearing gloves, the door sensor may be slow to respond or may not respond by unlocking the doors.
- The door may not open if you pull it immediately after gripping the door handle. Grip the handle again and confirm that the door is unlocked before pulling the handle.

### ■ Unlocking the vehicle

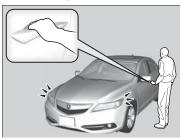

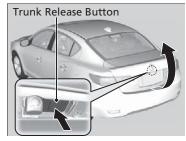

Grab the driver's door handle:

- ► The driver's door unlocks.
- Some exterior lights flash twice and the beeper sounds twice.

Grab the front passenger's door handle:

- ► All the doors unlock.
- Some exterior lights flash twice and the beeper sounds twice.

Press the trunk release button:

- ► The trunk unlocks and opens.
- ► The beeper will sound.
- Using the Trunk Release Button P. 115

#### Substitution Strategy Substitution Strategy

- Even within the 32 inches (80 cm) radius, you may not be able to lock/unlock the doors with the keyless access remote if it is above or below the outside handle.
- The keyless access remote may not operate if it is too close to the door and door glass.

If you do not open a door within 30 seconds of unlocking the vehicle, the doors will automatically relock

The light flash, beep and unlock settings can be customized using the multi-information display.

Customized Features P. 95


Continued 109

## Locking/Unlocking the Doors Using a Key



Fully insert the key and turn it.

# Locking a Door Without Using a Key

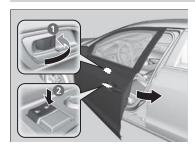

### ■ Locking the front doors

Push the lock tab forward ① or push the master door lock switch in the lock direction ②, and close the door.

### ■ Locking the rear doors

Push the lock tab forward and close the door.

#### ■ Lockout prevention system

The doors cannot be locked when the keyless access remote is inside the vehicle, and any door is open.

#### ■Locking/Unlocking the Doors Using a Key

When you lock the driver's door with a key, all the other doors lock at the same time. When unlocking, the driver's door unlocks first. Turn the key a second time within a few seconds to unlock the remaining doors.

You can customize the door unlock mode setting.

**Customized Features** P. 95


#### ∑Locking a Door Without Using a Key

When you lock the driver's door, all the other doors lock at the same time.

Make sure you have the key in your hand before locking the door to prevent it from being locked in the vehicle.

# Locking/Unlocking the Doors from the Inside

### Using the Lock Tab

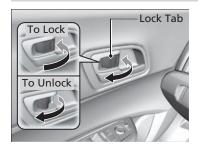

# ■ Locking a door

Push the lock tab forward.

# ■ Unlocking a door

Pull the lock tab rearward.

# Unlocking Using the Inner Handle of Front Doors



Pull the front door inner handle.

The door unlocks and opens in one motion.

#### **≥** Using the Lock Tab

When you lock the door using the lock tab on the driver's door, all the other doors lock at the same time.

When you unlock the door using the lock tab on the driver's door, only the driver's door will unlock.


#### ■Unlocking Using the Inner Handle of Front Doors

The inner front door handles are designed to allow front seat occupants to open the door in one motion. However this feature requires that front seat occupants never pull a front door inner handle while the vehicle is in motion.

Children should always ride in a rear seat where childproof door locks are provided.

Childproof Door Locks P. 112

### Using the Master Door Lock Switch

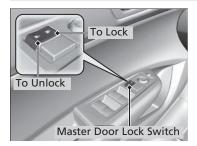

Press the master door lock switch in as shown to lock or unlock all doors.

# **Childproof Door Locks**

The childproof door locks prevent the rear doors from being opened from the inside regardless of the position of the lock tab.

### Setting the Childproof Door Locks



Slide the lever in the rear door to the lock position, and close the door.

### ■ When opening the door

Open the door using the outside door handle.

#### ■Using the Master Door Lock Switch

When you lock/unlock either front door using the master door lock switch, all the other doors lock/unlock at the same time.

#### ∑Childproof Door Locks

To open the door from the inside when the childproof door lock is on, put the lock tab in the unlock position, lower the rear window, put your hand out of the window, and pull the outside door handle.

# **Auto Door Locking/Unlocking**

Your vehicle locks all doors and unlocks the driver's door automatically when a certain condition is met.

### Auto Door Locking

#### ■ Drive lock mode

All doors lock when the vehicle's speed reaches about 10 mph (15 km/h).

### ■ Auto Door Unlocking

#### ■ Park unlock mode

The driver's door unlocks when the shift lever is moved into **P** with the brake pedal depressed.

#### ■ Auto Door Locking/Unlocking

You can turn off or change to another auto door locking/unlocking setting using the multi-information display.

Customized Features P. 95

# Opening and Closing the Trunk

# **Precautions for Opening/Closing the Trunk**

## ■ Opening the trunk

Open the trunk all the way.

If it is not fully opened, the trunk lid may begin to close under its own weight.

### ■ Closing the trunk

Keep the trunk lid closed while driving to:

- Avoid possible damage.
- ▶ Prevent exhaust gas from leaking into the vehicle.
- Exhaust Gas Hazard P. 66

# **Using the Trunk Opener**




Pulling the trunk release to the lower left of the driver's seat unlocks and opens the trunk.



### ■ Locking the trunk opener

You can lock the trunk release with the built-in key.

# **Using the Trunk Release Button**

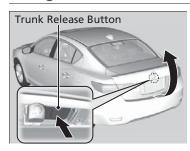

Push up the release button on the trunk lid after the doors are unlocked.


Even if the trunk is locked, you can open the trunk if you carry the keyless access remote.

► The beeper will sound.

#### **≥** Using the Trunk Release Button


- Do not leave the keyless access remote in the vehicle when you get out. Carry it with you.
- A person who is not carrying the keyless access remote can unlock the trunk if a person who is carrying it is within range.
- Do not leave the keyless access remote inside the trunk and close the lid. The beeper sounds and the trunk cannot be closed.

# **Using the Remote Transmitter**

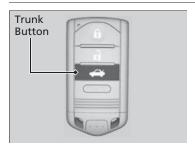

Press the trunk release button for approximately one second to unlock and open the trunk.

### **Trunk Main Switch**

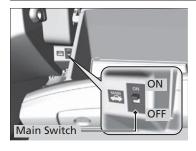


The trunk main switch disables the trunk release button on the remote transmitter and the trunk release button on the trunk lid to protect luggage in the trunk.

- **1.** Turn off the trunk main switch in the glove box.
- 2. Lock the glove box.
- 3. Lock the trunk release.
  - Using the Trunk Opener P. 114

#### Trunk Main Switch

If you need to give the key to someone else, remove the built-in key from the keyless access remote by pressing the release button, and give the remote as a valet key.

# **Emergency Trunk Opener**

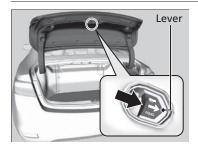

The trunk release lever allows you to open the trunk from inside for your safety.

Slide the release lever in the direction of the arrow.

### 

Parents should decide if their children should be shown how to use this feature.

# Security System

# **Immobilizer System**

The immobilizer system prevents a key that has not been pre-registered from starting the engine. Each key contains electronic transmitters that use electronic signals to verify the key.

Pay attention to the following when pressing the **ENGINE START/STOP** button:

- Do not allow objects that emit strong radio waves near the ENGINE START/ STOP button.
- Make sure the key is not covered by or touching a metal object.
- Do not bring a key from another vehicle's immobilizer system with the keyless access remote.

# **Security System Alarm**

The security system alarm activates when the trunk, hood, or doors are opened without the key, remote transmitter, or keyless access system.

### ■ When the security system alarm activates

The horn sounds intermittently and all of the exterior lights flash.

### ■ To deactivate the security system alarm

Unlock the vehicle using the key, remote transmitter or keyless access remote. The system, along with the horn and flashing lights, is deactivated.

#### 

#### NOTICE

Leaving the keyless access remote in the vehicle can result in theft or accidental movement of the vehicle. Always take the ignition key with you whenever you leave the vehicle unattended.

Do not alter the system or add other devices to it. Doing so may damage the system and make your vehicle inoperable.

#### Security System Alarm

The security alarm continues for a maximum of two minutes until the security system deactivates.

### ■ Setting the security system alarm

The security system alarm automatically sets when the following conditions have been met:

- The power mode is set to VEHICLE OFF (LOCK).
- The hood and trunk are closed.
- All doors are locked from outside with the key, remote transmitter or keyless access system.

#### ■ When the security system alarm sets

The security system indicator in the instrument panel blinks. When the blinking interval changes after about 15 seconds, the security system is set.

#### ■ To cancel the security system alarm

The security system is canceled when the vehicle is unlocked using the key or remote transmitter, or you grab either front door handle while carrying the keyless access remote. The security system indicator goes off at the same time.

### Panic Mode



# ■ The panic button on the remote transmitter

If you press the panic button for approximately one second, the following will occur for about 30 seconds:

- The horn sounds.
- Some exterior lights flash.

### ■ Canceling panic mode

Press any button on the remote transmitter, or set the power mode to ON.

#### Security System Alarm

Do not set the security system alarm when someone is in the vehicle or a window is open. The system can accidentally activate when:

- Unlocking the door with the lock tab.
- Opening the trunk with the trunk release or the emergency trunk opener.

If the battery goes dead after you have set the security system alarm, the security alarm may go off once the battery is recharged or replaced.

If this occurs, deactivate the security system alarm by unlocking a door using the key, remote transmitter, or keyless access system.

Do not attempt to alter this system or add another device to it

# Opening and Closing the Windows


# **Opening/Closing the Power Windows**

The power windows can be opened and closed when the power mode is in ON, using the switches on the doors. The driver's side switches can be used to open and close all of the windows.

The power window lock button on the driver's side must be switched off (not pushed in, indicator off) to open and close the windows from anywhere other than the driver's seat.

When the power window lock button is pushed in, the indicator comes on and you can only operate the driver's window. Turn the power window lock button on when children are in the vehicle.

# Opening/Closing Windows with Auto-Open/Close Function

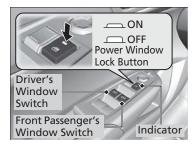

#### ■ Automatic operation

**To open:** Push the switch down firmly. **To close:** Pull the switch up firmly.

The window opens or closes completely. To stop the window at any time, push or pull the switch briefly.

### ■ Manual operation

**To open:** Push the switch down lightly, and hold it until the desired position is reached. **To close:** Pull the switch up lightly, and hold it until the desired position is reached.

○ Opening/Closing the Power Windows

# **AWARNING**

Closing a power window on someone's hands or fingers can cause serious injury.

Make sure your passengers are away from the windows before closing them.

The power windows can be operated for up to 10 minutes after you set the power mode to VEHICLE OFF (LOCK).

Opening either front door cancels this function.


#### **Auto Reverse**

If a power window senses resistance when closing automatically, it will stop closing and reverse direction

The driver's window auto reverse function is disabled when you continuously pull up the switch.

The auto reverse function stops sensing when the window is almost closed to ensure that it fully closes.

# Opening/Closing Windows without Auto-Open/Close Function

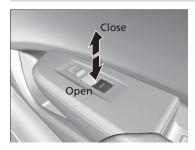

**To open:** Push the switch down. **To close:** Pull the switch up.

Release the switch when the window reaches the desired position.


# **■ Opening Windows and Moonroof with the Remote**



**To open:** Press the UNLOCK button twice within 10 seconds and hold it down for the second time. If the windows stop midway, repeat the procedure.

Continued 121

# **■** Opening/Closing the Windows/Moonroof with the Key

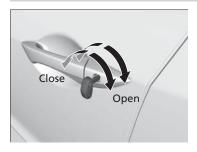

**To open:** Unlock the driver's door with the key. Within 10 seconds of returning the key to the central position, turn the key in the unlock direction and hold it there.

**To close:** Lock the driver's door with the key. Within 10 seconds of returning the key to the central position, turn the key in the lock direction and hold it there.

Release the key to stop the windows/ moonroof at the desired position. If you want further adjustment, repeat the same operation.

# Opening and Closing the Moonroof

# Opening/Closing the Moonroof

You can only operate the moonroof when the power mode is in ON. Use the switch in the front of the ceiling to open and close the moonroof.



### ■ Automatic operation

**To open:** Pull the switch back firmly. **To close:** Push the switch forward firmly.

The moonroof will automatically open or close all the way. To stop the moonroof midway, touch the switch briefly.

### ■ Manual operation

**To open:** Pull the switch back lightly, and hold it until the desired position is reached. **To close:** Push the switch forward lightly, and hold it until the desired position is reached.

#### ■ Tilting the moonroof up

**To tilt:** Push on the center of the moonroof switch.

**To close:** Push the switch forward firmly, then release.

∑Opening/Closing the Moonroof

# **AWARNING**

Opening or closing the moonroof on someone's hands or fingers can cause serious injury.

Make sure all hands and fingers are clear of the moonroof before opening or closing it.

#### NOTICE

Opening the moonroof in below freezing temperature or when it is covered with snow or ice can damage the moonroof panel or motor.

The power moonroof can be operated for up to 10 minutes after you set the power mode to VEHICLE OFF (LOCK).


Opening either front door cancels this function.

When resistance is detected, the auto reverse function causes the moonroof to change directions, then stop. Auto reverse stops sensing when the moonroof is almost closed to ensure that it fully closes.

# Operating the Switches Around the Steering Wheel


### **ENGINE START/STOP Button**

# ■ Changing the Power Mode

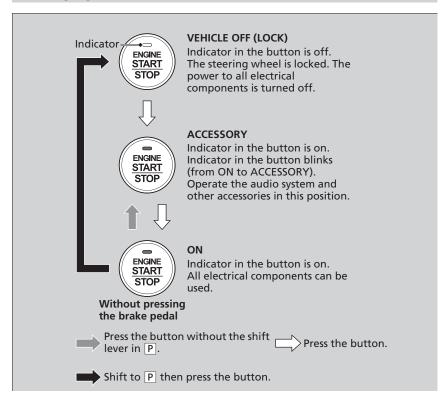

#### **≥** ENGINE START/STOP Button

#### **ENGINE START/STOP Button Operating Range**

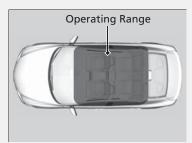

You can start the engine when the keyless access remote is inside the vehicle.

The engine may also run if the keyless access remote is close to the door or window, even if it is outside the vehicle

#### ON mode:

Indicator in the button is off, if the engine is running.

If the keyless access remote battery is weak, beeper sounds and the **TO START, HOLD REMOTE NEAR START BUTTON** message appears on the multi-information display.

■ If the Keyless Access Remote Battery is Weak P. 330

### Power Mode Reminder

If you open the driver's door when the power mode is set to ACCESSORY, a warning buzzer sounds

### Keyless Access Remote Reminder



Warning buzzers may sound from inside or/ and outside the vehicle to remind you that the keyless access remote is out of the vehicle. If the buzzer continues even after the remote is put back inside, place it to be within its operational range.

#### ■ When the power mode is in ON

If the keyless access remote is taken out of the vehicle, and the driver's door is closed, warning buzzers sound from both inside and outside the vehicle. A warning message on the multi-information display notifies the driver inside that the remote is out.

# ■ When the power mode is in ACCESSORY or in VEHICLE OFF (LOCK)

If the keyless access remote is taken out of the vehicle, and the driver's door is closed, a warning buzzer sounds from outside the vehicle.

#### 


When the keyless access remote is within the system's operational range, and the driver's door is closed, the warning function cancels.

If the keyless access remote is taken out of the vehicle after the engine has been started, you can no longer change the **ENGINE START/STOP** button mode or restart the engine. Always make sure if the remote is in your vehicle when you operate the **ENGINE START/STOP** button.

Removing the keyless access remote from the vehicle through a window does not activate the warning buzzer.

Do not put the keyless access remote on the dashboard or in the glove box. It may cause the warning buzzer to go off. Under some other conditions that can prevent the vehicle from locating the remote, the warning buzzer may also go off even if the remote is within the system's operational range.

# **Turn Signals**

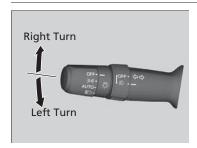

The turn signals can be used when the power mode is in ON.


#### One-touch turn signal

When you lightly push up or down and release the turn signal lever, the exterior turn signals and turn signal indicator blink three times.

This feature can be used when signaling for a lane change.

# **Light Switches**

# **Manual Operation**

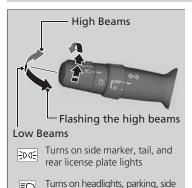

marker, tail, and rear license plate

Rotating the light switch turns the lights on and off, regardless of the power mode setting.

### ■ High beams

Push the lever forward until you hear a click.

#### Low beams

When in high beams, pull the lever back to return to low beams

### ■ Flashing the high beams

Pull the lever back, and release it.

#### **≥** Light Switches

If you leave the power mode in VEHICLE OFF (LOCK) with the lights on, a light on reminder chime will sound when you open the driver's door.

When the lights are on, the lights on indicator in the instrument panel will be on.

Lights On Indicator P. 77

#### Models with high voltage discharge tube bulb

Repeatedly turning the headlights on and off reduces the life of the HID headlight bulbs.

If you sense that the level of the headlights is abnormal, have the vehicle inspected by a dealer.

Do not leave the lights on when the engine is off because it will cause the battery to discharge.

Your vehicle is equipped with the automatic headlight adjusting system that automatically adjusts the vertical angle of the low beam headlights. If you find a significant change in the vertical angle of the headlights, there may be a problem with the system. Have your vehicle checked by a dealer.

lights

# Automatic Lighting Control



Automatic lighting control can be used when the power mode is in ON.

When you turn the light switch to **AUTO**, the headlights and other exterior lights will switch on and off automatically depending on the ambient brightness.


You can change the auto light sensitivity setting.

Customized Features P. 95

### 

We recommend that you turn on the lights manually when driving at night, in a dense fog, or in dark areas such as long tunnels or parking facilities.

The light sensor is in the location shown below. Do not cover this light sensor with anything; otherwise, the automatic lighting system may not work properly.

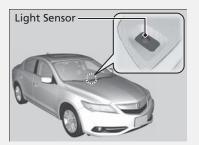

Adjust the auto light sensitivity as follows:

Setting	The exterior lights come on when the ambient light is at
MAX	Dright
HIGH	Bright
MID	
LOW	Dark
MIN	Dark

**≥ Customized Features** P. 95

Continued 127

# ■ Headlight Integration with Wiper\*

The headlights automatically come on when the wipers are used several times within a certain intervals with the headlight switch in **AUTO**.

The headlights automatically go off a few minutes later if the wipers are stopped.

## Automatic Lighting Off Feature

The headlights, all other exterior lights, and the instrument panel lights turn off 15 seconds after you set the power mode to VEHICLE OFF (LOCK), take the remote with you, and close the driver's door even if you leave the light switch on or in **AUTO**.

If you set the power mode to VEHICLE OFF (LOCK) with the headlight switch on, but do not open the door, the lights turn off after 10 minutes (three minutes, if the switch is in the **AUTO** position).

The lights turn on again when you unlock or open the driver's door. If you unlock the door, but do not open it within 15 seconds, the lights go off. If you open the driver's door, you will hear a lights on reminder chime.

#### ➤ Headlight Integration with Wiper\*

This feature activates during the headlights are off in **AUTO**.

The instrument panel brightness does not change when the headlights come on.

When the ambient light is at dark, the automatic lighting control feature overrides, and the headlights come on with or without the wipers sweeping more than several times.

#### 

You can change the headlight auto off timer setting.

**Customized Features** P. 95

# **Fog Lights**



When the low beam headlights are on, turn the fog light switch on to use the fog lights.

#### ∑Fog Lights

The fog lights go off when the headlights turn off, or when the daytime running lights are on.

Fog Light Indicator P. 77

# **Daytime Running Lights**


The high beam headlights come on slightly dimmer than normal when the following conditions have been met:

- The power mode is in ON.
- The headlight switch is off, or in **500**5.
- The parking brake is released.

The lights remain on even if you set the parking brake. Setting the power mode to VEHICLE OFF turns off the daytime running lights.

The high beam headlights return to the original brightness once the headlight switch is turned on.

# **Wipers and Washers**

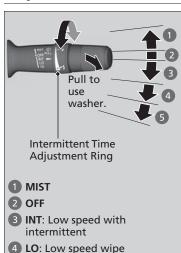

**5** HI: High speed wipe

The windshield wipers and washers can be used when the power mode is in ON.

#### ■ MIST

The wipers run at high speed until you release the lever.

### ■ Wiper switch (OFF, INT, LO, HI)

Change the wiper switch setting according to the amount of rain.

### ■ Adjusting the delay

Turn the adjustment ring to adjust the wiper delay.



Long delay

Short delay

### **■** Washer

Sprays while you pull the lever toward you. When you release the lever, the wipers make two or three more sweeps before stopping.

#### Wipers and Washers

#### NOTICE

Do not use the wipers when the windshield is dry. The windshield will get scratched, or the rubber blades will get damaged.

#### NOTICE

In cold weather, the blades may freeze to the windshield, becoming stuck.

Operating the wipers in this condition may damage the wipers. Use the defroster to warm the windshield, then turn the wipers on.

If the vehicle speeds up while the wipers are operating intermittently, the length of the wipe interval shortens

When the vehicle starts moving, the wipers make a single sweep.

When the vehicle speeds up, the wiper operation's shortest delay setting ( and the LO setting become the same

Turn the washers off if no washer fluid comes out. The pump may get damaged.

The wiper motor is equipped with a breaker that may stop motor operation temporarily to prevent an overload. Wiper operation will return to normal within a few minutes, once the circuit has returned to normal

# **Brightness Control**



When the power mode is in ON, you can use the brightness control knob to adjust instrument panel brightness.

**Brighten:** Turn the knob to the right. **Dim:** Turn the knob to the left.

You will hear a beep when the brightness reaches minimum or maximum. The multi-information display will return to its original state several seconds after you adjust the brightness.

#### **■** Brightness level indicator

The brightness level is shown on the multiinformation display while you are adjusting it.

### Wipers and Washers

If the wiper stops operating due to any obstacle such as the build-up of snow, park the vehicle in a safe place.

Rotate the wiper switch to **OFF**, and set the power mode to ACCESSORY or VEHICLE OFF (LOCK), then remove the obstacle.

#### **≥** Brightness Control

Instrument panel brightness varies, depending on whether the exterior lights are on or off. The instrument panel dims to reduce glare when they are on.

When it is bright outside and the headlight integration with the wiper is activated, the instrument panel brightness does not change.

Pressing the **SEL/RESET** button or either  $\boxed{\textcircled{A}\textcircled{1}}/\boxed{v}$  (information) button switches the display between the brightness level and other available information.

If you turn the knob to the right until the brightness display is up to max, the beeper sounds. This cancels the reduced instrument panel brightness when the parking lights are on.

The brightness can be set differently for when the exterior lights are on, and when they are off.



# Rear Defogger/Heated Door Mirror Button




Press the rear defogger and heated door mirror button to defog the rear window and mirrors when the power mode is in ON.

The rear defogger and heated door mirrors automatically switch off after 10-30 minutes depending on the outside temperature.

# **Adjusting the Steering Wheel**

The steering wheel height and distance from your body can be adjusted so that you can comfortably grip the steering wheel in an appropriate driving posture.

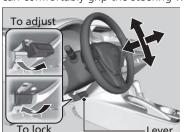

- **1.** Pull the steering wheel adjustment lever up.
  - ➤ The steering wheel adjustment lever is under the steering column.
- **2.** Move the steering wheel up or down, and in or out.
  - ► Make sure you can see the instrument panel gauges and indicators.
- **3.** Push the steering wheel adjustment lever down to lock the steering wheel in position.
  - ➤ After adjusting the position, make sure you have securely locked the steering wheel in place by trying to move it up, down, in, and out.

■ Rear Defogger/Heated Door Mirror Button

#### NOTICE

When cleaning the inside of the rear window, be careful not to damage the heating wires. It is critical to wipe the window from side to side along the defogger heating wires.

This system consumes a lot of power, so turn it off when the window has been defogged.

Also, do not use the system for a long period when the engine is idling. This may weaken the 12 volt battery, making it difficult to start the engine.

Madjusting the Steering Wheel

# **AWARNING**

Adjusting the steering wheel position while driving may cause you to lose control of the vehicle and be seriously injured in a crash.

Adjust the steering wheel only when the vehicle is stopped.


Make any steering wheel adjustments before you start driving.

# Adjusting the Mirrors

### **Interior Rearview Mirror**

Adjust the angle of the rearview mirror when you are sitting in the correct driving position.

# Rearview Mirror with Day and Night Positions\*

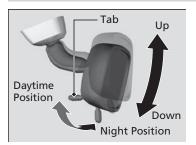

Flip the tab to switch the position. The night position will help to reduce the glare from headlights behind you when driving after dark.


#### ■ Adjusting the Mirrors

Keep the inside and outside mirrors clean and adjusted for best visibility.

Adjust the mirrors before you start driving.

Adjusting the Seat Positions P. 135

### Automatic Dimming Rearview Mirror\*

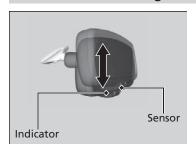


When driving after dark, the automatic dimming rearview mirror always reduces the glare from headlights behind you.

### ■ Automatic Dimming Rearview Mirror\*

The auto dimming function cancels when the shift position is in  $\lceil R \rceil$ .

\* Not available on all models

### **Power Door Mirrors**

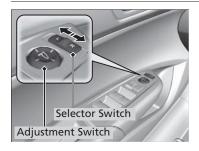


You can adjust the door mirrors when the power mode is in ON.

### ■ Mirror position adjustment

**L/R selector switch:** Select the left or right mirror. After adjusting the mirror, return the switch to the center position.

**Mirror position adjustment switch:** Press the switch left, right, up, or down to move the mirror.

### Expanded View Driver's Mirror

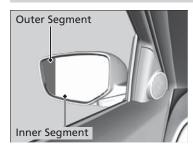

The driver side door mirror has outer and inner segments.

The outer segment is slightly curved to provide a wider angle view than a standard flat mirror. This wider view may help you check areas that are not visible using a standard door mirror.


### 

Objects visible in the outer segment of the driver side door mirror appear smaller than objects in the rest of the mirror. But in fact, they are closer than they appear.

Do not rely on your mirrors. Always look to the side and behind your vehicle before changing lanes.

# Adjusting the Seats

# **Adjusting the Seat Positions**

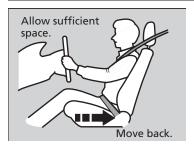

Adjust the driver's seat as far back as possible while allowing you to maintain full control of the vehicle. You should be able to sit upright, well back in the seat and be able to adequately press the pedals without leaning forward, and grip the steering wheel comfortably. The passenger's seat should be adjusted in a similar manner, so that it is as far back from the front airbag in the dashboard as possible.

### ■ Adjusting the front power seat\*



■ Adjusting the Seats

# **AWARNING**

Sitting too close to a front airbag can result in serious injury or death if the front airbags inflate.

Always sit as far back from the front airbags as possible while maintaining control of the vehicle.

The National Highway Traffic Safety Administration and Transport Canada recommend that drivers allow at least 10 inches (25 cm) between the center of the steering wheel and the chest.

Always make seat adjustments before driving.


### ■ Adjusting the front manual seat(s)



#### ∑Adjusting the front manual seat(s)

Once a seat is adjusted correctly, rock it back and forth to make sure it is locked in position.

# Adjusting the Seat-Backs

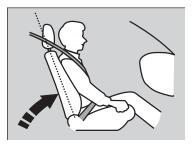

Adjust the driver's seat-back to a comfortable, upright position, leaving ample space between your chest and the airbag cover in the center of the steering wheel.

The front seat passenger should also adjust their seat-back to a comfortable, upright position.

Reclining a seat-back so that the shoulder part of the belt no longer rests against the occupant's chest reduces the protective capability of the belt. It also increases the chance of sliding under the belt in a crash and being seriously injured. The farther a seat-back is reclined, the greater the risk of injury.

■ Adjusting the Seat-Backs

# **AWARNING**


Reclining the seat-back too far can result in serious injury or death in a crash.

Adjust the seat-back to an upright position, and sit well back in the seat.

Do not put a cushion, or other object, between the seat-back and your back. Doing so may interfere with proper seat belt or airbag operation.

If you cannot get far enough away from the steering wheel and still reach the controls, we recommend that you investigate whether some type of adaptive equipment may help.


### Adjusting the Head Restraints

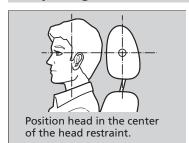

Your vehicle is equipped with head restraints in all seating positions.

Head restraints are most effective for protection against whiplash and other rearimpact crash injuries when the center of the back of the occupant's head rests against the center of the restraint. The tops of the occupant's ears should be level with the center height of the restraint.

#### ■ Adjusting the front and rear outer head restraint positions

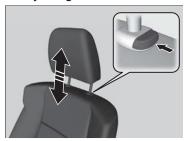

**To raise the head restraint:** Pull it upward. **To lower the head restraint:** Push it down while pressing the release button.

∑Adjusting the Head Restraints

# **AWARNING**

Improperly positioning head restraints reduces their effectiveness and increases the likelihood of serious injury in a crash.

Make sure head restraints are in place and positioned properly before driving.

In order for the head restraint system to work properly:

- Do not hang any items on the head restraints, or from the restraint leas.
- Do not place any object between an occupant and the seat-back.
- Install each restraint in its proper location.

## ■ Changing the Rear Center Seat Head Restraint Positions



A passenger sitting in the center back seating position should adjust the height of their head restraint to an appropriate position before the vehicle begins moving.

### To raise the head restraint:

Pull it upward.

#### To lower the head restraint:

Push it down while pressing the release button.

### Removing and Reinstalling the Head Restraints

Head restraints can be removed for cleaning or repair.

#### To remove a head restraint:

Pull the restraint up as far as it will go. Then push the release button, and pull the restraint up and out.

#### To reinstall a head restraint:

Insert the legs back in place, then adjust the head restraint to an appropriate height while pressing the release button. Pull up on the restraint to make sure it is locked in position.

■ Removing and Reinstalling the Head Restraints

# **AWARNING**

Failure to reinstall, or correctly reinstall, the head restraints can result in severe injury during a crash.

Always replace the head restraints before driving.

## Maintain a Proper Sitting Position

After all occupants have adjusted their seats and head restraints, and put on their seat belts, it is very important that they continue to sit upright, well back in their seats, with their feet on the floor, until the vehicle is safely parked and the engine is off.

Sitting improperly can increase the chance of injury during a crash. For example, if an occupant slouches, lies down, turns sideways, sits forward, leans forward or sideways, or puts one or both feet up, the chance of injury during a crash is greatly increased.

In addition, an occupant who is out of position in the front seat can be seriously or fatally injured in a crash by striking interior parts of the vehicle or being struck by an inflating front airbag.

### **Armrest**

# Using the Rear Seat Armrest



Pull down the armrest in the center seat-back.

Maintain a Proper Sitting Position

# **AWARNING**

Sitting improperly or out of position can result in serious injury or death in a crash.

Always sit upright, well back in the seat, with your feet on the floor.


# Interior Lights/Interior Convenience Items

# **Interior Lights**

Front

# ■ Interior Light Switches

Door Activated Position

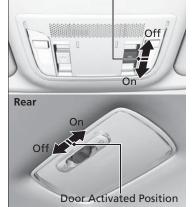

#### ON

The interior lights come on regardless of whether the doors are open or closed.

#### ■ Door activated

The interior lights come on in the following situations:

- When any of the doors are opened.
- You unlock the driver's door.
- The lights also come on when the power mode is set to VEHICLE OFF (LOCK).

#### OFF

The interior lights remain off regardless of whether the doors are open or closed.

## ■ Map Lights



The map lights can be turned on and off by pressing the  $\overline{k}$  (map light) button.

#### 

In the door activated position, the interior lights fade out and go off about 30 seconds after the doors are closed.

The lights go off after 30 seconds in the following situations:

- When you unlock the driver's door but do not open it.
- When you set the power mode to VEHICLE OFF (LOCK) but do not open a door.

You can change the interior lights dimming time.

#### Customized Features P. 95

The interior lights go off immediately in the following situations:

- When you lock the driver's door.
- When you set the power mode to ON.

If you leave any of the doors open, the interior lights go off after about 15 minutes.

#### Map Lights

When the interior light switch is in the door activated position and any door is open, pressing the button does not turn off the map light.


### **Interior Convenience Items**

### Glove Box



Pull the handle to open the glove box. You can lock the glove box with the built-in key.

# **■ Console Compartment**

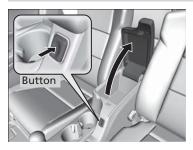

Press the button to open the console compartment.

Solove Box

# **AWARNING**

An open glove box can cause serious injury to your passenger in a crash, even if the passenger is wearing the seat belt.


Always keep the glove box closed while driving.

# ■ Beverage Holders



### **■** Front seat beverage holders

Are located in the console between the front seats.

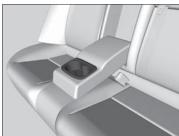

### ■ Rear seat beverage holders

Fold the armrest down to use the rear seat beverage holders.

#### ■ Beverage Holders

#### NOTICE

Spilled liquids damage the upholstery, carpeting, and electrical components in the interior.

Be careful when you are using the beverage holders. Hot liquid can scald you.

Continued 143

### Accessory Power Socket

The accessory power sockets can be used when the power mode is in ACCESSORY or ON.



Open the console lid and the cover to use it.

### Coat Hook



There is a coat hook on the rear left grab handle. Pull it down to use it.

#### ■ Accessory Power Socket

#### NOTICE

Do not insert an automotive type cigarette lighter element.

This can overheat the power socket.

#### NOTICE

Do not operate the tire repair kit compressor for more than 15 minutes. The accessory power socket and compressor can overheat and become permanently damaged.

The accessory power socket is designed to supply power for 12 volt DC accessories that are rated 180 watts or less (15 amps).

To prevent battery drain, only use the power socket with the engine running.

#### 

The coat hook is not designed for large or heavy items

#### Seat Heaters\*



The power mode must be in ON to use the seat heaters. The **HI** setting heats the seats faster than the **LO** setting.

There is no heater in the passenger's seatback due to the side airbag cutoff system.



While in **HI**, the heater cycles on and off.

▶ The appropriate indicator will be on while the seat heater is on. Briefly press the switch on the opposite side to turn the heater off. The indicator will be off. When a comfortable temperature is reached, select LO to keep the seat warm.

#### 

# **AWARNING**

Heat induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use seat heaters.


Do not use the seat heaters even in **LO** when the engine is off. Under such conditions, the battery may be weakened, making the engine difficult to start.

In the **LO** setting, the heater runs continuously and does not automatically turn off.

# Climate Control System

# **Using Automatic Climate Control**

The automatic climate control system maintains the interior temperature you select. The system also selects the proper mix of heated or cooled air that raises or lowers the interior temperature to your preference as quickly as possible.

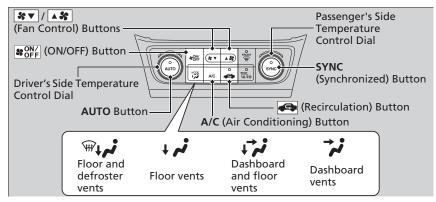

Use the system when the engine is running.

- 1. Press the AUTO button.
- 2. Adjust the interior temperature using the driver's side or passenger's side control dial.
- 3. Press the SON (ON/OFF) button to cancel.

### ■ Switching between the recirculation and fresh air modes

Press the (recirculation) button and switch the mode depending on environmental conditions.

Recirculation Mode (indicator on): Recirculates air from the vehicle's interior through the system.

Fresh Air Mode (indicator off): Maintains outside ventilation. Keep the system in fresh air mode in normal situations

#### 

If any buttons are pressed while using the climate control system in auto, the function of the button that was pressed will take priority.

The **AUTO** indicator will go off, but functions unrelated to the button that were pressed will be controlled automatically.

During the Auto Idle Stop, the air conditioning system will be turned off.


If the ECON mode is selected, the fan may also be turned off.

To prevent cold air from blowing in from outside, the fan may not start immediately when the **AUTO** button is pressed.

If the interior is very warm, you can cool it down more rapidly by partially opening the windows, turning the system on AUTO, and setting the temperature to low. Change the fresh mode to recirculation mode until the temperature cools down.

When you set the temperature to the lower or upper limit,  ${\bf Lo}$  or  ${\bf Hi}$  is displayed.


# Defrosting the Windshield and Windows

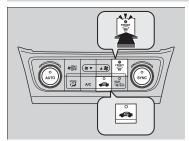

Pressing the (windshield defroster) button turns the air conditioner system on and automatically switches the system to fresh air mode.

Press the with button again to turn off, the system returns to the previous settings.

### ■ To rapidly defrost the windows

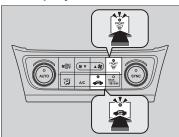

- 1. Press the button.
- 2. Press the button.

#### 

Pressing the  $\boxed{\mathbf{s}_{OF}^{OF}}$  button switches the climate control system between on and off. When turned on, the system returns to your last selection.

While in the ECON mode, the climate control system has greater temperature fluctuations.

#### Defrosting the Windshield and Windows

# For your safety, make sure you have a clear view through all the windows before driving.

Do not set the temperature near the upper or lower limit.


When cold air hits the windshield, the outside of the windshield may fog up.

If the side windows fog up, adjust the vents so that the air hits the side windows.

#### ∑To rapidly defrost the windows

After defrosting the windows, switch over to fresh air mode. If you keep the system in recirculation mode, the windows may fog up from humidity. This impedes visibility.

# **Synchronized Mode**

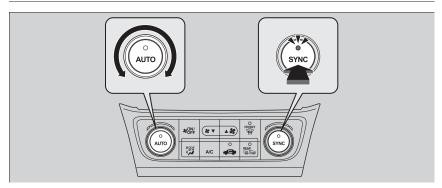

You can set the temperature synchronously for the driver side and the passenger side in synchronized mode.

- 1. Press the **SYNC** button.
  - ► The system will switch to synchronized mode.
- **2.** Adjust the temperature using driver's side temperature control dial.


Press the **SYNC** button to return to dual mode.

#### Synchronized Mode


When you press the button, the system changes to synchronized mode.

When the system is in dual mode, the driver side temperature and the passenger side temperature can be set separately.

# **Automatic Climate Control Sensors**

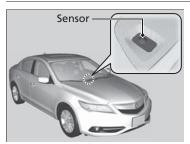

The automatic climate control system is equipped with sensors. Do not cover or spill any liquid on them.

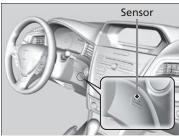



This chapter describes how to operate technology features.

About Your Audio System	15
USB Adapter Cable	15
Auxiliary Input Jack	15
Audio System Theft Protection	15
Audio System Basic Operation	15
Audio/Information Screen	15
Audio Remote Controls	15
Adjusting the Sound	16
Playing AM/FM Radio	16
Playing XM® Radio *	16
Playing a CD	16
Playing an iPod	16

Playing Internet Radio	173
Wallpaper Setup	
	170
Audio Error Messages*	
CD Player	180
iPod/USB Flash Drive	181
Pandora®	182
General Information on the Audio	
System	
XM® Radio Service*	183
Recommended CDs	
necommended CD3	104

Compatible iPod, iPhone, and USB Fl.	ash
Drives	186
lomeLink® Universal Transceiver*	187
Training HomeLink	187
Bluetooth® HandsFreeLink®	
Using HFL	189
HFL Menus	191

\* Not available on all models

# **Audio System**

# **About Your Audio System**

#### Models with navigation system

See the Navigation System Manual for operation of the audio system, AcuraLink\*, *Bluetooth*® HandsFreeLink®, and voice commands for these features.

The audio system features AM/FM radio and the XM® Radio service. It can also play audio CDs, WMA/MP3/AAC files, USB flash drives, and iPod, iPhone and *Bluetooth*® devices.

You can operate the audio system from the buttons and switches on the panel, or the remote controls on the steering wheel.



#### 

XM® Radio is available on a subscription basis only. For more information on XM® Radio, contact a dealer.

# **☑ General Information on the Audio System** P. 183

XM® Radio is available in the United States and Canada, except Hawaii, Alaska, and Puerto Rico.


XM® is a registered trademark of Sirius XM Radio, Inc.

Video CDs, DVDs, and 3-inch (8-cm) mini CDs are not supported.

iPod, iPhone and iTunes are trademarks of Apple Inc.

State or local laws may limit the circumstances in which you can launch or control your attached audio device.

# **USB Adapter Cable**

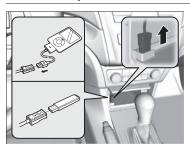

- **1.** Unclip the USB connector and loosen the adapter cable.
- **2.** Install the iPod dock connector or the USB flash drive to the USB connector.

# **Auxiliary Input Jack**

Use the jack to connect standard audio devices.



- 1. Open the AUX cover.
- **2.** Connect a standard audio device to the input jack using a 1/8 inch (3.5 mm) stereo miniplug.
  - ► The audio system automatically switches to the AUX mode.

#### **™**USB Adapter Cable

- Do not leave the iPod or USB flash drive in the vehicle. Direct sunlight and high temperatures may damage it.
- Do not use an extension cable with the USB adapter cable.
- Do not connect the iPod or USB flash drive using a hub.
- Do not use a device such as a card reader or hard disk drive, as the device or your files may be damaged.
- We recommend your data backed up before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.

If the audio system does not recognize the iPod, try reconnecting it a few times or reboot the device. To reboot, follow the manufacturer's instructions provided with the iPod or visit www.apple.com/ipod.

#### 

To switch the mode, press any of the audio mode buttons. You can return to the AUX mode by pressing the **AUX** button.

# **Audio System Theft Protection**

The audio system is disabled when it is disconnected from the power source, such as when the battery is disconnected or goes dead.

#### ■ Reactivating the audio system

- 1. Set the power mode to ON, and turn on the audio system.
  - ➤ You will be requested to enter the audio security code. See step 3.
- 2. Press and hold the power button again for more than two seconds.
  - ► The audio system is reactivated when the system's control unit recognizes that the system is in your vehicle.
    - If the control unit fails to recognize, **ENTER CODE** appears on the audio/information screen.
- **3.** Enter the audio security code using the preset buttons. If you enter an incorrect digit, continue to the last digit, then try again. If you do not enter the code correctly after 10 tries, leave the system for one hour before trying again, or visit a dealer to have the system reset.

#### 

Find the audio system's security code and serial number label in your owner's manual kit.

We recommend that you write down the serial number in this owner's manual.

Do not store the label in your vehicle. If you lose the label, you must first retrieve the serial number, and then obtain the code.


You can find out about your serial number and security code from a dealer.

#### U.S. models

You can register the security code at Acura Owners (owners.acura.com.), and find information on how to retrieve the serial number and obtain the code at radio-navicode.acura.com.


# Audio System Basic Operation

To use the audio system function, the power mode must be in ACCESSORY or ON.

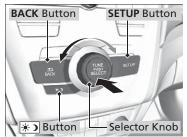

Use the selector knob or **SETUP** button to access some audio functions.

Press 🖔 to switch between the normal and extended display for some functions.

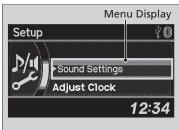

**Selector knob:** Rotate left or right to scroll through the available choices. Press  $\boxtimes$  to set your selection.

**SETUP button:** Press to select any mode such as the **RDS Information**, **Sound Settings**, **Play Mode**, **Resume/Pause**, or **Adjust Clock**.

**BACK button:** Press to go back to the previous display.

**button:** Press to change the audio/ information screen brightness. The brightness can be set differently for the day time and night time.

Pressing the button switches the modes between daytime and night time. Adjust the brightness using ?

#### 

These indications are used to show how to operate the selector knob.

Rotate 😙 to select.

Press  $\begin{tabular}{l} \line \end{table} \begin{tabular}{l} \line \end{tabular}$  to enter.

Press the **MODE**, ⊕, , or button on the steering wheel to change any audio setting.

**Audio Remote Controls** P. 159

#### Setup Menu Items

RDS Information P. 162

Sound Settings P. 160

**▶ Play Mode** P. 167, 170, 175

Resume/Pause P. 177
Adjust Clock P. 104

155


# **Audio/Information Screen**

Displays audio status and wallpaper, and allows you to go to various setup options.

# Switching the Display

Press **DISPLAY** button. Rotate  ${}^{\mbox{\tiny{CP}}}$  and select the mode from the three display modes.

Press 💍.

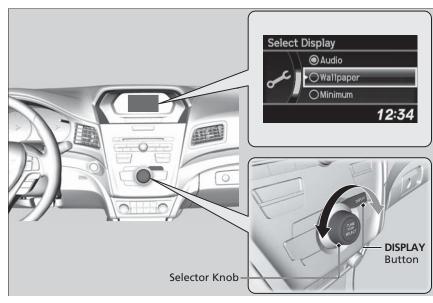

# Audio Display

Shows the current audio information.

Audio System Basic Operation P. 155

# ■ Wallpaper


Shows a clock screen or an image you import.

**► Wallpaper Setup** P. 178

# ■ Minimum Display

Minimizes the display by only showing the clock and audio status on the display.

# Setting Options

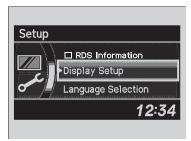

- 1. Press the **SETUP** button.
- 2. Rotate \* and select the setup option you want to change. Press ♂.

Continued 157


# **■** Language Selection



- **1.** Rotate '♥ to select **Language Selection**, then press ঙ.
- 2. Rotate 'ô' to select the language, then press ♂.

### **Audio Remote Controls**

Allow you to operate the audio system while driving.

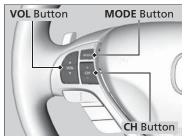

#### **MODE Button**

Cycles through the audio modes as follows:

 $FM1 \rightarrow FM2 \rightarrow AM \rightarrow XM1^* \rightarrow XM2^* \rightarrow CD \rightarrow AUX$ 

### **VOL (Volume) Button**

**Press \( \Lambda**: To increase the volume. **Press \(\nblue{\nblue}\)**: To decrease the volume.

### **CH (Channel) Button**

When listening to the radio

**Press** +: To select the next preset radio station.

**Press** —: To select the previous preset radio station.

**Press and hold** +: To select the next strong station.

**Press and hold** —: To select the previous strong station.

• When listening to a CD, iPod, USB flash drive, or Bluetooth® Audio

**Press** +: To skip to the next song.

**Press** —: To go back to the beginning of the current or previous song.

• When listening to a CD, USB flash drive

**Press and hold** +: To skip to the next folder.

**Press and hold** —: To go back to the previous folder.

When listening to Pandora®\*

**Press** +: To skip to the next song.

#### Maudio Remote Controls


The CD mode appears only when a CD is loaded.

When in AUX mode, the following are operable from the remote controls:


- iPod/USB flash drive connected to the USB adapter cable
- Bluetooth® Audio (with some phones only)


\* Not available on all models

# **Adjusting the Sound**

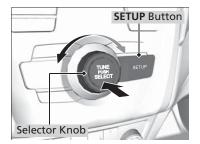

Press the **SETUP** button, and rotate **T** to select **Sound Settings**, then press **S**. Rotate **t** to scroll through the following choices:

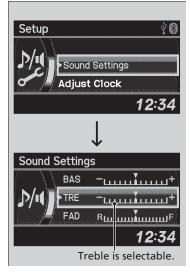


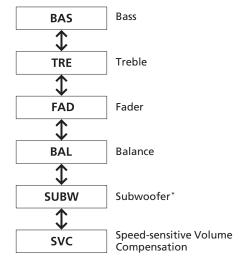

#### ■ Adjusting the Sound

The **SVC** has four modes: **Off, Low, Mid,** and **High. SVC** adjusts the volume level based on the vehicle speed. As you go faster, audio volume increases. As you slow down, audio volume decreases.


# Playing AM/FM Radio

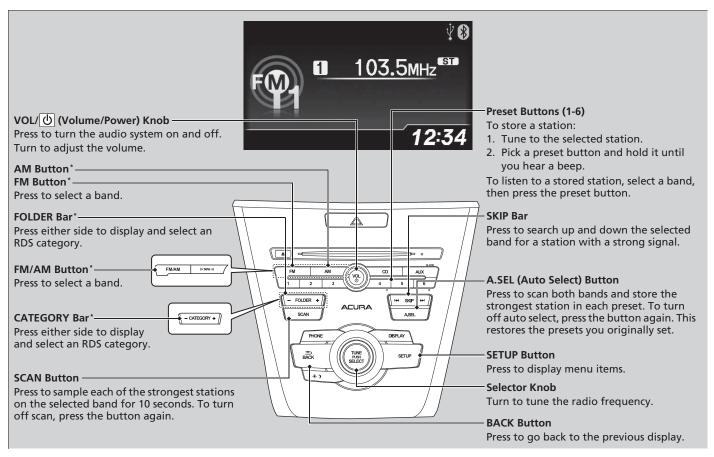

### Radio Data System (RDS)


Provides text data information related to your selected RDS-capable FM station.

#### **■** RDS Information

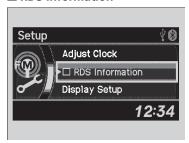

- **1.** Press the **SETUP** button and rotate to select **RDS Information**.
- 2. Each time you press 🖔, the RDS Information switches between on and off.

#### ■ To find an RDS station from your selected program category

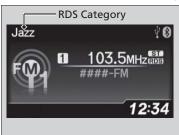

- **1.** Press the **FOLDER** bar or the **CATEGORY** bar to display and select an RDS category.
- 2. Use **SKIP** or **SCAN** to select an RDS station.

#### ▶ Playing AM/FM Radio

The **ST** indicator appears on the display indicating stereo FM broadcasts.

Stereo reproduction in AM is not available.

Switching the Audio Mode

Press the **MODE** button on the steering wheel.


Audio Remote Controls P. 159

You can store 6 AM stations and 12 FM stations into the preset button memory. FM1 and FM2 let you store 6 stations each

Auto Select function scans and stores up to 6 AM stations and 12 FM stations with a strong signal into the preset button memory.

If you do not like the stations auto select has stored, you can manually store your preferred frequencies.

# Playing XM® Radio\*

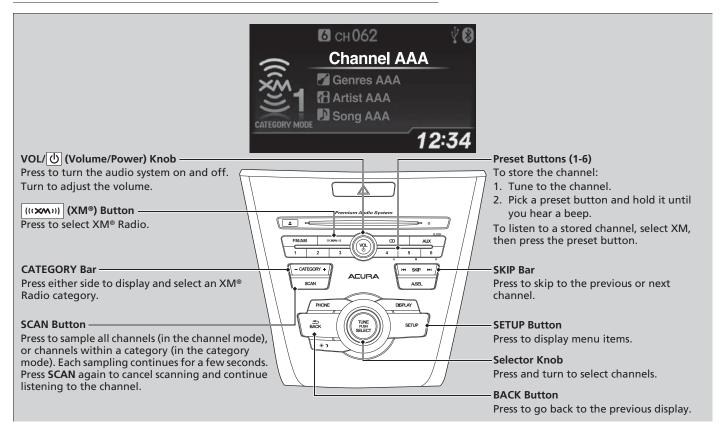

# ■ To Play the XM® Radio

- 1. Press the (((XM1)) button to select the XM® radio band (XM1 or XM2).
- 2. Press the **SETUP** button, rotate or to select **XM Mode**, and press . Rotate or to select **Channel Mode** or **Category Mode**, then press .
- 3. Select a channel using the TUNE ((a)), SKIP, CATEGORY, SCAN, or Preset buttons.

### To Select a Channel from a List



- 1. Press 🖔 to display a channel list.
- 2. Rotate To select a channel, then press S.

#### ▶ Playing XM® Radio \*


In the channel mode, all available channels are selectable. In the category mode, you can select a channel within a category (Jazz, Rock, Classical, etc.).

You can store 12 XM® stations in the preset buttons. XM1 and XM2 let you store 6 stations each.

There may be instances when XM® Radio does not broadcast all the data fields (artist name, title). This does not indicate a problem with your audio system.


# Playing a CD

Your audio system supports audio CDs, CD-Rs and CD-RWs in either MP3, WMA or AAC format. With the CD loaded, press the **CD** button.

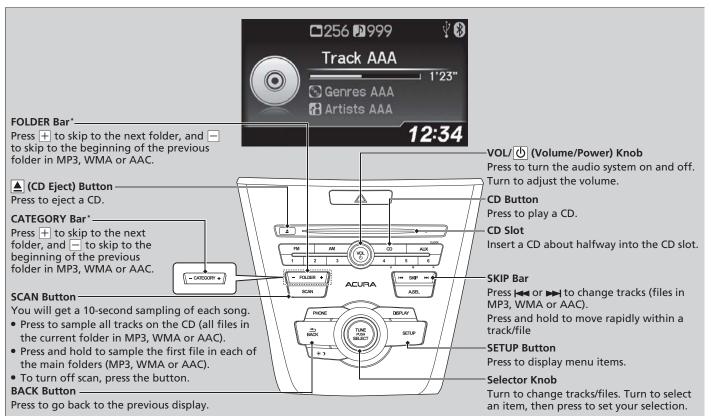

\* Not available on all models

# How to Select a File from a Folder with the Selector Knob (MP3/WMA/AAC)

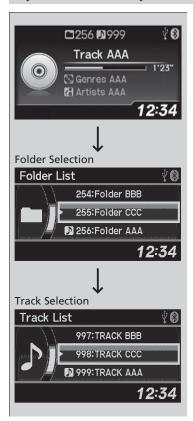

**1.** Press  $\ensuremath{\underline{\otimes}}$  to switch the display to a folder list.

2. Rotate roto select a folder.

- **3.** Press **⊘** to change the display to a list of files in that folder.
- **4.** Rotate 😙 to select a file, then press 💍.

▶ Playing a CD

#### NOTICE

Do not use CDs with adhesive labels. The label can cause the CD to jam in the unit.

WMA files protected by digital rights management (DRM) cannot be played.

The audio system displays **Unplayable File**, then skips to the next file.

Text data appears on the display under the following circumstances:

- When you select a new folder, file, or track.
- When you change the audio mode to CD.
- When you insert a CD.

If you eject the CD but do not remove it from the slot, the system reloads the CD automatically after several seconds.

# ■ How to Select a Play Mode

You can select repeat and random modes when playing a track or file.



1. Press the **SETUP** button.

- 2. Rotate roto select **Play Mode**, then press s.
- **3.** Rotate 😙 to select a mode, then press 🕹.

#### 

Press the **BACK** button to go back to the previous display, and press the **SETUP** button to cancel this setting mode.

Play Mode Menu Items

**Normal Play** 

**Repeat One Track**: Repeats the current track/file(s). **Repeat One Folder** (MP3/WMA/AAC): Repeats all files in the current folder.

**Random in Folder** (MP3/WMA/AAC): Plays all files in the current folder in random order.

Random All: Plays all tracks/files in random order.


# ■ To turn off a play mode

- **1.** Press the **SETUP** button.
- **2.** Rotate  ${}^{\mbox{\tiny{colo}}}$  to select **Play Mode**, then press  ${\underline{\mbox{\o}}}$ .
- **3.** Rotate  ${}^{\frown}$  to select **Normal Play**, then press  ${}^{\frown}$ .


# Playing an iPod

Connect the iPod using your dock connector to the USB adapter cable, then press the **AUX** button.

USB Adapter Cable P. 153

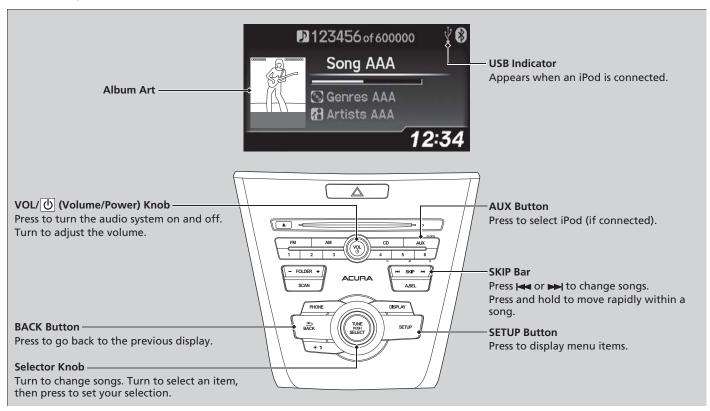

### How to Select a File from the iPod Menu

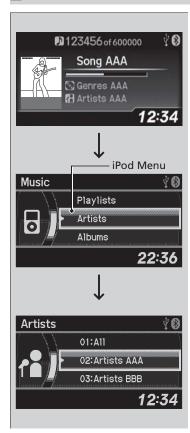

1. Press 🖔 to display the iPod menu.

2. Rotate 😚 to select a menu.

- **3.** Press  $\ensuremath{\mathfrak{S}}$  to display the items on that menu.
- **4.** Rotate ♥ to select an item, then press ८.

#### 

Available operating functions vary on models or versions. Some functions may not be available on the vehicle's audio system.


If there is a problem, you may see an error message on the audio/information screen.

iPod/USB Flash Drive P. 181

Continued 169

# ■ How to Select a Play Mode

You can select repeat and shuffle modes when playing a file.

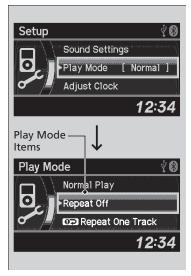

1. Press the **SETUP** button.

- 2. Rotate of to select **Play Mode**, then press S.

#### 

Play Mode Menu Items

**Normal Play** 

Repeat Off: Turns off the repeat mode.

**Repeat One Track**: Repeats the current track.

**Shuffle Off**: Turns off the shuffle mode.

**Shuffle**: Plays all available files in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.

**Shuffle Albums**: Plays all available albums in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.

# ■ To turn off a play mode


- 1. Press the **SETUP** button.
- 2. Rotate 😙 to select Play Mode, then press 🕹.
- 3. Rotate 😙 to select Normal Play, then press 🕹.

U.S. models iPhone® use only

# **Playing Internet Radio**

Activate Pandora®, and connect the iPhone® using your dock connector to the USB adapter cable, then press the **AUX** button.

USB Adapter Cable P. 153

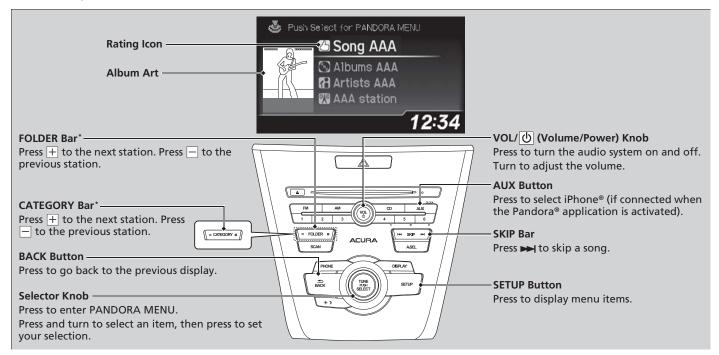

\* Not available on all models

### Pandora® Menu

You can operate some of the Pandora menu items from your vehicle's audio system. The available items are:

- **Station List (QuickMix** is also available)
- Like
- Dislike
- Resume/Pause
- SKIP
- Bookmark This Song
- Bookmark This Artist

### ■ Operating a menu item



- **1.** Press 🖔 to display the **PANDORA MENU**.
- 2. Rotate roto select a menu.
- **3.** Press 🖔 to display the items on that menu.

#### ▶ Playing Internet Radio

Pandora® is a personalized Internet radio service that selects music based on an artist, song, or genre a user enters, and streams what is likely to be of interest.

To use this service in your vehicle, the Pandora® app must first be installed on your iPhone®. Visit www.pandora.com. for more information.

If you cannot operate Pandora® through the audio system, it may be streaming through *Bluetooth®* Audio. Make sure Pandora® mode on your audio system is selected.

#### Pandora® Menu

Available operating functions vary on software versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

Pandora® P. 182

There are restrictions on the number of songs you can skip or dislike in a given hour.


173

# Playing a USB Flash Drive

Your audio system reads and plays sound files on a USB flash drive in either MP3, WMA or AAC\*1 format.

Connect your USB flash drive to the USB adapter cable, then press the **AUX** button.


USB Adapter Cable P. 153

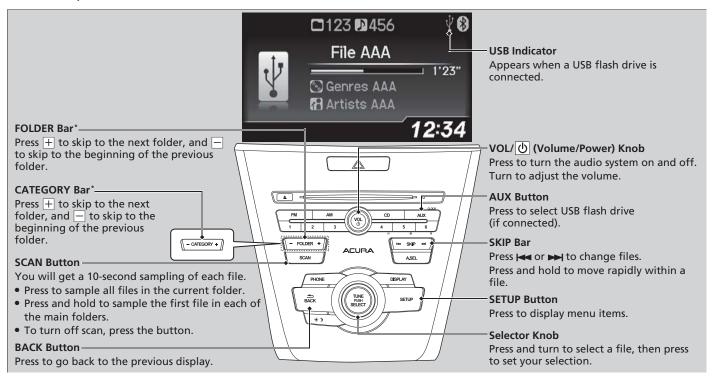

<sup>\*1:</sup>Only AAC format files recorded with iTunes are playable on this unit.

\* Not available on all models Continued

### ■ How to Select a File from a Folder with the Selector Knob

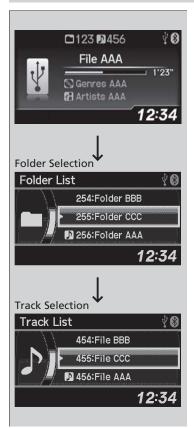

1. Press 🖔 to switch the display to a folder list.

2. Rotate roto select a folder.

- **4.** Rotate to select a file, then press .

#### 

Use the recommended USB flash drives.

**■ General Information on the Audio System** P. 183

Files in WMA format protected by digital rights management (DRM) are not played. The audio system displays **Unplayable File**, and then skips to the next file.

If there is a problem, you may see an error message on the audio/information screen.

iPod/USB Flash Drive P. 181

### ■ How to Select a Play Mode

You can select repeat and random modes when playing a file.



1. Press the **SETUP** button

- **2.** Rotate 😙 to select **Play Mode**, then press &.
- **3.** Rotate 😚 to select a mode, then press 🗸.

#### 

Play Mode Menu Items

**Normal Play** 

Repeat One Track: Repeats the current file.

Repeat One Folder: Repeats all files in the current folder.

Random in Folder: Plays all files in the current folder in random order

Random All: Plays all files in random order.

### ■ To turn off a play mode


- 1. Press the **SETUP** button.
- 2. Rotate roto select Play Mode, then press S.
- 3. Rotate roto select Normal Play, then press 8.

# Playing Bluetooth® Audio

Your audio system allows you to listen to music from your *Bluetooth®*-compatible phone.

This function is available when the phone is paired and linked to the vehicle's *Bluetooth*® HandsFreeLink® (HFL) system.

Phone Setup P. 196

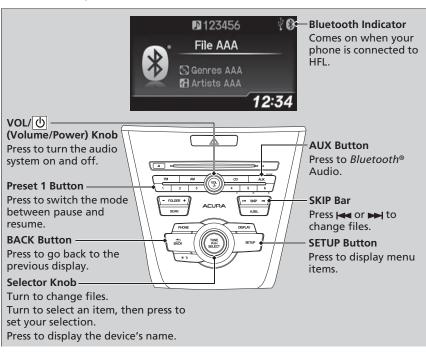

#### 


Not all Bluetooth-enabled phones with streaming audio capabilities are compatible with the system. For a list of compatible phones:

- U.S.: Visit www.acura.com/handsfreelink, or call 1-888-528-7876.
- Canada: Visit www.handsfreelink.ca, or call 1-888-528-7876.

In some states, it may be illegal to perform some data device functions while driving.

If more than one phone is paired to the HFL system, there will be a delay before the system begins to play.

### ■ To Play *Bluetooth*® Audio Files

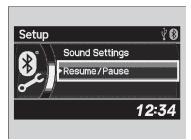

- **1.** Make sure that your phone is paired and linked to HFL.
- 2. Press the AUX button.

If the phone is not recognized, another HFL-compatible phone, which is not compatible for *Bluetooth*® Audio, **may be** already linked.

### ■ To pause or resume a file

- **1.** Press the **SETUP** button.
- **2.** Rotate 'ô' to select **Resume/Pause**, then press ⊗. Each time you press ⊗, the setting switches between Pause and Resume.

#### ∑To Play Bluetooth® Audio Files

To play the audio files, you may need to operate your phone. If so, follow the phone maker's operating instructions.

The pause function may not be available on some phones.

If any audio device is connected to the auxiliary input jack, you may need to press the **AUX** button repeatedly to select the *Bluetooth*® Audio system.


Switching to another mode pauses the music playing from your phone.

# **Wallpaper Setup**

You can change, store and delete the wallpaper on the audio/information screen.

# ■ Import Wallpaper

You can import up to three images, one at a time, for wallpaper from a USB flash drive.

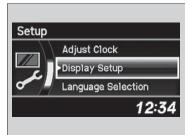

 Connect the USB flash drive to the adapter cable

USB Adapter Cable P. 153

- 2. Press the **SETUP** button.
- **3.** Rotate **\*** to select **Display Setup**, then press **③**.
- **4.** Rotate or to select **Wallpaper**, then press S.
- **5.** Rotate 🕝 to select **Import**, then press 🖧.
- **6.** Rotate '♥ to select a desired picture, then press ८.
  - ➤ The preview of the imported data is displayed.
- **7.** Press 💍 to save the data.
  - ► The confirmation message will appear. Then the display will return to the import wallpaper list.
- **8.** Rotate '**?** to select the place to save the data, then press ∠.
  - ► The confirmation message will appear.

#### **>>** Wallpaper Setup

- When importing wallpaper files, the image must be in the USB flash drive's root directory.
   Images in a folder cannot be imported.
- The file format of the image that can be imported is BMP (bmp) or JPEG (jpg).
- Each image file can be up to 2 MB.
- The maximum image size is 1,680 x 936 pixels. If the image size is less than 420 x 234 pixels, the image is displayed in the middle of the screen with the extra area appearing in black.
- Up to 255 files can be selected.

If the USB flash drive does not have any pictures, **No** compatible images were found. See Owner's Manual. will appear.



### ■ Select Wallpaper

- **1.** Rotate  ${\mathfrak S}$  to select **Select** on the wallpaper setup menu, then press  ${\mathfrak S}$ .
  - ► The screen will change to the wallpaper list.
- 2. Rotate 😙 to select desired wallpaper and press 🕹.
  - ▶ When the scroll is stopped, the thumbnail is displayed.

### ■ Delete wallpaper

- 1. Rotate 'ô' to select **Delete** on the wallpaper setup menu, then press ¿. ► The screen will change to the delete wallpaper list.
- 2. Rotate 'ô' to select wallpaper that you want to delete and press ♂.

  ► The confirmation message will appear.
- **3.** Rotate  ${\mathfrak T}$  to select **Yes**, then press  ${\mathfrak T}$  to delete completely.

# Audio Error Messages\*

# **CD Player**

If a disc error occurs, you may see the following error messages.

Error Message	Cause	Solution
Unplayable File	Track/file format not supported	<ul> <li>Current track/file will be skipped. The next supported track/file plays automatically.</li> </ul>
Bad Disc Please check owners manual Push Eject Mecha Error	Mechanical error	<ul> <li>Press the (eject) button and remove the disc, and check that the error message is cleared.</li> <li>Check that the disc is not damaged or deformed, and insert the disc again.</li> </ul>
Bad Disc Please check owners manual	Servo error	<ul> <li>▶ Protecting CDs P. 185</li> <li>If the error message reappears, press the ▲ button, and pull out the disc.</li> <li>Insert a different disc.</li> <li>If the new disc plays, there is a problem with the first disc.</li> <li>If the error message repeats, or the disc cannot be removed, contact a dealer.</li> <li>Do not try to force the disc out of the player.</li> </ul>
Check Disc	Disc error	• Check that the disc is not damaged or deformed.  ▶ Protecting CDs P. 185

# iPod/USB Flash Drive

If an error occurs while playing an iPod or USB flash drive, you may see the following error messages. If you cannot clear the error message, contact a dealer.

Error Message	Solution
USB Error	Appears when there is a problem with the USB adapter unit. Check if the device is compatible with the USB adapter unit.
Bad USB Device Please Check Owners Manual.	Appears when an incompatible device is connected. Disconnect the device. Then turn the audio system off, and turn it on again. Do not reconnect the device that caused the error.
No Song	Appears when the iPod is empty. Check that compatible files are stored on the device.
Unsupported Ver	Appears when an unsupported iPod is connected. If it appears when a supported iPod is connected, update the iPod software to the newer version.
Retry Connection	Appears when the system does not acknowledge the iPod. Reconnect the iPod.
Unplayable File	Appears when the files in the USB flash drive are DRM or an unsupported format. This error message appears for about 3 seconds, then plays the next song.
No Data	Appears when the USB flash drive is empty or there are no MP3, WMA, or AAC files in the USB flash drive. Check that compatible files are stored on the device.
Unsupported	Appears when an unsupported device is connected. If it appears when a supported device is connected, reconnect the device.

181

### U.S. models

# Pandora<sup>®</sup>

If an error occurs while playing Pandora®, you may see the following error messages. If you cannot clear the error message, contact a dealer.

Error Message	Solution
PANDORA No Station	Appears when there is no station list on the device. Use the device to create a station.
PANDORA Requires Update	Appears when Pandora version is not supported. Please update the device application.
PANDORA Unavailable	Appears when Pandora is performing system maintenance. Try again later.
PANDORA Cannot Connect	Appears when Pandora is unable to play music. Check your device.
PANDORA Loading	Appears when Pandora is loading.

# General Information on the Audio System

### XM® Radio Service\*

# Subscribing to XM® Radio

- **1.** You need your radio ID ready before registering for subscription. To see the ID in the display: Turn the selector knob until **0** appears.
- Have your radio ID and credit card number ready, and either call or visit the XM® website to subscribe.

### ■ Receiving XM® Radio

Press the ((XM®) button and stay in this mode for about 30 minutes until the service is activated. Make sure your vehicle is in an open area with good reception.

# ■ XM<sup>®</sup> Radio Display Messages

### Loading...:

XM® is loading the audio or program information.

#### **Channel Off Air:**

The channel is not currently broadcasting.

#### **Channel Not Authorized:**

XM® radio is receiving information update from the network.

### No Signal:

The signal is too weak in the current location.

----:

No such channel exists, the channel is not part of your subscription, or the artist or title information is unavailable.

#### **Check Antenna:**

There is a problem with the XM® antenna. Contact a dealer.

### Subscribing to XM® Radio

Contact Information for XM® Radio:

US: XM® Radio at www.siriusxm.com or 1-800-852-9696

Canada: XM® Canada at www.xmradio.ca, or 1-877-209-0079

### ■ Receiving XM® Radio

The XM® satellites are in orbit over the equator; therefore, objects south of the vehicle may cause satellite reception interruptions. Satellite signals are more likely to be blocked by tall buildings and mountains the farther north you travel from the equator.

You may experience reception problems under the following circumstances:

- In a location with an obstruction to the south of your vehicle.
- In tunnels
- On the lower level of a multi-tiered road
- Large items carried on the roof rack

\* Not available on all models

### **Recommended CDs**

- Use only high-quality CD-R or CD-RW discs labeled for audio use.
- Use only CD-R or CD-RW discs on which the recordings are closed.
- Play only standard round-shaped CDs.

The CD packages or jackets should have one of these marks.











### CDs with MP3, WMA or AAC files

- Some software files may not allow for audio play or text data display.
- Some versions of MP3, WMA or AAC formats may be unsupported.

#### ■ Recommended CDs ■ Recommended

A Dual-disc cannot play on this audio unit. If recorded under certain conditions, a CD-R or CD-RW may not play either.

### **■** Protecting CDs


Follow these precautions when handling or storing CDs:

- Store a CD in its case when it is not being played.
- When wiping a CD, use a soft clean cloth from the center to the outside edge.
- Handle a CD by its edge. Never touch either surface.
- Never insert foreign objects into the CD player.
- Keep CDs out of direct sunlight and extreme heat.
- Do not place stabilizer rings or labels on the CD.
- Avoid fingerprints, liquids, and felt-tip pens on the CD.

### ▶ Protecting CDs

#### NOTICE

Do not insert a damaged CD. It may be stuck inside and damage the audio unit.

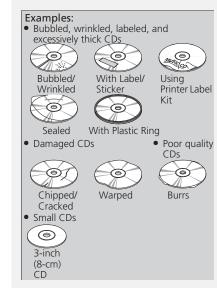

# Compatible iPod, iPhone, and USB Flash Drives

## ■ iPod and iPhone Model Compatibility

Model	
iPod (5th generation)	
iPod classic 80/160GB (launched in 2007)	
iPod classic 120GB (launched in 2008)	
iPod classic 160GB (launched in 2009)	
iPod nano (launched in 2010)	
iPod touch (launched in 2010)	
iPhone 3G/iPhone 3GS/iPhone 4	

### USB Flash Drives

- Use a recommended USB flash drive of 256 MB or higher.
- Some digital audio players may not be compatible.
- Some USB flash drives (e.g., a device with security lockout) may not work.
- Some software files may not allow for audio play or text data display.
- Some versions of MP3, WMA, or AAC formats may be unsupported.

### 

This system may not work with all software versions of these devices.

#### **≥**USB Flash Drives

Files on the USB flash drive are played in their stored order. This order may be different from the order displayed on your PC or device.

The HomeLink® Universal Transceiver can be programmed to operate up to three remote controlled devices around your home, such as garage doors, lighting, or home security systems.

### ■ Important Safety Precautions

Refer to the safety information that comes with your garage door opener to test that the safety features are functioning properly. If you do not have the safety information, contact the manufacturer.

Before programming HomeLink, make sure that people and objects are out of the way of the garage or gate to prevent potential injury or damage.

When programming a garage door opener, park just outside the garage door's path.

# Training HomeLink



If you have not trained any of the buttons in HomeLink before, you should erase any previously learned codes. To do this:

- Press and hold the two outside buttons for about 20 seconds, until the red indicator blinks. Release the buttons, and proceed to step 1.
- If you are training the second or third button, go directly to step 1.

 
#### ∑HomeLink® Universal Transceiver\*

HomeLink® is a registered trademark of Johnson Controls., Inc.

Before programming HomeLink to operate a garage door opener, confirm that the opener has an external entrapment protection system, such as an "electronic eye," or other safety and reverse stop features. If it does not, HomeLink may not be able to operate it.

### Training a Button

- Position the remote transmitter you wish to link 1 to 3 inches (3-8 cm) from the HomeLink button you want to program.
  - Press and hold the desired HomeLink button and the button on the remote transmitter. Does the HomeLink indicator (LED) blink after 10 secs?

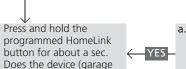

door opener) work?

YES NO Training Complete

4. Press and hold the HomeLink button again.

every 2 secs.

Press and hold the HomeLink button again. The remote-controlled

device should operate. **Training Complete** 

HomeLink LED

is on.

"learn" button on the remote-controlled device (e.g. garage door opener).

Within 30 secs, press and hold the programmed HomeLink button for 2 secs.

Press and hold the remote and the Homel ink

button at the same time. Then, while

Dose the LED blink within 20 secs?

HomeLink indicator blinks for 2 secs,

then remains on.

a. The remote has a rolling code. Press the

continuing to hold the HomeLink button,

press and release the button on the remote

#### >> Training HomeLink

#### Retraining a Button

If you want to retrain a programmed button for a new device, you do not have to erase all button memory. You can replace the existing memory code using this procedure:

1. Press and hold the desired HomeLink button until the HomeLink indicator begins to blink.

#### Standard transmitter Indicator remains on for about 25 secs.

Rolling code transmitter Indicator blinks rapidly for two secs, then remains on

for about 23 secs.

2. Continue to hold the HomeLink button and follow steps 1 - 3 under "Training a Button."

### **Erasing Codes**

To erase all the codes, press and hold the two outside buttons until the HomeLink indicator begins to blink (about 10 to 20 secs). You should erase all codes before selling the vehicle.

If you have any problems, see the device's instructions, visit www.homelink.com, or call Homel ink at 1-800-355-3515

# Bluetooth® HandsFreeLink®

#### Models with navigation system


See the Navigation System Manual for how to operate  ${\it Bluetooth}^{\it @}$  HandsFreeLink $^{\it @}$ .

#### Models without navigation system

Bluetooth® HandsFreeLink® (HFL) allows you to place and receive phone calls using your vehicle's audio system, without handling your cell phone.

# **Using HFL**

### **■ HFL Buttons**

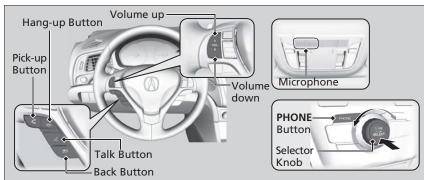

(Pick-up) button: Press to go directly to the Phone screen or to answer an incoming call.

(Hang-up) button: Press to end a call.

(Talk) button: Press to call a number with a stored voice tag.

**(Back) button:** Press to cancel a command.

**PHONE button:** Press to go directly to the **Phone** screen.

Selector knob: Rotate 😚 to select an item on the screen, then press 🕹.

#### >> Bluetooth® HandsFreeLink®

To use HFL, you need a *Bluetooth*-compatible cell phone. For a list of compatible phones, pairing procedures, and special feature capabilities:

- U.S.: Visit www.acura.com/handsfreelink, or call 1-888-528-7876.
- Canada: Visit www.handsfreelink.ca, or call 1-888-528-7876.


#### Voice control tips

- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphone.
- Press and release the <u>©</u> button when you want to call a number using a stored voice tag. Speak clearly and naturally after a beep.
- If the microphone picks up voices other than yours, the command may be misinterpreted.
- To change the volume level, use the audio system's volume knob or the remote audio controls on the steering wheel.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle


If you receive a call while using the audio system, the system resumes its operation after ending the call.

### HFL Status Display

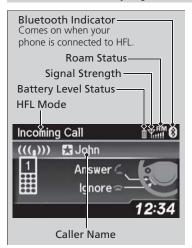

The audio/information screen notifies you when there is an incoming call.

# Limitations for Manual Operation

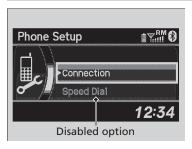

Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a grayed-out option until the vehicle is stopped.

Only previously stored speed dial entries with voice tags can be called using voice commands while the vehicle is in motion.

Speed Dial P. 206

#### ≫Bluetooth® HandsFreeLink®

Bluetooth® Wireless Technology

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth* SIG, Inc., and any use of such marks by Honda Motors Co., Ltd., is under license. Other trademarks and trade names are those of their respective owners.

#### **HFL** Limitations

An incoming call on HFL will interrupt the audio system when it is playing. It will resume when the call is ended.

#### 


The information that appears on the audio/ information screen varies between phone models.

You can change the system language to English, French, or Spanish.

Language Selection P. 158

### **HFL Menus**

The power mode must be in ACCESSORY or ON to use HFL.

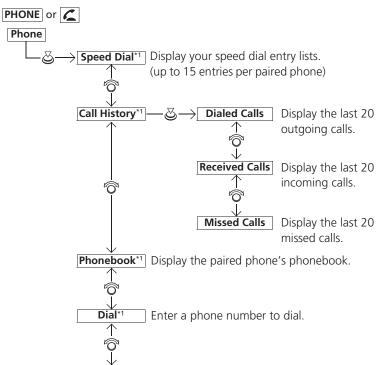


<sup>\*1:</sup> Appears only when a phone is connected to HFL.


#### >> HFL Menus

To use HFL, you must first pair your *Bluetooth*-compatible cell phone to the system while the vehicle is parked.

Some functions are limited while driving. A message appears on the screen when the vehicle is moving and the operation is canceled.

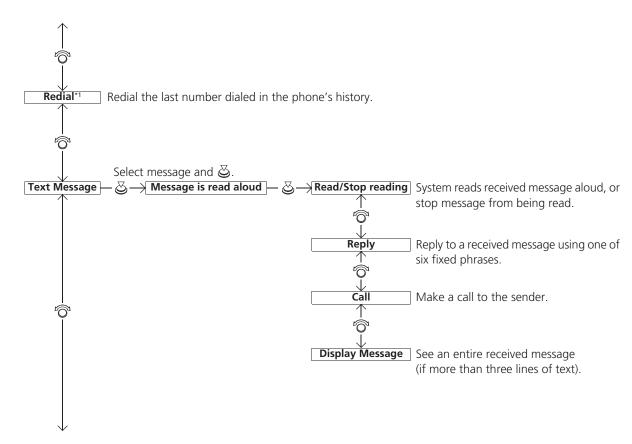


\*1: Appears only when a phone is connected to HFL.

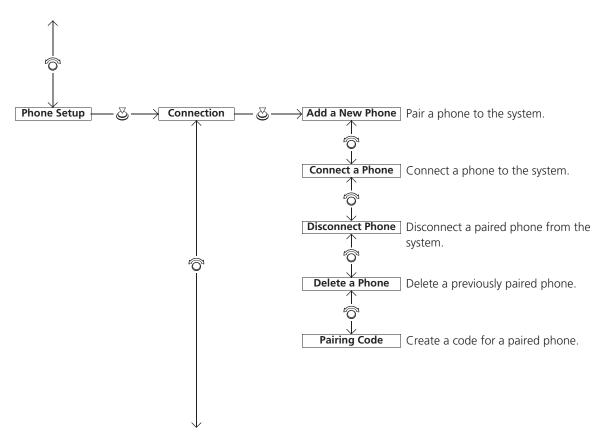


<sup>\*1:</sup> Appears only when a phone is connected to HFL.

193

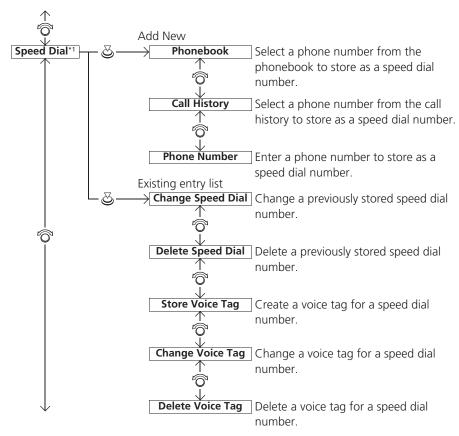


\*1: Appears only when a phone is connected to HFL.

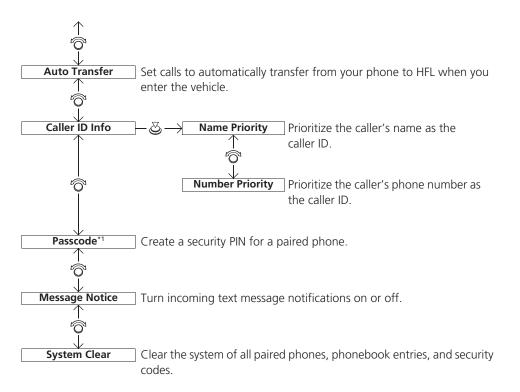

195

<sup>\*1:</sup> Appears only when a phone is connected to HFL.

### Phone Setup

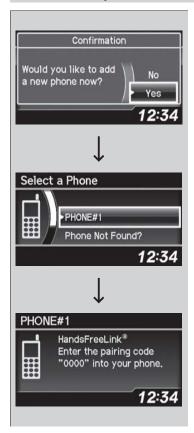

- To pair a cell phone (when there is no phone paired to the system)
- 1. Press the **PHONE** button or the button.
- 2. Rotate or to select Yes, then press S.
- **3.** Make sure your phone is in search or discoverable mode, then press **3**.
  - ► HFL automatically searches for a Bluetooth device.
- **4.** When your phone appears on the list, select it by pressing *℧*.
  - ► If your phone doesn't appear, select Phone Not Found? and search for Bluetooth devices using your phone. From your phone, select HandsFreeLink.
- **5.** HFL gives you a four-digit pairing code to input on your phone.

  When your phone prompts you, input the four-digit pairing code.
- **6.** You will receive a notification on the screen if pairing is successful.

#### ∑Phone Setup

Your *Bluetooth*-compatible phone must be paired to HFL before you can make and receive hands-free calls.

### Phone Pairing Tips:


- You cannot pair your phone while the vehicle is moving.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is paired to HFL.
- If your phone is not ready for pairing or not found by the system within three minutes, the system will time out and returns to idle.

Once you have paired a phone, you can see it displayed on the screen with one or two icons on the right side.

These icons indicate the following:


: The phone can be used with HFL.

The phone is compatible with *Bluetooth®* Audio.

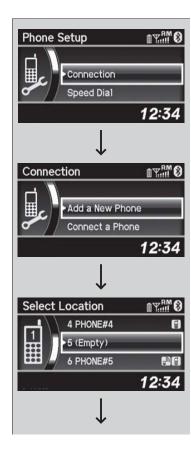

- To pair a cell phone (when a phone has already been paired to the system)
- **1.** Press the **PHONE** button or the **\( \rightarrow{\** 
  - ► If a prompt appears asking to connect to a phone, select No and proceed with step 2.
- **2.** Rotate 'ô' to select **Phone Setup**, then press ♂.
- **3.** Rotate **\*** to select **Connection**, then press **⑤**.
- **4.** Rotate 😚 to select **Add a New Phone**, then press 💆.
  - ► The screen changes to **Select Location**.


**5.** Rotate 😙 to select **Empty**, then press 💍.

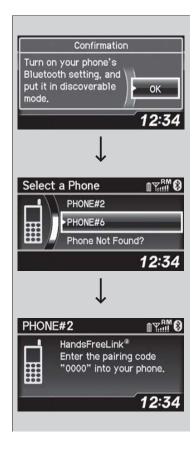

- **6.** Make sure your phone is in search or discoverable mode, then press ♂.
  - ► HFL automatically searches for a Bluetooth device.

- **7.** When your phone appears on the list, select it by pressing *⊗*.
  - ▶ If your phone doesn't appear, select Phone Not Found? and search for Bluetooth devices using your phone. From your phone, select HandsFreeLink
- **8.** HFL gives you a four-digit pairing code to input on your phone.

  When your phone prompts you, input the four-digit pairing code.
- **9.** You will receive a notification on the screen if pairing is successful.

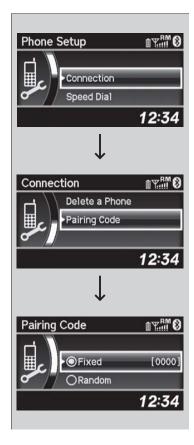

### ■ To change the pairing code setting

- **1.** Press the **PHONE** button or the **\( \rightarrow \)** button.
- **2.** Rotate ♥ to select **Phone Setup**, then press ♥.

- **3.** Rotate to select **Connection**, then press S.
- **4.** Rotate 🌍 to select **Pairing Code**, then press 💆.


**5.** Rotate **♂** to select **Fixed** or **Random**, then press **♂**.

### ∑To change the pairing code setting

The default pairing code is **0000** until you change the setting.

To create your own, select **Fixed**, and delete the current code, then enter a new one.

For a randomly generated pairing code each time you pair a phone, select **Random**.

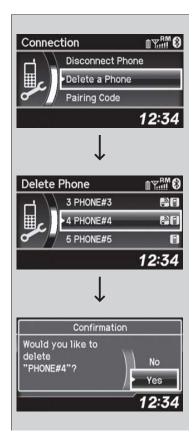

### ■ To delete a paired phone

- **1.** Press the **PHONE** button or the **\( \subseteq \)** button.
- **2.** Rotate 🎅 to select **Phone Setup**, then press ☑.
  - ▶ Repeat the procedure to select Connection, then Delete a Phone.

**3.** Rotate  $\mathfrak{T}$  to select a phone you want to delete, then press  $\mathfrak{S}$ .

- **4.** You will receive a confirmation message on the screen. Rotate '♥ to select **Yes**, then press ८.
  - You will receive a notification on the screen if it is successful.

### ■ To Set Up a Text Message Notice Option



- **1.** Press the **PHONE** button or the **\( \bigcirc\)** button.
- 2. Rotate 😚 to select **Phone Setup**, then press 💆.

**3.** Rotate 🎅 to select **Message Notice**, then press 丛.

**4.** Rotate 🎅 to select a mode you want, then press 💆.

#### ∑To Set Up a Text Message Notice Option

**On**: A pop-up notification comes on every time you receive a new text message.

**Off**: The message you receive is stored in the system without notification.

## ■ To Create a Security PIN

You can protect each of the six cell phones with a security PIN.

Select a Phone 1 Y.... 3 PHONE#3 4 PHONE#4 5 PHONE#5 12:34 Confirmation Would you like to set PIN for No "PHONE#4"? Yes 12:34 1 Y.... 0 **Enter PIN** 000◀ 112345678900 12:34

- 1. Press the **PHONE** button or the **L** button.
- 2. Rotate 🎅 to select **Phone Setup**, then press 💆.
  - Repeat the procedure to select **Passcode**.
- **3.** Select a phone you want to add a security PIN to.
  - ► Rotate 😚 to select a phone you want to add a security PIN to, then press 🕉.
- **4.** You will receive a confirmation message on the screen
  - ▶ Rotate 🛜 to select **Yes**, then press 💆.

- **5.** Enter a new four-digit number.
  - ► Rotate 😚 to select, then press 🕹. Press 🔹 to delete. Press 📣 to enter the security PIN.
- **6.** Re-enter the four-digit number.
  - The screen returns to the screen in step 2.

#### ∑To Create a Security PIN

In the phone is already security PIN protected, you need to enter the current security PIN before clearing the PIN or creating a new one.

# Automatic Transferring

If you get into the vehicle while you are on the phone, the call can be automatically transferred to HFI



- **1.** Press the **PHONE** button or the **\( \sigma** button.
- 2. Rotate ♥ to select Phone Setup, then press ♥.
  - Repeat the procedure to select Auto Transfer.
- **3.** Rotate ♥ to select **On**, then press ८.
- **4.** You will receive a notification on the screen if the change is successful.

### ■ Caller's ID Information

You can select a caller's information to be displayed when you have an incoming call.



- **1.** Press the **PHONE** button or the **\( \subseteq \)** button.
- 2. Rotate 😚 to select **Phone Setup**, then press 🕃.
  - Repeat the procedure to select Caller ID Info.
- 3. Rotate or to select a mode you want, then press S.
- **4.** You will receive a notification on the screen if the change is successful.


### ∑Caller's ID Information

Name Priority mode: A caller's name is displayed if it is stored in the phonebook.

Number Priority mode: A caller's phone number is displayed.

### ■ To Clear the System

Security codes, paired phones, all stored voice tags, all speed dial entries, and all imported phonebook data are erased.

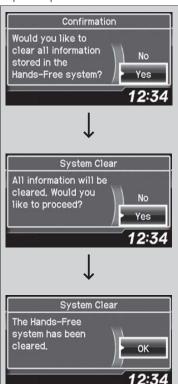

- **1.** Press the **PHONE** button or the **\( \rightarrow \)** button.
- **2.** Rotate \* to select **Phone Setup**, then press **⊘**.
  - ► Repeat the procedure to select **System Clear**.
- **3.** Rotate 😙 to select **Yes**, then press 🕹.

**4.** You will receive a notification message on the screen. Rotate ♥ to select **Yes**, then press ௧.

**5.** You will receive a confirmation message on the screen. Press ♂ to finish.


# Automatic Import of Cellular Phonebook and Call History

When your phone is paired, the contents of its phonebook and call history are automatically imported to HFL.



### Mail Automatic Import of Cellular Phonebook and Call History

When you select a person from the list in the cellular phonebook, you can see up to three category icons. The icons indicate what types of numbers are stored for that name.

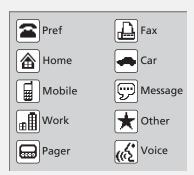

On some phones, it may not be possible to import the category icons to HFL.

The phonebook is updated after every connection. Call history is updated after every connection or call.

### Speed Dial

Up to 15 speed dial numbers can be stored per phone.

**■**Y..... **3** Speed Dial Home (Add New) (Add New) 12:34 Add New mY.... € Phonebook Call History Phone Number 12:34 Confirmation Would you like to store a voice tag for No this entry? Yes

To store a speed dial number:

- **1.** Press the **PHONE** button or the **\( \rightarrow \)** button.
- **2.** Rotate ♥ to select **Phone Setup**, then press ♥.
  - Repeat the procedure to select Speed Dial, then Add New.
- **3.** Rotate 'ô' to select a place to choose a number from, then press ♂.

### By Phonebook:

Select a number from the linked cell phone's imported phonebook.

### By Call History:

► Select a number from the call history.

#### By **Phone Number**:

- ▶ Input the number manually.
- **4.** When the speed dial is successfully stored, you are asked to create a voice tag for the number. Rotate to select **Yes** or **No**, then press ♂.
- **5.** Using the <u>©</u> button, follow the prompts to say the name for the speed dial entry.

 
#### Speed Dial

You can use the audio preset buttons during a call to store a speed dial number:

- 1. Press and hold the desired audio preset button during a call.
- 2. The contact information for the active call will be stored for the corresponding speed dial.

When a voice tag is stored, press the 😥 button to call the number using the voice tag.



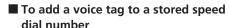


- **1.** Press the **PHONE** button or the **\( \rightarrow \)** button.
- 2. Rotate of to select **Phone Setup**, then press S.
  - Repeat the procedure to select Speed Dial.
- **3.** Select an existing speed dial entry.
- **4.** Rotate 🛜 to select **Store Voice Tag**, then press ℧.
- **5.** Using the <u>©</u> button, follow the prompts to complete the voice tag.

#### Speed Dial


Avoid using duplicate voice tag. Avoid using "home" as a voice tag.

It is easier for HFL to recognize a longer name. For example, use "John Smith" instead of "John."

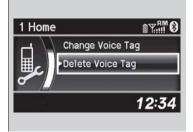

### ■ To delete a voice tag

- **1.** Press the **PHONE** button or the **C** button.
- **2.** Rotate ♥ to select **Phone Setup**, then press ♥.
  - Repeat the procedure to select **Speed Dial**.
- **3.** Select an existing speed dial entry.
- **4.** Rotate **\*** to select **Delete Voice Tag**, then press **►**.
  - ▶ You will receive a confirmation message on the screen. Rotate 🛜 to select **Yes**, then press 💆.

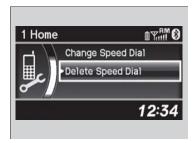

### ■ To delete a speed dial number

- **1.** Press the **PHONE** button or the **\( \sigma** button.
- **2.** Rotate ♥ to select **Phone Setup**, then press ♥.
  - ▶ Repeat the procedure to select **Speed Dial**.
- **3.** Select an existing speed dial entry.
- **4.** Rotate 'ô' to select **Delete Speed Dial**, then press ⊗.
  - ▶ You will receive a confirmation message on the screen. Rotate 😚 to select **Yes**, then press 🕹.

# ■ Making a Call

You can make calls by inputting any phone number, or by using the imported phonebook, call history, speed dial entries, or redial.




### 


Any voice-tagged speed dial entry can be dialed by voice from any screen.

Press the 🛍 button and follow the prompts.

The maximum range between your phone and vehicles is 30 feet (10 meters).

Once a call is connected, you can hear the voice of the person you are calling through the audio speakers.

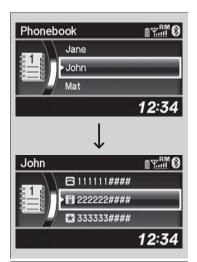

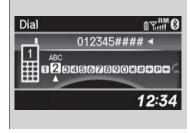

# ■ To make a call using the imported phonebook

When your phone is paired, the contents of its phonebook are automatically imported to HFI

- **1.** Press the **PHONE** button or the **\( \subseteq \)** button.
- 2. Rotate <sup>®</sup> to select **Phonebook**, then press **⊗**.
- 3. The phonebook is stored alphabetically. Rotate 😙 to select the initial, then press 💍.
- 4. Rotate 😚 to select a name, then press 🕹.
- **5.** Rotate 😚 to select a number, then press 💍.
  - ▶ Dialing starts automatically.

### ■ To make a call using a phone number

- **1.** Press the **PHONE** button or the **\( \subseteq \)** button.
- 2. Rotate 😙 to select **Dial**, then press 🛎.
- **3.** Rotate \* to select a number, then press ⊗.
- **4.** Rotate **⑦** to select **∠**, then press **૭**. 
  ▶ Dialing starts automatically.

∑To make a call using the imported phonebook

This function is disabled while the vehicle is moving. However, you can call a stored speed dial number with a voice tag using voice commands.

- **➡ Limitations for Manual Operation** P. 190
- **Speed Dial** P. 206

### ∑To make a call using a phone number

This function is disabled while the vehicle is moving. However, you can call a stored speed dial number with a voice tag using voice commands.

- **➡ Limitations for Manual Operation** P. 190
- Speed Dial P. 206



### ■ To make a call using redial

- **1.** Press the **PHONE** button or the **\( \rightarrow \)** button.
- 2. Rotate \* to select **Redial**, then press **८**. 
  ▶ Dialing starts automatically.





- **1.** Press the **PHONE** button or the **\( \rightarrow \)** button.
- 2. Rotate 😚 to select **Call History**, then press 💍.
- 3. Rotate 'ô' to select Dialed Calls, Received Calls, or Missed Calls, then press ♂.
- **4.** Rotate ♂ to select a number, then press る.
  - ▶ Dialing starts automatically.

### ■ To make a call using a speed dial entry

- **1.** Press the **PHONE** button or the **\( \rightarrow \)** button.
- 2. Rotate 🎅 to select **Speed Dial**, then press 💍.
- 3. Rotate or to select a number, then press S.
  - ▶ Dialing starts automatically.

#### ∑To make a call using the call history

The call history displays the last 20 dialed, received, or missed calls.

(Appears only when a phone is connected to HFL.)

### ∑To make a call using a speed dial entry

On the **Phone** screen, the first six speed dials on the list can be directly selected by pressing the corresponding audio preset buttons (1-6).

Select **More Speed Dial Lists** to view another paired phone's speed dial list.

When a voice tag is stored, press the 🔊 button to call the number using the voice tag.

Speed Dial P. 206

Any voice-tagged speed dial entry can be dialed by voice from any screen.

Press the button and follow the prompts.



# Receiving a Call



When there is an incoming call, an audible notification sounds (if activated) and the **Incoming Call** screen appears.

Press the button to answer the call.

Press the button to decline or end the call.

### ■ Receiving a Call

Call Waiting

Press the <u>(a)</u> button to put the current call on hold to answer the incoming call.

Press the **\( \subseteq \)** button again to return to the current call.

Ignore the incoming call if you do not want to answer it.

Press the button if you want to hang up the current call.

### Options During a Call

The following options are available during a call.

Mute: Mute your voice.

**Transfer Call**: Transfer a call from HFL to your phone.

Touch Tones: Send numbers during a call. This is useful when you call a menu-

driven phone system.



**1.** To view the available options, press the **PHONE** button

- 2. Rotate option, then press
  - ➤ The check box is checked when **Mute** is selected. Select **Mute** again to turn it off.

**™**Options During a Call

**Touch Tones**: Available on some phones.

### ■ Receiving a Text Message

HFL can display newly received text messages as well as 20 of the most recently received messages on a linked cell phone. Each received message can be read aloud and replied to using a fixed common phrase.



- **1.** A pop-up appears and notifies you of a new text message.
- 2. Rotate \* to select **Yes** to listen to the message, then press **⊘**.
  - ➤ The text message is displayed. The system automatically starts reading out the message.
- **3.** To discontinue the message read-out, press the **BACK** button.

#### ■ Receiving a Text Message

The system does not display any received messages while you are driving. You can only hear them read aloud.


With some phones, you may be able to display up to 20 most recent text messages.

Only the first three lines of the received message are displayed with this option.

Displaying an entire message P. 217

State or local laws may limit your use of the HFL text message feature. Only use the text message feature when conditions allow you to do so safely.

### Displaying Messages

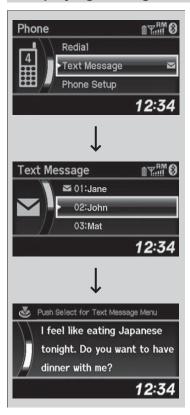

- **1.** Press the **PHONE** button or the **\( \sigma** button.
- 2. Rotate ♥ to select Text Message, then press ௧.

- **3.** Rotate '♥ to select a message, then press ...
  - ➤ The text message is displayed. The system automatically starts reading the message aloud.


#### Displaying Messages

The icon appears next to an unread message.

Only the first three lines of the received message are displayed with this option.

Displaying an entire message P. 217

If you delete a message on the phone, the message is also deleted in the system. If you send a message from the system, the message goes to your phone's outbox.

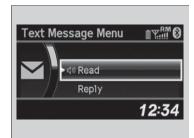


### ■ Using the stop reading or read option

- **1.** Press the **PHONE** button or the **L** button.
- 2. Rotate ♂ to select **Text Message**, then press ♂.
- 3. Rotate 😚 to select a message, then press 💍.
  - ➤ The text message is displayed. The system automatically starts reading the message aloud.
- **4.** Press  $\ensuremath{\underline{\otimes}}$  to enter the **Text Message Menu**.
- **5.** Rotate **\*** to select **Stop Reading** or **Read**, then press **►**.

### ■Using the stop reading or read option

This option changes to:

- Stop Reading while the text message is read out.
   Select this option to discontinue the message readout.
- Read when you go to the Text Message menu, or after you selected Stop Reading. Select this option to hear the system reading out the selected message.

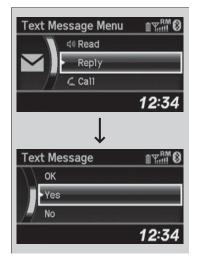

#### ■ Reply to a message

You can reply to a message using one of the six common phrases available in the system.

- 1. Press the **PHONE** button or the **L** button.
- **2.** Rotate 🎅 to select **Text Message**, then press ℧.
- 3. Rotate to select a message, then press S.
  - ➤ The text message is displayed. The system automatically starts reading out the message.
- **4.** Press 🖔 to enter the **Text Message Menu**.
- **5.** Rotate ♥ to select **Reply**, then press ८.
- **6.** Rotate 🅱 to select the reply message, then press ♂.
- **7.** The reply message you selected is displayed. Select **Yes** to send the message.


#### ■ Reply to a message


The available fixed reply messages are as follows:

- Talk to you later, I'm driving.
- I am on my way.
- I'm running late.
- OK
- Yes
- No

You cannot add, edit, or delete reply messages.

After you reply, the following is displayed:

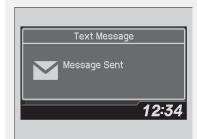

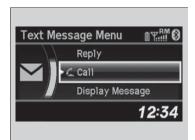



#### ■ Making a call to a sender

You can call the text message sender.

- **1.** Press the **PHONE** button or the **\( \sigma** button.
- 2. Rotate ♥ to select to **Text Message**, then press ௧.
- 3. Rotate <sup>™</sup> to select a message, then press <sup>™</sup>.
  - ➤ The text message is displayed. The system automatically starts reading out the message.
- **4.** Press 🖔 to enter the **Text Message Menu**.
- **5.** Rotate 🛜 to select **Call**, then press 💆. ► HFL begins dialing.

#### ■ Displaying an entire message

- 1. Press the **PHONE** button or the **L** button.
- 2. Rotate ♥ to select to Text Message, then press ♥.
- 3. Rotate \*♥ to select a message, then press ...
  - ➤ The text message is displayed. The system automatically starts reading out the message.
- **4.** Press 🖔 to enter the **Text Message Menu**.
- **5.** Rotate 🌍 to select **Display Message**, then press 🏖.
- **6.** Rotate 🛜 to scroll down and display the entire message.

# **Driving**

This chapter discusses driving, refueling, and information on items such as accessories.

Before Driving	
Driving Preparation	. 220
Maximum Load Limit	. 223
Towing a Trailer	
Towing Your Vehicle	. 225
When Driving	
Starting the Engine	. 226
Precautions While Driving	. 229
Continuous Variable Transmission (CVT).	. 230
Shifting	. 23
Auto Idle Stop	. 236
ECON Button	. 239

Cruise Control	240
Vehicle Stability Assist (VSA®), aka Elec	ctronic
Stability Control (ESC), System	243
Tire Pressure Monitoring System (TPMS	)245
Tire Pressure Monitoring System (T	PMS) -
Required Federal Explanation	246
Braking	
Brake System	248
Anti-lock Brake System (ABS)	250
Brake Assist System	251
Parking Your Vehicle	
When Stopped	252

Multi-View Rear Camera	25
Refueling	
Fuel Information	254
How to Refuel	25!
Fuel Economy	
Improving Fuel Economy	256
Accessories and Modifications	
Accessories	25
Modifications	25

# Before Driving

# **Driving Preparation**

Check the following items before you start driving.

#### Exterior Checks

- Make sure there are no obstructions on the windows, door mirrors, exterior lights, or other parts of the vehicle.
  - Remove any frost, snow, or ice.
  - ▶ Remove any snow on the roof, as this can slip down and obstruct your field of vision while driving. If frozen solid, remove ice once it has softened.
  - ➤ When removing ice from around the wheels, be sure not to damage the wheel or wheel components.
- Make sure the hood is securely closed.
  - If the hood opens while driving, your front view will be blocked.
- Make sure the tires are in good condition.
  - ► Check air pressures, and check for damage and excessive wear.

#### **≧** Checking and Maintaining Tires P. 294

- Make sure there are no people or objects behind or around the vehicle.
  - ► There are blind spots from the inside.

#### 

#### NOTICE

When doors are frozen shut, use warm water around the door edges to melt any ice. Do not try to force them open, as this can damage the rubber trim around the doors. When done, wipe dry to avoid further freezing.

Do not pour warm water into the key cylinder. You will be unable to insert the key if the water freezes in the hole.

Heat from the engine and exhaust can ignite flammable materials left under the hood, causing a fire. If you've parked your vehicle for an extended period, inspect and remove any debris that may have collected, such as dried grass and leaves that have fallen or have been carried in for use as a nest by a small animal.

Also check under the hood for leftover flammable materials after you or someone else has performed maintenance on your vehicle.

#### Interior Checks

- Store or secure all items on board properly.
  - ➤ Carrying too much cargo, or improperly storing it, can affect your vehicle's handling, stability, stopping distance, and tires, and make it unsafe.
    - Maximum Load Limit P. 223
- Do not pile items higher than the seat height.
  - ► They can block your view and may be thrown forward in the event of sudden braking.
- Do not place anything in the front seat footwells. Make sure to secure the floor mat.
  - An object or unsecured floor mat can interfere with your brake and accelerator pedal operation while driving.
- If you have any animals on board, do not let them move around in the vehicle.
  - ▶ They may interfere with driving and a crash could occur.
- Securely close and lock all doors and the trunk.
  - Locking/Unlocking the Doors from the Inside P. 111
- Adjust your seating position properly.
- Adjust the head restraint, too.
  - Adjusting the Seats P. 135
  - Adjusting the Head Restraints P. 138
- Adjust the mirrors and steering wheel properly for your driving.
  - Adjust them while sitting in the proper driving position.
    - **▶ Adjusting the Mirrors** P. 133
    - Adjusting the Steering Wheel P. 132

#### 

The headlight aim is set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the trunk, have the aiming readjusted at a dealer or by a qualified technician.

Continued 221


- Be sure items placed on the floor behind the front seats cannot roll under the seats.
  - ► They can interfere with the driver's ability to operate the pedals, the operation of the seats, or the operation of the sensors under the seats.
- Everyone in the vehicle must fasten their seat belt.
  - Fastening a Seat Belt P. 35
- Make sure that the indicators in the instrument panel come on when you start the vehicle, and go off soon after.
  - Always have a dealer check the vehicle if a problem is indicated.
    - Indicators P. 70

223

#### **Maximum Load Limit**

The maximum load for your vehicle is 850 lbs (385 kg). See Tire and Loading Information label attached to the driver's doorjamb.



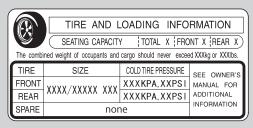

This figure includes the total weight of all occupants, cargo, and accessories, and the tongue load if you are towing a trailer. Steps for Determining Correct Load Limit -

- (1) Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on your vehicle's placard.
- (2) Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- (3) Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
- (4) The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1,400 lbs. and there will be five 150 lb. passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs.

 $(1,400 - 750 (5 \times 150) = 650 lbs.)$ 

Maximum Load Limit

# **AWARNING**

Overloading or improper loading can affect handling and stability and cause a crash in which you can be hurt or killed.

Follow all load limits and other loading guidelines in this manual.

Gross Vehicle Weight Rating (GVWR):

The maximum allowable weight of the vehicle, all occupants, all accessories, and all cargo.

**▶** Specifications P. 346

Gross Axle Weight Rating (GAWR):


The maximum allowable weight of the vehicle axle.

**▶** Specifications P. 346

Continued

- (5) Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in step 4.
- (6) If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

In addition, the total weight of the vehicle, all occupants, accessories, cargo, and trailer tongue load must not exceed the Gross Vehicle Weight Rating (GVWR) or the Gross Axle Weight Rating (GAWR). Both are on a label on the driver's doorjamb.

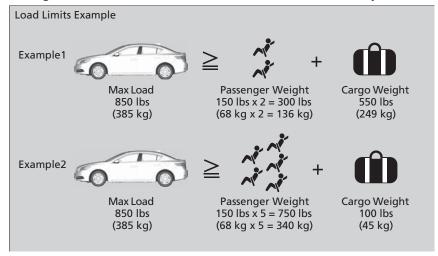

# Towing a Trailer

Your vehicle is not designed to tow a trailer. Attempting to do so can void your warranties.

# **Towing Your Vehicle**

Your vehicle is not designed to be towed behind a motor home. If your vehicle needs to be towed in an emergency, refer to the emergency towing information.

**Emergency Towing** P. 344

# When Driving

# **Starting the Engine**



P

**Brake Pedal** 

1. Make sure the parking brake is applied.

- **2.** Check that the shift lever is in P, then depress the brake pedal.
  - ► Although it is possible to start the vehicle in N, it is safer to start it in P.

#### Starting the Engine

Keep your foot firmly on the brake pedal when starting the engine.

The engine is harder to start in cold weather and in thinner air found at altitudes above 8,000 feet (2,400 meters).

When starting the engine in cold weather, turn off all electrical accessories such as the lights, climate control system, and rear defogger in order to reduce battery drain.

If you live in a region where winter is extremely cold, an engine block heater will improve starting and warming of the engine. If temperatures consistently below -22°F (-30°C) are expected, the coolant mixture should be changed to a higher concentration to prevent freezing. Consult a dealer for details.

If the exhaust system sounds abnormal or you can smell exhaust gas inside the vehicle, have your vehicle checked by a dealer. There may be a problem with the engine or exhaust system.

The immobilizer system protects your vehicle from theft.

If an improperly coded device is used, the engine's fuel system is disabled.

Immobilizer System P. 118

227



**3.** Press the **ENGINE START/STOP** button without depressing the accelerator pedal.

# Stopping the Engine

You can turn the engine off when the vehicle is completely stopped.

- **1.** Shift to P.
- 2. Press the **ENGINE START/STOP** button.

# Starting to Drive

- **1.** Keeping your right foot on the brake pedal, release the parking brake. Check that the parking brake indicator has gone off.
  - Parking Brake P. 248
- **2.** Put the shift lever in **D**. Select **R** when reversing.
- **3.** Gradually release the brake pedal and gently depress the accelerator pedal to pull away.

#### Starting the Engine

Bring the keyless access remote close to the **ENGINE START/STOP** button if the battery in the keyless access remote is weak.

If the Keyless Access Remote Battery is Weak P. 330

The engine may not start if the keyless access remote is subjected to strong radio waves.

Do not hold the **ENGINE START/STOP** button to start the engine.

If the engine does not start, wait at least 10 seconds before trying again.

Continued

#### ■ Creep aid system

With the shift lever in  $\boxed{D}$ , this feature applies brake pressure briefly as you release the brake pedal to prevent the vehicle from moving unexpectedly.

#### ■ Hill start assist system

Hill start assist keeps the brake engaged briefly to help prevent the vehicle from rolling on inclines as you move your foot from the brake pedal to the accelerator.

Move the Shift lever to  $\boxed{\mathbf{D}}$  when facing uphill, or  $\boxed{\mathbf{R}}$  when facing downhill, then release the brake pedal.

#### 

Hill start assist may not prevent the vehicle from rolling downhill on a very steep or slippery slope, and does not operate on small inclines.

Hill start assist is not a replacement for the parking brake.

# **Precautions While Driving**

#### ■ In Rain

Avoid driving in deep water and on flooded roads. This can damage the engine, driveline, or cause electrical component failure.

#### Other Precautions

If there is a strong impact with something under the vehicle, stop in a safe location. Check the underside of the vehicle for damage or any fluid leaks.

#### ▶ Precautions While Driving

#### NOTICE

Do not operate the shift lever while pressing the accelerator pedal. You could damage the transmission.

#### NOTICE

If you repeatedly turn the steering wheel at an extremely low speed, or hold the steering wheel on the full left or right position for a while, the electric power steering (EPS) system heats up. The system goes into a protective mode, and limits its performance. The steering wheel becomes harder and harder to operate. Once the system cools down, the EPS system is restored.

Repeated operation under these conditions can eventually damage the system.

If the power mode is set to ACCESSORY while driving, the engine will shut down and all steering and brake power assist functions will stop, making it difficult to control the vehicle.

Do not put the shift lever in  $\boxed{N}$ , as you will lose engine braking (and acceleration) performance.

During the first 600 miles (1,000 km) of operation, avoid sudden acceleration or full throttle operation so as to not damage the engine or powertrain.

Avoid hard braking for the first 200 miles (300 km). You should also follow this when the brake pads are replaced.

# **Continuous Variable Transmission (CVT)**

# Creeping

The engine runs at a higher idle speed and creeping increases. Keep the brake pedal firmly depressed when stopped.

#### Kickdown

Quickly depressing the accelerator pedal while driving uphill may cause the transmission to drop to a lower ratio, unexpectedly increasing vehicle speed. Depress the accelerator pedal carefully, especially on slippery roads and curves.

#### 

#### NOTICE


Following can damage the under spoiler:

- Parking the vehicle by a parking block
- Parallel parking along the road shoulder
- Driving towards the bottom of a hill
- Driving up or down to a different surface level (such as a road shoulder)
- Driving on a rutted or bumpy road
- Driving on a road with potholes

# **Shifting**

Change the shift position in accordance with your driving needs.

#### ■ Shift lever positions

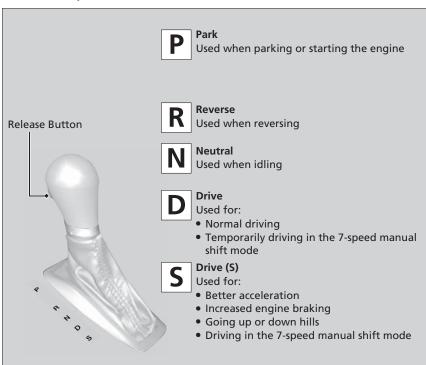

#### >> Shifting

You cannot change the power mode from ON to VEHICLE OFF (LOCK) unless the shift lever is in P.


The vehicle may move forward very slightly even in  $\boxed{\mathbf{N}}$  while the engine is cold.

Depress the brake pedal firmly and, when necessary, apply the parking brake.

When shifting gears in extremely low temperatures (-22°F/-30°C), there may be a short delay before the shift is indicated in the display. Always confirm you are in the correct speed position before driving.

Continued 231

# ■ Shift Lever Operation

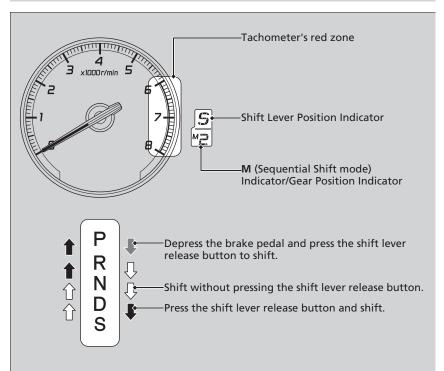

Shift Lever Operation

#### NOTICE

When you change the shift lever from  $\boxed{D}$  to  $\boxed{R}$  and vice versa, come to a complete stop and keep the brake pedal depressed.

Operating the shift lever before the vehicle has come to a complete standstill can damage the transmission.

Use the shift lever position indicator to check the lever position before pulling away.

Whichever position the shift lever is in when driving, a blinking  $\boxed{D}$  indicator indicates a transmission problem.

Avoid sudden acceleration and have the transmission checked by a dealer as soon as possible.

The fuel supply may be cut off if you drive at engine speeds in or over the tachometer's red zone (engine speed limit). If this happens, you may experience a slight jolt.

It may not be possible to operate the shift lever if the brake pedal is applied while the shift lever release button is held down.

Depress the brake pedal first.

## ■ 7-Speed Manual Shift Mode

Use the paddle shifters to change between 1st and 7th speeds without removing your hands from the steering wheel. The transmission switches to the 7-speed manual shift mode when you pull a paddle shifter while driving. This mode is useful when engine braking is needed.

#### ■ When the shift lever is in D:

The shift mode goes into the 7-speed manual shift mode temporarily, and the number is displayed in the shift indicator.

The 7-speed manual shift mode is canceled automatically if you drive at constant speed or accelerate, and the number in the shift indicator goes off.

You can also cancel this mode by pulling the  $\boxed{+}$  paddle shifter for a few seconds. The 7-speed manual shift mode is especially useful when reducing the vehicle speed temporarily before making a turn.

#### ■ When the shift lever is in S:

The shift mode goes into the 7-speed manual shift mode. The (**M** indicator and the speed number are displayed in the shift indicator. As the vehicle speed slows down, the transmission automatically shifts down accordingly. When the vehicle comes to a stop, it automatically shifts down into 1st.

If the vehicle speed increases and the engine speed reaches near the tachometer's red zone, the transmission automatically shifts up.

You can only pull away in 1st speed.

When canceling out of the 7-speed manual shift mode, move the shift lever from  $\boxed{\textbf{S}}$  to  $\boxed{\textbf{D}}$ . When the 7-speed manual shift mode is cancelled, the M indicator and shift indicator go off.

#### ≥ 7-Speed Manual Shift Mode

In the 7-speed manual shift mode, the transmission shifts up or down by operating either paddle shifter under the following conditions:


Shift Up: The engine speed reaches the lowest threshold of the higher speed position.
Shift Down: The engine speed reaches the highest threshold of the lower speed position.

When the engine speed reaches near the tachometer's red zone, the transmission shifts up automatically.

When the engine speed reaches the lowest threshold of the selected speed position, the transmission shifts down automatically.

Operating the paddle shifters on slippery surfaces may cause the tires to lock up. In this case, the 7-speed manual shift mode is canceled and goes back to the normal D driving mode.

# ■ 7-Speed Manual Shift Mode Operation

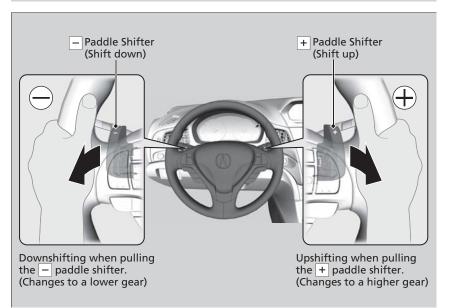

#### ≥ 7-Speed Manual Shift Mode Operation

Each paddle shift operation makes a single speed change.

To change continuously, release the paddle shifter before pulling it again for the next speed.

#### **Recommended Shift Points**

Use this table as a guideline for efficient fuel economy and effective emission control.


Shift Up	Normal Acceleration
1 to 2	15 mph (24 km/h)
2 to 3	25 mph (40 km/h)
3 to 4	40 mph (64 km/h)
4 to 5	47 mph (76 km/h)
5 to 6	52 mph (84 km/h)
6 to 7	57 mph (92 km/h)

The shift indicator blinks when you cannot shift up or down. It indicates that your vehicle speed is not in its allowable shifting range. Slightly accelerate to shift up and decelerate to shift down while the indicator is blinking.

# ■ L Mode Operation

Use this mode to get more power when climbing hills.

To switch to the L mode, pull and hold both paddle shifters (+ and -) at the same time with the shift lever in 5.

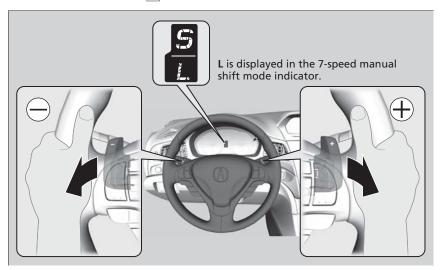

To cancel this mode, pull and hold both paddle shifters again, or move the shift lever from  $\fbox{0}$  to  $\fbox{0}$ . The  $\r{L}$  indicator goes off.

#### 

Use the L mode to get more engine braking in the 7-speed manual shift mode.

# **Auto Idle Stop**

To help maximize fuel economy, Auto Idle Stop shuts off the engine when the vehicle comes to a stop, depending on environmental and vehicle operating conditions. The **AUTO STOP** indicator blinks at this time.



The engine then restarts once the vehicle is about to move again, and the indicator goes off.

If the driver's door is opened while the indicator is blinking, a buzzer sounds to notify you that the Auto Idle Stop function is in operation.

#### ■ Auto Idle Stop ■ Auto Idle Stop

The duration of the Auto Idle Stop operation:

- Increases in the ECON mode, compared to when the ECON mode is off, with climate control in use.
- **Decreases** if you operate the wiper and climate control simultaneously.

## Auto Idle Stop Activates When:

The vehicle stops with the shift lever in  $\boxed{\textbf{D}}$  and the brake pedal depressed.

#### ■ Auto idle stop does not activate when:

- The low temperature indicator is on.
- The IMA battery charge is low.
- The bars of the IMA motor power flow monitor do not move when accelerating or decelerating.
- The transmission fluid temperature is low.
- The vehicle comes to a stop again before the vehicle speed reaches 9 mph (15 km/h) after the engine starts.
- Stopped on a steep incline.
- The shift lever is in a position other than  $\boxed{D}$  or  $\boxed{N}$ .

#### ■ Auto idle stop may not activate when:

- Certain ambient conditions (strong sunlight, high or low temperatures, etc.) can prevent Auto Idle Stop from activating, even if the set temperature and the actual interior temperature are around the same.
- The vehicle is stopped by braking suddenly.

#### 

The auto idle stop may also activate when the brake pedal is depressed, and the vehicle slows down to a speed below 6 mph (10 km/h).

Continued 237


# ■ The Engine Automatically Restarts When:

The brake pedal is released.

#### ■ The engine restarts even if the brake pedal is depressed when:

- The shift position is changed to R.
- The accelerator pedal is depressed.
- The pressure to the brake pedal is reduced and the vehicle starts moving while stopped on an incline.
- The IMA battery charge becomes low.
- The low temperature indicator comes on.
- Ambient conditions that may differentiate the interior temperature from the set temperature can also be the cause to start the engine.

# **ECON Button**

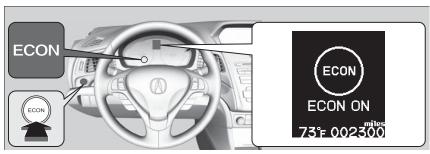


The **ECON** button turns the ECON mode on and off.

The ECON mode helps you improve your fuel economy by adjusting the performance of the engine, transmission, climate control system, and cruise control.

#### **Cruise Control**

Maintains a constant vehicle speed without having to keep your foot on the accelerator. Use cruise control on freeways or open roads where you can travel at a constant speed with little acceleration or deceleration.

# When to use ■ Vehicle speed for cruise control: Desired speed in a range above roughly 25 mph (40 km/h) ~ ■ Shift positions for cruise control: In □ or ⑤

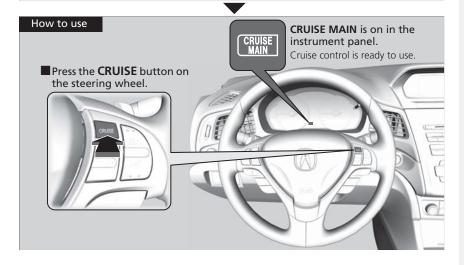

#### ○ Cruise Control ○ Cruise Control

# **AWARNING**

Improper use of the cruise control can lead to a crash.


Use the cruise control only when traveling on open highways in good weather.

It may not be possible to maintain a constant speed when driving uphill or downhill.

When not using cruise control: Turn off cruise control by pressing the **CRUISE** button.

While in the ECON mode, it may take relatively more time to accelerate to maintain the set speed.

# ■ To Set the Vehicle Speed

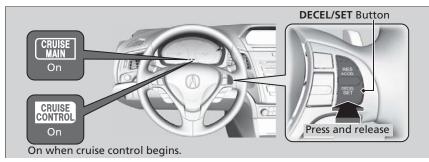


Take your foot off the pedal and press the **DECEL/SET** button when you reach the desired speed.

The moment you release the **DECEL/SET** button, the set speed is fixed, and cruise control begins. The **CRUISE CONTROL** indicator comes on.


## ■ To Adjust the Vehicle Speed

Increase or decrease the vehicle speed using the **RES/ACCEL** or **DECEL/SET** buttons on the steering wheel.

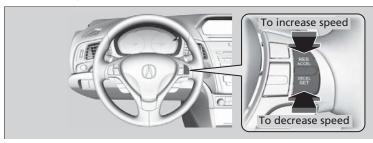

- Each time you press the button, the vehicle speed is increased or decreased by about 1 mph (1.6 km/h).
- If you keep the button pressed, the vehicle speed increased or decreased by about 10 mph (16 km/h).

#### ■ To Cancel

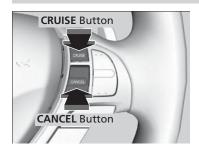

To cancel cruise control, do any of the following:

- Press the **CANCEL** button.
- Press the **CRUISE** button.
- Depress the brake pedal.

The **CRUISE CONTROL** indicator goes off.

#### ∑To Adjust the Vehicle Speed

You can set the vehicle speed using the **DECEL/SET** button on the steering wheel when adjusting the speed with the accelerator and brake pedals.

#### ∑To Cancel

Resuming the prior set speed:

After cruise control has been canceled, you can still resume the prior set speed by pressing the **RES/ ACCEL** button while driving at a speed of at least 25

mph (40 km/h) or more.

You cannot set or resume in the following situations:

- When vehicle speed is less than 25 mph (40 km/h)
- When the **CRUISE** button is turned off

At vehicle speeds of 22 mph (35 km/h) or less, cruise control is canceled automatically.

# Vehicle Stability Assist (VSA®), aka Electronic Stability Control (ESC), System

VSA® helps to stabilize the vehicle during cornering if the vehicle turns more or less than what was intended. It also assists in maintaining traction on slippery surfaces. It does so by regulating engine output and selectively applying the brakes.

# VSA® Operation



When VSA® activates, you may notice that the engine does not respond to the accelerator. You may also notice some noise from the hydraulic system. You will also see the indicator blink.

Vehicle Stability Assist (VSA®), aka Electronic Stability Control (ESC), System

The VSA® may not function properly if tire type and size are mixed. Make sure to use the same size and type of tire, and the air pressures as specified.


When the VSA® indicator comes on and stays on while driving, there may be a problem with the system. While this may not interfere with normal driving, have your vehicle checked by a dealer immediately.

VSA® cannot enhance stability in all driving situations and does not control the entire braking system. You still need to drive and corner at speeds appropriate for the conditions and always leave a sufficient margin of safety.

The main function of the VSA® system is generally known as Electronic Stability Control (ESC). The system also includes a traction control function.

Continued 243

#### VSA® On and Off

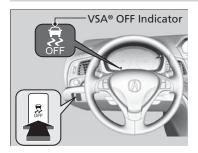

This button is on the driver side control panel. To turn the VSA® system on and off, press and hold it until you hear a beep.

VSA® will stop and the indicator will come on.

To turn it on again, press the (VSA® OFF) button until you hear a beep.

VSA® is turned on every time you start the engine, even if you turned it off the last time you drove the vehicle.

Vehicle Stability Assist (VSA®), aka Electronic Stability Control (ESC), System

Without VSA®, your vehicle will have normal braking and cornering ability, but it will not have VSA® traction and stability enhancement.

In certain unusual conditions when your vehicle gets stuck in shallow mud or fresh snow, it may be easier to free it with the VSA® temporarily switched off.

When the VSA® system is off, the traction control system is also off. You should only attempt to free your vehicle with the VSA® off if you are not able to free it when the VSA® is on.


Immediately after freeing your vehicle, be sure to switch VSA® on again. We do not recommend driving your vehicle with the VSA® and traction control systems switched off.

If the low tire pressure/TPMS indicator comes on or blinks, the VSA® system comes on automatically. In this case, you cannot turn the system off by pressing the 🖫 button.

You may hear a motor sound coming from the engine compartment while system checks are being performed immediately after starting the engine or while driving. This is normal.

U.S. models only

# Tire Pressure Monitoring System (TPMS)

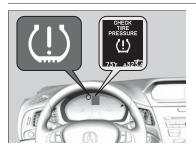

Monitors the tire pressure while you are driving. If your vehicle's tire pressure becomes significantly low, the low tire pressure/TPMS indicator comes on and a message appears on the multi-information display.

**CHECK TIRE PRESSURE** is displayed when a tire has significantly low pressure.

#### ∑Tire Pressure Monitoring System (TPMS)

Conditions such as low ambient temperature and altitude change directly affect tire pressure and can trigger the low tire pressure/TPMS indicator to come on.

# If the Low Tire Pressure/TPMS Indicator Comes On or Blinks P. 340

Tire pressure checked and inflated in:

- Warm weather can become under-inflated in colder weather.
- Cold weather can become over-inflated in warmer weather.

The low tire pressure/TPMS indicator will not come on as a result of over inflation.

U.S. models

# Tire Pressure Monitoring System (TPMS) - Required Federal Explanation

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label.

(If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale



when one or more of your tires is significantly under-inflated.

Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure.

Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability. Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly.

Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

Driving

# Braking

# **Brake System**


# Parking Brake

Use the parking brake to keep the vehicle stationary when parking.



## To apply:

Pull the lever fully up without pressing the release button.

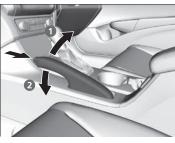

#### To release:

- **1.** Pull the lever slightly, and press and hold the release button.
- **2.** Lower the lever down all the way, then release the button.

#### ▶ Parking Brake

#### NOTICE

Release the parking brake fully before driving. The rear brakes and axle can be damaged if you drive with the parking brake applied.

If you start driving without fully releasing the parking brake, a buzzer sounds as a warning, and **RELEASE PARKING BRAKE** appears on the multi-information display.

Always apply the parking brake when parking.

#### **■** Foot Brake

Your vehicle is equipped with disc brakes at all four wheels. A vacuum power assist helps reduce the effort needed on the brake pedal. The brake assist system increases the stopping force when you depress the brake pedal hard in an emergency situation. The anti-lock brake system (ABS) helps you retain steering control when braking very hard.

- **Brake Assist System** P. 251
- Anti-lock Brake System (ABS) P. 250

#### >> Foot Brake

Check the brakes after driving through deep water, or if there is a buildup of road surface water. If necessary, dry the brakes by lightly depressing the pedal several times.

If you hear a continuous metallic friction sound when applying the brakes, the brake pads need to be replaced. Have the vehicle checked by a dealer.

Constantly using the brake pedal while going down a long hill builds up heat, which reduces the brake effectiveness. Apply engine braking by taking your foot off the accelerator pedal and downshifting to a lower speed position.

Do not rest your foot on the brake pedal while driving, as it will lightly apply the brakes and cause them to lose effectiveness over time and reduce pad life. It will also confuse drivers behind you.

# **Anti-lock Brake System (ABS)**

#### ABS

Helps prevent the wheels from locking up, and helps you retain steering control by pumping the brakes rapidly, much faster than you.

The electronic brake distribution (EBD) system, which is part of the ABS, also balances the front-to-rear braking distribution according to vehicle loading.

You should never pump the brake pedal. Let the ABS work for you by always keeping firm, steady pressure on the brake pedal. This is sometimes referred to as "stomp and steer."

#### ■ ABS operation

The brake pedal may pulsate slightly when the ABS is working. Keep holding the pedal firmly down. On dry pavement, you will need to press on the brake pedal very hard before the ABS activates. However, you may feel the ABS activate immediately if you are trying to stop on snow or ice.

When the vehicle speed goes under 6 mph (10 km/h), the ABS stops.

Mari-lock Brake System (ABS)

#### NOTICE

The ABS may not function correctly if you use an incorrect tire type and size.

When the **ABS** indicator comes on while driving, there may be a problem with the system. While normal braking is not affected, there is a possibility of the ABS not operating. Have the vehicle checked by a dealer immediately.

The ABS does not reduce the time or distance it takes to stop the vehicle. It only helps with steering control during hard braking.

In the following cases, your vehicle may need more stopping distance than a vehicle without the ABS:

- When driving on rough road surfaces, including when driving on uneven surfaces, such as gravel or snow.
- When tire chains are installed.

You may hear a motor sound coming from the engine compartment while system checks are being performed immediately after starting the engine or while driving. This is normal.

# **Brake Assist System**

# ■ Brake Assist System

Designed to assist the driver by generating greater braking force when you depress the brake pedal hard during emergency braking.

#### **■** Brake assist system operation

Press the brake pedal firmly for more powerful braking.

When brake assist operates, the pedal may wiggle slightly and an operating noise may be heard. This is normal. Keep holding the brake pedal firmly down.

# Parking Your Vehicle

# When Stopped

- **1.** Depress the brake pedal firmly with the shift lever in **D**.
- 2. Firmly apply the parking brake.
- **3.** Move the shift lever from **D** to **P**.
- **4.** Turn off the engine.

Always set the parking brake firmly, in particular if you are parked on an incline.

#### ▶ Parking Your Vehicle

Do not park your vehicle near flammable objects, such as dry grass, oil, or timber.

Heat from the exhaust can cause a fire.

#### When Stopped ■

#### NOTICE

The following can damage the transmission:

- Depressing the accelerator and brake pedals simultaneously.
- Holding the vehicle in place when facing uphill by depressing the accelerator pedal.
- Moving the shift lever into P before the vehicle stops completely.

Raise the wiper arms when snow is expected.

# Multi-View Rear Camera

### **About Your Multi-View Rear Camera**


#### Models with navigation system

See the Navigation System Manual.

#### Models without navigation system

The audio/information screen can display your vehicle's rear view. The display automatically changes to the rear view when the shift lever is moved to  $\boxed{R}$ .

### ■ Multi-View Rear Camera Display Area

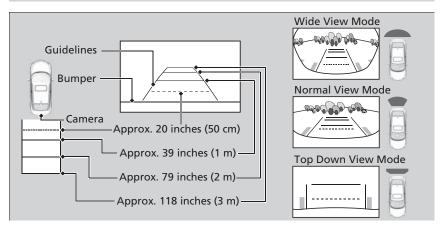

You can view three different camera angles on the rearview display. Press the selector knob to switch the angle.

If the last used viewing mode is Wide or Normal, the same mode is selected the next time you shift into  $\boxed{\mathbf{R}}$ . If Top View was last used, Wide mode is selected.

#### 

The rear camera view is restricted. You cannot see the corner ends of the bumper or what is underneath the bumper. Its unique lens also makes objects appear closer or farther than they actually are.

Visually confirm that it is safe to drive before backing up. Certain conditions (such as weather, lighting, and high temperatures) may also restrict the rear view. Do not rely on the rearview display which does not give you all information about conditions at the back of your vehicle.

If the camera lens is covered with dirt or moisture, use a soft, moist cloth to keep the lens clean and free of debris.

# Refueling

### **Fuel Information**

#### **■** Fuel recommendation

### Unleaded premium gasoline, pump octane number 91 or higher

Use of lower octane gasoline can cause occasional metallic knocking noise in the engine and will result in decreased engine performance.

Use of gasoline with a pump octane less than 87 can lead to engine damage.

#### ■ Top tier detergent gasoline

Because the level of detergency and additives in gasoline vary in the market, Acura endorses the use of "TOP TIER Detergent Gasoline" where available to help maintain the performance and reliability of your vehicle. TOP TIER Detergent Gasoline meets a new gasoline standard jointly established by leading automotive manufacturers to meet the needs of today's advanced engines.

Qualifying gasoline retailers will, in most cases, identify their gasoline as having met "TOP TIER Detergent Gasoline" standards at the retail location. This fuel is guaranteed to contain the proper level of detergent additives and be free of metallic additives. The proper level of detergent additives, and absence of harmful metallic additives in gasoline, help avoid build-up of deposits in your engine and emission control system.

For further important fuel-related information for your vehicle, or on information on gasoline that does not contain MMT, visit Acura Owners at owners.acura.com. In Canada, visit www.acura.ca for additional information on gasoline. For more information on top tier gasoline, visit www.toptiergas.com.

■ Fuel tank capacity: 13.2 US gal (50 liters)


#### 

#### NOTICE

We recommend quality gasoline containing detergent additives that help prevent fuel system and engine deposits. In addition, in order to maintain good performance, fuel economy, and emissions control, we strongly recommend the use of gasoline that does NOT contain harmful manganese-based fuel additives such as MMT, if such gasoline is available.

Use of gasoline with these additives may adversely affect performance, and cause the malfunction indicator lamp on your instrument panel to come on. If this happens, contact a dealer for service. Some gasoline today is blended with oxygenates such as ethanol. Your vehicle is designed to operate on oxygenated gasoline containing up to 15% ethanol by volume. Do not use gasoline containing methanol. If you notice any undesirable operating symptoms, try another service station or switch to another brand of gasoline.

### **How to Refuel**

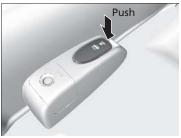

- **1.** Stop your vehicle with the service station pump on the left side of the vehicle in the rear.
- 2. Turn off the engine.
- **3.** Push on the fuel fill door release handle at the foot of the driver's seat.
  - ► The fuel fill door opens.



Cap

**4.** Remove the fuel fill cap slowly. If you hear a release of air, wait until this stops, then turn the knob slowly to open the fuel fill cap.



- 6. Insert the filler nozzle fully.
  - ➤ When the tank is full, the fuel nozzle will click off automatically. This leaves space in the fuel tank in case the fuel expands with a change in the temperature.
- After filling, replace the fuel fill cap, tightening it until you hear it click at least once.
  - ► Shut the fuel fill door by hand.

# **AWARNING**

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

The filler nozzle automatically stops to leave space in the fuel tank so that fuel does not overflow as a result of changes in air temperature.

If the fuel nozzle keeps turning off when the tank is not full, there may be a problem with the pump's fuel vapor recovery system. Try filling at another pump. If this does not fix the problem, consult a dealer.

Do not continue to add fuel after the nozzle has automatically stopped. Additional fuel can exceed the full tank capacity.



# **Fuel Economy**

# **Improving Fuel Economy**

Fuel economy depends on several conditions, including driving conditions, your driving habits, the condition of your vehicle, and loading. Depending on these and other conditions, you may or may not achieve the rated fuel economy of this vehicle.

# ■ Maintenance and Fuel Economy

You can optimize your fuel economy with proper maintenance of your vehicle. Always maintain your vehicle in accordance with the messages displayed on the multi-information display.

- Use the recommended viscosity engine oil, displaying the API Certification Seal.
- Maintain the specified tire pressure.
- Do not load the vehicle with excess cargo.
- Keep your vehicle clean. A buildup of snow or mud on your vehicle's underside adds weight and increases wind resistance.

#### 

Direct calculation is the recommended method to determine actual fuel consumed while driving.



In Canada, posted fuel economy numbers are established following a simulated test. For more information on how this test is performed, please visit <a href="http://oee.nrcan.gc.ca/">http://oee.nrcan.gc.ca/</a>

# **Accessories and Modifications**

### **Accessories**

When installing accessories, check the following:

- Do not install accessories on the windshield. They can obstruct your view and delay your reaction to driving conditions.
- Do not install any accessories over areas marked SRS Airbag, on the sides or backs
  of the front seats, on front or side pillars, or near the side windows. Accessories
  installed in these areas may interfere with proper operation of the vehicle's
  airbags or may be propelled into you or another occupant if the airbags deploy.
- Be sure electronic accessories do not overload electrical circuits or interfere with proper operation of your vehicle.

**► Fuses** P. 341

• Before installing any electronic accessory, have the installer contact a dealer for assistance. If possible, have a dealer inspect the final installation.

# **Modifications**

Do not modify your vehicle or use non-Acura components that can affect its handling, stability, and reliability.

Overall vehicle performance can be affected. Always make sure all equipment is properly installed and maintained, and that it meets federal, state, province, territory, and local regulations.

# **AWARNING**

Improper accessories or modifications can affect your vehicle's handling, stability, and performance, and cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

Acura Genuine accessories are recommended to ensure proper operation on your vehicle.

# Maintenance

This chapter discusses basic maintenance.

Inspection and Maintenance	260
Safety When Performing Maintenance.	261
Parts and Fluids Used in Maintenan	ce
Service	262
Maintenance Minder™	263
Maintenance Under the Hood	
Maintenance Items Under the Hood	268
Opening the Hood	269
Engine Compartment Cover	270
Recommended Engine Oil	272
Oil Check	273
Adding Engine Oil	27/

Changing the Engine Oil and Oil Filte	r . 27
Engine Coolant	27
Transmission Fluid	27
Brake Fluid	28
Refilling Window Washer Fluid	28
Replacing Light Bulbs	28
Checking and Maintaining Wipe	
Blades	20
Diaues	Z9
Checking and Maintaining Tires	29
Checking and Maintaining Tires	29
Checking and Maintaining Tires Checking Tires	29 29
Checking and Maintaining Tires Checking Tires Tire and Loading Information Label	29 29 29

Wear Indicators	299
Tire Service Life	299
Tire and Wheel Replacement	300
Tire Rotation	301
Winter Tires	302
2 Volt Battery	303
Remote Transmitter Care	
Replacing the Button Battery	304
limate Control System Maintenance	305
Cleaning	
Interior Care	306
Exterior Care	308

# Before Performing Maintenance

# **Inspection and Maintenance**

For your safety, perform all listed inspections and maintenance to keep your vehicle in good condition. If you become aware of any abnormality (noise, smell, insufficient brake fluid, oil residue on the ground, etc.), have your vehicle inspected by a dealer. (Note, however, that service at a dealer is not mandatory to keep your warranties in effect.) Refer to the separate maintenance booklet for detailed maintenance and inspection information.

# **■** Types of Inspection and Maintenance

### **■** Daily inspections

Perform inspections before long distance trips, when washing the vehicle, or when refueling.

### ■ Periodic inspections

- Check the continuously variable transmission fluid level monthly.
  - Continuously Variable Transmission (CVT) Fluid P. 279
- Check the brake fluid level monthly.
  - **≧** Checking the Brake Fluid P. 280
- Check the tire pressure monthly. Examine the tread for wear and foreign objects.
   Checking and Maintaining Tires P. 294
- Check the operation of the exterior lights monthly.
  - Replacing Light Bulbs P. 282
- Check the condition of the wiper blades at least every six months.
  - **➡** Checking and Maintaining Wiper Blades P. 292

#### U.S. models

Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are "certified" to EPA standards.

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the multi-information display.

Maintenance Service Items P. 266

If you want to perform complex maintenance tasks that require more skills and tools, you can purchase a subscription to the Service Express website at www.techinfo.honda.com.

Authorized Manuals P. 355

If you want to perform maintenance yourself, make sure that you have the necessary tools and skills first. After performing maintenance, update the records in the separate maintenance booklet.

# **Safety When Performing Maintenance**

Some of the most important safety precautions are given here. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

# Maintenance Safety

- To reduce the possibility of fire or explosion, keep cigarettes, sparks, and flames away from the battery and all fuel related parts.
- Never leave rags, towels, or other flammable objects under the hood.
  - ▶ Heat from the engine and exhaust can ignite them causing a fire.
- To clean parts, use a commercially available degreaser or parts cleaner, not gasoline.
- Wear eye protection and protective clothing when working with the 12 volt battery or compressed air.
- Engine exhaust contains carbon monoxide, which is poisonous and can kill you.
   Only operate the engine if there is sufficient ventilation.

# Vehicle Safety

- The vehicle must be in a stationary condition.
  - Make sure your vehicle is parked on level ground, the parking brake is set, and the engine is off.
- Be aware that hot parts can burn you.
  - Make sure to let the engine and exhaust system cool thoroughly before touching vehicle parts.
- Be aware that moving parts can injure you.
  - ▶ Do not start the engine unless instructed, and keep your hands and limbs away from moving parts.
- Do not touch the IMA battery and wiring (orange).

Safety When Performing Maintenance

# **AWARNING**

Improperly maintaining this vehicle or failing to correct a problem before driving can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations according to the schedules in this owner's manual.

# **AWARNING**

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this owner's manual.

# **Parts and Fluids Used in Maintenance Service**

The use of Acura genuine parts and fluids is recommended when maintaining and servicing your vehicle. Acura genuine parts are manufactured according to the same high quality standards used in Acura vehicles.

# Maintenance Minder™

If the engine oil life is less than 15%, you will see the Maintenance Minder messages appear on the multi-information display every time you set the power mode to ON. The messages notify you when to change the engine oil, or when to bring your vehicle to a dealer for indicated maintenance services.


### To Use Maintenance Minder™

# Displaying the Engine Oil Life and Maintenance Items

Maintenance items, which should be serviced at the same time that you replace the engine oil, appear on the multi-information display.

You can view them on the **engine oil life** screen at any time.

- 1. Set the power mode to ON.
- Press the ▲①/▼ button repeatedly until the engine oil life appears on the multiinformation display.

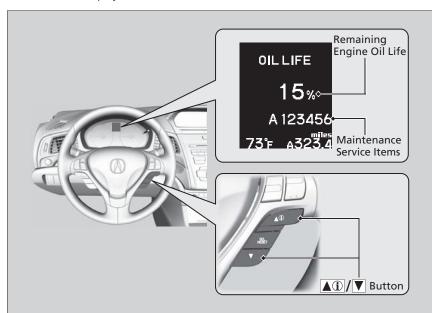

Displaying the Engine Oil Life and Maintenance Items

Based on the engine operating conditions, the remaining engine oil life is calculated and displayed as a percentage.

Displayed Engine Oil Life (%)	Calculated Engine Oil Life (%)	
100	100 to 91	
90	90 to 81	
80	80 to 71	
70	70 to 61	
60	60 to 51	
50	50 to 41	
40	40 to 31	
30	30 to 21	
20	20 to 16	
15	15 to 11	
10	10 to 6	
5	5 to 1	
0	0	

There is a list of maintenance main and sub items you can view on the multi-information display.


Maintenance Service Items P. 266

# ■ Maintenance Minder Messages on the Multi-Information Display

Maintenance Message	Oil Life Display	Explanation	Information
SERVICE DUE SOON  SERVICE DUE SOON A12345  73°F A323.4	15 %  OILLIFE  15%  A 123456  73°F A 323.4	The remaining engine oil life is 15 to 6 percent. Once you switch the display by pressing the ▲①/▼ (information) button, this message will go off.	The engine oil is approaching the end of its service life, and the maintenance items should be inspected and serviced soon.
SERVICE DUE NOW  SERVICE DUE NOW A 123456  73°F A 323.4	5 %  OIL LIFE  5%  SERVICE A 123456  73°F A323.4	The remaining engine oil life is 5 to 1 percent. Press the ▲①/▼ button to switch to another display.	The engine oil has almost reached the end of its service life, and the maintenance items should be inspected and serviced as soon as possible.
SERVICE PAST DUE  SERVICE PAST DUE A 123456 A 123456 A 123456 A 123456	Negative Distance  -10 miles SERVICE B 123456 73°	The remaining engine oil life has passed its service life, and a negative distance appears after driving over 10 miles (U.S. models) or 10 km (Canadian models). Press the ▲①/▼ button to switch to another display.	The engine oil life has passed. The maintenance items must be inspected and serviced immediately.

The system message indicator (1) comes on along with the Maintenance Minder message.

#### ■ Maintenance Service Items

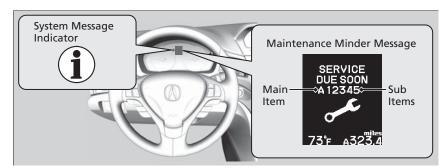

#### Maintenance Service Items

- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.
- Inspect idle speed every 160,000 miles (256,000 km).
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

# CODE Maintenance Main Items A • Replace engine oil\*1

- Replace engine oil\*1 and oil filter
  - the proceeding the one and a solution of the solution of
  - Inspect front and rear brakes/service as necessary
  - Check parking brake adjustment
  - Inspect tie rod ends, steering gearbox, and boots
  - Inspect suspension components
  - Inspect driveshaft boots
  - Inspect brake hoses and lines (Including ABS/VSA)
  - Inspect all fluid levels and condition of fluids
  - Inspect exhaust system#
  - Inspect fuel lines and connections#

#### CODE Maintenance Sub Items

- Rotate tires
- Replace air cleaner element\*2
  - Replace dust and pollen filter\*3
  - Inspect drive belt
- Replace transmission fluid
- Replace spark plugs
  - Inspect valve clearance
- Replace engine coolant
- \*2: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).


<sup>\*1:</sup> If a message **SERVICE** does not appear more than 12 months after the display is reset, change the engine oil every year.

<sup>#:</sup> See information on maintenance and emissions warranty.

<sup>\*3:</sup> If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).

# Resetting the Display

Reset the engine oil life display if you have performed the maintenance service.

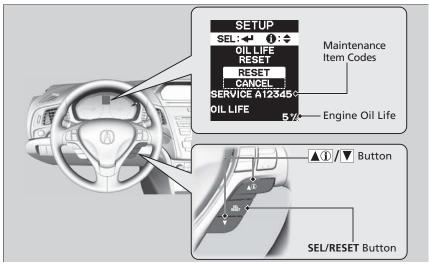

- 1. Set the power mode to ON.
- 2. Go to the MAINTENANCE INFO. group.
  - **Customized Features** P. 95
- 3. Press the SEL/RESET button.
  - ▶ The oil life reset mode is displayed on the multi-information display.
- **4.** Select **RESET** with the **△1 / V** button, then press the **SEL/RESET** button.
  - ► The displayed maintenance items disappear, and the engine oil life display returns to 100%.

To cancel the oil life reset mode, select **CANCEL**, then press the **SEL/RESET** button.

#### ■ Resetting the Display


#### NOTICE

Failure to reset the engine oil life after a maintenance service results in the system showing incorrect maintenance intervals, which can lead to serious mechanical problems.


The dealer will reset the engine oil life display after completing the required maintenance service. If someone other than a dealer performs maintenance service, reset the engine oil life display yourself.

# Maintenance Under the Hood

# **Maintenance Items Under the Hood**

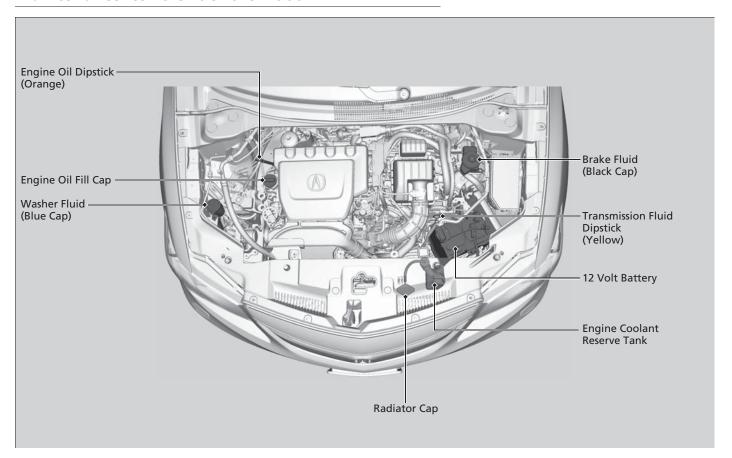


# **Opening the Hood**

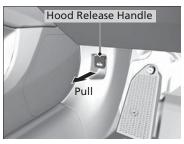

- **1.** Park the vehicle on a level surface, and set the parking brake.
- **2.** Pull the hood release handle under the lower left corner of the dashboard.
  - The hood will pop up slightly.



**3.** Slide the hood latch lever in the center of the hood to release the lock mechanism, and open the hood.

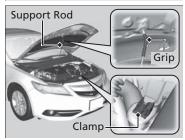

**4.** Remove the support rod from the clamp using the grip. Mount the support rod in the hood.

When closing, remove the support rod, and stow it in the clamp, then gently lower the hood. Remove your hand at a height of approximately 12 inches (30 cm) and let the hood close.

#### ○ Opening the Hood

#### NOTICE

Do not open the hood when the wiper arms are raised.

The hood will strike the wipers, and may damage either the hood or the wipers.


When closing the hood, check that the hood is securely latched.

If the hood latch lever moves stiffly, or if you can open the hood without lifting the lever, the latch mechanism should be cleaned and lubricated.

Do not open the hood while the Auto Idle Stop function is activated.

# **Engine Compartment Cover**


The component parts in the engine compartment are protected by a cover. You may need to remove the cover when you perform certain maintenance work. To remove the cover:

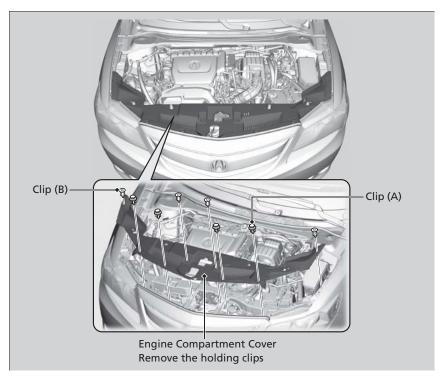


#### 

#### Holding clip (A-type)

Insert a flat-tip screwdriver, lift and remove the center pin to remove the clip.

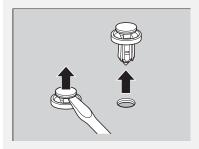


Insert the clip with the center pin raised, and push until it is flat.

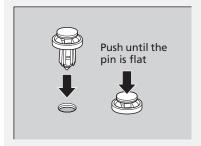


#### 

### Holding clip (B-type)

Press down the center pin until it clicks to unlock it.

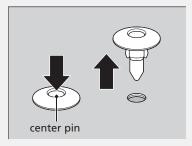

Push the center pin back to lock the clip. Then, insert the clip into the hole and press on the center pin until it is flat.

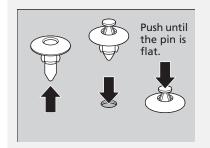

# **Recommended Engine Oil**

- Genuine Acura Motor Oil
- Premium-grade 0W-20 detergent oil with an API Certification Seal on the container.



Oil is a major contributor to your engine's performance and longevity. If you drive the vehicle with insufficient or deteriorated oil, the engine may fail or be damaged.


This seal indicates the oil is energy conserving and that it meets the American Petroleum Institute's latest requirements.

Use a Genuine Acura Motor Oil or another commercial engine oil of suitable viscosity for the ambient temperature as shown.

#### ■ Recommended Engine Oil

#### **Engine Oil Additives**

Your vehicle does not require oil additives. In fact, they may adversely affect the engine performance and durability.

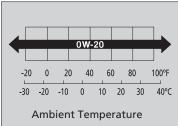


# ■ Synthetic oil

You may also use synthetic motor oil if it is labeled with the API Certification Seal and is the specified viscosity grade.


# Oil Check

We recommend that you check the engine oil level every time you refuel. Park the vehicle on level ground.

Wait approximately three minutes after turning the engine off before you check the oil.

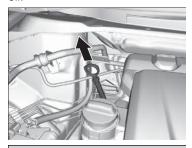

- 1. Remove the dipstick (orange).
- **2.** Wipe the dipstick with a clean cloth or paper towel.
- **3.** Insert the dipstick back all the way into its hole.

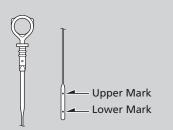

**4.** Remove the dipstick again, and check the level. It should be between the upper and lower marks. Add oil if necessary.

#### Oil Check

If the oil level is near or below the lower mark, slowly add oil being careful not to overfill.

# **Adding Engine Oil**



- **1.** Unscrew and remove the engine oil fill cap.
- 2. Add oil slowly.
- **3.** Reinstall the engine oil fill cap, and tighten it securely.
- **4.** Wait for three minutes and recheck the engine oil dipstick.

#### 

If any oil spills, wipe it up immediately. Spilled oil may damage the engine compartment components.


#### NOTICE


Do not fill the engine oil above the upper mark. Overfilling the engine oil can result in leaks and engine damage.

# **Changing the Engine Oil and Oil Filter**

You must change the engine oil and oil filter regularly in order to maintain the engine's lubrication. The engine may be damaged if they are not changed regularly.

Change the oil and filter in accordance with the maintenance message on the multiinformation display.

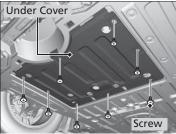

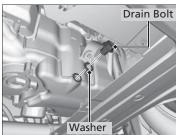


- **1.** Run the engine until it reaches normal operating temperature, and then turn the engine off.
- **2.** Open the hood and remove the engine oil fill cap.
- **3.** Remove the screws on the undercarriage and slide the under cover backward, then remove.
- **4.** Remove the drain bolt and washer from the bottom of the engine, and drain the oil into a suitable container.

#### ∑Changing the Engine Oil and Oil Filter

#### NOTICE

You may damage the environment if you do not dispose of the oil in a suitable way. If you are changing the oil by yourself, appropriately dispose of the used oil. Put the oil in a sealed container and take it to a recycling center. Do not throw the oil away into a garbage can or onto the ground.

Continued 275

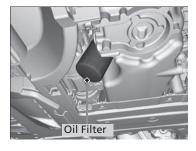

- **5.** Remove the oil filter and dispose of the remaining oil.
- **6.** Check that the filter gasket is not stuck to the engine contact surface.
  - ▶ If it is stuck, you must detach it.
- Wipe away dirt and dust adhering to the contact surface of the engine block, and install a new oil filter.
  - ► Apply a light coat of new engine oil to the oil filter rubber seal.
- **8.** Put a new washer on the drain bolt, then reinstall the drain bolt.
  - ➤ Tightening torque: 30 lbf·ft (40 N·m, 4.0 kgf·m)
- **9.** Pour the recommended engine oil into the engine.
  - Engine oil change capacity (including filter):
    - 3.8 US qt (3.6 L)
- **10.** Reinstall the engine oil fill cap securely and start the engine.
- **11.** Run the engine for a few minutes, and then check that there is no leak from the drain bolt or oil filter.
- **12.** Stop the engine, wait for three minutes, and then check the oil level on the dipstick.
  - ► If necessary, add more engine oil.

#### ○ Changing the Engine Oil and Oil Filter

You will need a special wrench to replace the oil filter. You can buy this wrench from a dealer.

When installing the new oil filter, follow the instructions supplied with the oil filter.

Reinstall the engine oil fill cap. Start the engine. The low oil pressure indicator should go off within five seconds. If it does not, turn off the engine, and check your work.


# **Engine Coolant**

### Specified coolant: Acura Long Life Antifreeze/Coolant Type 2

This coolant is premixed with 50% antifreeze and 50% water. Do not add any straight antifreeze or water.

We recommend you check the engine coolant level every time you refuel. Check the reserve tank first. If it is completely empty, also check the coolant level in the radiator. Add the engine coolant accordingly.

#### Reserve Tank

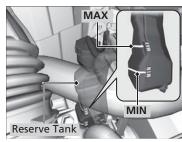

**1.** Check the amount of coolant in the reserve tank.



- If the coolant level is below the MIN mark, add the specified coolant until it reaches the MAX mark.
- **3.** Inspect the cooling system for leaks.

#### 

#### NOTICE


If temperatures consistently below -22°F (-30°C) are expected, the coolant mixture should be changed to a higher concentration. Consult a dealer for more information.

If Acura antifreeze/coolant is not available, you may use another major brand non-silicate coolant as a temporary replacement. Check that it is a high quality coolant recommended for aluminum engines. Continued use of any non-Acura coolant can result in corrosion, causing the cooling system to malfunction or fail. Have the cooling system flushed and refilled with Acura antifreeze/coolant as soon as possible.

Do not add rust inhibitors or other additives to your vehicle's coolant system. They may not be compatible with the coolant or with the engine components.

Continued 277

#### Radiator

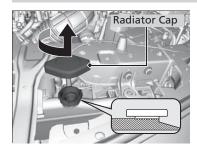

- Make sure the engine and radiator are cool.
- 2. Remove the engine compartment cover.

  Engine Compartment Cover P. 270
- **3.** Turn the radiator cap counterclockwise and relieve any pressure in the coolant system. Do not push the cap down when turning.
- **4.** Push down and turn the radiator cap counterclockwise to remove it.
- **5.** The coolant level should be up to the base of the filler neck. Add coolant if it is low.
- **6.** Put the radiator cap back on, and tighten it fully.
- **7.** Pour coolant into the reserve tank until it reaches the **MAX** mark. Put the cap back on the reserve tank.

#### 

# **AWARNING**

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

#### NOTICE


Pour the fluid slowly and carefully so you do not spill any. Clean up any spills immediately; they can damage components in the engine compartment.

### **Transmission Fluid**

# ■ Continuously Variable Transmission (CVT) Fluid

### Specified fluid: Acura Continuously Variable Transmission Fluid

Check the fluid level when the engine is at normal operating temperature.

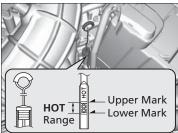

- 1. Park on level ground, and start the engine.
- **2.** Wait until the radiator fan starts and then turn off the engine.
  - ► Perform step 3 after waiting for about 60 seconds (less than 90 seconds).
- **3.** Remove the dipstick (yellow) from the transmission and wipe it with a clean cloth.
- **4.** Insert the dipstick all the way back into the transmission securely, as shown in the image.
- **5.** Remove the dipstick and check the fluid level.
  - It should be between the upper and lower marks in the **HOT** range.
- 6. If the level is below the lower mark, add fluid into the dipstick hole to bring it to the level between the upper and lower marks, and have your vehicle checked by a dealer immediately.

○ Continuously Variable Transmission (CVT) Fluid

#### NOTICE

#### Do not mix Acura Continuously Variable Transmission Fluid with other transmission fluids.

Using a transmission fluid other than Acura Continuously Variable Transmission Fluid may adversely affect the operation and durability of your vehicle's transmission, and damage the transmission. Any damage caused by using a transmission fluid that is not equivalent to Acura Continuously Variable Transmission Fluid is not covered by Acura's new vehicle warranty.


#### NOTICE

Pour the fluid slowly and carefully so you do not spill any. Clean up any spills immediately; they can damage components in the engine compartment.

### **Brake Fluid**

### Specified fluid: Acura Heavy Duty Brake Fluid DOT 3

# ■ Checking the Brake Fluid

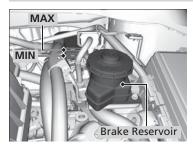

Check the fluid level several seconds after you turn the power mode to ON.

The fluid level should be between the **MIN** and **MAX** marks on the side of the reservoir.

#### ■ Brake Fluid

#### NOTICE

Brake fluid marked DOT 5 is not compatible with your vehicle's braking system and can cause extensive damage.


If the specified brake fluid is not available, you should use only DOT 3 or DOT 4 fluid from a sealed container as a temporary replacement.

Using any non-Acura brake fluid can cause corrosion and decrease the longevity of the system. Have the brake system flushed and refilled with Acura Heavy Duty Brake Fluid DOT 3 as soon as possible.

If the brake fluid level is at or below the **MIN** mark, have a dealer inspect for leaks or worn brake pads as soon as possible.

# **Refilling Window Washer Fluid**

Check the amount of window washer fluid using the washer fluid level gauge on the cap.

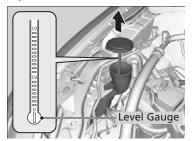

If the level is low, fill the washer reservoir.

#### ■ Refilling Window Washer Fluid

#### NOTICE

Do not use engine antifreeze or a vinegar/water solution in the windshield washer reservoir. Antifreeze can damage your vehicle's paint. A vinegar/water solution can damage the windshield washer pump.

# Replacing Light Bulbs

# **Headlight Bulbs**


When replacing, use the following bulbs.

High beam headlight: 60 W (HB3)

Low beam headlight: 55 W (H11 for halogen bulb Type)

35 W (D2S for high voltage discharge type)

### **■** High Beam Headlight

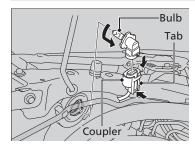

#### Driver side

1. Remove the engine compartment cover.

Description: Engine Compartment Cover P. 270

#### All models

- **2.** Push the tab to remove the coupler.
- **3.** Rotate the old bulb to the left to remove.
- **4.** Insert a new bulb into the headlight assembly and turn it to the right.
- **5.** Insert the coupler into the connector of the bulb.

#### High Voltage Discharge Types

# Low Beam Headlights

High voltage can remain in the circuit for a long period of time after the light is switched off. Do not attempt to inspect or replace the high voltage discharge type bulbs yourself. Ask a dealer to inspect and replace low beam headlights.

#### 

#### NOTICE

Halogen bulbs get very hot when lit.


Oil, perspiration, or a scratch on the glass can cause the bulb to overheat and shatter.


The headlight aim is set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the trunk or tow a trailer, have the aiming readjusted at a dealer or by a qualified technician.

When replacing a halogen bulb, handle it by its base, and protect the glass from contact with your skin or hard objects. If you touch the glass, clean it with denatured alcohol and a clean cloth.

#### Halogen Types

# ■ Low Beam Headlights

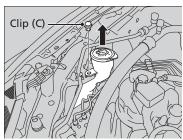

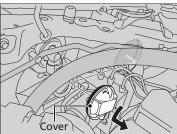

**1.** Remove the engine compartment cover.

### **Engine Compartment Cover** P. 270

### Passenger side

**2.** Remove the holding clip (C) using a flat-tip screwdriver, then remove the upper part of the windshield washer reservoir.


### All models

**3.** Rotate the cover to the left, and remove.


#### ∑Low Beam Headlights


#### Holding clip (C-type)

Insert a flat-tip screwdriver, lift and remove the center pin to remove the clip.

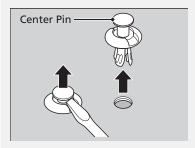

Insert the clip with the center pin raised, and push until it is flat.

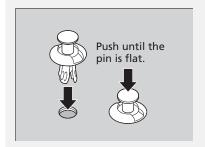

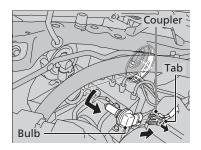


#### All models

- **4.** Pull the tab to remove the coupler.
- **5.** Rotate the old bulb to the left to remove.
- **6.** Insert a new bulb into the headlight assembly and turn it to the right.
- **7.** Insert the coupler into the connector of the bulb.

# **Fog Light Bulbs**

When replacing, use the following bulbs.

#### Fog Light: 55 W (H11) for halogen bulb Type

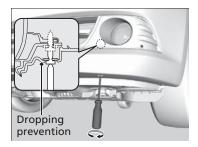


- **1.** Remove the screw using a Phillips-head screwdriver.
  - ► The screw does not drop.

#### **≥**Fog Light Bulbs


#### NOTICE

Halogen bulbs get very hot when lit. Oil, perspiration, or a scratch on the glass can cause the bulb to overheat and shatter.


When replacing a halogen bulb, handle it by its plastic case, and protect the glass from contact with your skin or hard objects. If you touch the glass, clean it with denatured alcohol and a clean cloth.

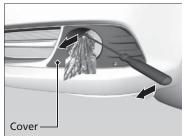

**2.** Insert a flat-tip screwdriver into the tab at the inside edge of the cover, then pull straight out as indicated to remove the cover.

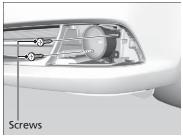

**3.** Remove the screws using a Phillips-head screwdriver and carefully pull the fog light assembly out of the bumper.

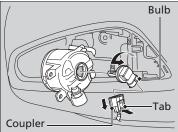



- **4.** Push the tab to remove the coupler.
- **5.** Rotate the old bulb to the left to remove.
- **6.** Insert a new bulb into the fog light assembly and turn it to the right.
- **7.** Insert the coupler into the connector of the bulb.

# **Front Turn Signal Light Bulbs**

When replacing, use the following bulbs.

#### Front Turn Signal Light: 21 W

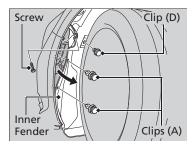

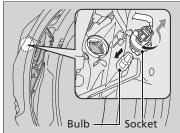

 Turn the steering wheel all the way to the opposite side from the light being replaced.
 Passenger side: Turn the steering wheel to the left.

**Driver side:** Turn the steering wheel to the right.

**2.** Remove the holding clips (A), (D) and screw, pull the inner fender back.


**Engine Compartment Cover** P. 270

- **3.** Turn the socket to the left and remove it, then remove the old bulb.
- 4. Insert a new bulb.


#### 

#### Holding clip (D-type)

When removing the clip, insert a flat-tip screwdriver, then lift and remove the clip.

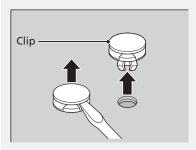


Insert the clip with the pin raised, and push until it is flat.

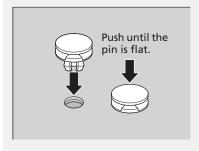

# **Parking/Side Marker Light Bulbs**

When replacing, use the following bulbs.


### Parking/Side Marker Light: 5 W

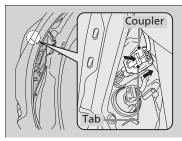

Turn the steering wheel and pull the inner fender back in the same way as when replacing the front turn signal light bulbs.

### Front Turn Signal Light Bulbs P. 286

**1.** Push the tab to remove the coupler.

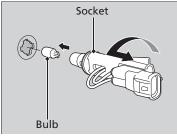


- 2. Turn the socket to the left and remove it.
- 3. Remove the old bulb and insert a new bulb.
- **4.** Insert the coupler into the connector of the bulb.


# Brake Light, Taillight, Rear Turn Signal Light and Rear Side Marker Light Bulbs

When replacing, use the following bulbs.


Brake/Rear Side Marker/Taillight: 21/5 W Rear Turn Signal Light: 21 W

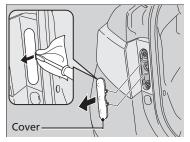


- **1.** Pry on the edge of the cover using a flat-tip screwdriver to remove the cover.
  - ➤ Wrap the flat-tip screwdriver with a cloth to prevent scratches.

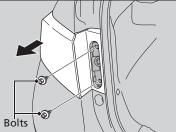

- 2. Remove the mounting bolts.
- **3.** Pull the light assembly out of the rear pillar.

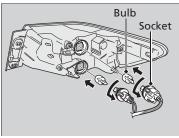

- **4.** Turn the socket to the left and remove it. Remove the old bulb.
- 5. Insert a new bulb.

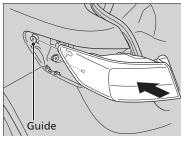


**6.** Reinstall the light assembly by sliding it on to the guide on the body.


# **Back-Up Light Bulbs**

When replacing, use the following bulbs.

## Back-Up Light: 16 W

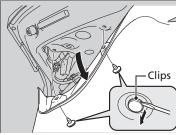

**1.** Remove the holding clips using a flat-tip screwdriver, then pull the lining back.

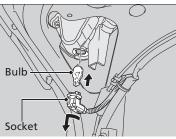


- 2. Turn the socket to the left and remove it.
- **3.** Remove the old bulb and insert a new bulb.


# **Rear License Plate Light Bulb**

When replacing, use the following bulb.

### Rear License Plate Light: 5 W

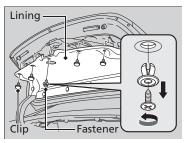

- **1.** Remove the screw from the center of the fastener using a Phillips-head screwdriver.
- **2.** Remove the holding clips using a flat-tip screwdriver, then pull the lining back.

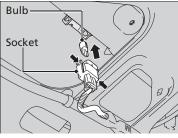

- Remove the license plate light assembly by squeezing the tabs on both sides of the socket.
- **4.** Remove the old bulb and insert a new bulb.

# **High-Mount Brake Light Bulb**

High-mount brake light bulbs are LED type. Have an authorized Acura dealer inspect and replace the light bulbs.

# **Checking and Maintaining Wiper Blades**


# **Checking Wiper Blades**

If the wiper blade rubber has deteriorated, it will leave streaks and the metal wiper arm may scratch the window glass.

# **Changing the Wiper Blade Rubber**



**1.** Lift the driver side wiper arm first, then the passenger side.

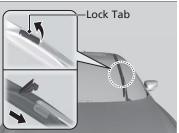


- Place a cloth on the edge of the lock tab. Push the lock tab up with a flat-tip screw driver.
- **3.** Slide the blade from the wiper arm.


○
 ○
 ○
 Changing the Wiper Blade Rubber

#### NOTICE

Avoid dropping the wiper arm; it may damage the windshield.

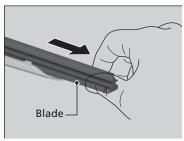

**4.** Slide the wiper blade out from its holder by pulling the tabbed end out.

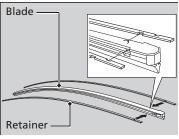

- **5.** Remove the retainers from the rubber blade that has been removed, and mount to a new rubber blade.
  - Correctly align the rubber protrusion and the retainer grooves.
- **6.** Slide the new wiper blade onto the holder from the bottom end.
- **7.** Slide the wiper blade onto the wiper arm, then push down the lock tab.
- **8.** Lower the passenger side wiper arm first, then the driver side.

# **Checking and Maintaining Tires**

# **Checking Tires**

To safely operate your vehicle, your tires must be of the proper type and size, in good condition with adequate tread, and properly inflated.

#### **■** Inflation guidelines

Properly inflated tires provide the best combination of handling, tread life, and comfort. Refer to the driver's doorjamb label or specification's page for the specified pressure.

Underinflated tires wear unevenly, adversely affect handling and fuel economy, and are more likely to fail from overheating.

Overinflated tires make your vehicle ride harshly, are more prone to road hazards, and wear unevenly.

Every day before you drive, look at each of the tires. If one looks lower than the others, check the pressure with a tire gauge.

At least once a month or before long trips, use a gauge to measure the pressure in all tires. Even tires in good condition can lose 1 to 2 psi (10 to 20 kPa, 0.1 to 0.2 kgf/cm²) per month.

#### **■** Inspection guidelines

Every time you check inflation, also examine the tires and valve stems. Look for:

- Bumps or bulges on the side or in the tread. Replace the tire if you find any cuts, splits, or cracks in the side of the tire. Replace it if you see fabric or cord.
- Remove any foreign objects and inspect for air leaks.
- Uneven tread wear. Have a dealer check the wheel alignment.
- Excessive tread wear.
  - **▶ Wear Indicators** P. 299
- Cracks or other damage around valve stem.

#### ○ Checking Tires

## **AWARNING**

Using tires that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tire inflation and maintenance.

Measure the air pressure when tires are cold. This means the vehicle has been parked for at least three hours, or driven less than 1 mile (1.6 km). If necessary, add or release air until the specified pressure is reached.

If checked when hot, tire pressure can be as much as 4-6 psi (30-40 kPa, 0.3-0.4 kgf/cm²) higher than if checked when cold.


Have a dealer check the tires if you feel a consistent vibration while driving. New tires and any that have been removed and reinstalled should be properly balanced.

#### Models with a spare tire


Measure the spare tire pressure once a month or before long trips.

# **Tire and Loading Information Label**

The label attached to the driver's doorjamb provides necessary tire and loading information.

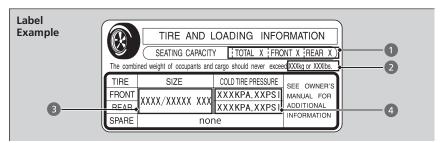

# Tire Labeling

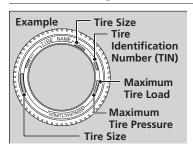

The tires that came on your vehicle have a number of markings. Those you should be aware of are described below.

## ■ Tire Size

Whenever tires are replaced, they should be replaced with tires of the same size.

#### ∑Tire and Loading Information Label

The tire and loading information label attached to the driver's doorjamb contains:

- 1 The number of people your vehicle can carry.
- 2 The total weight your vehicle can carry. Do not exceed this weight.
- The original tire sizes for front, rear, and spare, if equipped.
- The proper cold tire pressure for front, rear, and spare, if equipped.

#### ∑Tire Size

Following is an example of tire size with an explanation of what each component means.

#### P205/55R16 89H

- P: Vehicle type (P indicates passenger vehicle).
- 205: Tire width in millimeters.
- 55: Aspect ratio (the tire's section height as a percentage of its width).
- R: Tire construction code (R indicates radial).
- 16: Rim diameter in inches.
- 89: Load index (a numerical code associated with the maximum load the tire can carry).
- H: Speed symbol (an alphabetical code indicating the maximum speed rating).

Continued 295

## ■ Tire Identification Number (TIN)

The tire identification number (TIN) is a group of numbers and letters that look like the example in the side column. TIN is located on the sidewall of the tire.

## ■ Glossary of Tire Terminology

**Cold Tire Pressure** – The tire air pressure when the vehicle has been parked for at least three hours or driven less than 1 mile (1.6 km).

**Load Rating** – Means the maximum load that a tire is rated to carry for a given inflation pressure.

**Maximum Inflation Pressure** – The maximum tire air pressure that the tire can hold.

**Maximum Load Rating** – Means the load rating for a tire at the maximum permissible inflation pressure for that tire.

**Recommended Inflation Pressure** – The cold tire inflation pressure recommended by the manufacturer.

**Treadwear Indicators (TWI)** – Means the projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread.

∑Tire Identification Number (TIN)

#### **DOT B97R FW6X 2209**

DOT: This indicates that the tire meets all requirements of the U.S. Department of Transportation.

B97R: Manufacturer's identification mark.

FW6X: Tire type code.



# **DOT Tire Quality Grading (U.S. Vehicles)**

The tires on your vehicle meet all U.S. Federal Safety Requirements. All tires are also graded for treadwear, traction, and temperature performance according to Department of Transportation (DOT) standards. The following explains these gradings.

## Uniform Tire Quality Grading

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

#### Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and one-half (1 1/2) times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

■Uniform Tire Quality Grading

For example: Treadwear 200

Traction AA
Temperature A

All passenger car tires must conform to Federal Safety Requirements in addition to these grades.

#### **■** Traction

The traction grades, from highest to lowest, are AA, A, B, and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

## ■ Temperature

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.


#### 

Warning: The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

#### ∑Temperature

Warning: The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

## **Wear Indicators**

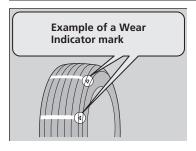

The groove where the wear indicator is located is 1/16 inch (1.6 mm) shallower than elsewhere on the tire. If the tread has worn so that the indicator is exposed, replace the tire. Worn out tires have poor traction on wet roads.

## Tire Service Life

The life of your tires is dependent on many factors, including driving habits, road conditions, vehicle loading, inflation pressure, maintenance history, speed, and environmental conditions (even when the tires are not in use).

In addition to regular inspections and inflation pressure maintenance, it is recommended that you have annual inspections performed once the tires reach five years old. All tires, including a spare\*, should be removed from service after 10 years from the date of manufacture, regardless of their condition or state of wear.

\* Not available on all models 299

# **Tire and Wheel Replacement**

Replace your tires with radials of the same size, load range, speed rating, and maximum cold tire pressure rating (as shown on the tire's sidewall). Using tires of a different size or construction can cause the ABS and VSA® (vehicle stability assist) system to work incorrectly.

It is best to replace all four tires at the same time. If that isn't possible, replace the front or rear tires in pairs.

Make sure that the wheel's specifications match those of the original wheels.

#### U.S. models only

If you replace a wheel, only use TPMS specified wheels approved for your vehicle.

∑Tire and Wheel Replacement

## **AWARNING**


Installing improper tires on your vehicle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tires recommended in this owner's manual.

## **Tire Rotation**


Rotating tires according to the maintenance messages on the multi-information display helps to distribute wear more evenly and increase tire life.

#### **■** Tires without rotation marks

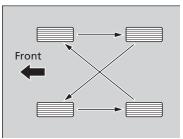

Rotate the tires as shown here.


#### ■ Tires with rotation marks

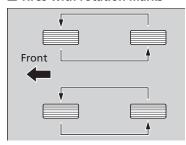

Rotate the tires as shown here.

#### ∑Tire Rotation

Tires with directional tread patterns should only be rotated front to back (not from one side to the other). Directional tires should be mounted with the rotation indication mark facing forward, as shown below.

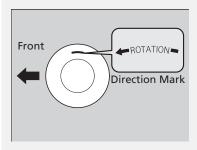

## **Winter Tires**

If driving on snowy or frozen roads, mount all season marked **M+S** tires, snow tires, or tire chains; reduce speed; and maintain sufficient distance between vehicles when driving.

Be particularly careful when operating the steering wheel or brakes to prevent skidding.

Use tire chains, snow tires, or all season tires when necessary or according to the law.

When mounting, refer to the following points.

#### For winter tires:

- Select the size and load ranges that are the same as the original tires.
- Mount the tires to all four wheels.

#### For tire chains:

- Install them on the front tires only.
- Because your vehicle has limited tire clearance, we strongly recommend using the chains listed below:

## Cable-type: SCC Radial Chain SC1032

- Follow the chain manufacturer's instruction when installing. Mount them as tightly as you can.
- Check that the chains do not touch the brake lines or suspension.
- Drive slowly.

#### ≫Winter Tires

## **AWARNING**

Using the wrong chains, or not properly installing chains, can damage the brake lines and cause a crash in which you can be seriously injured or killed.

Follow all instructions in this owner's manual regarding the selection and use of tire chains.

#### NOTICE

Traction devices that are the wrong size or improperly installed can damage your vehicle's brake lines, suspension, body, and wheels. Stop driving if they are hitting any part of the vehicle.

When tire chains are mounted, follow the chain manufacturer's instructions regarding vehicle operational limits.

# 12 Volt Battery

# **Checking the 12 Volt Battery**

The battery condition is being monitored by the sensor on the negative terminal. If there is a problem with the sensor, the warning message on multi-information display will let you know. Have your vehicle checked by a dealer

Check the battery terminals for corrosion monthly.

If your vehicle's battery is disconnected or goes dead:

- The audio system is disabled.
  - Reactivating the audio system P. 154
- The clock resets.
  - Setting the Clock P. 104
- The navigation system\* is disabled.
  - Refer to the navigation system manual

# **Charging the Battery**

Disconnect both battery cables to prevent damaging your vehicle's electrical system. Always disconnect the negative (-) cable first, and reconnect it last.

≥ 12 Volt Battery

## **AWARNING**

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

When conducting any battery maintenance, wear protective clothing and a face shield, or have a skilled technician do it.

**WARNING:** Battery post, terminals, and related accessories contain lead and lead compounds.

# Wash your hands after handling.

When you find corrosion, clean the battery terminals by applying a baking powder and water solution. Rinse the terminals with water. Cloth/towel dry the battery. Coat the terminals with grease to help prevent future corrosion.

When replacing the battery, the replacement must be of the same specifications.

Please consult a dealer for more information.

\* Not available on all models

## Remote Transmitter Care


# **Replacing the Button Battery**

If the indicator does not come on when the button is pressed, replace the battery.



# Battery type: CR2032

**1.** Remove the built-in key.

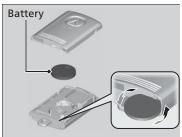

- **2.** Remove the upper half by carefully prying on the edge with a coin.
  - ► Wrap a coin with a cloth to prevent scratching the transmitter.
- **3.** Make sure to replace the battery with the correct polarity.

■ Replacing the Button Battery

#### NOTICE

An improperly disposed of battery can damage the environment. Always confirm local regulations for battery disposal.

Replacement batteries are commercially available or at a dealer.

# Climate Control System Maintenance

## **Dust and Pollen Filter**

The climate control system is equipped with a dust and pollen filter that collects pollen, dust, and other debris in the air. The Maintenance Minder $^{\text{TM}}$  messages will let you know when to replace the filter.

We recommend that you replace the dust and pollen filter sooner when using your vehicle in areas with high concentrations of dust.

#### Dust and Pollen Filter

If the airflow from the climate control system deteriorates noticeably, and the windows fog up easily, the filter may need to be replaced. Please contact a dealer for replacement.


# Cleaning

## **Interior Care**

Use a damp cloth with a mixture of mild detergent and warm water to remove dirt. Use a clean cloth to remove detergent residue.

## Cleaning Seat Belts

Use a soft brush with a mixture of mild soap and warm water to clean the seat belts. Let the belts air dry. Wipe the openings of the seat belt anchors using a clean cloth.

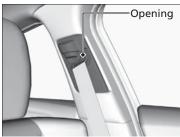

#### 

Do not spill liquids inside the vehicle. Electrical devices and systems may malfunction if liquids are splashed on them.

Do not use silicone based sprays on electrical devices such as audio devices and switches.

Doing so may cause the items to malfunction or a fire inside the vehicle.


If a silicone based spray is inadvertently used on electrical devices, consult a dealer.

Depending on their composition, chemicals and liquid aromatics may cause discoloration, wrinkles, and cracking to resin-based parts and textiles. Do not use alkali solvents or organic solvents such as benzene or gasoline.

After using chemicals, make sure to gently wipe them off using a dry cloth.

Do not place used cloths on top of resin based parts or textiles for long periods of time without washing.

### Floor Mats

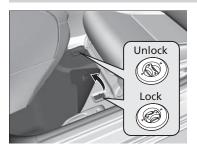

The front floor mats hook over the floor anchors, which keep the mats from sliding forward. To remove the mats for cleaning, turn the anchor knobs to the unlock position. When reinstalling the mats after cleaning, turn the knobs to the lock position.

Do not put additional floor mats on top of the anchored mat.

## ■ Maintaining Genuine Leather\*

Vacuum dirt and dust from the leather frequently. Pay close attention to the pleats and seams. Clean the leather with a soft cloth dampened with a 90% water and 10% neutral soap solution. Then buff it with a clean, dry cloth. Remove any dust or dirt on leather surfaces immediately.

#### ∑Floor Mats

If you use any floor mats that were not originally provided with your vehicle, make sure they are designed for your specific vehicle, fit correctly, and are securely anchored by the floor anchors. Position the rear seat floor mats properly. If they are not properly positioned, the floor mats can interfere with the front seat functions.

\* Not available on all models

## **Exterior Care**

Dust off the vehicle body after you drive.

Regularly inspect your vehicle for scratches on painted surfaces. A scratch on a painted surface can result in body rust. If you find a scratch, promptly repair it.

## Washing the Vehicle

Wash the vehicle regularly. Wash more frequently when driving in the following conditions:

- If driving on roads with road salt.
- If driving in coastal areas.
- If tar, soot, bird droppings, insects, or tree sap are stuck to painted surfaces.

## Using an Automated Car Wash

Fold in the door mirrors. Make sure to follow the instructions indicated on the automated car wash

## Using High Pressure Cleaners

- Keep sufficient distance between the cleaning nozzle and the vehicle body.
- Take particular care around the windows. Standing too close may cause water to enter the vehicle interior.
- Do not spray high pressure water directly into the engine compartment. Instead, use low pressure water and a mild detergent.

#### **≥** Washing the Vehicle

Do not spray water into the air intake vents. It can cause a malfunction.



## Applying Wax

A good coat of automotive body wax helps protect your vehicle's paint from the elements. Wax will wear off over time and expose your vehicle's paint to the elements, so reapply as necessary.

## Maintaining the Bumpers and Other Resin Coated Parts

If you get gasoline, oil, engine coolant, or battery fluid on resin coated parts, they may be stained or the coating may peel. Promptly wipe it away using a soft cloth and clean water.

## Cleaning the Window

Wipe using a glass cleaner.

## Maintaining Aluminum Wheels

Aluminum is susceptible to deterioration caused by salt and other road contaminants. Use a sponge and mild detergent to wipe away promptly. Be careful not to use harsh chemicals (including some commercial wheel cleaners) or a stiff brush. They can damage the clear coat of the aluminum alloy wheels that helps keep the aluminum from corroding and tarnishing.

#### ■ Applying Wax

#### NOTICE

Chemical solvents and strong cleaners can damage the paint, metal, and plastic on your vehicle. Wipe up spills immediately.

#### Maintaining the Bumpers and Other Resin Coated Parts

Ask a dealer about the correct coating material when you want to repair the painted surface of the parts made of resin.

#### ■ Cleaning the Window

Wires are mounted to the inside of the rear window. Wipe along the same direction as the wires with a soft cloth so as not to damage them.

Continued 309

## **■** Fogged Exterior Light Lenses

The inside lenses of exterior lights (headlights, brake lights, etc.) may fog temporarily if you have driven in the rain, or after the vehicle has been run through a car wash. Dew condensation also may build up inside the lenses when there is a significant enough difference between the ambient and inside lens temperatures (similar to vehicle windows fogging up in rainy conditions). These conditions are natural processes, not structural design problems in the exterior lights.

Lens design characteristics may result in moisture developing on the light lens frame surfaces. This also is not a malfunction.

However, if you see large amounts water accumulation, or large water drops building up inside the lenses, have your vehicle inspected by a dealer.

# **Handling the Unexpected**

This chapter explains how to handle unexpected troubles.


10013
Types of Tools312
If a Tire Goes Flat
Temporarily Repairing a Flat Tire 313
Changing a Flat Tire322
Engine Does Not Start
Checking the Engine 329
If the Keyless Access Remote Battery is
Weak 330
Emergency Engine Stop331
Jump Starting332
Shift Lever Does Not Move334

Overheating
How to Handle Overheating 335
Indicator, Coming On/Blinking
If the Low Oil Pressure Indicator Comes
On 337
If the Charging System Indicator Comes
On 337
If the Malfunction Indicator Lamp Comes
On or Blinks 338
If the Brake System Indicator (Red) Come

If the Electric Power Steering (EPS) S	ysten
Indicator Comes On	339
If the IMA Indicator Comes On	340
If the Low Tire Pressure/TPMS Indic	ator
Comes On or Blinks	340
Fuses	
Fuse Locations	34
Inspecting and Changing Fuses	343
Emergency Towing	344

### Vehicles with optional spare tire kit

# **Types of Tools**

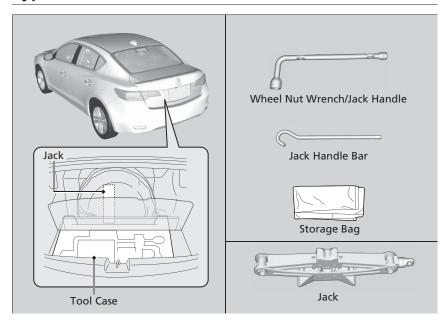

#### ∑Types of Tools

The tools are stored in the cargo area.

## If a Tire Goes Flat


# **Temporarily Repairing a Flat Tire**

This vehicle is not equipped with a spare tire. If the tire has a large cut or is otherwise severely damaged, you will need to have the vehicle towed. If the tire only has a small puncture, from a nail for instance, you can use the temporary tire repair kit so that you can drive to the nearest service station for a more permanent repair.

If a tire goes flat while driving, grasp the steering wheel firmly, and brake gradually to reduce speed. Then stop in a safe place.

- 1. Park the vehicle on firm, level, and non-slippery surface and apply the parking brake.
- **2.** Put the shift lever in **P**.
- 3. Set the parking brake.
- **4.** Turn on the hazard warning lights and set the power mode to VEHICLE OFF (LOCK).

## ■ Getting Ready to Temporarily Repair the Flat Tire

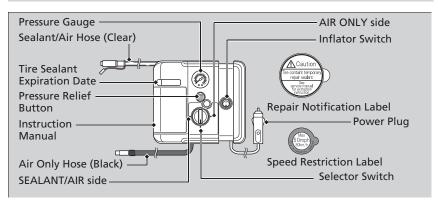

#### ∑Temporarily Repairing a Flat Tire

The kit should not be used in the following situations. Instead, contact a dealer or a roadside assistant to have the vehicle towed.

- The tire sealant has expired.
- More than one tire is punctured.
- The puncture or cut is larger than 3/16 inch (4 mm).
- The tire side wall is damaged or the puncture is outside the tire contact area.

When the puncture is:  Smaller than 3/16 inch (4 mm)  Larger than 3/16 inch (4 mm)	Kit Use	
	Similaries distances, no miles	Yes
		No

- Damage has been caused by driving with the tire extremely under inflated.
- The tire bead is no longer seated.
- The rim is damaged.

Do not remove a nail or screw that punctured the tire. If you remove it from the tire, you may not be able to repair the puncture using the kit.


#### NOTICE

Do not use a puncture-repairing agent other than the one provided in the kit that came with your vehicle. If used it, you may permanently damage the tire pressure sensor.

Continued 313



**1.** Open the trunk floor lid.

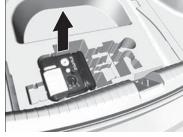


- 2. Take the kit out of the case.
- **3.** Place the kit face up, on flat ground near the flat tire, and away from traffic. Do not place the kit on its side.

#### ☑Getting Ready to Temporarily Repair the Flat Tire


When making a temporary repair, carefully read the instruction manual provided with the kit.

In cold temperatures, the sealant may not flow easily. In this situation, warm it up for five minutes before using.


## ■ Injecting Sealant and Air

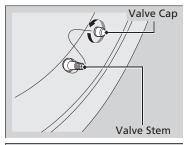

**1.** Remove the valve cap from the tire valve stem.

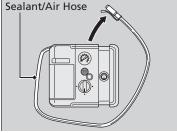

**2.** Remove the sealant/air hose from the packaging.

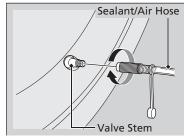

**3.** Attach the sealant/air hose onto the tire valve stem. Screw it until it is tight.


Injecting Sealant and Air


## **AWARNING**


Tire sealant contains substances that are harmful and can be fatal if swallowed.

If accidentally swallowed, do not induce vomiting. Drink plenty of water and get medical attention immediately. For skin or eye contact, flush with cool water and get medical attention if necessary.

The sealant can permanently stain clothing and other materials. Be careful during handling and wipe away any spills immediately.

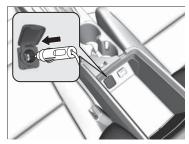

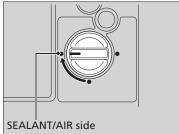

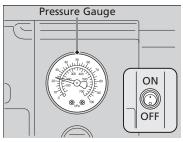

- **4.** Plug in the compressor to the accessory power socket.
  - ▶ Be careful not to pinch the cord in a door or window.
- 5. Start the engine.
  - ► Keep the engine running while injecting sealant and air.
    - Carbon Monoxide Gas P. 66
- **6.** Turn the selector switch to SEALANT/AIR.

- **7.** Press the inflator switch to turn on the compressor.
  - ► The compressor starts injecting sealant and air into the tire.
- **8.** When the sealant injection is complete continue to add air.
- **9.** After the air pressure reaches 32 psi (220 kPa), turn off the kit.
  - ➤ To check the pressure, occasionally turn off the compressor and read the gauge.

∑Injecting Sealant and Air

## **AWARNING**

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid build-up of toxic carbon monoxide.


Breathing this colorless, odorless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.


#### NOTICE

Do not operate the tire repair kit compressor for more than 15 minutes. The accessory power socket and compressor can overheat and become permanently damaged.

Until the sealant injection is complete, the pressure shown on the pressure gauge will appear higher than actual. After the sealant injection is complete the pressure will drop and then begin to rise again as the tire is inflated with air. This is normal. To accurately measure the air pressure using the gauge, turn the air compressor off only after the sealant injection is complete.

If the required air pressure is not reached within 10 minutes, the tire may be too severely damaged for the kit to provide the necessary seal and your vehicle will need to be towed.

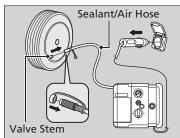

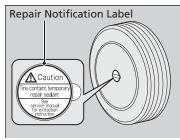


- **10.** Unplug the power plug from the accessory power socket.
- **11.** Unscrew the sealant/air hose from the tire valve stem. Reinstall the valve cap.
- **12.** Press the pressure relief button until the gauge returns to 0 psi (0 kPa).
- **13.** Apply the repair notification label to the flat surface of the wheel.
  - ➤ The wheel surface must be clean to ensure the label adheres properly.

#### 

See a dealer for a replacement sealant bottle and proper disposal of an empty bottle.


Continued 317

## Distributing the Sealant in the Tire

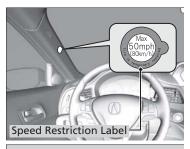

- **1.** Apply the speed restriction label to the location as shown.
- 2. Drive the vehicle for about 10 minutes.

  Do not exceed 50 mph (80 km/h).
- **3.** Stop the vehicle in a safe location.

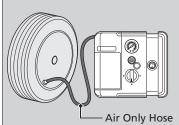

- **4.** Attach the air only hose onto the tire valve stem. Screw it until it is tight.
- **5.** Turn the selector switch to AIR ONLY.
  - ▶ Do not turn the air compressor on to check the pressure.
    - Inflating An Under-inflated Tire
      P. 320

Distributing the Sealant in the Tire

## **AWARNING**

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid build-up of toxic carbon monoxide.

Breathing this colorless, odorless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.

Stop and recheck the air pressure after every 10 minutes of driving as necessary until you reach the nearest service station where you should have the tire permanently repaired or replaced.

- **6.** If the air pressure is:
  - Less than 19 psi (130 kPa):

Do not add air or continue driving. The leak is too severe. Call for help and have your vehicle towed.


#### **Emergency Towing** P. 344

- 32 psi (220 kPa) or more:
  - Continue driving for another 10 minutes or until you reach the nearest service station. Do not exceed 50 mph (80 km/h).
- ▶ If the air does not go down after the 10 minute driving, you do not need to check the pressure any more.
- Greater than 19 psi (130kPa), but less than 32 psi (220 kPa):
   Turn the air compressor on to inflate the tire until the tire pressure reaches 32 psi (220 kPa).
  - Then drive carefully for 10 more minutes or until you reach the nearest service station. Do not exceed 50 mph (80 km/h).
- ➤ You should repeat this procedure as long as the air pressure is within this range.
- 7. Press the pressure relief button until the gauge returns to 0 psi (0 kPa).
- 8. Repackage and properly stow the kit.


Continued 319


## ■ Inflating An Under-inflated Tire

You can use the kit to inflate a non-punctured under-inflated tire.

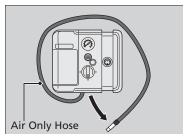

- 1. Open the trunk floor lid.
  - Getting Ready to Temporarily Repair the Flat Tire P. 313
- 2. Remove the kit from the case.
- **3.** Place the kit, face up, on flat ground near the flat tire, away from traffic. Do not place the kit on its side.
- **4.** Remove the air only hose from the kit.
- **5.** Remove the valve cap.

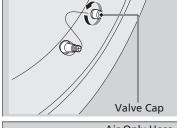

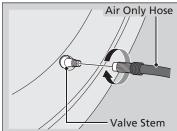



**6.** Attach the air only hose onto the tire valve stem. Screw it until it is tight.

#### NOTICE

Do not operate the temporary tire repair kit compressor for more than 15 minutes. The accessory power socket and compressor can overheat and become permanently damaged.



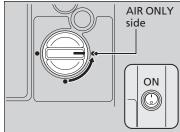

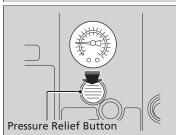

- **7.** Plug in the compressor to the accessory power socket.
  - ▶ Be careful not to pinch the cord in a door or window.
- 8. Start the engine.
  - ► Keep the engine running while injecting air.
    - **Carbon Monoxide Gas** P. 66
- **9.** Turn the selector switch to AIR ONLY.
- 10. Press the inflator switch to turn on the kit.
  - The compressor starts to inject air into the tire.
- **11.** Inflate the tire to the specified air pressure.

- 12. Turn off the kit.
  - ► Check the pressure gauge on the air compressor.
  - If overinflated, press the pressure relief button.
- **13.** Unplug the kit from the accessory power socket.
- **14.** Unscrew the air only hose from the tire valve stem. Reinstall the valve cap.
- **15.** Press the pressure relief button until the gauge returns 0 psi (0 kPa).
- **16.** Repackage and properly stow the kit.

## **AWARNING**

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid build-up of toxic carbon monoxide.

Breathing this colorless, odorless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.

#### Vehicles with optional spare tire kit

# **Changing a Flat Tire**

If a tire goes flat while driving, grasp the steering wheel firmly, and brake gradually to reduce speed. Then, stop in a safe place. Replace the flat tire with a compact spare tire. Go to a dealer as soon as possible to have the full size tire repaired or replaced.

- 1. Park the vehicle on firm, level, non-slippery surface, and apply the parking brake.
- **2.** Move the shift lever in **P**.
- 3. Set the parking brake.
- **4.** Turn on the hazard warning lights and set the power mode to VEHICLE OFF (LOCK).

#### ○ Changing a Flat Tire

Periodically check the tire pressure of the compact spare. It should be set to the specified pressure. Specified Pressure: 60 psi (420 kPa, 4.2 kgf/cm²)

When driving with the compact spare tire, keep the vehicle speed under 50 mph (80 km/h). Replace with a full size tire as soon as possible.


The compact spare tire and wheel in your vehicle are specifically for this model. Do not use them with another vehicle. Do not use another type of compact spare tire or wheel with your vehicle.

Do not mount tire chains on a compact spare tire. If a chain-mounted front tire goes flat, remove one of the full-size rear tires and replace it with the compact spare tire. Remove the flat front tire and replace it with the full size tire that was removed from the rear. Mount the tire chains on the front tire.


#### U.S. models only

Do not use a puncture-repairing agent other than the Tire Repair Kit provided with your vehicle, as some tire repair agents can cause damage to the pressure sensors.


## ■ Getting Ready to Replace the Flat Tire

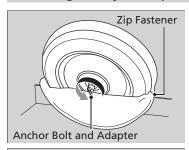

- 1. Open the trunk.
- 2. Open the spare tire cover.
- **3.** Turn the anchor bolt left to remove the bolt and adapter.
- **4.** Pull the spare tire and cover toward you to take the tire out.

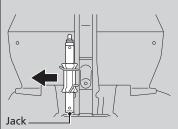


**5.** Move the jack to the left to allow it to be removed.

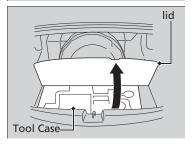


**6.** Pull up the trunk floor lid and take out the wheel nut wrench from the tool case.

#### ■ Getting Ready to Replace the Flat Tire

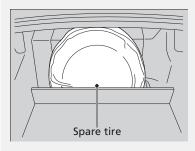

The spare tire is stored at the back of the trunk, behind the rear seat-backs.

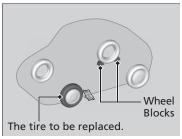

**7.** Place a wheel block or rock in front and rear of the wheel diagonal to the flat tire.




**8.** Place the compact spare tire (wheel side up) under the vehicle body, near the tire that needs to be replaced.



**9.** Loosen each wheel nut about one turn using the wheel nut wrench.

# ■ How to Set Up the Jack

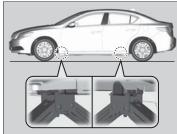

**1.** Place the jack under the jacking point closest to the tire to be changed.



**3.** Raise the vehicle, using the jack handle bar and the jack handle, until the tire is off the ground.

the image until the top of the jack contacts

► Make sure that the jacking point tab is

resting in the jack notch.

the jacking point.



# **AWARNING**

The vehicle can easily roll off the jack, seriously injuring anyone underneath.

Follow the directions for changing a tire exactly, and never get under the vehicle when it is supported only by the jack.

Do not use the jack with people or luggage in the vehicle.

Use the jack provided in your vehicle. Other jacks may not support the weight ("load") or may not fit the jacking point.

The following instructions must be followed to use the jack safely:


- Do not use while the engine is running.
- Use only where the ground is firm and level.
- Use only at the jacking points.
- Do not get in the vehicle while using the jack.
- Do not put anything on top of or underneath the jack.



# ■ Replacing the Flat Tire



1. Remove the wheel nuts and flat tire.

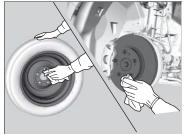

- **2.** Wipe the mounting surfaces of the wheel with a clean cloth.
- 3. Mount the compact spare tire.
- **4.** Screw the wheel nuts until they touch the lips around the mounting holes, then stop rotating.



**5.** Lower the vehicle and remove the jack. Tighten the wheel nuts in the order indicated in the image. Go around, tightening the nuts, two to three times in this order.


#### Wheel nut torque:

80 lbf·ft (108 N·m, 11 kgf·m)


#### ■ Replacing the Flat Tire

Do not over tighten the wheel nuts by applying extra torque using your foot or a pipe.

# ■ Storing the Flat Tire

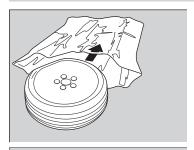

- **1.** Securely store the jack, and put wheel nut and wrench back in the tool case.
- **2.** Put the flat tire in the storage bag provided with your vehicle.

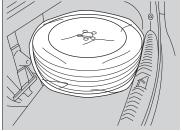

**3.** Place it on the passenger side of the trunk floor lid.

#### Storing the Flat Tire

The flat tire should be positioned towards the passenger side due to trunk configuration. Avoid storing it forcefully against the trunk sides.

# ■ TPMS and the Spare Tire

#### U.S. models

If you replace a flat tire with the spare tire, the low tire pressure/TPMS indicator comes on while you are driving. After driving for a few miles (kilometers), the indicator will start blinking for a short time and then stay on. **CHECK TPMS SYSTEM** appears on the multi-information display, but this is normal.

After you replace the tire with a specified regular tire, the warning message on the multi-information display and the low tire pressure/TPMS indicator will go off after a few miles (kilometers).

#### ■TPMS and the Spare Tire

The system does not monitor the pressure of the spare tire. Manually check the spare tire pressure to be sure that it is correct.

# **Engine Does Not Start**

# **Checking the Engine**

If the engine does not start, check the starter.

#### ∑Checking the Engine


If you must start the vehicle immediately, use an assisting vehicle to jump start it.

**▶** Jump Starting P. 332

Starter condition	Checklist
Starter doesn't turn or turns	Check for a message on the multi-information display.
over slowly.	• If the TO START, HOLD REMOTE NEAR START BUTTON message appears
The 12 volt battery may be dead.	☑ If the Keyless Access Remote Battery is Weak P. 330
Check each of the items on the	►Make sure the keyless remote is in its operating range.
right and respond accordingly.	<b>► ENGINE START/STOP Button Operating Range</b> P. 124
	Check brightness of the interior lights.
	Turn on the interior lights and check the brightness.
	• If the interior lights are dim or do not come on at all
	Checking the 12 Volt Battery P. 303
	If the interior lights come on normally
<b>T</b>	<b>▶ Fuses</b> P. 341
The starter turns over normally	Review the engine start procedure.
but the engine doesn't start.	Follow its instructions, and try to start the engine again.
There may be a problem with the	Starting the Engine P. 226
fuse. Check each of the items on	Check the immobilizer system indicator.
the right and respond accordingly.	When the immobilizer system indicator is blinking, the engine cannot be started.
	Immobilizer System P. 118
	Check the fuel level.
	There should be enough fuel in the tank.
	Fuel Gauge P. 86 Check the fuse.
	Check all fuses, or have the vehicle checked by a dealer.
	Inspecting and Changing Fuses P. 343
	If the problem continues:
	Emergency Towing P. 344

# If the Keyless Access Remote Battery is Weak

If the beeper sounds, the **TO START, HOLD REMOTE NEAR START BUTTON** message appears on the multi-information display, the indicator on the **ENGINE START/STOP** button flashes, and the engine won't start. Start the engine as follows.

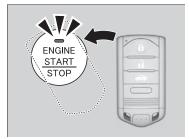



- Touch the center of the ENGINE START/ STOP button with the A logo on the keyless access remote while the indicator on the ENGINE START/STOP button is flashing. The buttons on the keyless access remote should be facing you.
  - ► The indicator flashes for about 30 seconds.
- **2.** Depress the brake pedal and press the **ENGINE START/STOP** button within 10 seconds after the beeper sounds and the indicator stays on.
  - ► If you don't depress the pedal, the mode will change to ACCESSORY.

# **Emergency Engine Stop**

The **ENGINE START/STOP** button may be used to stop the engine due to an emergency situation even while driving. If you must stop the engine, do either of the following operations:

- Press and hold the **ENGINE START/STOP** button about for three seconds.
- Firmly press the **ENGINE START/STOP** button three times.

The steering wheel will not lock. However, because turning off the engine disables the power assist the engine provides to the steering and braking systems, it will require significantly more physical effort and time to steer and slow the vehicle. Use both feet on the brake pedal to slow down the vehicle and stop immediately in a safe place.


The power mode is in ACCESSORY when the engine is stopped. To change the mode to VEHICLE OFF, move the shift lever to  $\boxed{\textbf{P}}$  after the vehicle comes to a complete stop. Then press the **ENGINE START/STOP** button twice without depressing the brake pedal.

#### Emergency Engine Stop ■

Do not press the button while driving unless it is absolutely necessary for the engine to be switched off

# Jump Starting Procedure

Turn off the power to electric devices, such as audio and lights. Turn off the engine, then open the hood.

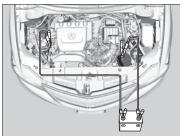

- **1.** Connect the first jumper cable to your vehicle's battery  $\oplus$  terminal.
- 2. Connect the other end of the first jumper cable to the assisting vehicle's ⊕ terminal.▶ Use a 12-volt booster battery only.
- **3.** Connect the second jumper cable to the assisting vehicle's  $\bigcirc$  terminal.



- **4.** Connect the other end of the second jumper cable to the engine mounting bolt as shown. Do not connect this jumper cable to any other part.
- **5.** If your vehicle is connected to another vehicle, start the assisting vehicle's engine and increase its rpm slightly.
- **6.** Attempt to start your vehicle's engine. If it turns over slowly, check that the jumper cables have good metal-to-metal contact.

# **AWARNING**

A battery can explode if you do not follow the correct procedure, seriously injuring anyone nearby.

Keep all sparks, open flames, and smoking materials away from the battery.

Securely attach the jumper cable clips so that they do not come off when the engine vibrates. Also be careful not to tangle the jumper cables or allow the cable ends to touch each other while attaching or detaching the jumper cables.

Battery performance degrades in cold conditions and may prevent the engine from starting.

# ■ What to Do After the Engine Starts

Once your vehicle's engine has started, remove the jumper cables in the following order.


- 1. Disconnect the jumper cable from your vehicle's ground.
- **3.** Disconnect the jumper cable from your vehicle's battery  $\oplus$  terminal.
- **4.** Disconnect the other end of the jumper cable from the assisting vehicle's battery  $\bigoplus$  terminal.

Have your vehicle inspected by a nearby service station or a dealer.


# Shift Lever Does Not Move

Follow the procedure below if you cannot move the shift lever out of P position.

# ■ Releasing the Lock

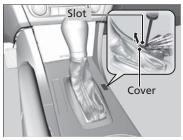

- 1. Set the parking brake.
- **2.** Remove the built-in key from the keyless access remote.
- **3.** Wrap a cloth around the tip of a small flattip screwdriver. Put it into the shift lock release slot as shown in the image, and remove the cover.

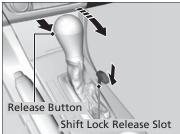

- **4.** Insert the key into the shift lock release slot.
- **5.** While pushing the key down, press the shift lever release button and place the shift lever into  $\boxed{\bf N}$ .
  - ➤ The lock is now released. Have the shift lever checked by a dealer as soon as possible.

# Overheating

# **How to Handle Overheating**

Overheating symptoms are as follows:

- **ENGINE TOO HOT** appears on the multi-information display or the engine suddenly loses power.
- Steam or spray comes out of the engine compartment.

#### First thing to do

- 1. Immediately park the vehicle in a safe place.
- 2. Turn off all accessories and turn on the hazard warning lights.
  - ▶ **No steam or spray present:** Keep the engine running and open the hood.
  - Steam or spray is present: Turn off the engine and wait until it subsides. Then open the hood.

# **AWARNING**

Steam and spray from an overheated engine can seriously scald you.


Do not open the hood if steam is coming out.

#### NOTICE

Continuing to drive with **ENGINE TOO HOT** message on the multi-information display may damage the engine.

Continued 335

#### ■ Next thing to do

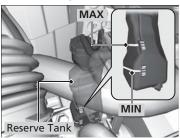

- Check that the cooling fan is operating and stop the engine once the ENGINE TOO HOT message on the multi-information display goes off.
  - ► If the cooling fan is not operating, immediately stop the engine.
- **2.** Once the engine has cooled down, inspect the coolant level and check the cooling system components for leaks.
  - If the coolant level in the reserve tank is low, add coolant until it reaches the MAX mark.
  - ▶ If there is no coolant in the reserve tank, check that the radiator is cool. Cover the radiator cap with a heavy cloth and open the cap. If necessary, add coolant up to the base of the filler neck, and put the cap back on.

# **AWARNING**

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

If the coolant is leaking, contact a dealer for repairs.

Use water as an emergency/temporary measure only. Have a dealer flush the system with proper antifreeze as soon as possible.

## ■ Last thing to do

Once the engine has cooled sufficiently, restart it and check if the **ENGINE TOO HOT** message on the multi-information display appears again.

If it does not, resume driving. If it does, contact a dealer for repairs.

# Indicator, Coming On/Blinking

# If the Low Oil Pressure Indicator Comes On



■ Reasons for the indicator to come on

Comes on when the engine oil pressure is low.

- What to do as soon as the indicator comes on
- **1.** Immediately park the vehicle in a safe place.
- 2. If necessary, turn the hazard warning lights on.
- What to do after parking the vehicle
- 1. Stop the engine and let it sit for about one minute.
- **2.** Open the hood and check the oil level.
  - Add oil as necessary.
- **3.** Start the engine and check the low oil pressure indicator.
  - ► The indicator goes off: Start driving again.
  - ► The indicator does not go off within 10 seconds: Stop the engine and contact a dealer for repairs immediately.

# If the Charging System Indicator Comes On



■ Reasons for the indicator to come on

Comes on when the 12 volt battery is not being charged.

■ What to do when the indicator comes on

Turn off the climate control system, rear defogger, and other electrical systems, and immediately contact a dealer for repairs.

If the Low Oil Pressure Indicator Comes On

#### NOTICE

Running the engine with low oil pressure can cause serious mechanical damage almost immediately.

≥ If the Charging System Indicator Comes On

If you need to stop temporarily, do not turn off the engine. Restarting the engine may rapidly discharge the 12 volt battery.

This indicator may blink after starting when the outside temperature is below -20°F (-30°C). It will stop blinking after the IMA battery warms up.

# If the Malfunction Indicator Lamp Comes On or Blinks



#### ■ Reasons for indicator lamp to come on or blink

- Comes on when there is a problem with the engine emissions control system, or the fuel fill cap is missing, or loose.
- Blinks when engine misfiring is detected.

#### ■ What to do when the indicator lamp comes on

Avoid high speeds and immediately get your vehicle inspected by a dealer

#### ■ What to do when the indicator lamp blinks

Park the vehicle in a safe place with no flammable items and wait at least ten minutes or more with the engine stopped until it cools.

## ■ Check/Tighten Fuel Cap Message

#### ■ The message appears on when:

An evaporative system leak is detected. This may be caused by the fuel fill cap being loose or not being installed.

#### ■ What to do when the message appears:

- 1. Stop the engine.
- 2. Check if the fuel fill cap is fully installed.
  - ▶ If not, loosen the cap, and then retighten it until it clicks at least once.
- 3. Drive for several days of normal driving.
  - ► The message should go off.

#### ■ When the malfunction indicator lamp comes on

The malfunction indicator lamp comes on if the system continues to detect a leak of gasoline vapor. If this happens, follow the procedures described earlier to check the fuel fill cap.

#### NOTICE

If you drive with the malfunction indicator lamp on, the emissions control system and the engine could be damaged.

If the malfunction indicator lamp blinks again when restarting the engine, drive to the nearest dealer at 31 mph (50 km/h) or less. Have your vehicle inspected.

# If the Brake System Indicator (Red) Comes On

U.S.



■ Reasons for the indicator to come on

- The brake fluid is low.
- There is a malfunction in the brake system.

Canada

■ What to do when the indicator comes on while driving Press the brake pedal lightly to check pedal pressure.

- If normal, check the brake fluid level the next time you stop.
- If abnormal, take immediate action. If necessary, downshift the transmission to slow the vehicle using engine braking.

# If the Electric Power Steering (EPS) System Indicator Comes On



#### Reasons for the indicator to come on

- Comes on when there is a problem with EPS.
- If you depress the accelerator pedal repeatedly to increase the engine speed while the engine is idling, the indicator comes on, and sometimes the steering wheel becomes harder to operate.
- What to do when the indicator comes on

Stop the vehicle in a safe place and restart the engine. If the indicator comes on and stays on, immediately have your vehicle inspected by a dealer.

If the Brake System Indicator (Red) Comes On

Have your vehicle repaired immediately. It is dangerous to drive with low brake fluid. If there is no resistance from the brake pedal, stop immediately in a safe place. If necessary downshift the gears.

If the brake system indicator and **ABS** indicator come on simultaneously, the electronic brake distribution system is not working. This can result in vehicle instability under sudden braking. Have your vehicle inspected by a dealer immediately.

#### If the IMA Indicator Comes On



#### ■ Reasons for Indicator to Come On

Comes on when there is a problem with the hybrid system.

#### ■ What to Do When the Indicator Comes On

Avoid high speeds and immediately get your vehicle inspected by a dealer.

#### U.S. models

# If the Low Tire Pressure/TPMS Indicator Comes On or Blinks



#### Reasons for the indicator to come on or blink

A tire pressure is significantly low. If there is a problem with the TPMS or the compact spare tire is installed, the indicator blinks for about one minute, and then stays on.

#### ■ What to do when the indicator comes on

Stop your vehicle in a safe place. Check the tire pressure and adjust the pressure to the specified level. The specified tire pressure is on a label on the driver side doorjamb.

#### ■ What to do when the indicator blinks

Have the tire inspected by a dealer as soon as possible. If the compact spare tire causes the indicator to blink, change the tire to a full-size tire. The indicator goes off after driving for a few miles (kilometers).

≥ If the Low Tire Pressure/TPMS Indicator Comes On or Blinks

#### NOTICE

Driving on an extremely underinflated tire can cause it to overheat. An overheated tire can fail. Always inflate your tires to the prescribed level.

# **Fuse Locations**


If any electrical devices are not working, set the power mode to VEHICLE OFF (LOCK) and check to see if any applicable fuse is blown.

Fuse locations are shown on the fuse box cover.

Locate the fuse in question by the fuse number and box cover number.

# **■ Engine Compartment Fuse Box**

Located near the brake fluid reservoir. Push the tabs to open the box.

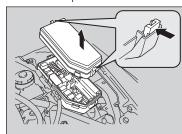

#### ■ Circuit protected and fuse rating

	Circuit Protected	Amps
	EPS	70 A
	Booster Motor	40 A
1	ABS/VSA Motor	30 A
ı	ABS/VSA FSR	30 A
	WIPER	30 A
	Main Fuse	100 A
	IG Main	50 A
	Fuse Box Main	60 A
	Fuse Box Main 2	60 A
	Headlight Main	30 A
	ST/MG SW*1	30 A
2	Rear Defogger	30 A
	-	_
	Blower	40 A
	-	-
	Sub Fan Motor	20 A
	Main Fan Motor	20 A
3	-	-
4	IG Coil 2	15 A
5	Starter DIAG, ST MG	7.5 A
6	IG Coil 1	15 A
7	-	-
8	-	-
9	-	-
10	_	_

	Circuit Protected	Amps
11	Oil Level	7.5 A
12	Fog Lights	20 A
13	IMA 1	7.5 A
14	Hazard	10 A
15	FI Sub	15 A
16	IG Coil	20 A
17	Stop	15 A
18	Horn	10 A
19	IMA 2	10 A
20	Right Headlight Low Beam*1 Right Headlight Low Beam (HID)*2	10 A 15 A
21	IGP	15 A
22	DBW	15 A
23	Left Headlight Low Beam*1 Left Headlight Low Beam (HID)*2	10 A 15 A
24	Booster SOL	15 A
25	MG Clutch	7.5 A
26	WASHER	15 A
27	SMALL	20 A
28	Interior Lights	7.5 A
29	Backup	10 A


<sup>\*1:</sup>Models with halogen bulb low beam headlights

341

<sup>\*2:</sup>Models with discharge headlights

# ■ Interior Fuse Box

Located under the dashboard.

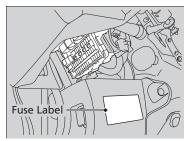

Fuse locations are shown on the label on the side panel.

Locate the fuse in question by the fuse number and label number.


### **■** Circuit protected and fuse rating


	Circuit Protected	Amps
1	-	-
2	ACG	15 A
3	SRS	10 A
4	Fuel Pump	15 A
5	Meter	7.5 A
6	Power Window	7.5 A
7	VB SOL*	7.5 A
8	Door Lock Motor 2 (Unlock)	15 A
9	Door Lock Motor 1 (Unlock)	15 A

	Circuit Protected	Amps
10	-	-
11	Moonroof	20 A
12	Driver's Power Seat Sliding*	(20 A)
13	Driver's Power Seat Reclining*	(20 A)
14	Seat Heaters*	(15 A)
15	Driver's Door Lock Motor (Unlock)	10 A
16	-	_
17	_	_
18	-	_
19	ACC	7.5 A
20	ACC Key Lock	7.5 A
21	Daytime Running Lights	7.5 A
22	HAC	7.5 A
23	HYBRID A/C	(7.5 A)
24	ABS/VSA	7.5 A
25	ACC	(7.5 A)
26	-	-
27	Accessory Power Socket	20 A
28	-	-
29	ODS	7.5 A
30	Driver's Door Lock Motor (Lock)	10 A
31	SMART	10 A
32	Door Lock Motor 2 (Lock)	15 A
33	Door Lock Motor 1 (Lock)	15 A
34	Small Lights	7.5 A

	Circuit Protected	Amps
35	Illumination	7.5 A
36	-	-
37	Premium Audio*	(20 A)
38	Left Headlight High Beam	10 A
39	Right Headlight High Beam	10 A
40	TPMS*	(7.5 A)
41	Door Lock	20 A
42	Driver's Power Window	20 A
43	Rear Passenger's Side Power Window	20 A
44	Front Passenger's Side Power Window	20 A
45	Rear Driver's Side Power Window	20 A
46	-	-

# **Inspecting and Changing Fuses**

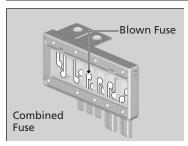

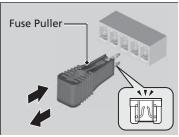

- **1.** Set the power mode to VEHICLE OFF (LOCK). Turn the headlights and all accessories off.
- 2. Remove the fuse box cover.
- **3.** Check the large fuse in the engine compartment.
  - ▶ If the fuse is blown, use a Phillips-head screwdriver to remove the screw and replace it with a new one.
- **4.** Inspect the small fuses in the engine compartment and the vehicle interior.
  - ▶ If there is a burned out fuse, remove it with the fuse puller and replace it with a new one.

#### 

#### NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chances of damaging the electrical system.

Replace fuse with a spare fuse of the same specified amperage.

Confirm the specified amperage using the charts on P. 341 to 342.

There is a fuse puller on the back of the engine compartment fuse box cover.

# **Emergency Towing**

Call a professional towing service if you need to tow your vehicle.

## **■** Flat bed equipment

The operator loads your vehicle on the back of a truck.

This is the best way to transport your vehicle.

#### ■ Wheel lift equipment

The tow truck uses two pivoting arms that go under the front tires and lift them off the ground. The rear tires remain on the ground. **This is an acceptable way to tow your vehicle.** 

#### Emergency Towing

#### NOTICE

Trying to lift or tow your vehicle by the bumpers will cause serious damage. The bumpers are not designed to support the vehicle's weight.

#### NOTICE

Improper towing such as towing behind a motorhome or other motor vehicle can damage the transmission.

Never tow your vehicle with just a rope or chain. It is very dangerous since ropes or chains may shift from side to side or break.

# Information

This chapter includes your vehicle's specifications, locations of identification numbers, and other information required by regulation.

Specifications	346
dentification Numbers	
Vehicle Identification Number (VIN),	
Engine Number and Transmission	
Number	348
Devices that Emit Radio Waves	349
Reporting Safety Defects	350

Emissions Testing	
Testing of Readiness Codes	35
Warranty Coverages	353
Authorized Manuals	35!
Client Service Information	356

# Specifications

#### **■** Vehicle Specifications

Model	Acura ILX Hybrid
No. of Passengers:	
Front	2
Rear	3
Total	5
Weights:	
Gross Vehicle Weight Rating	3,968 lbs (1,800 kg)
Gross Axle Weight Rating (Front)	2,138 lbs (970 kg)
Gross Axle Weight Rating (Rear)	1,962 lbs (890 kg)
Air Conditioning:	
Refrigerant Type	HFC-134a (R-134a)
Charge Quantity	13.2 - 15.0 oz (375 - 425 g)
Lubricant Type	SE-10Y

#### **■** Engine Specifications

Displacement	91 cu-in (	1,497 cm³)	
Spark Plugs	NGK	DILFR6J11	

#### **■** Fuel

Fuel: Type	Premium unleaded gasoline, Pump octane number of 91 or higher
Fuel Tank Capacity	13.2 US gal (50 ℓ)

#### **■** Washer Fluid

Tank Canacity	U.S.: 2.6 US qt (2.5 ℓ)
Tank Capacity	Canada: 5.12 US qt (4.85 ℓ)

### **■ Light Bulbs**

Headlights (Low Beam)	35W (D2S)*1 55W (H11)*2
Headlights (High Beam)	60W (HB3)
Fog Lights	55W (H11)
Front Turn Signal Lights	21W
Parking/Side Marker Lights	5W
Brake/Rear Side Marker/Taillight	21/5W
Back-Up Lights	16W
Rear Turn Signal Lights	21W
High-Mount Brake Light	LED
Rear License Plate Light	5W
Trunk Light	5W
Interior Lights	
Map Light	LED
Ceiling Light	8W
Foot light	1.4W
Glove Box light	LED
Vanity Mirror light	2W
*4 1/ 1/ 1 1/ 1/ 1/ 1/ 1/ 1/ 1/ 1/	

- \*1: Vehicle with discharge headlights
  \*2: Vehicle with halogen bulb low beam headlights

### **■** Brake Fluid

Control of the contro	A III Diete Deelee Fleid DOT 2
Specified	Acura Heavy Duty Brake Fluid DOT 3

#### ■ Transmission Fluid

Specified	Acura Continuously Variable Transmission Fluid		
Capacity	Change	3.0 US qt (2.8 ℓ)	

### **■** Engine Oil

Recommended	-Genuine Acura Motor Oil 0W-20 -API Premium-grade 0W-20 detergent oil			
	Change	3.6 US qt (3.4 $\ell$ )		
Capacity	Change including filter	3.8 US qt (3.6 ℓ)		

# **■** Engine Coolant

Specified	Acura Long Life Antifreeze/Coolant Type2
Ratio	50/50 with distilled water
Capacity	1.37 US gal (5.18 $\ell$ ) (change including the remaining 0.125 US gal (0.475 $\ell$ ) in the reserve tank)

#### **■**Tire


	Size	P205/55R16 89H
Regular	Pressure psi (kPa [kgf/cm <sup>2</sup> ])	32 (220 [2.2])
Compact	Size	T135/80D15 99M
Spare*1	Pressure psi (kPa [kgf/cm <sup>2</sup> ])	60 (420 [4.2])
Wheel Size	Regular	16 x 6 1/2J
Wileel Size	Compact Spare*1	15 x 4T

<sup>\*1:</sup> Vehicles with optional spare tire kit

# **Identification Numbers**

# Vehicle Identification Number (VIN), Engine Number and Transmission Number

Your vehicle has a 17-digit vehicle identification number (VIN) used to register your vehicle for warranty purposes, and for licensing and insuring your vehicle. The locations of your vehicle's VIN, engine number and transmission number are shown as follows.

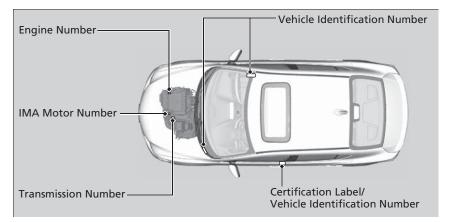

■Vehicle Identification Number (VIN), Engine Number and Transmission Number

The interior vehicle identification number (VIN) is located under the cover.



# **Devices that Emit Radio Waves**

The following products and systems on your vehicle emit radio waves when in operation.

U.S. AcuraLink

Audio System

Bluetooth® Audio

Bluetooth® HandsFreeLink®

HomeLink® Universal Transceiver

Immobilizer System

Keyless Access System

U.S. models only

Tire Pressure Monitoring System (TPMS)

Each of the above complies with the appropriate requirements or the required standards of FCC (Federal Communications Commission) and Industry Canada Standard, described below:

As required by the FCC:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada Standard RSS-Gen/210/310. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

# **Reporting Safety Defects**

#### In the U.S.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying American Honda Motor Co., Inc.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or American Honda Motor Co., Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to http://www.safercar.gov; or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE., Washington, DC 20590. You can also obtain other information about motor vehicle safety from http://www.safercar.gov.

#### In Canada

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform Honda Canada Inc. and you may also inform Transport Canada.

If Transport Canada receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may lead to a recall and remedy campaign. However, Transport Canada cannot become involved in individual problems between you, your dealer, or Honda Canada Inc.

To contact Transport Canada's Defect Investigations and Recalls Division, you may call 1-800-333-0510. For more information on reporting safety defects or about motor vehicle safety, go to http://www.tc.gc.ca/roadsafety.

# **Emissions Testing**

# **Testing of Readiness Codes**

Your vehicle has "Readiness Codes," as part of the onboard self diagnostic system. Some States use these codes as a test to see if your vehicle's emissions components are working properly.

The codes may not be read properly if testing is performed just after the battery has gone dead or been disconnected.

To check if they are set, set the power mode to ON, without starting the engine. The malfunction indicator lamp will come on for several seconds. If it then goes off, the readiness codes are set. If it blinks five times, the readiness codes are not set.

If you are required to have your vehicle tested before the readiness codes are ready, prepare the vehicle for retesting by doing the following:

- 1. Fill the gas tank to approximately 3/4 full.
- 2. Park the vehicle and leave the engine off for 6 hours or more.
- **3.** Make sure the ambient temperature is between 40 °F and 95 °F (4 °C and 35 °C).
- **4.** Start the engine without touching the accelerator pedal, and let it idle for 20 seconds.
- **5.** Keep the vehicle in P. Increase the engine speed to 2,000 rpm, and hold it there for about 3 minutes.
- **6.** Let the engine idle with your foot off the accelerator for 20 seconds.

#### ∑Testing of Readiness Codes

The readiness codes are erased when the 12 volt battery is disconnected, and set again only after several days of driving under a variety of conditions.

If a testing facility determines that the readiness codes are not set, you may be requested to return at a later date to complete the test.

If the testing facility determines the readiness codes are still not set, see a dealer.

Continued 351

- 7. Select a nearby, lightly traveled major highway where you can maintain a speed of 50 to 60 mph (80 to 97 km/h) for at least 20 minutes. Drive on the highway in D. Do not use cruise control. When traffic allows, drive for 90 seconds without moving the accelerator pedal. (Vehicle speed may vary slightly; this is okay.) If you cannot do this for a continuous 90 seconds because of traffic conditions, drive for at least 30 seconds, then repeat it two more times (for a total of 90 seconds).
- **8.** Drive in city/suburban traffic for at least 10 minutes. When traffic conditions allow, let the vehicle coast for several seconds without using the accelerator pedal or the brake pedal.
- **9.** Park the vehicle and leave the engine off for 30 minutes.

# Warranty Coverages

#### **■** U.S. Owners

Your new vehicle is covered by these warranties:

**New Vehicle Limited Warranty** – covers your new vehicle, except for the emissions control systems and accessories, against defects in materials and workmanship.

**Emissions Control Systems Defects Warranty and Emissions Performance Warranty** – these two warranties cover your vehicle's emissions control systems.

Time, mileage, and coverage are conditional. Please read your warranty booklet for exact information.

**Seat Belt Limited Warranty** – a seat belt that fails to function properly is covered by a limited warranty. Please read your warranty booklet for details.

**Rust Perforation Limited Warranty** – all exterior body panels are covered for rust-through from the inside for the specified time period with no mileage limit.

**Accessory Limited Warranty** – Acura accessories are covered under this warranty. Time and mileage limits depend on the type of accessory and other factors. Please read your warranty booklet for details.

**Replacement Parts Limited Warranty** – covers all Acura replacement parts against defects in materials and workmanship.

Continued 353

**Replacement Battery Limited Warranty** – provides prorated coverage for a replacement battery purchased from a dealer.

**Replacement Muffler Lifetime Limited Warranty** – provides coverage for as long as the purchaser of the muffler owns the vehicle.

Restrictions and exclusions apply to all these warranties. Please read the Acura warranty information booklet that came with your vehicle for precise information on warranty coverages. Your vehicle's original tires are covered by their manufacturer. Tire warranty information is in a separate booklet.

#### ■ Canadian Owners

Please refer to the warranty manual that came with your vehicle.

# Authorized Manuals

#### **■** Service Express:

For electronic copies of service publications, you can purchase a subscription to Service Express. Visit www.techinfo.honda.com for pricing and options.

#### ■ For U.S. Owners:

Manuals can be purchased from Helm Incorporated. You can order a manual by phone at (800) 782-4356 (credit card orders only), or online at www.helminc.com.

#### Manuals

#### For Canadian Owners:

Please contact a dealer to order any manuals that you may require.

# Client Service Information

Acura dealership personnel are trained professionals.

They should be able to answer all your questions. If you encounter a problem that your dealership does not solve to your satisfaction, please discuss it with the dealership's service manager or general manager. If you are dissatisfied with the decision made by the dealership's management, contact Acura Client Relations/ Services.

#### **U.S. Owners:**

American Honda Motor Co., Inc. Acura Client Relations Mail Stop 500-2N-7E 1919 Torrance Blvd. Torrance, CA 90501-2746 Tel: (800) 382-2238

#### **Canadian Owners:**

Honda Canada Inc. Acura Client Services 180 Honda Boulevard Markham, ON L6C 0H9

Tel: 1-888-9-ACURA-9 Fax: 1-877-939-0909

E-mail: acura\_cr@ch.honda.com

#### In Puerto Rico and the U.S. Virgin Islands:

Bella International P.O. Box 190816 San Juan, PR 00919-0816 Tel: (787) 620-7546

#### 

When you call or write, please give us the following information:

- Vehicle Identification Number
  - ➡ Vehicle Identification Number (VIN), Engine Number and Transmission Number P. 348
- Date of purchase
- Odometer reading of your vehicle
- Your name, address, and telephone number
- A detailed description of the problem
- Name of the dealer who sold the vehicle to you

Numbers		Synchronized Mode		Recommended CDs	
7-Speed Manual Shift Mode	233	Using Automatic Climate Control		Recommended Devices	
7-Speed Manual Shift Mode	233	Air Pressure		Security Code	
Operation	23/	Airbags		Theft Protection	154
Operation	234	Advanced Airbags		USB Adapter Cable	
		After a Collision		USB Flash Drives	
Α		Airbag Care		Audio/Information Screen	
ABS (Anti-lock Brake System)	250	Event Data Recorders	0	Authorized Manuals	355
Accessories and Modifications		Front Airbags (SRS)		Auto Door Locking/Unlocking	113
Accessory Power Socket		Indicator	50, 74, 78	Customize	
Acura Hybrid System		Passenger Airbag Off Indicator	51	Auto Idle Stop	236
Additives		Sensors	45	Auto Idle Stop Indicator	75
Coolant	277	Side Airbag Cutoff System	48	Automatic Lighting	
Engine Oil		Side Airbag Off Indicator	48	Auxiliary Input Jack	153
Washer		Side Airbags	46	Average Fuel Economy	91
Additives, Engine Oil		Side Curtain Airbags	49	Average Fuel Economy Records	91
Adjusting	2/2	AM/FM Radio	161	Average Speed	92
Armrest	1/10	Anti-lock Brake System (ABS)	250		
Front Seats		Indicator	73	В	
Head Restraints		Armrest	140	ь	
Mirrors		Audio Remote Controls	159	Battery	303
Steering Wheel		Audio System	152	Charging System Indicator	72, 337
Temperature		Adjusting the Sound	160	Jump Starting	332
Air Conditioning System (Climate Co		Auxiliary Input Jack	153	Maintenance (Checking the 12 Volt	
System)		Error Messages	180	Battery)	
Changing the Mode		General Information	183	Maintenance (Replacing)	304
Defrosting the Windshield and	140	iPhone	186	Belts (Seat)	
Windows	1.47	iPod	168	Beverage Holders	
Dust and Pollen Filter		MP3/WMA/AAC	173	Bluetooth® Audio	176
Recirculation/Fresh Air Mode		Pandora®		Bluetooth® HandsFreeLink®	189
Nechiculation/Heart All Mode	140				

Booster Seats (For Children) ...... 65

Brake System	Child Safety54	Continuous Variable Transmission	
Anti-lock Brake System (ABS)	Childproof Door Locks		230
Brake Assist System	Emergency Trunk Opener 11	• •	
Brake System Indicator	Child Seat	· -	
Fluid	Booster Seats		
Foot Brake	Child Seat for Infants		
Indicator	Child Seat for Small Children		
Parking Brake	Installing a Child Seat with a Lap/Shoulder	Shifting	
Brightness Control (Instrument Panel) 131	Seat Belt6	3	
Bulb Replacement	Larger Children 64		
Back-Up Light Bulbs	Rear-facing Child Seat	_	
Brake Light, Taillight, Rear Turn Signal	Selecting a Child Seat	_	
Light and Rear Side Marker Light Bulbs 288	Using a Tether	_	
Bulb Specifications	Childproof Door Locks 112		
Fog Lights	Cleaning the Exterior		
Front Turn Signal Light Bulbs 286	Cleaning the Interior		
Headlights 282	Client Service Information	Cruise Control	240
High-Mount Brake Light 291	Climate Control System 146	5 Indicator	80
Parking/Side Marker Light Bulbs 287	Changing the Mode146	Cup Holders	143
Rear License Plate Light	Defrosting the Windshield and	Customized Features	95
	Windows	7	
C	Dust and Pollen Filter 30!	. <b>D</b>	
C	Recirculation/Fresh Air Mode 146	5	
Carbon Monoxide Gas 66	Sensors	Daytime Running Lights	129
Carrying Cargo 221, 223	Synchronized Mode148	Dead Battery	332
<b>CD Player</b> 165	Using Automatic Climate Control 146	Defrosting the Windshield and	
Certification Label 348	Clock	1 Windows	147
Changing Bulbs282	Coat Hook144		349
Charge/Assist Gauge 86	Compact Spare Tire (Optional) 322		
Charging System Indicator 72, 337	Console Compartment	2 Headlights	126
		Rearview Mirror	133

Dipstick (Engine Oil) 273
Directional Signals (Turn Signal) 126
Doors
Auto Door Locking 113
Auto Door Unlocking 113
Door Open Indicator 31, 75
Keys 105
Locking/Unlocking the Doors from the
Inside 111
Locking/Unlocking the Doors from the
Outside 107
Lockout prevention system 110
DOT Tire Quality Grading 297
Driving
Braking 248
Continuous Variable Transmission
(CVT) 230
Cruise Control
Shifting Speed Position
Starting the Engine
Dust and Pollen Filter 305
_
E
Eco Assist System
<b>ECON Button</b> 239
ECON Mode Indicator 80
Elapsed Time
Electric Power Steering (EPS) System
Indicator 75, 339
Electronic Stability Control (ESC) 243

mergency	344
mergency Trunk Opener	117
missions Testing (Readiness Codes)	351
ngine	348
Coolant	277
Jump Starting	332
Oil	
Starting	226
Switch Buzzer	125
ngine Compartment Cover	270
ngine Coolant	277
Adding to the Radiator	278
Adding to the Reserve Tank	277
Low Temperature Indicator	79
Overheating	335
ngine Oil	272
Adding	274
Checking	273
Displaying Oil Life	264
Low Oil Pressure Indicator 75,	337
Recommended Engine Oil	272
NGINE START/STOP Button	124
PS (Electric Power Steering)	
<b>System</b> 75,	339
xhaust Gas Hazard (Carbon Monoxide)	66
xpanded View Driver's Mirror	134
xterior Care (Cleaning)	
xterior Mirrors	134

#### F

<del>-</del> eatures	151
-ilters	305
Dust and Pollen	305
Oil	275
lat Tire	313
loor Mats	307
luids	
Brake	280
Continuously Variable Transmission	
Fluid	279
Engine Coolant	277
Windshield Washer	281
og Light Indicator	77
oot Brake	249
Front Airbags (SRS)	42
Front Seats	135
Adjusting	135
uel	21, 254
Economy	256
Gauge	86
Instant Fuel Economy	91
Low Fuel Indicator	73
Range	91
Recommendation	254
Refueling	254
Fuel Economy	256
Fuel Economy Indicator	
Fuel Fill Cap	
Message	
Fuel Fill Door	21, 255

Fuses	341	Phone Setup	196	Indicators	70
Inspecting and Changing	343	Receiving a Call	211	Anti-lock Brake System (ABS)	73
Locations	341, 342	Speed Dial	206	Auto Idle Stop	75
		Text Message	201, 213	Brake System	7 <i>′</i>
G		To Clear the System	204	Charging System	
G		To Create a Security PIN	202	CRUISE CONTROL	80, 24
Gasoline (Fuel)		Hazard Warning Button	4	CRUISE MAIN	80, 240
Economy		Head Restraints	138	Door and Trunk Open	31, 75
Gauge	86	Headlights	126	Door Open	3 <i>′</i>
Information		Aiming	282	ECON Mode	80, 239
Instant Fuel Economy	91	Automatic Operation	127	Electric Power Steering (EPS)	
Low Fuel Indicator	73	Dimming	126, 129	System	75, 339
Refueling	254	Operating	126	Fog Light	77
Gauges	86	Heaters (Seat)	145	High-Beam	77
Glass (care)	308	HFL (HandsFreeLink®)	189	IMA System	77
Glove Box	142	High-Beam Indicator	77	Immobilizer System	78
		Hill Start Assist System	228	Keyless Access System	79
Н		HomeLink® Universal Transceive	er 187	Lights On	77
				Low Fuel	73
Halogen Bulbs		1		Low Oil Pressure	75, 337
Handling the Unexpected		•		Low Temperature	79
HandsFreeLink® (HFL)		Identification Numbers		Low Tire Pressure/TPMS	76, 245
Automatic Import of Cellular Ph		Engine and Transmission	348	Maintenance Minder	263
and Call History		Vehicle Identification	348	Malfunction Indicator Lamp	71, 338
Automatic Transferring		Illumination Control	131	Parking Brake and Brake System	70, 339
Caller's ID Information	203	Knob	131	Seat Belt Reminder	33, 73
HFL Buttons	189	IMA Battery Charge Level Indica	ator/Power	Security System Alarm	79
HFL Menus	191	Flow Monitor	93	Shift Lever Position	72
HFL Status Display		IMA System Indicator	77	Side Airbag Off	52, 78
Making a Call	208	Immobilizer System	118	Supplemental Restraint System	
Options During a Call	212	Indicator		System Message	

Transmission	72	Types and Functions	105	Low Keyless Access Remote Signal	
Turn Signal	77	Won't Turn	24	Strength	106
Vehicle Stability Assist (VSA®)		Kickdown	230	Low Oil Pressure Indicator	75, 337
System	74, 243			Low Temperature Indicator	79
VSA® OFF	74, 244			Lower Anchor	59
Information	345	L		Lubricant Specifications Chart	346
Information Buttons	87, 95	L Mode Operation	235	Luggage (Maximum Load Limit)	223
Instant Fuel Economy	91	Language (HFL)	190		
Instrument Panel	69	LATCH (Child Seats)	59	B.A.	
Brightness Control	131	Lights	126, 282	M	
Interior Lights	141	Automatic	127	Maintenance	259
Interior Rearview Mirror	133	Bulb Replacement	282	Battery	303
Internet Radio	171	Daytime Running Lights	129	Brake Fluid	280
iPhone	186	Fog Lights	129	Cleaning	306
iPod	168	High-Beam Indicator	77	Climate Control	305
		Interior	141	Coolant	
		Light Switches	126	Maintenance Minder™	263
J		Lights On Indicator	77	Oil	272
Jack (Wheel Nut Wrench)	325	Turn Signals	126	Precautions	260
Jump Starting	332	Limitations for Manual Operation	n 190	Radiator	278
		Load Limits	223	Remote Transmitter	304
K		Locking and Unlocking	105	Replacing Light Bulbs	282
N		Auto Door Locking/Unlocking	113	Safety	261
Key Number Tag	106	Childproof Door Locks	112	Service Items	266
Keyless Access System	108	From Inside	111	Tires	294
Keyless Lockout Prevention	110	From Outside	107	Transmission Fluid	279
Keys	105	Keys	105	Under the Hood	268
Lockout Prevention	110	Using a Key	110	Maintenance Minder™	263
Number Tag	106	Lockout Prevention System	110	Malfunction Indicator Lamp	71, 338
Rear Door Won't Open	112	Low Battery Charge (12 volt)	337	Map Lights	
Remote Transmitter	107	Low Fuel Indicator		Maximum Load Limit	223

Meters, Gauges	86	Operating the Switches Around the	e	Readiness Code (Emissions Testi	<b>ng)</b> 351
Mirrors		Steering Wheel		Rear Defogger/Heated Door Mi	<b>J</b> .
Adjusting	133	Outside Temperature		Button	
Door	134	Adjusting	90	Rearview Mirror	133
Exterior	134	Overheating		Refueling	254
Interior Rearview	133	J		Fuel Gauge	86
Modifications (and Accessories)	257	Р		Gasoline	254, 346
Moonroof		P		Low Fuel Indicator	73
MP3	165, 173	Paddle Shifters (Sequential Shift M	ode) 20	Regulations	246, 296, 349
Multi-Information Display	87	Pandora <sup>®</sup>	171	Remote Transmitter	
Multi-View Rear Camera		Panic Mode	119	Replacement	
		Parking	252	Battery	303
N.I.		Parking Brake	248	Bulbs	282
N		Parking Brake and Brake System		Fuses	341, 342
Numbers (Identification)	348	Indicator	70, 339	Tires	300
		Passenger Airbag Off Indicator	51	Wiper Blade Rubber	292
0		Passing Indicators	126	Reporting Safety Defects	350
O		Power Windows	120	Resetting a Trip Meter	89
Odometer	89	Precautions While Driving	229		
Oil (Engine)	272	Rain	229	•	
Adding	274	Pregnant Women	37	S	
Checking	273	Puncture (Tire)	. 313, 322	Safe Driving	27
Displaying Oil Life	264			Safety Check	31
Low Oil Pressure Indicator	75, 337	R		Safety Labels	67
Recommended Engine Oil	272	N		Safety Message	1
Viscosity	272	Radiator	278	Seat Belts	32
Opening/Closing		Radio (AM/FM)	161	Adjusting the Shoulder Anchor.	36
Hood	269	Radio (XM®)	163	Automatic Seat Belt Tensioners.	34
Moonroof	123	Radio Data System (RDS)	162	Checking	38
Power Windows		Range	91	Fastening	35
Trunk	114	RDS (Radio Data System)	162	-	

Installing a Child Seat with a Lap/Shoulder         Seat Belt       61         Pregnant Women       37         Reminder       33         Warning Indicator       33, 73         Seat Heaters       145         Seats       135         Adjusting       135	Side Curtain Airba SMS Text Message Snow Tires Spare Tire Kit (Opt Spark Plugs Specifications Specified Fuel Speedometer
Front Seats	SRS Airbags (Airba
Seat Heaters	Starting the Engin
Security System	Does Not Start
Immobilizer System Indicator 78	Engine Switch Bu
Security System Alarm Indicator	Jump Starting
SEL/RESET Button 87	Steering Wheel
Select Lever	Adjusting
Operation	Stopping
Releasing 334	Summer Tires
Won't Move	Supplemental Rest
Selecting a Child Seat 58	Switches (Around
Selector Knob (Audio) 155	System Message In
Setting the Clock 104	
Shift Lever 20, 231	Т
Shift Lever Position Indicator 72	•
Shift Lever Positions	Tachometer
Continuous Variable Transmission	Temperature
(CVT) 231	High Temperature
Shifting	Low Temperature
Shoulder Anchor	Outside Temperat
Side Airbags	Temperature Sense
Cutoff System	Text Message
Off Indicator 48	Time (Setting)

Side Curtain Airbags	49
SMS Text Message	201, 213
Snow Tires	302
Spare Tire Kit (Optional)	313
Spark Plugs	346
Specifications	346
Specified Fuel	254, 346
Speedometer	86
SRS Airbags (Airbags)	39
Starting the Engine	226
Does Not Start	329
Engine Switch Buzzer	124
Jump Starting	332
Steering Wheel	124, 132
Adjusting	132
Stopping	252
Summer Tires	302
Supplemental Restraint System (SR	<b>S)</b> 42
Switches (Around the Steering Wh	<b>eel)</b> 4, 5
System Message Indicator	76
Т	
Tachometer	86
Temperature	
High Temperature Indicator	79
Low Temperature Indicator	79
Outside Temperature	90
Temperature Sensor	90
Text Message	
Time (Setting)	104

Tire Pressure Monitoring System		
(TPMS)		245
Indicator	76,	340
Tire Repair Kit		313
Tires		294
Air Pressure	295,	347
Checking and Maintaining		294
Inspection		294
Labeling		295
Puncture (Flat Tire)		313
Regulations		297
Rotation		301
Spare Tire Kit (Optional)		313
Summer		302
Tire Chains		302
Tire Repair Kit		313
Wear Indicators		299
Winter		302
Tools		312
Towing a Trailer		225
Towing Your Vehicle		225
Emergency		344
TPMS (Tire Pressure Monitoring		
System)		245
Transmission		231
Automatic		231
Fluid		279
Number		348
Shift Lever Position Indicator		72
Trip Meter		89

Troubleshooting	311	Vehicle Identification Number 348	Winter Tires	302
Blown Fuse		Vehicle Stability Assist (VSA®) 243	Snow Tires	302
Brake Pedal Vibrates	25	Off Button	Tire Chains	302
Buzzer Sounds When Opening D	000r 25	Off Indicator	Wipers and Washers	130
Emergency Towing		System Indicator	Checking and Maintaining Wiper	
Engine Does Not Start		Viscosity (Oil)	Blades	292
Noise When Braking		VSA® (Vehicle Stability Assist)	WMA	165, 173
Overheating	335	•	Worn Tires	294
Premium Gasoline		<b>\A</b> /		
Puncture/Flat Tire	313	W	V	
Rear Door Won't Open	24, 112	Wallpaper 100, 157	X	
Shift Lever Won't Move	334	Wallpaper Setup 178	XM® Radio	163
Warning Indicators	70	Warning and Information Messages 81		
Trunk	114	Warning Indicator On/Blinking 337		
Lid	114	Warning Labels 67		
Light Bulb	346	Warranties (Warranty Manual provided		
Turn Signals	126	separately) 353		
Indicators (Instrument Panel)		Watts		
		Wear Indicators (Tire) 299		
		Wheel Nut Wrench (Jack Handle) 325		
U		Window Washers 130		
Unlocking the Doors	107	Adding/Refilling Fluid 281		
Unlocking the Front Doors from	n the	Switch		
Inside		Windows (Opening and Closing) 120		
USB Adapter Cable	152, 153	Windshield 130		
USB Flash Drives	186	Cleaning 309		
Using the Keyless Access System	108	Defrosting/Defogging 147		
		Washer Fluid 281		
V		Wiper Blades		
-		Wipers and Washers 130		
Vanity Mirrors	7			