

owners.acura.com

31STKQ40  
00X31-STK-Q400

2011 Acura RDX Advanced Technology Guide  
©2010 Honda Motor Co., Ltd. — All Rights Reserved

27134  
©1234.5678.91.0  
Printed in U.S.A.



**2011 RDX**  
ADVANCED TECHNOLOGY GUIDE

## ADVANCED TECHNOLOGY GUIDE

The Advanced Technology Guide is designed to help you get acquainted with your new Acura and provide basic instructions on some of the technology items.

This guide is not intended as a substitute for the Owner's Manual. For complete information on vehicle controls and operation, please refer to the respective sections in the Owner's Manual.

As with the Owner's Manual, this guide covers all trim levels of the Acura RDX. Therefore, you may find descriptions of equipment and features that are not on your particular vehicle.



*Tech model shown*

Instrument Panel Indicators .....	2
Multi-Information Display (MID) .....	4
Keyless Memory Settings .....	8
Reverse Tilt Door Mirror .....	9
Rearview Camera .....	10
HomeLink® .....	11
Voice Recognition .....	12
Navigation .....	18
AcuraLink Real-Time Traffic™ .....	20

AcuraLink Real-Time Weather™ .....	21
Bluetooth® HandsFreeLink® .....	22
AcuraLink® Messages .....	25
Bluetooth® Audio .....	26
iPod or USB Flash Memory .....	27
Note Function .....	27
My Acura .....	28
Safety Reminder .....	29
Fuel Requirement .....	29

# INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.



## Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer.

	Charging system		SH-AWD* (Super Handling-All Wheel Drive system)
	Low brake fluid		Malfunction lamp (check engine light)
	Low oil pressure		VSA (Vehicle Stability Assist)
	SRS (Supplemental Restraint System)		TPMS (blinks) (Tire Pressure Monitoring System)
	ABS (Anti-lock Brake System)		Brake System

*\*if equipped*

## On/Off Indicators

	PASSENGER AIRBAG OFF (above audio panel)		Fog lights on
	SIDE AIRBAG OFF		Immobilizer (flashes): improperly coded key; use correct key
	VSA off		Headlights on
	CRUISE MAIN on		Turn signals/hazards on
	CRUISE CONTROL on		High beams on

## Condition Indicators

Action is needed by driver.

	Parking brake on: Release		Message indicator: See MID
	Seat belt reminder: Fasten seat belt(s)		Low fuel: Refill
	A/T temperature: Pull over and let engine idle		Low tire pressure (stays on): Add air


# MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.


## Accessing the MID




When you start the engine, the MID shows the last active lower display from the previous drive cycle. Press either Info button (▲/▼) to show the last active main display.

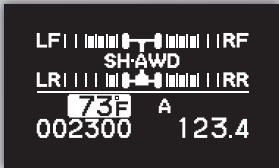


To toggle between the different displays, press either Info button (▲/▼) for the main displays and press the SEL/RESET button for the lower displays.

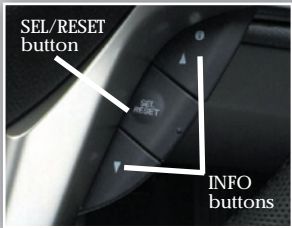

## Main Displays

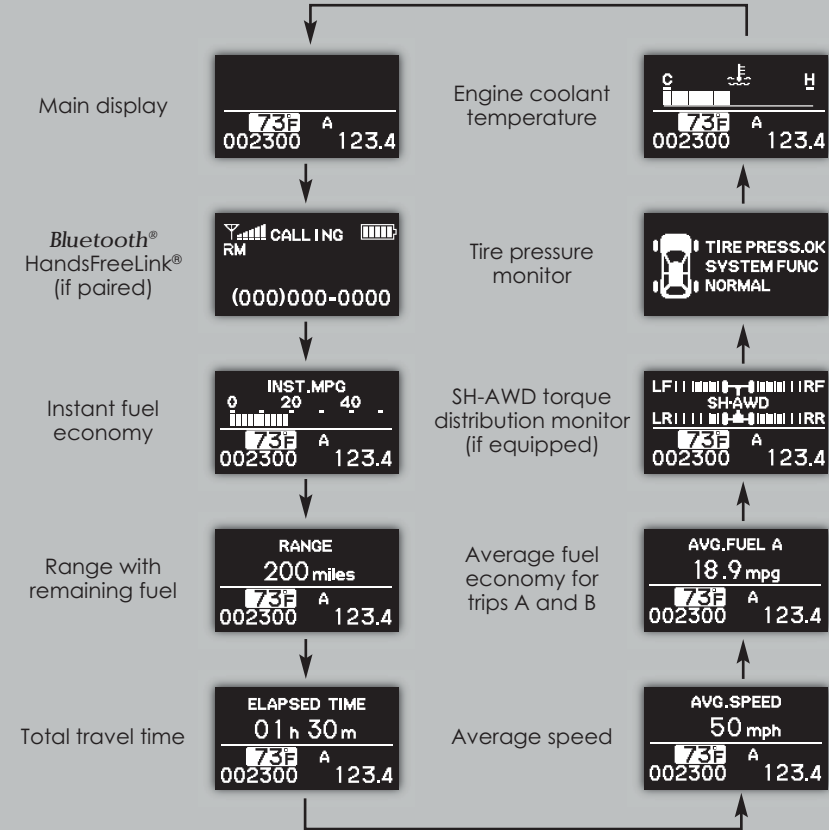

## Lower Displays

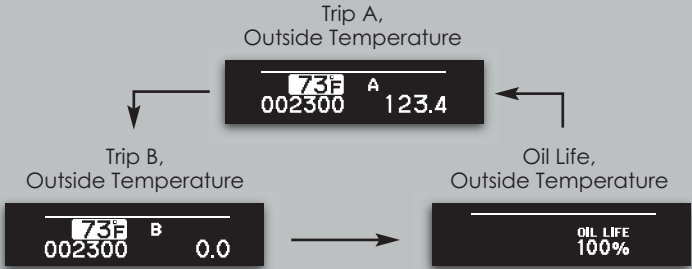



## Tire Pressure Monitoring System

Alerts you when one or more of your tires has significantly low pressure. Toggle to the tire pressure monitor display to view pressure readings on the MID.

### How it Works



- If the tire pressure drops significantly below recommended levels:
- The low tire pressure indicator comes on.
  - A "CHECK TIRE PRESSURE" message appears on the MID, showing which tire(s) have low pressure.



### What to Do

1. Visually inspect the tires for damage.
2. Use a tire air pressure gauge (or check the MID) to check which tire(s) have low pressure.



3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.




## Customizing Settings Using the MID

Three groups of settings can be programmed using the MID\*: Meter Setup, Lighting Setup, and Door Setup.

### Programming the Auto Door Unlock Setting



Press and hold either Info button (▲/▼) to enter customization mode, then press SEL/RESET to activate the menu.

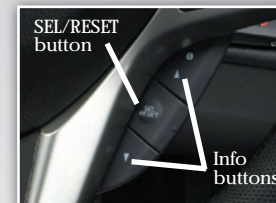

1. Select "CHG SETTING."



4. Select "ALL DOORS WITH SHIFT TO P."



2. Select "DOOR SETUP."



5. Once the setting has been saved, select "EXIT."



3. Select "AUTO DOOR UNLOCK."



\* See "Customize Settings" in your owner's manual for other programmable settings.

# KEYLESS MEMORY SETTINGS

When linked, each remote (labeled 1 or 2 on the back) activates its own set of programmable driving position memory and customized settings (MID).

## Checkpoint

1. Verify that the remote you are using is linked to the vehicle by pressing the lock and unlock buttons at the same time. The LED light on the remote blinks once to indicate that it is linked or twice if it is unlinked.

 


2. When you use the remote to unlock the vehicle, the ID number on the back of the remote should match the memory button illuminated on the driver door panel. Go to step 3.



- If the numbers still do not match after the remotes have been linked, follow these instructions:

- Press the lock button on your remote, then press the unlock button.



- Whichever memory button is illuminated on the driver door panel should now match the number on the back of the remote.



3. Once the remotes are linked, you can begin to program your Keyless Memory Settings.

## Customizing Settings

Some examples on how to program vehicle settings.

### Driving Position Memory System (DPMS)

1. Turn the ignition switch to ON (II). Shift into Park (P).
3. Press and hold the SET button until you hear a beep, then release.



2. Adjust your preferred seat and outside mirror settings.
4. Press and hold the memory button # corresponding to the remote (1 or 2) you are using until you hear two beeps.




Note: Each group of settings is activated by the corresponding remote transmitter (1 or 2). When activated, each item begins to adjust when you open the driver's door to enter the vehicle.

## REVERSE TILT DOOR MIRROR

When you shift into Reverse, the passenger's outside door mirror tilts down slightly to improve your view as you parallel park. Shifting out of reverse returns the tilted mirror to its original position.

### How It Works

- To tilt the passenger's door mirror, move the mirror selector switch to the right (R) position when in Reverse.
- To turn the feature off, move the switch to the middle position or left (L) position.

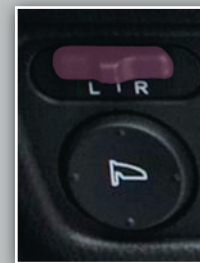

## REARVIEW CAMERA

For added convenience, the area behind your vehicle is displayed to help you navigate while in Reverse (R).

### How It Works

- When you shift into Reverse, a real-time image of the area behind your vehicle is shown in the monitor, along with helpful parking guide lines.
- The display turns off when you shift out of Reverse.

Base models



Models with navigation



### Turning the Guide Lines On or Off

Base models

Press and hold the power button for 3 seconds. Repeat to turn back on.



Models with navigation


Press and hold the CANCEL button for 3 seconds. Repeat to turn back on.



## HOMELINK®

The HomeLink Universal Transceiver built into your vehicle can be programmed to operate up to three remote-controlled devices around your home, such as garage doors, lighting, or home security systems.

### Training a Button

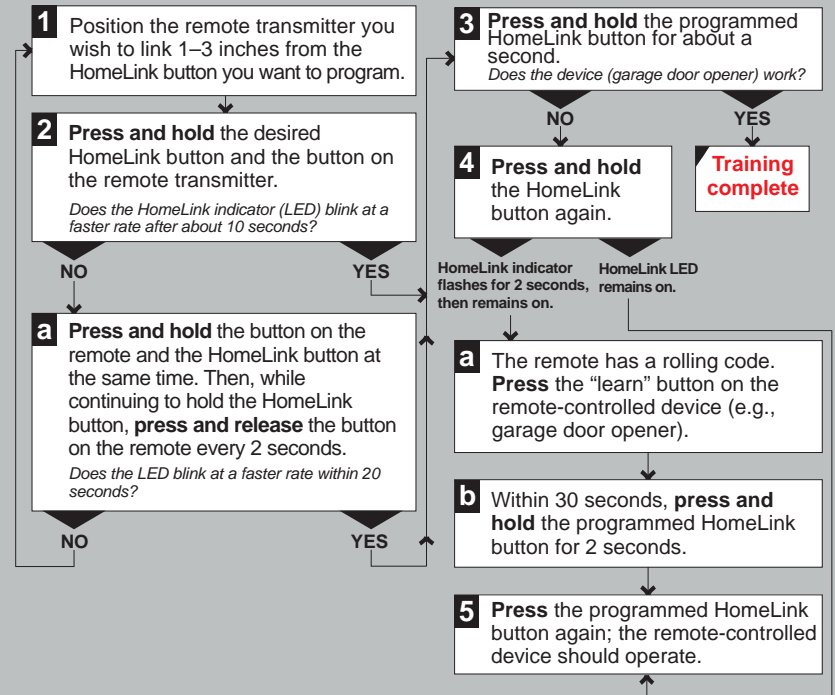

If you have any problems programming HomeLink, see the owner's manual included with the device you are trying to program, call HomeLink at (800) 355-3515, or visit [www.homelink.com](http://www.homelink.com).



# VOICE RECOGNITION

To keep your eyes on the road and hands on the wheel, use voice commands for navigation, hands-free calling, audio, climate control, and AcuraLink functions. For a full list of commands, say “*Display information*” and “*Voice Command Help*.”

## Functions by Voice Command

Control five different systems with the steering wheel buttons and the ceiling microphone.



**HFL Talk button:** Answer an incoming call, or go directly to the Cellular Phone screen.

**Navi Talk button:** Give HFL, navigation, audio, climate control, or AcuraLink commands.

**Navi Back button:** Cancel a command and return to the previous screen.

**HFL Back button:** End a call or decline a call.



## Voice Command Tips

- Press and release the HFL or Navi Talk button, wait for a beep, then give a command.
- For a list of available HFL commands, press and release the HFL Talk button and say “*Hands-free help*.”
- For a list of available navigation commands, press and release the Navi Talk button and say “*Help*.”
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling.
- Close the windows.

## NAVIGATION\* p. 18



## BLUETOOTH® HANDSFREELINK® p. 22



## ACURALINK\* p. 25



## CLIMATE\* p. 17



## AUDIO\* p. 17



\* Voice commands for these systems are available on Tech Package only.



## Commonly Used Voice Commands

Press and release the Navi Talk button before you give a command.

### Locate Points of Interest

Say a command like “Display restaurant” to see restaurant icons appear on the map.




Say a command like “Display gas stations” to see gas station icons appear on the map.




Press and release the Navi Talk button before you give a command.

### Get Navigation Route Information

After a destination is entered, say “How far to destination?” to hear the remaining distance.

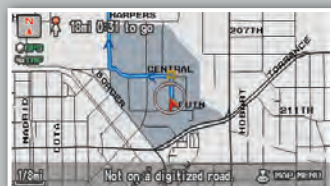


Say “Display entire route” to see the routing method the system mapped for your destination.

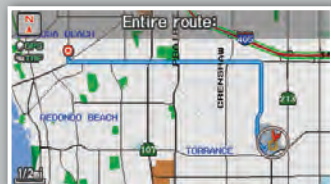

Press and release the Navi Talk button before you give a command.

### Make Audio Selections

Say a command like “Radio 97.1 FM” to select that station.

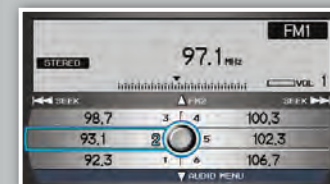


Say a command like “CD play track 1” to hear that song on a currently inserted CD.



Press and release the Navi Talk button before you give a command.

### Adjust the Vehicle's Climate Setting

 Say a command like “Air conditioner on” to adjust the climate setting.



Say a command like “Fan speed 4” to adjust the fan speed.



## Commonly Used Voice Commands (continued)

Press and release the Navi Talk button before you give a command.

### ♦ General Commands (Accepted on most screens to change displays)



- Display map
- Display menu
- Display audio screen
- Display Information
- What time is it?

### ♦ Find Place Commands (Accepted on Map screen)




- Find nearest:
  - ATM
  - gas station
  - Mexican restaurant
  - post office
  - bank
  - Acura dealer
  - airport
  - hospital

### ♦ Display Commands (Accepted on Map screen)




- Display/show:
  - ATM
  - gas station
  - restaurant
  - post office
- Display north up/heading up
- Zoom in/out
- Go home
- Display current location

### ♦ Navigation Commands (Accepted on Map screen after a destination is entered)

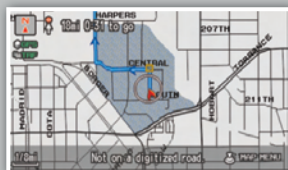

- How long/far to the destination?
- Display destination
- Display entire route

### ♦ Help Commands (Accepted on most screens)

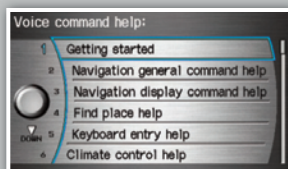

- Help (list of available commands for current screen)
- Voice command help (from the INFO screen - list of all available navigation, audio, and climate control commands)

Press and release the Navi Talk button before you give a command.

### ♦ Audio Commands (Accepted on most screens)



- Radio on
- Radio # FM/AM
- Radio preset 1/2/3/4/5/6
- XM channel #
- XM preset 1/2/3/4/5/6
- CD play
- CD play track #
- CD skip forward/back
- Auxiliary (AUX) play

### ♦ Climate Control Commands (Accepted on most screens)




- Air conditioner on/off
- Rear defrost on/off
- Climate control recirculate/fresh air
- Fan speed up/down
- Temperature # degrees (# = 57-87)
- Temperature max hot/cold

### ♦ Setup Commands (Accepted on Setup screen)




- Brightness up/down
- Volume up/down/min/max/off
- Interface dial feedback on/off
- Guidance prompts min/max/normal

### ♦ Traffic Commands\* (Accepted on Map screen)

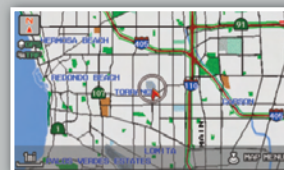

- Display traffic
- Display traffic speeds
- Display traffic icons
- Display traffic incidents/list

### ♦ Weather Commands\* (Accepted on Map screen)

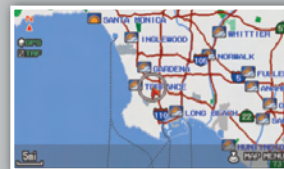

- Display weather
- Display weather icons
- Display weather warning icons

\*subscription required

# NAVIGATION (Tech models)

Real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination.

## Entering a Destination


### Using Voice Control

Press and release the Navi Talk button before you give a command.


1. Say "Display menu" and "Address."
4. Say the entire street address number. For example, "1-2-3-4."



2. Say "Street" followed by the street name. Do not include the direction (N, S, E, W) or type (St., Ave., Blvd., etc.).
5. If the street address is in more than one city, a list of city names appears. Say the number next to the city you want to select.

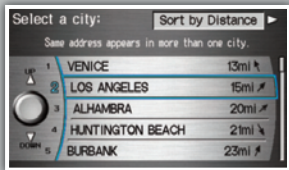

3. A list of street names appears. Say the number next to the street you want to select.
6. The system calculates the route and displays the "Calculate route to" screen. Say "OK" to set the route.

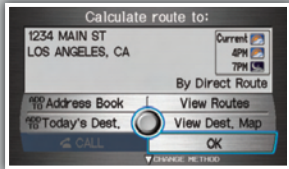


### Using the "Find Nearest" Command


Try these simple steps to find a nearby point of interest, such as a gas station, movie theater, restaurant, etc.

Press and release the Navi Talk button before you give a command.

1. Say "Find nearest ATM."
3. Say the number of the destination you want to select.

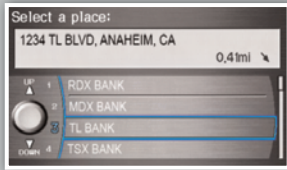


2. A list of the nearest ATMs in your area is displayed by shortest distance to destination.
4. The system calculates the route and displays the "Calculate route to" screen. Say "OK" to set the route.

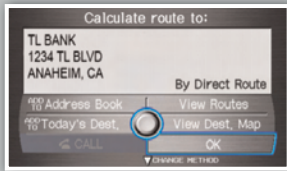

\* You can also use the Interface Dial to complete this procedure.

### Map Screen Legend

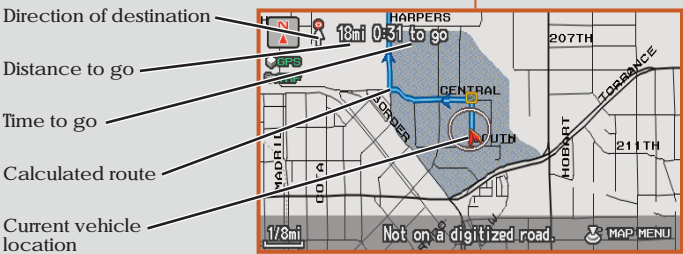

\* You can also use the Interface Dial to complete this procedure.





## ACURALINK REAL-TIME TRAFFIC™\* (if equipped)

Provides continuously updated info, including traffic speed, incidents, and construction in major metro areas.

Press and release the Navi Talk button before you give a command.

### Displaying Traffic Information

Say "Display traffic"\*\*\* to view highway flow data.

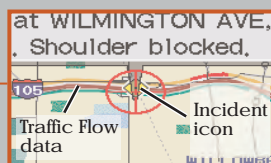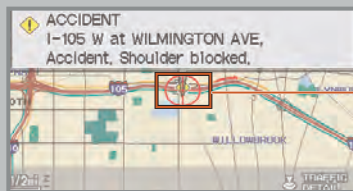

Heavy traffic

Moderate traffic

Free-flow traffic

NOTE: Traffic flow and incident icons are displayed on map scales of 5 miles (8 km) or less.

### Incident Icons



Incident



Road closed



Congestion



Weather




Construction


### Traffic Rerouting™

The system can automatically provide detours around traffic incidents (if Traffic Rerouting is ON in Setup), or you can calculate a new route manually.


1. Say "Display traffic incidents" to view a list of incidents in your area.

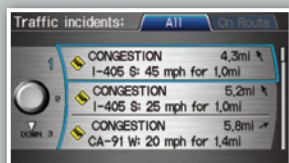

3. Say the number of the incident you wish to avoid, and say "Avoid."

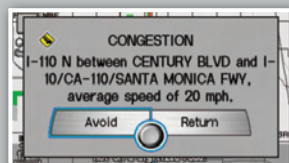

2. Say "On route" to view specific incidents on your route.

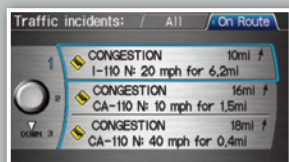

4. The system calculates a new route.



\* Subscription-based service through Sirius XM Radio® (free 90-day trial upon vehicle purchase)

\*\* You can also display this information manually using the Interface Dial from the Map menu.

## ACURALINK REAL-TIME WEATHER™\* (if equipped)

Provides continuously updated weather conditions, warnings, and forecasts in major metro areas.

Press and release the Navi Talk button before you give a command.

### Displaying Weather Icons

Say "Display weather"\*\*\* to view weather icons for each city.



### Weather Icons



Clear



Fog



Partly Cloudy



Rain



Cloudy



Snow

NOTE: Weather icons are available on all map scales.

### Displaying Weather Information

Say "Information," then "Weather information" for the following options:



#### Weather Forecast

Say "Weather forecast" to view a 1-day or 3-day forecast of your current position or city vicinity.




#### Weather Warning List

Say "Warning list sorted by distance" to view a list of all U.S. weather warnings by distance.

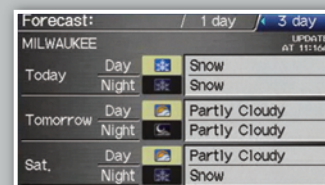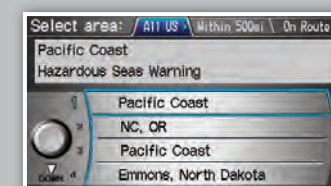

#### Weather Warning Map

Say "Warning map" to view color-coded severe weather systems.

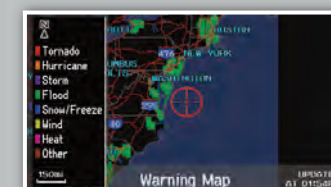

\* Subscription-based service through Sirius XM Radio® (free 90-day trial upon vehicle purchase)

\*\* You can also display this information manually using the Interface Dial from the Map menu.

# BLUETOOTH® HANDSFREELINK®

Allows you to place and receive phone calls through your vehicle's audio system. Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) to check if your phone is compatible.

## Pairing Your Phone




**HFL Talk button:** Answer an incoming call, or go directly to the Cellular Phone screen.

**Navi Talk button:** Give HFL commands.


**Navi Back button:** Cancel a command and return to the previous screen.

**HFL Back button:** End a call or decline a call.

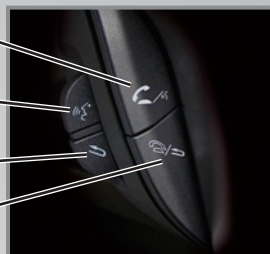


Press and release the HFL Talk button before you give a command.

1. Enable "Discovery" or "Search" mode on your compatible phone.
2. Say "Phone setup," then say "Pair."

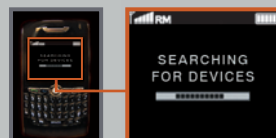

3. HFL gives you a four-digit code (that also appears on the MID) and begins to search for your phone.

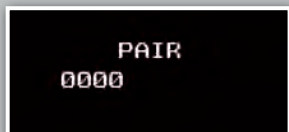

4. Search for a HandsFreeLink device from your phone, and connect to HFL.

5. Enter the four-digit code on your phone when prompted.

6. HFL asks you to name the phone. For example, say "Mary's phone."




## Making a Call

Press and release the HFL Talk button before you give a command.

1. Press the HFL Talk button.



2. Say "Call" or "Dial" and the desired phone number.

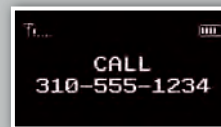

3. Press the HFL Talk button, and say "Call" or "Dial" to continue.




4. The call is connected and heard through the vehicle's speakers.



## Receiving a Call

 1. A notification is heard and the incoming phone number appears on the MID.



2. Press the HFL Talk button to accept the call.



3. Press the HFL Back button to end or decline the call.



## HFL Phonebook


Store up to 50 names and their phone numbers, which can be used as speed dials.

Press and release the HFL Talk button before you give a command.


1. Press the HFL Talk button.




2. Say "Call" or "Dial" and the desired phone number.

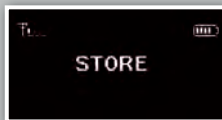

3. Press the HFL Talk button, and say "Call" or "Dial" to continue.

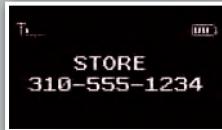

4. The call is connected and heard through the vehicle's speakers.

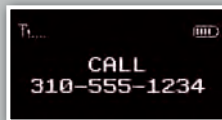

## Cellular Phonebook\* (models with navigation)

Import your entire cell phone's address book to the navigation system.

Press and release the Navi Talk button before you give a command.

1. Say "Display Information."




2. Say or select "Import Cellular Phonebook."



3. HFL begins to import your contacts to the system.



4. To call a contact, say "Search Imported Phonebook" and select the name and number.

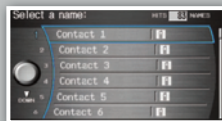

\*not available on all phones

## ACURALINK MESSAGES (Tech models)


Acura periodically sends you messages on vehicle features, recall and safety information, maintenance reminders, and diagnostic information.

### Viewing New Messages


1. When you receive a new message, an envelope icon appears on the map screen.



3. Say the number of the message you want to hear.

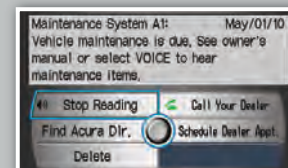

2. Say "Messages," and a list of messages appears.

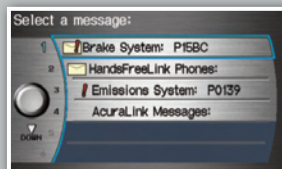


### Scheduling a Dealer Appointment


To use this feature, you must register at My Acura ([www.myacura.com](http://www.myacura.com)), and make sure your Bluetooth-compatible phone is paired and correctly set up (see [Pairing Your Phone](#)).

1. Using the Interface Dial, open a maintenance or product update message.
3. The system searches for the next available appointment at your dealer. Select "Confirm Appointment" if you are satisfied with the date.



*NOTE: If you are not satisfied with the available date, use the Call option to call your dealer directly.*

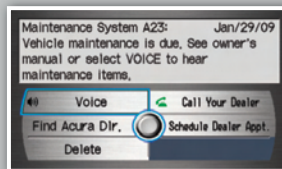

2. Select "Schedule Dealer Appt."

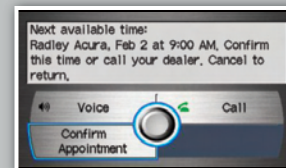

4. Select "OK" to set the appointment.

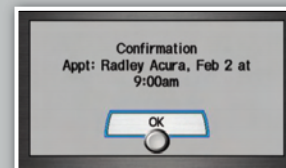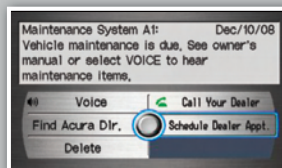



## BLUETOOTH® AUDIO

Play audio files from your compatible phone through your vehicle's audio system. Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) to check if this feature is available on your phone.

### Playing Bluetooth Audio Files

1. Make sure your phone is on and paired to Bluetooth® HandsFreeLink (see [page 22](#)).
2. Press CD/AUX or DISC/AUX repeatedly until "Bluetooth Audio" appears.
3. Press "play" on your phone; sound is redirected to the audio system. Make sure the volume on your phone is adjusted.



Tech model shown

### Skipping Bluetooth Audio Files

There are two ways to skip through audio files:

- Press (⏮) or (⏭) on the audio control panel.
- Press (+) or (-) on the remote audio controls.



 
Tech model shown

## iPod® or USB Flash Memory

Play audio files from your compatible iPod or USB flash memory device through your vehicle's audio system.

### Connecting and Playing Audio Files

1. Open the center console, and pull out the USB adapter cable.
2. Connect the USB connector to your iPod dock connector or flash drive.
3. Press CD/AUX or DISC/AUX to begin playing.



iPod is a registered trademark of Apple Computer, Inc., registered in the U.S. and other countries. iPod not included.

## Note Function\* (Tech models)


Store up to 30 ten-second recordings of songs and song information from XM Radio.

### Using the Note Function

1. To record a song sample, press and hold XM for about 2 seconds.
3. Turn the selector knob to select "NOTE," then press ENTER.



2. To replay stored information, press AUDIO, and then push the selector knob down.

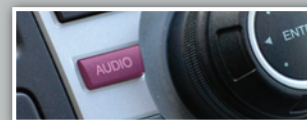


4. Turn the selector knob to select a sound file, then press ENTER. The selected recording plays.



\*An active XM® Radio subscription is required.

My Acura enhances your ownership experience by allowing you to explore features and technologies specific to your vehicle, schedule service appointments, obtain and update maintenance and service records, manage your financial services account, and access other useful information.

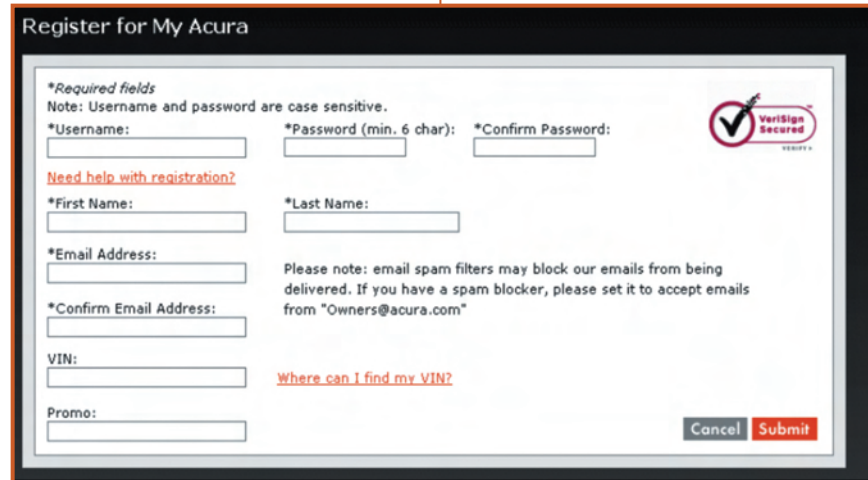

Your vehicle is equipped with airbags. Airbags do not replace seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

## FUEL REQUIREMENT

- ## NOTICE

Avoid driving with an extremely low fuel level. Running out of fuel could cause the engine to misfire, damaging the catalytic converter.