

# Handbook



PEUGEOT **5008**



# Service Box

<http://public.servicebox.peugeot.com>

**PEUGEOT's SERVICE BOX Internet site permits easy and free consultation of your vehicle documentation on line.**

Simple and user friendly, SERVICE BOX allows you access:

- to your Handbook,
- to previous Vehicle documentation.



**Your vehicle lives on the Internet!**

**Access the latest information available.**

**Connect to <http://public.servicebox.peugeot.com>:**

- select your language,
- click on the link in the "Private customer access" zone to consult the Vehicle documentation,

A window opens giving access to all of the handbooks...

- select your vehicle,
  - choose its body type then the date of publication of the handbook,
- finally, click on the item which is of interest to you.



## **Please note the following point:**

The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system. Please note this specific warning. It is advisable to contact a PEUGEOT dealer to be shown the recommended equipment and accessories.

Thank you for choosing a 5008, a symbol of confidence, passion and inspiration.

This handbook has been designed to enable you to make the most of your 5008.

On the first few pages, you will find a detailed summary, followed by a quick reference guide intended to make it easier for you to become familiar with your vehicle.

All of the details specific to your 5008, comfort, safety, driving, are then presented in this handbook, to increase your appreciation of the vehicle and to help you make the most of it

At the end of the handbook, illustrations of the interior and exterior of the vehicle will assist you in locating equipment or a function by means of the page indexed.

Each model may only be fitted with some of the equipment mentioned in this handbook, depending on the trim level, model, version and the specification for the country in which it is sold.



## Key



### Warning:

this symbol marks warnings which it is essential to observe for your own safety, for the safety of others or to avoid any risk of damaging your vehicle.



### Information:

this symbol draws your attention to additional information for better use of your vehicle.



### Protection of the environment:

this symbol accompanies advice relating to protection of the environment.



### Page reference:

this symbol invites you to refer to the pages which provide details of the function.

# CONTENTS

|          |                        |             |
|----------|------------------------|-------------|
| <b>1</b> | <b>FAMILIARISATION</b> | <b>4-24</b> |
|----------|------------------------|-------------|

|  |                    |              |
|--|--------------------|--------------|
|  | <b>ECO-DRIVING</b> | <b>25-26</b> |
|--|--------------------|--------------|

|          |                                     |              |
|----------|-------------------------------------|--------------|
| <b>1</b> | <b>INSTRUMENTS<br/>and CONTROLS</b> | <b>27-41</b> |
|----------|-------------------------------------|--------------|

|                                   |    |
|-----------------------------------|----|
| Instrument panels .....           | 27 |
| Indicator and warning lamps ..... | 29 |
| Indicators .....                  | 37 |
| Adjustment buttons .....          | 41 |

|          |                                  |              |
|----------|----------------------------------|--------------|
| <b>2</b> | <b>MULTIFUNCTION<br/>SCREENS</b> | <b>42-57</b> |
|----------|----------------------------------|--------------|

|  |    |
|--|----|
| Screen A without audio equipment .....   | 42 |
| Screen A with audio equipment .....  | 44 |
| Screen C<br>(Peugeot Connect Sound) .....  | 46 |
| 16/9 retractable colour screen<br>(Peugeot Connect Navigation<br>(RNEG)) .....     | 49 |
| 16/9 high definition retractable<br>colour screen<br>(Peugeot Connect Media) ..... | 51 |
| Trip computer .....  | 54 |

|          |                |              |
|----------|----------------|--------------|
| <b>3</b> | <b>COMFORT</b> | <b>58-75</b> |
|----------|----------------|--------------|

|  |    |
|--|----|
| Heating and Ventilation .....          | 58 |
| Manual air conditioning .....          | 60 |
| Rear screen demist/defrost .....       | 61 |
| Dual-zone digital air conditioning ... | 62 |
| Front seats .....                      | 65 |
| Rear seats, 2nd row .....              | 69 |
| Access to the 3rd row .....            | 71 |
| Rear seats, 3rd row .....              | 72 |
| Seat modularity .....                  | 73 |
| Mirrors .....                          | 74 |
| Steering wheel adjustment .....        | 75 |

|          |               |              |
|----------|---------------|--------------|
| <b>4</b> | <b>ACCESS</b> | <b>76-90</b> |
|----------|---------------|--------------|

|                          |    |
|--------------------------|----|
| Remote control key ..... | 76 |
| Alarm .....              | 81 |
| Electric windows .....   | 83 |
| Doors .....              | 85 |
| Boot .....               | 87 |
| Fuel tank .....          | 89 |
| Misfuel prevention ..... | 90 |

|          |                   |               |
|----------|-------------------|---------------|
| <b>5</b> | <b>VISIBILITY</b> | <b>91-101</b> |
|----------|-------------------|---------------|

|  |     |
|--|-----|
| Lighting controls .....                      | 91  |
| Automatic illumination<br>of headlamps ..... | 94  |
| Headlamp adjustment .....                    | 94  |
| Directional lighting .....                   | 95  |
| Wiper controls .....                         | 96  |
| Automatic rain sensitive wipers .....        | 98  |
| Courtesy lamps .....                         | 99  |
| Interior mood lighting .....                 | 100 |

|          |                 |                |
|----------|-----------------|----------------|
| <b>6</b> | <b>FITTINGS</b> | <b>102-115</b> |
|----------|-----------------|----------------|

|                                    |     |
|------------------------------------|-----|
| Interior fittings .....            | 102 |
| Centre console .....               | 104 |
| Rear multimedia .....              | 107 |
| Panoramic sunroof .....            | 108 |
| Boot fittings 5 seat version ..... | 109 |
| Boot fittings 7 seat version ..... | 110 |

|          |                         |                |
|----------|-------------------------|----------------|
| <b>7</b> | <b>CHILD<br/>SAFETY</b> | <b>116-127</b> |
|----------|-------------------------|----------------|

|                          |     |
|--------------------------|-----|
| Child seats .....        | 116 |
| ISOFIX child seats ..... | 123 |
| Child lock .....         | 127 |

|          |               |                |
|----------|---------------|----------------|
| <b>8</b> | <b>SAFETY</b> | <b>128-139</b> |
|----------|---------------|----------------|

|                                      |     |
|--------------------------------------|-----|
| Direction indicators .....           | 128 |
| Hazard warning lamps .....           | 128 |
| Horn .....                           | 128 |
| Tyre under-inflation detection ..... | 129 |
| ESC system .....                     | 130 |
| Front seat belts .....               | 132 |
| Airbags .....                        | 136 |



## 9 DRIVING 140-170

|  |     |
|--|-----|
| Electric parking brake.....                      | 140 |
| Hill start assist.....                           | 145 |
| Head-up display .....                            | 148 |
| Distance alert .....                             | 150 |
| Speed limiter .....                              | 152 |
| Cruise control .....                             | 154 |
| Manual gearbox.....                              | 156 |
| Gear efficiency indicator.....                   | 156 |
| 6-speed electronic gear control<br>gearbox ..... | 157 |
| Automatic gearbox .....                          | 161 |
| Stop & Start.....                                | 164 |
| Parking sensors.....                             | 167 |
| Parking space sensors .....                      | 169 |

## 10 CHECKS 171-178

|                                   |     |
|-----------------------------------|-----|
| Bonnet.....                       | 172 |
| Running out of fuel (Diesel)..... | 173 |
| Petrol engines .....              | 174 |
| Diesel engines.....               | 175 |
| Checking levels .....             | 176 |
| Checks.....                       | 177 |

## 11 PRACTICAL INFORMATION 179-213

|                                     |     |
|-------------------------------------|-----|
| Temporary puncture repair kit ..... | 179 |
| Changing a wheel.....               | 188 |
| Changing a bulb .....               | 194 |
| Changing a fuse .....               | 199 |
| 12 V Battery.....                   | 206 |
| Energy economy mode .....           | 208 |
| Changing a wiper blade .....        | 208 |
| Towing the vehicle .....            | 209 |
| Towing a trailer .....              | 210 |
| Fitting roof bars .....             | 211 |
| Very cold climate screen .....      | 212 |
| Accessories .....                   | 213 |

## 12 TECHNICAL DATA 214-222

|                              |     |
|------------------------------|-----|
| Petrol engines .....         | 214 |
| Petrol weights.....          | 215 |
| Diesel engines .....         | 216 |
| Diesel weights .....         | 217 |
| Dimensions.....              | 221 |
| Identification markings..... | 222 |

## AUDIO EQUIPMENT and TELEMATICS 223-324

|   |     |
|---|-----|
| Emergency or assistance.....              | 223 |
| Peugeot Connect Media.....                | 227 |
| Peugeot Connect Navigation<br>(RNEG)..... | 271 |
| Peugeot Connect Sound (RD5) ...           | 303 |

## ALPHABETICAL INDEX 325-329

## VISUAL SEARCH 330-334

## EXTERIOR

**Stop & Start**

This system puts the engine temporarily into standby during stops in the traffic (red lights, traffic jams, etc...). The engine restarts automatically as soon as you want to move off. The Stop & Start system reduces fuel consumption and exhaust emissions and provides the comfort of complete silence when stationary

**Panoramic sunroof**

This roof provides incomparable visibility and light in the passenger compartment.

**Welcome lighting**

This additional exterior and interior lighting, controlled remotely, makes your approach to the vehicle easier when the light is poor.

**Directional lighting**

This lighting automatically provides additional visibility when cornering.



## EXTERIOR


### Parking space sensor

This system measures the size of the parking space available between two vehicles or obstacles.



When washing your vehicle in a car wash:

- remove the aerial,
- fold back the mirrors.

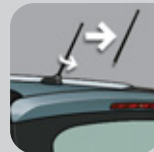

### Temporary puncture repair kit

This kit is a complete system, consisting of a compressor and an integrated sealant product, for the temporary repair of a tyre.



### Visual and audible front and/or rear parking sensors

This system warns you if an obstacle is detected behind or in front of the vehicle in reverse or forward gear.



## OPENING

### Remote control key



#### A. Unfolding/Folding the key.



Normal locking  
(press once; fixed lighting of the direction indicators).

or



Deadlocking the vehicle  
(press twice in succession; fixed lighting of the direction indicators).



Complete or selective unlocking of the vehicle  
(rapid flashing of the direction indicators).



### Welcome lighting




When the light is poor, detected by a sensor, the remote switching on of the dipped beam headlamps and sidelamps makes your approach to the vehicle easier.

This function can be programmed via the configuration menu.



### Fuel tank

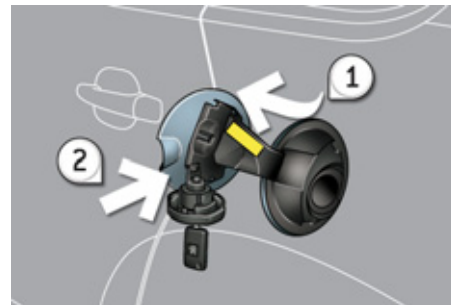

1. Opening the fuel filler flap.
2. Opening and hooking the fuel filler cap.

The type of fuel to be used is indicated on the inner face of the fuel filler flap.


Capacity of the tank: approximately 60 litres.



On Diesel vehicles, the fuel filler neck incorporates a mis-fuel prevention device which prevents filling with petrol.

## OPENING


### Boot

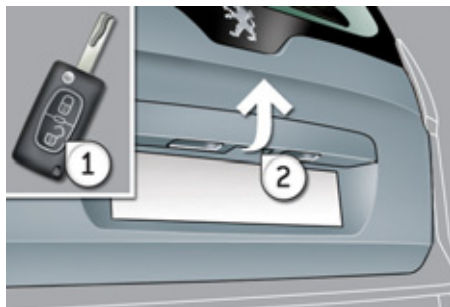

1. Unlocking the vehicle.
2. Opening the boot.



### Panoramic sunroof

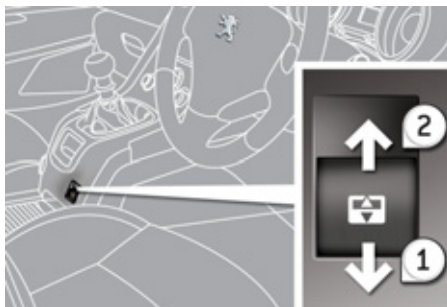

1. Opening the blind.



2. Closing the blind.



## INTERIOR


**Head-up display**

This system projects certain information into the field of vision of the driver: speed, cruise control/speed limiter and Distance alert.

**Electric parking brake**

This combines the functions of **automatic application** on switching off the engine and **automatic release** on acceleration.

Manual application/release is possible.

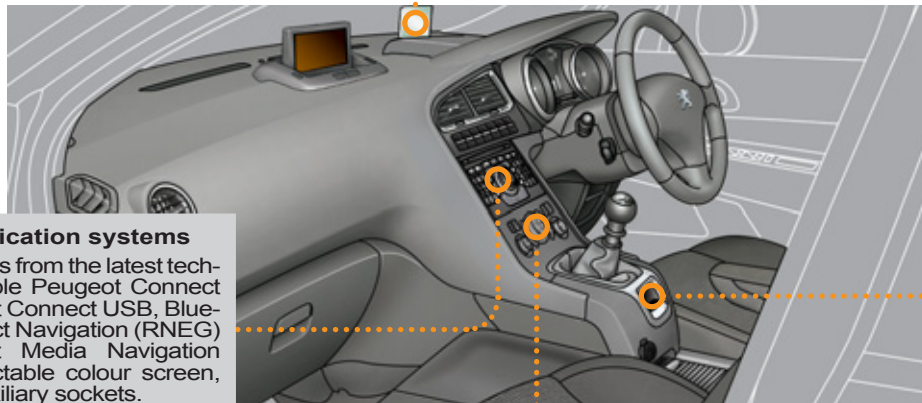**Audio and communication systems**

This equipment benefits from the latest technology: MP3 compatible Peugeot Connect Sound (RD5), Peugeot Connect USB, Bluetooth, Peugeot Connect Navigation (RNEG) or Peugeot Connect Media Navigation (RT6) with 16/9 retractable colour screen, JBL audio system, auxiliary sockets.

Peugeot Connect  
Media Navigation (RT6)



Peugeot Connect USB



Peugeot Connect  
Navigation (RNEG)



Bluetooth



Peugeot Connect Sound (RD5)



PEUGEOT  
Assistance


**Dual-zone digital air conditioning**

This system allows different levels of comfort to be set for the driver and front passenger. It then controls these levels automatically according to the ambient conditions.






## INSTRUMENTS AND CONTROLS

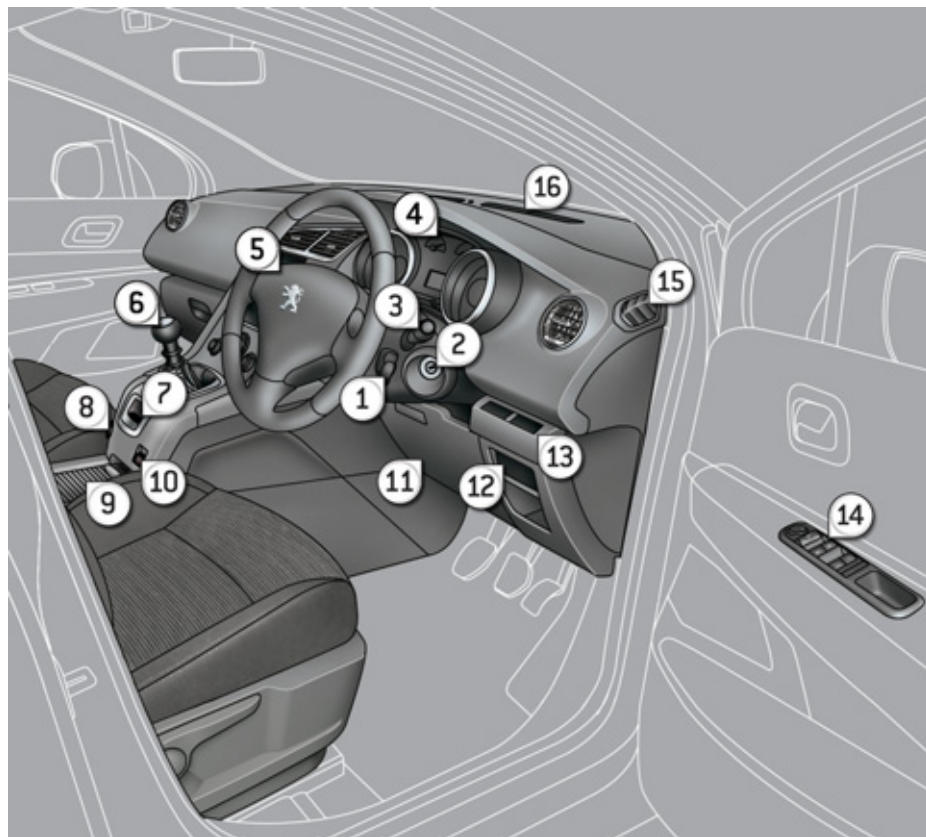

1. Audio and telematics system steering mounted control stalk.
2. Steering lock and ignition.
3. Wipers/screenwash/trip computer control stalk.
4. Instrument panel.
5. Driver's airbag.  
Horn.
6. Gear lever.
7. Electric parking brake.
8. 12 V accessory socket.
9. Centre console.
10. Panoramic sunroof control.
11. Handbook storage compartment.
12. Manual headlamp adjustment.  
Instrument panel navigator associated with the Peugeot Connect Media Navigation (RT6).
13. Alarm switch.  
Parking sensors switch.  
Dynamic stability control switch (ESP/ASR).  
Stop & Start deactivation switch.
14. Door mirror controls.  
Electric window controls.  
Child lock.
15. Front door window demist/defrost vent.
16. Windscreen demist/defrost vent.

## INSTRUMENTS AND CONTROLS

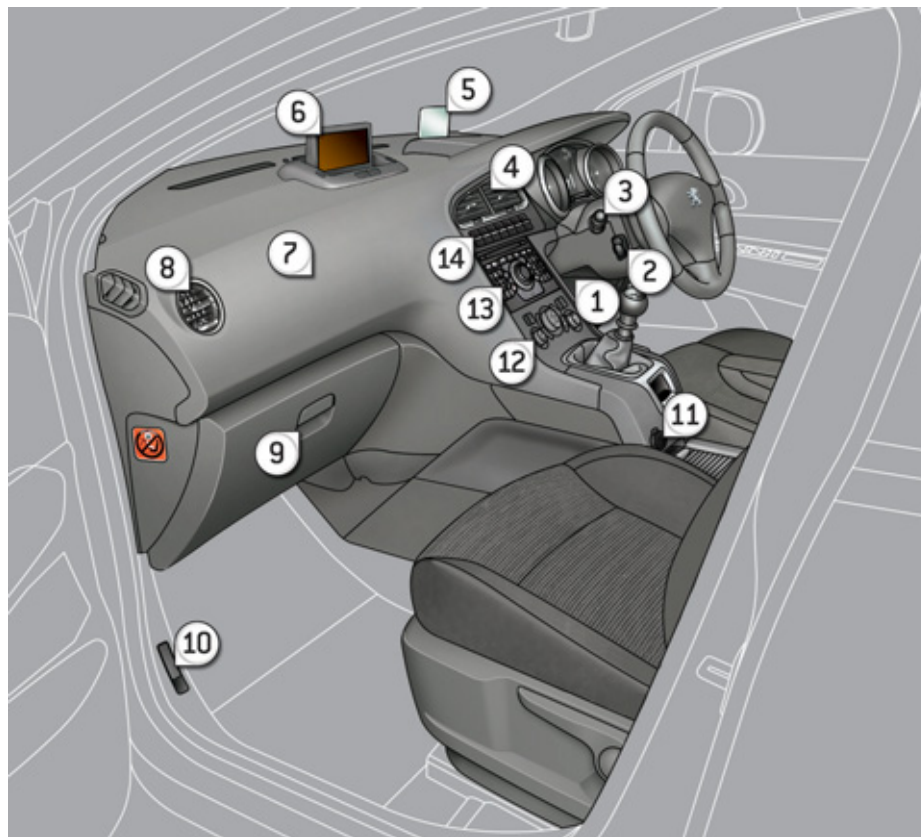

1. Steering wheel adjustment.
2. Cruise control/speed limiter switches.
3. Lighting and direction indicator control stalk.
4. Central adjustable air vents.
5. Head-up display.
6. Multifunction screen.
7. Passenger's airbag.
8. Side adjustable air vent.
9. Glove box - Audio/video sockets - Passenger's airbag deactivation.
10. Bonnet release.
11. 12 V accessory socket.
12. Heating/air conditioning controls.
13. Audio and telematics system.
14. Switches:
  - head-up display,
  - hazard warning lamps,
  - Distance alert,
  - central locking.

## SITTING COMFORTABLY

### Driver's seat

#### Forwards-backwards




#### Height



#### Seat back angle



#### Manual adjustment

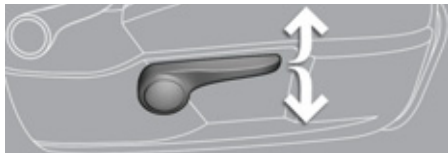

#### Electric adjustment







# SITTING COMFORTABLY

## Front seats

### Head restraint height and angle

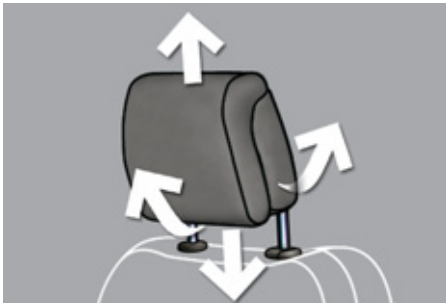


### Lumbar

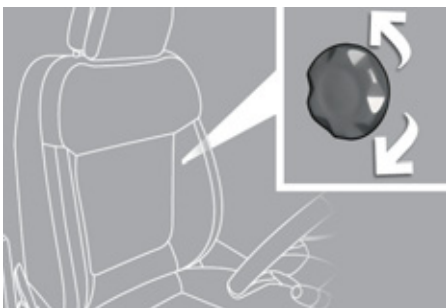

67

## Steering wheel adjustment

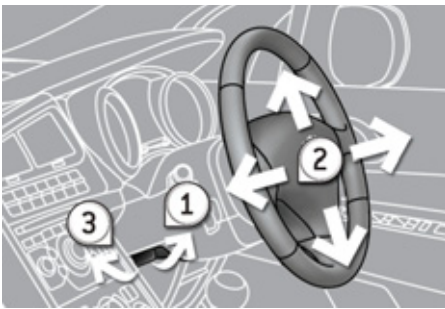


1. Releasing the adjustment mechanism.
2. Adjustment of height and reach.
3. Locking the adjustment mechanism.

As a safety precaution, these operations must only be carried out when stationary.



75

## Centre console

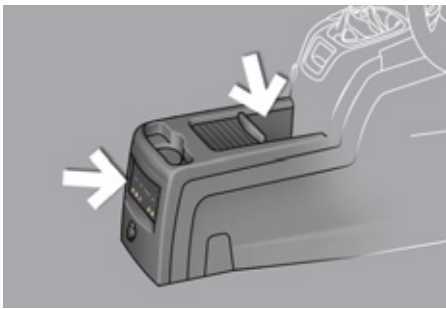


This has a large storage area (with recesses for 2 bottles, ...) for the front passengers and, according to version, a multimedia system for the rear passengers.



104,  
107

## SITTING COMFORTABLY

### Door mirrors

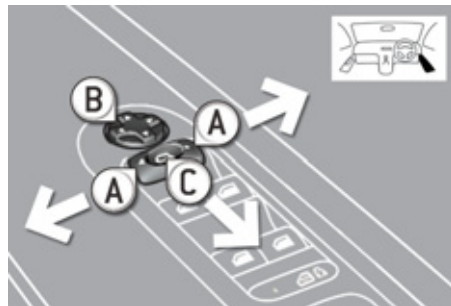

#### Adjustment


- A. Selection of the mirror to be adjusted.
- B. Adjustment of the position of the mirror in the four directions.



Also...


- C. Folding/  
Unfolding.

### Rear view mirror

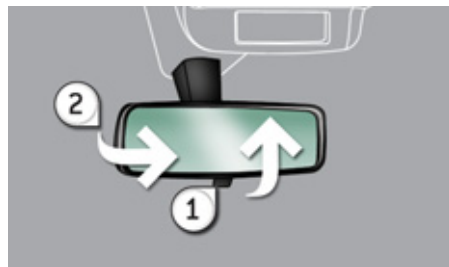

#### Manual model

- 1. Selection of the "day" position of the mirror.
- 2. Adjustment of the mirror.

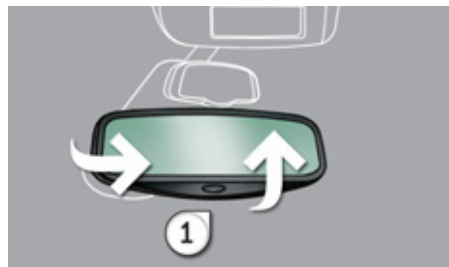

#### Automatic day/night model


- 1. Adjustment of the mirror.



### Front seat belts



- 1. Fastening the buckle.

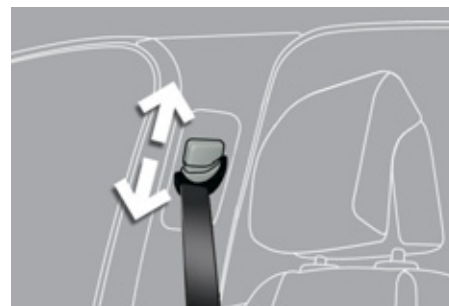


- 2. Height adjustment.





SEEING CLEARLY

Lighting

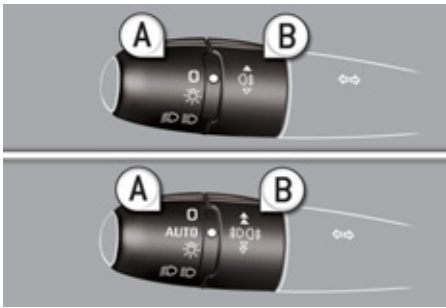

Ring A

- Lighting off.
- AUTO** Automatic illumination of headlamps.
- Sidelamps.
- Dipped/main beam headlamps.




Ring B

- Rear foglamp.
- or
- Front and rear foglamps.



Direction indicators

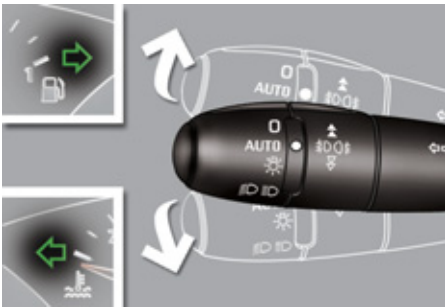

Raise or lower the lighting stalk passing the point of resistance; the corresponding direction indicators will flash for as long as the stalk remains in this position.


"Motorway" function

Press the lighting stalk up or down once, without passing the point of resistance; the corresponding direction indicators will flash three times.

This function can be used at any speed, but it is particularly useful when changing lane on high-speed roads.



Wipers

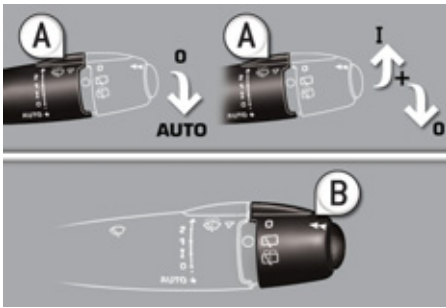

Stalk A: windscreen wipers

Switching on "AUTO"

Press the stalk down and release it.

Switching off "AUTO"

Push the stalk up and return it to position "0".



Ring B: rear wiper

- Park.
- Intermittent wipe.
- Wash-wipe.







## VENTILATION


### Recommended interior settings

| I require...            | Heating or Manual Air Conditioning |          |   |             |            |
|-------------------------|------------------------------------|----------|---|-------------|------------|
|                         | Air distribution                   | Air flow | Air recirculation/<br>Intake of outside air | Temperature | Manual A/C |
| HOT                     |                                    |          |   |             | —          |
| COLD                    |                                    |          |   |             | ON         |
| DEMISTING<br>DEFROSTING |                                    |          |   |             | ON         |

**Digital air conditioning:** we recommend use of the fully automatic mode by pressing the "AUTO" button.

## MONITORING

## Instrument panel

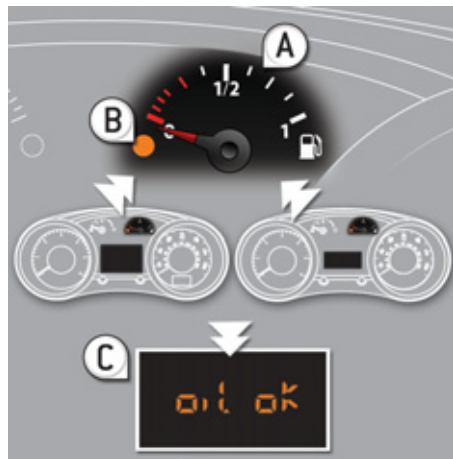

- A. With the ignition on, the needle should indicate the level of fuel remaining.
  - B. With the engine running, its associated low level warning lamp should go off.
  - C. With the ignition on, the oil level indicator should display "OIL OK" for a few seconds.
- If the levels are not correct, top up the levels which are low.



## Warning lamps



1. With the ignition on, the orange and red warning lamps come on.
  2. With the engine running, these warning lamps should go off.
- If warning lamps remain on, refer to the page concerned.



## Switch panels

## Lower



Lighting of the indicator lamp indicates the status of the corresponding function.

- |  |  |     |
|--|--|-----|
| A. Parking space sensors.              |  | 169 |
| B. Deactivation of Stop & Start.       |  | 165 |
| C. Volumetric alarm.                   |  | 81  |
| D. Visual and audible parking sensors. |  | 167 |
| E. ESP OFF.                            |  | 131 |
| F. Child lock.                         |  | 127 |

## Central



- |                          |  |     |
|--------------------------|--|-----|
| G. Head-up display.      |  | 148 |
| H. Hazard warning lamps. |  | 128 |
| I. Distance alert.       |  | 150 |
| J. Central locking.      |  | 86  |

## PASSENGER SAFETY


### Passenger's front airbag



1. Insert the key.
2. Select the position:  
**"OFF"** (deactivation), with "rear facing" child seat,  
**"ON"** (activation), with front passenger or "forwards facing" child seat.
3. Remove the key keeping the switch in the new position.



### Seat belts and passenger's front airbag

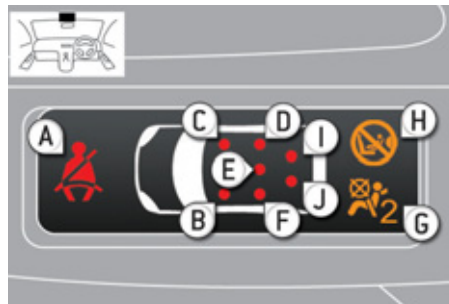


- A. Front and/or rear seat belts not fastened/unfastened warning lamp.
- B. Front left seat belt warning lamp.
- C. Front right seat belt warning lamp.
- D. Rear right seat belt warning lamp.
- E. Rear centre seat belt warning lamp.
- F. Rear left seat belt warning lamp.
- G. Passenger's front airbag deactivated warning lamp.
- H. Passenger's front airbag activated warning lamp.



#### 7 seat version (3rd row)

- I. Rear right seat belt warning lamp.
- J. Rear left seat belt warning lamp.

### Child lock (locking of the rear doors)

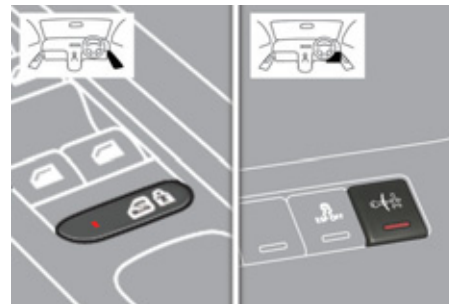


Lighting of the indicator lamp indicates the status of the corresponding function.



## ARRANGING YOUR SEATS

### Folding the seats in the 2nd row

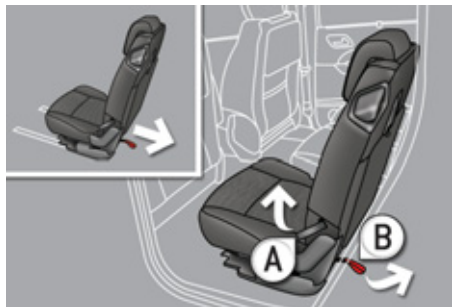

- ☞ Pull the strap **A** upwards firmly to release the seat and continue to pull until the seat is fully folded.

#### From the boot

- ☞ Pull the strap **B** to release the seat and push the seat back forwards gently.




### Putting the seats back in place



- ☞ Raise the seat back and push it rearwards until it locks.

#### Rigid panel

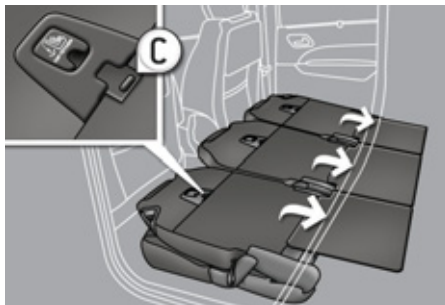


- ☞ After folding the seats, slide the catch **C**.



## 7 SEAT VERSION

### Access to the 3rd row seats


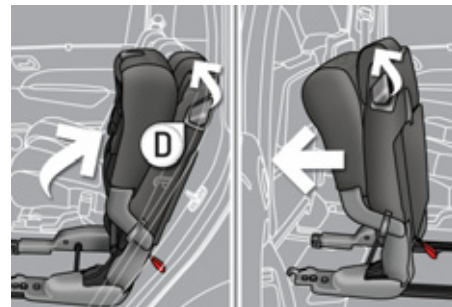


- ☞ Close the aircraft style tables on the 2nd row seats if they are open.
- ☞ Hold the control **D** up, the seat is released and the seat base rises to the seat back.
- ☞ Push the seat back forwards, holding the control **D** forwards.




## ARRANGING YOUR SEATS (7 SEAT VERSION)

### Changing from 5 to 7 seats

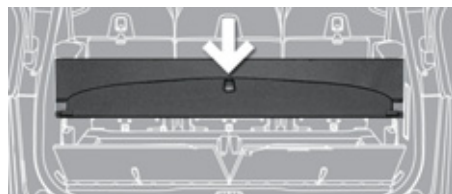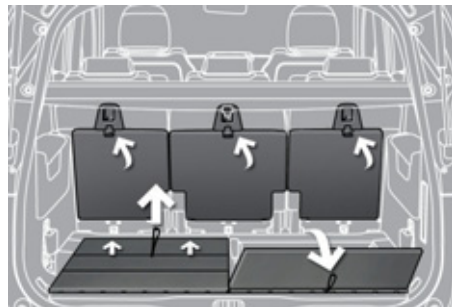

- ☞ Place the rigid panels of the 2nd row seats upright and lock them then fold the concertina boards rearwards.
- ☞ Remove the load space cover and store it in its housing.

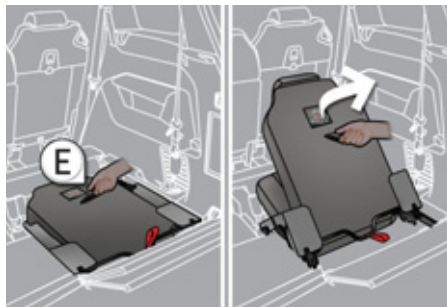


- ☞ Pull the strap **E** and guide the seat until the assembly locks.
- ☞ Fold the concertina boards forwards.



72,  
111

### Changing from 7 to 5 seats

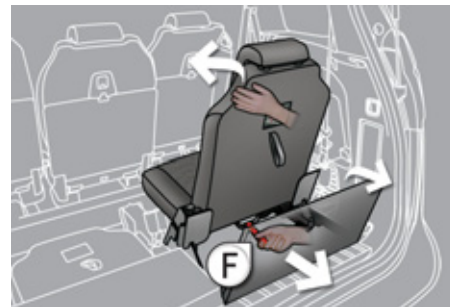

- ☞ Lower the head restraints and place the concertina board in the vertical position behind the seat.
- ☞ While pulling the strap **F**, push the seat back forwards gently.
- ☞ Remove the load space screen from its storage compartment and position it behind the 2nd row seats.



72,  
111

## DRIVING SAFELY

### Stop & Start

#### Going into engine STOP mode

**ECO** The "ECO" warning lamp comes on in the instrument panel and the engine automatically goes into standby, **with a 6-speed electronic gear control gearbox**: at speeds below 5 mph (8 km/h), press the brake pedal or put the gear lever in position **N**.


In some circumstances, STOP mode may not be available; the "ECO" warning lamp flashes for few seconds, then goes off.

#### Going into engine START mode

**ECO** The "ECO" warning lamp goes off and the engine restarts **with a 6-speed electronic gear control gearbox**:

- gear lever in position **A** or **M**, release the brake pedal,
- or with the gear lever in position **N** and the brake pedal released, move the gear lever to position **A** or **M**,
- or engage reverse gear.

In some circumstances START mode may be invoked automatically; the "ECO" warning lamp flashes for a few seconds, then goes off.

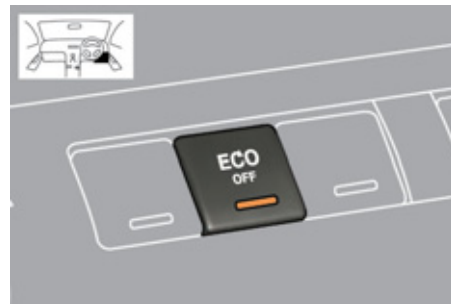

#### Deactivation/Reactivation

You can deactivate the system at any time by pressing the "ECO OFF" button; the warning lamp in the button comes on.



The system is reactivated automatically at every new start using the key.



Before refuelling or doing anything under the bonnet, you must switch off the ignition using the key.





## DRIVING SAFELY

### Electric parking brake



#### Manual application/release

The parking brake can be **applied manually** by **pulling** the control lever **A**.

When the ignition is on, the parking brake can be **released** manually by **pressing the brake pedal** and **pulling** then **releasing** the control lever **A**.



#### Automatic application/release

Press the accelerator, press and and release the clutch (manual gearbox), the parking brake is released automatically and progressively on acceleration.

With the vehicle stationary, when the **engine is switched off**, the parking brake is **applied** automatically.



If this warning lamp is on in the instrument panel, the automatic application/release is **de-activated**, in this case use the manual application/release.



When the door is opened with the engine running an audible signal is heard, apply the parking brake manually.

Do not leave a child alone in the vehicle with the ignition on, they could release the parking brake.



Before getting out of the vehicle, check that the braking warning lamp (**red!**) and the warning lamp **P**, located in the control lever **A** are on fixed (not flashing).




If you are towing a trailer or a caravan or if the gradient is likely to change (transport by ship, lorry, towing, ...), apply the parking brake manually to maximum force (long pull on control lever **A**) to immobilise the vehicle.



## DRIVING SAFELY

### Hill start assist

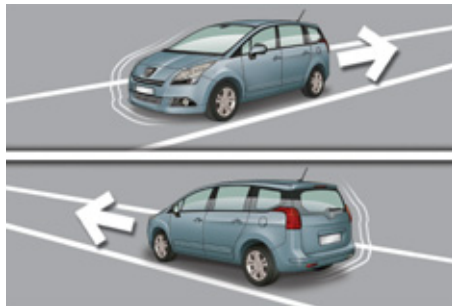

Your vehicle is equipped with a system which keeps it immobile for a short time (approximately 2 seconds) to assist you when starting on a hill, the time required for you to move your foot from the brake pedal to the accelerator pedal.

This system only operates:

- when the vehicle has been completely stopped with your foot on the brake pedal,
- on certain gradients,
- when the driver's door is closed.




Do not get out of the vehicle during the hill start assist temporary holding phase.



145


### Head-up display

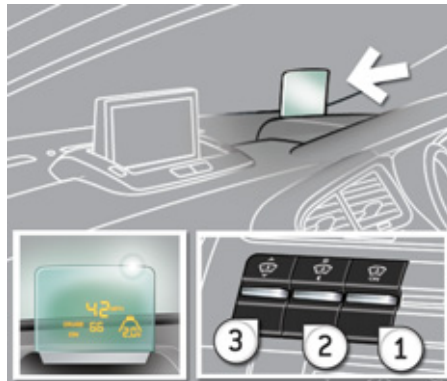


1. Head-up display on/off.
2. Brightness adjustment.
3. Display height adjustment.



148

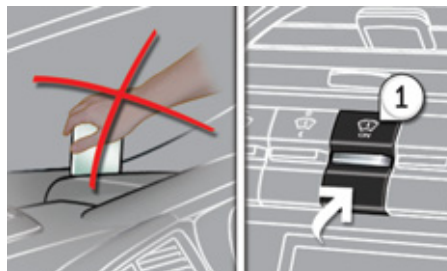

### Distance alert

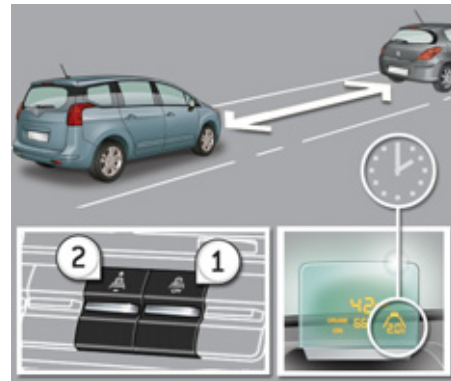

1. Distance alert on/off.
2. Alert value increase/decrease.




150



The adjustments must be made with the engine running and the vehicle stationary.

## DRIVING SAFELY

### Speed limiter "LIMIT"

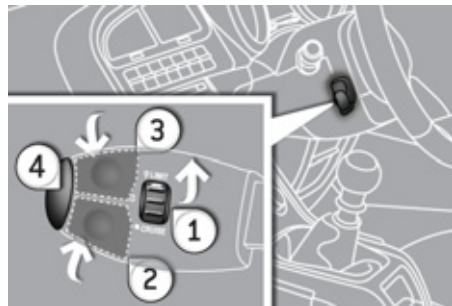

1. Limiter mode Selection/Off.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Speed limiter On/Off.




The values must be set with the engine running.



152

### Cruise control "CRUISE"

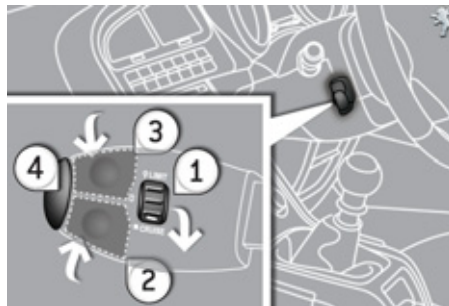

1. Cruise control mode Selection/Off.
2. Programme a speed/Decrease the programmed value.
3. Programme a speed/Increase the programmed value.
4. Cruise control Off/Resume.




In order to be programmed or activated, the vehicle speed must be higher than 25 mph (40 km/h), with at least fourth gear engaged on the manual gearbox (second gear for the 6-speed electronic gear control gearbox or automatic gearbox).



154

### Display in the instrument panel

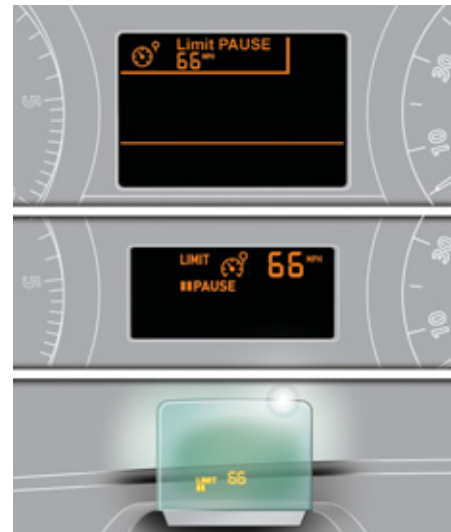

The cruise control or speed limiter mode appears on the instrument panel when it is selected.



**Cruise control**




**Speed limiter**


## DRIVING SAFELY

### 6-speed electronic gear control gearbox

This 6-speed electronic gear control gearbox offers a choice between the comfort of fully automatic operation or the pleasure of manual gear changing.

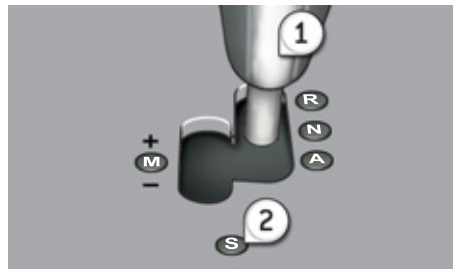

1. Gear lever.
2. Button "S" (sport).

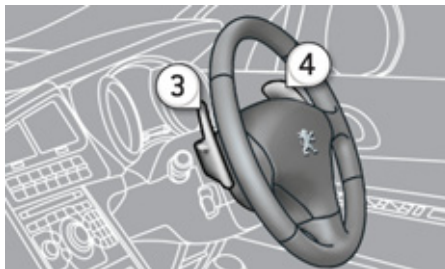


3. Steering mounted "-" paddle.
4. Steering mounted "+" paddle.

#### Moving off

- ☞ Select position **N** and press the brake pedal firmly while starting the engine.
- ☞ Engage first gear (position **A** or **M**) or reverse (position **R**) using the gear lever 1.
- ☞ Take your foot off the brake pedal then accelerate.

### "Porsche Tiptronic System" automatic gearbox

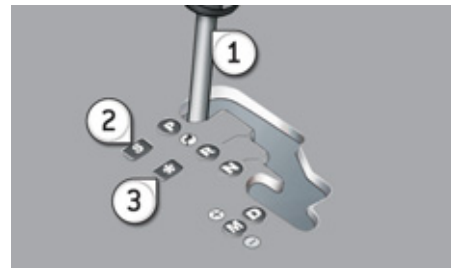

This six-speed gearbox offers a choice between the comfort of fully automatic operation or the pleasure of manual gear changing.

1. Gear lever.
2. Button "S" (sport).
3. Button "\*" (snow).

#### Moving off

- ☞ Select position **P** or **N** and press the brake pedal firmly while starting the engine.
- ☞ Select position **R**, **D** or **M**.
- ☞ Take your foot off the brake pedal, then accelerate.

## ECO-DRIVING

Eco-driving is a range of everyday practices that allow the motorist to optimise their fuel consumption and CO<sub>2</sub> emissions.

### Optimise the use of your gearbox

With a manual gearbox, move off gently, change up without waiting and drive by changing up quite soon. If your vehicle has the system, the gear efficiency indicator invites you to change up; it is displayed in the instrument panel, follow its instructions.

With an automatic or electronic gearbox, stay in Drive "**D**" or Auto "**A**", according to the type of gearbox, without pressing the accelerator pedal heavily or suddenly.

### Drive smoothly

Maintain a safe distance between vehicles, use engine braking rather than the brake pedal, and press the accelerator progressively. These practices contribute towards a reduction in fuel consumption and CO<sub>2</sub> emissions and also helps reduce the background traffic noise.

If your vehicle has cruise control, make use of the system at speeds above 25 mph (40 km/h) when the traffic is flowing well.

### Control the use of your electrical equipment

Before moving off, if the passenger compartment is too warm, ventilate it by opening the windows and air vents before using the air conditioning.

Above 30 mph (50 km/h), close the windows and leave the air vents open.

Remember to make use of equipment that can help keep the temperature in the passenger compartment down (sun roof and window blinds...).

Switch off the air conditioning, unless it has automatic digital regulation, as soon as the desired temperature is attained.

Switch off the demisting and defrosting controls, if not automatic.

Switch off the heated seat as soon as possible.

Switch off the headlamps and front foglamps when the level of light does not require their use.

Avoid running the engine before moving off, particularly in winter; your vehicle will warm up much faster while driving.

As a passenger, if you avoid connecting your multimedia devices (film, music, video game...), you will contribute towards limiting the consumption of electrical energy, and so of fuel.

Disconnect your portable devices before leaving the vehicle.

### **Limit the causes of excess consumption**

Spread loads throughout the vehicle; place the heaviest items in the bottom of the boot, as close as possible to the rear seats.

Limit the loads carried in the vehicle and reduce wind resistance (roof bars, roof rack, bicycle carrier, trailer...). Use a roof box in preference.

Remove roof bars and roof racks after use.

At the end of winter, remove snow tyres and refit your summer tyres.

### **Observe the recommendations on maintenance**

Check the tyre pressures regularly, when cold, referring to the label in the door aperture, driver's side.

Carry out this check in particular:

- before a long journey,
- at each change of season,
- after a long period out of use.

Don't forget the spare wheel and the tyres on any trailer or caravan.

Have your vehicle serviced regularly (engine oil, oil filter, air filter...) and observe the schedule of operations recommended by the manufacturer.

When refuelling, do not continue after the 3rd cut-off of the nozzle to avoid any overflow.

At the wheel of your new vehicle, it is only after the first 1 800 miles (3 000 kilometres) that you will see the fuel consumption settle down to a consistent average.



## INSTRUMENT PANELS



Panel grouping together the vehicle operation indication dials and warning lamps.



## Dials

- 1. Rev counter.**  
Indicates the engine speed (x 1 000 rpm).
- 2. Coolant temperature.**  
Indicates the temperature of the engine coolant (° Celsius).
- 3. Fuel level.**  
Indicates the quantity of fuel remaining in the tank.
- 4. Speedometer.**  
Indicates the current speed of the moving vehicle (mph or km/h).
- 5. Screen.**
- 6. Display zero reset or service indicator re-display button.**  
Resets the selected function to zero (trip distance recorder or service indicator) or displays the service indicator again.
- 7. Instrument panel lighting dimmer.**  
Adjusts the brightness of the lighting of the instruments and controls, if the vehicle lighting is on.



For more information, refer to the paragraph relating to the button or function and its associated display.

## Screen(s)

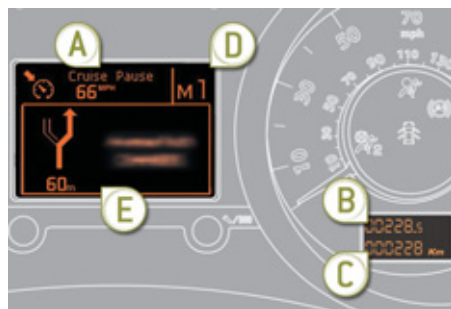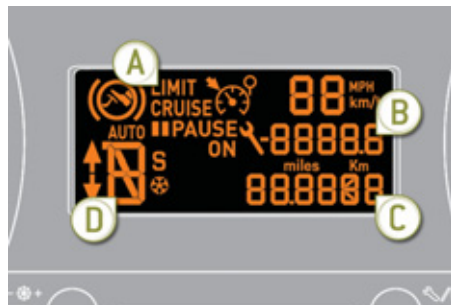

- A. Speed limiter**  
or  
**Cruise control.**  
(mph or km/h)
- B. Trip distance recorder.**  
(miles or km)

**C. Service indicator.**


(miles or km) or,

**Engine oil level indicator.**

or


**distance recorder.**

(miles or km)

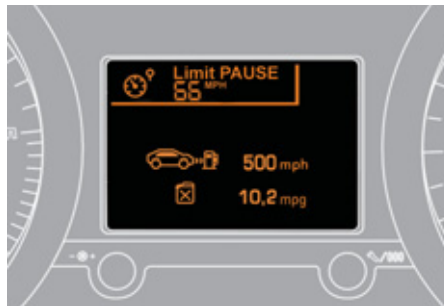**D. 6-speed electronic gear control or automatic gearbox.****E. Warning messages and function status messages, trip computer, GPS navigation information, menus (with Peugeot Connect Media).****Instrument panel navigator associated with the Peugeot Connect Media**

This group of buttons permits:

- **when stationary**, configuration of the vehicle's equipment and the screen settings (languages, units...),
- **while driving**, scrolling of the active functions (trip computer, navigation...).

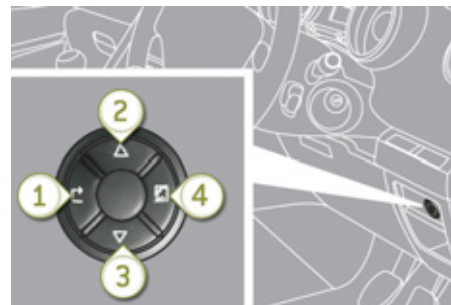**Controls**

There are four buttons to control the large 16/9 screen in the instrument panel:

1. access the main menu, confirm the selection,
2. move up through the menu,
3. move down through the menu,
4. return to the previous display, exit from the menu.



The main menu and its associated functions can only be accessed when stationary, via buttons **1** to **4**.


A message appears on the screen, above a certain speed threshold, indicating that the main menu cannot be displayed.

The trip computer displays can only be accessed while driving, via buttons **2** and **3** (refer to the "Trip computer" paragraph).

### Main menu

- ☞ Press button **1** for access to the main menu and select one of the following functions:
  - "Vehicle parameters",
  - "Choice of language",
  - "Choice of units".
- ☞ Press button **2** or **3** to move in the screen.
- ☞ Press button **1** again to confirm the selection.

### Vehicle parameters

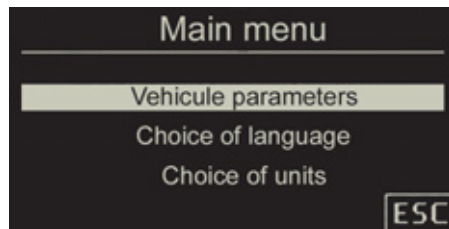

This menu allows you to activate or deactivate certain driving and comfort equipment (according to country):

- wiper linked with reverse gear (refer to the "Visibility" section),
- selective unlocking (refer to the "Access" section),
- guide-me-home and welcome lighting (refer to the "Visibility" section),
- interior mood lighting (refer to the "Visibility" section),
- daytime running lamps (refer to the "Visibility" section),
- directional headlamps (refer to the "Visibility" section),
- automatic or manual parking brake (refer to the "Driving" section).

### Choice of language

This menu allows you to select the display language: Deutsch, English, Español, Français, Italiano, Nederlands, Portugues, Türkçe\*.

### Choice of units

This menu allows you to select the units: temperature (°Celsius or °Fahrenheit) and fuel consumption (l/100 km, mpg or km/l).

### Indicator and warning lamps

Visual indicators informing the driver that a system is in operation (operation or deactivation indicator lamps) or of the occurrence of a fault (warning lamp).

### When the ignition is switched on

Certain warning lamps come on for a few seconds when the vehicle's ignition is switched on.

When the engine is started, these same warning lamps should go off.

If they remain on, before moving off, refer to the information on the warning lamp concerned.

### Associated warnings

The illumination of certain warning lamps may be accompanied by an audible signal and a message in the multifunction screen.












The warning lamps may come on continuously (fixed) or flash.





Certain warning lamps may come on in two different modes. Only by relating the type of illumination to the operating status of the vehicle can it be ascertained whether the situation is normal or whether a fault has occurred.

\* According to country.

## Operation indicator lamps



If one of the following indicator lamps comes on, this confirms that the corresponding system has come into operation.

| Warning lamp  |                                       | is on                 | Cause  | Action/Observations  |
|---|---------------------------------------|-----------------------|--|--|
|  | <b>Left-hand direction indicator</b>  | flashing with buzzer. | The lighting stalk is pushed down.                             |  |
|  | <b>Right-hand direction indicator</b> | flashing with buzzer. | The lighting stalk is pushed up.                               |  |
|  | <b>Sidelamps</b>                      | fixed.                | The lighting stalk is in the "Sidelamps" position.             |  |
|  | <b>Dipped beam headlamps</b>          | fixed.                | The lighting stalk is in the "Dipped beam headlamps" position. |  |
|  | <b>Main beam headlamps</b>            | fixed.                | The lighting stalk is pulled towards you.                      | Pull the stalk to return to dipped beam headlamps.   |
|  | <b>Front foglamps</b>                 | fixed.                | The front foglamps are switched on.                            | Turn the ring on the stalk rearwards twice to switch off the front foglamps.   |
|  | <b>Rear foglamps</b>                  | fixed.                | The rear foglamps are switched on.                             | Turn the ring on the stalk rearwards to switch off the rear foglamps.  |
|  | <b>Diesel engine pre-heating</b>      | fixed.                | The ignition switch is at the 2nd position (ignition on).      | Wait until the warning lamp has switched off before starting.<br>The duration for which the warning lamp is on is determined by the climatic conditions.   |
|  | <b>Electric parking brake</b>         | fixed.                | The electric parking brake is applied.                         | Release the electric parking brake to switch off the warning lamp: with your foot on the brake pedal, pull the electric brake control.<br>Observe the safety recommendations.<br>For more information on the electric parking brake, refer to the "Driving" section. |

| Warning lamp  |  | is on                                     | Cause  | Action/Observations  |
|---|--|---|--|--|
|  | <b>Deactivation of the automatic functions of the electric parking brake</b> | fixed.                                    | The "automatic application" (on switching off the engine) and "automatic release" functions are deactivated or faulty.                             | Activate the function (according to country) via the vehicle configuration menu or contact a PEUGEOT dealer or a qualified workshop.   |
|   |  |   |  |  |
|  | <b>Foot on the brake pedal</b>   | fixed.                                    | The brake pedal must be pressed.   | Press the brake pedal to start the engine with the 6-speed electronic gear control gearbox (lever in position <b>N</b> ) or automatic gearbox (lever in position <b>P</b> ).<br>If you wish to release the parking brake without pressing the brake pedal, this warning lamp will remain on. |
|   |  | flashing.                                 | In the case of an electronic gear control gearbox, if you hold the vehicle on an incline using the accelerator for too long, the clutch overheats. | Use the brake pedal and/or the electric parking brake.   |
|  | <b>Parking space sensors</b>   | fixed.                                    | The parking space sensors function is active.  | Press the corresponding button to deactivate it.   |
|   |  | flashing.                                 | The system is measuring the space.   | Once the measurement has been done, the warning lamp comes on fixed again.   |
|  | <b>Stop &amp; Start</b>  | fixed.                                    | When the vehicle stops (red lights, traffic jams, ...) the Stop & Start system has put the engine into STOP mode.                                  | The warning lamp goes off and the engine restarts automatically in START mode, as soon as you want to move off.  |
|   |  | flashes for a few seconds, then goes off. | STOP mode is temporarily unavailable.<br>or<br>START mode is invoked automatically.  | Refer to "Driving - § Stop & Start" for special cases with STOP mode and START mode.   |

### Deactivation indicator lamps

If one of the following indicator lamps comes on, this confirms that the corresponding system has been switched off intentionally. This may be accompanied by an audible signal and a message on the multifunction screen.



| Warning lamp  |                                  | is on  | Cause   | Action/Observations   |
|---|----------------------------------|--------|---|---|
|  | <b>Passenger's airbag system</b> | fixed. | <p>The control, located in the glove box, is set to the <b>OFF</b> position.</p> <p>The passenger's front airbag is deactivated.</p> <p>In this case you can install a "rear facing" child seat.</p>                    | <p>Set the control to the <b>ON</b> position to activate the passenger's front airbag.</p> <p>In this case, do not fit a child seat in the rear-facing position.</p>  |
|  | <b>ESP/ASR</b>                   | fixed. | <p>The button, located at the bottom right of the dashboard, is pressed. Its indicator lamp is on.</p> <p>The ESP/ASR is deactivated.</p> <p>ESP: electronic stability programme.</p> <p>ASR: anti-skid regulation.</p> | <p>Press the button to activate the ESP/ASR. Its indicator lamp switches off.</p> <p>The ESP/ASR system is activated automatically when the vehicle is started.</p> <p>If it has been deactivated, the system is reactivated automatically from approximately 30 mph (50 km/h).</p> |

## Warning lamps







When the engine is running or the vehicle is being driven, the illumination of one of the following warning lamps indicates a fault which requires action on the part of the driver.






Any fault resulting in the illumination of a warning lamp must be investigated further by reading the associated message in the multifunction screen.






If you encounter any problems, do not hesitate to contact a PEUGEOT dealer or a qualified workshop.



| Warning lamp   |   | is on   | Cause  | Action/Observations   |
|--|---|---|--|---|
|  | STOP  | fixed, alone or associated with another warning lamp, accompanied by an audible signal and a message in the screen. | Illumination of this warning lamp is associated with a serious braking system, power steering, engine lubrication or cooling system malfunction or a punctured tyre. | Stop as soon as it is safe to do so as there is a risk that the engine will cut out while driving.<br>Park, switch off the ignition and contact a PEUGEOT dealer or a qualified workshop.   |
|  |  | on temporarily.   | A minor fault has occurred for which there is no specific warning lamp.  | Identify the fault by reading the message shown in the screen, such as, for example:<br>- the closing of the doors, boot or bonnet,<br>- the engine oil level,<br>- the screenwash level,<br>- the remote control battery,<br>- the tyre pressures,<br>- saturation of the particle emission filter (Diesel).<br>- ...<br>For any other faults, contact a PEUGEOT dealer or a qualified workshop. |
|  |   | fixed.  | A major fault has occurred for which there is no specific warning lamp.  | Identify the fault by reading the message shown on the screen and contact a PEUGEOT dealer or a qualified workshop.   |
|  | (PEF: particle emissions filter, Diesel)  | fixed, associated temporarily with a message on the risk of blockage of the PEF.                                    | This indicates the start of saturation of the particle emissions filter.   | As soon as traffic conditions allow, regenerate the filter by driving at a speed of at least 35 mph (60 km/h) until the service warning lamp goes off.  |
|  |   | fixed.  | This indicates the low level in the Diesel additive reservoir.   | Have the level topped up by a PEUGEOT dealer or a qualified workshop as soon as possible.   |




| Warning lamp  |                                    | is on   | Cause   | Action/Observations   |
|---|------------------------------------|---|---|---|
|  | Electric parking brake             | flashing.   | The application or release of the electric parking brake was interrupted. | You must stop as soon as it is safe to do so. Park on level ground, switch off the ignition and contact a PEUGEOT dealer or a qualified workshop.   |
|  | Electric parking brake malfunction | fixed.  | The electric parking brake has a fault.                                   | Automatic application/release is no longer possible.<br>Contact a PEUGEOT dealer or a qualified workshop without delay.<br>The parking brake can be released manually using the emergency release procedure.<br>For more information on the electric parking brake, refer to the "Driving" section. |
|  | Braking                            | fixed, associated with the STOP warning lamp.   | The braking system fluid level has dropped significantly.                 | You must stop as soon as it is safe to do so. Top up with brake fluid recommended by PEUGEOT.<br>If the problem persists, have the system checked by a PEUGEOT dealer or a qualified workshop.  |
|  |                                    | fixed, associated with the electric parking brake malfunction warning lamp, if the parking brake is released. | The braking system has a fault.   | You must stop as soon as it is safe to do so.<br>Park, switch off the ignition and contact a PEUGEOT dealer or a qualified workshop.  |
|  |                                    | fixed, associated with the STOP and ABS warning lamps.  | The electronic brake force distribution (EBFD) system has a fault.        | You must stop as soon as it is safe to do so. Have it checked by a PEUGEOT dealer or a qualified workshop.  |
|  | Anti-lock Braking System (ABS)     | fixed.  | The anti-lock braking system has a fault.                                 | The vehicle retains conventional braking.<br>Drive carefully at reduced speed and contact a PEUGEOT dealer or a qualified workshop without delay.   |

| Warning lamp  |  | is on                                  | Cause  | Action/Observations  |
|---|--|--|--|--|
|  | <b>Dynamic stability control (ESP/ASR)</b> | flashing.                              | The ESP/ASR regulation is active.  | The system optimises traction and improves the directional stability of the vehicle.   |
|   |  | fixed.                                 | Unless it has been deactivated (button pressed and its indicator lamp on) the ESP/ASR system has a fault.                                    | Have it checked by a PEUGEOT or a qualified workshop.  |
|  | <b>Engine autodiagnosis system</b>         | fixed.                                 | The emission control system has a fault.   | The warning lamp should go off when the engine is started.<br>If it does not go off, contact a PEUGEOT dealer or qualified workshop without delay.   |
|   |  | flashing.                              | The engine management system has a fault.  | Risk of destruction of the catalytic converter. Have it checked by a PEUGEOT dealer or a qualified workshop.   |
|   | <b>Low fuel level</b>                      | fixed with the needle in the red zone. | When it first comes on there remains approximately <b>6 litres</b> of fuel in the tank.<br>At this point, you begin to use the fuel reserve. | Refuel as soon as possible to avoid running out of fuel.<br>This warning lamp will come on every time the ignition is switched on, until a sufficient addition of fuel is made.<br>Fuel tank capacity: approximately <b>60 litres</b> .<br>Never continue to drive until you run out of fuel, as this could damage the emission control and injection systems. |
|   | <b>Maximum coolant temperature</b>         | fixed with the needle in the red zone. | The temperature of the cooling system is too high.   | Stop as soon as it is safe to do so.<br>Wait until the engine has cooled down before topping up the level, if necessary.<br>If the problem persists, contact a PEUGEOT dealer or a qualified workshop.   |
|   | <b>Engine oil pressure</b>                 | fixed.                                 | There is a fault with the engine lubrication system.   | You must stop as soon it is safe to do so.<br>Park, switch off the ignition and contact a PEUGEOT dealer or a qualified workshop.  |

| Warning lamp  |  | is on   | Cause   | Action/Observations  |
|---|--|---|---|--|
|  | <b>Battery charge</b>                          | fixed.  | The battery charging circuit has a fault (dirty or loose terminals, slack or cut alternator belt, ...). | The warning lamp should go off when the engine is started.<br>If it does not go off, contact a PEUGEOT dealer or a qualified workshop. |
|  | <b>Door(s) open</b>                            | fixed if the speed is below 6 mph (10 km/h).<br>fixed and accompanied by an audible signal if the speed is above 6 mph (10 km/h). | A door, the boot, the lower tailgate or the bonnet (with alarm only) is still open.                     | Close the door or boot.  |
|  | <b>Front seat belt not fastened/unfastened</b> | fixed then flashing accompanied by an increasing audible signal.  | The driver and/or the front passenger has not fastened or has unfastened their seat belt.               | Pull the strap then insert the tongue in the buckle.   |
|   | <b>Rear seat belt not fastened/unfastened</b>  | fixed then flashing accompanied by an audible signal.   | One or more rear passengers have unfastened their seat belt.  |  |
|  | <b>Airbags</b>                                 | on temporarily.   | This lamp comes on for a few seconds when you turn on the ignition, then goes off.                      | This lamp should go off when the engine is started.<br>If it does not go off, contact a PEUGEOT dealer or a qualified workshop.        |
|   |  | fixed.  | One of the airbag or seat belt pretensioner systems has a fault.  | Have it checked by a PEUGEOT dealer or a qualified workshop.   |
|  | <b>Water in Diesel</b>                         | fixed.  | The Diesel fuel filter contains water.  | Risk of damage to the injection system on Diesel engines.<br>Contact a PEUGEOT dealer or a qualified workshop without delay.           |

| Warning lamp  |                              | is on     | Cause  | Action/Observations  |
|---|------------------------------|-----------|--|--|
|  | <b>Directional headlamps</b> | flashing. | The directional headlamps system has a fault.  | Have it checked by a PEUGEOT dealer or a qualified workshop.   |
|  | <b>Under-inflated tyre</b>   | fixed.    | The pressure in one or more wheels is too low. | Check the pressure of the tyres as soon as possible.<br>This check should preferably be carried out when the tyres are cold. |

## Coolant temperature indicator

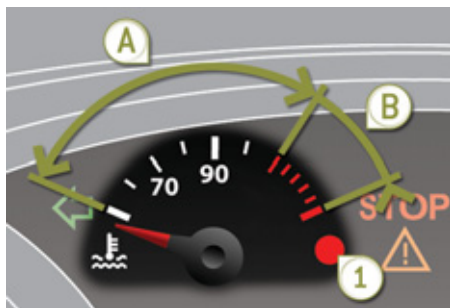

With the engine running, when the needle is:

- in zone **A**, the temperature is correct,
- in zone **B**, the temperature is too high; the max temperature warning lamp **1** and the central **STOP** warning lamp come on, accompanied by an audible signal and a message in the screen.

**You must stop as soon as it is safe to do so.**

Wait a few minutes before switching off the engine.

Contact a PEUGEOT dealer or a qualified workshop.

After driving for a few minutes, the temperature and pressure in the cooling system increase.

To top up the level:

- ☞ wait for the engine to cool,
- ☞ unscrew the cap by two turns to allow the pressure to drop,
- ☞ when the pressure has dropped, remove the cap,
- ☞ top up the level to the "MAX" mark.

## Service indicator

System which informs the driver when the next service is due, in accordance with the manufacturer's servicing schedule.

The point at which the service is due is calculated from the last indicator zero reset. It is determined by two parameters:

- the distance travelled,
- the time elapsed since the last service.



### More than 1 800 miles (3 000 km) remain before the next service is due

 
When the ignition is switched on, no service information appears in the screen.

### Between 600 miles (1 000 km) and 1 800 miles (3 000 km) remain before the next service is due


For 5 seconds after the ignition is switched on, the spanner symbolising the service operations comes on. The distance recorder display line indicates the distance remaining before the next service is due.

**Example:** 1 700 miles (2 800 km) remain before the next service is due.

For 5 seconds after the ignition is switched on, the screen indicates:



 
5 seconds after the ignition is switched on, **the spanner goes off**; the distance recorder resumes its normal operation. The screen then indicates the total and trip distances.




### Less than 600 miles (1 000 km) remain before the next service is due

**Example:** 400 miles (900 km) remain before the next service is due.

 For 5 seconds after the ignition is switched on, the screen indicates:



 5 seconds after the ignition is switched on, the distance recorder resumes its normal operation. **The spanner remains on** to indicate that a service must be carried out soon.



### Service overdue

For 5 seconds after the ignition is switched on, **the spanner flashes** to indicate that the service must be carried out as soon as possible.

**Example:** the service is overdue by 180 miles (300 km).

For 5 seconds after the ignition is switched on, the screen indicates:



5 seconds after the ignition is switched on, the distance recorder resumes its normal operation. **The spanner remains on.**



The distance remaining may be weighted by the time factor, depending on the driving conditions.

Therefore, the spanner may also come on if you have exceeded the two year service interval.

### Service indicator zero reset



After each service, the service indicator must be reset to zero.

The procedure for resetting to zero is as follows:

- ☞ switch off the ignition,
- ☞ press and hold the trip distance recorder zero reset button,
- ☞ switch on the ignition; the distance recorder display begins a count-down,
- ☞ when the display indicates "**=0**", release the button; the spanner disappears.



Following this operation, if you wish to disconnect the battery, lock the vehicle and wait at least five minutes for the zero reset to be taken into account.

### Retrieving the service information

You can access the service information at any time.

- ☞ Press the trip distance recorder zero reset button.

The service information is displayed for a few seconds, then disappears.

## Engine oil level indicator

System which informs the driver whether the engine oil level is correct or not.

 


This information is indicated for a few seconds when the ignition is switched on, after the service information.



The level shown will only be correct if the vehicle is on level ground and the engine has been off for more than 30 minutes.

### Oil level correct



### Oil level low



This is indicated by the flashing of "OIL", linked with the service warning lamp, accompanied by an audible signal and a message in the multifunction screen.

If the low oil level is confirmed by a check using the dipstick, the level must be topped up to prevent damage to the engine.

## Oil level indicator fault



This is indicated by the flashing of "OIL --". Contact a PEUGEOT dealer or a qualified workshop.

## Dipstick

Refer to the "Checks" section to locate the dipstick and the oil filler cap on your engine.



There are 2 marks on the dipstick:

- **A** = max; never exceed this level (risk of damage to the engine),
- **B** = min; top up the level via the oil filler cap, using the grade of oil suited to your engine.



## Total distance recorder

System which measures the total distance travelled by the vehicle during its life.



The total and trip distances are displayed for thirty seconds when the ignition is switched off, when the driver's door is opened and when the vehicle is locked or unlocked.

## Trip distance recorder

System which measures a distance travelled during a day or other period since it was reset to zero by the driver.



- ☞ With the ignition on, press the button until zeros appear.



In order to observe legislation, change the units of distance (miles or km) to those for the country you are passing through, using the configuration menu.

## Lighting dimmer

System for manual adjustment of the brightness of the instrument panel in relation to the exterior brightness.



## Activation

When the vehicle lighting is on:

- ☞ press the button to change the brightness of the instrument panel,
- ☞ when the lighting reaches the minimum setting, release the button, then press again to increase it,

or

- ☞ when the lighting reaches the maximum setting, release the button, then press again to reduce it,
- ☞ when the lighting reaches the level of brightness required, release the button.



When the vehicle lighting is on, you cannot switch the instrument panel lighting off but you can adjust it to minimum.

## Deactivation

When the lighting is off, or in day mode on vehicles fitted with daytime running lamps, pressing the button does not have any effect.

## MONOCHROME SCREEN A (WITHOUT AUDIO EQUIPMENT)



### Displays on the screen

This displays the following information:

- time,
- date,
- ambient temperature\* (this flashes if there is a risk of ice),
- status of the openings (doors, boot, ...),
- trip computer (refer to the end of the section).

Warning messages (e.g.: "Emission control system faulty") or information messages (e.g.: "Boot open") may appear temporarily. Some can be cleared by pressing the **"ESC"** button.

### Controls



There are three display control buttons:

- **"ESC"** to abandon the operation in progress,
- **"MENU"** to scroll through the menus or sub-menus,
- **"OK"** to select the menu or sub-menu required.

### Main menu



- ☞ Press the **"MENU"** button to scroll through the various menus of the **main menu**:
  - vehicle configuration,
  - options,
  - display settings,
  - languages,
  - units.
- ☞ Press the **"OK"** button to select the menu required.

\* With air conditioning only.



### Vehicle configuration



Once the "Vehicle configuration" menu has been selected, you can activate or deactivate the following equipment (according to country):

- wiper linked with reverse gear (refer to the "Visibility" section),
- selective unlocking (refer to the "Access" section),
- "guide-me-home" and welcome lighting (refer to the "Visibility" section),
- interior mood lighting (refer to the "Visibility" section),
- daytime running lamps (refer to the "Visibility" section),
- directional headlamps (refer to the "Visibility" section),
- automatic or manual parking brake (refer to the "Driving" section),
- ...

### Options

Once the "Options" menu has been selected, you can start diagnostics of the status of the equipment (active, not active, faulty).

### Display settings

Once the "Display settings" menu has been selected, you can gain access to the following settings:

- year,
- month,
- day,
- hour,
- minutes,
- 12 or 24 hour mode.



☞ Once you have selected a setting, press the **"OK"** button to change its value.



☞ Wait for approximately ten seconds without any action to allow the changed data to be recorded or press the **"ESC"** button to cancel.

The screen then returns to the normal display.

### Languages

Once the "Languages" menu has been selected, you can change the language used by the display (Français, Italiano, Nederlands, Portugues, Portugues-Brasil, Türkçe, Deutsch, English, Espanol).

### Units

Once the "Units" menu has been selected, you can change the units for:

- temperature (°C or °F),
- fuel consumption (l/100 km, mpg or km/l).



For safety reasons, configuration of the multifunction screen by the driver must only be done when stationary.

## MONOCHROME SCREEN A (WITH AUDIO EQUIPMENT)



### Displays on the screen


This displays the following information:

- time,
- date,
- ambient temperature\* (this flashes if there is a risk of ice),
- status of the openings (doors, boot, ...),
- audio sources (radio, CD, ...),
- trip computer (refer to the end of the section).

Warning messages (e.g.: "Emission control system faulty") or information messages (e.g.: "Boot open") may appear temporarily. Some can be cleared by pressing the **"ESC"** button.

\* With air conditioning only.

## Controls

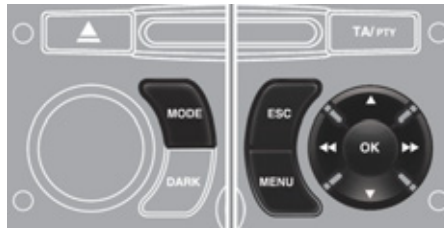

From the audio equipment control panel, you can:

- ☞ press the **"MENU"** button to gain access to the **main menu**,
  - ☞ press the **"▲"** or **"▼"** buttons to scroll through the items on the screen,
  - ☞ press the **"MODE"** button to change the permanent application (trip computer, audio source, ...),
  - ☞ press the **"◀"** or **"▶"** buttons to change a setting value,
  - ☞ press the **"OK"** button to confirm,
- or
- ☞ press the **"ESC"** button to abandon the operation in progress.

## Main menu




- ☞ Press the **"MENU"** button for access to the **main menu**, then press the **"▲"** or **"▼"** buttons to scroll through the various menus:
  - radio-CD,
  - vehicle configuration,
  - options,
  - display settings,
  - languages,
  - units.
- ☞ Press the **"OK"** button to select the menu required.

### Radio-CD

With the audio equipment switched on, once the "Radio-CD" menu has been selected you can activate or deactivate the functions linked with use of the radio (RDS, REG), the CD or the CD changer (introsan, shuffle, CD repeat).



For more information on the "Radio-CD" application, refer to the "Audio and Telematics" section.

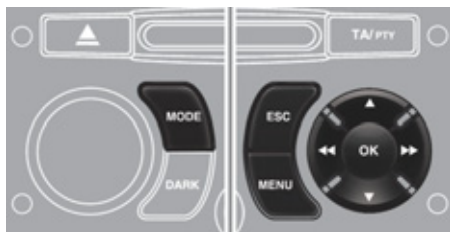

### Vehicle configuration



Once the "Vehicle Configuration" menu has been selected, you can activate or deactivate the following equipment (according to country):

- wiper linked with reverse gear (refer to the "Visibility" section),
- selective unlocking (refer to the "Access" section),
- guide-me-home and welcome lighting (refer to the "Visibility" section),
- interior mood lighting (refer to the "Visibility" section),
- daytime running lamps (refer to the "Visibility" section),
- directional headlamps (refer to the "Visibility" section),
- automatic or manual parking brake (refer to the "Driving" section),
- ...

 
### Options

Once the "Options" menu has been selected, you can start diagnostics of the status of the equipment (active, not active, faulty).

### Display settings

Once the "Display settings" menu has been selected, you can gain access to the following settings:

- year,
- month,
- day,
- hour,
- minutes,
- 12 or 24 hour mode.



Once you have selected a setting, press the "◀" or "▶" buttons to change its value.



Press the "▲" or "▼" buttons to switch respectively to the previous or next setting.

Press the "OK" button to record the change and return to the normal display or press the "ESC" button to cancel.

### Languages

Once the "Languages" menu has been selected, you can change the language used by the display (Français, Italiano, Nederlands, Portugues, Portugues-Brasil, Türkçe, Deutsch, English, Espanol).

### Units

Once the "Units" menu has been selected, you can change the units of the following parameters:

- temperature (°C or °F),
- fuel consumption (l/100 km, mpg or km/l).



For safety reasons, configuration of the multifunction screen by the driver must only be done when stationary.

## MONOCHROME SCREEN C (WITH PEUGEOT CONNECT SOUND)



### Displays in the screen

This displays the following information:

- time,
- date,
- ambient temperature\* (this flashes if there is a risk of ice),
- status of the openings (doors, boot...),
- audio sources (radio, CD...),
- trip computer (refer to the end of the section).

Warning messages (e.g.: "Emission control system faulty") or information messages (e.g.: "Automatic headlamp lighting activated") may appear temporarily. These can be cleared by pressing the **"ESC"** button.

### Controls



From the audio equipment control panel, you can:

- ☞ press the **"MENU"** button for access to the **main menu**,
- ☞ press the **"▲"** or **"▼"** buttons to scroll through the items on the screen,
- ☞ press the **"MODE"** button to change the permanent application (trip computer, audio source...),
- ☞ press the **"◀"** or **"▶"** buttons to change a setting value,
- ☞ press the **"OK"** button to confirm,
- or
- ☞ press the **"ESC"** button to abandon the operation in progress.

### Main menu



- ☞ Press the **"MENU"** button for access to the **main menu**:
  - audio functions,
  - trip computer (refer to the end of the section),
  - personalisation-configuration,
  - telephone (Bluetooth system).
- ☞ Press the **"▲"** or **"▼"** button to select the menu required, then confirm by pressing the **"OK"** button.



### "Audio functions" menu

With the audio equipment switched on, once this menu has been selected you can activate or deactivate the functions linked with use of the radio (RDS, REG, RadioText) or the CD or CD changer (introsan, shuffle, CD repeat).



For more information on the "Audio functions" application, refer to the Peugeot Connect Sound part of the "Audio and Telematics" section.

\* With air conditioning only.



### "Trip computer" menu

Once this menu has been selected, you can consult information concerning the status of the vehicle (alert log, status of the functions...).

#### Alert log

This summarises the active warning messages, displaying them in succession in the multifunction screen

#### Status of functions

This summarises the active or inactive status of the functions present on the vehicle.

 
#### Enter the distance to the destination

This allows you to enter an approximate value for the distance to the final destination.


- ☞ Press the **"MENU"** button to gain access to the general menu.
- ☞ Press the arrows, then the **"OK"** button to select the **"Trip computer"** menu.



- ☞ On the **"Trip computer"** menu, select one of the following applications:



### "Personalisation-Configuration" menu

 

Once this menu has been selected, you can gain access to the following functions:


- define the vehicle parameters,
- display configuration,
- choice of language.

#### Define the vehicle parameters

Once this menu has been selected, you can activate or deactivate the following equipment (according to country):


- wiper linked with reverse gear (refer to the "Visibility" section),
- selective unlocking (refer to the "Access" section),
- guide-me-home lighting (refer to the "Visibility" section),
- interior mood lighting (refer to the "Visibility" section),
- daytime running lamps (refer to the "Visibility" section),
- directional headlamps (refer to the "Visibility" section),
- automatic or manual parking brake (refer to the "Driving" section),
- ...



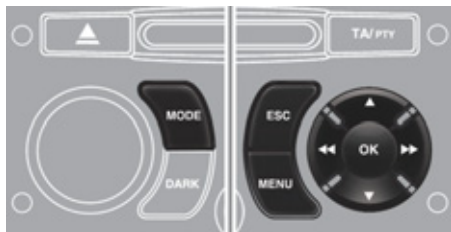


Example: setting of the duration of the guide-me-home lighting.


- Press the "▲" or "▼" buttons, then the "OK" button to select the menu required.

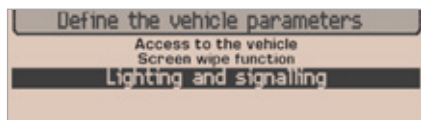

- Press the "▲" or "▼" buttons, then the "OK" button to select the "Guide-me-home headlamps" line.

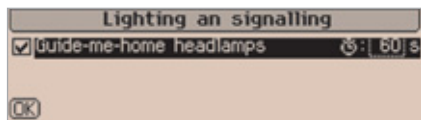

 - Press the "◀" or "▶" buttons to set the value required (15, 30 or 60 seconds), then press the "OK" button to confirm.



- Press the "▲" or "▼" buttons, then the "OK" button to select the "OK" button and confirm or press the "ESC" button to cancel.

### Display configuration

Once this menu has been selected, you have access to the following settings:

- brightness-video setting,
- date and time setting,
- selection of the units.

### Choice of language

Once this menu has been selected, you can change the screen display language (Deutsch, English, Espanol, Français, Italiano, Nederlands, Portugues, Portugues-Brasil, Türkçe\*).



### "Telephone" menu

With the audio equipment switched on, once this menu has been selected you can configure your Bluetooth hands-free kit (pairing), consult the various telephone directories (calls log, services...) and manage your communications (pick up, hang up, call waiting, secret mode...).



For more information on the "Telephone" application, refer to the Peugeot Connect Sound part of the "Audio and Telematics" section.



For safety reasons, configuration of the multifunction screen by the driver must only be done when stationary.

\* According to country.

## 16/9 RETRACTABLE COLOUR SCREEN (WITH PEUGEOT CONNECT NAVIGATION (RNEG))



### Displays in the screen

When the screen is unfolded, it displays the following information automatically and directly:

- time,
- date,
- altitude,
- ambient temperature (the value displayed flashes if there is a risk of ice),
- doors check,
- warning and vehicle function status messages, displayed temporarily,
- audio functions,
- trip computer information,
- satellite navigation system information.

Depending on the equipment fitted to your vehicle, the trip computer information appears in either the multifunction screen or the instrument panel screen.

### Controls



From the Peugeot Connect Navigation (RNEG) control panel, to select one of the applications:

- ☞ press the dedicated **"RADIO"**, **"MUSIC"**, **"NAV"**, **"TRAFFIC"**, **"SETUP"** or **"PHONE"** button for access to the corresponding menu,
  - ☞ turn the navigator to move the selection,
  - ☞ press the navigator to confirm the selection,
- or
- ☞ press the **"ESC"** button to abandon the current operation and return to the previous display.



For more information on these applications, refer to the "Audio and Telematics" section.



For operation of the retractable screen (opening, closing, adjustment of the position, etc.), refer to the paragraph "Access to the retractable screen".

## "SETUP" menu

Press the **"SETUP"** button for access to the **"SETUP"** menu. This allows you to select from the following functions:

- "Languages",
- "Date and time",
- "Display",
- "Vehicle parameters",
- "Units",
- "System".

### Languages

This menu allows you to select the language used by the display: Deutsch, English, Espanol, Français, Italiano, Nederlands, Polski, Portugues, Türkçe\*.

### Date and time

This menu allows you to set the date and time, the format of the date and the format of the time (refer to the "Audio and Telematics" section or to the specific user guide given to you with the other owner's documents).

## Display

This menu allows you to set the brightness of the screen, the screen colour scheme and the colour of the map (day/night or auto mode).

### Vehicle parameters

This menu allows you to activate or deactivate certain driving and comfort equipment (according to country):

- wiper linked with reverse gear (refer to the "Visibility" section),
- selective unlocking (refer to the "Access" section),
- guide-me-home and welcome lighting (refer to the "Visibility" section),
- interior mood lighting (refer to the "Visibility" section),
- daytime running lamps (refer to the "Visibility" section),
- directional headlamps (refer to the "Visibility" section),
- automatic or manual parking brake (refer to the "Driving" section),
- ...

### Units

This menu allows you to select the units: temperature (°C or °F) and fuel consumption (km/l, l/100 or mpg).

### System

This menu allows you to restore the factory configuration, display the software version and activate scrolling text.



For safety reasons, configuration of the multifunction screen by the driver must only be done when stationary.

\* According to country.

## 16/9 HIGH DEFINITION RETRACTABLE COLOUR SCREEN (WITH PEUGEOT CONNECT MEDIA)



### Displays on the screen

When the screen is unfolded, it displays the following information automatically and directly:

- time,
- date,
- altitude,
- ambient temperature (the value displayed flashes if there is a risk of ice),
- audio functions,
- telephone and address book information,
- satellite navigation system information.

### Controls



From the Peugeot Connect Media control panel, to select one of the applications:

- ☞ press the dedicated **"RADIO"**, **"MEDIA"**, **"NAV"**, **"TRAFFIC"**, **"ADDR BOOK"** or **"SETUP"** button for access to the corresponding menu,
  - ☞ turn the navigator to move the selection,
  - ☞ press the navigator to confirm the selection,
- or
- ☞ press the **"ESC"** button to abandon the current operation and return to the previous display.



For more information on these applications, refer to the "Audio and Telematics" section or to the specific user guide given to you with the other owner's documents.



For operation of the retractable screen (opening, closing, adjustment of the position, etc.), refer to the paragraph "Access to the retractable screen".

## "SETUP" menu



Press the **"SETUP"** button for access to the **"SETUP"** menu. This allows you to select from the following functions:

- "Languages and voice functions",
- "Date and time",
- "Display",
- "Units",
- "System".

### Language and voice functions

This menu allows you to:

- select the language used by the screen (Deutsch, English, Espanol, Français, Italiano, Nederlands, Polski, Portugues, Türkçe\*),
- select the voice recognition parameters (activation/deactivation, advice on use, personal voice programming, etc.),
- set the volume of the voice synthesiser.

### Date and time

This menu allows you to set the date and time, the format of the date and the format of the time (refer to the "Audio and Telematics" section or to the specific user guide given to you with the other owner's documents).

### Display

This menu allows you to set the brightness of the screen, the screen colour scheme and the colour of the map (day/night or auto mode).

### Units

This menu allows you to select the units: temperature (°C or °F) and distance (miles or km).


### System parameters

This menu allows you to restore the factory configuration, display the software version and activate scrolling text.



For safety reasons, configuration of the multifunction screen by the driver must only be done when stationary.

\* According to country.

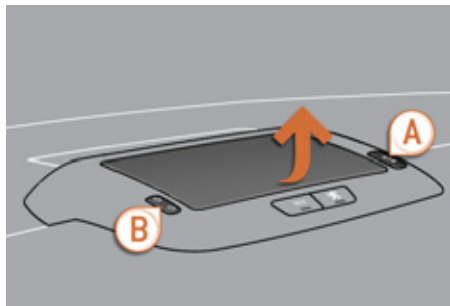

### Access to the retractable screen

This screen is opened and stored automatically.

However, you can also open it, store it and adjust it using the various manual controls:

- opening or storing by means of control **A**,
- angle adjustments by means of control **B**.

It is also fitted with safety auto-reverse protection.

### Opening the screen

- ☞ With the screen stored, press control **A** to open it.

The screen opens automatically when the ignition is switched on, when the audio and telematics system is switched on, when an outgoing telephone call is made, when a voice command is given and when a warning message linked with the STOP warning lamp is received.



If you close the screen during operation of the audio and telematics system, it will re-open automatically when an outgoing telephone call is made, when a voice command is given or when a warning message linked with the STOP warning lamp is received.

### Closing the screen

- ☞ With the screen open, press control **A** to store it.

The screen is stored automatically when the ignition is switched off, after approximately three seconds, if the audio and telematics system is off.

### Safety auto-reverse


If the screen meets an obstacle as it opens or closes, the movement stops immediately and is reversed by a few millimetres.

After clearing the obstacle, issue the command required again.



If you wish the screen to open or close automatically when the audio and telematics system is switched on or off, the screen must not be closed when the audio and telematics system is operating.

### Adjusting the position of the screen

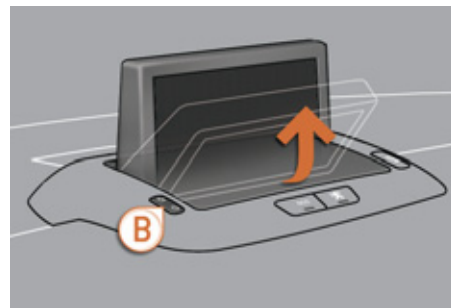

When the screen is open, you can adjust it precisely in different ways:

- ☞ press the corresponding part of control **B** to move the screen towards you or towards the windscreen,
- or
- ☞ push or pull the screen gently by hand.

### Storing the position of the screen

The system has four pre-set positions in its memory.

Each time the screen is closed, the system stores the last position of the screen.

Each time the screen is re-opened, the system returns the screen to the pre-set position closest to that stored.


## TRIP COMPUTER

System which provides current information concerning the trip travelled (range, fuel consumption...).

### Monochrome screen A



### Information displays

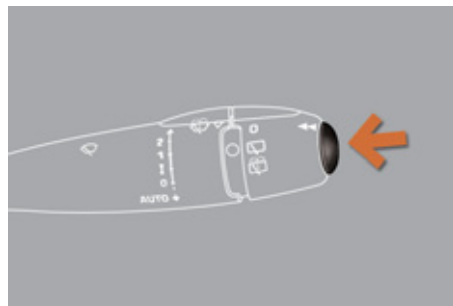

- Press the button, located at the end of the **wiper stalk**, to display the various items of trip computer data in succession.

The trip computer provides the following information:

- range,



- current fuel consumption,



- distance travelled,



- average fuel consumption,




- average speed.



- The next press then returns you to the normal display.

### Zero reset

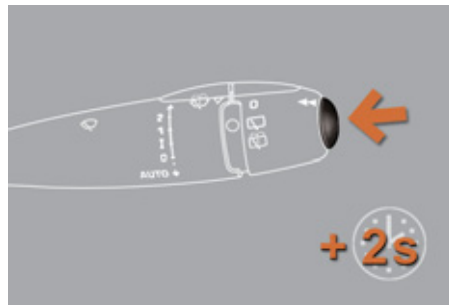

- Press the control for more than two seconds to reset to zero the distance travelled, the average fuel consumption and the average speed.



## TRIP COMPUTER

System which provides current information concerning the trip (range, consumption...).

### Monochrome screen C



### 16/9 colour screen - Peugeot Connect Navigation




### Instrument panel screen - Peugeot Connect Media



## Information displays

### With the screen C or the colour screen (Peugeot Connect Navigation)

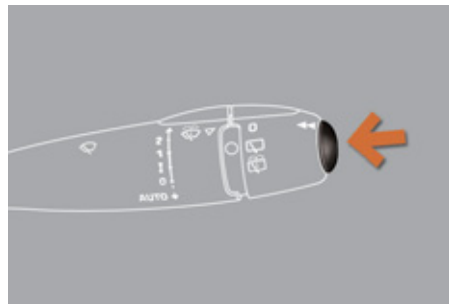

Press the button, located at the end of the **wiper stalk**, to display the various trip computer tabs in succession.

### With the instrument panel screen (Peugeot Connect Media)



Press the up and down arrows on the navigator, associated with the Peugeot Connect Media, to display the various trip computer tabs in succession.



Depending on your vehicle's equipment, the trip computer information appears on the multifunction screen or on the instrument panel screen.



- The current information tab with:
  - the range,
  - the current fuel consumption,
  - the distance remaining to be travelled.



- The trip "1" tab with:
  - the distance travelled,
  - the average fuel consumption,
  - the average speed, for the first trip.




- The trip "2" tab with:
  - the distance travelled,
  - the average fuel consumption,
  - the average speed, for the second trip.

☞ Pressing the button again takes you to a black screen.

A further press returns you to the normal display.

### Trip zero reset

**With the screen C or the colour screen (Peugeot Connect Navigation)**

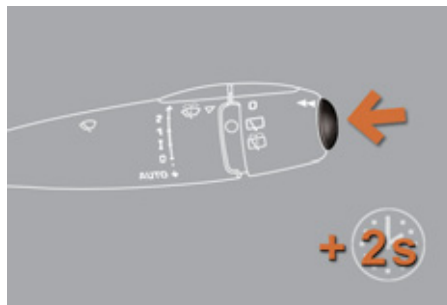

☞ When the trip required is displayed, press the trip required for more than two seconds.

**With the instrument panel screen (Peugeot Connect Media)**



☞ When the required trip is displayed, press the "OK" button on the navigator, associated with the Peugeot Connect Media, for more than two seconds.

Trips "1" and "2" are independent but their use is identical.

For example, trip "1" can be used for daily figures, and trip "2" for monthly figures.

## A few definitions...



### Range

(miles or km)

This indicates the distance which can still be travelled with the fuel remaining in the tank in relation to the average fuel consumption over the last few miles (kilometres) travelled.



This value may vary following a change in the style of driving or the relief, resulting in a significant change in the current fuel consumption.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).



If dashes are displayed continuously while driving in place of the digits, contact a PEUGEOT dealer or a qualified workshop.



### Current fuel consumption

(mpg or l/100 km or km/l)

This is the average fuel consumption during the last few seconds.



This function is only displayed from 20 mph (30 km/h).



### Average fuel consumption

(mpg or l/100 km or km/l)

This is the average fuel consumption since the last trip computer zero reset.



### Average speed

(mph or km/h)

This is the average speed calculated since the last trip computer zero reset (ignition on).



### Distance travelled

(miles or km)

This indicates the distance travelled since the last trip computer zero reset.



### Distance remaining to destination

(miles or km)

This is the distance remaining to be travelled to the final destination. It is either calculated instantly by the navigation system, if guidance is activated, or entered by the user.

If the distance is not entered, dashes are displayed in place of the digits.




### Stop & Start time counter

(minutes/seconds or hours/minutes)

If your vehicle is fitted with Stop & Start, a time counter calculates the time spent in STOP mode during a journey.

It resets to zero every time the ignition is switched on with the key.

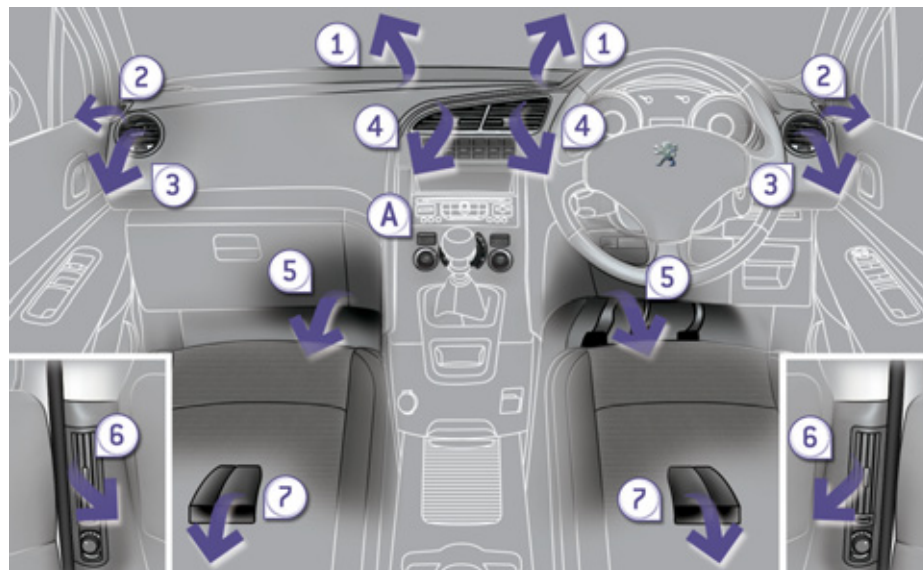

The air flow control enables you to increase or reduce the speed of the ventilation fan.

These controls are grouped together on control panel **A** on the centre console.

### Air distribution

1. Windscreen demisting/defrosting vents.
2. Front side window demisting/defrosting vents.
3. Side adjustable air vents.
4. Central adjustable air vents.
5. Air outlets to the front footwells.
6. Adjustable air vents for the rear passengers.
7. Air outlets to the rear footwells.

## HEATING AND VENTILATION

System which creates and maintains good conditions of comfort and visibility in the vehicle's passenger compartment.

### Air intake

The air circulating in the passenger compartment is filtered and originates either from the outside via the grille located at the base of the windscreen or from the inside in air recirculation mode.

## Controls

The incoming air follows various routes depending on the controls selected by the driver, the front passenger and rear passengers, according to the level of equipment.

The temperature control enables you to obtain the level of comfort required by mixing the air of the various circuits.

The air distribution control enables you to select the air vents used in the passenger compartment by the combined use of the associated buttons.



## Recommendations for ventilation and air conditioning

In order for these systems to be fully effective, follow the operation and maintenance guidelines below:

- ☞ If the interior temperature remains very high after the vehicle has been parked in the sun for a considerable time, first ventilate the passenger compartment for a few minutes.

Place the air flow control at a sufficient level to provide an adequate renewal of air in the passenger compartment.

- ☞ To obtain an even air distribution, take care not to obstruct the exterior air intake grilles located at the base of the windscreen, the nozzles, the vents and the air outlets, as well as the air extractor located in the boot.
- ☞ Use in preference the intake of exterior air as prolonged use of the air recirculation may cause misting of the windows and side windows.
- ☞ Do not cover the sunshine sensor, located on the dashboard; this is used for regulation of the automatic air conditioning system.
- ☞ Operate the air conditioning system for 5 to 10 minutes, once or twice a month to keep it in good working order.
- ☞ Ensure that the passenger compartment filter is in good condition and have the filter elements replaced regularly (refer to the "Checks" section).

We recommend the use of a combined passenger compartment filter. Thanks to its second special active filter, it contributes to the purification of the air breathed by the occupants and the cleanliness of the passenger compartment (reduction of allergic symptoms, bad odours and greasy deposits).

- ☞ The air conditioning uses power from the engine while operating. This results in an increase in the vehicle's fuel consumption.

When towing at or near maximum capacity or on steep slopes in high ambient temperatures, switching off the air conditioning saves engine power and so improves towing capacity.

Condensation created by the air conditioning results in a discharge of water under the vehicle when stationary, which is perfectly normal.

- ☞ To ensure correct operation of the air conditioning system, you are also advised to have it checked regularly.
- ☞ If the system does not produce cold air, do not use it and contact a PEUGEOT dealer or a qualified workshop.



The air conditioning system does not contain chlorine and does not present any danger to the ozone layer.

## REAR VENTILATION ADJUSTMENT



After pressing the "REAR" button, turn the adjustment dial of the rear side vents to decrease or increase the flow of air.

Take care not to obstruct the side vents and the air outlets on the floor.

To shut off the flow of air, close the vents and set the dial to 0.

## MANUAL AIR CONDITIONING



The air conditioning can only operate with the engine running.

### 1. Temperature adjustment



☞ Turn the dial from blue (cold) to red (hot) to adjust the temperature to your requirements.

### 2. Air flow adjustment



☞ Turn the dial from position 1 to position 5 to obtain a comfortable air flow.



☞ If you place the air flow control in position 0 (deactivation of the system), the temperature is no longer maintained at a comfortable level. However, a slight flow of air, due to the movement of the vehicle, can still be felt.

### 3. Air distribution adjustment



Windscreen and side windows.



Windscreen, side windows and front-rear footwells.



Footwells, front-rear (closing the vents increases the flow to the footwells).



Central, side and rear vents.



The air distribution can be adapted by placing the dial in an intermediate position.

### 4. Air intake/Air recirculation

The intake of exterior air limits misting of the windscreen and side windows.

The recirculation of interior air insulates the passenger compartment from exterior odours and smoke.

Return to exterior air intake as soon as possible to prevent deterioration of the air quality and demisting performance.



☞ Press the button to recirculate the interior air. The indicator lamp comes on to confirm this.



☞ Press the button again to permit the intake of exterior air. The indicator lamp goes off to confirm this.



## Demisting/defrosting



The marking on the control panel indicates the position of the controls to quickly demist or defrost the windscreen and side windows:

- ☞ place the air intake control **4** in the "Exterior air intake" position (indicator lamp off),
- ☞ place the air distribution dial **3** in the "Windscreen position",
- ☞ place the air flow dial **2** in position 5 (maximum),
- ☞ place the temperature dial **1** in the red position (hot).



With Stop & Start, when demisting has been activated, the STOP mode is not available.

## 5. Air conditioning On/Off



The air conditioning is designed to operate effectively in all seasons, with the windows closed.

It enables you to:

- lower the temperature, in summer,
- increase the effectiveness of the demisting in winter, above 3 °C.

### Switching on

- ☞ Press the "**A/C**" button, the button's indicator lamp comes on.

The air conditioning does not operate when the air flow adjustment control **2** is in position "**0**".

To obtain cooled air more quickly, you can use recycling of the interior air for a few moments. Then return to fresh air intake.

### Switching off

- ☞ Press the "**A/C**" button again, the button's indicator lamp goes off.

Switching off may affect comfort levels (humidity, condensation).

## REAR SCREEN DEMIST/DEFROST



The control button is located on the air conditioning system control panel.

### Switching on

The rear screen demist/defrost can only operate when the engine is running.

- ☞ Press this button to demist/defrost the rear screen and the door mirrors. The indicator lamp associated with the button comes on.

### Switching off

The demist/defrost switches off automatically to prevent an excessive consumption of current.

- ☞ It is possible to stop the demist/defrost operation before it is switched off automatically by pressing the button again. The indicator lamp associated with the button switches off.



- ☞ Switch off the demist/defrost of the rear screen and door mirrors as soon as it is no longer necessary as lower current consumption results in reduced fuel consumption.



## DUAL-ZONE DIGITAL AIR CONDITIONING



The air conditioning only operates when the engine is running.

### Automatic operation

#### 1. Automatic comfort programme



- Press the **"AUTO"** button. The indicator lamp on the button comes on.

We recommend the use of this mode: it permits automatic and optimised adjustment of all of the functions, passenger compartment temperature, air flow, air distribution and air recirculation, in accordance with the comfort value that you have chosen.

This system is designed to operate effectively in all seasons, with the windows closed.



When the engine is cold, to prevent too great a distribution of cold air, the air flow will reach its optimum level gradually.

In cold weather, it favours the distribution of warm air to the windscreen, side windows and footwells only.

#### 2-3. Driver-passenger side adjustment



The driver and front passenger can each adjust the temperature to their requirements.

The value indicated on the display corresponds to a level of comfort and not to a temperature in degrees Celsius or Fahrenheit.

- Turn control **2** or **3** to the left or to the right respectively to decrease or increase this value.

A setting around the value 21 provides optimum comfort. However, depending on your requirements, a setting between 18 and 24 is normal.

You are advised to avoid a left/right setting difference of more than 3.



On entering the vehicle, if the interior temperature is much colder or warmer than the comfort value, there is no need to change the value displayed in order to obtain the comfort required more quickly. The system corrects the difference in temperature automatically and as quickly as possible.

#### 4. Automatic visibility programme



The automatic comfort programme may not be sufficient to quickly demist or defrost the windscreen and side windows (humidity, several passengers, ice, etc.).

- In this case, select the automatic visibility programme.

The system automatically controls the air conditioning, the air flow and the air intake and provides optimum distribution of the ventilation to the windscreen and side windows.

- To switch it off, press the **"visibility"** button again or press the **"AUTO"** button, the indicator lamp in the button goes off or the indicator lamp on the **"AUTO"** button comes on.



## Manual operation

If you wish, you can make a different choice from that offered by the system by changing a setting. The other functions will still be controlled automatically.

- ☞ Pressing the **"AUTO"** button returns the system to completely automatic operation.



For maximum cooling or heating of the passenger compartment, it is possible to exceed the minimum value 14 or the maximum value 28.

- ☞ Turn control **2** or **3** to the left until **"LO"** (low) is displayed or to the right until **"HI"** (high) is displayed.

## 5. Air conditioning On/Off



- ☞ Press this button to switch off the air conditioning.

Switching the system off could result in discomfort (humidity, condensation).

- ☞ Press this button again to return to automatic operation of the air conditioning. The indicator lamp in the **"A/C"** button comes on.

## 7. Air flow adjustment



- ☞ Turn this control to the left to decrease the air flow or to the right to increase the air flow.

The air flow indicator lamps, between the two fans, come on progressively according to the value requested.

## 6. Air distribution adjustment



- ☞ Press one or more buttons to direct the air flow towards:

- the windscreen and side windows (demisting or defrosting),
- the windscreen, the side windows and the vents,
- the windscreen, the side windows, the vents and the footwells,
- the vents and the footwells,
- the vents,
- the footwells,
- the windscreen, the side windows and the footwells.



With Stop & Start, when demisting has been activated, the STOP mode is not available.

## 8. Air recirculation



☞ Press this button to recirculate the interior air. The indicator lamp comes on.

- Air closed/intake (automatic mode). Press this button, the warning lamp comes on.
- Forced closing of the air intake (manual mode). Press this button to recirculate the interior air, the warning lamp come on.

Air recirculation enables the passenger compartment to be isolated from exterior odours and smoke.

☞ As soon as possible, press the "auto" button to allow the intake of exterior air and avoid the misting of windows.

## 9. Rear ventilation (Rear)



☞ Press this button to allow the air to circulate towards the rear. The temperature will be equal to the left-hand comfort value for the rear left passengers and equal to the right-hand comfort value for the rear right passengers. The indicator lamp in the button comes on.

### Switching the system off

☞ Turn the air flow control to the left until all of the indicator lamps go off.

This action switches off all of the functions of the system.

Temperature related comfort is no longer guaranteed but a slight flow of air, due to the movement of the vehicle, can still be felt.

☞ Turn the air flow dial to the right or press the **"AUTO"** button to reactivate the system with the values set before it was switched off.



Avoid driving for prolonged periods with the system off.

## FRONT SEATS

Seat consisting of a seat cushion, a seat back and a head restraint which can all be adjusted to adapt your position for ease of driving and comfort.

### Manual adjustments

#### Forwards-backwards adjustment

- ☞ Raise the control and slide the seat forwards or backwards.




#### Driver's or passenger's seat height adjustment

- ☞ Pull the control upwards to raise or push it downwards to lower, as many times as necessary, to obtain the position required.



#### Seat back angle adjustment

- ☞ Push the control rearwards.

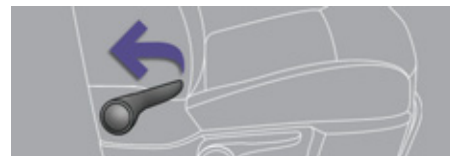

## DRIVER'S ELECTRIC SEAT



Seat consisting of a seat cushion, a seat back and a head restraint which can all be adjusted to adapt your position for ease of driving and comfort.

### Forwards-backwards adjustment

- ☞ Push the control forwards or rearwards to slide the seat.

### Seat cushion height and angle adjustment

- ☞ Tilt the rear part of the control upwards or downwards to obtain the required height.
- ☞ Tilt the front part of the control upwards or downwards to obtain the required angle.

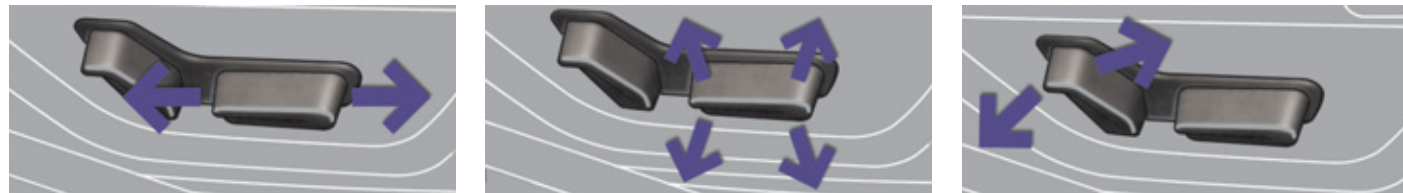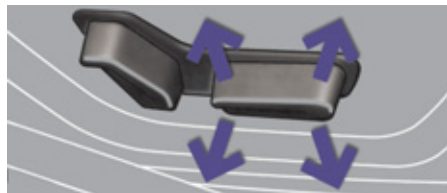

The electrical functions of the driver's seat are active approximately one minute after opening the front door. They are deactivated approximately one minute after the ignition is switched off and in economy mode.

To reactivate them, switch on the ignition.


### Seat back angle adjustment

- ☞ Tilt the control forwards or rearwards to adjust the angle of the seat back.

## Additional adjustments

### Head restraint height and angle adjustment

- ☞ To raise the head restraint, pull it forwards and upwards at the same time.
- ☞ To remove the head restraint, press the lug **A** and pull the head restraint upwards.
- ☞ To put the head restraint back in place, engage the head restraint stems in the openings keeping them in line with the seat back.
- ☞ To lower the head restraint, press the lug **A** and the head restraint at the same time.
- ☞ To adjust the angle of the head restraint, tilt its lower part forwards or rearwards.

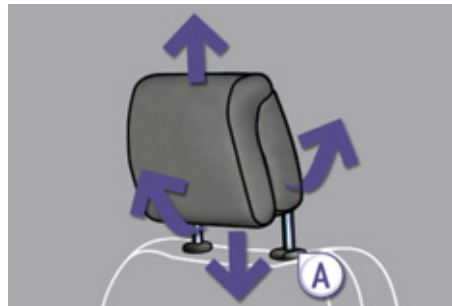


The head restraint is fitted with a frame with notches which prevents it from lowering; this is a safety device in case of impact.

**The adjustment is correct when the upper edge of the head restraint is level with the top of the head.**

Never drive with the head restraints removed; they must be in place and adjusted correctly.

### Manual lumbar adjustment

- ☞ Turn the knob to obtain the desired level of lumbar support.

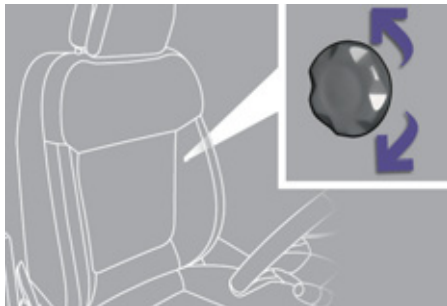

## Heated seats control


With the engine running, the front seats can be heated separately.

- ☞ Use the adjustment dial, placed on the side of each front seat, to switch on and select the level of heating required:

- 0:** Off.
- 1:** Low.
- 2:** Medium.
- 3:** High.




## Table position, front passenger seat

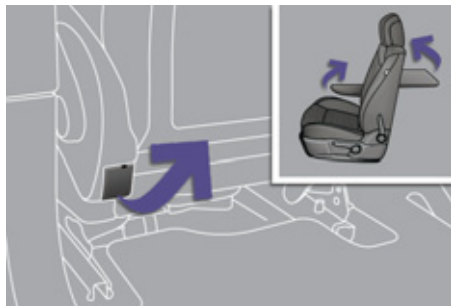


### Folding the seat backrest

- ☞ Raise the armrest and fold up the "aircraft" style table, fixed on the back of the seat.
- ☞ Check that no object, either on or underneath the seat, could hinder its movement.
- ☞ To make the operation easier, place the head restraint in the low position (if the seat is in the fully forward position).
- ☞ If your vehicle is fitted with the video pack, place the protective cover on the head restraint.
- ☞ Lift the control, located behind the seat, then guide the seat back forwards.

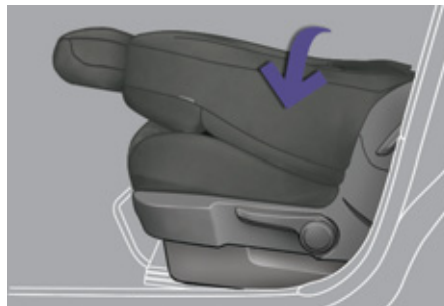

This position, associated with that of the rear seats, allows you to transport long objects inside the vehicle.

The maximum weight on the seat is 30 kg.

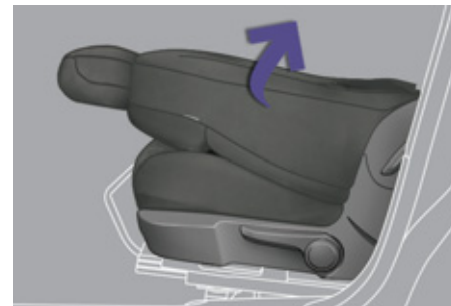


### Returning the seat to the normal position

- ☞ Guide the seat backrest rearwards until it locks in place.



When the seat backrest is in this position, only the 2nd row passenger seat located behind the driver can be used.

## REAR HEAD RESTRAINTS

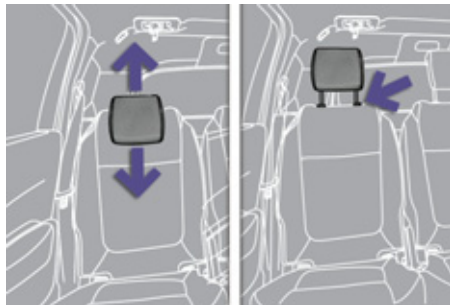

The rear head restraints can be removed and have two positions:

- high, position for use,
- low, storage position.

To raise a head restraint, pull it upwards.

To lower it, press the lug then the head restraint.

To remove it, place it in the high position, push the lug and pull it upwards.


To refit it, engage the head restraint rods in the holes taking care to remain in line with the seat back.



Never drive with the head restraints removed, they must be in place and correctly adjusted.


## 2ND ROW SEATS

### Forwards-backwards adjustment

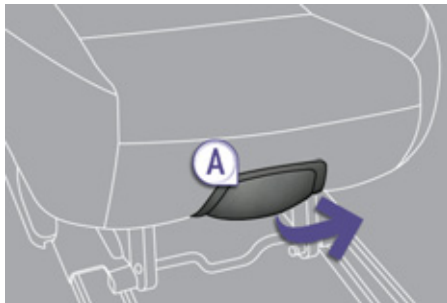


Lift the control **A**, located at the front of the seat, then adjust the seat to the position desired.

### "Comfort" position

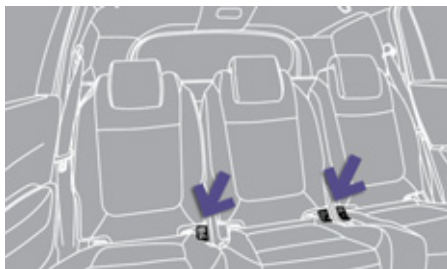

The three 2nd row seats are independent of each other and all the same width. They all have a "comfort" position.

### Placing a seat in the "comfort" position

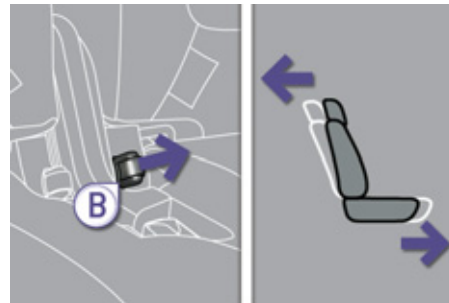

☞ Pull on the control **B** and guide the seat rearwards.

The backrest reclines and the seat base moves forward slightly.

### Returning the seat to the initial position

☞ Pull on the control **B** and allow the seat to come forwards.




Always supervise any movements of seats by children.

## Flat floor

Each seat can be folded onto the floor to enable you to modify your vehicle's interior space.

### Folding the seat from the 2nd row

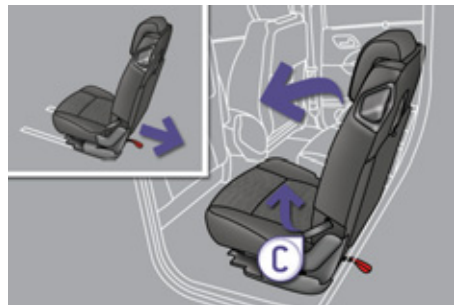

- ☞ Place the seats as far towards the rear as possible.
- ☞ Pull firmly upwards on strap **C**, to unlock the seat; keep pulling until the seat is fully folded.
- ☞ Push the backrest slightly forwards so that the backrest pivots, folding onto the seat base. The assembly then lowers onto the floor.

### Folding the seat from the boot




When loading, for example, you can fold the seat or seats directly from the boot, once you have folded the 3rd row seats (7 seat version).

- ☞ Place the seats as far towards the rear as possible.
- ☞ Pull on the strap **D** to release the chosen seat and push the backrest gently forwards.



To avoid damaging the mechanism, the strap **D** unclips under excessive force. Simply reclip it to restore the system to working order.

### Repositioning seat

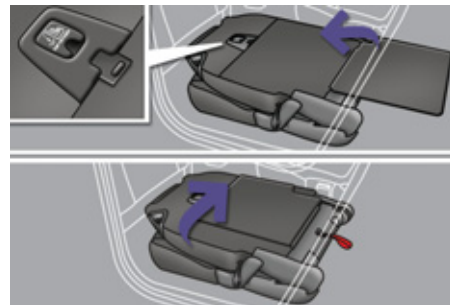

- ☞ If necessary, return the 2nd row seat rigid panels to their initial position and lock them.
- ☞ Raise the backrest and push it rearwards until it locks.




Before moving the 3rd row seats (7 seat version), return the 2nd row seat rigid panels to their initial position and lock them. Emergency exit: if the first system (strap **C**) fails, strap **D** enables the 3rd row passengers to exit quickly.

Supervise any movement of seats by children.



## Rigid panel

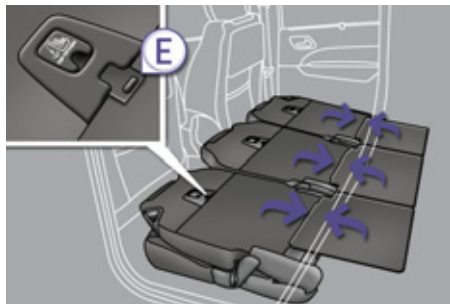

Each 2nd row seat backrest has a rigid panel attached.


This panel enables you:

- to have a continuous load surface in the boot, whatever the positions of the seats,
- to avoid having objects sliding under the 2nd row seats. 30 kg maximum on each panel.

## Releasing/Locking the rigid panel

- ☞ Before deploying the rigid panels, check that the 2nd row seats are positioned as far towards the rear as possible.
- ☞ Slide the latch **E** on the panel upwards, to release it.
- ☞ Return the panel to its initial position, then slide the latch **E** downwards, to lock it in place.

## Entering/Exiting the 3rd row (7 seat version)

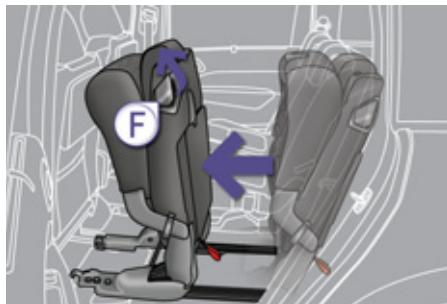

- ☞ Raise the aircraft style table on the 2nd row seat if it is down.
- ☞ Hold the control **F** in the raised position, the seat unlocks and the seat base comes up against the backrest.
- ☞ Push the seat backrest forwards, holding the control **F** forwards.


## Repositioning the seat, from the outside, with the door open

If there are passengers seated in the 3rd row (7 seat version):

- ☞ Manually return the assembly as far as possible rearwards; the seat does not return as far as the maximum rearwards position so as to retain leg space for the 3rd row passengers.
- ☞ Fold the seat base.

## 3RD ROW SEATS (7 SEAT VERSION)

### Concertina boards

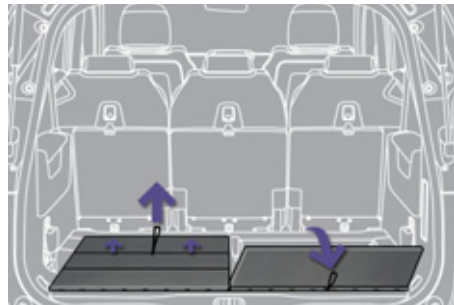

Two rigid concertina boards, which cannot be separated from the vehicle, cover the two 3rd row seats, when these are in the folded position.

### Folding the concertina boards

- ☞ Pull on the control, the 3 sections of the board will fold like a concertina.


When the 3rd row seats are upright, these concertina boards can be left either:

- flat behind the seats,
- in the vertical position,

thereby leaving a storage area available.


The two rigid boards can each support a maximum of 100 kg.

### Installing a seat

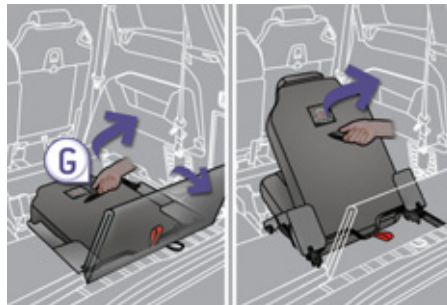

- ☞ Remove the load space screen.
- ☞ If necessary, return the 2nd row rigid panels to their initial position and lock them.
- ☞ Correctly position the concertina board vertically behind the seat.
- ☞ Pull on the control **G**, located behind the seat backrest. The backrest tilts rearwards pulling the seat base with it. The seat locks in the open position.

### Storing a seat

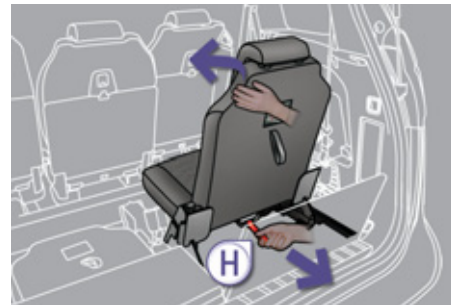

- ☞ Lower the head restraints.
- ☞ Correctly position the concertina board vertically behind the seat.
- ☞ Pull on the control **H**, located at the bottom of the seat backrest. The seat is released.
- ☞ Next push the backrest gently forwards. The backrest pivots folding onto the seat base. The seat base then folds into the stowage area provided for that purpose.
- ☞ Reposition the concertina boards over the folded seats.



Before moving the 3rd row seats, return the rigid panels of the 2nd row seats to the upright position and lock them in place.

Do not try to fold a 3rd row seat that has not first had the backrest fully locked in place.

Do not leave objects either on or underneath the seat bases of the 3rd row seats when you are folding them.

Do not leave your hand on the control **H** as you fold the seats, as you risk trapping your fingers.


## SEAT MODULARITY AND THE VARIOUS SEAT CONFIGURATIONS

Designed to be modular, your vehicle offers numerous seat installation and loading configurations.

Operations to change the existing configuration must only be carried out when stationary (see paragraphs "Rear seats").

## Examples of configurations

7 seats

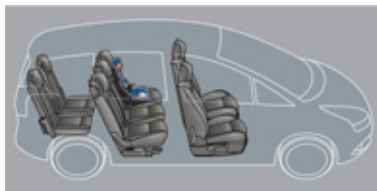

Transport (4 seats)




5 seats



Transporting long objects



Loading a large volume

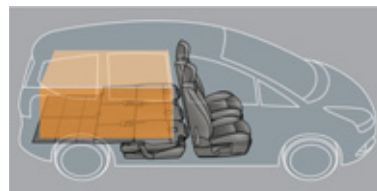

## MIRRORS




### Door mirrors

Each fitted with an adjustable mirror glass permitting the lateral rearward vision necessary for overtaking or parking. They can also be folded for parking in confined spaces.

### Demisting - Defrosting

If your vehicle is fitted with heated mirrors, the demisting-defrosting operates with the engine running, by switching on the heated rear screen (refer to the "Rear screen demist-defrost" page).

## Adjustment

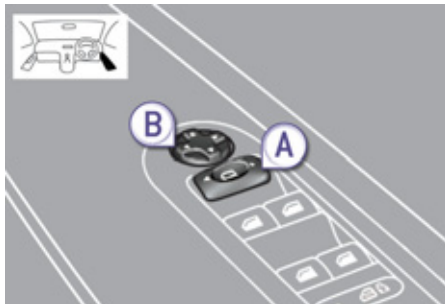

- ☞ Move control **A** to the right or to the left to select the corresponding mirror.
- ☞ Move control **B** in all four directions to adjust.
- ☞ Return control **A** to the central position.



The objects observed are, in reality, closer than they appear.

Take this into account in order to correctly judge the distance of vehicles approaching from behind.

## Folding

- Automatic: lock the vehicle using the remote control or the key.
- Manual: with the ignition on, pull control **A** rearwards.



If the mirrors are folded using control **A**, they will not unfold when the vehicle is unlocked. Pull again on control **A**.

## Unfolding

- Automatic: unlock the vehicle using the remote control or the key.
- Manual: with the ignition on, pull control **A** rearwards.



The folding and unfolding of the door mirrors using the remote control can be deactivated by a PEUGEOT dealer or a qualified workshop.


Fold the mirrors when putting your vehicle through an automatic car wash.

## Rear view mirror

Adjustable mirror providing a central rearward view.

Equipped with an anti-dazzle system, which darkens the mirror glass: this reduces the nuisance to the driver caused by the headlamps from following vehicles, low sun...

### Manual day/night model

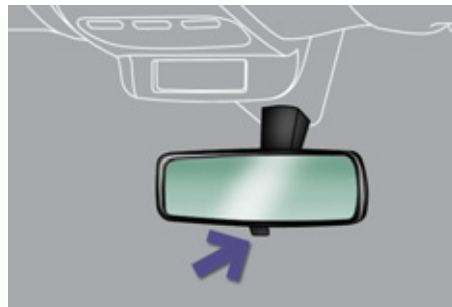

### Adjustment

- ☞ Adjust the mirror so that the glass is directed correctly in the "day" position.

### Day/night position

- ☞ Pull the lever to change to the "night" anti-dazzle position.
- ☞ Push the lever to change to the normal "day" position.



As a safety measure, the mirrors should be adjusted to reduce the "blind spot".

## Automatic day/night model




By means of a sensor, which measures the light from the rear of the vehicle, this system automatically and progressively changes between the day and night uses.



In order to ensure optimum visibility during your manoeuvres, the mirror lightens automatically when reverse gear is engaged.

## STEERING WHEEL ADJUSTMENT

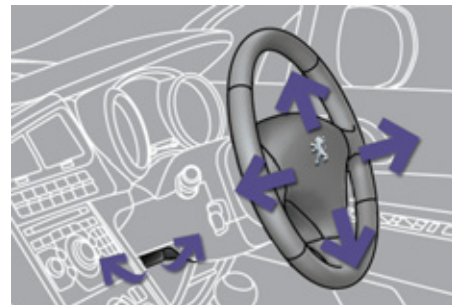

- ☞ **When stationary**, pull the control lever to release the adjustment mechanism.
- ☞ Adjust the height and reach to suit your driving position.
- ☞ Push the control lever to lock the adjustment mechanism.



As a safety precaution, these operations should only be carried out while the vehicle is stationary.

## REMOTE CONTROL KEY

System which permits central unlocking or locking of the vehicle using the lock or from a distance. It is also used to locate and start the vehicle, as well as providing protection against theft.



### Unlocking the vehicle

#### Unfolding the key

- ☞ First press this button to unfold the key.

#### Complete unlocking using the remote control



- ☞ Press the open padlock to unlock the vehicle.

#### Complete unlocking using the key

- ☞ Turn the key to the left in the driver's door lock to unlock the vehicle.

Unlocking is confirmed by rapid flashing of the direction indicators for approximately two seconds.

According to version, the door mirrors unfold at the same time.

#### Selective unlocking using the remote control



- ☞ Press the open padlock once to unlock the driver's door only.
- ☞ Press the open padlock again to unlock the other doors and the boot.

#### Selective unlocking using the key

- ☞ Turn the key to the left in the driver's door lock once to unlock the driver's door only.
- ☞ Turn the key to the left in the driver's door lock again to unlock the other doors and the boot.

Each unlocking is confirmed by rapid flashing of the direction indicators for approximately two seconds.

According to version, the door mirrors unfold at the same time as the first unlocking action.

The selective unlocking is only available on versions fitted with deadlocking.



The complete or selective unlocking parameter is set via the multifunction screen configuration menu.

Complete unlocking is activated by default.

## Locking the vehicle

### Normal locking using the remote control



- Press the closed padlock to lock the vehicle completely.

- Press the closed padlock for more than two seconds to close the windows automatically in addition to locking (according to version).

### Normal locking using the key

- Turn the key to the right in the driver's door lock to lock the vehicle completely.

Locking is confirmed by fixed lighting of the direction indicators for approximately two seconds.

According to version, the door mirrors fold at the same time.



If one of the doors or the boot is still open, the central locking does not take place.

When the vehicle is locked, if it is unlocked inadvertently, it will relock automatically after thirty seconds unless a door is opened.



The folding and unfolding of the door mirrors using the remote control can be deactivated by a PEUGEOT dealer or a qualified workshop.

### Deadlocking using the remote control



- Press the closed padlock to lock the vehicle completely or press the closed padlock for more than two seconds to close the windows automatically in addition to locking (according to version).
- Press the closed padlock again within five seconds to deadlock the vehicle.

### Deadlocking using the key

- Turn the key to the right in the driver's door lock to lock the vehicle completely and hold it in this position for more than two seconds to close the windows automatically in addition to locking (according to version).
- Turn the key to the right again within five seconds to deadlock the vehicle.

Deadlocking is confirmed by fixed lighting of the direction indicators for approximately two seconds.

According to version, the door mirrors fold at the same time.



Deadlocking renders the exterior and interior door controls inoperative.

It also deactivates the manual central control button.

Therefore, never leave anyone inside the vehicle when it is deadlocked.

## Folding the key



- First press this button to fold the key.



If you do not press the button when folding the key, there is a risk of damage to the mechanism.

## Locating your vehicle

- Press the closed padlock to locate your locked vehicle in a car park.

This is indicated by lighting of the direction indicators for a few seconds.

## Anti-theft protection

### Electronic engine immobiliser

The key contains an electronic chip which has a special code. When the ignition is switched on, this code must be recognised in order for starting to be possible.

This electronic engine immobiliser locks the engine management system a few minutes after the ignition is switched off and prevents starting of the engine by anyone who does not have the key.




In the event of a fault, you are informed by illumination of this warning lamp, an audible signal and a message in the screen.

In this case, your vehicle will not start; contact a PEUGEOT dealer as soon as possible.

Keep safely the label attached to the keys given to you on acquisition of the vehicle.

## Starting the vehicle

- Insert the key in the ignition switch. The system recognises the starting code.
- Turn the key fully towards the dashboard to position **3 (Starting)**.
- When the engine starts, release the key.

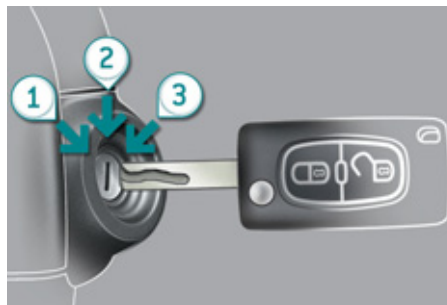

## Switching the vehicle off

- Immobilise the vehicle.
- Turn the key fully towards you to position **1 (Stop)**.
- Remove the key from the ignition switch.

## Energy economy mode

After switching off the engine (position **1-Stop**), you can still use functions such as the audio and telematics system, the wipers, the dipped headlamps, the courtesy lamps, etc. for a maximum combined period of thirty minutes.



For more information, refer to the "Practical information - Energy economy mode" section.



A heavy object (key fob...), attached to the key and weighing down on its shaft in the ignition switch, could cause a malfunction.



## Remote control problem

Following disconnection of the vehicle battery, replacement of the remote control battery or in the event of a remote control malfunction, you can no longer unlock, lock or locate your vehicle.

☞ First of all, use the key in the lock to unlock or lock your vehicle.

☞ Then, reinitialise the remote control.

If the problem persists, contact a PEUGEOT dealer as soon as possible.

## Reinitialisation

☞ Switch off the ignition.


☞ Turn the key to position **2 (Ignition on)**.

☞ Press the closed padlock immediately for a few seconds.

☞ Switch off the ignition and remove the key from the ignition switch.

The remote control is fully operational again.

## Changing the battery

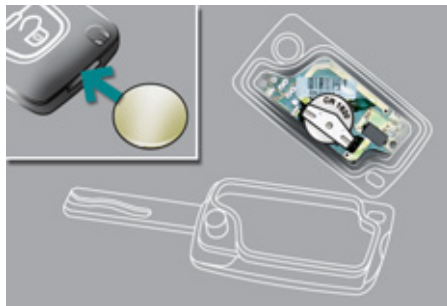

Battery ref.: CR1620/3 volts.



If the battery is flat, you are informed by illumination of this warning lamp, an audible signal and a message in the multifunction screen.

☞ Unclip the casing using a coin at the notch.

☞ Slide the flat battery out of its location.

☞ Slide the new battery into its location observing the original direction.

☞ Clip the casing.

☞ Reinitialise the remote control.



### Lost keys

Visit a PEUGEOT dealer with the vehicle's registration document, your personal identification documents and if possible the key code label.

The PEUGEOT dealer will be able to find the key code and the transponder code required to order a new key.

### Remote control

The high frequency remote control is a sensitive system; do not operate it while it is in your pocket as there is a possibility that it may unlock the vehicle, without you being aware of it. Do not repeatedly press the buttons of your remote control out of range and out of sight of your vehicle. You run the risk of stopping it from working and the remote control would have to be reinitialised.

The remote control does not operate when the key is in the ignition switch, even when the ignition is switched off, except for reinitialisation.

### Locking the vehicle

Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency.

As a safety precaution (with children on board), remove the key from the ignition switch when you leave the vehicle, even for a short time.

### Anti-theft protection

Do not make any modifications to the electronic engine immobiliser system; this could cause malfunctions.

### When purchasing a second-hand vehicle

Have the pairing of all of the keys in your possession checked by a PEUGEOT dealer, to ensure that only your keys can be used to open and start the vehicle.



Do not throw the remote control batteries away, they contain metals which are harmful to the environment.

Take them to an approved collection point.

## ALARM

System which protects and provides a deterrent against the theft of your vehicle. It provides two types of protection, exterior and interior, as well as an anti-tamper function.

### Exterior perimeter protection

The system detects opening of the vehicle.

The alarm is triggered if anyone tries to enter the vehicle by forcing a door, the boot or the bonnet.

### Interior volumetric protection

The system detects any variation in the volume in the passenger compartment.

The alarm is triggered if anyone breaks a window or moves inside the vehicle.

If you wish to leave a pet in the vehicle or a window partially open, deactivate the interior volumetric protection.

### Anti-tamper function


The system detects the putting out of service of its components.

The alarm is triggered if anyone tries to put the wires of the siren, the central control or the battery out of service.



Do not make any modifications to the alarm system, this could cause malfunctions.

## Locking the vehicle with full alarm

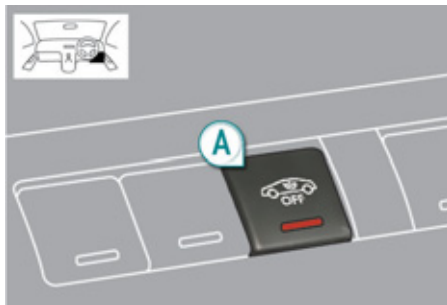

### Activation

- ☞ Switch off the ignition and get out of the vehicle.
- ☞ Lock or deadlock the vehicle using the locking button on the remote control.

The alarm is activated; the indicator lamp in button **A** flashes once per second.

### Deactivation

- ☞ Unlock the vehicle using the unlocking button on the remote control.

The alarm is deactivated; the indicator lamp in button **A** switches off.

## Locking the vehicle with exterior protection alarm only

### Deactivation of the interior volumetric protection

- ☞ Switch off the ignition.
- ☞ Within ten seconds, press button **A** until the indicator lamp is on continuously.
- ☞ Get out of the vehicle.
- ☞ Lock or deadlock the vehicle using the locking button on the remote control.

The exterior protection alarm alone remains activated; the indicator lamp in button **A** flashes once per second.



To be effective, this deactivation must be carried out each time the ignition is switched off.

### Reactivation of the interior volumetric protection

- ☞ Unlock the vehicle using the unlocking button on the remote control.
- ☞ Relock the vehicle using the remote control.

The alarm is activated again with both types of protection; the indicator lamp in button **A** switches off.

## Triggering

This is indicated by sounding of the siren and flashing of the direction indicators for approximately thirty seconds.

After it has been triggered, the alarm is again operational.



If the alarm is triggered ten times in succession, the eleventh time will result in it becoming inactive.

If the indicator lamp in button **A** flashes rapidly, this indicates that the alarm was triggered during your absence. When the ignition is switched on, this flashing stops immediately.

To avoid triggering the alarm when washing your vehicle, lock it using the key in the driver's door lock.

Do not activate the alarm before disconnecting the battery, otherwise the siren will sound.

## Failure of the remote control

- ☞ Unlock the vehicle using the key in the driver's door lock.
- ☞ Open the door; the alarm is triggered.
- ☞ Switch on the ignition; the alarm stops.

## Locking the vehicle without activating the alarm

- ☞ Lock or deadlock the vehicle using the key in the driver's door lock.

## Malfunction

When the ignition is switched on, illumination the indicator lamp in button **A** for ten seconds indicates a siren fault.

Have it checked by a PEUGEOT dealer or a qualified workshop.

## Automatic operation\*


Depending on the legislation in force in your country, one of these cases may occur:

- 45 seconds after the vehicle is locked using the remote control, the alarm is activated, regardless of the status of the doors and boot.
- 2 minutes after the last door or the boot is closed, the alarm is activated.
- ☞ To avoid triggering the alarm on entering the vehicle, first press the unlocking button on the remote control.

\* According to country.

## ELECTRIC WINDOWS

System intended to open or close a window manually or automatically. Fitted with a safety anti-pinch system and a system for deactivation in the event of misuse of the rear controls.

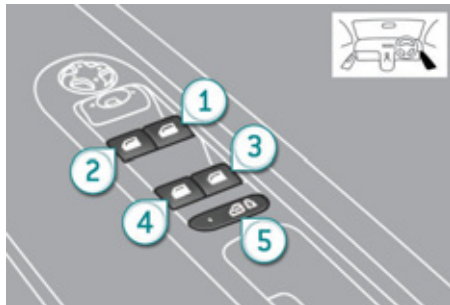

1. Driver's electric window control.
2. Passenger's electric window control.
3. Rear right electric window control.
4. Rear left electric window control.
5. Deactivation of the rear electric window and door controls.

## One-touch electric windows

There are two options:

### - manual mode

- ☞ Press or pull the control gently. The window stops when the control is released.

### - automatic mode

- ☞ Press or pull the control firmly. The window opens or closes fully when the control is released.
- ☞ Pressing the control again stops the movement of the window.



The electric window controls remain operational for approximately 45 seconds after the ignition is switched off or until the vehicle is locked after a front door is opened.

If one of the passenger windows cannot be operated from the driver's door control pad, carry out the operation from the control pad of the passenger door concerned, and vice versa.



After approximately ten consecutive complete opening/closing movements of the window, a protection function is activated to prevent damage to the electric window motor.

After this, you have approximately one minute within which to close the window.

Once the window is closed, the controls will become available again after approximately 40 minutes.

## Safety anti-pinch

When the window rises and meets an obstacle, it stops and partially lowers again.



If the window cannot be closed (for example, in the presence of ice), immediately after the movement is reversed:

- ☞ press and hold the control until the window opens fully,
- ☞ then pull the control immediately and hold it until the window closes,
- ☞ continue to hold the control for approximately one second after the window has closed.

**The safety anti-pinch function is not operational during these operations.**

## Reinitialisation

If a window does not rise automatically, its operation must be reinitialised:

- ☞ pull the control until the window stops,
- ☞ release the control and pull it again, repeat these operations until the window closes fully,
- ☞ continue to hold the control for approximately one second after the window has closed,
- ☞ press the control to lower the window automatically to the low position,
- ☞ when the window has reached the low position, press the control again for approximately one second.

**The safety anti-pinch function is not operational during these operations.**

## Deactivation of the rear electric window and door controls



- ☞ For the safety of your children, with the ignition on, press control 5 to deactivate the rear electric window controls regardless of their position.

It is still possible to open the doors from the outside and operate the rear electric windows from the driver's control pad.



Indicator lamp on, the rear controls are deactivated.  
Indicator lamp off, the rear controls are activated.



This control also deactivates the interior controls for the rear doors (refer to the section "Child safety - § Electric child lock").



Any other status of the indicator lamp indicates a malfunction of the electric child lock. Have it checked by a PEUGEOT dealer or a qualified workshop.

Always remove the key from the ignition when leaving the vehicle, even for a short time.

If an obstacle is encountered during operation of the electric windows, you must reverse the movement of the window. To do this, press the control concerned.

When the driver operates the controls for the passengers' electric windows, they must ensure that no one is preventing correct closing of the windows.


The driver must ensure that the passengers use the electric windows correctly.

Be aware of children when operating the windows.

## DOORS

### Opening

#### From outside

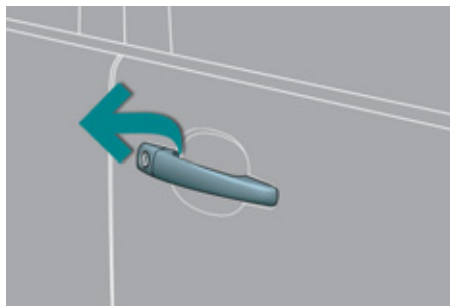

☞ After unlocking the vehicle completely using the remote control or the key, pull the door handle.

#### From inside



☞ Pull the door control (front or rear) to open the door; this unlocks this vehicle completely.



The interior door controls do not operate when the vehicle is deadlocked.

### Closing


When a door is not closed correctly:



- **when the engine is running**, this warning lamp comes on, accompanied by a message in the multifunction screen for a few seconds,
- **when the vehicle is moving** (speed higher than 6 mph (10 km/h)), this warning lamp comes on, accompanied by an audible signal and a message in the multifunction screen for a few seconds.

## Centralised locking control

System which provides full manual locking or unlocking of the doors from the inside.

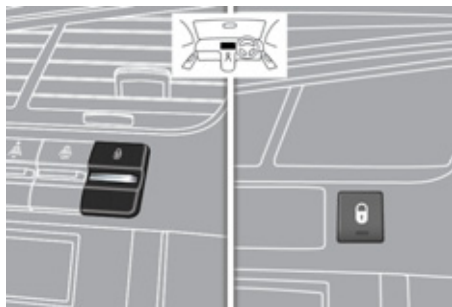

### Locking

☞ Press this button to lock the vehicle.  
The red indicator lamp in the button comes on.



If one of the doors is open, the central locking from the inside does not take place.

### Unlocking

☞ Press this button again to unlock the vehicle.  
The red indicator lamp in the button goes off.

## When locking/deadlocking from the outside

When the vehicle is locked or deadlocked from the outside, the red indicator lamp flashes and the button is inactive.

- ☞ After normal locking, pull the interior door lever to unlock the vehicle.
- ☞ After deadlocking, it is necessary to use the remote control or the key to unlock the vehicle.

## Automatic central locking

System which provides full automatic locking or unlocking of the doors and boot while driving, if they are closed correctly.

You can activate or deactivate this function.

### Activation



- ☞ Press this button for more than two seconds.



A confirmation message appears in the multifunction screen, accompanied by an audible signal.

### Deactivation

- ☞ Press this button again for more than two seconds.

A confirmation message appears in the multifunction screen, accompanied by an audible signal.

### Locking

When the speed exceeds 6 mph (10 km/h), the doors and boot lock automatically.

If one of the doors is open, the automatic central locking does not take place.

If the boot is open, the automatic central locking of the doors is active.

### Unlocking

- ☞ Above 6 mph (10 km/h), press this button to unlock the doors and boot temporarily.



In the event of an impact, the doors unlock automatically.



## Emergency control

System which locks or unlocks the doors mechanically in the event of a malfunction of the battery or of the central locking.

In the event of a fault with the central locking, you must disconnect the battery to lock the boot and so ensure the complete locking of the vehicle.


### Locking the driver's door

- ☞ Insert the key in the lock, then turn it to the right.

### Unlocking the driver's door

- ☞ Insert the key in the lock, then turn it to the left.

### Locking the front and rear passenger doors

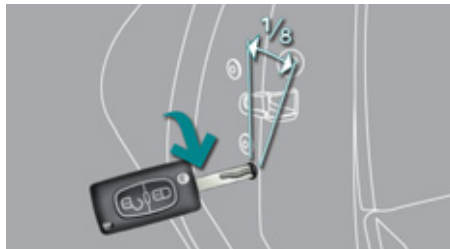


- ☞ Insert the key in the lock, located on the edge of the door, then turn it **one eighth of a turn**.

### Unlocking the front and rear passenger doors

- ☞ Pull the interior door opening control.

## BOOT

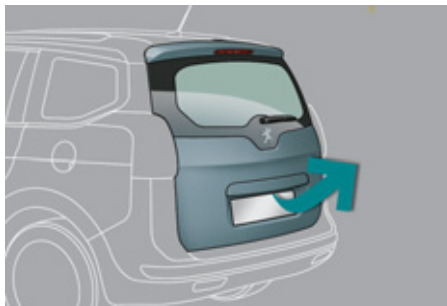

### Opening

- ☞ After unlocking the vehicle using the remote control or the key, pull the handle and raise the tailgate.



### Closing

- ☞ Lower the tailgate using the interior grab handle.

If the tailgate is not closed correctly:




- **when the engine is running**, this warning lamp comes on, accompanied by a message in the multifunction screen for a few seconds,
- **when the vehicle is moving** (speed above 6 mph (10 km/h)), this warning lamp comes on, accompanied by an audible signal and a message in the multifunction screen for a few seconds.



When selective unlocking is activated, the boot can also be opened by a second press on the open padlock on the remote control.

## Tailgate release

System allowing the mechanical unlocking of the boot in the event of a battery or central locking system malfunction.

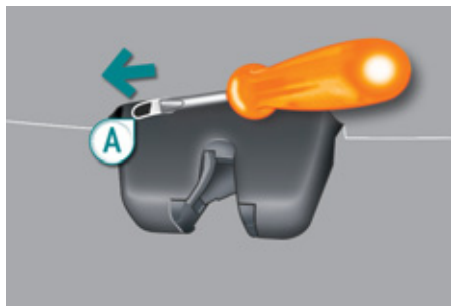

### Unlocking

- ☞ Fold back the rear seats to gain access to the lock from inside the boot.
- ☞ Insert a small screwdriver into hole **A** of the lock to unlock the tailgate.
- ☞ Move the latch to the left.

### Locking after closing

If the fault persists after closing again, the boot will remain locked.

## FUEL TANK

**Capacity of the tank: approximately 60 litres.**

### Low fuel level



When the low fuel level is reached, this warning lamp comes on in the instrument panel, accompanied by an audible signal and a message in the multifunction screen. When the lamp first comes on, there is **approximately 6 litres** of fuel remaining.

Until sufficient fuel has been added, this warning lamp appears every time the ignition is switched on, accompanied by an audible signal and a message. When driving, this audible signal and message are repeated with increasing frequency, as the fuel level drops towards "0".



You must refuel to avoid running out of fuel.

If you run out of fuel (Diesel), refer also to the "Checks" section.

### Refuelling

A label affixed to the inside of the filler flap reminds you of the type of fuel to be used according to your engine.

More than 5 litres of fuel must be added in order to be registered by the fuel gauge.

To fill the tank safely:

- ☞ **the engine must be switched off,**
- ☞ open the fuel filler flap,
- ☞ insert the key in the cap, then turn it to the left,

- ☞ remove the cap and secure it on the hook, located on the inside of the flap,
- ☞ fill the tank, but **do not continue after the 3rd cut-off of the nozzle;** this could cause malfunctions.


When refuelling is complete:

- ☞ put the cap back in place,
- ☞ turn the key to the right, then remove it from the cap,
- ☞ close the filler flap.

### Operating fault

A malfunction of the fuel gauge is indicated by the return to zero of the fuel gauge needle.

Have it checked by a PEUGEOT dealer or a qualified workshop.

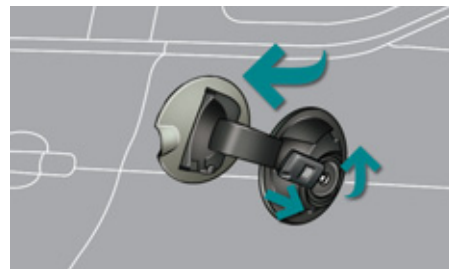

The key cannot be removed from the lock until the cap is put back on the tank.

Opening the cap may trigger an in-rush of air. This vacuum, which is completely normal, is caused by the sealing of the fuel system.



With Stop & Start, never refuel with the system in STOP mode; you must switch off the ignition with the key.

## Quality of the fuel used for petrol engines

SP95  
E10

SP98

The petrol engines are perfectly compatible with E10 or E24 type petrol biofuels (containing 10 % or 24 % ethanol), conforming to European standards EN 228 and EN 15376.

E85 type fuels (containing up to 85 % ethanol) are reserved exclusively for vehicles marketed for the use of this type of fuel (BioFlex vehicles). The quality of the ethanol must comply with European standard EN 15293.

For Brazil only, special vehicles are marketed to run on fuels containing up to 100 % ethanol (E100 type).

## Quality of the fuel used for Diesel engines

DIESEL

The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester).

The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Contact a PEUGEOT dealer or a qualified workshop.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).

## Travelling abroad


As Diesel fuel pump nozzles may be different in other countries, the presence of the misfuel prevention device may make refuelling impossible.

Before travelling abroad, we recommend that you check with the PEUGEOT dealer network, whether your vehicle is suitable for the fuel pumps in the country in which you want to travel.

## MISFUEL PREVENTION\*

Mechanical device which prevents filling the tank of a Diesel vehicle with petrol. It avoids the risk of engine damage that can result from filling with the wrong fuel.

Located in the filler neck, the misfuel prevention device appears when the filler cap is removed.

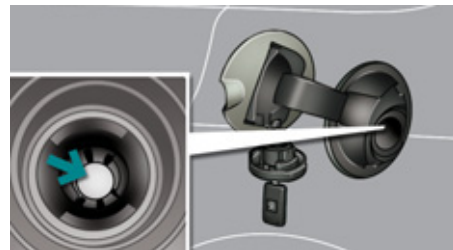

## Operation

When a petrol filler nozzle is introduced into the fuel filler neck of your Diesel vehicle, it comes into contact with the flap. The system remains closed and prevents filling.

**Do not persist but introduce a Diesel type filler nozzle.**



It is still possible to use a fuel can to fill the reservoir.

In order to ensure a good flow of fuel, do not place the nozzle of the fuel can in direct contact with the flap of the misfuel prevention device.

\* According to destination country.

## LIGHTING CONTROLS

System for selection and control of the various front and rear lamps providing the vehicle's lighting.

### Main lighting

The various front and rear lamps of the vehicle are designed to adapt the lighting progressively in relation to the climatic conditions and so improve the driver's visibility:

- sidelamps, to be seen,
- dipped beam headlamps to see without dazzling other drivers,
- main beam headlamps to see clearly when the road is clear,
- directional headlamps for improved visibility when cornering.

### Additional lighting

Other lamps are installed to fulfil the requirements of particular driving conditions:


- a rear foglamp to be seen from a distance,
- front foglamps for even better visibility,
- daytime running lamps to be seen during the day.

### Programming


Various automatic lighting control modes are also available according to the following options:

- guide-me-home lighting,
- automatic lighting,
- directional headlamps.

#### Model without AUTO lighting

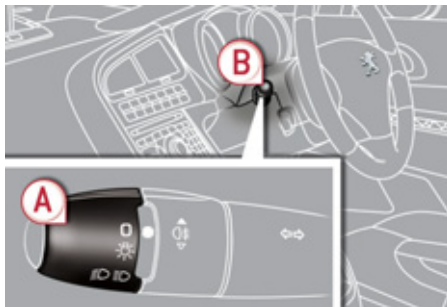

#### Model with AUTO lighting

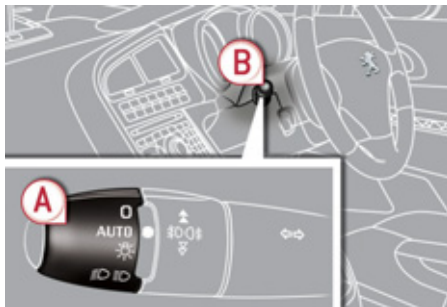


## Manual controls

The lighting is controlled directly by the driver by means of the ring **A** and the stalk **B**.

**A.** Main lighting mode selection ring: turn it to position the symbol required facing the mark.

**O** Lamps off.

**AUTO** Automatic illumination of headlamps.

 Sidelamps.

 Dipped headlamps or main beam headlamps.


**B.** Stalk for switching headlamps: pull the stalk towards you to switch the lighting between dipped and main beam headlamps.

In the lamps off and sidelamps modes, the driver can switch on the main beam headlamps temporarily ("headlamp flash") by maintaining a pull on the stalk.

### Displays

Illumination of the corresponding indicator lamp in the instrument panel confirms that the lighting selected is on.

### Model with rear foglamp only

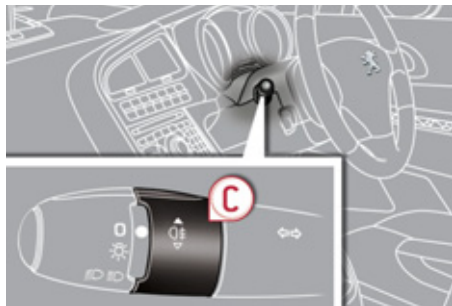

### Model with front and rear foglamps



### C. Fog lamps selection ring.



rear foglamp

This operates with the dipped beam headlamps and main beam headlamps.

- ☞ To switch on the foglamp, turn the ring **C** forwards.
- ☞ To switch off the foglamp, turn the ring **C** rearwards.

When the lighting is switched on automatically (with AUTO model), the dipped headlamps and sidelamps remain on until the rear foglamp is switched off.



front and rear foglamps

The rear foglamp operates with the dipped beam and main beam headlamps.

The front foglamps also operate with the sidelamps.

- ☞ To switch on the rear foglamp, turn the ring **C** forwards.
- ☞ To switch on the front foglamps, turn the ring **C** forwards again.
- ☞ To switch off the rear foglamp, turn the ring **C** rearwards.
- ☞ To switch off the front foglamps, turn the ring **C** rearwards again.

When the lighting is switched on automatically (with AUTO model), the dipped headlamps and sidelamps remain on until the rear foglamp is switched off.

When the lighting is switched off automatically (with AUTO model) or when the dipped headlamps are switched off manually, the foglamps and the sidelamps will remain on.



In good or rainy weather, by both day and night, the front foglamps and the rear foglamp are prohibited. In these situations, the power of their beams may dazzle other drivers.

Do not forget to switch off the front foglamps and the rear foglamp when they are no longer necessary.

### Lighting on audible warning

When the ignition is switched off, all of the lamps switch off automatically, unless guide-me-home lighting is activated.

If the lighting is switched on manually after switching off the ignition, there is an audible signal when a front door is opened to warn the driver that they have forgotten to switch off the vehicle's lighting, with the ignition off.



In some weather conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

## Daytime running lamps

System which permits switching on of the special lamps at the front (low power), so that you can be seen during the daytime.

The daytime running lamps come on automatically when the vehicle is started, if fitted\*.

The instruments and controls (multi-function screen, air conditioning control panel, ...) are not lit, except when the lighting is switched on manually or automatically.

### Programming



In countries in which this function is not imposed by regulations, you can activate or deactivate it via the multifunction screen configuration menu.

In countries in which it is imposed by regulations:

- by default, this function is activated,
- the sidelamps and the number plate lamps are also switched on\*.

\* According to country.

## Manual guide-me-home lighting

Temporarily keeping the dipped beam headlamps on after the vehicle's ignition has been switched off makes the driver's exit easier when the light is poor.



### Switching on

- ☞ With the ignition off, "flash" the headlamps using the lighting stalk.
- ☞ A further "headlamp flash" switches the function off.

### Switching off

The manual guide-me-home lighting switches off automatically after a set time.

## EXTERIOR WELCOME LIGHTING

The remote switching on of the lighting makes your approach to the vehicle easier in poor light. It is activated according to the level of light detected by the sunshine sensor.

### Switching on



- ☞ Press the open padlock on the remote control.

The dipped beam headlamps and the sidelamps come on; your vehicle is also unlocked.

### Switching off

The exterior welcome lighting switches off automatically after a set time, when the ignition is switched on or on locking the vehicle.

### Programming



The lighting duration is selected via the vehicle configuration menu.



The duration of the welcome lighting is associated with and identical to that of the automatic guide-me-home lighting.



## Automatic illumination of headlamps

The sidelamps and dipped beam headlamps are switched on automatically, without any action on the part of the driver, when a low level of external light is detected or in certain cases of activation of the windscreen wipers.

As soon as the brightness returns to a sufficient level or after the windscreen wipers are switched off, the lamps are switched off automatically.



### Activation

- Turn the ring to the **"AUTO"** position. The automatic illumination of headlamps is accompanied by a message in the screen.

### Deactivation

- Turn the ring to another position. Deactivation is accompanied by a message in the screen.

## Associated with the automatic "Guide-me-home" lighting

Association with the automatic lighting provides the "guide-me-home" lighting with the following additional options:

- selection of the lighting duration of 15, 30 or 60 seconds in the vehicle parameters in the vehicle configuration menu,
- automatic activation of "guide-me-home" lighting when automatic illumination of headlamps is in operation.

### Operating fault



In the event of a malfunction of the sunshine sensor, the lighting comes on, this warning lamp is displayed in the instrument panel and/or a message appears in the screen, accompanied by an audible signal.

Contact a PEUGEOT dealer or a qualified workshop.



In fog or snow, the sunshine sensor may detect sufficient light. In this case, the lighting will not come on automatically.

Do not cover the sunshine sensor, coupled with the rain sensor and located in the centre of the windscreen behind the rear view mirror; the associated functions would no longer be controlled.

## MANUAL ADJUSTMENT OF HALOGEN HEADLAMPS



To avoid causing a nuisance to other road users, the height of the halogen headlamps should be adjusted according to the load in the vehicle.


- 1 or 2 people in the front seats.
- 3 people.
- 5 people.
- Intermediate setting.
- 5 people + maximum authorised load.
- Intermediate setting.
- Driver + maximum authorised load.



The initial setting is position **"0"**.



## AUTOMATIC ADJUSTMENT OF THE XENON HEADLAMPS

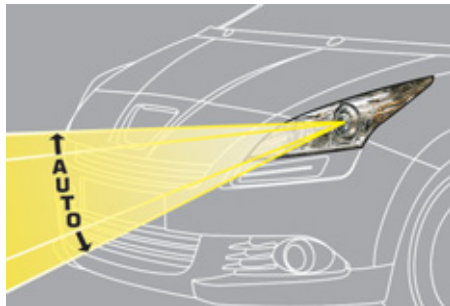

In order to avoid causing a nuisance to other road users, this system corrects the height of the xenon headlamps beam automatically and when stationary, in relation to the load in the vehicle.



If a malfunction occurs, this warning lamp is displayed on the instrument panel, accompanied by an audible signal and a message on the multifunction screen.

The system then places your headlamps in the lowest position.



If a malfunction occurs, do not touch the xenon bulbs. Contact a PEUGEOT dealer or a qualified workshop.

## DIRECTIONAL LIGHTING

When the dipped or main beam headlamps are on, this function enables the light beams to provide improved lighting of the side of the road when cornering.

The use of this function, from approximately 12 mph (20 km/h) and associated with the xenon headlamps only, considerably improves the quality of your lighting when cornering.

### with directional lighting



### without directional lighting



## Programming



The function is activated or deactivated via the vehicle configuration menu.

## Operating fault



If a fault occurs, this warning lamp flashes in the instrument panel, accompanied by a message in the screen.

Contact a PEUGEOT dealer or a qualified workshop.



When stationary or moving at very low speed or when reverse gear is engaged, the function is inactive.

The status of the function remains in the memory when the ignition is switched off.

## WIPER CONTROLS

System for selection and control of the various front and rear wiping modes for the elimination of rain and cleaning.


The vehicle's front and rear wipers are designed to improve the driver's visibility progressively according to the climatic conditions.

### Programming


Various automatic wiper control modes are also available according to the following options:

- automatic rain sensitive windscreen wipers,
- rear wiping on engaging reverse gear.

### Model with intermittent wiping

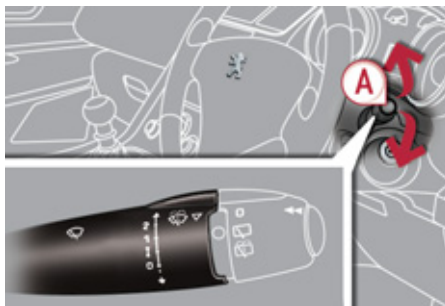

### Model with AUTO wiping

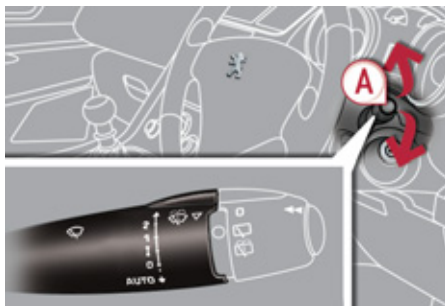

## Manual controls

The wiper commands are issued directly by the driver by means of the stalk **A** and the ring **B**.


### Windscreen wipers

A. Wiping speed selection stalk:




- 2** fast (heavy rain),
- 1** normal (moderate rain),
- I** intermittent (proportional to the speed of the vehicle),
- 0** park,
- ↓** single wipe (press down and release),
- or

**AUTO ↓** automatic, then single wipe (see following page).
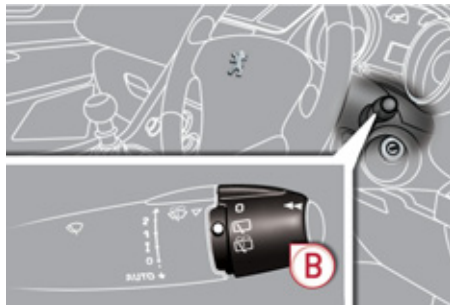
## Rear wiper



## B. Rear wiper selection ring:

-  park,
-  intermittent wipe,
-  wash-wipe (set duration).

## Reverse gear

When reverse gear is engaged, the rear wiper will come into operation if the windscreen wipers are operating.

## Programming




The function is activated or deactivated via the multi-function screen configuration menu.

This function is activated by default.



If a significant accumulation of snow or ice is present, or when using a bicycle carrier on the boot, deactivate the automatic rear wiper via the multifunction screen configuration menu.

## Windscreen and headlamp wash

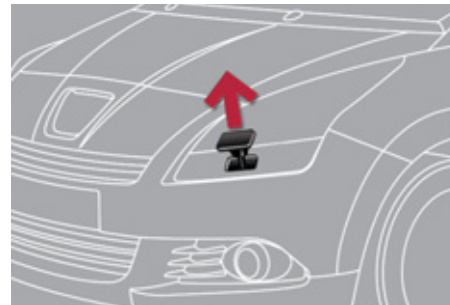

Pull the windscreen wiper stalk towards you. The windscreen wash then the windscreen wipers operate for a fixed period.

The headlamp washers only operate when the **dipped beam headlamps are on**.

## Screenwash/headlamp wash low level




In the case of vehicles fitted with headlamp washers, when the minimum level of the reservoir is reached, this warning lamp is displayed in the instrument panel, accompanied by an audible signal and a message in the multifunction screen.

The warning lamp is displayed when the ignition is switched on, or every time the stalk is operated, until the reservoir is refilled.

Next time you stop, refill the screenwash/headlamp wash reservoir.

## Automatic rain sensitive windscreen wipers


The windscreen wipers operate automatically, without any action on the part of the driver, if rain is detected (sensor behind the rear view mirror), adapting their speed to the intensity of the rainfall.

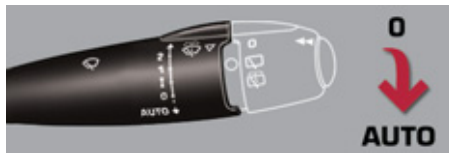

### Activation

This is controlled manually by the driver by pushing the stalk downwards to the "AUTO" position.

It is accompanied by a message in the screen.

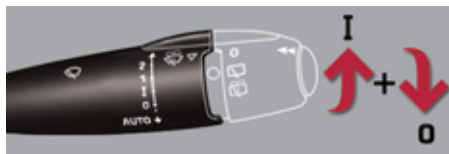

### Switching off

This is controlled manually by the driver by moving the stalk upwards then returning it to position "0".

It is accompanied by a message in the screen.



The automatic rain sensitive wipers must be reactivated if the ignition has been off for more than one minute, by pushing the stalk downwards.

### Operating fault

If an automatic wiping malfunction occurs, the wipers will operate in intermittent mode.

Have it checked by a PEUGEOT dealer or a qualified workshop.



Do not cover the rain sensor, linked with the sunshine sensor and located in the centre of the windscreen behind the rear view mirror.

Switch off the automatic rain sensitive wipers when using an automatic car wash.

In winter, to avoid damaging the wiper blades, it is advisable to wait until the windscreen is completely clear of ice before activating the automatic rain sensitive wipers.

## Special position of the windscreen wipers



This position permits release of the windscreen wiper blades.

It is used for cleaning or replacement of the blades. It can also be useful, in winter, to detach the blades from the windscreen.


- ☞ Any action on the wiper stalk immediately after switching off the ignition places the blades vertically on the screen.
- ☞ To park the blades again, switch on the ignition and operate the wiper stalk.



To maintain the effectiveness of the "flat-blade" type of wiper blades, it is advisable to:

- handle them with care,
- clean them regularly using soapy water,
- avoid using them to retain cardboard on the windscreen,
- replace them at the first signs of wear.

## COURTESY LAMPS

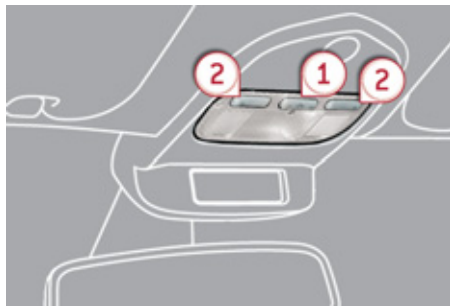

1. Front courtesy lamp
2. Map reading lamps



3. Rear courtesy lamp

### Front and rear courtesy lamps



In this position, the courtesy lamp comes on gradually:

- when the vehicle is unlocked,
- when the key is removed from the ignition,
- when a door is opened,
- when the remote control locking button is activated, in order to locate your vehicle.

It switches off gradually:

- when the vehicle is locked,
- when the ignition is switched on,
- 30 seconds after the last door is closed.



Permanently off.



Permanent lighting.



With the permanent lighting mode, the lighting time varies according to the circumstances:

- with the ignition off, approximately ten minutes,
- in energy economy mode, approximately thirty seconds,
- with the engine running, unlimited.



When the front courtesy lamp is in the "permanent lighting" position, the rear courtesy lamp will also come on, unless it is in the "permanently off" position.

To switch off the rear courtesy lamp, place it in the "permanently off" position.


### Map reading lamps

- ☞ With the ignition on, press the corresponding switch.



Take care not to place anything in contact with the courtesy lamps.

## DOOR MIRROR SPOTLAMPS

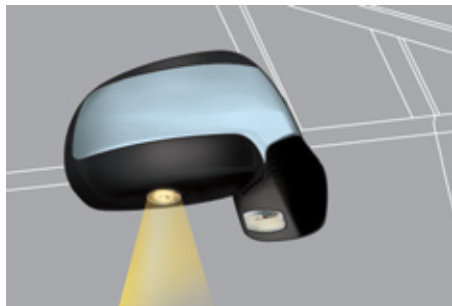

To make your approach to the vehicle easier, these illuminate:

- the zones facing the driver's and passenger's doors,
- the zones forward of the door mirrors and rearward of the front doors.

### Switching on

The spotlamps come on:

- when you unlock the vehicle,
- when you remove the key from the ignition,
- when you open a door,
- when you use the remote control.

### Switching off

They are timed to go off automatically.

## INTERIOR WELCOME LIGHTING

The remote switching on of the passenger compartment lighting makes your approach to the vehicle easier in poor light. It operates with the automatic illumination of headlamps.

### Switching on

- ☞ Press the open padlock on the remote control.

The courtesy lamps come on; your vehicle is also unlocked.

### Switching off

The interior welcome lighting switches off automatically after a set time or when one of the doors is opened.

### Programming



The function is activated or deactivated via the multi-function screen configuration menu.



The duration of the welcome lighting is associated with and identical to that of the automatic guide-me-home lighting.

## INTERIOR MOOD LIGHTING

The dimmed passenger compartment lighting improves visibility in the vehicle when the light is poor.



### Switching on

At night, the front courtesy lamp mood lamp **A** comes on automatically when the sidelamps are switched on.

### Switching off

The interior mood lighting switches off automatically when the sidelamps are switched off.

## FOOTWELL LIGHTING



The soft lighting provided by the footwell lamps improves visibility in the vehicle when the light is poor.

### Activation

Its operation is identical to that of the courtesy lamps. The lighting comes on when one of the doors is opened.

## BOOT LAMP



This comes on automatically when the boot is opened and switches off automatically when the boot is closed.

## TORCH



Portable lamp, fitted in the boot wall, which can be used to light the boot or as a torch.



For the torch function, refer to the "Fittings - § Torch" section.



Different lighting times are available:

- when the ignition is off, approximately ten minutes,
- in energy economy mode, approximately thirty seconds,
- when the engine is running, no limit.

### Operation

Once engaged firmly in its location, it comes on automatically when the boot is opened and switches off automatically when the boot is closed.

It operates with NiMH type rechargeable batteries.


It has a battery life of approximately 45 minutes and recharges while you are driving.



Observe the polarities when fitting the rechargeable batteries.

Never replace the rechargeable batteries with normal single-use batteries.



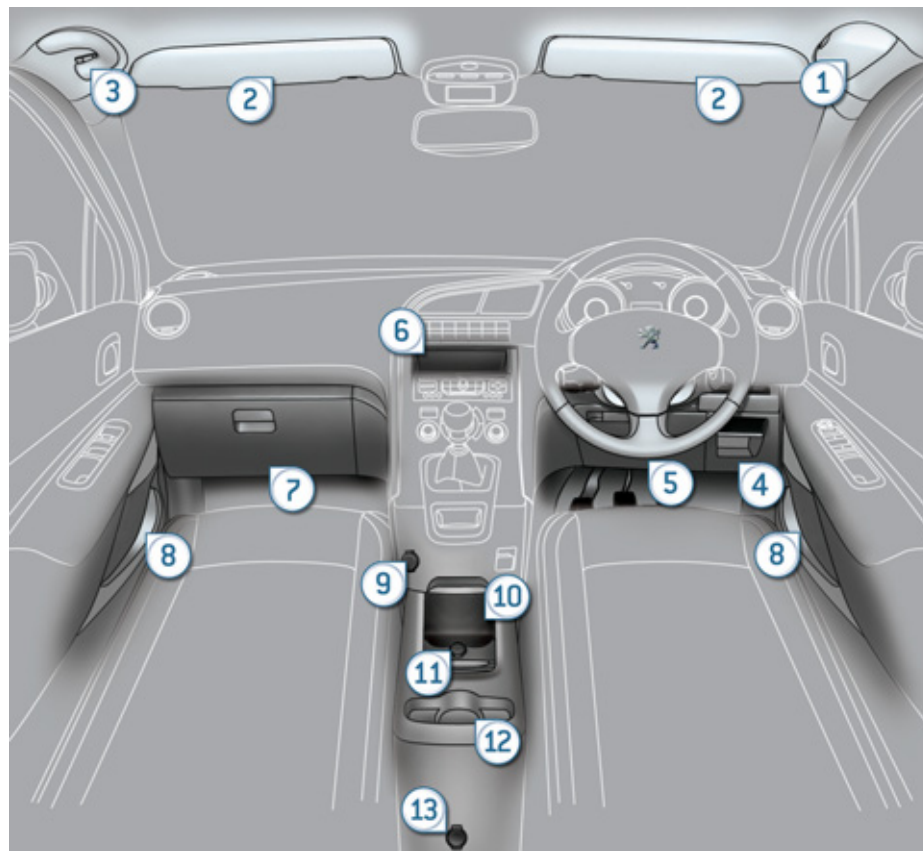


## INTERIOR FITTINGS

1. Spectacles storage
2. Sun visor
3. Grab handle with coat hook
4. Storage compartment
5. Storage compartment under the steering wheel
6. Storage compartment
7. Illuminated glove box
8. Door pockets
9. Front 12 V accessory socket (120 W)
10. Storage compartment
11. Peugeot Connect USB
12. Cup holder
13. Rear 12 V accessory socket (120 W)



## SUN VISOR

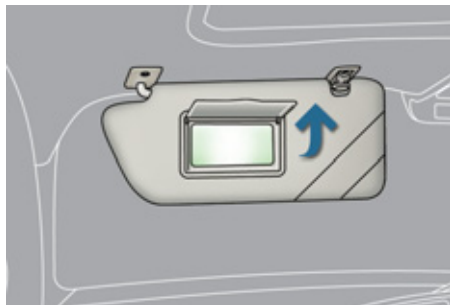


Component which protects against sunlight from the front or the side, also equipped with an illuminated courtesy mirror.

☞ With the ignition on, raise the concealing flap; the mirror is lit automatically.

This sun visor is also equipped with a ticket holder.

## DRIVER'S STORAGE COMPARTMENTS

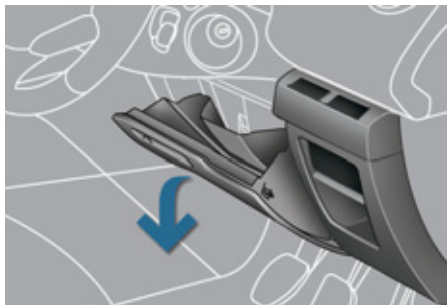

### Storage box

This has storage areas for the handbook pack, ...

☞ To open, pull the handle then tilt the box.

### Card holder

This can be used for a toll payment ticket or parking card, for example.

### Coin storage

### Storage

## ILLUMINATED GLOVE BOX



This has storage areas, audio sockets for a portable player and a location for the SIM card (only with Peugeot Connect Media), ...

☞ To open the glove box, raise the handle.

The lamp comes on when the lid is opened.




To connect a portable player or a SIM card, refer to the "Audio and telematics" section.

## CENTRE CONSOLE


Storage device for the driver and front passenger.

### Storage

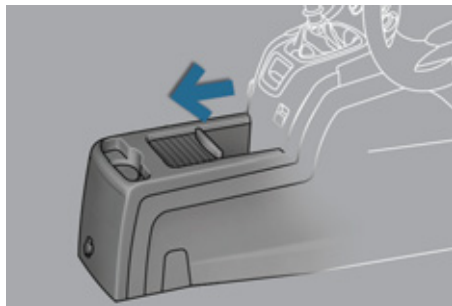

- Slide the cover for access to the 10.5 litre storage compartment. This can contain 2 half-litre bottles. A ventilation outlet distributes cooled air.

## PEUGEOT CONNECT USB

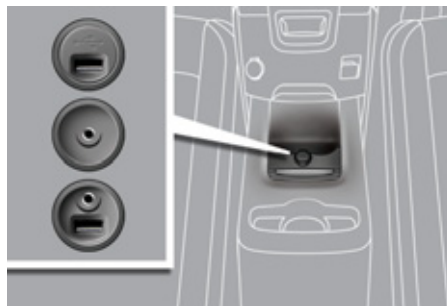

This connection box consists of a jack auxiliary socket and/or a USB port.


It permits the connection of portable equipment, such as a digital audio player of the iPod® type or a USB memory stick.

It reads the audio file formats (mp3, ogg, wma, wav...) which are transmitted to your audio equipment and played via the vehicle's speakers.

You can manage these files using the steering mounted controls or the audio equipment control panel and display them on the multifunction screen.

When it is in use, the portable equipment charges automatically.

## 12 V ACCESSORY SOCKETS

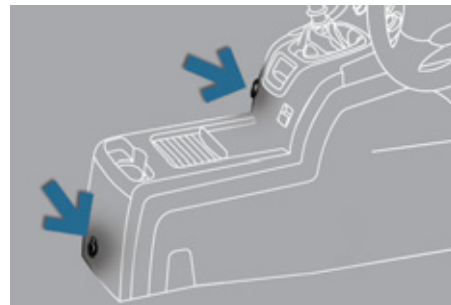


- To connect a 12 V accessory (max power: 120 Watts), remove the cover and connect a suitable adaptor. Exceeding the maximum power could result in damage to your accessory.



For more information on the use of this equipment, refer to the Peugeot Connect Sound part of the "Audio and Telematics" section.

## MATS

Removable carpet protection.

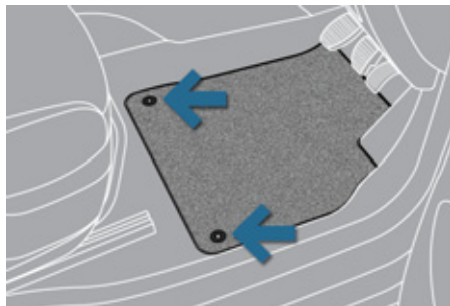

### Fitting

When fitting the mat for the first time, on the driver's side use only the fixings provided in the wallet attached.

The other mats are simply placed on the carpet.

### Removal

To remove the mat on the driver's side:

- ☞ move the seat as far back as possible,
- ☞ unclip the fixings,
- ☞ remove the mat.

## Refitting

To refit the mat on the driver's side:

- ☞ position the mat correctly,
- ☞ refit the fixings by pressing,
- ☞ check that the mat is secured correctly.




To avoid any risk of jamming of the pedals:

- only use mats which are suited to the fixings already present in the vehicle; these fixings must be used,
- never fit one mat on top of another.

The use of mats not approved by PEUGEOT may interfere with access to the pedals and hinder the operation of the cruise control/speed limiter.

## "AIRCRAFT" TYPE TABLES

Installed on the back of each front seat, these allow you to set down objects.

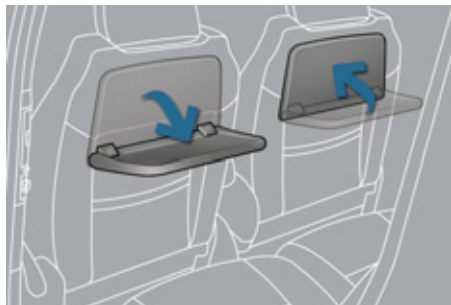


- ☞ To use the table, lower it fully until it locks in the low position.
- ☞ To store the table, raise it, passing the point of resistance, to the high position.



On the passenger side, do not forget to fold the "aircraft" type table before placing the seat in the table position.

Do not place hard or heavy objects on the table. They could become dangerous projectiles in the event of emergency braking or impact.

## STORAGE COMPARTMENTS UNDER THE REAR FOOTWELLS

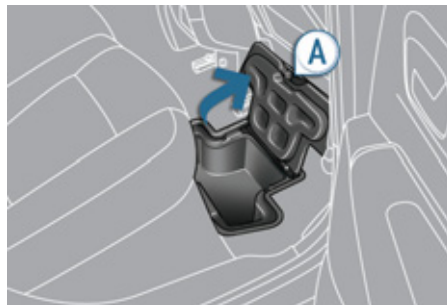

Depending on the configuration, the vehicle has storage compartments under the footwells, located forward of the outer rear seats. Access is via clipped flaps with a handle **A**.

## STORAGE DRAWER




It is located under the driver's seat (manual adjustment).

### Opening

- ☞ Raise the front of the drawer and pull it.

Do not place heavy objects in the drawers.

## REAR MULTIMEDIA

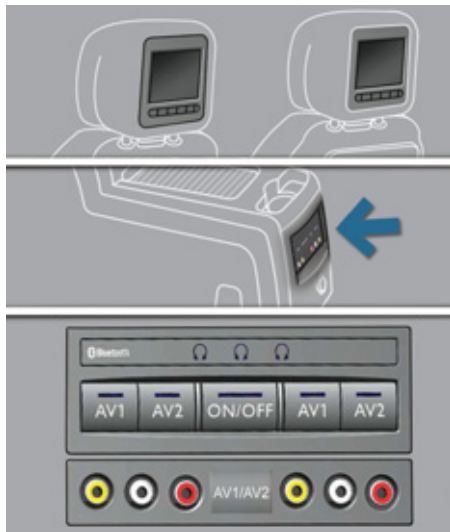

Multimedia system permitting the connection of any external portable system: iPod Video, games consoles, DVD player, ...



Two separate **video** sources can be connected via the RCA connectors (yellow).



The video is displayed in two 7" screens, integrated in the head restraints.



Two separate **audio** sources can be connected via the RCA connectors (red and white).



The audio is heard through two wireless headphones with Bluetooth technology which operate with rechargeable batteries.


The **A/B** button allows you to pair the headphones with the screen: **A** left-hand side, **B** right-hand side.

You have a 12 V charger with two outputs permitting simultaneous charging of both headphones.

It is also possible to connect a 3rd set of Bluetooth headphones.

### Set-up

- ☞ With the engine running, connect your portable system to the RCA connectors (e.g. with AV1 on the left).
- ☞ Press the system's ON/OFF button, the indicator lamp comes on and the AV1 indicator lamps come on.
- ☞ Press and hold the ON/OFF button on the headphones, the indicator lamp on the headphones flashes in blue.
- ☞ Press and hold the system's ON/OFF button, the pairing with the headphones is complete when the blue indicator lamps on the headphones and on the system (in the shape of headphones) are on continuously.
- ☞ Press the ON/OFF buttons in the screens if you have a video source.
- ☞ Start playing your portable system.

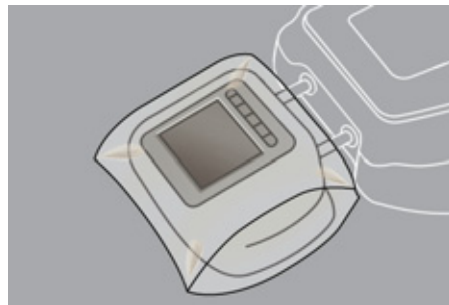

If your seat is in the table position, position a cover to avoid damaging the screen.




These covers also conceal each screen.

## PANORAMIC SUNROOF

Component which has a tinted glass panoramic surface to increase the light and visibility in the passenger compartment.

Fitted with an electric blind in several sections to improve temperature and noise related comfort.

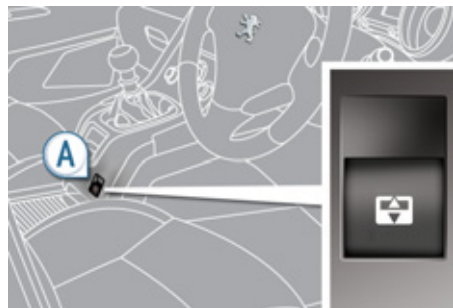

### One-touch electric blind

There are two options for opening and closing:

#### - manual mode

- ☞ Pull or press control **A** gently.  
The blind stops when you release the control.



#### - automatic mode

- ☞ Pull or press control **A** firmly.  
One press opens or closes the blind completely.  
Pressing the control again stops the blind.

### Safety anti-pinch

In automatic mode and at the end of its travel, if the blind meets an obstacle while closing it stops and moves back slightly.



**Reinitialisation:** if the blind's supply is cut off while it is moving, the safety anti-pinch must be reinitialised:

- ☞ press the control until the blind is fully closed,
- ☞ continue to press for at least 3 seconds. A slight movement of the blind will then be noticeable, confirming the reinitialisation.

If the blind re-opens during a closing manoeuvre, and immediately after it stops:

- ☞ pull the control until the blind is fully open,
- ☞ press the control until the blind is fully closed.

**The safety anti-pinch function is not operational during these operations.**




If the blind meets an obstacle during operation, you must reverse the movement of the blind. To do this, press the control concerned.

When the driver operates the blind control, he must ensure that no one is preventing correct closing of the blind.


The driver must ensure that passengers use the blind correctly.

Be aware of children when operating the blind.

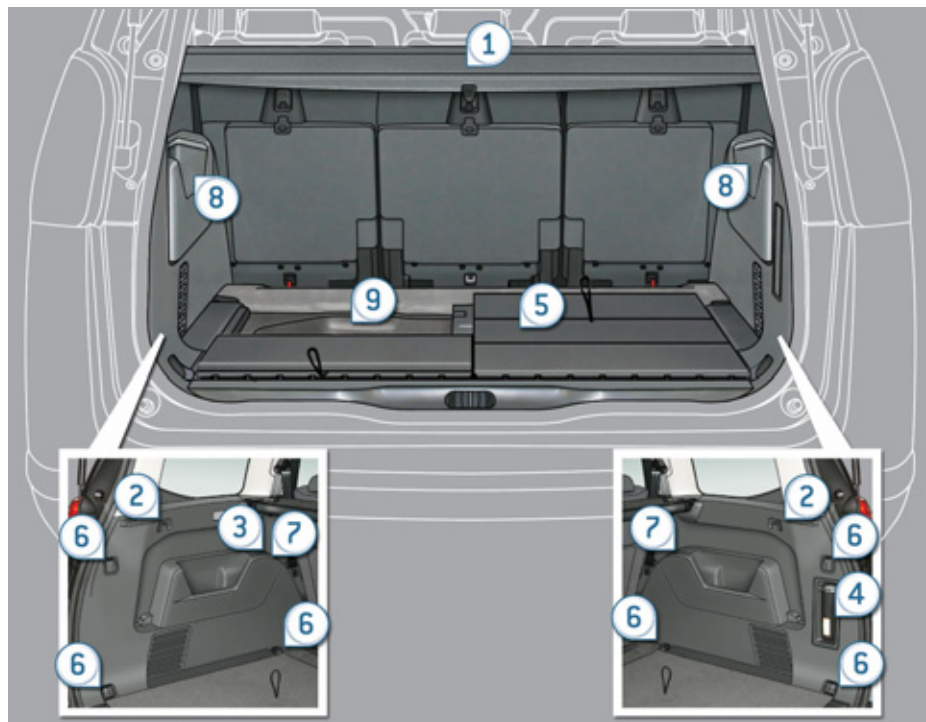

## BOOT FITTINGS (5 SEAT VERSION)

1. Load space cover
2. Hooks
3. 12 V accessory socket (120 W)
4. Torch
5. Concertina boards
6. Stowing rings on the floor
7. Cup holder
8. Storage compartments or audio amplifier
9. Storage compartment under the floor

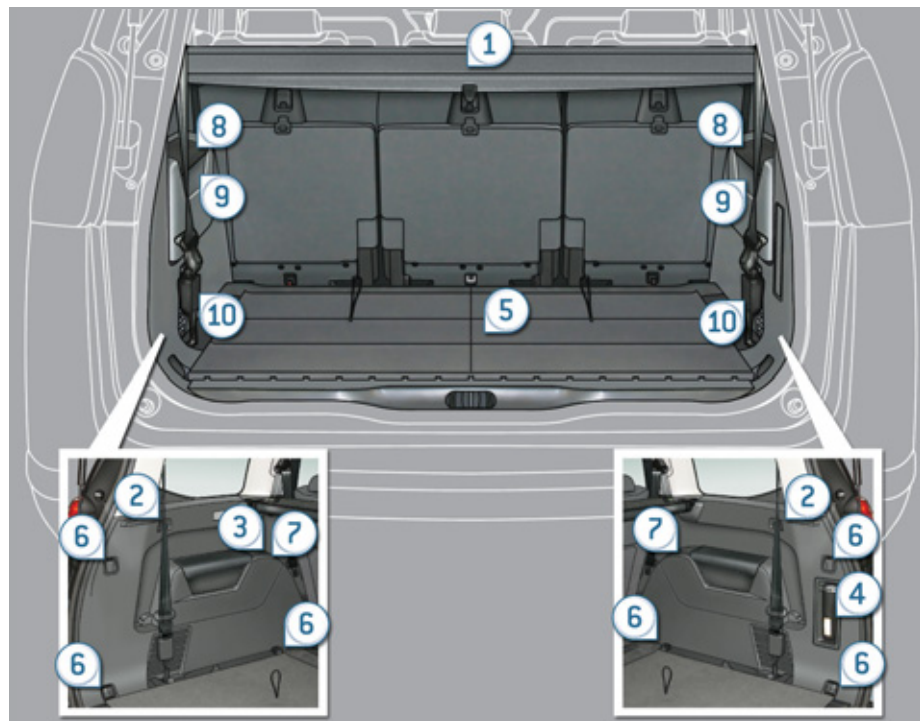

## BOOT FITTINGS (7 SEAT VERSION)


1. Load space cover
2. Hooks
3. 12 V accessory socket (120 W)
4. Torch
5. Concertina boards
6. Stowing rings on the floor
7. Cup holder
8. Armrests
9. Storage compartments or audio amplifier
10. 3rd row seat belt buckles



## Roller load space cover

To remove the load space cover:

- ☞ remove the load space cover guides from the rails on the boot pillars,
- ☞ reel in the load space cover in its roller,


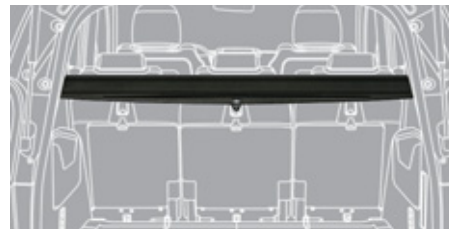


- ☞ pivot the ends of the roller upwards to release it,
- ☞ remove the roller from its support.



To store the load space cover, roller uppermost and flap facing towards the inside of the vehicle:

- ☞ place the right-hand end in its housing,
- ☞ slide the left-hand end into the guide then into its housing,

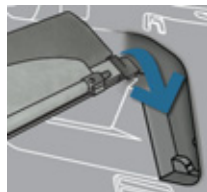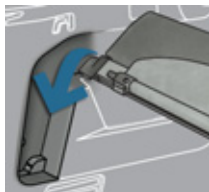

- ☞ secure the assembly by pivoting the ends downwards.



To install the load space cover:

- ☞ position one of the ends of the roller in its support,
- ☞ insert the second end in its support,
- ☞ pivot the ends of the roller downwards to secure it,
- ☞ reel out the load space cover to the boot pillars,
- ☞ insert the load space screen guides in the rails on the boot pillars.



If you use the 3rd row seats (7 seat version), it is essential to store the roller in its housing.



The roller has two rings for fixing the luggage retaining net depending on its location.



## High load retaining net\*

Hooked onto the special upper and lower fixings, this permits use of the entire loading volume up to the roof:

- behind the front seats (row 1) when the rear seats are folded.
- behind the rear seats (row 2).




When positioning the net, check that the strap loops are visible from the boot; this will make slackening or tightening easier.

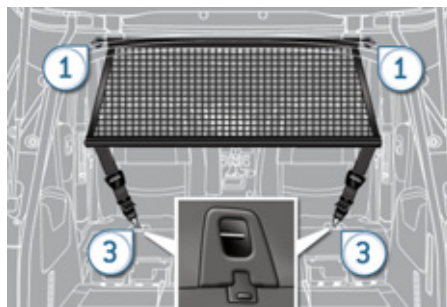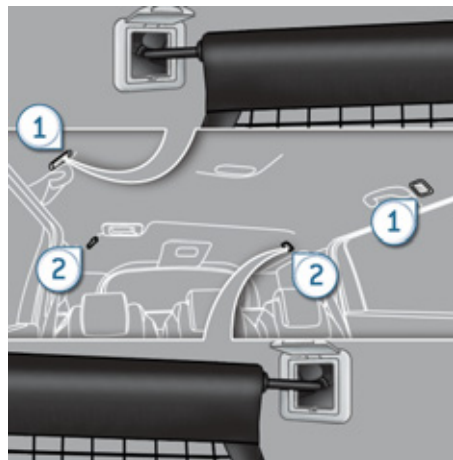

To use it in row 1:

- ☞ fold the rear seats,
- ☞ open the covers of the upper fixings 1,
- ☞ unroll the high load retaining net,
- ☞ position one of the ends of the net's metal bar in the corresponding upper fixing 1, then do the same with the other end,
- ☞ slacken the straps fully,
- ☞ fix the snap hook of each of the straps on the corresponding Top Tether ring 3 (located on the back of the folded rear side seats),
- ☞ tighten the straps,
- ☞ check that the net is hooked and tightened correctly.

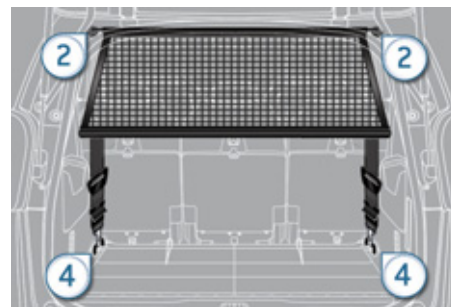

To use it in row 2:


- ☞ roll up or remove the load space screen,
- ☞ open the covers of the upper fixings 2,
- ☞ unroll the high load retaining net,
- ☞ position one of the ends of the net's metal bar in the corresponding upper fixing 2, then do the same with the other end,
- ☞ fix the snap hook of each of the straps in the corresponding stowing ring 4,
- ☞ tighten the straps,
- ☞ check that the net is hooked and tightened correctly.

\* If your vehicle is equipped with this.


## Luggage retaining net

Hooked onto the stowing rings on the floor and/or on the load space cover roller, the luggage retaining net available as an accessory enables you to secure your luggage.


There are 4 possible positions:

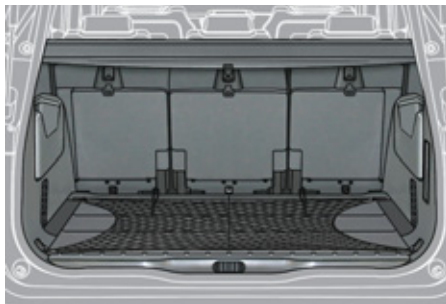

- flat at the bottom of the boot,

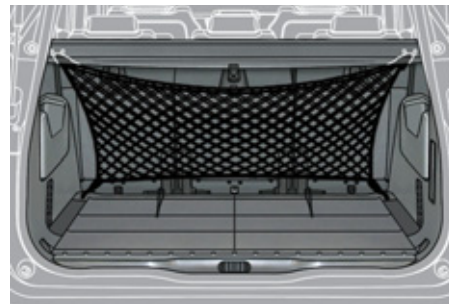

- vertical at the back of the rear seats,

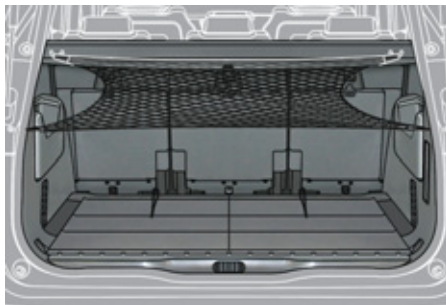

- horizontal, level with the load space cover,



- flat at the bottom of the boot and vertical at the back of the rear seats.

## Hooks




The hooks permit the securing of shopping bags.

## 12 V accessory socket



- ☞ To connect a 12 V accessory (max power: 120 W), remove the cap and connect an appropriate adaptor.
- ☞ Turn the key to the ignition position.

## Storage box (5 seat version)

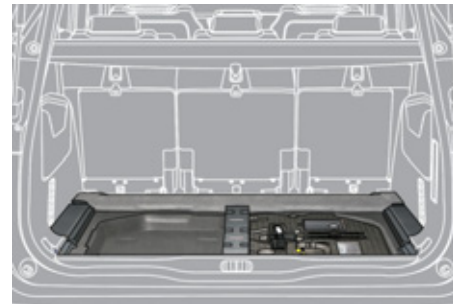

- ☞ Raise the concertina board to gain access to the storage box.

Depending on the configuration, this has areas for storing:

- a box of spare bulbs,
- a first aid kit,
- a tyre repair kit,
- two warning triangles,
- ...

## Torch

This is a removable lamp, fitted in the boot wall, which can be used to illuminate the boot or as a torch.



For the boot lighting function, refer to the "Visibility - § Boot lamp" section.



### Operation


This torch operates with NIMH type rechargeable batteries.

It has a battery life of approximately 45 minutes and charges while you are driving.



Observe the polarities when fitting the batteries.

Never replace the rechargeable batteries with normal single-use batteries.

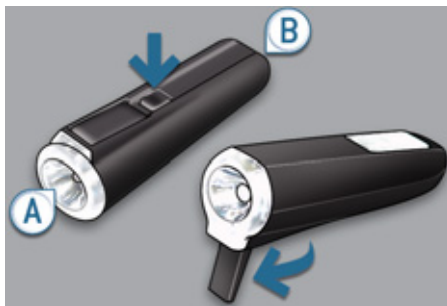

### Use

- ☞ Extract the torch from its location pulling the side of the torch **A**.
- ☞ Press the switch, located on the back, to switch the torch on or off.
- ☞ Unfold the support, located on the back, to set down and raise the torch; for example, when changing a wheel.

### Storing

- ☞ Put the torch back in place in its location starting with the narrow part **B**. If you have forgotten to switch off the torch, this switches it off automatically.



If the torch is not engaged correctly, it may not charge and may not come on when the boot is opened.

## Rear side blinds

Fitted on the rear windows, these protect your young children from the sun.

### 2nd row



### 3rd row (7 seat version)

- ☞ Pull the blind by the central tab.
- ☞ Position the blind attachment on the hook.

## GENERAL POINTS RELATING TO CHILD SEATS

Although one of PEUGEOT's main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please observe the following recommendations:

- in accordance with European regulations, **all children under the age of 12 or less than one and a half metres tall must travel in approved child seats suited to their weight**, on seats fitted with a seat belt or ISOFIX mountings\*,
- **statistically, the safest seats in your vehicle for carrying children are the rear seats**,
- **a child weighing less than 9 kg must travel in the "rearwards-facing" position both in the front and in the rear.**



**PEUGEOT recommends** that children should travel in the **outer rear seats** of your vehicle:

- **"rearwards-facing"** up to the age of 2,
- **"forwards-facing"** over the age of 2.

\* The rules for carrying children are specific to each country. Refer to the legislation in force in your country.

## CHILD SEAT IN THE FRONT

### "Rearwards-facing"

When a "rearwards-facing" child seat is installed on the **front passenger seat**, it is essential that the passenger airbag is deactivated. Otherwise, **the child would risk being seriously injured or killed if the airbag were to inflate.**



### "Forwards-facing"

When a "forwards-facing" child seat is installed on the **front passenger seat**, adjust the vehicle's seat to the fully back and highest position with the seat back upright and leave the passenger's airbag activated.



**Passenger seat in the fully back and highest position.**




Ensure that the seat belt is correctly tensioned.






### Passenger airbag OFF

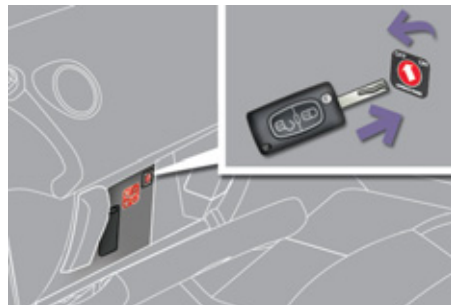

Refer to the advice given on the label present on both sides of the passenger's sun visor.

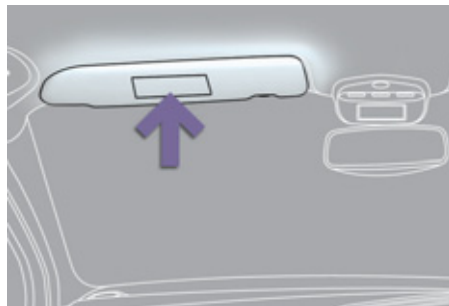

To assure the safety of your child, you must deactivate the passenger's front airbag when you install a child seat in the rearwards facing position on the front passenger's seat.

Otherwise, there is a risk that the child could be seriously injured or killed if the airbag were deployed.








For more information on deactivating the airbag, refer to the "Safety" section then "Airbags".

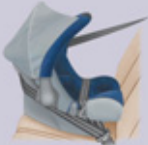

## CHILD SEATS RECOMMENDED BY PEUGEOT


PEUGEOT offers a complete range of recommended child seats which are secured using a **three point seat belt**:

| Group 0+: from birth to 13 kg  | Group 1: from 9 to 18 kg   |
|--|--|
|  <p><b>L1</b><br/>"RÖMER/BRITAX Baby-Safe Plus".<br/>Installed in the rearwards-facing position.</p>  |  <p><b>L2</b><br/>"RÖMER Duo Plus ISOFIX".</p>  |
| Groups 2 and 3: from 15 to 36 kg   |  |
|  <p><b>L4</b><br/>"RECARO Start".</p>   |  <p><b>L5</b><br/>"KLIPPAN Optima".<br/>From the age of 6 years<br/>(approximately 22 kg),<br/>the booster is used on its own.</p> |
|  <p><b>L6</b><br/>"RÖMER KIDFIX"<br/>Can be secured using the vehicle's ISOFIX mountings.<br/>The child is restrained by the seat belt.</p> |  |




## INSTALLING A CHILD SEAT WITH A STAY

Care must be taken when installing a child seat with stay (a drop down leg) in the vehicle. In particular you should look for the presence of a storage compartment below the rear seat footwells.

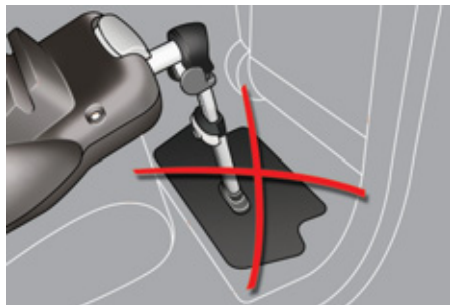


Do not place the stay on the storage compartment cover; it might break in a serious impact. Where the adjustments of the stay allow it, we suggest two other possibilities for installation.

The centre rear seat does not have a storage compartment below the footwell. You can therefore easily fit a child seat with a stay, whether Isofix or universal (installed using the 3 point seat belt).

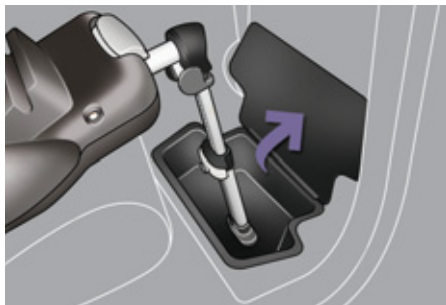

### At the bottom of the storage compartment

If the stay is long enough, you can adjust it so that it contacts the bottom of the storage compartment. Remove all objects from the storage compartment before installing the stay.

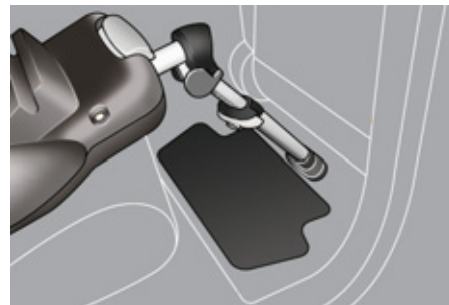

### Away from the storage compartment area




Another possibility, if the stay is long enough and can be inclined sufficiently (always by following the recommendations given the installation instructions for the child seat), is to position the stay so that it contacts the floor away from the storage compartment. Adjust the longitudinal position of the front or rear seat to obtain a satisfactory position for the stay away from the storage compartment.



If you cannot fit the stay in way described, we recommend that you do not fit a child seat with stay to this seat.





## INSTALLING CHILD SEATS USING THE SEAT BELT

In accordance with European regulations, this table indicates the options for installing child seats secured using a seat belt and universally approved **(a)** in accordance with the weight of the child and the seat in the vehicle.

| Weight of the child and indicative age                  |   |  |   |  |   |
|---|---|--|---|--|---|
| Seat  |   | Under 13 kg<br>(groups 0 <b>(b)</b> and 0+)<br>Up to approx 1 year | From 9 to 18 kg<br>(group 1)<br>1 to 3 years approx | From 15 to 25 kg<br>(group 2)<br>3 to 6 years approx | From 22 to 36 kg<br>(group 3)<br>6 to 10 years approx |
| Front passenger seat <b>(c)</b> with height adjuster    |  | U (R)  | U (R)   | U (R)  | U (R)   |
| Front passenger seat <b>(c)</b> without height adjuster |   | X  | X   | X  | X   |
| 5 seats (2 rows)  |   |  |   |  |   |
| Outer rear seats  |  | U*   | U*  | U*   | U*  |
| Centre rear seat  |  | U  | U   | U  | U   |

To install a child seat in a rear seat, facing forwards or backwards, slide the rear seat backwards sufficiently so that front seat backrest is not in the way.

\* Precautions are required when fitting a child seat with a **stay** (or drop down leg). Refer to the page "Installing a child seat with a stay" for more information.

| Weight of the child and indicative age   |   |  |   |  |   |
|--|---|--|---|--|---|
| Seat   |   | Under 13 kg<br>(groups 0 <b>(b)</b> and 0+)<br>Up to approx 1 year | From 9 to 18 kg<br>(group 1)<br>1 to 3 years approx | From 15 to 25 kg<br>(group 2)<br>3 to 6 years approx | From 22 to 36 kg<br>(group 3)<br>6 to 10 years approx |
| Front passenger seat <b>(c)</b> with height adjuster   |  | U (R)  | U (R)   | U (R)  | U (R)   |
| Front passenger seat <b>(c)</b> without height adjuster  |   | X  | X   | X  | X   |
| 7 seats (3 rows)   |   |  |   |  |   |
| Outer rear seats<br>2nd row  |  | U*   | U*  | U*   | U*  |
| Centre rear seat<br>2nd row  |  | U  | U   | U  | U   |
| Rear seats<br>3rd row  |  | U  | U   | U  | U   |
| When the KIDDY Life (L3) is installed with its booster on the front passenger seat, the vehicle's seat must be adjusted to its maximum forwards position and the airbag must be deactivated. |   |  |   |  |   |

**a:** universal child seat, child seat that can be installed in all vehicles using a seat belt.

**b:** group 0, from birth to 10 kg. Shells seats and baby carriers cannot be installed in the front passenger seat.

**c:** consult the legislation in force in your country before installing your child on this seat.

**U:** seat suitable for the installation of a child seat secured using a seat belt and universally approved, "rearwards-facing" and/or "forwards-facing".

**U (R):** idem **U**, with the vehicle's seat adjusted to the highest position.

**L-:** only the child seats indicated can be installed on the seat concerned (according to country).

**X:** seat position not suitable for installation of a child seat for the weight class indicated.

\* Precautions are required when fitting a child seat with a **stay** (or drop down leg). Refer to the page "Installing a child seat with a stay" for more information.



## ADVICE ON CHILD SEATS

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Remember to fasten the seat belts or the child seat harnesses keeping the slack relative to the child's body to a minimum, even for short journeys.

When installing a child seat using the seat belt, ensure that the seat belt is tightened correctly on the child seat and that it secures the child seat firmly on the seat of your vehicle. Move the seat forwards if necessary.

For optimum installation of the "forwards-facing" child seat, ensure that the back of the child seat is in contact with the back of the vehicle's seat and that the head restraint does not cause any discomfort.

If the head restraint has to be removed, ensure that it is stored or attached securely to prevent it from being thrown around the vehicle in the event of sharp braking.

Children under the age of 10 must not travel in the "forwards-facing" position on the front passenger seat, unless the rear seats are already occupied by other children, cannot be used or are absent.

Deactivate the passenger airbag when a "rearwards-facing" child seat is installed on the front seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

### Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs.

PEUGEOT recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

As a safety precaution, do not leave:

- a child or children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To prevent accidental opening of the doors and rear windows, use the "Child lock".

Take care not to open the rear windows by more than one third.

To protect young children from the rays of the sun, fit side blinds on the rear windows.

## "ISOFIX" MOUNTINGS

Your vehicle has been approved in accordance with the **latest ISOFIX regulations**.


The seats, represented below, are fitted with regulation ISOFIX mountings:

There are three rings for each seat:

- two rings **A**, located between the vehicle seat back and cushion, indicated by a label,
- a ring **B**, behind the seat, referred to as the **TOP TETHER** for fixing the upper strap.

This ISOFIX mounting system provides fast, reliable and safe fitting of the child seat in your vehicle.

The **ISOFIX child seats** are fitted with two latches which are easily secured on the two rings **A**.

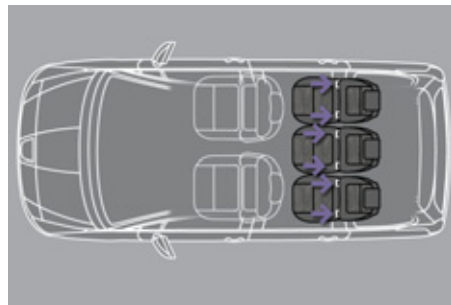

5 seats




Some also have an **upper strap** which is attached to ring **B**.

To attach this strap, raise the vehicle seat's head restraint then pass the hook between its rods. Then fix the hook on ring **B** and tighten the upper strap.

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

For information regarding the ISOFIX child seats which can be installed in your vehicle, refer to the table showing the locations for installing ISOFIX child seats.

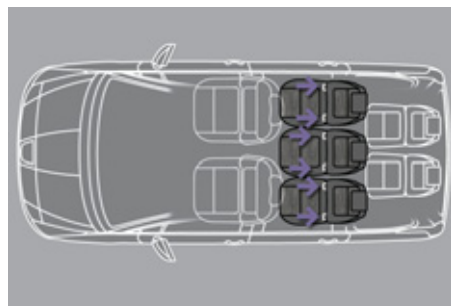

7 seats

## ISOFIX CHILD SEAT RECOMMENDED BY PEUGEOT AND APPROVED FOR YOUR VEHICLE

### RÖMER Duo Plus ISOFIX (size category B1)

Group 1: from 9 to 18 kg



Installed only in the forwards-facing position.

Fitted with an upper strap to be secured on the upper ring **B**, referred to as the TOP TETHER.

Three seat body angles: sitting, reclining, lying.

☞ Adjust the front seat of the vehicle so that the child's feet do not touch the back of the seat.



This child seat can also be used on seats which are not fitted with ISOFIX mountings.




In this case, it must be attached to the vehicle seat using the three point seat belt.

**Follow the instructions for fitting the child seat given in the seat manufacturer's installation guide.**

## SEATING POSITIONS FOR INSTALLING ISOFIX CHILD SEATS

In accordance with European Regulations, this table indicates the options for installing ISOFIX child seats on seats in the vehicle fitted with ISOFIX mountings.





In the case of universal and semi-universal ISOFIX child seats, the ISOFIX size category, determined by a letter between **A** and **G**, is indicated on the child seat next to the ISOFIX logo.

|  | Weight of the child/indicative age                        |   |   |   |   |  |   |                   |   |    |
|--|---|---|---|---|---|--|---|-------------------|---|----|
|  | Less than 10 kg<br>(group 0)<br>Up to approx.<br>6 months |   | Less than 10 kg<br>(group 0)<br>Less than 13 kg<br>(group 0+)<br>Up to approx. 1 year |   |   | From 9 to 18 kg (group 1)<br>From approx. 1 to 3 years |   |                   |   |    |
| Type of ISOFIX child seat  | Shell   |   | "rearwards-facing"  |   |   | "rearwards-facing"                                     |   | "forwards-facing" |   |    |
| ISOFIX size category   | F   | G | C   | D | E | C  | D | A                 | B | B1 |
| Front passenger seat  | X   |   | X   |   |   | X  |   | X                 |   |    |
| 5 seats (2 rows)   |   |   |   |   |   |  |   |                   |   |    |
| Outer rear seats      | IL-SU*  |   | IL-SU*  |   |   | IL-SU*   |   | IUF*<br>IL-SU*    |   |    |
| Centre rear seat      | X   |   | IL-SU   |   |   | IL-SU  |   | IUF<br>IL-SU      |   |    |

\* Precautions are required when fitting a child seat with a **stay** (or drop down leg). Refer to the page "Installing a child seat with a stay" for more information.

To install a child seat in a rear seat, facing forwards or backwards, slide the rear seat backwards sufficiently so that front seat backrest is not in the way.

./..

|                           |   | Weight of the child/indicative age                        |   |   |   |   |  |   |                   |   |    |
|---------------------------|---|---|---|---|---|---|--|---|-------------------|---|----|
|                           |   | Less than 10 kg<br>(group 0)<br>Up to approx.<br>6 months |   | Less than 10 kg<br>(group 0)<br>Less than 13 kg<br>(group 0+)<br>Up to approx. 1 year |   |   | From 9 to 18 kg (group 1)<br>From approx. 1 to 3 years |   |                   |   |    |
| Type of ISOFIX child seat |   | Shell   |   | "rearwards-facing"  |   |   | "rearwards-facing"                                     |   | "forwards-facing" |   |    |
| ISOFIX size category      |   | F   | G | C   | D | E | C  | D | A                 | B | B1 |
| Front passenger seat      |  | X   |   | X   |   |   | X  |   | X                 |   |    |
| 7 seats (3 rows)          |   |   |   |   |   |   |  |   |                   |   |    |
| Outer rear seats 2nd row  |  | IL-SU*  |   | IL-SU*  |   |   | IL-SU*   |   | IUF*<br>IL-SU*    |   |    |
| Centre rear seat 2nd row  |  | X   |   | IL-SU   |   |   | IL-SU  |   | IUF<br>IL-SU      |   |    |
| Rear seats 3rd row        |  | Not Isofix  |   |   |   |   |  |   |                   |   |    |

\* Precautions are required when fitting a child seat with a **stay** (or drop down leg). Refer to the page "Installing a child seat with a stay" for more information.

**IUF:** seat suitable for the installation of an Isofix **Universal** seat, "Forwards-facing" secured using the top belt.

**IL-SU:** seat suitable for the installation of an Isofix **Semi-Universal** seat either:

- "rearwards-facing" fitted with a top belt or a stay,
- "forwards-facing" fitted with a stay,
- a shell seat fitted with an upper strap or a stay.

For advice on securing of the top belt, refer to the paragraph "Isofix mountings".


**X:** seat not suitable for the installation of a child seat or shell for the weight group indicated.



## MANUAL CHILD LOCK

Mechanical system to prevent opening of the rear door using its interior control. The control is located on the edge of each rear door.

### Locking

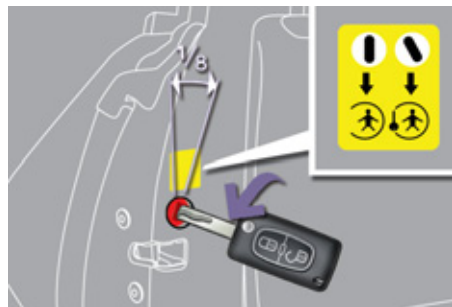

☞ Turn the red control one eighth of a turn using the ignition key as shown in the label on the door. **Check that the lock is on.**


### Unlocking

☞ Turn the red control one eighth of a turn using the ignition key.

## ELECTRIC CHILD LOCK

Remote control system to prevent opening of the rear doors using their interior controls and use of the rear electric windows.

### Switching on

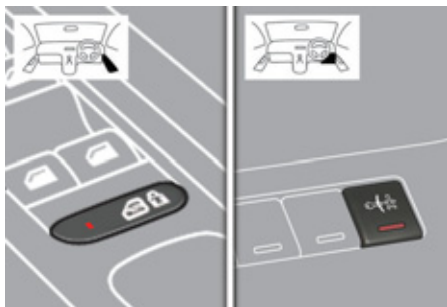

☞ With the ignition on, press this button.

The indicator lamp in the button comes on, accompanied by a message to confirm that the child lock is on.

This indicator lamp remains on until the child lock is switched off.

It is still possible to open the doors from the outside and operate the rear electric windows from the driver's control panel.

### Switching off

☞ With the ignition on, press this button again.

The indicator lamp in the button goes off, accompanied by a message to confirm that the child lock is off.

This indicator lamp remains off while the child lock is switched off.



Any other status of the indicator lamp indicates a fault with the electric child lock.

Have it checked by a PEUGEOT dealer or a qualified workshop.



This system is independent and in no circumstances does it take the place of the central locking control.

Check the status of the child lock each time you switch on the ignition. Always remove the key from the ignition when leaving the vehicle, even for a short time.

In the event of a serious impact, the electric child lock is switched off automatically to permit the exit of the rear passengers.

## DIRECTION INDICATORS



- ☞ Lower the lighting control stalk fully when moving to the left.
- ☞ Raise the lighting control stalk fully when moving to the right.




If you forget to cancel the direction indicators for more than twenty seconds, the volume of the audible signal will increase if the speed is above 40 mph (60 km/h).

### "Motorway" function

Move the stalk briefly upwards or downwards, without going beyond the point of resistance; the corresponding direction indicators will flash 3 times.

## HAZARD WARNING LAMPS

A visual warning by means of the direction indicators to alert other road users to a vehicle breakdown, towing or accident.

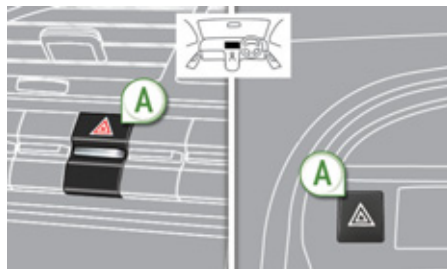

- ☞ Tilt or press button **A**, the direction indicators flash.
- They can operate with the ignition off.

### Automatic operation of hazard warning lamps

When braking in an emergency, depending on the deceleration, the hazard warning lamps come on automatically.

They switch off automatically the first time you accelerate.

- ☞ You can also switch them off by pressing the button.

## HORN

Audible warning to alert other road users to an imminent danger.



- ☞ Press one of the spokes of the steering wheel.



Use the horn moderately and only in the following cases:

- immediate danger,
- overtaking a cyclist or pedestrian,
- when approaching an area where there is no visibility.

## TYRE UNDER-INFLATION DETECTION

System which automatically checks the pressure of the tyres while driving.



Sensors fitted in each valve trigger a warning in the event of malfunction (speed above 12 mph (20 km/h)).

The spare wheel is not fitted with a sensor.



The tyre under-inflation detection system is an aid to driving which does not replace the need for the driver to be vigilant or to drive responsibly.

### Under-inflated tyre



This warning lamp is displayed in the instrument panel and/or a message appears in the multifunction screen, accompanied by an audible signal, to identify the wheel concerned.

- ☞ Check the tyre pressures as soon as possible.

This check must be carried out when the tyres are cold.

### Puncture

# STOP

The **STOP** warning lamp comes on, accompanied by an audible signal and a message in the multifunction screen identifying the wheel concerned.

- ☞ Stop as soon as it is safe to do so, avoiding any sudden movement of the steering wheel and the brakes.
- ☞ Change the damaged wheel (punctured or very deflated tyre), and have the tyre pressure checked as soon as possible.

### Sensor(s) not detected or faulty

A message appears in the multifunction screen, accompanied by an audible signal, to identify the wheel or wheels which are not detected or to indicate a fault in the system.

Contact a PEUGEOT dealer or a qualified workshop to replace the faulty sensor(s).



This message is also displayed when one of the wheels is away from the vehicle (being repaired) or when one or more wheels without a sensor are fitted.



All repairs and changing of tyres on a wheel fitted with this system must be carried out by a PEUGEOT dealer or a qualified workshop.

If, when changing a tyre, you install a wheel which is not detected by your vehicle (example: fitting of snow tyres), you must have the system re-initialised by a PEUGEOT dealer or a qualified workshop.



This system does not avoid the need to have the tyre pressures checked regularly (refer to the "Identification markings" section) to ensure that the optimum dynamic performance of the vehicle is maintained and prevent premature wear of the tyres, particularly in arduous driving conditions (heavy load, high speed).

The tyre pressures must be checked cold, at least once a month. Remember to check the pressure of the spare wheel.

The tyre under-inflation detection system may experience temporary interference due to electromagnetic emissions on a frequency close to that used by the system.

## ELECTRONIC STABILITY PROGRAMME (ESC)

Electronic Stability Programme (ESC: Electronic Stability Control) incorporating the following systems:

- the anti-lock braking system (ABS) and the electronic brake force distribution (EBFD),
- the emergency braking assistance,
- the anti-slip regulation (ASR) or traction control,
- the dynamic stability control (DSC).

### Definitions

#### Anti-lock braking system (ABS) and electronic brake force distribution (EBFD)

This system improves the stability and manoeuvrability of your vehicle when braking and offers improved control in corners, in particular on poor or slippery road surfaces.

The ABS prevents wheel lock in the event of emergency braking.

The electronic brake force distribution system manages the braking pressure wheel by wheel.

#### Emergency braking assistance

In an emergency, this system enables you to reach the optimum braking pressure more quickly and therefore reduce the stopping distance.

It is triggered in relation to the speed at which the brake pedal is pressed. This is felt by a reduction in the resistance of the pedal and an increase in the effectiveness of the braking.

#### Anti-skid regulation (ASR)

The ASR system (also known as Traction Control) optimises traction in order to avoid wheel slip by acting on the brakes of the driving wheels and on the engine. It also improves the directional stability of the vehicle on acceleration.

#### Dynamic stability control (DSC)

If there is a difference between the path followed by the vehicle and that required by the driver, the DSC monitors each wheel and automatically acts on the brake of one or more wheels and on the engine to return the vehicle to the required path, within the limits of the laws of physics.

#### Snow driving assistance (Intelligent Traction Control)

Your vehicle has a system to help driving on snow: **Intelligent Traction Control**.

This automatic system continuously checks for situations of difficult surface adhesion that could make it difficult to move off or make progress on deep fresh snow or compacted snow.

In these situations, **Intelligent Traction Control** limits the amount of wheel slip to provide the best traction and trajectory control.

In extremely severe conditions (deep snow, mud...), it can be useful to temporarily deactivate the **ESP/ASR** systems to allow a degree of wheel spin and so recover grip. It is recommended that the system be reactivated as soon as possible.

Snow tyres are strongly recommended on surfaces offering low levels of adhesion.

## Operation

### Anti-lock braking system (ABS) and electronic brake force distribution (EBFD)



When this warning lamp comes on, accompanied by an audible signal and a message, it indicates that there is a fault with the ABS, which could cause loss of control of the vehicle when braking.



When this warning lamp comes on, coupled with the **STOP** warning lamp, accompanied by an audible signal and a message, it indicates that there is a fault with the electronic brake force distribution (EBFD), which could cause loss of control of the vehicle when braking.

**You must stop as soon as it is safe to do so.**

In both cases, contact a PEUGEOT dealer or a qualified workshop.



When changing wheels (tyres and rims), make sure that these are approved for your vehicle.

Normal operation of the ABS may make itself felt by slight vibrations of the brake pedal.



**In emergency braking, press very firmly without releasing the pressure.**



## Dynamic stability control (DSC)

### Activation

This system is activated automatically each time the vehicle is started. It comes into operation in the event of a grip or trajectory problem.



This is indicated by flashing of this warning lamp in the instrument panel.

### Deactivation


In exceptional conditions (starting a vehicle which is bogged down, stuck in snow, on soft ground...), it may be advisable to deactivate the DSC system, so that the wheels can move freely and regain grip.



☞ Press the **"ESP OFF"** button.



This warning lamp and the indicator lamp in the button come on: the DSC system no longer acts on the operation of the internal combustion engine.

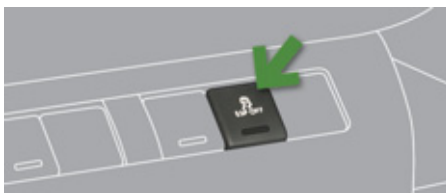

### Reactivation

The system is reactivated automatically each time the ignition is switched back on or from 30 mph (50 km/h).

☞ Press the **"ESP OFF"** button again to reactivate it manually.

## Operating fault



If this warning lamp comes on, accompanied by an audible signal and a message in the multi-function screen, this indicates a malfunction of the system.

Contact a PEUGEOT dealer or a qualified workshop to have the system checked.



The DSC system offers exceptional safety in normal driving, but this should not encourage the driver to take extra risks or drive at high speed.

The correct functioning of the system depends on observation of the manufacturer's recommendations regarding the wheels (tyres and rims), the braking components, the electronic components and the PEUGEOT assembly and operation procedures.

After an impact, have the system checked by a PEUGEOT dealer or a qualified workshop.

## SEAT BELTS



### Front seat belts

The front seat belts are fitted with a pretensioning and force limiting system.

This system improves safety in the front seats in the event of a front or side impact. Depending on the severity of the impact, the pretensioning system instantly tightens the seat belts against the body of the occupants.

The pretensioning seat belts are active when the ignition is on.

The force limiter reduces the pressure of the seat belt on the chest of the occupant, so improving their protection.

### Fastening




- ☞ Pull the strap, then insert the tongue in the buckle.
- ☞ Check that the seat belt is fastened correctly by pulling the strap.

### Unfastening

- ☞ Press the red button on the buckle.
- ☞ Guide the seat belt as it reels in.

### Height adjustment

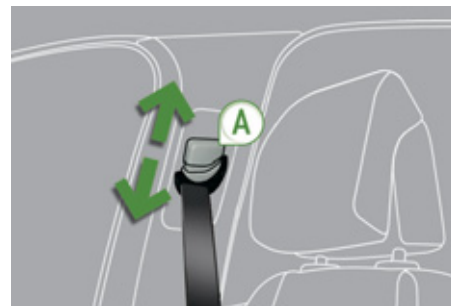

- ☞ To adjust the anchorage point, squeeze the control **A** and slide it until you find a notch.


### Front seat belt not fastened/ unfastened warning lamp



When the ignition is switched on, this warning lamp comes on on the seat belt and passenger's front airbag warning lamps display, if the driver and/or the front passenger has not fastened their seat belt.

From approximately 12 mph (20 km/h) this warning lamp flashes for two minutes accompanied by an audible signal. Once these two minutes have elapsed, this warning lamp remains on until the driver and/or the front passenger fastens their seat belt.

## Seat belt not fastened/unfastened warning lamps display

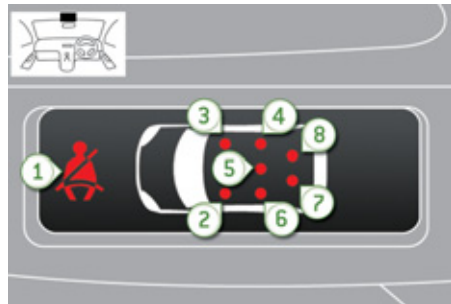

1. Front and/or rear seat belts not fastened/unfastened warning lamp.
2. Front left seat belt warning lamp.
3. Front right seat belt warning lamp.
4. Rear right seat belt warning lamp.
5. Rear centre seat belt warning lamp.
6. Rear left seat belt warning lamp.

The corresponding warning lamp **2** or **3** comes on in red on the seat belt and passenger's front airbag warning lamps display if the seat belt is not fastened or is unfastened.

### 7 seat version

7. 3rd row rear left seat belt warning lamp
8. 3rd row rear right seat belt warning lamp

## Rear seat belts

The rear seats are each fitted with a three-point inertia reel seat belt with force limiter (with the exception of the centre rear seat).

### Fastening

- ☞ Pull the strap, then insert the tongue in the buckle.
- ☞ Check that the seat belt is fastened correctly by pulling the strap.

### Unfastening

- ☞ Press the red button on the buckle.
- ☞ Guide the seat belt as it reels in.


## Seat belt unfastened warning lamp



This warning lamp comes on on the seat belt and passenger's front airbag warning lamps display, when one or more rear passengers unfasten their seat belt.

From approximately 12 mph (20 km/h), this warning lamp flashes for two minutes accompanied by an audible signal. Once these two minutes have elapsed, this warning lamp remains on until the one or more rear passengers fasten their seat belt.

## Seat belt unfastened warning lamps display

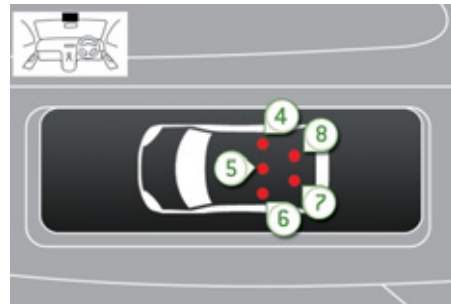

When the ignition is switched on, with the engine running or when the vehicle is moving at less than 12 mph (20 km/h), the corresponding warning lamps **4** to **8** come on in red for approximately 30 seconds, if the seat belt is not fastened.

When the vehicle is moving at more than 12 mph (20 km/h), the corresponding warning lamp **4**, **5**, **6**, **7** or **8** comes on in red, accompanied by an audible signal and a message on the multifunction screen, if a rear passenger has unfastened their seat belt.




To prevent movement of the rear side seat belts in the 2nd row, slide the straps into the guides provided for this purpose.



## 2nd row rear centre seat belt

The seat belt for the rear centre seat of the 2nd row is incorporated at the rear right of the roof.

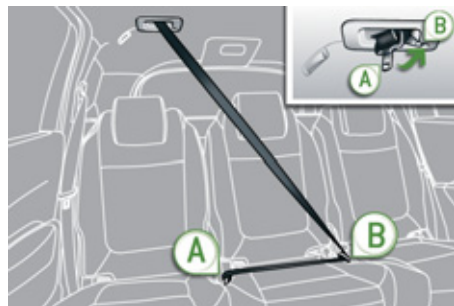

### Installation

- ☞ Pull the strap and insert the tongue **A** in the right-hand buckle.
- ☞ Insert the tongue **B** in the left-hand buckle.
- ☞ Check the fastening of each buckle by pulling the strap.

### Removal and storing

- ☞ Press the red button on the buckle **B**, then on the buckle **A**.
- ☞ Guide the strap as it reels in and bring the tongue **B**, then **A** onto the magnet of the attachment point on the roof.

## 3rd row rear seat belts (7 seat version)

The seat belts for the rear seats of the 3rd row are incorporated at the corner of the corresponding boot pillar and of the roof.



### Installation

- ☞ Pull the strap and insert the tongue **C** in the buckle, on the boot side trim side.
- ☞ Insert the tongue **D** in the opposite buckle.
- ☞ Check the fastening of each buckle by pulling the strap.

### Removal and storing

- ☞ Press the red button on the buckle **D**, then on the buckle **C**.
- ☞ Guide the strap as it reels in and the tongues **D** and **C**.





The driver must ensure that passengers use the seat belts correctly and that they are all restrained securely before setting off.

Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

Do not interchange the seat belt buckles as they will not fulfil their role fully.

The seat belts are fitted with an inertia reel permitting automatic adjustment of the length of the strap to your size. The seat belt is stowed automatically when not in use.

Before and after use, ensure that the seat belt is reeled in correctly.

The lower part of the strap must be positioned as low as possible on the pelvis.

The upper part must be positioned in the hollow of the shoulder.

The inertia reels are fitted with an automatic locking device which comes into operation in the event of a collision, emergency braking or if the vehicle rolls over. You can release the device by pulling firmly on the strap and releasing it so that it reels in slightly.

In order to be effective, a seat belt must:

- be tightened as close to the body as possible,
- be pulled in front of you with a smooth movement, checking that it does not twist,
- be used to restrain only one person,
- not bear any trace of cuts or fraying,
- not be converted or modified to avoid affecting its performance.

In accordance with current safety regulations, for all repairs on your vehicle, go to a qualified workshop with the skills and equipment needed, which a PEUGEOT dealer is able to provide.

Have your seat belts checked regularly by a PEUGEOT dealer or a qualified workshop, particularly if the straps show signs of damage.

Clean the seat belt straps with soapy water or a textile cleaning product, sold by PEUGEOT dealers.

After folding or moving a seat or rear bench seat, ensure that the seat belt is positioned and reeled in correctly.

## Recommendations for children

Use a suitable child seat if the passenger is less than 12 years old or shorter than one and a half metres.

Never use the same seat belt to secure more than one person.

Never allow a child to travel on your lap.

## In the event of an impact

**Depending on the nature and seriousness of the impact**, the pretensioning device may be deployed before and independently of the airbags. Deployment of the pretensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

In all cases, the airbag warning lamp comes on.

Following an impact, have the seat belts system checked, and if necessary replaced, by a PEUGEOT dealer or a qualified workshop.

## AIRBAGS

System designed to maximise the safety of the occupants (with the exception of the rear centre passenger) in the event of violent collisions. It supplements the action of the force-limiting seat belts (with the exception of the rear centre passenger).

If a collision occurs, the electronic detectors record and analyse the front and side impacts sustained in the impact detection zones:


- in the case of a serious impact, the airbags are deployed instantly and protect the occupants of the vehicle (with the exception of the rear centre passenger); immediately after the impact, the airbags deflate rapidly so that they do not hinder visibility or the exit of the occupants,
- in the case of a minor or rear impact or in certain roll-over conditions, the airbags will not be deployed; the seat belt alone is sufficient to provide optimum protection in these situations.



**The airbags do not operate when the ignition is switched off.**

This equipment will only deploy once. If a second impact occurs (during the same or a subsequent accident), the airbag will not be deployed again.

### Impact detection zones

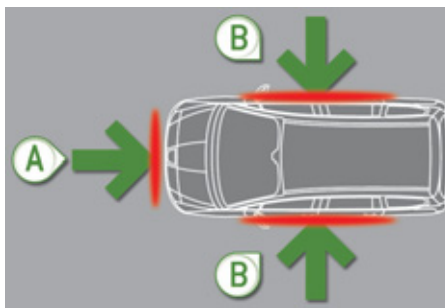

A. Front impact zone.

B. Side impact zone.



Deployment of the airbag(s) is accompanied by a slight emission of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

This smoke is not harmful, but sensitive individuals may experience slight irritation.

The noise of the detonation may result in a slight loss of hearing for a short time.

### Front airbags

System which protects the driver and front passenger in the event of a serious front impact in order to limit the risk of injury to the head and thorax.

The driver's airbag is fitted in the centre of the steering wheel; the front passenger's airbag is fitted in the dashboard above the glove box.



### Deployment


The airbags are deployed simultaneously, unless the passenger's front airbag is deactivated, in the event of a serious front impact to all or part of the front impact zone A, in the longitudinal centreline of the vehicle on a horizontal plane and directed from the front to the rear of the vehicle.

The front airbag inflates between the thorax and head of the front occupant of the vehicle and the steering wheel, driver's side, and the dashboard, passenger's side to cushion their forward movement.

## Deactivation

Only the passenger's front airbag can be deactivated:

- ☞ **with the ignition off**, insert the key in the passenger airbag deactivation switch,
- ☞ turn it to the **"OFF"** position,
- ☞ then, remove the key keeping the switch in the new position.

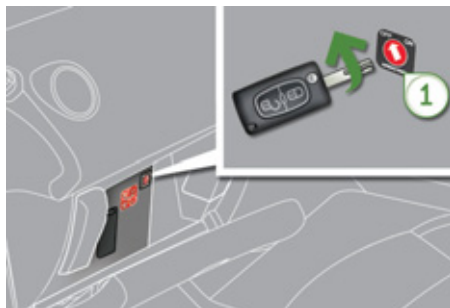

According to version, this warning lamp comes on in the instrument panel and/or in the seat belt and passenger's front airbag warning lamps display when the ignition is on and until the airbag is reactivated.



To assure the safety of your child, the passenger's front airbag must be deactivated when you install a "rear facing" child seat on the front passenger seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were deployed.

## Reactivation

When you remove the child seat, turn the switch to the **"ON"** position to re-activate the airbag and so assure the safety of your front passenger in the event of an impact.



With the ignition on, this warning lamp comes on in the seat belt and passenger's front airbag warning lamps display for approximately one minute, if the passenger's front airbag is activated.

## Operating fault



If this warning lamp comes on in the instrument panel, accompanied by an audible warning and a message in the screen, contact a PEUGEOT dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



If this warning lamp flashes in the instrument panel and/or in the seat belt and passenger's front airbag warning lamps display, contact a PEUGEOT dealer or a qualified workshop. The passenger's front airbag may no longer be deployed in the event of a serious impact.



If even one of the two airbag warning lamps comes on continuously, do not install a child seat on the front passenger seat.

Have the system checked by a PEUGEOT dealer or a qualified workshop.

## Lateral airbags

System which protects the driver and front passenger in the event of a serious side impact in order to limit the risk of injury to the chest.

Each lateral airbag is fitted in the front, in the outer side of the seat back frame.




### Deployment

The lateral airbags are deployed unilaterally in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The lateral airbag inflates between the front occupant of the vehicle and the corresponding door panel.

### Impact detection zones

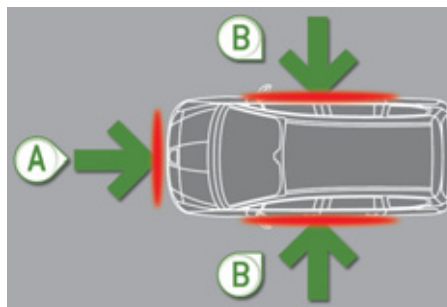

**A.** Front impact zone.

**B.** Side impact zone.

### Curtain airbags

System which protects the driver and passengers (with the exception of the rear centre passenger) in the event of a serious side impact in order to limit the risk of injury to the side of the head.

Each curtain airbag is built into the pillars and the upper passenger compartment area.

### Deployment

The curtain airbag is deployed at the same time as the corresponding lateral airbag in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The curtain airbag inflates between the front or rear occupant of the vehicle and the windows.

### Operating fault



If this warning lamp comes on in the instrument panel, accompanied by an audible signal and a message in the screen, contact a PEUGEOT dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the airbag may not be deployed.

In the event of a rear or front collision, the airbag is not deployed.



**For the airbags to be fully effective, observe the following safety rules:**

Sit in a normal upright position.

Wear a correctly adjusted seat belt.

Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hamper the operation of the airbags or injure the occupants.

After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.

All work on the airbag system must be carried out by a PEUGEOT dealer or a qualified workshop.

Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is deployed cannot be ruled out. The bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

### Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Passengers must not place their feet on the dashboard.

If possible, do not smoke as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.

### Lateral airbags

Use only approved covers on the seats, compatible with the deployment the lateral airbags. For information on the range of seat covers suitable for your vehicle, you can contact a PEUGEOT dealer (see "Practical information - § Accessories").

Do not fix or attach anything to the seat backs (clothing...). This could cause injury to the chest or arms if the lateral airbag is deployed.

Do not sit with the upper part of the body any nearer to the door than necessary.

### Curtain airbags

Do not fix or attach anything to the roof. This could cause injury to the head if the curtain airbag is deployed.

If fitted on your vehicle, do not remove the grab handles installed on the roof, they play a part in securing the curtain airbags.

## ELECTRIC PARKING BRAKE



The electric parking brake combines 2 operational modes:

- **Automatic application/release**  
Application is automatic when the engine stops, release is automatic on use of the accelerator (activated by default),
- **Manual application/release**  
The parking brake can be applied/released manually by pulling control lever **A**.


### Programming the mode

Depending on the country of registration of the vehicle, the automatic application when the engine is switched off and the automatic release when you press the accelerator can be deactivated.



Activation/deactivation of this function is possible by a PEUGEOT dealer or a qualified workshop.

The parking brake is then applied and released manually. When the driver's door is opened, there is an audible signal and a message is displayed if the brake is not applied.

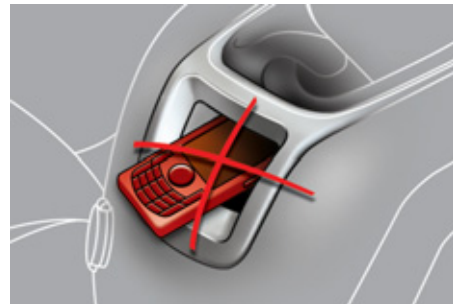

Deactivation is recommended in particularly cold conditions (ice) and during towing (breakdown, caravan...). Refer to the "Manual release" paragraph.



Do not place any object (packet of cigarettes, telephone, ...) behind the electric brake control.



If this warning lamp comes on in the instrument panel, the automatic mode is deactivated.

## Manual application



With the vehicle stationary, to apply the parking brake whether the engine is running or off, **pull** on the control lever **A**.

Application of the parking brake is confirmed by:



- illumination of the braking warning lamp and of the warning lamp **P** in the control lever **A**,



- display of the message "Handbrake on".

When the driver's door is opened with the engine running, a beep is heard and a message is displayed if the parking brake has not been applied, unless the selector lever is in position **P** (Park) in the case of an automatic gearbox.



Before leaving the vehicle, check that parking brake warning lamp in the instrument panel is on, not flashing.

## Manual release

With the ignition on or the engine running, to release the parking brake, **press** on the **brake pedal** or the **accelerator**, **pull then release** the control lever **A**.

Full application of the parking brake is confirmed by:



- the braking warning lamp and of the warning lamp **P** in the the control lever **A** going off,
- display of the message "Handbrake off".



If you pull the control lever **A** without pressing the brake pedal, the parking brake will not be released and a warning lamp will come on in the instrument panel.

## Maximum application

If necessary, you can make a **maximum application** of the parking brake. It is obtained by means of a **long pull** on the control lever **A**, until you see the message "Handbrake on" and a beep is heard.

### Maximum application is essential:

- in the case of a vehicle towing a caravan or a trailer, if the automatic functions are activated but you are applying the parking brake manually,
- when the gradient you are parked on is variable in its effect (e.g. on a ferry, in a lorry, during towing).



In the case of towing, a loaded vehicle or parking on a gradient, make a maximum application of the parking brake then turn the front wheels towards the pavement and engage a gear when you park.

After a maximum application, the release time will be longer.

## Automatic application, engine off

With the vehicle stationary, the parking brake **is automatically applied when the engine is switched off**.

The application of the parking brake is confirmed by:

- ⚠ illumination of the braking warning lamp and of the warning lamp **P** in the control lever **A**,
- display of the message "Handbrake on".



An audible signal will confirm to you the application/release of your electric parking brake.



Before leaving the vehicle, check that parking brake warning lamp in the instrument panel is on (not flashing).

Never leave a child alone inside the vehicle with the ignition on, as they could release the parking brake.

In the case of towing, a loaded vehicle or parking on a gradient, turn the front wheels towards the pavement and engage a gear when you park.

## Automatic release

The electric parking brake **releases automatically and progressively** when you press the accelerator:

- ⚡ **Manual gearbox:** press down fully on the clutch pedal, engage first gear or reverse, press on the accelerator pedal and move off.
- ⚡ **Electronic gear control gearbox:** select position **A**, **M** or **R** then press on the accelerator pedal.
- ⚡ **Automatic gearbox:** select position **D**, **M** or **R** then press on the accelerator pedal.

Full release of the parking brake is confirmed by:



- the braking warning lamp and of the warning lamp **P** in the control lever **A** going off,
- display of the message "Handbrake off".



When stationary, with the engine running, do not press the accelerator pedal unnecessarily, as you may release the parking brake.

## To immobilise the vehicle, engine running

With the engine running and the vehicle stationary, in order to immobilise the vehicle it is essential to **manually** apply the parking brake by **pulling** on control lever **A**.

The application of the parking brake is confirmed by:




- illumination of the braking warning lamp and the warning lamp **P** in the control lever **A**,
- display of the message "Handbrake on".



When the driver's door is opened, an audible signal heard and a message is displayed if the parking brake has not been applied, unless the selector lever is in position **P** (Park) in the case of an automatic gearbox.

## Label on the door panel

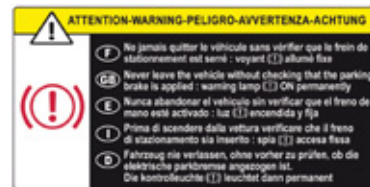

Before leaving the vehicle, check that parking brake warning lamp in the instrument panel is on, not flashing.





## Particular situations

In certain situations (e.g. starting the engine), the parking brake can automatically alter its force. This is normal operation.

To advance your vehicle a few centimetres without starting the engine, but with the ignition on, press on the brake pedal and release the parking brake **by pulling** then **releasing** control lever **A**. The full release of the parking brake is confirmed by the warning lamp in the control lever **A** and the warning lamp in the instrument panel going off and the display of the message "Handbrake off".

If a parking brake fault occurs **while applied** or if the battery runs flat, an emergency release is always possible.

## EMERGENCY BRAKING



In the event of a failure of the main service brake or in an exceptional situation (e.g. driver taken ill, under instruction, etc) **a continuous pull on the control lever A will stop the vehicle.**

The electronic stability programme (ESP) provides stability during emergency braking.

If there is a fault with the emergency braking, one of the following messages will be displayed:

- "Parking brake faulty".
- "Parking brake control faulty".



If a failure of the ESP system is signalled by the illumination of this warning lamp, then braking stability is not guaranteed.

In this event, stability must be assured by the driver by repeating alternate "pull release" actions on control lever **A**.



The emergency braking must only be used in exceptional circumstances.

## Emergency release



### Front left seat moved back fully.

In the event of the electric parking brake malfunctioning or the battery running flat, an emergency manual device can release the parking brake.

- ☞ Immobilise the vehicle (or keep it stationary, if the brake pedal is pressed), with the engine running, by engaging first gear (manual gearbox), position **P** (automatic gearbox) or **M** or **R** (6-speed electronic gear control gearbox).
- ☞ Switch off the engine but leave the ignition on. If it is impossible to immobilise the vehicle, do not operate the control and contact a PEUGEOT dealer or a qualified workshop urgently.
- ☞ Fetch the two vehicle blocks and the release device, located under the boot carpet (see "Changing a wheel" in the "Practical information" section).
- ☞ Immobilise the vehicle by placing blocks in front and behind one of the front wheels.
- ☞ Slide the front left-hand seat back as far as possible.
- ☞ Lift up the floor plug **B** in the carpet under the seat.
- ☞ Pierce the protective cover **C** on the tube **D** with the release device.
- ☞ Place the release device in the tube **D**.
- ☞ Turn the release device **clockwise**. **For safety reasons, it is essential** to continue turning the device as far as it will go. The parking brake is released.
- ☞ Remove the release device and store it with the blocks in the toolbox.
- The operation of the parking brake re-initialises when the ignition is switched off then on again. If the reinitialisation of the parking brake proves impossible, contact a PEUGEOT dealer or a qualified workshop.
- The subsequent time required for application may be longer than during normal operation.



For safety reasons, you must contact a PEUGEOT dealer as soon as possible to replace the protective cover.

Following an emergency unlocking, immobilisation of the vehicle is no longer guaranteed once the manual emergency release has been deployed and the manual control does not allow the re-application of your parking brake.

Take no action, either on the control lever **A**, or stopping or starting the engine while the release device is engaged.

Take care not to allow moisture or dust in the proximity of the protective cover.

## HILL START ASSIST


System which keeps your vehicle immobilised temporarily (approximately 2 seconds) when starting on a gradient, the time it takes to move your foot from the brake pedal to the accelerator pedal.

This system only operates when:

- the vehicle is completely stationary, with your foot on the brake pedal,
- in particular conditions on a slope,
- with the driver's door closed.

The hill start assist system cannot be deactivated.

### Operation

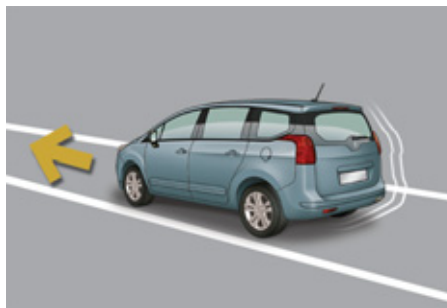

**On an ascending slope, with the vehicle stationary, the vehicle is held for a momentarily when you release the brake pedal:**

- provided you are in first gear or neutral on a manual gearbox,
- provided you are in position **A** or **M** on an electronic gear control gearbox,
- provided you are in position **D** or **M** on an automatic gearbox.



**On a descending slope, with the vehicle stationary and reverse gear engaged, the vehicle is held momentarily when you release the brake pedal.**



Do not exit the vehicle while it is being held in the hill start assist phase.

If you need to exit the vehicle with the engine running, apply the parking brake manually then ensure that the parking brake warning lamp (and the warning lamp **P** in the lever of the electric parking brake) are on fixed (not flashing).






### Operating fault






If a fault in the system occurs, these warning lamps come on. Contact a PEUGEOT dealer or a qualified workshop to have the system checked.

## Operating faults

If the electric parking brake fault warning lamp comes on together with one or more of the warning lamps presented in these tables, place the vehicle in a safe condition (on level ground, gear engaged) and contact a PEUGEOT dealer or a qualified workshop without delay.

| Situations   | Consequences   |
|--|--|
| <p>Display of the message <b>"Parking brake fault"</b> and of the following warning lamps:</p>    | <ul style="list-style-type: none"> <li>- The automatic functions are deactivated.</li> <li>- Hill start assist is not available.</li> <li>- The electric parking brake can only be used manually.</li> </ul>   |
| <p>Display of the message <b>"Parking brake fault"</b> and of the following warning lamps:</p>    | <ul style="list-style-type: none"> <li>- Manual release of the electric parking brake is only available by pressing the accelerator pedal and releasing the control.</li> <li>- Hill start assist is not available.</li> <li>- The automatic functions and the manual application are still available.</li> </ul>  |
| <p>Display of the message <b>"Parking brake fault"</b> and of the following warning lamps:</p>  <p>and possibly</p>  <p>flashing</p> | <ul style="list-style-type: none"> <li>- The automatic functions are deactivated.</li> <li>- Hill start assist is not available.</li> </ul> <div style="border: 1px solid #ccc; padding: 10px; margin-top: 10px;">  To apply the electric parking brake:           <ul style="list-style-type: none"> <li>☞ Immobilise the vehicle and switch off the ignition.</li> <li>☞ Pull the control for at least 5 seconds or until application is complete.</li> <li>☞ Switch on the ignition and check the switching on of the electric parking brake warning lamps.</li> </ul> <p>The application is slower than during normal operation.</p> <p>To release the electric parking brake:</p> <ul style="list-style-type: none"> <li>☞ Switch on the ignition.</li> <li>☞ Pull the control and hold it for approximately 3 seconds then release it.</li> </ul> <p>If the braking warning lamp is flashing or if the warning lamps do not come on with the ignition on, these procedures will not work. Place the vehicle on level ground and have it checked by a PEUGEOT dealer or a qualified workshop.</p> </div> |


| Situations  | Consequences   |
|---|--|
| <p>Display of the message <b>"Parking brake control fault - auto parking brake activated"</b> and of the following warning lamps:</p> <p></p> <p>and possibly</p> <p></p> <p>flashing</p> | <ul style="list-style-type: none"> <li>- Only the automatic application on switching off the engine and automatic release on acceleration functions are available.</li> <li>- The manual application/release of the electric parking brake and the emergency braking are not available.</li> </ul>                     |
| <p>Battery fault</p> <p></p>   | <ul style="list-style-type: none"> <li>- If the battery warning lamp comes on you must stop immediately as soon as the traffic allows. Stop and immobilise your vehicle (if necessary, place the two chocks under the wheels).</li> <li>- Apply the electric parking brake before switching off the engine.</li> </ul> |

## HEAD-UP DISPLAY




System which projects various information onto a transparent strip in the field of vision of the driver so that they do not have to take their eyes off the road.

This system operates when the engine is running and the settings are stored when the ignition is switched off.

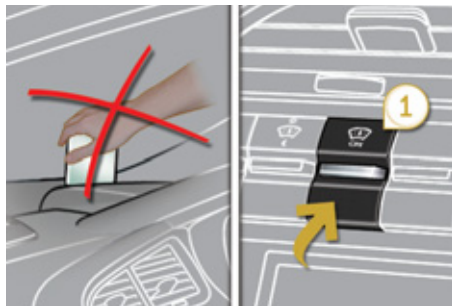


## Buttons

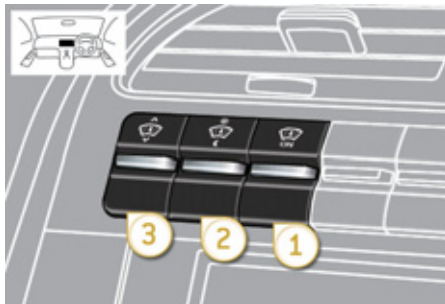

1. Head-up display on/off.
2. Brightness adjustment.
3. Display height adjustment.

The strip is activated by pressing one of the buttons.


## Displays during operation

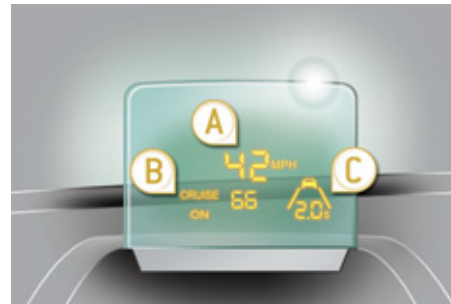

Once the system has been activated, the following information is grouped together in the head-up display:

- A.** The speed of your vehicle.
- B.** Cruise control/speed limiter information.
- C.** "Distance alert" information (depending on version).

## Activation/Deactivation

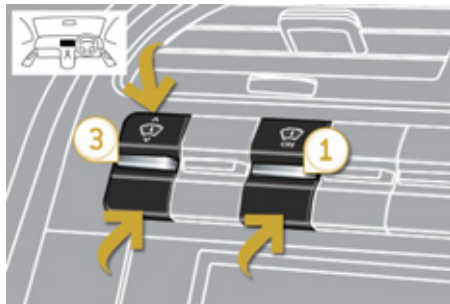


- ☞ With the engine running, press button 1. The activated/deactivated status when the engine was switched off is retained when the engine is switched on again.

## Height adjustment

- ☞ With the engine running, adjust the display to the required height using button 3:
- up to move the display up,
  - down to move the display down.

## Brightness adjustment

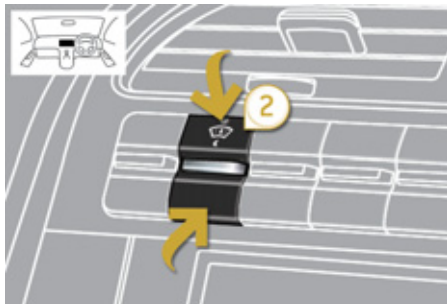

- ☞ With the engine running, adjust the brightness of the information using button 2:
- up to increase the brightness,
  - down to decrease the brightness.



We recommend that adjustments are only made using these buttons when the vehicle is stationary.

When stationary or while driving, no objects should be placed around the transparent strip (or on its cover) to avoid blocking the strip output and preventing its correct operation.



In certain extreme weather conditions (rain and/or snow, bright sunshine, ...) the head-up display may not be legible or may suffer temporary interference.


Certain glasses (sunglasses, spectacles or polarised lenses) may hamper reading of the information.

To clean the transparent strip, which is made of organic glass, use a clean, soft cloth (such as a spectacles cloth or microfibre cloth). Do not use a dry or abrasive cloth or detergent or solvent products as these could scratch the strip or damage the anti-reflection coating.

## DISTANCE ALERT\*

Driving aid which informs the driver of the time interval (in seconds) separating them from the vehicle in front when the driving conditions are stable.

It does not detect stationary vehicles and does not itself take **any action** on your vehicle's controls.

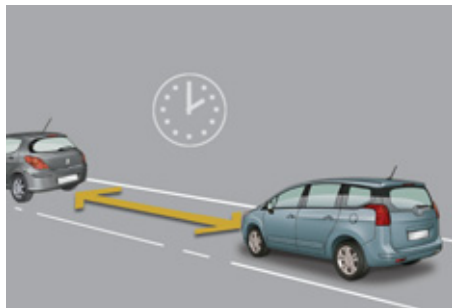


For the safety time to be observed, refer to the current legislation or highway code recommendations in your country.

The system operates when the speed of your vehicle is higher than 45 mph (70 km/h) and below 90 mph (150 km/h).

It has a programmable visual alert which remains in the memory when the ignition is switched off.


This system is a driving aid and cannot, in any circumstances, take the place of the vigilance and responsibility of the driver.

## Buttons

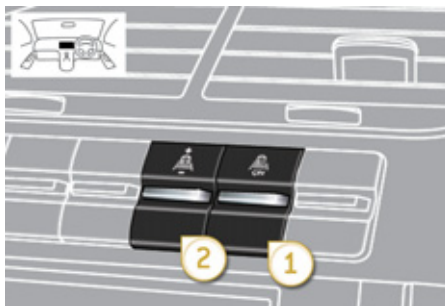

1. On/off.
2. Alert value increase (+)/decrease (-).

## Displays during operation

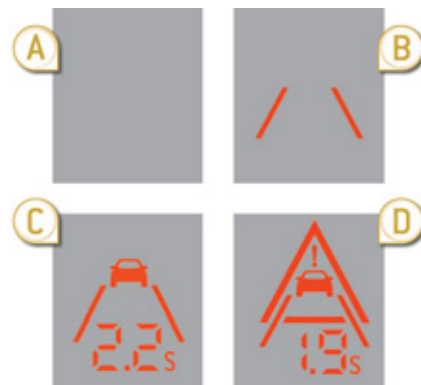

The information is grouped together in the head-up display.


Once the system has been activated:

- A. The speed of your vehicle is outside the operating range.
- B. Your vehicle is within the operating range but no vehicle has been detected.
- C. The vehicle in front of you has been detected.  
The current time separating you from this vehicle is displayed permanently.
- D. The time between your vehicle and the vehicle in front is less than the programmed alert value (it flashes).

\* Depending on version.



## Activation

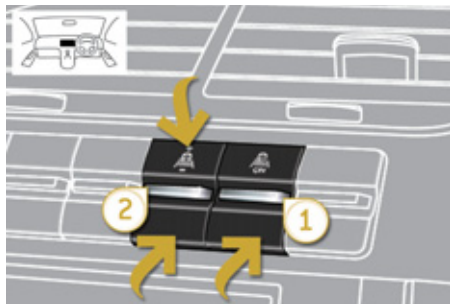

☞ Press button **1**, the indicator lamp comes on.

The system is activated but will only operate from 45 mph (70 km/h).

## Programming the alert value

☞ Select the alert value required using button **2**, in steps of 0.1 second:

- up to increase: "+",
- down to decrease: "-".

Example with a value of 2 seconds:



The alert value can be programmed to between 0.9 second and 2.5 seconds.  
The visual alert can be deactivated by programming a value of 0 second.

## Alert



When the time (in seconds) between your vehicle and the vehicle in front is less than the programmed time (alert value), a visual alert flashes.



A safety time of 2 seconds is recommended in normal driving conditions (correct traction and speed) to avoid a collision in the event of emergency braking.

## Deactivation

☞ Press button **1** to deactivate the system, the indicator lamp goes off.

## Reactivation

☞ Press button **1** again to reactivate the system.

The last value programmed is retained and the indicator lamp comes on.

## Operating limits

The system switches to standby automatically if the sensor does not detect the vehicle in front correctly (very difficult weather conditions, sensor out of adjustment, ...). A message is displayed in the multifunction screen.

The vehicle being followed may not be detected in certain conditions such as,

- when turning,
- when changing lane,
- when the vehicle in front is either too far ahead (maximum range of the sensor: 100 m) or stationary (in a traffic jam, ...),

When the vehicle being followed is much too near (time between the two vehicles less than 0.5 seconds), the display remains fixed at 0.5 seconds.



If the indicator lamp in button **1** flashes, have the system checked by a PEUGEOT dealer or a qualified workshop.

This system is not an anti-collision radar and it does not act of the movement of your vehicle. It provides information but cannot, in any circumstances, take the place of the vigilance and responsibility of the driver.

## SPEED LIMITER

System which prevents the vehicle from exceeding the speed programmed by the driver.

When the programmed speed limit is reached, pressing the accelerator pedal no longer has any effect unless it is pressed firmly, which permits temporary exceeding of the programmed speed.

To return to the programmed speed, simply slow down to a speed below the programmed speed by releasing the accelerator.

The speed limiter is **switched on** manually: it requires a programmed speed of at least 20 mph (30 km/h).


The speed limiter is **switched off** by manual operation of the control.

The programmed speed remains in the memory when the ignition is switched off.



The speed limiter cannot, in any circumstances, replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.


## Steering mounted controls

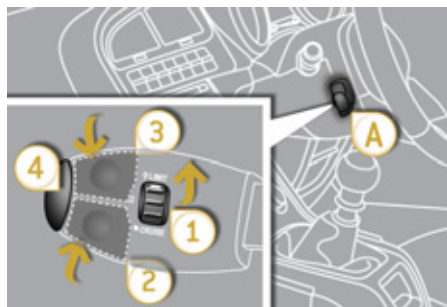

The controls of this system are grouped together on stalk **A**.

1. Speed limiter mode selection dial
2. Programmed value decrease button
3. Programmed value increase button
4. Speed limiter on/off button

## Displays in the instrument panel

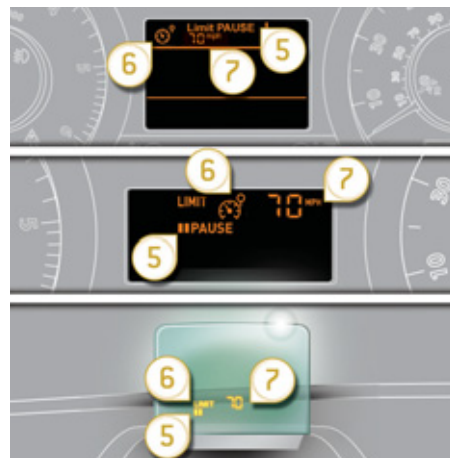


The programmed information is grouped together on the instrument panel screen.

5. Speed limiter on/off indication
6. Speed limiter mode selection indication
7. Programmed speed value



This information also appears in the head-up display. For more information on the head-up display, refer to the relevant page in this "Driving" section.

## Programming

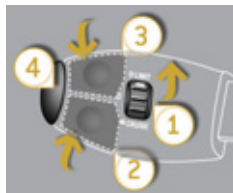

☞ Turn dial **1** to the "**LIMIT**" position: the speed limiter mode is selected but is not switched on (OFF).

You do not have to switch the speed limiter on in order to set the speed.



 
☞ Set the speed value by pressing button **2** or **3** (e.g.: 55 mph (90 km/h)).

You can then change the programmed speed using buttons **2** and **3**:


- by + or - 1 mph (km/h) = short press,
- by + or - 5 mph (km/h) = long press,
- in steps of + or - 5 mph (km/h) = maintained press.

☞ Switch the speed limiter on by pressing button **4**.

☞ Switch the speed limiter off by pressing button **4**: the display confirms that it has been switched off (OFF).



 ☞ Switch the speed limiter back on by pressing button **4** again.



## Return to normal driving

☞ Turn dial **1** to the "**0**" position: the speed limiter mode is deselected. The display returns to the distance recorder.

## Operating fault

In the event of a speed limiter malfunction, the speed is cleared resulting in flashing of the dashes.

Have it checked by a PEUGEOT dealer or a qualified workshop.



On a steep descent or in the event of sharp acceleration, the speed limiter will not be able to prevent the vehicle from exceeding the programmed speed.

To avoid any risk of jamming of the pedals:

- ensure that the mat is positioned correctly,
- do not fit one mat on top of another.

## Exceeding the programmed speed

Pressing the accelerator pedal to exceed the programmed speed will not have any effect unless you press the pedal **firmly** past the **point of resistance**.

The speed limiter is deactivated temporarily and the programmed speed, which is still displayed, flashes.

Returning to the programmed speed, by means of intentional or unintentional deceleration of the vehicle, automatically cancels the flashing of the programmed speed.

## CRUISE CONTROL

System which automatically maintains the speed of the vehicle at the value programmed by the driver, without any action on the accelerator pedal.

The cruise control is **switched on** manually: it requires a minimum vehicle speed of 25 mph (40 km/h) and the engagement of:

- fourth gear on the manual gearbox,
- second gear in sequential mode on the electronic gear control gearbox or automatic gearbox,
- position **A** on the electronic gear control gearbox or **D** on the automatic gearbox.


The cruise control is **switched off** manually or by pressing the brake or clutch pedal or on triggering of the ESP system for safety reasons.

It is possible to exceed the programmed speed temporarily by pressing the accelerator pedal.

To return to the programmed speed, simply release the accelerator pedal.

Switching off the ignition cancels any programmed speed value.

## Steering mounted controls

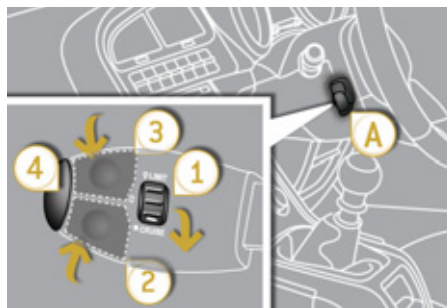


The controls of this system are grouped together on stalk **A**.

1. Cruise control mode selection dial
2. Speed programming/programmed value decrease button
3. Speed programming/programmed value increase button
4. Cruise control off/resume button



The cruise control cannot, in any circumstances, replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

## Displays in the instrument panel

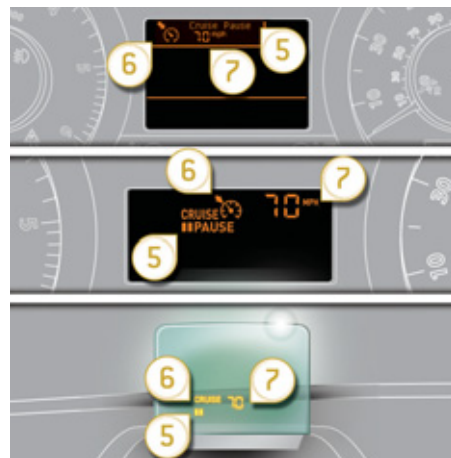

The programmed information is grouped together in the instrument panel screen.


5. Cruise control off/resume indication
6. Cruise control mode selection indication
7. Programmed speed value



This information also appears in the head-up display.

For more information on the head-up display, refer to the relevant page in this "Driving" section.

## Programming

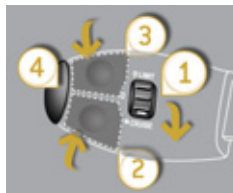

- ☞ Turn dial **1** to the **"CRUISE"** position: the cruise control mode is selected but is not switched on (OFF).
- ☞ Set the programmed speed by accelerating to the required speed, then press button **2** or **3** (e.g.: 70 mph (110 km/h)).



You can then change the programmed speed using buttons **2** and **3**:

- by + or - 1 mph (km/h) = short press,
- by + or - 5 mph (km/h) = long press,
- in steps of + or - 5 mph (km/h) = maintained press.

☞ Switch off the cruise control by pressing button **4**: the display confirms that it has been switched off (OFF).

☞ Switch the cruise control back on by pressing button **4** again.



## Exceeding the programmed speed

Intentional or unintentional exceeding of the programmed speed results in flashing of this speed in the screen.

Return to the programmed speed, by means of intentional or unintentional deceleration of the vehicle, automatically cancels the flashing of the speed.

## Return to normal driving

☞ Turn dial **1** to the **"0"** position: the cruise control mode is deselected. The display returns to the distance recorder.

## Operating fault

In the event of a cruise control malfunction, the speed is cleared resulting in flashing of the dashes.

Have it checked by a PEUGEOT dealer or a qualified workshop.



When the cruise control is switched on, be careful if you maintain the pressure on one of the programmed speed changing buttons: this may result in a very rapid change in the speed of your vehicle.

Do not use the cruise control on slippery roads or in heavy traffic.

On a steep descent, the cruise control will not be able to prevent the vehicle from exceeding the programmed speed.

To avoid any risk of jamming of the pedals:

- ensure that the mat is positioned correctly,
- never fit one mat on top of another.

## 6-SPEED MANUAL GEARBOX

### Engaging 5th or 6th gear

- Move the lever fully to the right to engage 5th or 6th gear.

### Engaging reverse gear



- Raise the ring under the knob and move the gear lever to the left then forwards.



Only engage reverse gear when the vehicle is stationary with the engine at idle.



As a safety precaution and to facilitate starting of the engine:

- always select neutral,
- press the clutch pedal.

## GEAR EFFICIENCY INDICATOR\*

System which reduces fuel consumption by advising the driver to change up on vehicles fitted with a manual gearbox.

### Operation

The system intervenes only when driving economically.

Depending on the driving situation and your vehicle's equipment, the system may advise you to skip one or more gears. You can follow this instruction without engaging the intermediate gears.

The gear recommended should not be considered compulsory. In fact, the configuration of the road, the amount of traffic and safety remain determining factors when choosing the best gear. Therefore, the driver remains responsible for deciding whether or not to follow the advice given by the system.

This function cannot be deactivated.



In the case of driving which makes particular demands on the performance of the engine (firm pressure on the accelerator pedal, for example, when overtaking...), the system will not recommend a gear change.

The system never suggests:

- engaging first gear,
- engaging reverse gear,
- engaging a lower gear.

Example:

- You are in third gear.



- You press the accelerator pedal moderately.



- The system may suggest that you engage a higher gear, if appropriate.



The information appears in the form of an arrow in the instrument panel screen.

Depending on your vehicle's equipment, this arrow may be accompanied by the recommended gear.

This equipment will become available during the year.

\* According to engine.

## 6-SPEED ELECTRONIC GEAR CONTROL GEARBOX


Six-speed electronic gear control gearbox which offers a choice between the comfort of fully automatic operation or the pleasure of manual gear changing.

Three driving modes are offered:

- **automatic** mode for automatic control of the gears by the gearbox,
- **sequential** mode for manual changing of the gears by the driver,
- **auto sequential** mode to overtake, for example, remaining in automatic mode while using the functions of the sequential mode.

A **Sport** function is available in automatic or sequential mode for a more dynamic style of driving.

### Gear lever

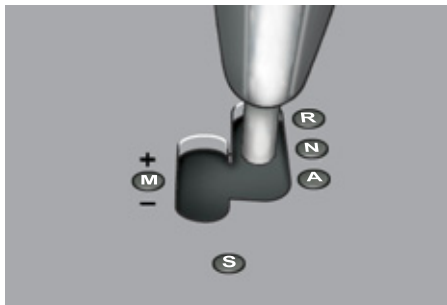

#### R. Reverse

- ☞ With your foot on the brake, move the lever upwards to select this position.

#### N. Neutral.

- ☞ With your foot on the brake, select this position to start.

#### A. Automatic mode.

- ☞ Move the lever downwards to select this mode.

#### M. +/- Sequential mode with manual changing of the gears.

- ☞ Move the lever downwards then to the left to select this mode, then:
  - push the lever forwards to change up a gear,
  - or pull the lever rearwards to change down a gear.

#### S. Sport function.

- ☞ Press this button to activate or deactivate this function.

### Steering mounted controls



#### +. Change up paddle to the right of the steering wheel.

- ☞ Press the back of the "+" steering mounted paddle to change up a gear.

#### -. Change down paddle to the left of the steering wheel.


- ☞ Press the back of the "-" steering mounted paddle to change down a gear.



The steering mounted paddles cannot be used to select neutral or engage or disengage reverse gear.



## Displays in the instrument panel

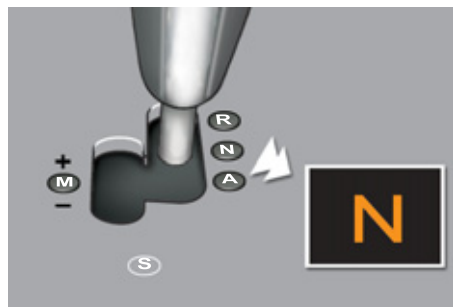

### Gear lever positions

**N.** Neutral

**R.** Reverse

**1, 2, 3, 4, 5, 6.** Gears in sequential mode

**AUTO.** This comes on when the automatic mode is selected. It goes off on changing to sequential mode.

**S.** Sport (Sport function)



☞ Place your **foot on the brake** when this warning lamp flashes (e.g.: when starting the engine).



There is an audible signal when reverse gear is engaged.

## Moving off

- ☞ Select position **N**.
- ☞ Press the brake pedal down fully.
- ☞ Start the engine.



**N** appears in the instrument panel screen.



**N** flashes in the instrument panel, accompanied by an audible signal and a message in the multifunction screen, if the gear lever is not in position **N** on starting.

**Foot on brake** flashes in the instrument panel, accompanied by an audible signal and a message in the multifunction screen, if the brake pedal is not pressed on starting.

- ☞ Keep your foot on the brake pedal, move the gear lever to position **A** or **M** to go forwards, or **R** to go backwards.
- ☞ Take your foot off the brake pedal, you can then move off.
- ☞ The parking brake is released automatically, otherwise release it manually.



**AUTO** and **1** or **R** appear in the instrument panel screen.

If position **R**, **A** or **M** is selected, even with the engine at idle, if the brakes are released the vehicle moves without any action on the accelerator. Never leave children unsupervised in the vehicle when the engine is running. When carrying out maintenance on the vehicle with the engine running, apply the parking brake and select position **N**.

## Sequential mode

- ☞ When the vehicle has moved off, select position **M** to change to sequential mode.



**AUTO** disappears and the gears engaged appear in succession in the instrument panel screen.

The gear change requests are only carried out if the engine speed permits.

It is not necessary to release the accelerator during gear changes.

When braking or slowing down, the gearbox changes down automatically to allow vehicle to pull away in the correct gear.





At very low speed, if reverse gear is requested, this will only be taken into account when the vehicle is immobilised. The **Foot on brake** warning lamp may flash in the instrument panel to prompt you to brake.

At high speed, if reverse gear is requested, the **N** indicator lamp will flash and the gearbox will change to neutral automatically. To engage a gear again, return the lever to position **A** or **M**.



On sharp acceleration, the gearbox will not change up unless the driver acts on the gear lever or the steering mounted paddles.

Never select neutral **N** while the vehicle is moving.

Only engage reverse gear **R** when the vehicle is immobilised with the brake pedal pressed.

## Automatic mode

Following use of the sequential mode, select position **A** to return to the automatic mode.



**AUTO** and the gear engaged appear in the instrument panel screen.

The gearbox is then operating in auto-active mode, without any action on the part of the driver. It continuously selects the most suitable gear in relation to the following parameters:

- style of driving,
- profile of the road.



For optimum acceleration, for example when overtaking another vehicle, press the accelerator pedal firmly past the point of resistance.

## "Auto sequential mode"

This mode enables you to overtake, for example, remaining in automatic mode while using the functions of the sequential mode.

Operate the **+** or **-** steering mounted paddle.

The gearbox engages the gear requested if the engine speed permits. **AUTO** is still displayed in the instrument panel.

After a few moments without any action on the controls, the gearbox resumes automatic control of the gears.

## Sport function

- Following selection of the sequential mode or automatic mode, press button **S** to activate the Sport function which offers you a more dynamic style of driving.



**S** appears next to the gear engaged in the instrument panel screen.

- Press button **S** again to deactivate the function.

**S** is then cleared from the instrument panel screen.



The gearbox returns to normal mode automatically each time the ignition is switched off.

## Stopping the vehicle

Before switching off the engine, you can choose to:

- move to position **N** to engage neutral,
- leave the gear engaged; in this case, it will not be possible to move the vehicle.

In both cases, it is essential that you apply the parking brake to immobilise the vehicle.



When immobilising the vehicle, with the engine running, it is essential to place the gear lever in neutral **N**.

Before carrying out any work in the engine compartment, check that the gear lever is in neutral **N** and that the parking brake is applied.

## Operating fault



With the ignition on, if this warning lamp comes on and **AUTO** flashes, accompanied by an audible signal and a message in the multifunction

screen, this indicates a fault with the gearbox.

Have it checked by a PEUGEOT dealer or a qualified workshop.



It is essential to press the brake pedal when starting the engine.

When parking, is it essential to apply the parking brake to immobilise the vehicle, whatever the circumstances.

## "PORSCHE TIPTRONIC SYSTEM" AUTOMATIC GEARBOX

Six speed automatic gearbox which offers a choice between the comfort of fully automatic operation, enhanced by sport and snow programmes, or manual gear changing.

Four driving modes are offered:

- **automatic** operation for electronic management of the gears by the gearbox,
- **sport** programme for a more dynamic style of driving,
- **snow** programme to improve driving when traction is poor,
- **manual** operation for sequential changing of the gears by the driver.

### Gear selection gate



1. Gear lever.
2. Button "S" (sport).
3. Button "\*" (snow).

### Gear lever



#### P. Park.

- Immobilisation of the vehicle, parking brake on or off.
- Starting the engine.

#### R. Reverse.

- Reversing manoeuvres, vehicle stationary, engine at idle.

#### N. Neutral.

- Immobilisation of the vehicle, parking brake on.
- Starting the engine.

#### D. Automatic operation.

- M +/-**. Manual operation with sequential changing of the six gears.

☞ Press forwards to change up through the gears.

or

☞ Press rearwards to change down through the gears.

### Displays in the instrument panel



When you move the lever in the gate to select a position, the corresponding indicator is displayed in the instrument panel.

**P.** Park

**R.** Reverse

**N.** Neutral

**D.** Drive (Automatic driving)

**S.** Sport programme

\*. Snow programme

**1 to 6.** Gear engaged during manual operation

- Invalid value during manual operation

## Moving off

- ☞ With your foot on the brake, select position **P** or **N**.
- ☞ Start the engine.

If this procedure is not followed, there is an audible signal, accompanied by a message in the multifunction screen.

- ☞ With the engine running, press the brake pedal.
- ☞ Release the parking brake, unless it is programmed to automatic mode.
- ☞ Select position **R**, **D** or **M**.
- ☞ Gradually release the brake pedal.

The vehicle moves off immediately.



If position **N** is engaged inadvertently while driving, allow the engine to return to idle then engage position **D** to accelerate.



When the engine is running at idle, with the brakes released, if position **R**, **D** or **M** is selected, the vehicle moves even without the accelerator being pressed.

When the engine is running, never leave children in the vehicle without supervision.

When carrying out maintenance with the engine running, apply the parking brake and select position **P**.

## Automatic operation

- ☞ Select position **D** for **automatic** changing of the six gears.

The gearbox then operates in auto-adaptive mode, without any intervention on the part of the driver. It continuously selects the most suitable gear according to the style of driving, the profile of the road and the load in the vehicle.

For maximum acceleration without touching the lever, press the accelerator pedal down fully (kick down). The gearbox changes down automatically or maintains the gear selected until the maximum engine speed is reached.

On braking, the gearbox changes down automatically to provide efficient engine braking.

If you release the accelerator sharply, the gearbox will not change to a higher gear for safety reasons.



Never select position **N** while the vehicle is moving.

Never select positions **P** or **R** unless the vehicle is completely stationary.

## Sport and snow programmes

These two special programmes supplement the automatic operation in very specific conditions of use.

### Sport programme "S"

- ☞ Press button "**S**", after starting the engine.

The gearbox automatically favours a dynamic style of driving.



**S** appears in the instrument panel.

### Snow programme "\*"

- ☞ Press button "\*", after starting the engine.

The gearbox adapts to driving on slippery roads.

This programme improves starting and drive when traction is poor.



\* appears in the instrument panel.

## Return to automatic operation

- ☞ At any time, press the button selected again to quit the programme engaged and return to auto-adaptive mode.

## Manual operation

- ☞ Select position **M** for **sequential** changing of the six gears.
- ☞ Push the lever towards the **+** sign to change up a gear.
- ☞ Pull the lever towards the **-** sign to change down a gear.

It is only possible to change from one gear to another if the vehicle speed and engine speed permit; otherwise, the gearbox will operate temporarily in automatic mode.



**D** disappears and the gears engaged appear in succession in the instrument panel.

If the engine speed is too low or too high, the gear selected flashes for a few seconds, then the actual gear engaged is displayed.

It is possible to change from position **D** (automatic) to position **M** (manual) at any time.

When the vehicle is stationary or moving very slowly, the gearbox selects gear **M1** automatically.

The sport and snow programmes do not operate in manual mode.

## Invalid value during manual operation



This symbol is displayed if a gear is not engaged correctly (selector between two positions).

## Stopping the vehicle

Before switching off the engine, you can engage position **P** or **N** to place the gearbox in neutral.

In both cases, apply the parking brake to immobilise the vehicle, unless it is programmed to automatic mode.



If the lever is not in position **P**, when the driver's door is opened or approximately 45 seconds after the ignition is switched off, there is an audible signal and a message appears.

- ☞ Return the lever to position **P**; the audible signal stops and the message disappears.

## Operating fault



When the ignition is on, the lighting of this warning lamp, accompanied by an audible signal and a message in the multifunction screen, indicates a gearbox malfunction.

In this case, the gearbox switches to back-up mode and is locked in 3rd gear. You may feel a substantial knock when changing from **P** to **R** and from **N** to **R**. This will not cause any damage to the gearbox.

Do not exceed 60 mph (100 km/h), local speed restrictions permitting.

Have it checked by a PEUGEOT dealer or a qualified workshop.

This warning lamp may also come on if a door is opened.



You risk damaging the gearbox:

- if you press the accelerator and brake pedals at the same time,
- if you force the lever from position **P** to another position when the battery is flat.

To reduce fuel consumption when stationary for long periods with the engine running (traffic jam...), position the gear lever at **N** and apply the parking brake, unless it is programmed in automatic mode.

## STOP & START

The Stop & Start system puts the engine temporarily into standby - STOP mode - during stops in the traffic (red lights, traffic jams, or other...). The engine restarts automatically - START mode - as soon as you want to move off. The restart takes place instantly, quickly and silently.

Perfect for urban use, the Stop & Start system reduces fuel consumption and exhaust emissions as well as the noise level when stationary.

### Operation

#### Going into engine STOP mode

The **"ECO"** warning lamp comes on in the instrument panel and the engine goes into standby:

- **with the electronic gearbox system**, at speeds below 4 mph (6 km/h), press the brake pedal or put the gear lever in position **N**.

If your vehicle is fitted with the system, a time counter calculates the sum of the periods in STOP mode during a journey. It rests itself to zero every time the ignition is switched on with the key.



onds gear.

STOP mode does not affect the functionality of the vehicle, such as for example, braking, power steering...



Never refuel with the engine in STOP mode; you must switch off the ignition with the key.

#### Special cases: STOP mode not available

STOP mode is not invoked when:

- the driver's door is open,
- the driver's seat belt is not fastened,
- the vehicle has not exceeded 6 mph (10 km/h) since the last engine start using the key,
- the electric parking brake is applied or being applied,
- the engine is needed to maintain a comfortable temperature in the passenger compartment,
- demisting is active,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed to assure control of a system.

In this case, the **"ECO"** warning lamp flashes for a few seconds then goes off.

**This operation is perfectly normal.**

## Going into engine START mode



The **"ECO"** warning lamp goes off and the engine starts with the **electronic gearbox system**:

- gear lever in position **A** or **M**, release the brake pedal,
- or gear lever in position **N** and the brake pedal released, move the gear lever to position **A** or **M**,
- or engage reverse gear.

## Special cases: START invoked automatically

START mode is invoked automatically when:


- the driver's door is open,
- the driver's seat belt is not fastened,
- the speed of the vehicle exceeds 7 mph (11 km/h) with the electronic gearbox system,
- the electric parking brake is being applied,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed for control of a system.



In this case the **"ECO"** warning lamp flashes for a few seconds, then goes off.

**This operation is perfectly normal.**

## Deactivation

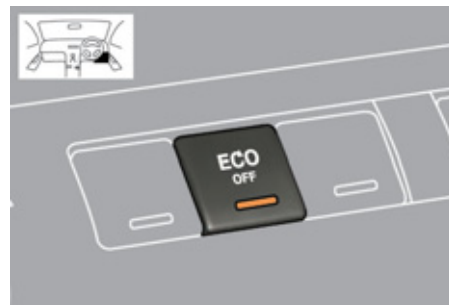

At any time, press the **"ECO OFF"** switch to deactivate the system.

This is confirmed by the switch warning lamp coming on accompanied by a message in the screen.



If the system has been deactivated in STOP mode, the engine restarts immediately.


## Reactivation

Press the **"ECO OFF"** switch again.  
The system is active again; this is confirmed by the switch warning lamp going off and a message in the screen.



The system is reactivated automatically at every new start using the key.

## Operating fault

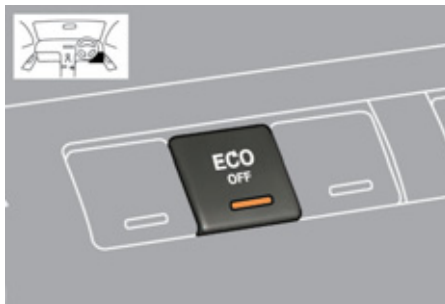

In the event of a fault with the system, the **"ECO OFF"** switch warning lamp flashes then comes on continuously. Have it checked by a PEUGEOT dealer or a qualified workshop.

In the event of a fault in STOP mode, the vehicle may stall. It is then necessary to switch off the ignition and start the engine again using the key.

## Maintenance




Before doing anything under the bonnet, deactivate the Stop & Start system to avoid any risk of injury resulting from automatic operation of START mode.

This system requires a 12 V battery with a special specification and technology (reference numbers available from PEUGEOT dealers).

Fitting a battery not listed by PEUGEOT introduces the risk of malfunction of the system.


To charge the battery, use a 12 V charger and observe the polarity.

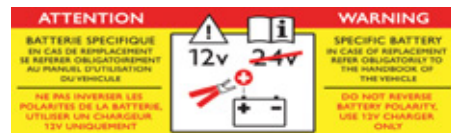

The Stop & Start system makes use of advanced technology. For any work on the system go to a qualified workshop with the skills and equipment required, which a PEUGEOT dealer is able to provide.



## VISUAL AND AUDIBLE FRONT AND/OR REAR PARKING SENSORS

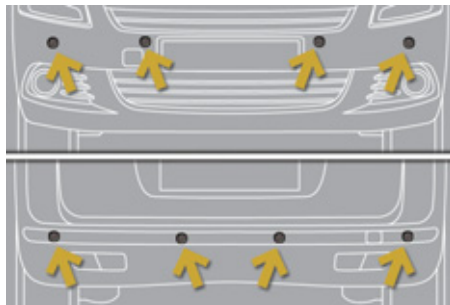


System consisting of four proximity sensors, installed in the front and/or rear bumper.

It detects any obstacle (person, vehicle, tree, barrier...) located behind the vehicle, however, it will not be able to detect obstacles located immediately below the bumper.



An object, such as a stake, a roadworks cone or any other similar object may be detected at the start of the manoeuvre but may no longer be detected when the vehicle moves nearer to it.

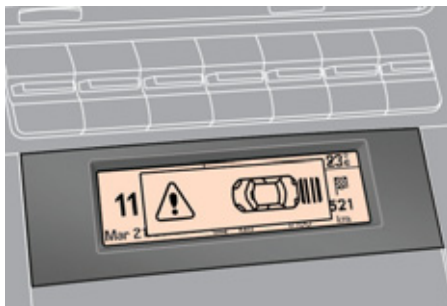

The parking sensors are **switched on**:

- by engaging reverse gear,
- at a speed below 6 mph (10 km/h) in forward gear.

This is accompanied by an audible signal and display of the vehicle in the multifunction screen.



The proximity information is indicated by:

- an audible signal which becomes more rapid as the vehicle approaches the obstacle,
- a graphic in the multifunction screen, with blocks which move closer to the vehicle.

The obstacle is located in relation to the emission of the audible signal by the speakers; front or rear and right or left.

When the distance between the vehicle and the obstacle is less than approximately thirty centimetres, the audible signal becomes continuous and/or the "Danger" symbol appears, depending on the multifunction screen version.


The parking sensors are **switched off**:

- when you exit reverse gear,
- when the speed is higher than 6 mph (10 km/h) in forward gear,
- when the vehicle has been stationary for more than three seconds in forward gear.



The parking sensor system cannot, in any circumstances, replace the need for vigilance and responsibility on the part of the driver.

## Deactivation

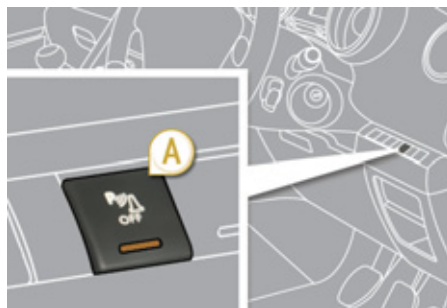

- ☞ Press button **A**, the warning lamp comes on, the system is fully deactivated.



The system will be deactivated automatically when a trailer is being towed or when a bicycle carrier is fitted (vehicle fitted with a towbar or bicycle carrier recommended by PEUGEOT).

## Reactivation

- ☞ Press button **A** again, the warning lamp switches off, the system is re-activated.

## Operating fault



If an operating fault occurs, this warning lamp is displayed in the instrument panel and/or a message appears in the multifunction screen, accompanied by an audible signal (short beep), when reverse gear is engaged. Contact a PEUGEOT dealer or a qualified workshop.




In bad weather or in winter, ensure that the sensors are not covered with mud, ice or snow. When reverse gear is engaged, an audible signal (long beep) indicates that the sensors may be dirty. When the vehicle is being driven at a speed below approximately 6 mph (10 km/h), certain sources of noise (motorcycles, lorries, pneumatic drills, ...) may trigger the parking sensor audible signals.

## PARKING SPACE SENSORS

After measuring the parking space available between two vehicles or obstacles, this system gives you information on:

- the possibility of fitting into a free space, depending on the dimensions of your vehicle and the distances needed for manoeuvring,
- the level of difficulty of the manoeuvre to be performed.

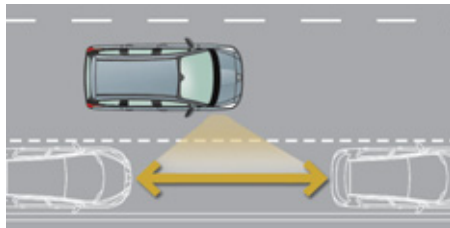


The system does not measure spaces which are clearly much smaller or larger than the size of the vehicle.

## Displays in the instrument panel



The parking space sensor function warning lamp can have three different states:

- **off:** the function is not selected,
- **on fixed:** the function is selected but the conditions for measurement are not yet met (direction indicator not operating, speed too high) or the measurement phase has ended,
- **flashing:** measurement is in progress or the message is being displayed.

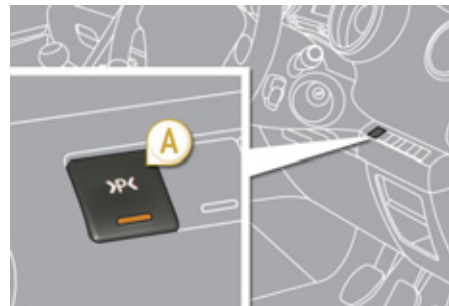

You can activate the "parking space sensor" function by pressing button **A**. The fixed illumination of the warning lamp indicates that the function is selected.

## Operation

You have identified a parking space:


- ☞ Press button **A** to activate the function.
- ☞ Activate the direction indicator on the side where the space is to be measured.
- ☞ During the measuring, go forward the length of the space, at a speed less than 12 mph (approximately 20 km/h), to prepare for your manoeuvre.

The system then measures the size of the space.


- ☞ The system informs you of the level of difficulty of the manoeuvre via a message in the multifunction screen accompanied by an audible signal.

The function displays the following types of message:

### Parking possible

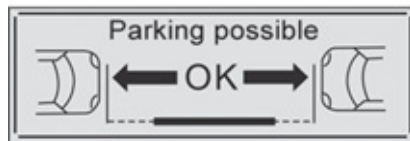

### Parking difficult

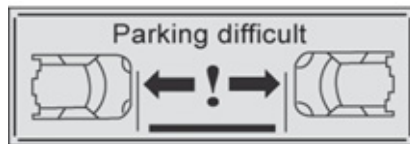

### Parking not advised



The function deactivates itself automatically:

- when you engage reverse gear,
- when you switch off the ignition,
- five minutes after activation of the function or after the last measurement operation,
- if the vehicle speed exceeds the threshold of 45 mph (approximately 70 km/h) for one minute.



If the lateral distance between your vehicle and the parking space is too great, the system may not operate.



- The function remains available after each measurement and so can measure a number of places successively.
- In bad weather or in winter, ensure that the sensors are not covered by dirt, or by ice or snow.
- The parking space sensor function deactivates the front parking sensors during the space measuring phase when you are in forward gear.

If there is a malfunction, have the system checked by a PEUGEOT dealer or a qualified workshop.

## PEUGEOT & TOTAL

### PARTNERS IN PERFORMANCE AND PROTECTION OF THE ENVIRONMENT

#### Innovation at the service of performance

The TOTAL Research and Development teams develop lubricants for PEUGEOT which satisfy the requirements of the latest technical innovations incorporated in PEUGEOT vehicles.

This ensures that you obtain the best performance and the maximum engine life.

#### Reduced exhaust emissions

TOTAL lubricants are formulated to optimise the efficiency of engines and the protection of the emissions post-treatment systems. It is crucial to observe the servicing recommendations made by PEUGEOT to ensure correct operation.



PEUGEOT RECOMMENDS TOTAL



OFFICIAL PARTNERS


## BONNET

### Opening

- ☞ Open the front left door.
- ☞ Pull the interior bonnet release lever **A**, located at the bottom of the door aperture.



- ☞ Push the exterior safety catch **B** to the left and raise the bonnet.

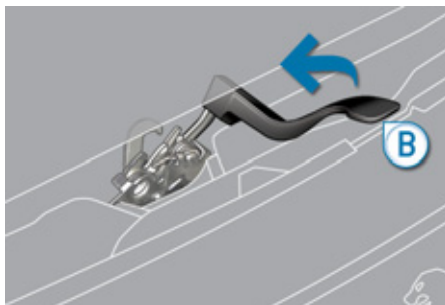

- ☞ Unclip the stay **C** from its housing.
- ☞ Fix the stay in the notch to hold the bonnet open.



The location of the interior bonnet release lever prevents opening of the bonnet while the front left door is closed.

Do not open the bonnet in high winds.

When the engine is hot, handle the exterior safety catch and the bonnet stay with care (risk of burns).




Before doing anything under the bonnet, switch off the Stop & Start system to avoid any risk of injury resulting from an automatic change to START mode.

### Closing

- ☞ Take the stay out of the support notch.
- ☞ Clip the stay in its housing.
- ☞ Lower the bonnet and release it at the end of its travel.
- ☞ Pull on the bonnet to check that it is secured correctly.

## RUNNING OUT OF FUEL (DIESEL)

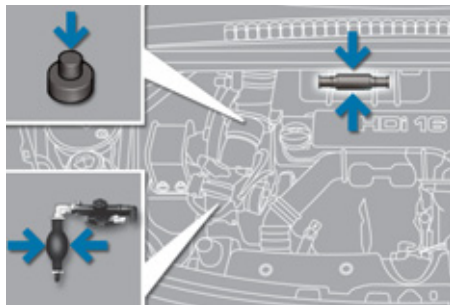

On vehicle fitted with HDi engines, the fuel system must be primed if you run out of fuel; refer to the engine compartment view on the "Diesel engine" page. If the tank on your vehicle is fitted with a misfuel prevention device, refer to the section "Access - § Misfuel prevention (Diesel)".

### 1.6 litre Turbo HDi engine

- ☞ Fill the fuel tank with at least five litres of diesel.
- ☞ Open the bonnet.
- ☞ If necessary, unclip the styling cover for access to the priming pump.
- ☞ Squeeze and release the priming pump repeatedly until resistance is felt (there may be resistance at the first press).
- ☞ Operate the starter until the engine starts (if the engine does not start at the first attempt, wait around 15 seconds before trying again).
- ☞ If the engine does not start after a few attempts, operate the priming pump again then start the engine.
- ☞ Clip the styling cover back in place.
- ☞ Close the bonnet.


### 2 litre Turbo HDi engine

- ☞ Fill the fuel tank with at least five litres of Diesel.
- ☞ Open the bonnet.
- ☞ Unclip the style cover for access to the priming pump.
- ☞ Slacken the bleed screw.
- ☞ Squeeze and release the priming pump repeatedly until fuel appears in the transparent pipe with the green connector.
- ☞ Retighten the bleed screw.
- ☞ Operate the starter until the engine starts.
- ☞ Put the style cover back in position and clip it in place.
- ☞ Close the bonnet.



If the engine does not start first time, don't keep trying. Start the procedure again from the beginning.



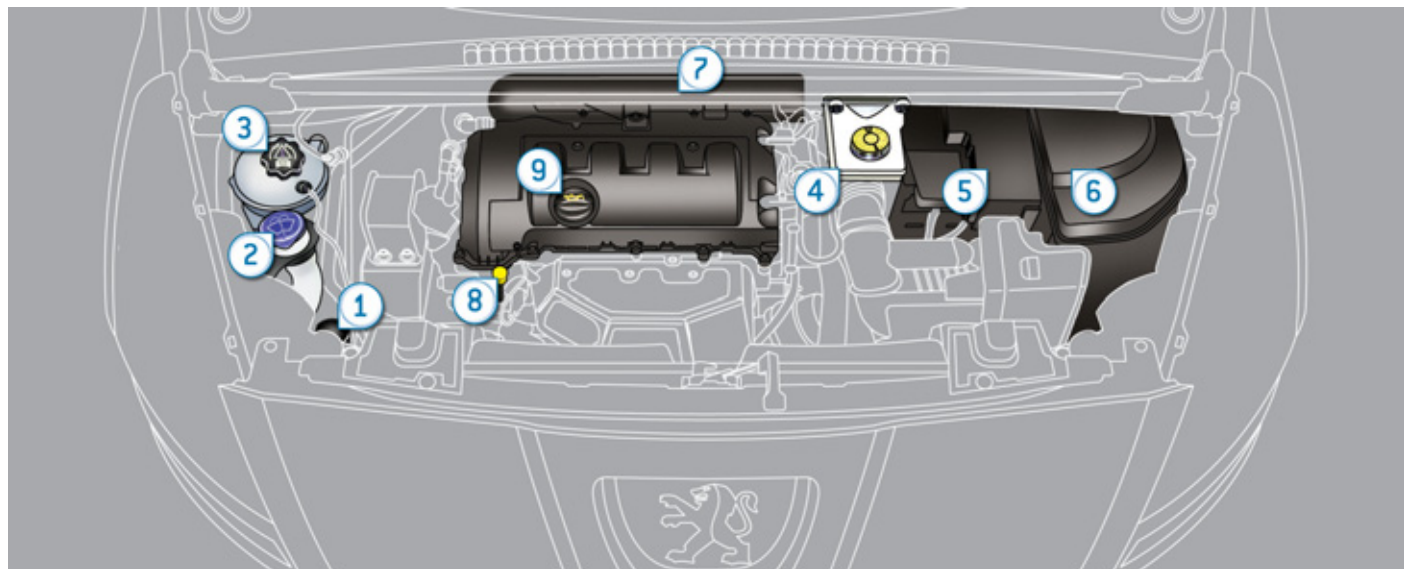


## PETROL ENGINES

The various caps and covers allow access for checking the levels of the various fluids and for replacing certain components.

- |  |                           |                           |
|--|---------------------------|---------------------------|
| 1. Power steering reservoir.               | 4. Brake fluid reservoir. | 7. Air filter.            |
| 2. Screenwash and headlamp wash reservoir. | 5. Battery/Fuses.         | 8. Engine oil dipstick.   |
| 3. Coolant reservoir.                      | 6. Fusebox.               | 9. Engine oil filler cap. |



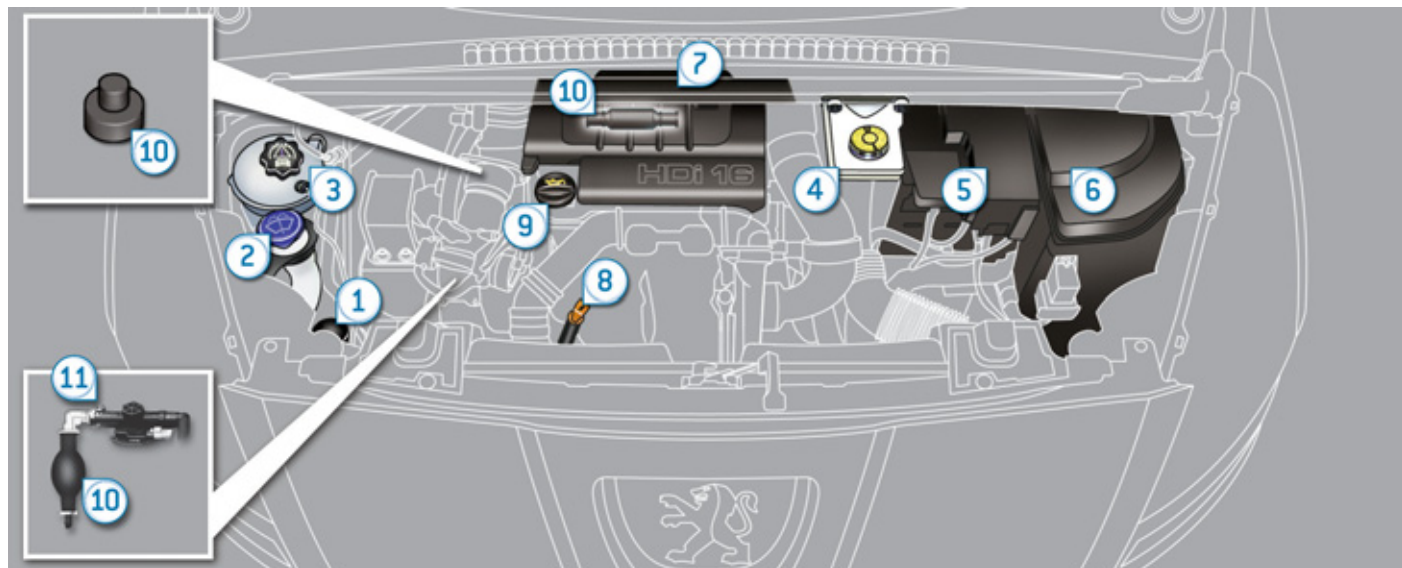

## DIESEL ENGINES

The various caps and covers allow access for checking the levels of the various fluids, for replacing certain components and for priming the fuel system.

- |  |                           |                           |
|--|---------------------------|---------------------------|
| 1. Power steering reservoir.               | 4. Brake fluid reservoir. | 8. Engine oil dipstick.   |
| 2. Screenwash and headlamp wash reservoir. | 5. Battery/Fuses.         | 9. Engine oil filler cap. |
| 3. Coolant reservoir.                      | 6. Fusebox.               | 10. Priming pump*.        |
|  | 7. Air filter.            | 11. Bleed screw*.         |

\* According to engine.

## CHECKING LEVELS

Check all of these levels regularly and top them up if necessary, unless otherwise indicated.

If a level drops significantly, have the corresponding system checked by a PEUGEOT dealer or a qualified workshop.



When working under the bonnet, take care, as certain areas of the engine may be extremely hot (risk of burns).

### Oil level



The check is carried out either when the ignition is switched on using the oil level indicator on the instrument panel, or using the dipstick.

This manual check will only be correct if the vehicle is on level ground and the engine has been off for more than 30 minutes.

After topping up the oil, the check when switching on the ignition with the oil level indicator in the instrument panel will only be valid 30 minutes after topping up.



It is normal to top up the oil level between services. PEUGEOT recommends that you check the oil level and top up if necessary every 3 000 miles (5 000 kilometres).

### Engine oil change

Refer to the servicing booklet for details of the interval for this operation.

In order to maintain the reliability of the engine and emission control system, the use of additives in the engine oil is prohibited.

### Oil specification

The oil must be the correct grade for your engine and conform to the manufacturer's recommendations.

### Brake fluid level



The brake fluid level should be close to the "MAX" mark. If it is not, check the brake pad wear.

### Changing the fluid

Refer to the servicing booklet for details of the interval for this operation.

### Fluid specification

The brake fluid must conform to the manufacturer's recommendations and meet the DOT4 standard.

### Power steering fluid level



The power steering fluid level should be close to the "MAX" mark. Unscrew the cap, with the engine cold, to check the level.

### Coolant level



The coolant level should be close to the "MAX" mark but should never exceed it.

When the engine is warm, the temperature of the coolant is regulated by the fan. This can operate with the ignition off.

**On vehicles which are fitted with a particle emission filter, the fan may operate after the vehicle has been switched off, even if the engine is cold.**

In addition, as the cooling system is pressurised, wait at least one hour after switching off the engine before carrying out any work.

To avoid any risk of scalding, unscrew the cap by two turns to allow the pressure to drop. When the pressure has dropped, remove the cap and top up the level.

### Changing the coolant

The coolant does not have to be changed.

### Fluid specification

The coolant must conform to the manufacturer's recommendations.

### Screenwash and headlamp wash fluid



In the case of vehicles fitted with headlamp washers, the low fluid level is indicated by an audible signal and a message in the instrument panel screen.

Top up the reservoir when you stop the vehicle.

## Fluid specification

For optimum cleaning and to avoid freezing, this fluid must not be topped up with or replaced with plain water.

## Diesel additive level (Diesel engine with particle emission filter)

The additive reservoir low level is indicated by fixed illumination of this warning lamp, accompanied by an audible warning and a message in the multifunction screen.

## Topping up

This additive must be topped up by a PEUGEOT dealer or a qualified workshop without delay.

## Used products



Avoid prolonged contact of used oil or fluids with the skin.

Most of these fluids are harmful to health or indeed very corrosive.



Do not discard used oil or fluids into sewers or onto the ground.

Take used oil to a PEUGEOT dealer or a qualified workshop (France) or to an authorised waste disposal site.

## CHECKS

Unless otherwise indicated, check these components in accordance with the servicing booklet and according to your engine.

Otherwise, have them checked by a PEUGEOT dealer or a qualified workshop.


### Battery



The battery does not require any maintenance.

However, check that the terminals are clean and correctly tightened, particularly in summer and winter.

When carrying out work on the battery, refer to the "Practical information" section for details of the precautions to be taken before disconnecting the battery and following its reconnection.

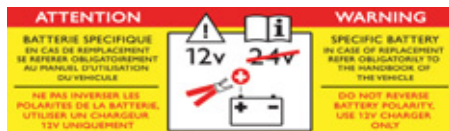

The presence of this label, in particular with the Stop & Start system, indicates the use of a specific 12 V lead-acid battery with special technology and specification, for which the involvement of a PEUGEOT dealer or a qualified workshop is required when replacing or disconnecting the battery.

Failure to observe this recommendation may shorten the life of the battery.

## Air filter



Refer to the servicing booklet for details of the replacement intervals for these components.

Depending on the environment (e.g. dusty atmosphere) and the use of the vehicle (e.g. city driving), **replace them twice as often if necessary** (refer to the "Engines" paragraph).

## Oil filter



Replace the oil filter each time the engine oil is changed.

Refer to the servicing booklet for details of the replacement interval for this component.

### Dust filter/Anti-odour filter (activated carbon)

Your vehicle is fitted with a filter which traps certain dust and limits odours in the ventilation and air conditioning.

Refer to the Warranty and Maintenance Record for its replacement interval.

Do not hesitate to change it if you notice unpleasant odours, contact a PEUGEOT dealer.

A clogged passenger compartment filter may reduce the performance of the air conditioning system and produce unpleasant odours.

### Particle emission filter (Diesel)

Maintenance of the particle emission filter must be carried out by a PEUGEOT dealer or a qualified workshop.



On a new vehicle, the first few particle emissions filter regenerations may be accompanied by a "burning" smell, which is perfectly normal. Following prolonged operation of the vehicle at very low speed or at idle, you may, in exceptional circumstances, notice water vapour from the exhaust on acceleration. This does not affect the performance of the vehicle or the environment.

### Manual gearbox



The gearbox does not require any maintenance (no oil change).

Refer to the servicing booklet for the details of the level checking interval for this component.

### 6-speed electronic gearbox system



The gearbox does not require any maintenance (no oil change).

Refer to the servicing booklet for details of the checking interval for this component.

### Automatic gearbox



The gearbox does not require any maintenance (no oil change).

Refer to the servicing booklet for details of the level checking interval for this component.

### Brake pads



Brake wear depends on the style of driving, particularly in the case of vehicles used in town, over short distances. It may be necessary to have the

condition of the brakes checked, even between vehicle services.

Unless there is a leak in the circuit, a drop in the brake fluid level indicates that the brake pads are worn.

### Brake disc wear



For information on checking brake disc wear, contact a PEUGEOT dealer or a qualified workshop.

### Electric parking brake



This system does not require any routine servicing. However, in the event of a problem, have the system checked by a PEUGEOT dealer or a qualified workshop.


For more information, see "Driving - Electric parking brake - § Operating faults".

## TEMPORARY PUNCTURE REPAIR KIT (5 SEAT VERSION)\*

Complete system consisting of a compressor and a sealant cartridge which permits **temporary repair** of a tyre so that you can drive to the nearest garage.

It is designed to repair most punctures which could affect the tyre, located on the tyre tread or shoulder.


### Access to the kit

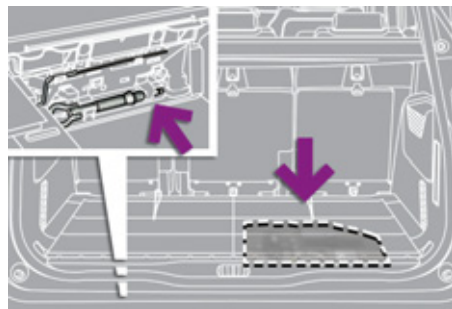

The kit is located in the boot under the concertina board.

Tools 4 and 5 are located in the boot interior trim, on the left-hand side.

### List of tools

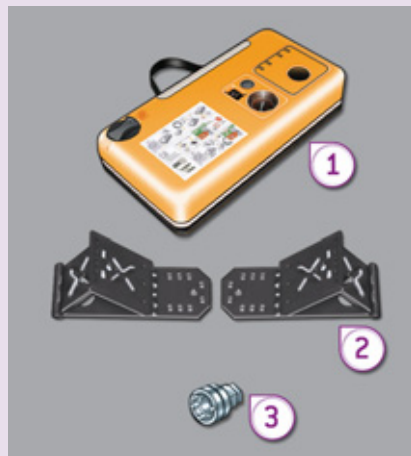

All of these tools are specific to your vehicle. Do not use them for other purposes.

#### 1. 12 V compressor.

Contains a sealant cartridge for the temporary repair of a tyre and can be used to adjust the tyre pressures.

#### 2. Two chocks to chock the vehicle.

#### 3. Socket for security bolts (located in the glove box\*).

For adapting the wheelbrace to the special security bolts.

### Other accessories



#### 4. Removable towing eye.

Refer to the paragraph "Towing the vehicle".

#### 5. Electric parking brake emergency release control.

Refer to "Electric parking brake" in the "Driving" section.

\* Depending on destination country.

## Description of the kit



- A. "Sealant" or "Air" position selector.
- B. On "I"/off "O" switch.
- C. Deflation button.
- D. Pressure gauge (in bar or p.s.i.).
- E. Compartment housing:
  - a cable with adaptor for 12 V socket,
  - various inflation adaptors for accessories, such as balls, bicycle tyres...



- F. Sealant cartridge.
- G. White pipe with cap for repair.
- H. Black pipe for inflation.
- I. Speed limit sticker.



The speed limit sticker I must be affixed to the vehicle's steering wheel to remind you that a wheel is in temporary use.

Do not exceed a speed of 50 mph (80 km/h) when driving with a tyre repaired using this type of kit.

## Repair procedure


### 1. Sealing



- ☞ Switch off the ignition.
- ☞ Turn the selector **A** to the "sealant" position.
- ☞ Check that the switch **B** is in position "O".



- ☞ Uncoil the white pipe **G** fully.
- ☞ Unscrew the cap from the white pipe.
- ☞ Connect the white pipe to the valve of the tyre to be repaired.

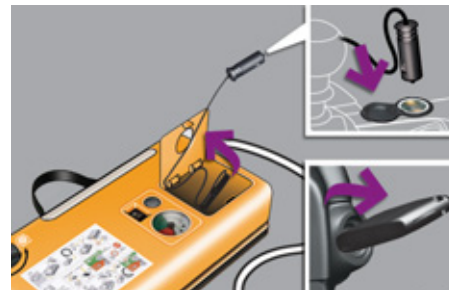

- ☞ Connect the compressor's electric plug to the vehicle's 12 V socket.
- ☞ Start the vehicle and leave the engine running.



Avoid removing any foreign bodies which have penetrated into the tyre.



Take care, this product is harmful (e.g. ethylene-glycol, colophony...) if swallowed and causes irritation to the eyes.

Keep it out of reach of children.






- ☞ Switch on the compressor by moving the switch **B** to position **"I"** until the tyre pressure reaches 2.0 bars. The sealant is injected into the tyre under pressure; do not disconnect the pipe from the valve during this operation (risk of splashing).



Do not start the compressor before connecting the white pipe to the tyre valve: the sealant product would be expelled through the pipe.



If after around 5 to 7 minutes the pressure is not attained, this indicates that the tyre is not repairable; contact a PEUGEOT dealer or a qualified workshop for assistance.

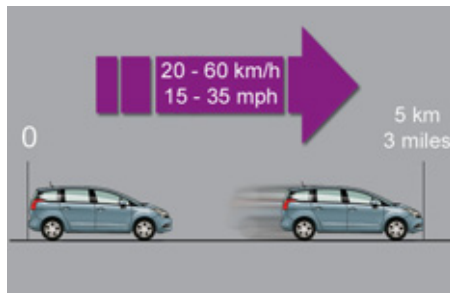

- ☞ Remove the kit and screw the cap back on the white pipe. Take care to avoid staining your vehicle with traces of fluid. Keep the kit to hand.
- ☞ Drive immediately for approximately three miles (five kilometres), at reduced speed (between 15 and 35 mph [20 and 60 km/h]), to plug the puncture.
- ☞ Stop to check the repair and the tyre pressure using the kit.



### Tyre under-inflation detection

If the vehicle is fitted with tyre under-inflation detection, the under-inflation warning lamp will remain on after the wheel has been repaired until the system is reinitialised by a PEUGEOT dealer or a qualified workshop.



## 2. INFLATION



- ☞ Turn the selector **A** to the "air" position.
- ☞ Uncoil the black pipe **H** fully.
- ☞ Connect the black pipe to the valve of the wheel.



- ☞ Connect the compressor's electric plug to the vehicle's 12 V socket.
- ☞ Start the vehicle again and leave the engine running.
- ☞ Adjust the pressure using the compressor (to inflate: switch **B** in position "I"; to deflate: switch **B** in position "O" and press button **C**), in accordance with the vehicle's tyre pressure label (located on the left hand door aperture).



A loss of pressure indicates that the puncture has not been fully plugged; contact a PEUGEOT dealer or qualified workshop for assistance.


- ☞ Remove and stow the kit.
- ☞ Drive at reduced speed (50 mph [80 km/h] max) limiting the distance travelled to approximately 120 miles (200 km).



- ☞ Visit a PEUGEOT dealer or a qualified workshop as soon as possible.

You must inform the technician that you have used this kit. After inspection, the technician will inform you whether the tyre can be repaired or must be replaced.

## Removing the cartridge

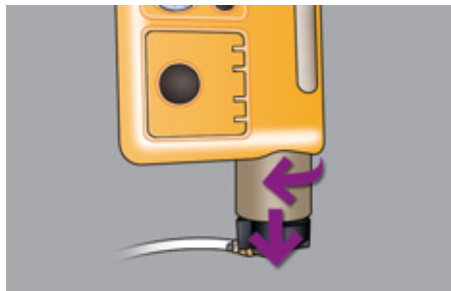

- ☞ Stow the black pipe.
- ☞ Detach the angled base from the white pipe.
- ☞ Support the compressor vertically.
- ☞ Unscrew the cartridge from the bottom.



Beware of discharges of fluid.  
The expiry date of the fluid is indicated on the cartridge.

The sealant cartridge is designed for single use; even if only partly used, it must be replaced.

After use, do not discard the cartridge into the environment, take it to an authorised waste disposal site or a PEUGEOT dealer.

Do not forget to obtain a new sealant cartridge, available from PEUGEOT dealers or from a qualified workshop.


## Checking tyre pressures/ inflating accessories

You can also use the compressor, without injecting any product, to:

- check or adjust the pressure of your tyres,
- inflate other accessories (balls, bicycle tyres...).




- ☞ Turn the selector **A** to the "Air" position.
  - ☞ Uncoil the black pipe **H** fully.
  - ☞ Connect the black pipe to the valve of the wheel or accessory.
- If necessary, fit one of the adaptors supplied with the kit first.

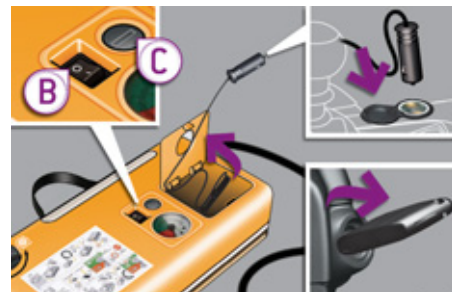

- ☞ Connect the compressor's electrical connector to the vehicle's 12 V socket.
- ☞ Start the vehicle and let the engine run.
- ☞ Adjust the pressure using the compressor (to inflate: switch **B** in position "I"; to deflate: switch **B** in position "O" and press button **C**), according to the vehicle's tyre pressure label or the accessory's pressure label.
- ☞ Remove the kit then stow it.

## TEMPORARY PUNCTURE REPAIR KIT (7 SEAT VERSION)\*

Complete system consisting of a compressor and a bottle of sealant which permits **temporary repair** of the tyre so that you can drive to the nearest garage.

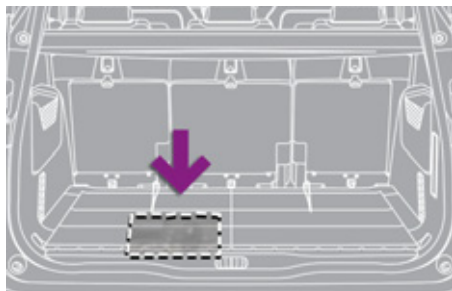

The kit is located in the boot, under the left hand seat in the 3rd row.




This kit is available from a PEUGEOT dealer or a qualified workshop.


It is designed to repair holes of a maximum diameter of 6 mm, only where located on the tyre tread or shoulder. Avoid removing any foreign bodies which have penetrated the tyre.

### Using the kit


- ☞ Switch off the ignition.
- ☞ Tick the wheel to be repaired on the speed limitation sticker enclosed then affix the sticker to the vehicle's steering wheel to remind you that a wheel is in temporary use.
- ☞ Clip the bottle **1** on the compressor **2**.

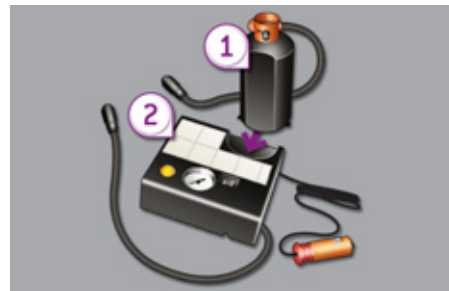

- ☞ Check that the switch **A** is tilted to position "0".
- ☞ Connect the pipe of the bottle **1** to the valve of the tyre to be repaired.
- ☞ Unwind the pipe of the compressor **2** fully, then connect it to the bottle.

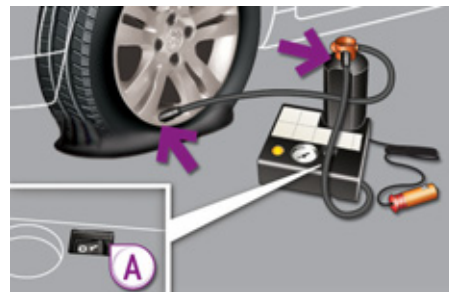

- ☞ Connect the compressor's electric plug to the vehicle's 12 V socket.
- ☞ Start the vehicle and leave the engine running.

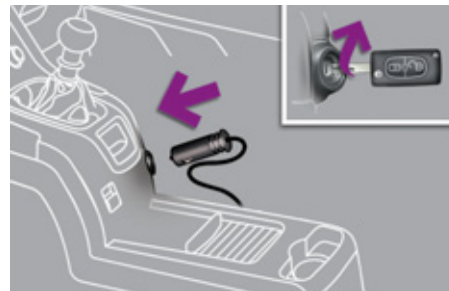


\* According to country of sale.

- Switch on the compressor by tilting the switch **A** to position "1" until the tyre pressure reaches 2.0 bars.




If this pressure has not been reached after approximately five to ten minutes, the tyre cannot be repaired; contact a PEUGEOT or a qualified workshop to have your vehicle repaired.


- Remove the compressor and store the bottle in the plastic bag, supplied in the kit, to avoid staining your vehicle with traces of fluid.
- Drive immediately for approximately two miles (three kilometres), at reduced speed (between 10 and 35 mph [20 and 60 km/h]), to plug the puncture.
- Stop to check the repair and the pressure.
- Connect the compressor pipe directly to the valve of the repaired wheel.

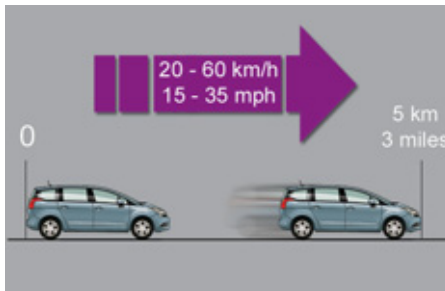

- ☞ Connect the compressor's electric plug to the vehicle's 12 V socket again.
- ☞ Start the vehicle again and leave the engine running.

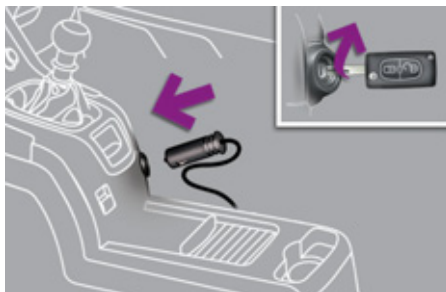

- ☞ Adjust the pressure using the compressor (to inflate: switch **A** in position "1"; to deflate: switch **A** in position "0" and press button **B**), in accordance with the vehicle's tyre pressure label (located on the door aperture on the driver's side), then remember to check that the leak is plugged correctly (no further loss of pressure after several miles [kilometres]).
- ☞ Remove the compressor, then store the whole kit.
- ☞ Drive at reduced speed (50 mph [80 km/h] max) for no more than approximately 125 miles (200 km).
- ☞ Visit a PEUGEOT dealer or a qualified workshop as soon as possible to have the tyre repaired or replaced by a technician.

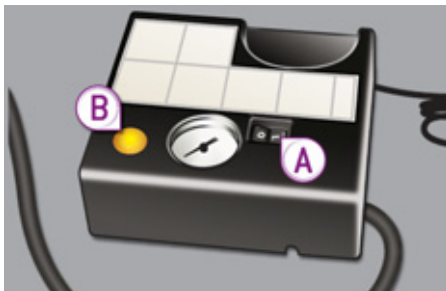

Take care, the bottle of fluid contains ethylene-glycol. This product is harmful if swallowed and causes irritation to the eyes. Keep it out of reach of children.

The expiry date of the fluid is indicated on the base of the bottle.

The bottle is designed for a single use; even if only partly used, it must be replaced.

After use, do not discard the bottle into the environment, take it to a PEUGEOT dealer or an authorised waste disposal site.

Do not forget to obtain a new bottle of sealant product, available from a PEUGEOT dealer or a qualified workshop.




If the vehicle is fitted with tyre under-inflation detection, the tyre under-inflation warning lamp will remain on after the wheel has been repaired until the system is reinitialised by a PEUGEOT dealer or a qualified workshop.

## CHANGING A WHEEL\*

Procedure for changing a faulty wheel for the spare wheel using the tools provided with the vehicle.

### Access to the tools

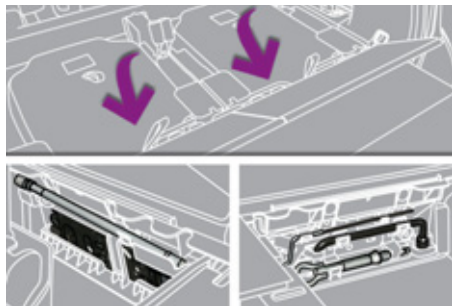

The tools 2 to 4 are installed in a box, in the middle of the spare wheel, placed underneath the vehicle.

The tools 1 and 6 to 9 are installed under the concertina boards, in the boot inner trim.

To gain access to them:

- ☞ open the boot,
- ☞ raise the concertina boards.

### List of tools\*




All of these tools are specific to your vehicle. Do not use them for other purposes.

1. Wheelbrace.  
For removing the wheel trim and the wheel fixing bolts.
2. Jack with integral handle.  
For raising the vehicle.
3. "Bolt cover" tool (according to equipment).  
For removing the bolt protectors (covers) on alloy wheels.
4. Centring guide.  
For refitting an alloy wheel to the hub.
5. Socket for the security bolts (located in the glove box).  
For adapting the wheelbrace to the special security bolts.
6. Two chocks to immobilise the vehicle.
7. Wheelbrace extension.  
For unscrewing/tightening the spare wheel carrier drive.

\* Depending on destination country.

## Other accessories

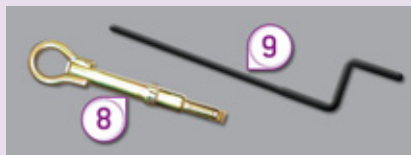

8. Removable towing eye.



Refer to the paragraph "Towing the vehicle".

9. Electric parking brake emergency release control.



Refer to "Electric parking brake" in the "Driving" section.



## Wheel with trim

**When removing the wheel,** detach the trim first using the wheelbrace **1** pulling at the valve passage hole.

**When refitting the wheel,** refit the trim starting by placing its notch facing the valve and press around its edge with the palm of your hand.




## Access to the spare wheel\*




The spare wheel is supported by a cable-driven carrier underneath the vehicle.

## Taking out the wheel


- ☞ Raise the concertina board to reveal the spare wheel carrier drive nut.
- ☞ Turn this drive nut fully clockwise, using the wheelbrace 1 and the extension 7, to unwind the carrier cable.

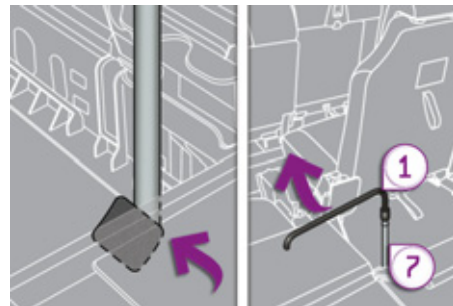

- ☞ Detach the wheel/box assembly from the rear of the vehicle.
- ☞ Remove the hook with its connection plate to release the wheel/box assembly, as shown in the illustration.

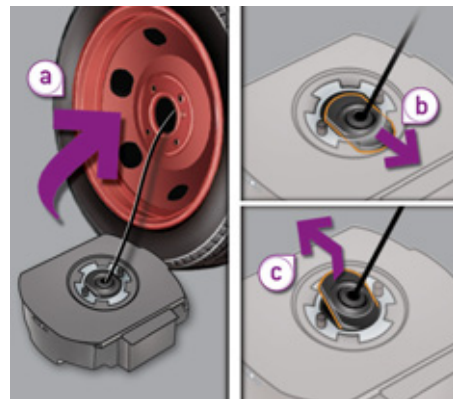

- ☞ Pull out the wheel to gain access to the box.
- ☞ Slide the box cover to the centre and remove it to gain access to the other tools.

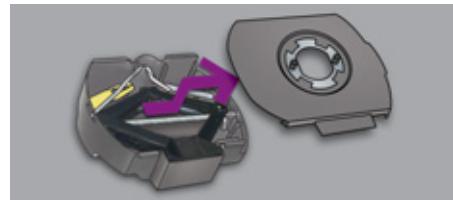


\* Depending on destination country.





### Putting the wheel back in place


- ☞ Store the tools used in the box and close the cover.
- ☞ Position the box on the ground and centre the spare wheel on it.
- ☞ Pass the hook with its connection plate into the wheel then the box, as illustrated.

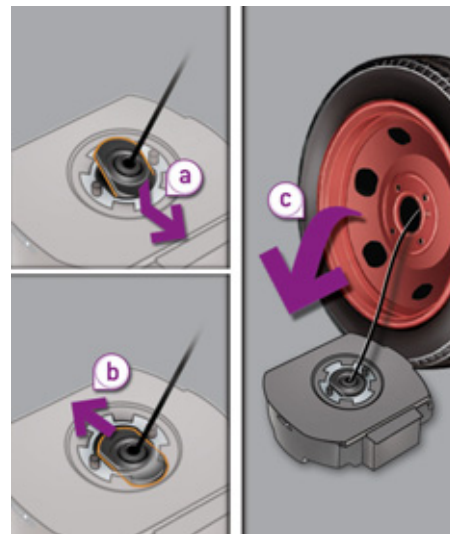


### Tyre under-inflation detection

The spare wheel is not fitted with a sensor. The punctured wheel must be repaired by a PEUGEOT dealer or a qualified workshop.

- ☞ Raise the wheel/box assembly underneath the vehicle by turning the carrier drive nut anticlockwise using the wheelbrace 1 and the extension 7.
- ☞ Tighten fully and check that the wheel is horizontally flush against the floor.

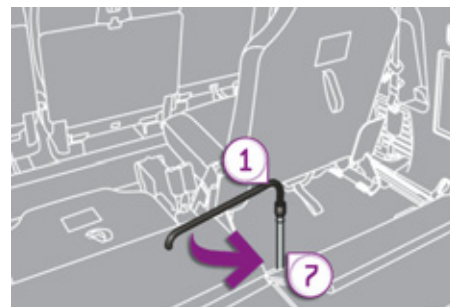

## Removing a wheel

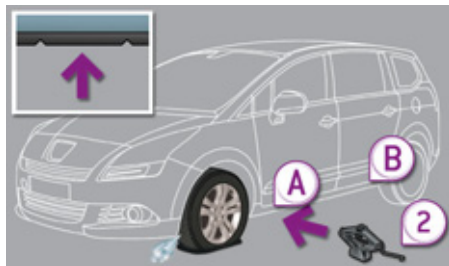

### Parking the vehicle

Immobilise the vehicle where it does not block traffic: the ground must be level, stable and non-slippery ground.

Apply the parking brake unless it has been programmed to automatic mode, switch off the ignition and engage first gear\* to lock the wheels.

Check that the braking warning lamp and the **P** warning lamp on the parking brake control come on.

If necessary, place a chock under the wheel diagonally opposite the wheel to be changed.


The occupants must get out of the vehicle and wait where they are safe.

Never go underneath a vehicle raised using a jack; use an axle stand.


\* position **R** for the electronic gear control gearbox; **P** for the automatic gearbox.

## List of operations

- ☞ Remove the bolt cover from each of the bolts using the tool **3** (according to equipment).
- ☞ Fit the security socket **5** on the wheelbrace **1** to slacken the security bolt (if your vehicle has them).
- ☞ Slacken the other bolts using the wheelbrace **1** only.

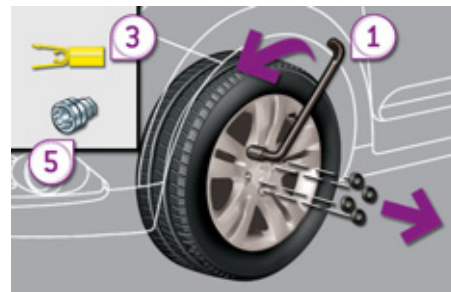


- ☞ Place the jack **2** in contact with one of the two front **A** or rear **B** locations provided on the underbody, whichever is closest to the wheel to be changed.
- ☞ Extend the jack **2** until its base plate is in contact with the ground. Ensure that the centreline of the jack base plate is directly below the location **A** or **B** used.

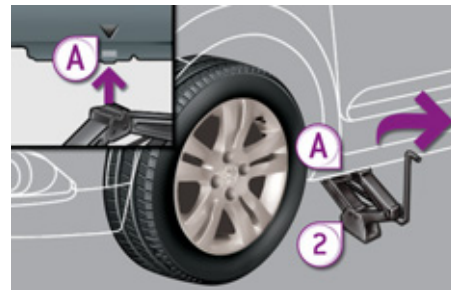

- ☞ Raise the vehicle until there is sufficient space between the wheel and the ground to admit the spare (not punctured) wheel easily.
- ☞ Remove the bolts and store them in a clean place.
- ☞ Remove the wheel.



## Fitting a wheel

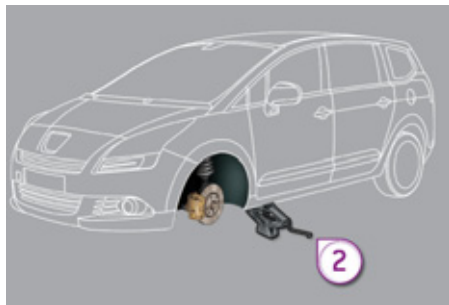

### Fitting the "space-saver" spare wheel

If your vehicle is fitted with alloy wheels, when tightening the bolts on fitting it is normal to notice that the washers do not come into contact with the "space-saver" spare wheel. The wheel is secured by the conical contact of each bolt.

### After changing a wheel

To store the punctured wheel in the boot correctly, first remove the central cover. When using the "space-saver" type spare wheel, do not exceed 50 mph (80 km/h).

Have the tightening of the bolts and the pressure of the spare wheel checked by a PEUGEOT dealer or a qualified workshop without delay.


Have the punctured wheel repaired and replace it on the vehicle as soon as possible.

### List of operations

- ☞ Put the wheel in place on the hub using the centring guide 4.
- ☞ Screw in the bolts by hand to the stop.
- ☞ Using the wheelbrace 1 fitted with the security socket 5, pre-tighten the security bolt (if your vehicle has them).
- ☞ Pre-tighten the other bolts using the wheelbrace 1 only.

- ☞ Lower the vehicle fully.
- ☞ Fold the jack 2 and detach it.


- ☞ Using the wheelbrace 1 fitted with the security socket 5, tighten the security bolt (if your vehicle has them).
- ☞ Tighten the other bolts using the wheelbrace 1 only.
- ☞ Refit the bolt covers to each of the bolts (according to equipment).
- ☞ Store the tools in the box.

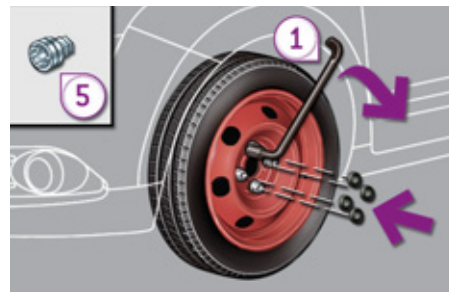

## CHANGING A BULB


### Front lamps

#### Model with halogen headlamps

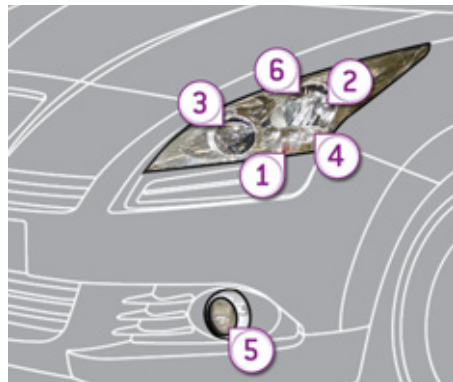

1. Direction indicators (HP24 amber-24W).
2. Dipped beam headlamps (H7-55W).
3. Main beam headlamps (H7-55W).
4. Daytime running lamps (HP24-24W).
5. Foglamps (PS24-24W).
6. Sidelamps (W5-5W).

#### Model with xenon and directional headlamps

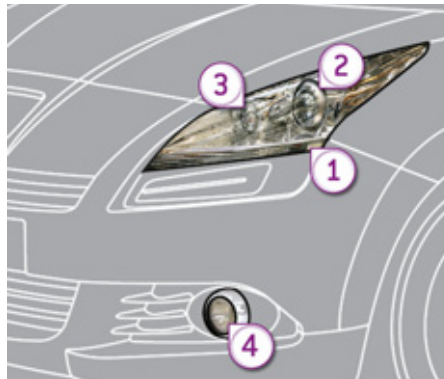

1. Direction indicators (HP24 amber-24W).
2. Dipped/main beam directional headlamps (D1S-35W).
3. Daytime running lamps/sidelamps (P21/5W).
4. Foglamps (PS24-24W).



#### Risk of electrocution

Xenon bulbs (D1S-35W) must be replaced by a PEUGEOT dealer or a qualified workshop.



The headlamps are fitted with polycarbonate glass with a protective coating:

- ✎ **do not clean them using a dry or abrasive cloth, nor with a detergent or solvent product,**
- ✎ use a sponge and soapy water,
- ✎ when using a high pressure washer on persistent marks, do not keep the lance directed towards the lamps or their edges for too long, so as not to damage their protective coating and seals.


- ✎ Do not touch the bulb directly with your fingers, use lint-free cloths.

Changing a bulb should only be done after the headlamp has been switched off for a few minutes (risk of serious burns).

It is imperative to use only anti-ultraviolet (UV) type bulbs in order not to damage the headlamp.


Always replace a failed bulb with a new bulb with the same type and specification.

### Changing direction indicator and daytime running lamp bulbs (models with halogen headlamps)

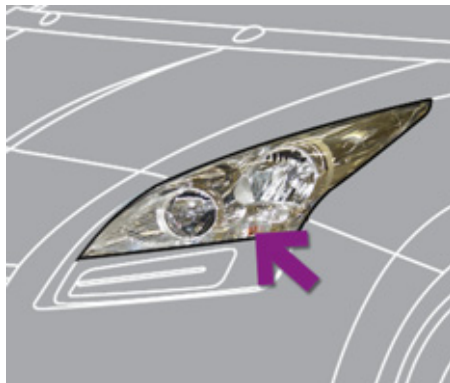

Contact a PEUGEOT dealer or a qualified workshop.


### Changing dipped beam headlamp bulbs (models with halogen headlamps)

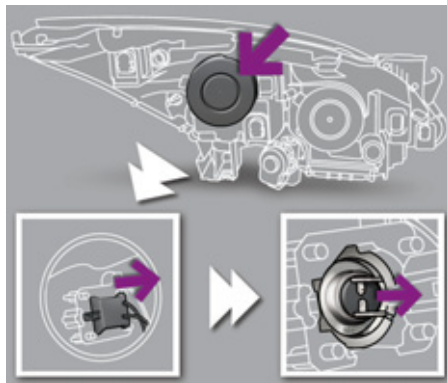

- ☞ Remove the protective plastic cover by pulling on the tab.
- ☞ Disconnect the bulb connector.
- ☞ Extract the bulb by pulling and change it.

To refit, carry out these operations in reverse order.

### Changing main beam headlamp and sidelamp bulbs

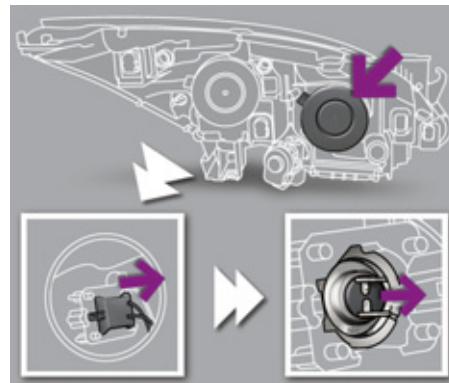

- ☞ Remove the protective plastic cover by pulling on the tab.
- ☞ Disconnect the bulb connector.
- ☞ Remove the bulb by pulling and change it.

To refit, carry out these operations in reverse order.



### Changing dipped beam and main beam headlamp bulbs (models with xenon headlamps)

D1S xenon bulbs must be changed by a PEUGEOT dealer or a qualified workshop as there is a risk of electrocution.

It is recommended that the D1S bulbs are changed at the same time when one of them fails.

### Changing sidelamp and daytime running lamp bulbs (models with xenon headlamps)

- ☞ Remove the protective plastic cover by pulling on the tab.
- ☞ Disconnect the bulb connector.
- ☞ Remove the bulb by pulling and change it.


To refit, carry out these operations in reverse order.



### Changing direction indicator bulbs

Contact a PEUGEOT dealer or a qualified workshop.

### Changing integrated direction indicator side repeaters

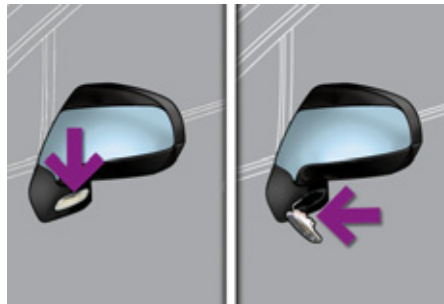

- ☞ Insert a screwdriver towards the centre of the repeater between the repeater and the base of the mirror.
- ☞ Tilt the screwdriver to extract the repeater and remove it.
- ☞ Disconnect the repeater connector.


To refit, carry out these operations in reverse order.

Contact a PEUGEOT dealer or a qualified workshop to obtain replacement repeaters.



You can also contact a PEUGEOT dealer or a qualified workshop to have these bulbs changed.


### Changing foglamp bulbs

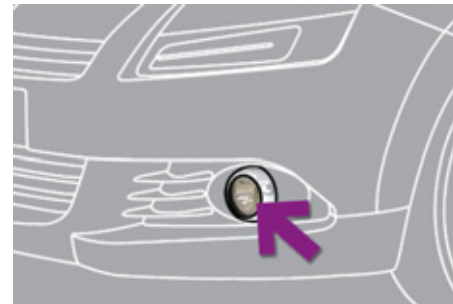

Contact a PEUGEOT dealer or a qualified workshop.




## Rear lamps

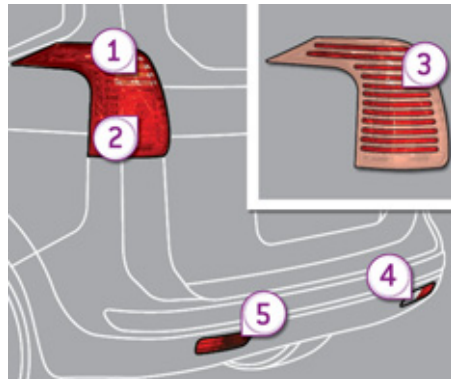


1. Direction indicators (PY21W-21W).
2. Brake lamps (P21W-21W).
3. Sidelamps (LEDs).
4. Reversing lamp (P21W).
5. Foglamp (P21W).

## Changing brake lamp and direction indicator bulbs


- ☞ Remove the two lamp unit fixing nuts.
- ☞ Pull the lamp rearwards (a positioning lug retains the lamp).
- ☞ Disconnect the lamp connector.

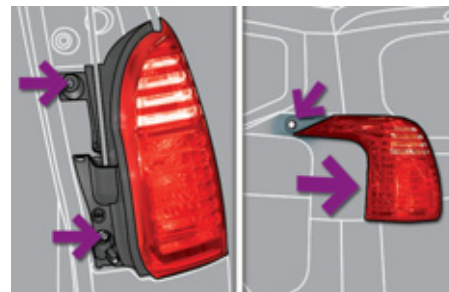


- ☞ Press the four tabs and remove the bulb holder.

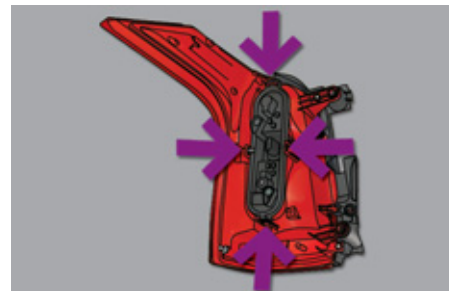

- ☞ Turn the bulb a quarter of a turn and change it.
- To refit, carry out these operations in reverse order.

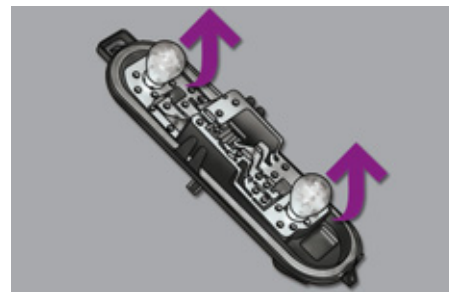


### Changing sidelamps (LEDs)

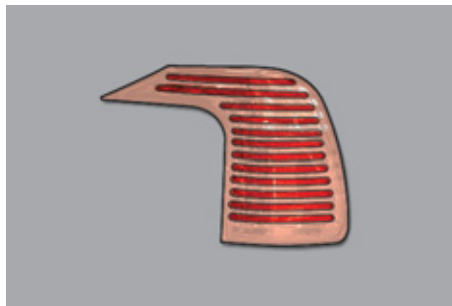


For the replacement of this type of LED lamp, contact a PEUGEOT dealer or a qualified workshop.

### Changing foglamp or reversing lamp bulbs

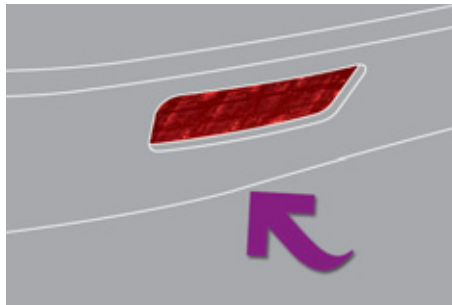


- ☞ Reach under the bumper.
- ☞ Turn the bulb a quarter of a turn and change it.

### Changing the third brake lamp bulb

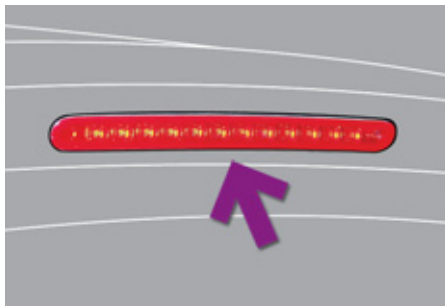


- ☞ Open the boot and remove the upper seal.
- ☞ Unscrew the two nuts.
- ☞ Press the threaded pins while supporting the lamp from the outside.
- ☞ Disconnect the connector and remove the screenwash pipe.

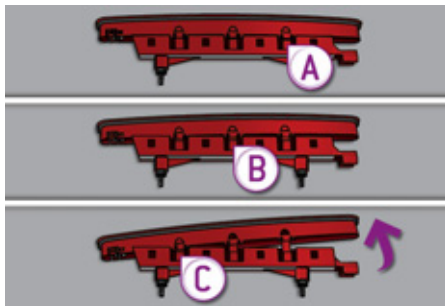

- ☞ Press the pairs of clips **A** then **B** then **C** to detach and gain access to the bulb holder.

### Changing the number plate lamp bulbs (W5-5W)

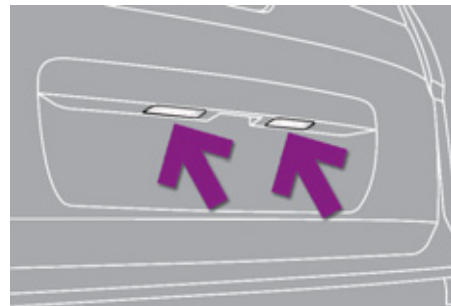


- ☞ Insert a thin screwdriver into one of the outer holes of the lens.
- ☞ Push it outwards to unclip.
- ☞ Remove the lens.
- ☞ Pull the bulb out and change it.



## CHANGING A FUSE

Procedure for replacing a failed fuse with a new fuse to rectify a failure of the corresponding function.

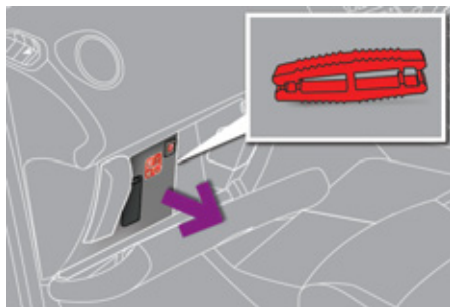

### Access to the tools

The fuse extraction tweezer is fitted to the back of the dashboard fusebox cover.

To gain access to it:

- ☞ remove the cover completely,
- ☞ remove the tweezer.

## Changing a fuse

Before changing a fuse, the cause of the failure must be identified and rectified.

- ☞ Identify the failed fuse by checking the condition of its filament.



Good

Failed

- ☞ Use the special tweezer to extract the fuse from its housing.
- ☞ Always replace the failed fuse with a fuse of the same rating.
- ☞ Check that the number marked on the fusebox, the rating marked on the fuse and the following tables all agree.



### Installing electrical accessories

Your vehicle's electrical system is designed to operate with standard or optional equipment.



Before installing other electrical equipment or accessories on your vehicle, contact a PEUGEOT dealer or a qualified workshop.



PEUGEOT will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying malfunctions resulting from the installation of accessories not supplied and not recommended by PEUGEOT and not installed in accordance with its instructions, in particular when the combined consumption of all of the additional equipment connected exceeds 10 milliamperes.

## Dashboard fuses

The fusebox is placed in the lower dashboard (left-hand side).

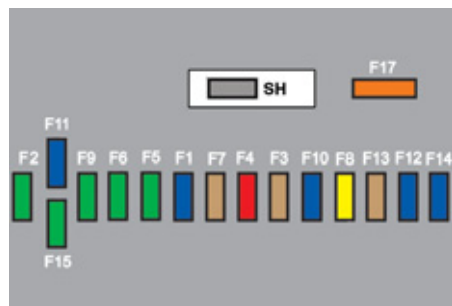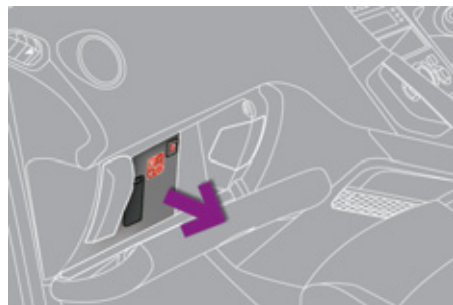


## Fuse tables

| Fuse N° | Rating (A) | Functions   |
|---------|------------|---|
| F1      | 15         | Rear wiper.   |
| F2      | -          | Not used.   |
| F3      | 5          | Airbag control unit.  |
| F4      | 10         | Electrochromatic rear view mirror, air conditioning, switching and protection unit, rear multimedia.  |
| F5      | 30         | Front one-touch electric windows.   |
| F6      | 30         | Rear one-touch electric windows.  |
| F7      | 5          | Front and rear courtesy lamps, map reading lamps, rear reading lamps, sun visor lighting, glove box lighting, centre armrest lighting, boot 12 V relay control. |

## Access to the fuses

☞ refer to the paragraph "Access to the tools".

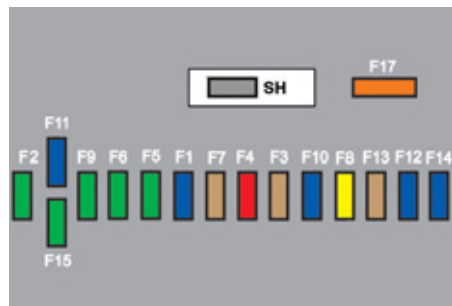

| Fuse N° | Rating (A) | Functions  |
|---------|------------|--|
| F8      | 20         | Audio system, audio/telephone, CD changer, multifunction screen, tyre under-inflation detection, alarm siren, alarm control unit, telematic unit, service module (with Peugeot Connect Media Navigation (NG4 3D)). |
| F9      | 30         | Front 12 V socket, cigarette lighter, rear 12 V socket.  |
| F10     | 15         | Steering mounted controls.   |
| F11     | 15         | Low current ignition switch.   |
| F12     | 15         | Trailer presence, rain/brightness sensor, supply for fuses F32, F34, F35.  |
| F13     | 5          | Engine fusebox, airbag control unit.   |
| F14     | 15         | Instrument panel, instrument panel screen, supply for fuse F33.  |
| F15     | 30         | Locking and deadlocking.   |
| F17     | 40         | Rear screen demist/defrost, supply for fuse F30.   |
| SH      | -          | PARC shunt.  |

| Fuse N° | Rating (A) | Functions  |
|---------|------------|--|
| F29     | -          | Not used   |
| F30     | 5          | Heated door mirrors.                                     |
| F31     | 30         | Boot 12 V socket.  |
| F32     | 5          | Electronic gear control gearbox gear lever.              |
| F33     | 10         | Head-up display, Bluetooth system, air conditioning.     |
| F34     | 5          | Seat belt warning lamps display.                         |
| F35     | 10         | Parking sensors, Hi-Fi amplifier authorisation.          |
| F36     | 10         | Trailer fusebox control unit, driver's door control pad. |
| F37     | 20         | Hi-Fi amplifier.   |
| F38     | 30         | Driver's electric seat.                                  |
| F39     | 20         | Panoramic sunroof blind.                                 |
| F40     | -          | Not used.  |

## Engine compartment fuses

The fusebox is placed in the engine compartment near the battery (left-hand side).



### Access to the fuses

- ☞ Unclip the cover.
- ☞ Change the fuse (see corresponding paragraph).
- ☞ When you have finished, close the cover carefully to ensure correct sealing of the fusebox.




## Fuse table

| Fuse N° | Rating (A) | Functions  |
|---------|------------|--|
| F1      | 20         | Engine management unit supply, injection pump and EGR electrovalves (2 litre HDI), injectors (2 litre HDI).  |
| F2      | 15         | Horn.  |
| F3      | 10         | Front/rear screenwash.   |
| F4      | 10         | Daytime running lamps.   |
| F5      | 15         | Canister purge electrovalves, turbine discharge and Turbo pressure regulation electrovalves (1.6 l THP 16V), oil vapour heater (1.6 l THP 16V), diesel heater (1.6 l HDI 16V).   |
| F6      | 10         | Diagnostic socket, directional headlamps, particle emission filter pump (Diesel), Distance alert, engine coolant level detector, mirror adjustment control.                      |
| F7      | 10         | Power steering control unit, automatic gearbox, directional headlamps height adjustment motor.   |
| F8      | 20         | Starter motor control.   |
| F9      | 10         | Clutch and brake pedal switches.   |
| F10     | 30         | Engine management unit actuators (petrol: ignition coils, electrovalves, oxygen sensors, injectors, heaters, fuel pump, electronic thermostat) (Diesel: electrovalves, heaters). |
| F11     | 40         | Air conditioning blower.   |



| Fuse N° | Rating (A) | Functions  |
|---------|------------|--|
| F12     | 30         | Windscreen wipers slow/fast speed.   |
| F13     | 40         | Built-in systems interface supply (ignition positive).   |
| F14     | 30         | Air pump.  |
| F15     | 10         | Right-hand main beam headlamp.   |
| F16     | 10         | Left-hand main beam headlamp.  |
| F17     | 15         | Left-hand dipped headlamp.   |
| F18     | 15         | Right-hand dipped headlamp.  |
| F19     | 15         | Oil vapour heater (1.6 litre VTi), Turbo pressure regulation electrovalve (Diesel), engine coolant level detector (Diesel).                    |
| F20     | 10         | Electronic thermostat, variable timing electrovalves, Turbo pressure regulation electrovalve (Diesel), engine coolant level detector (Diesel). |
| F21     | 5          | Fan assembly relay supply, Valvetronic relay control (1.6 litre VTi), Turbo cooling (1.6 litre THP), air flow sensor (1.6 litre HDI).          |

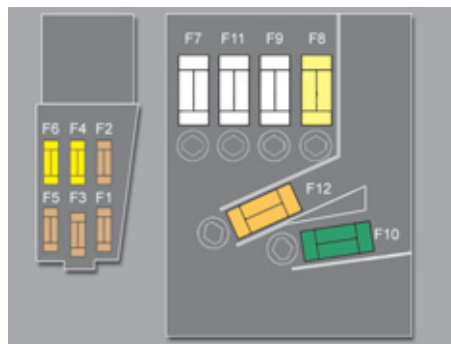

**Table of mini and midi-fuses above the battery**

| Fuse N° | Rating (A) | Functions   |
|---------|------------|---|
| F1      | -          | Not used.   |
| F2      | 5          | Dual function brake switch.   |
| F3      | 5          | Battery charge unit.  |
| F4      | 25         | ABS/ESP electrovalves.  |
| F5      | 5          | ABS/ESP control unit.   |
| F6      | 15         | Automatic gearbox, electronic gear control gearbox.                 |
| F7*     | 80         | Power steering electropump assembly.                                |
| F8*     | 60         | Fan assembly.   |
| F9*     | 80/30      | Pre-heat unit (Diesel), Valvetronic electric motor (1.6 litre THP). |
| F10*    | 40         | ABS/ESP electropump assembly.                                       |
| F11*    | 100        | Switching and protection unit.                                      |
| F12*    | 30         | Electronic gear control gearbox electropump assembly.               |


**Table of maxi-fuses**

| Fuse N° | Rating (A) | Functions                      |
|---------|------------|--------------------------------|
| MF1*    | -          | Not used.                      |
| MF2*    | 30         | Trailer fuse box.              |
| MF3*    | 50         | Passenger compartment fusebox. |
| MF4*    | 80         | Built-in systems interface.    |
| MF5*    | 80         | Built-in systems interface.    |
| MF6*    | 30         | Electric parking brake.        |
| MF7*    | 30         | Heated front seats.            |
| MF8*    | 20         | Headlamp wash.                 |

\* The maxi-fuses and certain other fuses provide additional protection for the electrical systems. All work on the these fuses must be carried out by a PEUGEOT dealer or a qualified workshop.

## 12 V BATTERY

Procedure for charging your battery when it is flat or for starting the engine using another battery.

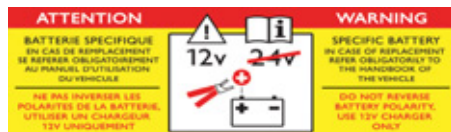


The presence of this label indicates the use of a 12 V lead-acid battery with special technology and specification, for which the involvement of a PEUGEOT dealer or qualified workshop is required when replacing or disconnecting the battery.

Failure to observe this recommendation may cause premature wear of the battery.

After refitting the battery, the Stop & Start system will only be active after several hours depending on the climatic conditions and the state of charge of the battery (up to about 8 hours).

The Stop & Start battery does not have to be disconnected for charging.

## Access to the battery


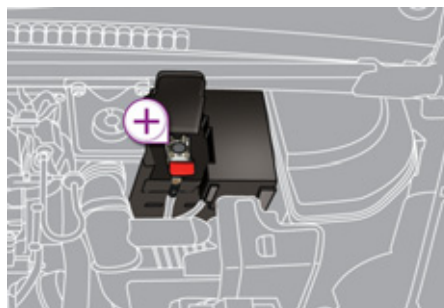


The battery is located under the bonnet. To gain access to it:

- ✦ open the bonnet using the interior release lever, then the exterior safety catch,
- ✦ secure the bonnet stay,
- ✦ remove the plastic cover to gain access to the two terminals,
- ✦ unclip the fusebox to remove the battery, if necessary.

## Starting using another battery

- ✦ Connect the red cable to the positive terminal (+) of the flat battery **A**, then to the positive terminal (+) of the slave battery **B**.
- ✦ Connect one end of the green or black cable to the negative terminal (-) of the slave battery **B**.
- ✦ Connect the other end of the green or black cable to the earth point **C** on your vehicle (engine mounting).

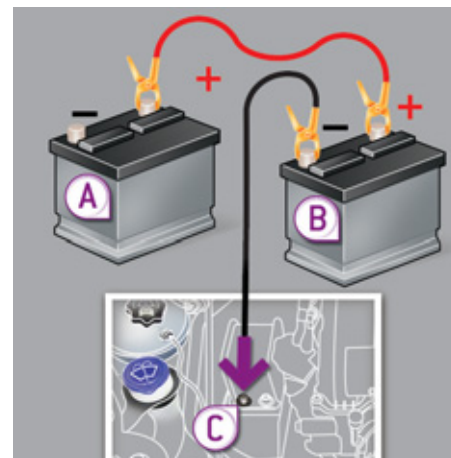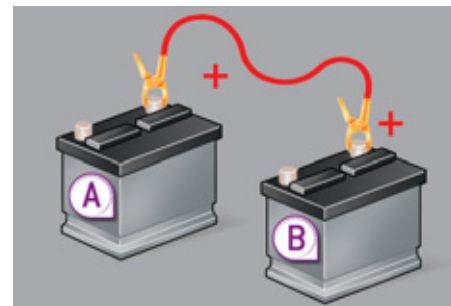


- ✦ Operate the starter, let the engine run.
- ✦ Wait until the engine returns to idle and disconnect the cables.



## Disconnecting the cables

- ☞ Raise the locking tab fully.

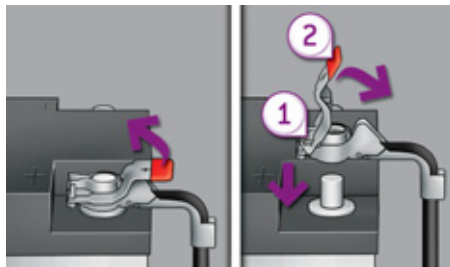

## Reconnecting the cables

- ☞ Position the open clip **1** of the cable on the positive terminal (+) of the battery.
- ☞ Press vertically on the clip **1** to position it correctly against the battery.
- ☞ Lock the clip by spreading the positioning lug and then lowering the tab **2**.



Do not force the tab as locking will not be possible if the clip is not positioned correctly; start the procedure again.

## Charging the battery using a battery charger

- ☞ Disconnect the battery from the vehicle.
- ☞ Follow the instructions for use provided by the manufacturer of the charger.
- ☞ Reconnect starting with the negative terminal (-).
- ☞ Check that the terminals and connectors are clean. If they are covered with sulphate (whitish or greenish deposit), remove them and clean them.



The batteries contain harmful substances such as sulphuric acid and lead. They must be disposed of in accordance with regulations and must not, in any circumstances, be discarded with household waste.

Take used remote control batteries and vehicle batteries to a special collection point.



It is advisable to disconnect the battery if the vehicle is to be left unused for more than one month.



Do not disconnect the terminals while the engine is running.  
Do not charge the batteries without disconnecting the terminals first.

Do not push the vehicle to start the engine if it is fitted with a 6-speed electronic gear control gearbox or an automatic gearbox.

## Before disconnecting the battery

Wait 2 minutes after switching off the ignition before disconnecting the battery. Close the windows and the doors before disconnecting the battery.

## Following reconnection of the battery

Following reconnection of the battery, switch on the ignition and wait 1 minute before starting to permit initialisation of the electronic systems. However, if problems remain following this operation, contact a PEUGEOT dealer or a qualified workshop.

Referring to the corresponding section, you must yourself reinitialise:

- the remote control key,
- the panoramic sunroof blind,
- the satellite navigation system.

## LOAD REDUCTION MODE

System which manages the use of certain functions according to the level of charge remaining in the battery.

When the vehicle is being driven, the load reduction function temporarily deactivates certain functions, such as the air conditioning, the heated rear screen...

The deactivated functions are reactivated automatically as soon as conditions permit.

## ENERGY ECONOMY MODE

System which manages the duration of use of certain functions to conserve a sufficient level of charge in the battery.

After the engine has stopped, you can still use functions such as the audio and telematics system, windscreen wipers, dipped beam headlamps, courtesy lamps, etc. for a maximum combined duration of thirty minutes.

This period may be greatly reduced if the battery is not fully charged.

### Switching to economy mode

Once this time has elapsed, a message appears in the screen indicating that the vehicle has switched to economy mode and the active functions are put on standby.



If the telephone is being used at this time:

- it will be maintained for 5 minutes with the hands-free kit of your Peugeot Connect Sound or Peugeot Connect Navigation,
- it will still be possible to finish the call with the Peugeot Connect Media.

### Exiting economy mode

These functions are reactivated automatically next time the vehicle is driven.

To restore the use of these functions immediately, start the engine and let it run for at least 5 minutes.



Let the engine run for the duration specified to ensure that the battery charge is sufficient.

Do not repeatedly and continuously restart the engine in order to charge the battery.

A flat battery prevents the engine from starting (refer to the "Battery" paragraph).

## CHANGING A WIPER BLADE



### Before removing a front wiper blade

- ☞ Within one minute after switching off the ignition, operate the wiper stalk to position the wiper blades vertically on the windscreen.

### Removing

- ☞ Raise the corresponding wiper arm.
- ☞ Unclip the wiper blade and remove it.

### Fitting

- ☞ Put the corresponding new wiper blade in place and clip it.
- ☞ Fold down the wiper arm carefully.


### After fitting a front wiper blade

- ☞ Switch on the ignition.
- ☞ Operate the wiper stalk again to park the wiper blades.

## TOWING THE VEHICLE

Procedure for having your vehicle towed or for towing another vehicle using a removable towing eye.

### Access to the tools

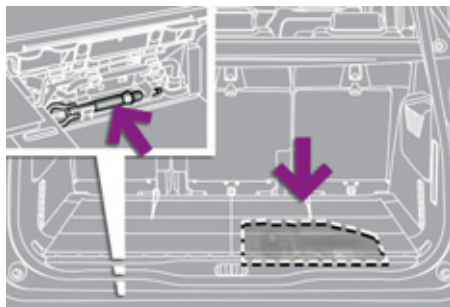

The towing eye is installed under the left-hand concertina board, in the boot interior trim.

To gain access to it:

- ☞ open the boot,
- ☞ raise the concertina board,
- ☞ remove the towing eye from the holder.

## Towing your vehicle



- ☞ On the front bumper, unclip the cover by pressing at the bottom.
- ☞ Screw the towing eye in fully.
- ☞ Install the towing bar.
- ☞ Switch on the hazard warning lamps on the towed vehicle.



- ☞ Place the gear lever in neutral (position **N** on the electronic gear control gearbox or automatic gearbox).

Failure to observe this special condition could result in damage to certain braking components and the absence of braking assistance the next time the engine is started.

## Towing another vehicle



- ☞ On the rear bumper, unclip the cover by pressing at the bottom.
- ☞ Screw the towing eye in fully.
- ☞ Install the towing bar.
- ☞ Switch on the hazard warning lamps on the towed vehicle.



## General recommendations

Observe the legislation in force in your country.

Ensure that the weight of the towing vehicle is higher than that of the towed vehicle.

The driver must stay at the wheel of the towed vehicle.

Driving on motorways and fast roads is prohibited when towing.

When towing a vehicle with all four wheels on the ground, always use an approved towing bar; rope and straps are prohibited.


When towing a vehicle with the engine off, there is no longer any power assistance for braking or steering.

In the following cases, you must always call on a professional recovery service:

- vehicle broken down on a motorway or fast road,
- when it is not possible to put the gearbox into neutral, unlock the steering, or release the parking brake,
- towing with only two wheels on the ground,
- where there is no approved towing bar available...

## TOWING A TRAILER, A CARAVAN, ETC.

Towbar suitable for the attachment of a trailer or caravan with additional lighting and signalling.

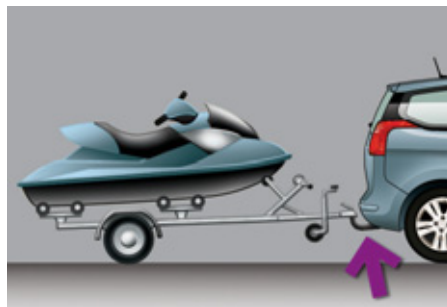

Your vehicle is primarily designed for transporting people and luggage, but it may also be used for towing a trailer.



We recommend the use of genuine PEUGEOT towbars and their harnesses that have been tested and approved from the design stage of your vehicle, and that the fitting of the towbar is entrusted to a PEUGEOT dealer or a qualified workshop.

If the towbar is not fitted by a PEUGEOT dealer, it is imperative that it is fitted in accordance with the vehicle manufacturer's instructions.

Driving with a trailer places greater demands on the towing vehicle and the driver must take particular care.

## Driving advice

### Distribution of loads

☞ Distribute the load in the trailer so that the heaviest items are as close as possible to the axle and the nose weight approaches the maximum permitted without exceeding it.

Air density decreases with altitude, thus reducing engine performance. Above 1 000 metres, the maximum towed load must be reduced by 10 % for every 1 000 metres of altitude.

Refer to the "Technical Data" section for details of the weights and towed loads which apply to your vehicle.

### Side wind

☞ Take into account the increased sensitivity to side wind.

### Cooling

Towing a trailer on a slope increases the temperature of the coolant.

As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

☞ To lower the engine speed, reduce your speed.

The maximum towed load on a long incline depends on the gradient and the ambient temperature.

In all cases, keep a check on the coolant temperature.



If the warning lamp and the **STOP** warning lamp come on, stop the vehicle and switch off the engine as soon as possible.

### Braking

Towing a trailer increases the braking distance.

To avoid overheating of the brakes on a long mountain type of descent, the use of engine braking is recommended.

### Tyres

Check the tyre pressures of the towing vehicle and of the trailer, observing the recommended pressures.

### Lighting

Check the electrical lighting and signalling on the trailer.



The rear parking sensors will be deactivated automatically if a genuine PEUGEOT towbar is used.

## FITTING ROOF BARS



When fitting transverse roof bars, use the four quick-fit fixings provided for this purpose:

- ☞ lift the concealing flaps,
- ☞ open the fixing covers on each bar using the key,
- ☞ put each fixing in place and lock them on the roof one by one,
- ☞ ensure that roof bars are correctly fitted (by shaking them),
- ☞ close the fixing covers on each bar using the key.



Maximum authorised weight on the roof rack, for a loading height not exceeding 40 cm (with the exception of bicycle carriers): **65 kg**.

If the height exceeds 40 cm, adapt the speed of the vehicle to the profile of the road to avoid damaging the roof bars and the fixings on the roof.

Be sure to refer to national legislation in order to comply with the regulations for transporting objects that are longer than the vehicle.




If your vehicle is fitted with roof finishers, do not use them for carrying loads.

## VERY COLD CLIMATE SCREEN

Removable protective screen which prevents the accumulation of snow at the radiator cooling fan.


Before fitting or removing the screen, ensure that the engine is off and cooling fan has stopped. It is recommended that the screen be fitted and removed by a PEUGEOT dealer or a qualified workshop.

### Fitting

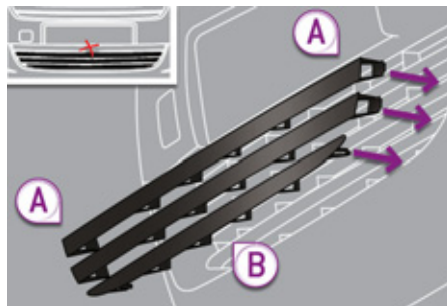

- ☞ Offer up one of the three screens to the front of the lower section of the front bumper (do not use the upper ventilation grille position).
- ☞ Press on the edges **A** to engage its fixing clips.
- ☞ Press on the middle at **B** to complete the engagement of the fixing clips.
- ☞ Repeat the operation for the other two screens.

### Removal

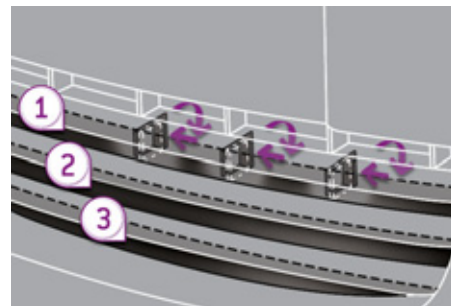

Depending on the model, the clips point either to the left or to the right.

- ☞ Pass your fingers through the upper grille location.
- ☞ From behind, push the clips in the opposite direction then pull the part towards you.
- ☞ Start with the upper screen **1**, then the centre screen **2** and finish with the lower screen **3**.



Do not forget to remove the very cold climate screen:

- when the ambient temperature exceeds 10 °C,
- when towing,
- at speeds above 75 mph (120 km/h).

## ACCESSORIES

A wide range of accessories and genuine parts is available from the PEUGEOT dealer network.

These accessories and parts have been tested and approved for reliability and safety.

They are all adapted to your vehicle and benefit from PEUGEOT's recommendation and warranty.

### "Transport solutions":

For leisure pursuits: roof bars, bicycle carrier on towbar, bicycle carrier on roof bars, ski carrier, roof box, booster seats and child seats, side blinds, under shelf storage.

Trailer towbar, which must be fitted by a PEUGEOT dealer.

### "Style":

seat covers compatible with lateral airbags, leather gear lever knob, foglamps, door deflectors, spoiler, styling strips, alloy wheels, trims, chrome-plated door handle shells.

### "Safety and security":

anti-theft alarm, window etching, wheel security bolts, first aid kit, breathalyzer, warning triangle, high visibility vest, stolen vehicle tracking system, dog guard, snow chains.

### "Protection":

mats\*, boot tray, luggage net, coat hanger fixed on head restraint, stainless steel or carbon fibre style door sills.

### "Multimedia":

audio systems, amplifiers, satellite navigation systems, Bluetooth hands-free system, CD changer, speakers, DVD player, USB Box, front and rear parking sensors, additional Bluetooth wireless headphones, Bluetooth audio headphones mains charger.



#### Installation of radio communication transmitters

Before installing any after-market radio communication transmitter, you can contact a PEUGEOT dealer for the specification of transmitters which can be fitted (frequency, maximum power, aerial position, specific installation requirements), in line with the Vehicle Electromagnetic Compatibility Directive (2004/104/EC).



Depending on the legislation in force in the country, it may be compulsory to have a high visibility safety vest, warning triangle and spare bulbs and fuses available in the vehicle.



The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system and excessive electrical consumption.

Please note this precaution. You are advised to contact a PEUGEOT representative to be shown the range of recommended equipment and accessories.

You can also obtain cleaning and maintenance products (exterior and interior), products for topping up (screenwash fluid...) and refills (sealant cartridge for the temporary puncture repair kit...) from PEUGEOT dealers.

- \* To avoid any risk of jamming of the pedals:
- ensure that the mat is positioned and secured correctly,
  - never fit one mat on top of another.

| ENGINES AND GEARBOXES             |                         |                         |                        |
|-----------------------------------|-------------------------|-------------------------|------------------------|
| Petrol engine                     | 1.6 litre VTi<br>120 hp | 1.6 litre THP<br>156 hp |                        |
| Gearbox                           | Manual<br>(5-speed)     | Manual<br>(6-speed)     | Automatic<br>(6-speed) |
| Cubic capacity (cc)               | 1 598                   | 1 598                   |                        |
| Bore x stroke (mm)                | 77 x 85.8               | 77 x 85.8               |                        |
| Max power: EU standard (kW)       | 88                      | 115                     |                        |
| Max power engine speed (rpm)      | 6 000                   | 6 000                   |                        |
| Max torque: EU standard (Nm)      | 160                     | 240                     |                        |
| Max torque engine speed (rpm)     | 4 250                   | 1 400                   |                        |
| Fuel                              | Unleaded                | Unleaded                |                        |
| Catalytic converter               | yes                     | yes                     |                        |
| <b>OIL CAPACITIES (in litres)</b> |                         |                         |                        |
| Engine (with filter replacement)  | 4.25                    | 4.25                    |                        |
| Gearbox - Final drive             | -                       | -                       |                        |



## WEIGHTS AND TOWED LOADS (in kg)

| Petrol engine   | 1.6 litre VTi<br>120 hp |       | 1.6 litre THP<br>156 hp                  |       |
|---|-------------------------|-------|--|-------|
| Gearbox   | Manual<br>(5-speed)     |       | Manual (6-speed)/<br>Automatic (6 speed) |       |
| Seats   | 5                       | 7     | 5  | 7     |
| - Unladen weight  | 1 427                   | 1 454 | 1 460                                    | 1 490 |
| - Kerb weight*  | 1 502                   | 1 532 | 1 535                                    | 1 565 |
| - Payload   | 573                     | 736   | 590                                      | 735   |
| - Gross vehicle weight (GVW)                                    | 2 000                   | 2 190 | 2 050                                    | 2 225 |
| - Gross train weight (GTW)<br>on a 12% gradient                 | 3 200                   | 3 290 | 3 400                                    | 3 425 |
| - Braked trailer (within GTW limit)<br>on a 10% or 12% gradient | 1 200                   | 1 100 | 1 350                                    | 1 200 |
| - Braked trailer** (with load transfer<br>within the GTW limit) | 1 400                   |       | 1 550                                    | 1 500 |
| - Unbraked trailer  | 750                     |       | 750                                      |       |
| - Recommended nose weight                                       | 70                      |       | 70                                       |       |

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10% for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

\* The kerb weight is equal to the unladen weight + driver (75 kg).

\*\* The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

| ENGINES AND GEARBOXES             |                                 |                                      |                             |                             |
|-----------------------------------|---------------------------------|--------------------------------------|-----------------------------|-----------------------------|
| Diesel engine                     | 1.6 litre Turbo e-HDi<br>110 hp |                                      | 2 litre Turbo HDi<br>150 hp | 2 litre Turbo HDi<br>163 hp |
| Gearbox                           | Manual<br>(6-speed)             | Electronic gear control<br>(6-speed) | Manual<br>(6-speed)         | Automatic<br>(6-speed)      |
| Cubic capacity (cc)               | 1 560                           |                                      | 1 997                       |                             |
| Bore x stroke (mm)                | 75 x 88.3                       |                                      | 85 x 88                     |                             |
| Max power: EU standard (kW)       | 82                              |                                      | 110/120                     |                             |
| Max power engine speed (rpm)      | 4 000                           |                                      | 3 750                       |                             |
| Max torque: EU standard (Nm)      | 270                             |                                      | 320/340                     |                             |
| Max torque engine speed (rpm)     | 1 750                           |                                      | 2 000                       |                             |
| Fuel                              | Diesel                          |                                      | Diesel                      |                             |
| Catalytic converter               | yes                             |                                      | yes                         |                             |
| Particle emission filter          | yes                             |                                      | yes                         |                             |
| <b>OIL CAPACITIES (in litres)</b> |                                 |                                      |                             |                             |
| Engine (with filter replacement)  | 3.75                            |                                      | -                           |                             |

# WEIGHTS AND TOWED LOADS (in kg)

| Diesel engine   | 1.6 litre Turbo e-HDi<br>110 hp |       |                                      |       |
|---|---------------------------------|-------|--------------------------------------|-------|
| Gearbox   | Manual<br>(6-speed)             |       | Electronic gear control<br>(6-speed) |       |
| Seats   | 5                               | 7     | 5                                    | 7     |
| - Unladen weight  | 1 475                           | 1 502 | 1 475                                | 1 502 |
| - Kerb weight*  | 1 550                           | 1 578 | 1 550                                | 1 578 |
| - Payload   | 595                             | 748   | 595                                  | 748   |
| - Gross vehicle weight (GVW)                                    | 2 070                           | 2 250 | 2 070                                | 2 250 |
| - Gross train weight (GTW)<br>on a 12% gradient                 | 3 170                           | 3 250 | 3 170                                | 3 150 |
| - Braked trailer (within GTW limit)<br>on a 10% or 12% gradient | 1 100                           | 1 000 | 1 100                                | 900   |
| - Braked trailer** (with load transfer<br>within the GTW limit) | 1 300                           | 1 300 | 1 300                                | 1 100 |
| - Unbraked trailer  | 745                             | 750   | 745                                  | 750   |
| - Recommended nose weight                                       | 70                              |       | 70                                   |       |

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country). High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

\* The kerb weight is equal to the unladen weight + driver (75 kg).

\*\* The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

| WEIGHTS AND TOWED LOADS (in kg)                                 |                                 |       |  |       |
|---|---------------------------------|-------|--|-------|
| Diesel engine   | 1.6 litre Turbo e-HDi<br>110 hp |       |  |       |
| Gearbox   | Manual<br>(6-speed) Score       |       | Electronic gear control<br>(6-speed) Score |       |
| Seats   | 5                               | 7     | 5  | 7     |
| - Unladen weight  | 1 475                           | 1 502 | 1 475                                      | 1 502 |
| - Kerb weight*  | 1 550                           | 1 578 | 1 550                                      | 1 578 |
| - Payload   | 595                             | 748   | 595  | 748   |
| - Gross vehicle weight (GVW)                                    | 2 070                           | 2 250 | 2 070                                      | 2 250 |
| - Gross vehicle weight (MTRA)<br>on a 12% gradient              | 2 950                           | 2 950 | 2 920                                      | 2 950 |
| - Braked trailer (within GTW limit)<br>on a 10% or 12% gradient | 880                             | 700   | 850  | 700   |
| - Braked trailer** (with load transfer<br>within the GTW limit) | 1 080                           | 900   | 1 050                                      | 900   |
| - Unbraked trailer  | 745                             | 750   | 745  | 700   |
| - Recommended nose weight                                       | 70                              |       | 70   |       |

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.  
The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).  
High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

\* The kerb weight is equal to the unladen weight + driver (75 kg).

\*\* The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

## WEIGHTS AND TOWED LOADS (in kg)

| Diesel engine   | 2 litre Turbo HDi<br>150 hp |       | 2 litre Turbo HDi<br>163 hp |       |
|---|-----------------------------|-------|-----------------------------|-------|
| Gearbox   | Manual<br>(6-speed)         |       | Automatic<br>(6-speed)      |       |
| Seats   | 5                           | 7     | 5                           | 7     |
| - Unladen weight  | 1 563                       | 1 593 | 1 589                       | 1 619 |
| - Kerb weight*  | 1 638                       | 1 668 | 1 664                       | 1 694 |
| - Payload   | 562                         | 717   | 536                         | 711   |
| - Gross vehicle weight (GVW)                                    | 2 125                       | 2 310 | 2 125                       | 2 330 |
| - Gross train weight (GTW)<br>on a 12% gradient                 | 3 475                       | 3 510 | 3 525                       | 3 530 |
| - Braked trailer (within GTW limit)<br>on a 10% or 12% gradient | 1 350                       | 1 200 | 1 400                       | 1 200 |
| - Braked trailer** (with load transfer<br>within the GTW limit) | 1 550                       | 1 500 | 1 600                       | 1 500 |
| - Unbraked trailer  | 750                         |       | 750                         |       |
| - Recommended nose weight                                       | 70                          |       | 70                          |       |

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country). High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

\* The kerb weight is equal to the unladen weight + driver (75 kg).

\*\* The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

## WEIGHTS AND TOWED LOADS - 5008 5-seat LCV (in kg)

| Engine  | 1.6 litre Turbo e-HDi<br>110 hp |                                      |                     | 2 litre Turbo HDi<br>150 hp |
|---|---------------------------------|--------------------------------------|---------------------|-----------------------------|
| Gearbox   | Manual<br>(6-speed)             | Electronic gear control<br>(6-speed) | Manual<br>(6-speed) | Manual<br>(6-speed)         |
| Model codes   | 9HZ                             | 9HZ                                  | 9HR                 | RHE                         |
| - Unladen weight  | 1 481                           | 1 482                                | 1 481               | 1 572                       |
| - Kerb weight*  | 1 556                           | 1 557                                | 1 556               | 1 647                       |
| - Gross vehicle weight (GVW)**                                      | 2 225                           | 2 230                                | 2 200               | 2 310                       |
| - Gross train weight (GTW)<br>on a 12% gradient***                  | 3 120                           |                                      | 3 170               | 3 475                       |
| - Braked trailer (within GTW limit)<br>on a 10% or 12% gradient**** | 895                             | 890                                  | 970                 | 1 165                       |
| - Braked trailer (with load transfer<br>within the GTW limit)       | X                               | X                                    | X                   | X                           |
| - Unbraked trailer  |                                 | 750                                  |                     | 750                         |
| - Recommended nose weight   |                                 | 70                                   |                     | 70                          |

\* The kerb weight is equal to the unladen weight + driver (75 kg).


\*\* Exceeding the maximum rear axle weight involves limiting the speed to 50 mph (80 km/h) as defined in point 2.7 of the Directive.

\*\*\* Exceeding the gross vehicle weight when the vehicle is towing involves limiting the speed to 50 mph (80 km/h) as defined in point 2.7 of the Directive.

\*\*\*\* Maximum braked trailer weight within the GTW limit; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10% for each additional 1 000 metres of altitude.

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

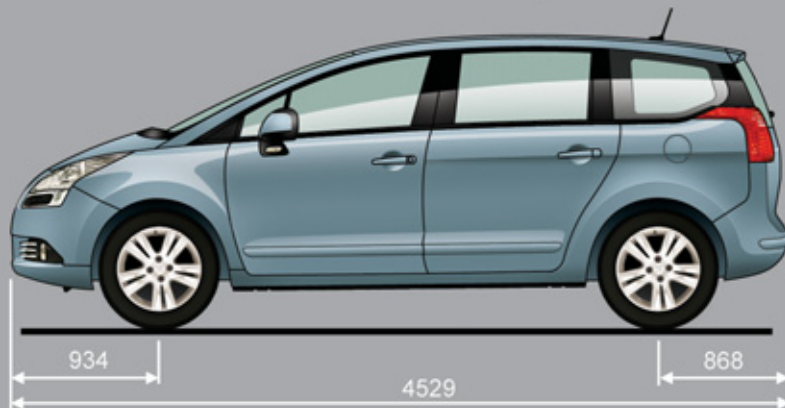**DIMENSIONS (IN MM)**

## IDENTIFICATION MARKINGS

Various visible markings for the identification and tracing of your vehicle.

### A. Vehicle Identification Number (VIN) under the bonnet.

This number is engraved on the bodywork near the damper support.

### B. Vehicle identification Number (VIN) on the windscreen lower crossmember.

This number is indicated on a self-adhesive label which is visible through the windscreen.

### C. Manufacturer's label.


The VIN is indicated on a self-destroying label affixed to the door aperture, on the driver's side.

### D. Tyre/paint label.

This label is fitted to the door aperture or middle pillar, on the driver's side.

It bears the following information:

- the tyre inflation pressures with and without load,
- the wheel rim and tyre sizes,
- the brands of tyre recommended by the manufacturer,
- the inflation pressure of the spare wheel,
- the paint colour code.

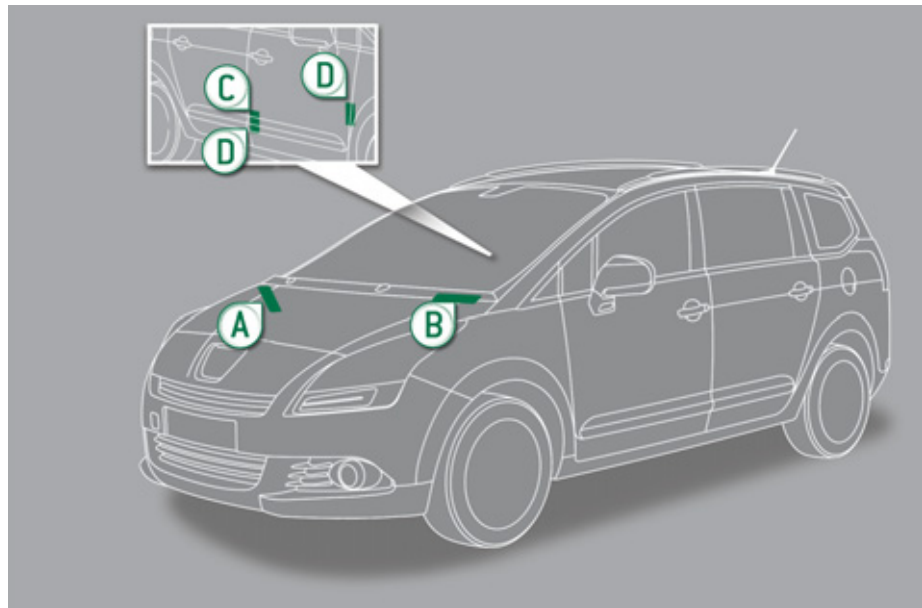

The tyre pressures must be checked when the tyres are cold, at least once a month.



Low tyre pressures increase fuel consumption.





**EMERGENCY OR ASSISTANCE CALL**

# EMERGENCY OR ASSISTANCE CALL

## PEUGEOT CONNECT SOS



In an emergency, press this button for more than 2 seconds. Flashing of the green LED and a voice message confirm that the call has been made to the PEUGEOT Emergency team\*.

Pressing this button again immediately cancels the request. The green LED goes off.

A press (at any time) of more than 8 seconds on this button, cancels the request.

The green LED remains on (without flashing) when communication is established. It goes off at the end of communication.

This call is dealt with by the PEUGEOT Emergency team which receives locating information from the vehicle and can send a detailed alert to the appropriate emergency services. In countries in which the team is not operational, or when the locating service has been expressly declined, the call is dealt with directly by the emergency services (112) without the vehicle location.



If an impact is detected by the airbag ECU, and independently of the deployment of any airbags, an emergency call is made automatically.

\* These services are subject to conditions and availability. Consult a PEUGEOT dealer.

## PEUGEOT CONNECT ASSISTANCE



Press this button for more than 2 seconds to request assistance if the vehicle breaks down. A voice message confirms that the call has been made\*.

Pressing this button again immediately cancels the request. The cancellation is confirmed by a voice message.

## OPERATION OF THE SYSTEM



When the ignition is switched on, the green LED comes on for 3 seconds indicating that the system is operating correctly.



If the orange LED flashes: there is a system fault.  
If the orange LED is on continuously: the backup battery must be replaced.  
In either case, contact a PEUGEOT.

If you purchased your vehicle outside the PEUGEOT dealer network, we invite you to have a dealer check the configuration of these services and, if desired, modified to suit your wishes. In a multi-lingual country, configuration is possible in the official national language of your choice.

For technical reasons, particularly to improve the quality of PEUGEOT CONNECT services to customers, the manufacturer reserves the right to carry out updates to the vehicle's on-board telematic system.

# EMERGENCY OR ASSISTANCE CALL USING Peugeot Connect Media

## PEUGEOT CONNECT SOS



Warning - the emergency call and the services are only active if the internal telephone is used with a valid SIM card. With a Bluetooth telephone and without a SIM card, these services are not operational.



In an emergency, press the SOS button until an audible signal is heard and a "Confirmation/Cancellation" screen is displayed (if valid SIM card inserted).

A call is made to the PEUGEOT Emergency team which receives locating information from the vehicle and can send a detailed alert to the relevant emergency services.

In countries in which the team is not operational, or when the locating service has been expressly declined, the call is sent to the emergency services (112).



If an impact is detected by the airbag control unit, and independently of the deployment of any airbags, an emergency call is made automatically.

The message "Deteriorated emergency call" associated with flashing of the orange indicator lamp indicates a malfunction. Contact a PEUGEOT dealer.

## PEUGEOT CONNECT ASSISTANCE

 


Press this button for access to PEUGEOT services.




Select "Customer call" to request any information about the PEUGEOT marque.

**Customer call**





Select "PEUGEOT Assistance" to make a roadside assistance call.

**PEUGEOT Assistance**

 

This service is subject to conditions and availability. Consult a PEUGEOT dealer. If you have purchased your vehicle outside the PEUGEOT dealer network, we invite you to have a dealer check the configuration of these services and, if desired, modified to suit your wishes.

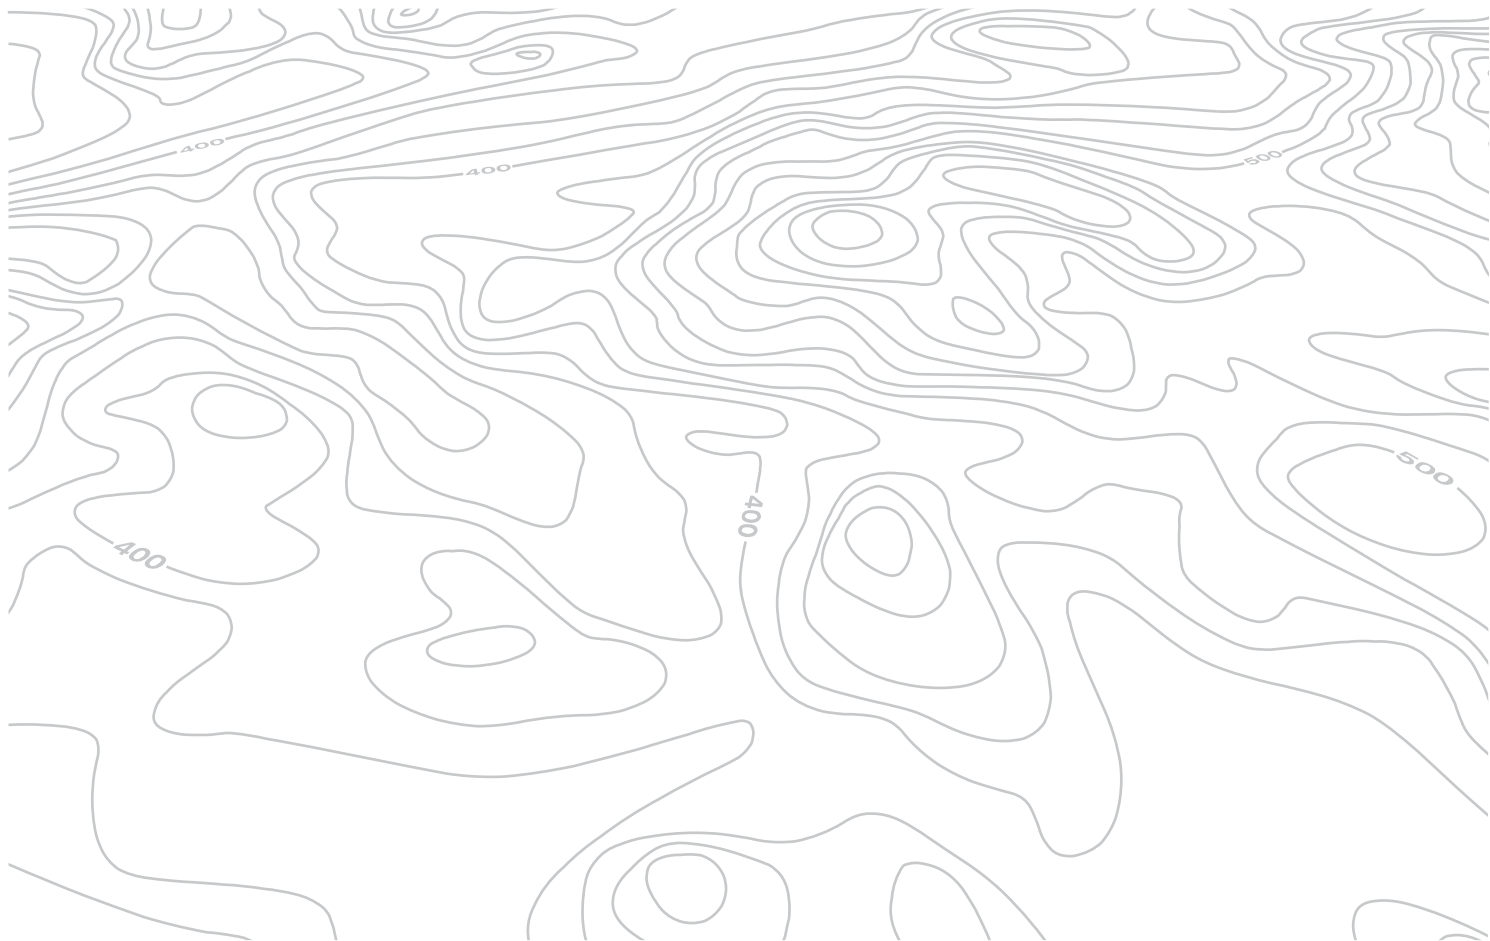

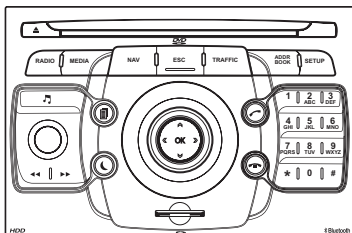

# Peugeot Connect Media

## MULTIMEDIA AUDIO SYSTEM/BLUETOOTH TELEPHONE GPS EUROPE



The Peugeot Connect Media is protected in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact a PEUGEOT dealer for configuration of the system.



For safety reasons, it is imperative that the driver carries out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the Peugeot Connect Media switches off following the activation of the Energy Economy mode.



Certain functions described in this handbook will become available during the course of the year.

### CONTENTS

|  |               |
|--|---------------|
| <b>01 First steps</b>                                  | <b>p. 228</b> |
| <b>02 Voice commands and steering mounted controls</b> | <b>p. 230</b> |
| <b>03 General operation</b>                            | <b>p. 233</b> |
| <b>04 Navigation - Guidance</b>                        | <b>p. 238</b> |
| <b>05 Traffic information</b>                          | <b>p. 247</b> |
| <b>06 Radio</b>  | <b>p. 249</b> |
| <b>07 Music media players</b>                          | <b>p. 250</b> |
| <b>08 Using the telephone</b>                          | <b>p. 255</b> |
| <b>09 Configuration</b>                                | <b>p. 260</b> |
| <b>10 Screen menu map</b>                              | <b>p. 261</b> |
| <b>Frequently asked questions</b>                      | <b>p. 266</b> |

# 01 FIRST STEPS

## Peugeot Connect Media Navigation (NG4 3D) CONTROL PANEL

Access to the Media Menu  
(audio CD, Jukebox,  
Auxiliary input).

Display the list of tracks.  
Change the audio source.

Access to the Navigation  
Menu and display recent  
destinations.

Abandon the current  
operation.

Long press: return to main  
display.

Access to the Traffic Menu.

Access to the Address book  
Menu.

Access to the Radio Menu  
Display the list of stations in  
alphabetical order (FM band) or  
frequency order (AM band).

Audio settings (Balance/  
Fader, Bass/Treble, Musical  
ambience...).

Adjust volume (each source  
is independent, including  
navigation messages and alerts).  
Long press: reinitialise the  
system.  
Short press: mute.

Automatic search down/up for  
radio frequencies.  
Select previous/next CD or MP3  
track.

SD card reader.

Short press: clears the last  
character.

Access to the "SETUP" menu  
(configuration).  
Long press: GPS coverage.

Enter the numbers or letters  
using the alpha-numeric keypad.  
Presetting 10 radio frequencies.



# 01

## FIRST STEPS

### Peugeot Connect Media Navigation (NG4 3D) NAVIGATOR

Press to left/right:

With display of the "RADIO" screen:  
select the previous/next frequency.

With display of the "MEDIA" screen:  
select the previous/next track.

With display of the "MAP" or "NAV":  
horizontal movement on the map.

Press up/down:

With display of the "RADIO" screen:  
select the previous/next radio station in  
the list.

With display of the "MEDIA" screen:  
select the MP3 folder.

With display of the "MAP" or "NAV":  
vertical movement on the map.

Go to the next or previous page in a  
menu.


Movement on the virtual keypad  
displayed.

OK: confirm the highlighted item.

Select successive display in  
the screen of "MAP"/"NAV" (if  
navigation in progress)/"TEL" (if  
a call is in progress)/"RADIO" or  
"MEDIA" being played.

CALL: access to the Phone  
menu.

Bluetooth connection, accept  
an incoming call.

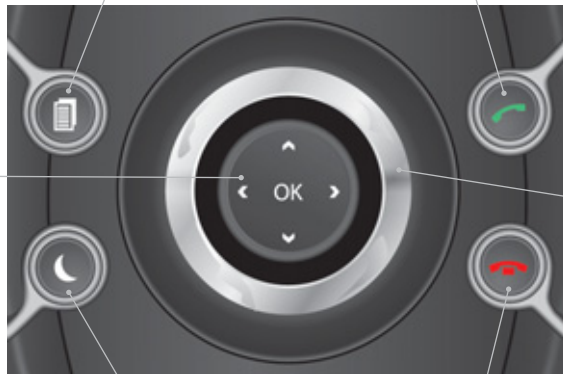

Normal display or black screen.

END CALL: access to the  
Phone menu.

End a call in progress or reject  
an incoming call, Bluetooth  
connection.

Rotate the dial:

With display of the "RADIO" screen:  
select the previous/next radio station in  
the list.

With display of the "MEDIA" screen:  
select the previous/next CD or MP3  
track.

With display of the "MAP" or "NAV":  
zoom the map in/out.

Movement of the menu selection cursor.

## 02 VOICE COMMANDS AND STEERING MOUNTED CONTROLS

### VOICE COMMANDS - VOICE RECO. INITIATION



 
1

Before using the system for the first time, you are advised to listen to, say and practice the tutorial.

2



Press the SETUP button and select the "Language & Speech" function. Turn the ring and select "Voice control". Activate voice recognition. Select "Tutorial".



The phrases to be spoken according to the context are indicated in the tables below.  
Speak and Peugeot Connect Media acts.



Pressing the end of the lighting control stalk activates voice recognition.



| CONTEXT           | SAY  | ACTION   |
|-------------------|--|--|
| <b>GENERAL</b>    | Help address book<br>Help voice control<br>Help media<br>Help navigation<br>Help telephone<br>Help radio<br>Cancel<br><br>Correction                 | Access to the address book help<br>Access to the voice recognition help<br>Access to the media management help<br>Access to the guidance, navigation help<br>Access to the telephone help<br>Access to the radio help<br>To cancel a voice command which is in progress<br>Request to correct the last voice recognition carried out<br>Clear  |
| <b>RADIO</b>      | Select station<br>Station <tts:stationName><br><br>Read out station list<br>Enter frequency<br><br>Select wave band<br>AM<br>FM<br>TA on<br>TA off   | Select a radio station<br>Select a radio station using its RDS description <tts:station Name> from the RADIO list<br>Listen to the list of stations available<br>Listen to the frequency of the current radio station<br>Choose the frequency waveband (AM or FM)<br>Change the frequency waveband to AM<br>Change the frequency waveband to FM<br>Activate Traffic Info (TA)<br>Deactivate Traffic Info |
| <b>NAVIGATION</b> | Destination input<br><br>Voice advice off<br>Voice advice on<br>Save address<br>Start guidance<br><br>Abort guidance<br>Navigate entry<br>POI Search | Command to enter a new destination address<br>Deactivate the spoken guidance instructions<br>Activate the spoken guidance instructions<br>Save an address in the address book<br>Start guidance (once the address has been entered)<br>Stop the guidance<br>Start guidance to an entry in the address book<br>Start guidance to a point of interest  |



## 02 VOICE COMMANDS AND STEERING MOUNTED CONTROLS

### VOICE COMMANDS - VOICE RECO. INITIATION



| CONTEXT             | SAY   | ACTION   |
|---------------------|---|--|
| <b>MEDIA</b>        | Media<br>Select media<br>Single slot<br>Jukebox<br>USB<br>External device<br>SD-Card<br>Track <1 - 1 000><br><br>Folder <1 - 1 000> | Select the MEDIA source<br>Choose a source<br>Select the CD player source<br>Select the Jukebox source<br>Select the USB player source<br>Select the audio AUX input source<br>Select the SD card source<br>Select a specific track (number between 1 and 1 000) on the active MEDIUM<br>Select a Folder (number between 1 and 1 000) on the active MEDIUM |
| <b>TELEPHONE</b>    | Phone menu<br>Enter number<br>Phone book<br>Dial<br>Save number<br>Accept<br>Reject   | Open the Telephone Menu<br>Enter a telephone number to be called<br>Open the phone book<br>Make a call<br>Save a number in the phone book<br>Accept an incoming call<br>Reject an incoming call  |
| <b>ADDRESS BOOK</b> | Address book menu<br>Call <entry><br><br>Navigate <entry>   | Open the address book<br>Call file using its <file> description as described in the address book<br>Start guidance to an address in the address book using its <file> description  |

## 02 VOICE COMMANDS AND STEERING MOUNTED CONTROLS

### STEERING MOUNTED CONTROLS

Wiper stalk: display "RADIO" and "MEDIA".

Lighting stalk: activate voice commands with a short press; indication of the current navigation instruction with a long press.

Radio: select the previous/next pre-set station.

CD audio: select the previous/next track

If "MEDIA" is displayed in the screen:

MP3 CD/SD CARD/JUKEBOX: select the previous/next folder.

Select the previous/next item in the contacts list.

Radio: automatic search for a higher frequency.

CD/SD CARD/JUKEBOX: select the next track.

CD/SD CARD/JUKEBOX: continuous press: fast forwards.

Volume increase.

Change audio source.

Start a call from the contacts list

Call/hang up the telephone.

Confirm a selection.

Press for more than 2 seconds: telephone menu.


Mute: press the volume increase and decrease buttons simultaneously. The sound is restored by pressing one of the two volume buttons.

Volume decrease.

Radio: automatic search for a lower frequency.

CD/SD CARD/JUKEBOX: select the previous track.

CD/SD CARD/JUKEBOX: continuous press: fast backwards.

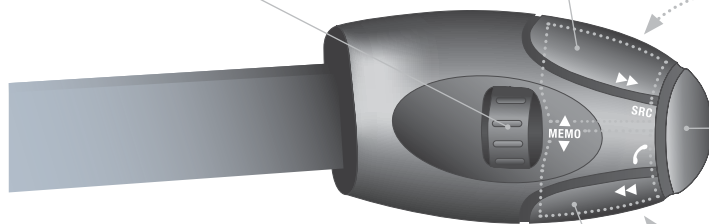

## 03 GENERAL OPERATION

### DISPLAY ACCORDING TO THE CONTEXT


 
Press the MODE button several times in succession to gain access to the following displays:

**RADIO/MUSIC MEDIA/  
VIDEO**



**TELEPHONE**

(If a conversation is in progress)

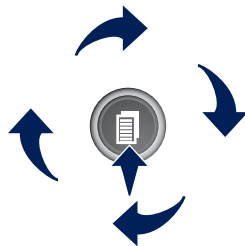

**FULL SCREEN MAP**



**NAVIGATION**

(If guidance is in progress)



**SETUP:**

access to the "SETUP" Menu: system language\* and voice functions\*, voice initialisation (section 09), date and time\*, display, unit and system parameters.

\* Available according to model.



**TRAFFIC:**

access to the Traffic Menu: display of the current traffic alerts.



**MEDIA:**

"DVD-audio" menu  
"DVD-Video" menu



Long press: access to the GPS coverage and to the demonstration mode.

For maintenance of the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, without any additional product.



For a detailed global view of the menus available, refer to the "Screen menu map" section of this handbook.

# 03 GENERAL OPERATION

## DISPLAY ACCORDING TO THE CONTEXT



Pressing OK gives access to short-cut menus according to the display on the screen.

### NAVIGATION (IF GUIDANCE IS IN PROGRESS):

1 **Abort guidance**

1 **Repeat advice**

1 **Block road**

2 Unblock

2 More

2 Less

2 Calculate

2 Zoom/Scroll

2 Browse route

1 **Route info**

2 Show destination



2 Trip info

3 Route type

3 Avoid

3 Satellites

3 Stopovers

2 Browse route

2 Zoom/Scroll

1 **Voice advice**

1 **Route options**

2 Route type

2 Route dynamics

2 Avoidance criteria

2 Recalculate

### TELEPHONE:

1 **End call**

1 **Hold call**

1 **Dial**

1 **DTMF-Tones**

1 **Private mode**

1 **Micro off**

### MUSIC MEDIA PLAYERS:

1 **TA**

1 **Play options**

2 Normal order

2 Random track

2 Scan

1 **Select media**

# 03 GENERAL OPERATION

## DISPLAY ACCORDING TO THE CONTEXT



### RADIO:

#### 1 In FM mode

- 2 TA
- 2 RDS
- 2 Radiotext
- 2 Regional prog.

#### 2 AM

#### 1 In AM mode

- 2 TA
- 2 Refresh AM list
- 2 FM

### FULL SCREEN MAP:

#### 1 Abort guidance/Resume guidance

#### 1 Set destination/Add stopover

#### 1 POIs nearby

#### 1 Position info



#### 2 Guidance options

#### 3 Navigate to

#### 3 Dial

#### 3 Save position

#### 3 Zoom/Scroll

#### 1 Map Settings

#### 2 2D Map

#### 2 2.5D Map

#### 2 3D Map

#### 2 North Up

#### 2 Heading Up

#### 1 Zoom/Scroll

### AUDIO DVD (LONG PRESS):

#### 1 Stop

#### 2 Group

#### 3 Group 1 .2/n

#### 2 Play options

#### 3 Normal order/Random track/Scan

#### 1 TA

#### 2 Select media

# 03 GENERAL OPERATION



## DISPLAY ACCORDING TO THE CONTEXT



### VIDEO DVD (LONG PRESS):

- 1 Play
- 2 Stop
- 2 DVD menus
- 3 DVD menu
- 3 DVD top menu
- 3 List of titles
- 3 List of chapters
- 2 DVD Options
- 3 Audio
- 3 Subtitles
- 3 Angle

Examples:

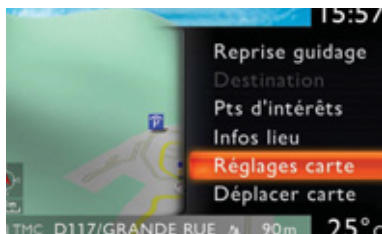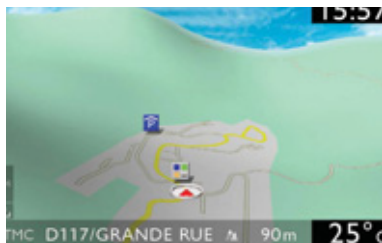


## Peugeot Connect Media IS:

- the map setting which allows the map to be displayed flat, in perspective or in 3D.

Flat map



Map in perspective

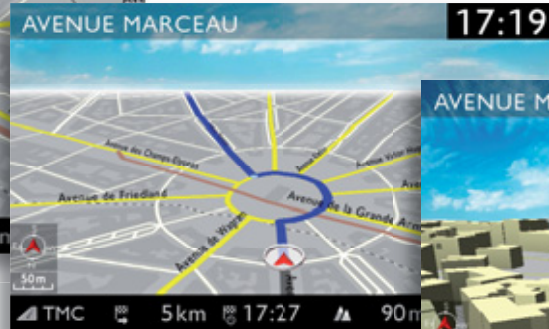

Map in 3D



- configuration of the system by means of voice commands.



## 04 NAVIGATION - GUIDANCE

### SELECTING A DESTINATION

The "NAVIGATION" voice commands are listed in section 02.  
During guidance, a long press on the end of the lighting stalk repeats the last guidance instruction.

1



Press the NAV button.



The list of the last 20 destinations appears under the Navigation Menu function.

2



Press the NAV button again or select the Navigation Menu function and press OK to confirm.

**Navigation Menu**



3



Select the "Destination input" function and press OK to confirm.

**Destination input**



4



Select the "Address input" function and press OK to confirm.

**Address input**



5



 
Once the country has been selected, turn the ring and select the town function. Press OK to confirm.



6



Select the letters of the town one by one confirming each time by pressing OK.



A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed via the LIST button on the virtual keypad.



## 04 NAVIGATION - GUIDANCE

It is possible to scroll the map using the 4-direction navigator. It is possible to select its orientation via the short-cut menu of the "Full screen map". Press OK then select "Map Settings" and confirm.

7



Turn the ring and select OK.  
Press OK to confirm.

 


To speed up the process, the post code can be entered directly after selecting the "Postal code" function.  
Use the virtual keypad to enter the letters and digits.

8



Repeat steps 5 to 7 for the "Street" and "House number" functions.



Select the "Save to address book" function to record the address entered in a directory file. Press OK to confirm the selection.  
The Peugeot Connect Media allows more than 4 000 contact records to be saved.



To delete a destination; from steps 1 to 3, select "Choose from last destinations".  
A long press on one of the destinations displays a list of actions from which you can select:

Delete entry

Delete list

9



Then select "Start route guidance" and the press OK to confirm.

Start route guidance



10



 
Select the route type:  
"Fast route", "Short route", or  
"Optimized route" and press OK to confirm.



11



Select the road with the colour corresponding to the route chosen and press OK to confirm and start guidance.



It is also possible to select a destination via "Choose from address book" or "Choose from last destinations", by selecting a junction, a town centre, geographic coordinates, or directly on the "Map".

Choose from address book

Choose from last destinations

## 04 NAVIGATION - GUIDANCE

### SETTING AND NAVIGATING TO MY "HOME ADDRESS"

i

To be set as the "Home address", an address must first be entered in the address book, for example from "Destination input"/"Address input" then "Save to address book".

1



Press the NAV button twice to display the Navigation Menu.

**Navigation Menu**



2



Select "Destination input" and confirm. Then select "Choose from address book" and confirm.

**Destination input**

 


3



Select your home address and confirm. Then select "Edit entry" and confirm.

**Edit entry**



4



Select "Set as Home address" and confirm to save.

**Set as home address**



To start navigation towards "Home", press NAV twice to display the Navigation Menu, select "Destination input" and confirm. Then select "Navigate HOME" and confirm to start guidance.

# 04 NAVIGATION - GUIDANCE

## ROUTE OPTIONS

When the map is displayed on the screen, you can select "Map Settings" then "2D Map/2.5D Map/3D Map/North Up/Heading Up". The display of buildings in 3D mode depends on the progress in town mapping.

1



Press the NAV button.



2



Press the NAV button again or select the Navigation Menu function and press OK to confirm.

**Navigation Menu**



3



Select the "Route options" function and press OK to confirm.

**Route options**



4



Select the "Route type" function and press OK to confirm. This function allows you to change the route type.

**Route type**



5



Select the "Route dynamics" function.

This function provides access to the "Traffic independent", "Semi-dynamic" and "Dynamic" options.

**Route dynamics**



6



Select the "Avoidance criteria" function. This function provides access to the "Avoid" options (motorways, toll roads, ferries, tunnels).

**Avoidance criteria**



7



Turn the ring and select the "Recalculate" function to take into account the route options selected. Press OK to confirm.

**Recalculate**



## 04 NAVIGATION - GUIDANCE

### ADDING A STOPOVER

Stopovers can be added to or deleted from the route once the destination has been selected.

1



Press the NAV button.



2



Press the NAV button again or select the "Navigation" Menu function and press OK to confirm.

**"Navigation" Menu**



3



Select the "Stopovers" function and press OK to confirm.

**Stopovers**



4



Select the "Add stopover" function (5 stopovers maximum) and press OK to confirm.

**Add stopover**



5



Enter a new address, for example.

**Address input**



6



Once the new address has been entered, select "Start route guidance" and press OK to confirm.

 
**Start route guidance**



7



Position the stopover on the list and press OK to confirm.



8

Repeat operations 1 to 7 as many times as necessary then select "Recalculate" and press OK to confirm.


 

 




 







 


To change the stopovers, repeat operations 1 to 3 and select "Rearrange route" (select a stopover, delete it or move it on the list using the ring to change the order, confirm its new position and finish with "Recalculate").

# 04 NAVIGATION - GUIDANCE

## SEARCHING FOR POINTS OF INTEREST (POI)

The points of interest (POIs) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).

|   |   |   |   |
|---|---|---|---|
| <p>1</p>  <p>Press the NAV button.</p>   |  | <p>6</p>  <p>Select the "POI in city" function to search for POIs in the city required. Select the country then enter the name of the city using the virtual keypad.</p> <p><b>POI in city</b></p> |  |
| <p>2</p>  <p>Press the NAV button again or select the Navigation Menu function and press OK to confirm.</p> <p><b>Navigation Menu</b></p>                  |  | <p> A list of cities present in the country selected can be accessed via the LIST button on the virtual keypad.</p>  |   |
| <p>3</p>  <p>Select the "POI search" function and press OK to confirm.</p> <p><b>POI search</b></p>  |  | <p>7</p>  <p>Select the "POI in country" function to search for POIs in the country required.</p> <p><b>POI in country</b></p>   |  |
| <p>4</p>  <p>Select the "POI nearby" function to search for POIs around the vehicle.</p> <p><b>POI nearby</b></p>  |  | <p>8</p>  <p>Select the "POI near route" function to search for POIs near the route.</p> <p><b>POI near route</b></p>  |  |
| <p>5</p>  <p>Select the "POI near destination" function to search for POIs near the point of arrival of the route.</p> <p><b>POI near destination</b></p> |  |   |   |

## 04 NAVIGATION - GUIDANCE



This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.

### LIST OF PRINCIPAL POINTS OF INTEREST (POI)

|  |                      |
|--|----------------------|
|  | Service station      |
|  | LPG station          |
|  | Garage               |
|  | PEUGEOT              |
|  | Motor racing circuit |
|  | Covered car park     |
|  | Car park             |
|  | Rest area            |
|  | Hotel                |
|  | Restaurant           |
|  | Refreshment area     |
|  | Picnic area          |
|  | Cafeteria            |

|  |                      |
|--|----------------------|
|  | Airport              |
|  | Railway station      |
|  | Bus station          |
|  | Port                 |
|  | Industrial estate    |
|  | Supermarket          |
|  | Bank                 |
|  | Vending machine      |
|  | Tennis court         |
|  | Swimming pool        |
|  | Golf course          |
|  | Winter sports resort |
|  | Theatre              |

|  |                         |
|--|-------------------------|
|  | Cinema                  |
|  | Theme parks             |
|  | Hospital                |
|  | Pharmacy                |
|  | Police station          |
|  | School                  |
|  | Post office             |
|  | Museum                  |
|  | Tourist information     |
|  | Automatic speed camera* |
|  | Red light camera*       |
|  | Risk area*              |

\* According to availability in the country.

## 04 NAVIGATION - GUIDANCE

### UPDATING POIs

1



Download the "POIs" update file onto an SD card or USB memory stick from the Internet. This service is available at [wipinforadars.co.uk](http://wipinforadars.co.uk).

i

The files must be copied to the root on the chosen medium.

2



Insert the medium (SD card or USB memory stick) containing the POI database into the system's SD card reader or USB port.

3

 


Press NAV, select Navigation Menu, then "Settings", then "Update personal POI".

Navigation Menu

Settings

Update personal POI



4



Select the medium ("USB" or "SD-Card") used and press OK.



5

Successful downloading is confirmed by a message.  
The system restarts.  
The POIs version can be found in the SETUP\System menu.

## 04 NAVIGATION - GUIDANCE

### SPOKEN INSTRUCTION SETTINGS

1



When the navigation is displayed in the screen, press OK then select or deselect "Voice advice" to activate or deactivate the spoken guidance instructions.

Use the volume button to adjust the volume.



 
The volume of the Risk Areas POIs alert can only be adjusted during this type of alert.

### POINTS OF INTEREST AND RISK AREAS SETTINGS

1



Press the NAV button.



2



Press the NAV button again or select the Navigation Menu function and press OK to confirm.

**Navigation Menu**



3



Select the "Settings" function and press OK to confirm.

**Settings**



4



Select the "POI categories on Map" function to select the POIs to be displayed on the map by default.

**POI categories on Map**

 


5



Select "Set parameters for risk areas" to gain access to the "Display on map", "Visual alert" and "Sound alert" functions.

**Set parameters for risk areas**





# 05 TRAFFIC INFORMATION

## CONFIGURE THE FILTERING AND DISPLAYING OF THE TMC MESSAGES

1



Press the TRAFFIC button.



The list of TMC messages appears under the Traffic Menu sorted in order of proximity.

2



Press the TRAFFIC button again or select the Traffic Menu function and press OK to confirm.

**Traffic Menu**



3



Select "Select preferred list" and press OK to confirm.



4



Select the filter of your choice:

**Messages on route**

**All warning messages**

**Only warnings on route**

**All messages**



5



Select "Geo. Filter".

**Geo. Filter**



i

When all of the messages on the route are selected, the addition of a geographic filter is recommended (within a radius of 3 miles (5 km) for example) to reduce the number of messages displayed on the map. The geographic filter follows the movement of the vehicle.

i

The filters are independent and their results are concealed. We recommend:

- a filter over 6 miles (10 km) around the vehicle in heavy traffic,
- a filter over 30 miles (50 km) around the vehicle or a filter on the route on motorway journeys.

# 05 TRAFFIC INFORMATION

## PRINCIPAL TMC SYMBOLS

1 Black and blue triangle: general information, for example:



Weather reports



Traffic reports



Wind



Fog



Parking



Snow/ice

2 Red and yellow triangle: traffic information, for example:



Modified signage



Narrow carriageway



Slippery surface



Accident



Delay



Roadworks



Risk of explosion



Road closed



Demonstration



Danger

 


No entry



Traffic jam

## RECEIVING TA MESSAGES



- the station transmits TA messages.
- the station does not transmit TA messages.
- TA messages are not activated.

The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1



With the current audio source displayed on the screen, press the dial.



2

The shortcut menu for the source appears and gives access to:

TA

3



Select Traffic Announcements (TA) and press the dial to confirm and go to the associated settings.



## 06 RADIO

### SELECTING A STATION

1



Press the RADIO button to display the list of stations received locally sorted in alphabetical order.



Select the station required by turning the ring and press to confirm.



While listening to the radio, press buttons « and » for the automatic search for a lower or higher frequency.



When the "RADIO" screen is displayed, turn the ring or use the 4-direction navigator to select the previous or next station on the list.



Press one of the buttons on the numeric keypad for more than 2 seconds to store the current station. A bleep confirms that it has been stored.  
Press the button on the numeric keypad to recall the stored radio station.

 
The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS following mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a failure of the audio equipment.

### RDS - REGIONAL MODE

1




When the current radio station is displayed on the screen, press OK.



2

The radio source short-cuts menu appears and provides access to the following short-cuts:

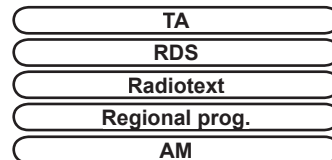

i



Select the function required and press OK to confirm to gain access to the corresponding settings.



i

RDS, if displayed, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

# 07 MUSIC MEDIA PLAYERS

## CD, MP3/WMA CD, MP3/WMA SD CARD/ USB PLAYER

### INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1, 2 & 2.5 Audio Layer 3 and the WMA format, an abbreviation of Windows Media Audio and the property of Microsoft, are audio compression standards which permit the recording of several tens of music files on a single disc.



Connecting an iPod:

To play MP3 type files, connect the iPod using the USB port (limited functions).

To play iTunes files, connect the iPod using the auxiliary socket (AUX).



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



In order to be read, a USB memory stick must be formatted to FAT 32.



The audio equipment will only play audio files with the extension ".mp3" with a speed of between 8 Kbps and 320 Kbps and the extension ".wma" with a speed of between 5 Kbps and 384 Kbps. It also supports the VBR (Variable Bit Rate) mode. No other type of file (.mp4, .m3u...) can be played.



It is advisable to restrict file names to 20 characters, without using of special characters (e.g. : " " ? ; ù) to avoid any playing and displaying problems.



During play, exit the "SD-Card" or "USB" source before removing the SD card or the USB memory stick from its port.



To avoid any risk of theft, remove the SD card or the USB memory stick when you leave your vehicle with the roof open.

# 07 MUSIC MEDIA PLAYERS

## SELECTING/PLAYING CD, MP3/WMA CD, MP3/WMA SD CARD/USB PLAYER

MP3 CDs, SD cards or USB peripherals are the compatible sources.


- 1** Insert the audio or MP3 CD in the player, the SD card in the card reader or the USB peripheral in the USB port. Play begins automatically.



- i** The list of tracks or MP3/WMA files appears under "Media" Menu.

- 2**  Press this button.




- 3**  When the "MEDIA" screen is displayed, turn the ring up or down to select the previous or next compatible source.




- 4**  Press the MEDIA button.



- 5**  Press the MEDIA button again or select the "Media" Menu function and press OK to confirm.


**"Media" Menu**



- 6**  Select the "Select media" function and press OK to confirm.

**Select media**



- 7**  Select the music source required. Press OK to confirm. Play begins.



- i** The playing and displaying of an MP3/WMA compilation may depend on the recording programme and/or the parameters used. We recommend the ISO 9660 recording standard.

# 07 MUSIC MEDIA PLAYERS

## JUKEBOX

### COPYING A CD, A USB MEMORY STICK OR AN SD CARD ONTO THE HARD DISK

When copying is in progress, switching off the ignition will interrupt the process but it will resume directly when the ignition is switched on again.

1

Insert an audio/MP3 CD, a USB memory stick or an SD card.



!

Check that the active MEDIA source is that of the medium used (CD, USB or SD card).

2



Press the MEDIA button. Press the MEDIA button again or select Media Menu and press OK to confirm.



3



Select "Jukebox management" then "Add files" and press OK at each step to confirm.

Add files



4



Select "Add files from MP3-Disc" for example and press OK to validate.

Add files from MP3-Disc



5



Select the tracks required then "Rip selection" or select all of the tracks using "Rip all".



6



Select "[New folder]" to create a new folder or select an existing folder (created previously).

[New folder]



7



"Do you want to change the names of the tracks that will be ripped?": select "Yes" to change them or "No".

Yes No



8



To copy an MP3 CD, then select "Real time ripping", "Fast ripping"/"High quality (192 kbit/sec)" or "Standard quality (128 kbit/sec)" then select "Start ripping".



9



Confirm the warning message by pressing "OK" to start the copy.

OK




# 07 MUSIC MEDIA PLAYERS


## JUKEBOX RENAMING OR DELETING AN ALBUM

**i** Check that the active source is not the Jukebox in order to be able to rename or delete a track/folder.


**1** Activate the playing of a source other than the Jukebox (CD, radio, etc...).

**2**  Press the MEDIA button.




**3**  Press the MEDIA button again or select Media Menu and press OK to confirm.



**4**  Select "Jukebox management" and press OK to confirm.

**Jukebox management**




**5**  Select "Modify content" and press OK confirm.


**Modify content**




## LISTENING TO THE JUKEBOX

**1**  Press the MEDIA button.  
Press the MEDIA button again or select Media Menu and press OK to confirm.



**2**  Select "Jukebox management" and press OK to confirm.



**3**  Select "Play options" and press OK to confirm.  
Select "Folders & Files" or "Playlists" then press OK to confirm.



Press the ESC button to return to the first file level.  
Playlists can be created in the Jukebox.  
Media Menu> Jukebox management> Create new playlist. Add the tracks required one by one then save the change. The "Playlists" play mode must then be selected.

# 07 MUSIC MEDIA PLAYERS

## VIEWING A VIDEO DVD

1

Insert the DVD in the player. Play begins automatically.



2



If the DVD does not appear on the screen, press the MODE button to gain access to the "MEDIA" screen which displays the DVD screen.



3



Press the MEDIA button to gain access to the DVD menu at any time, or to the functions of the Media Menu which adjust the video (brightness/contrast, image format...).



The 4-direction navigator and the chromed ring allow you to move the DVD selection cursor. Change chapter by pressing the ►► or ◀◀ button.



Select the video source required ("DVD-Video", "External device (AV)"). Press OK to confirm. Play begins.

## USING AN EXTERNAL DEVICE (AUX)

AUDIO/VIDEO/RCA CABLE NOT SUPPLIED

1

Connect the portable device (MP3 player, camcorder, camera...) to the RCA sockets (white and red for audio; yellow for video) in the glove box using a JACK/RCA audio cable.

2



Press the MEDIA button then press it again or select the Media Menu function and press OK to confirm.



If the external input is not activated, select "Ext. Device (Aux) management" to activate it.

3



Select "Select media" then "External device (AV)" and press OK to activate it.

 
External device



4



Select the AUX music source and press OK to confirm. Play begins automatically.



The display and management of the controls is via the portable device.



## 08 USING THE TELEPHONE

### CHOOSING BETWEEN THE BLUETOOTH TELEPHONE/INTERNAL TELEPHONE

1



To activate the Bluetooth telephone or the internal telephone, press PICK UP.



2



Select Phone menu, then "Select phone" then choose between "Telephone off", "Use Bluetooth phone" or "Use internal phone". Press OK at each step to confirm.



!

The system can only be connected to one Bluetooth telephone and one SIM card (Internal telephone) at the same time.

In this case, the phone book is synchronised with the Bluetooth telephone.

## 08 USING THE TELEPHONE

### PAIRING A BLUETOOTH TELEPHONE FIRST CONNECTION



For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the Peugeot Connect Media must be carried out with the vehicle stationary and the ignition on.

Visit [www.peugeot.co.uk](http://www.peugeot.co.uk) for more information (compatibility, more help, ...).

1

Activate the telephone's Bluetooth function and ensure that it is "visible to all" (refer to the telephone instructions).



2



Press the CALL button.



3



If no telephone has been paired, the system prompts you to "Connect phone". Select "Yes" and press OK to confirm.



4



Select "Search phone" and press OK to confirm. Then select the name of the telephone.



Search phone

\* The services available via the telephone depend on the network, the SIM card and the compatibility of the Bluetooth equipment used. Refer to your telephone's manual and your operator to check which services you have access to.

5



Enter the authentication code on the telephone. The code to be entered is displayed on the screen of the system.



Once the telephone has been connected, the Peugeot Connect Media can synchronise the address book and the call list. This synchronisation may take a few minutes\*.



To pair another telephone, press the TEL button, then select Phone menu, then "Select phone" then "Connect Bluetooth phone" then select the telephone required.



Press OK at each step to confirm.



Pairing can be started from the telephone (refer to the telephone instructions).



To delete a pairing, press TEL, select "Connect phone" then "Delete pairing".

## 08 USING THE TELEPHONE

### CONNECTING A BLUETOOTH TELEPHONE



For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the Peugeot Connect Media must be carried out with the vehicle stationary and the ignition on.

1

Activate the telephone's Bluetooth function and ensure that it is visible to all.



2



Press the PICK UP button.



The list of telephones connected previously (4 maximum) appears in the multifunction screen. Select the telephone required then select "Connect phone" for a new connection. Select "Delete pairing" to cancel the connection to the telephone.

\* The services available via the telephone depend on the network, the SIM card and the compatibility of the Bluetooth equipment used. Refer to your telephone's manual and your operator to check which services you have access to. A list of mobile telephones which offer the best range of services is available from dealers.



Once the telephone has been connected, the Peugeot Connect Media can synchronise the address book and the call list. This synchronisation may take a few minutes\*.

## 08 USING THE TELEPHONE

### USING THE INTERNAL TELEPHONE WITH A SIM CARD


If you have declined to use the internal telephone for personal calls, you can still connect a Bluetooth telephone to receive your calls on the vehicle's audio system.

1



Extract the holder by pressing the eject button.

2

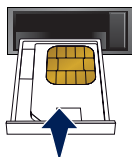

Install the SIM card in the holder and then insert it in the slot.

3

To remove the SIM card, repeat step 1.

i


For safety reasons and because they require prolonged attention on the part of the driver, the SIM card installation operations must be carried out when stationary.

4



Enter the PIN code on the keypad then select OK and confirm.

**Remember PIN**

 

When entering your PIN code, tick the "Remember PIN" tab to allow use of the telephone without having to enter this code when it is used subsequently.

5



The system asks "Do you want to switch to the internal phone?", select "Yes" if you wish to use your SIM card for your personal calls. Otherwise, only the emergency call and the services will use the SIM card.



Once the SIM card has been installed, the system can synchronise the address book and the call list. This synchronisation may take a few minutes.

## 08 USING THE TELEPHONE

### RECEIVING A CALL

- 1 An incoming call is announced by a ring and a superimposed display in the screen.

- 2 Select the "Yes" tab to accept or "No" to refuse and confirm by pressing OK.



Yes

No



- The PICK UP button accepts, the HANG UP button rejects the incoming call.

- 3 To hang up, press the HANG UP button or press OK and select "End call" then confirm by pressing OK.



End call



- Press the end of the steering mounted control to accept the call or end the call in progress.



Operating the telephone while driving is prohibited. It is recommended that you park safely or use in preference the steering mounted controls.

### MAKING A CALL

- 1 Press the PICK UP button.



- The list of the last 20 calls made and received in the vehicle appears under Phone menu. You can select a number and press OK to make the call.

- 2 Select the Phone menu function and press OK to confirm.



Phone menu



- 3 Select "Dial number", then dial the telephone number using the virtual keypad.

 


Dial number



- It is also possible to select a number from the address book. You can select "Dial from address book". The Peugeot Connect Media can record up to 4 096 entries.

- Press the end of the steering mounted control for more than two seconds to open the address book.



- It is always possible to start a call directly from the telephone; park the vehicle as a safety measure.

# 09 CONFIGURATION

## SETTING THE DATE AND TIME



This setting operation must be carried out if the battery has been disconnected.

1



Press the SETUP button.



2



Select the "Date & Time" function and press OK to confirm.

**Date & Time**



3



Select the "Set date & time" function and press OK to confirm.

**Set date & time**



4



Make the adjustments using the ring and move on to the next using the 4-direction navigator. Press OK to confirm.



Principle of GPS synchronisation (GMT):

1. Confirm the "Synchronise with GPS" selection, the time is then set to GMT universal time, the date is also updated.
  2. Using the 4-direction navigator, move the cursor to the time fields and press OK.
  3. You can then use the ring to set the time to the time zone of your choice.
- Note that when changing between summer/winter time, the time zone must be changed again manually.

5



Select the "Date format" function and press OK to confirm.  
Select the format required using the ring and press OK to confirm.



6



Select the "Time format" function and press OK to confirm.  
Select the format required using the ring and press OK to confirm.



Pressing the SETUP button for more than 2 seconds permits access to:

**Description of the unit**

**GPS coverage**

**Demo mode**

# 10 SCREEN MENU MAP



## MAIN FUNCTION

1

### OPTION A

2

option A1

3

option A2

3

### OPTION B...

2

4

Within 6 miles (10 km)

4

Within 30 miles (50 km)

2

### Read out settings

3

On confirmation

3

Incoming messages

2

TMC station information

2



## "Traffic" Menu

1

Select preferred list

2

Messages on route

3

Only warnings on route

3

All warning messages

3

All messages

3

Geo. Filter

3

Deactivate PIN

4

Within 2 miles (3 km)

4

Within 3 miles (5 km)

4

MEDIA

## "Media" Menu

1

Select media

2

Audio CD/MP3-Disc/DVD-Audio/DVD-Video

3

Jukebox (Folders & Files)

3

SD-Card

3

USB

3

External device (audio/AV)

2

Jukebox management

3

Add files

3

3

Create folder

3

Modify content

3

Edit playlist

3

Play options

4

Folders & Files

4

Playlists

3

Memory capacity

2

Sound settings

3

Refer to the "Sound settings" menu details of which are shown on the next page.

2

Video settings

3

Aspect ratio

3

Menu language

3

Display

4

Brightness

4


Contrast

4


Colour

4

|   |                                |
|---|--------------------------------|
| 3 | AUX standard                   |
| 3 | Reset video settings           |
| 2 | Ext. Device (Aux) management   |
| 3 | Off/Audio/Audio and Video (AV) |

|   |  |
|---|--|
|   |  |
| 1 | <b>"Radio" Menu</b>  |
| 2 | Waveband   |
| 3 | FM   |
| 3 | AM   |
| 2 | Manual tune  |
| 2 | Sound settings   |
| 3 | Refer to the "Sound settings" menu below.  |
| 1 | <b>"Sound settings" Menu</b>   |
| 2 | Balance/Fader  |
| 2 | Bass/Treble  |
| 2 | Equalizer  |
| 3 | Linear   |

|   |                        |
|---|------------------------|
| 3 | Classic                |
| 3 | Jazz                   |
| 3 | Rock/Pop               |
| 3 | Techno                 |
| 3 | Vocal                  |
| 2 | Mute rear speakers     |
| 2 | Loudness               |
| 2 | Speed dependent volume |
| 2 | Reset sound settings   |

|   |   |
|---|---|
|   |  |
| 1 | <b>"Navigation" Menu</b>  |
| 2 | Abort guidance/Resume guidance  |
| 2 | Destination input   |
| 3 | Address input   |
| 4 | Country   |
| 4 | City  |
| 4 | Street  |
| 4 | House number  |

|   |                               |
|---|-------------------------------|
| 4 | Start route guidance          |
| 4 | Postal code                   |
| 4 | Save to address book          |
| 4 | Intersection                  |
| 4 | City district                 |
| 4 | Geo position                  |
| 4 | Map                           |
| 3 | <b>Navigate HOME</b>          |
| 3 | Choose from last destinations |
| 3 | Choose from address book      |
| 2 | <b>Stopovers</b>              |
| 3 | Add stopover                  |
| 4 | Address input                 |
| 4 | Navigate HOME                 |
| 4 | Choose from address book      |
| 4 | Choose from last destinations |
| 3 | <b>Rearrange route</b>        |
| 3 | <b>Replace stopover</b>       |
| 3 | <b>Delete stopover</b>        |



### **3 Recalculate**

4 Fast route

4 Short route

4 Optimized route

### **2 POI search**

3 POI nearby

3 POI near destination

3 POI in city

3 POI in country

3 POI near route

### **2 Route options**

3 Route type

4 POI near destination

4 Short route

4 Optimized route

4 Subscr. service

### **2 Settings**

3 Route dynamics

4 Traffic independent

4 Semi-dynamic

4 Dynamic

### **3 Avoidance criteria**

4 Avoid motorways

4 Avoid toll roads

4 Avoid tunnels

4 Avoid ferries

### **3 Recalculate**



## **1 "Address book" Menu**

2 Create new entry

2 Show memory status

2 Export address book

2 Delete all voice entries

2 Delete all entries

2 Delete folder "My Addresses"



## **1 "Phone" menu**

2 Dial number

2 Dial from address book

2 Call lists

2 Messages

2 Select phone

3 Telephone off

3 Use Bluetooth phone

3 Use internal phone

3 Connect Bluetooth phone

4 Search phone

5 Disconnect phone

5 Rename phone

5 Delete pairing

5 Delete all pairings

5 Show details

- 2 **Settings**
- 3 **Automatic answering system**
- 3 **Select ring tone**
- 3 **Phone/Ring tone volume**
- 3 **Enter mailbox number**
- 3 **Internal phone settings**
- 3 **Automatically accept call**
- 3 **Signal waiting call (?)**
- 3 **Show status**
- 3 **Activate waiting call**
- 3 **Deactivate waiting call**
- 3 **Call forward (?)**
- 3 **Show status**
- 3 **Activate call forward**
- 3 **Deactivate call forward**
- 3 **Suppress own number**
- 3 **Select network**
- 3 **Set network automatically**
- 3 **Set network manually**

- 3 **Search for networks**
- 3 **PIN settings**
- 3 **Change PIN**
- 4 **Activate PIN**
- 4 **Deactivate PIN**
- 3 **Remember PIN**
- 3 **SIM-card memory status**



## 1 "SETUP" Menu

- 2 **Language & Speech**
- 3 **Menu language**
- 4 **Deutsch**
- 4 **English**
- 4 **Español**
- 4 **Français**
- 4 **Italiano**
- 4 **Nederlands**

- 4 **Polski**
- 4 **Portuguese**
- 3 **Voice control**
- 4 **Voice control active**
- 4 **Tutorial**
- 5 **Basics**
- 5 **Examples**
- 5 **Tips**
- 4 **Speaker adaptation**
- 5 **New speaker adaptation**
- 5 **Delete speaker adaptation**
- 3 **Voice output volume**
- 2 **Date & Time**
- 3 **Set date & time**
- 3 **Date format**
- 3 **Time format**

## 2 **Display**

### 3 **Brightness**

### 3 **Colour**

#### 4 Steel

#### 4 blue light (only in day mode)

#### 4 Orange Ray

#### 4 Blue Flame

### 3 **Map colour**

#### 4 Day mode for map

#### 4 Night mode for map

#### 4 Auto. Day/Night for map

## 2 **Units**

### 3 **Temperature**

#### 4 Celsius

#### 4 Fahrenheit

### 3 **Metric/Imperial**

#### 4 km

#### 4 Miles

## 2 **System**

### 3 **Factory reset**

### 3 **Software version**

### 3 **Automatic scrolling**

# FREQUENTLY ASKED QUESTIONS

The table below groups together the answers to the most frequently asked questions concerning the Peugeot Connect Media Navigation (NG4 3D).

| QUESTION   | ANSWER  | SOLUTION  |
|--|---|---|
| There is a difference in sound quality between the different audio sources (radio, CD...). | For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).                                  | Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the musical ambience "Linear" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.  |
| The CD is ejected automatically or is not played by the player.                            | The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.<br>The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment. | <ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: consult the advice in the "Audio" section.</li> <li>- The audio equipment's CD player does not play DVDs.</li> <li>- Due to inadequate quality, certain recorded CDs will not be played by the audio system.</li> </ul> |
| The CD player sound is poor.   | The CD used is scratched or of poor quality.  | Insert good quality CDs and store them in suitable conditions.  |
|  | The audio equipment settings (bass, treble, ambiances) are unsuitable.  | Set the treble or bass level to 0, without selecting an ambience.   |


| QUESTION  | ANSWER   | SOLUTION  |
|---|--|---|
| The stored stations do not function (no sound, 87.5 Mhz is displayed...).   | An incorrect waveband is selected.   | Press RADIO, select Radio Menu then "Waveband" to return to the waveband on which the stations are stored.  |
| The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...). | The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.   | Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area. |
|   | The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.   | This phenomenon is normal and does not indicate a failure of the audio equipment.   |
|   | The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).  | Have the aerial checked by a PEUGEOT dealer.  |
| Sound cut-outs of 1 to 2 seconds in radio mode.   | During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.  | Deactivate the "RDS" function by means of the short-cut menu if the phenomenon is too frequent and always on the same route.                                    |
| With the engine off, the system switches off after a few minutes of use.  | When the engine is switched off, the system's operating time depends on the battery charge.<br>The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery. | Start the vehicle's engine to increase the battery charge.  |

| QUESTION   | ANSWER  | SOLUTION   |
|--|---|--|
| <p>"TA" is selected.<br/>However, certain traffic jams along the route are not indicated in real time.</p> | On starting, it is several minutes before the system begins to receive the traffic information.   | Wait until the traffic information is being received correctly (displaying of the traffic information symbols on the map).   |
|  | In certain countries, only major routes (motorways...) are listed for the traffic information.  | This phenomenon is normal. The system is dependent on the traffic information available.   |
| The time taken to calculate a route sometimes seems longer than usual.                                     | The performance of the system may slow down temporarily if a CD/DVD is being copied onto the Jukebox at the same time as a route is being calculated.         | Wait until the CD/DVD has been copied or stop the copying before starting the guidance function.   |
| I receive a speed camera alert for a speed camera which is not on my route.                                | The system announces all speed cameras positioned in a cone located in front of the vehicle. It may detect speed cameras located on nearby or parallel roads. | Zoom in on the map to view the exact position of the speed camera.   |
| <p>The speed camera audible warning does not work.</p>   | The audible warning is not active.  | Activate the audible warning on Navigation Menu, Settings, Set parameters for risk areas.  |
|  | The alert volume is set to minimum.   | Increase the volume of the alert when passing a speed camera.  |
| Does the emergency call function work without a SIM card?  | No, as certain national regulations impose the presence of a SIM card in order to make an emergency call.   | Insert a valid SIM card in the slot.   |
| <p>The altitude is not displayed.</p>  | On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.  | Wait until the system has started up completely. Check that there is a GPS coverage of at least 4 satellites (long press on the SETUP button, then select "GPS coverage"). |
|  | Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.                                 | This phenomenon is normal. The system is dependent on the conditions of reception of the GPS signal.   |

| QUESTION  | ANSWER  | SOLUTION  |
|---|---|---|
| The route calculation is not successful.                              | The exclusion criteria may conflict with the current location (exclusion of toll roads on a toll motorway).                             | Check the exclusion criteria on the Navigation Menu ("Route options" - "Avoidance criteria").   |
| There is a long waiting period following the insertion of a CD.       | When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take a few seconds. | This phenomenon is normal.  |
| I cannot connect my Bluetooth telephone.                              | The telephone's Bluetooth function may be switched off or the equipment may not be visible.   | <ul style="list-style-type: none"> <li>- Check that your telephone's Bluetooth function is switched on.</li> <li>- Check that your telephone is visible.</li> </ul> |
|   | The Bluetooth telephone is not compatible with the system.  | A list of compatible Bluetooth mobile telephones is available from the dealer network.  |
| The volume of the telephone connected in Bluetooth mode is inaudible. | The volume depends both on the system and on the telephone.   | Peugeot Connect Media Navigation (NG4 3D) Increase the volume of the , to maximum if required, and increase the volume of the telephone if necessary.               |
| The system does not play the DVD.                                     | The region protection may not be compatible.  | Insert DVDs which have compatible region protection.  |
| I cannot copy the CD to the Jukebox.                                  | The wrong source is selected.   | Change the active source to CD.   |
|   | The CD is copy-protected.   | It is normal that a protected CD cannot be copied.  |

| QUESTION   | ANSWER   | SOLUTION  |
|--|--|---|
| The system does not receive SMS.   | The Bluetooth mode does not permit sending of the SMS to the system.                                       | Use your SIM card and the internal telephone.   |
|  | The SIM card used is a twin card.  | Use the original SIM card to receive the SMS.   |
| I cannot update the risk area POIs.  | The Navigation Menu - "Update personal POI" is not displayed.  | Check that the medium used for the update (SD card or USB memory stick) is inserted correctly.  |
|  | An error message is displayed at the end of the procedure.   | <ul style="list-style-type: none"> <li>- Start the procedure again in full.</li> <li>- Consult a PEUGEOT dealer if the problem persists.</li> <li>- Check that the data on the MEDIUM is supplied by an official partner of PEUGEOT.</li> </ul> |
| The voice frequencies (DTMF) are not active when I am communicating and I press numbers on the keypad. | The numeric buttons on the keypad are only active for calls if the display is in telephone mode.           | To activate them, press the MODE button until the telephone is displayed on the screen.   |
| An accident area which does not concern me is displayed on the screen.                                 | The accident areas are displayed near a point defined on the map and in relation to a direction of travel. | The alert may be triggered when travelling under a road or near a road which has a speed camera.  |



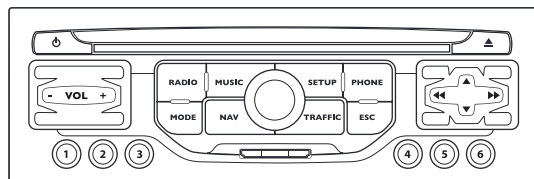

# Peugeot Connect Navigation (RNEG)

MULTIMEDIA AUDIO SYSTEM/BLUETOOTH TELEPHONE  
SATELLITE NAVIGATION SYSTEM FOR EUROPE BY SD CARD



The Peugeot Connect Navigation (RNEG) is protected in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact a PEUGEOT dealer for configuration of the system.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the Peugeot Connect Navigation (RNEG) switches off following the activation of the Energy Economy mode.



Certain functions described in this handbook will become available during the year.

## CONTENTS

|                                     |           |            |
|-------------------------------------|-----------|------------|
| <b>01 First steps</b>               | <b>p.</b> | <b>272</b> |
| <b>02 Steering mounted controls</b> | <b>p.</b> | <b>273</b> |
| <b>03 General operation</b>         | <b>p.</b> | <b>274</b> |
| <b>04 Navigation - Guidance</b>     | <b>p.</b> | <b>277</b> |
| <b>05 Traffic information</b>       | <b>p.</b> | <b>285</b> |
| <b>06 Radio</b>                     | <b>p.</b> | <b>287</b> |
| <b>07 Music media players</b>       | <b>p.</b> | <b>288</b> |
| <b>08 Bluetooth telephone</b>       | <b>p.</b> | <b>291</b> |
| <b>09 Configuration</b>             | <b>p.</b> | <b>294</b> |
| <b>10 Screen menu map</b>           | <b>p.</b> | <b>295</b> |
| <b>Frequently asked questions</b>   | <b>p.</b> | <b>299</b> |

# 01 FIRST STEPS

## Peugeot Connect Navigation (RNEG) CONTROL PANEL

Engine not running:

- Short press: on/off.
- Long press: pause with CD play, mute for radio.

Engine running:

- Short press: pause with CD play, mute for radio.
- Long press: reinitialise the system.

Long press: audio settings: front/rear fader, left/right balance, bass/treble, musical ambience, loudness, automatic volume, reinitialise settings.

Access to the Radio Menu. Display the list of stations.

Access to the Music Menu. Display tracks.

Selection dial in the screen display and according to the menu.  
Short press: contextual menu or confirm.  
Long press: contextual menu specific to the list displayed.

Access to the "SETUP" menu.  
Long press: GPS coverage and demonstration mode.


Access to the Phone Menu. Display the list of calls.

Adjust volume (each source is independent, including navigation messages and alerts).

Buttons 1 to 6:

Select a pre-set radio station.

Long press: pre-set the current station.

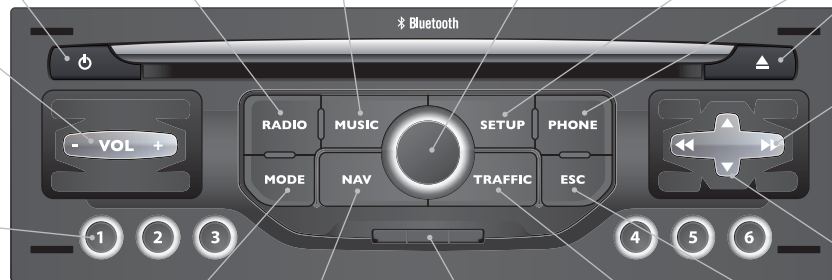

Eject CD.

Select previous/next radio station.

Select previous CD or MP3 track.

Select previous/next line in a list.

Select previous/next radio station in the list.

Select previous/next MP3 folder.

Select previous/next page in a list.

Access to the "MODE" menu.

Select successive display of:

Radio, Map, NAV (if navigation in progress), Telephone (if conversation in progress), Trip computer.

Long press: Black screen (DARK).

Access to the Navigation Menu. Display recent destinations.

Reader for navigation SD card only.

Access to the Traffic Menu. Display the current traffic alerts.

ESC: abandon current operation.

## 02 STEERING MOUNTED CONTROLS

RADIO: select the previous/next pre-set station.


Select the next entry in the address book.

RADIO: change to the next radio station in the list.

Long press: automatic search for a higher frequency.

CD: select the next track.

CD: continuous press: fast forward play.

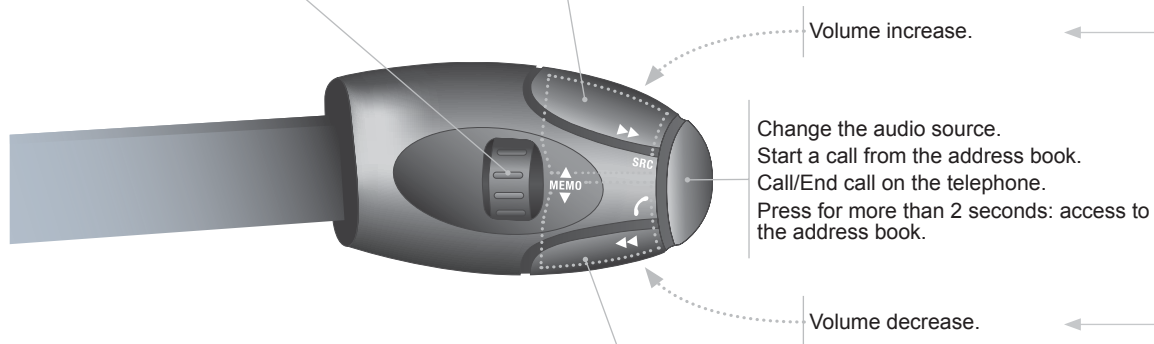

Change the audio source.

Start a call from the address book.

Call/End call on the telephone.

Press for more than 2 seconds: access to the address book.

Mute: press the volume increase and decrease buttons simultaneously. Restore the sound by pressing one of the two volume buttons.

RADIO: change to the previous radio station in the List.

Long press: automatic search for a lower frequency.


CD: select the previous track.

CD: continuous press: fast reverse.

## 03 GENERAL OPERATION

 Press the MODE button several times in succession for access to the following menus:

**RADIO/MUSIC MEDIA  
PLAYERS**





**TELEPHONE**

(If a conversation is in progress)



 **TRIP COMPUTER**

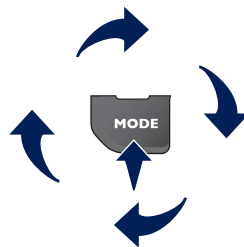

**FULL SCREEN MAP**



**NAVIGATION**

(If guidance is in progress)



**SETUP:**

system language\*, date and time\*, display, vehicle settings\*, unit and system settings, "Demo mode".

\* Available according to model.



**TRAFFIC:**

TMC information and messages.



For cleaning the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, with no additional product.



For a detailed global view of the menus available, refer to the "Screen menu map" section.

## 03 GENERAL OPERATION

### DISPLAY ACCORDING TO THE CONTEXT



A press on the OK dial gives access to short-cut menus according to the display on the screen.

#### NAVIGATION (IF GUIDANCE IS IN PROGRESS):

- 1 Abort guidance
- 1 Repeat advice
- 1 Block road
- 1 Route info
- 2 Show destination
- 2 Trip info
- 3 Route type
- 3 Avoid
- 3 Satellites

2 Zoom/Scroll

1 Voice advice

1 Route options

#### TRIP COMPUTER:

1 Alert log

1 Status of functions

#### TELEPHONE:

1 End call

1 Hold call

1 Dial

1 DTMF-Tones

1 Private mode

1 Micro off

## 03 GENERAL OPERATION

### DISPLAY ACCORDING TO THE CONTEXT

#### MUSIC MEDIA PLAYERS:

1 Traffic info (TA)

1 Play options

2 Normal order

2 Random track

2 Repeat folder

2 Scan

1 Select music

#### RADIO:

1 In FM mode

2 Traffic info (TA)

2 RDS

2 Radiotext

2 Regional prog.

2 AM

1 In AM mode

2 TA

2 Refresh AM list

2 FM

#### FULL SCREEN MAP:

1 Abort guidance / Resume guidance

1 Set destination

1 POIs nearby

1 Position info

1 Map settings

1 Zoom/Scroll

## 04 NAVIGATION - GUIDANCE

### SELECTING A DESTINATION

1



Press the NAV button.



 
The list of the last 20 destinations appears under the Navigation Menu function.

2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

**Navigation Menu**




3



Select the "Address input" function and press the dial to confirm.

**Address input**

 

Insert the SD card in the front panel reader and leave it there to use the Navigation functions.

The navigation SD card data must not be modified.


Map data updates are available from PEUGEOT dealers.

4



Select the "Destination input" function and press the dial to confirm.


**Destination input**

 

5



 
Once the country has been selected, turn the dial and select the town function. Press the dial to confirm.



6



 Select the letters of the town one by one confirming each time by pressing the dial.




A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed via the LIST button on the virtual keypad.

## 04 NAVIGATION - GUIDANCE

 7



Turn the dial and select OK.  
Press the dial to confirm.




To speed up the process, the post code can be entered directly after selecting the "Postal code" function.  
Use the virtual keypad to enter the letters and digits.

8



 Repeat steps 5 to 7 for the "Street" and "House number" functions.



Select the "Save to address book" function to record the address entered in a directory file. Press the dial to confirm the selection. Peugeot Connect Navigation allows up to 500 contact files to be recorded.



During guidance, pressing the end of the lighting stalk repeats the last guidance instruction.




9



Then select "Start route guidance" and then press the dial to confirm.

**Start route guidance**

 

Select the route type:

"Fast route", "Short route" or "Optimized route" and press the dial to confirm.

It is also possible to select a destination via "Choose from address book" or "Choose from last destinations".

**Choose from address book**

**Choose from last destinations**



### Map settings

You can zoom in/zoom out on the map using the dial.

It is possible to move the map or select its orientation via the shortcut menu of the FULL SCREEN MAP.

Press MODE until the map is displayed full screen. Press the dial then select "Map settings". Select "2.5D Map" or "2D Map" and in the latter case, select "North Up" or "Heading Up".



To clear a destination; from steps 1 to 3, select "Choose from last destinations".

A long press on one of the destinations displays a list of actions from which you can select:

Delete entry  
Delete list



# 04 NAVIGATION - GUIDANCE

## SETTING AND NAVIGATING TO MY "HOME ADDRESS"



 
To be set as the "Home address", an address must first be entered in the address book, for example from "Destination input"/"Address input" then "Save to address book".

1



Press the NAV button twice to display the Navigation Menu.

**Navigation Menu**




2



Select "Destination input" and confirm. Then select "Choose from address book" and confirm.

**Destination input**

 


3



Select "Address book" and confirm. Then select "Search entry (complete address book)" and confirm.

**Address book**

 


4



Select your home address and confirm. Then select "Edit entry" and confirm.

**Edit entry**

 

5



Select "Set as home address" and confirm to save.

**Set as "Home address"**



To start navigation towards "Home address", press NAV twice to display the Navigation Menu, select "Destination input" and confirm.

Then select "Navigate HOME" and confirm to start guidance.

# 04 NAVIGATION - GUIDANCE

## ROUTE OPTIONS

The route selected by the Peugeot Connect Navigation system depends directly on the route options.  
Changing these options may change the route completely.

1



Press the NAV button.

 


2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

**Navigation Menu**




3



Select the "Route options" function and press the dial to confirm.

**Route options**

 


4



Select the "Route type" function and press the dial to confirm. This function allows you to change the route type.

**Route type**

 


5



Select the "Route dynamics" function.  
This function gives access to the "Traffic independent" or "Semi-dynamic" options.

**Route dynamics**

 


6



Select the "Avoidance criteria" function. This function provides access to the AVOID options (motorways, toll roads, ferries).

**Avoidance criteria**

 


7



Turn the dial and select the "Recalculate" function to take into account the route options selected. Press the dial to confirm.

**Recalculate**

 

# 04 NAVIGATION - GUIDANCE

 
## ADDING A STOPOVER

Stopovers can be added to the route once the destination has been selected.

1



Press the NAV button.




2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

 Navigation Menu




3



Select the "Stopovers" function and press the dial to confirm.

 Stopovers




4



Select the "Add stopover" function (5 stopovers maximum) and press the dial to confirm.

 Add stopover




5



Enter a new address, for example.

 Address input



6



Once the new address has been entered, select OK and press the dial to confirm.

OK

 


7



Select "Recalculate" and press the dial to confirm.

Recalculate




The stopover must be completed or deleted in order for the guidance to continue to the next destination. Otherwise, the Peugeot Connect Navigation will always return you to the previous stopover.


# 04 NAVIGATION - GUIDANCE
 
## SEARCHING FOR POINTS OF INTEREST (POI)

The points of interest (POI) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).




Press the NAV button.

 


Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

**Navigation Menu**

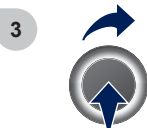


Select the "POI search" function and press the dial to confirm.

**POI search**

 


Select the "POI nearby" function to search for POIs around the vehicle.

**POI nearby**

 


Select the "POI near destination" function to search for POIs near the point of arrival of the route.

**POI near destination**

 

Select the "POI in city" function to search for POIs in the city required. Select the country then enter the name of the city using the virtual keypad.

**POI in city**

 


A list of cities present in the country selected can be accessed via the LIST button on the virtual keypad.




Select the "POI in country" function to search for POIs in the country required.

**POI in country**

 

Select the "POI near route" function to search for POIs near the route.

**POI near route**

 

## 04 NAVIGATION - GUIDANCE



This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.

### LIST OF PRINCIPAL POINTS OF INTEREST (POI)



Service station



LPG station



Garage



PEUGEOT



Motor racing circuit



Covered car park



Car park



Rest area



Hotel



Restaurant



Refreshment area



Picnic area



Cafeteria



Airport



Railway station



Bus station



Port



Industrial estate



Supermarket



Bank



Vending machine



Tennis court



Swimming pool



Golf course



Winter sports resort



Theatre



Cinema



Theme parks



Hospital



Pharmacy



Police station



School



Post office



Museum



Tourist information



Automatic speed camera\*



Red light camera\*



Risk area\*

\* According to availability in the country.

# 04 NAVIGATION - GUIDANCE

## NAVIGATION SETTINGS

1



Press the NAV button.

 


2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

**Navigation Menu**




3



Select the "Settings" function and press the dial to confirm.

**Settings**

 


4



Select the "Navi volume" function and turn the dial to set the volume of each voice synthesiser (traffic information, alert messages...).

**Navi volume**

 

To activate or deactivate vocal guidance, with guidance active and the map displayed in the screen, press the dial and then select or deselect "Voice advice".

**Voice advice**



 
The adjustment of the volume for the Risk Areas POIs is used only during the transmission of an alert.

5



Select the "POI categories on Map" function to select the POIs to be displayed on the map by default.

**POI categories on Map**




6



Select "Set parameters for risk areas" for access to the "Display on map", "Visual alert" and "Sound alert" functions.

**Set parameters for risk areas**

 

## UPDATING POIs

The detailed procedure for updating POIs is available at the following internet address: [wipinforadars.co.uk](http://wipinforadars.co.uk).

This requires an SDHC (High Capacity) compatible reader.

 
# 05 TRAFFIC INFORMATION

## CONFIGURE THE FILTERING AND DISPLAY OF TMC MESSAGES

1



Press the TRAFFIC button.




The list of TMC messages appears under the Traffic Menu sorted in order of proximity.

2



Press the TRAFFIC button again or select the Traffic Menu function and press the dial to confirm.

**Traffic Menu**

 

3



Select the filter of your choice:

**Messages on route**

 
**All warning messages**

**Only warnings on route**

**All messages**

The messages appear on the map and on the list.

To exit, press ESC.




4



Select the "Geo. Filter" function and press the dial to confirm.

**Geo. Filter**

 

5



Then select the radius of the filter in miles (km) required in accordance with the route, press the dial to confirm.

When all of the messages on the route are selected, the addition of a geographical filter is recommended (within a radius of 3 miles (5 km) for example) to reduce the number of messages displayed on the map. The geographical filter follows the movement of the vehicle.



The filters are independent and their results are cumulative.

We recommend a filter on the route and a filter around the vehicle of:

- 2 miles (3 km) or 3 miles (5 km) for a region with heavy traffic,
- 6 miles (10 km) for a region with normal traffic,
- 30 miles (50 km) for long journeys (motorway).

# 05 TRAFFIC INFORMATION

## PRINCIPAL TMC SYMBOLS

1 Black and blue triangle: general information, for example:



Weather reports



Traffic reports



Wind



Fog



Parking



Snow/ice

2 Red and yellow triangle: traffic information, for example:



Modified signage



Narrow carriageway



Slippery surface



Accident



Delay



Roadworks



Risk of explosion



Road closed



Demonstration



Danger

 


No entry



Traffic jam

## RECEIVING TA MESSAGES




- the station transmits TA messages.
- the station does not transmit TA messages.
- TA messages are not activated.

The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1



 With the current audio source displayed on the screen, press the dial.



2

 
The shortcut menu for the source appears and gives access to:

TA

3



Select Traffic Announcements (TA) and press the dial to confirm and go to the associated settings.






# 06 RADIO

## SELECTING A STATION


1



 
Press the RADIO button to display the list of stations received locally sorted in alphabetical order. Select the station required by turning the dial and press to confirm.



 While listening to the radio, press one of the buttons to select the previous or next station on the list.



 A long press of one of the buttons starts the automatic search for a station with a lower or higher frequency.



Press one of the buttons on the numeric keypad for more than 2 seconds to store the current station. Press the button on the numeric keypad to recall the stored radio station.


The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS following mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a failure of the audio equipment.

## RDS - REGIONAL MODE

 1




When the current radio station is displayed on the screen, press the dial.



2


The radio source short-cuts menu appears and provides access to the following short-cuts:

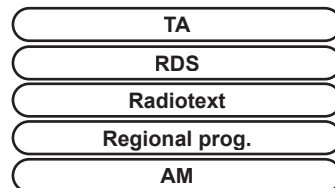

3



 Select the function required and press the dial to confirm to gain access to the corresponding settings.



RDS, if displayed, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

## 07 MUSIC MEDIA PLAYERS

### CD, MP3/WMA CD INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1, 2 & 2.5 Audio Layer 3 and the WMA format, an abbreviation of Windows Media Audio and the property of Microsoft, are audio compression standards which permit the recording of several tens of music files on a single disc.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



The Peugeot Connect Navigation will only play audio files with the extension ".mp3" with a speed of between 8 Kbps and 320 Kbps and the extension ".wma" with a speed of between 5 Kbps and 384 Kbps.

It also supports the VBR (Variable Bit Rate) mode.

No other type of file (.mp4, .m3u...) can be played.



It is advisable to restrict file names to 20 characters, without using special characters (e.g.: " ? ; ù) to avoid any play or display problems.

 
# 07 MUSIC MEDIA PLAYERS

## SELECTING/PLAYING MUSIC CD, MP3/WMA CD

1



Press the MUSIC button.



!


The list of tracks or MP3/WMA files appears under Music Menu.

2



Press the MUSIC button again or select the Music Menu function and press the dial to confirm.

**Music Menu**

 


3



Select the "Select music" function and press the dial to confirm.


**Select music**

 

4



 
Select the music source required: CD, MP3/WMA CD. Press the dial to confirm. Play begins.



5



 
Press the up or down button to select the next/previous folder.



6



 Press one of the buttons to select a music track.  
Press and hold one of the buttons for fast forward or rewind play.



The playing and displaying of an MP3/WMA compilation may depend on the recording programme and/or the settings used. We recommend the ISO 9660 file standard.


# 07 MUSIC MEDIA PLAYERS

## USING THE EXTERNAL INPUT (AUX)

JACK/USB AUDIO CABLE NOT SUPPLIED

1

Connect the portable device (MP3/WMA player...) to the auxiliary JACK socket or to the USB port, using a suitable audio cable.

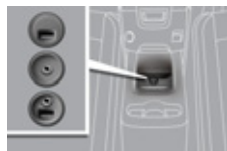


2



Press the MUSIC button then press it again or select the Music Menu function and press the dial to confirm.

**Music Menu**

 


3



Select the "External device" function and press the dial to activate it.


**External device**

 

4



 Select the AUX music source and press the dial to confirm. Play begins automatically.



!

The display and management of the controls is via the portable device.

# 08 BLUETOOTH TELEPHONE



## PAIRING A TELEPHONE FIRST CONNECTION

\* The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.



For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the Peugeot Connect Navigation must be carried out with the vehicle stationary. The ignition must be on.



Visit [www.peugeot.co.uk](http://www.peugeot.co.uk) for more information (compatibility, more help, ...).

1

 
Activate the telephone's Bluetooth function and ensure that it is "visible to all" (refer to the telephone instructions).



2



Press the PHONE button.



3



For a first connection, select "Search phone" and press the dial to confirm. Then select the name of the telephone.

Search phone



4

Enter the authentication code on the telephone. The code to be entered is displayed on the screen of the system.

Some telephones offer automatic reconnection of the telephone every time the ignition is switched on.

A message confirms the pairing.



 
Pairing can also be started from the telephone (refer to the telephone instructions).



Once the telephone has been connected, Peugeot Connect Navigation can synchronise the address book and the call list. This synchronisation may take a few minutes\*.



To change the telephone connected, press the PHONE button, then select Phone Menu and press the dial to confirm.



## 08 BLUETOOTH TELEPHONE

### CONNECTING A TELEPHONE


\* The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.

 
**!** For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the Peugeot Connect Navigation must be carried out with the vehicle stationary. The ignition must be on.

**💡** Visit [www.peugeot.co.uk](http://www.peugeot.co.uk) for more information (compatibility, more help, ...).

- 1 Activate the telephone's Bluetooth function and ensure that it is "visible to all" (refer to the telephone instructions).  
The last telephone connected is reconnected automatically.  
A message confirms the connection.




- 2  Press the PHONE button.



**i** The list of telephones connected previously (4 maximum) appears on the multifunction screen. Select the telephone required for a new connection.


**i** Once the telephone has been connected, Peugeot Connect Navigation can synchronise the address book and the call list. This synchronisation may take a few minutes\*.

 - 1  When a telephone is already connected, to change it press the PHONE button, then select Phone Menu and press the dial to confirm.



- 2  Select "Connect phone". Select the telephone and press to confirm.

**Connect phone**

 

# 08 BLUETOOTH TELEPHONE

## RECEIVING A CALL

1

 
An incoming call is announced by a ring and a superimposed display on the multifunction screen.

2



Select the "Yes" tab to accept or "No" to refuse and confirm by pressing the dial.

Yes No




3




To hang up, press the PHONE button or press the dial and select "End call" then confirm by pressing the dial.

 End call



 Press the end of the steering mounted control to accept the call or end the call in progress.




## MAKING A CALL

1



 Press the PHONE button.



The list of the last 20 calls made and received in the vehicle appears under Phone Menu. You can select a number and press the dial to make the call.

2



Select the Phone Menu function and press the dial to confirm.

Phone Menu

Select "Dial number", then dial the telephone number using the virtual keypad.

Dial number



It is also possible to select a number from the address book. You can select "Dial from address book". The Peugeot Connect Navigation can record up to 1 000 entries (telephone numbers). Press the end of the steering mounted control for more than two seconds to gain access to the address book.



It is possible to make a call directly from the telephone; park the vehicle as a safety measure.




To delete a number, press the PHONE button then press and hold on a call number to display a list of actions including:  
Delete entry  
Delete list


# 09 CONFIGURATION
 
## SETTING THE DATE AND TIME


**!** These settings must be entered again if the battery has been disconnected.


**1**  Press the SETUP button.




**2**  Select the "Date & Time" function and press the dial to confirm.


**Date & Time**

 


**3**  Select the "Set date & time" function and press the dial to confirm.


**Set date & time**

 


 
**4**  Adjust the settings one by one using the direction arrows and confirm by means of the dial.




The SETUP function gives access to the following options: System language, Date & Time, Display (Brightness, Colour, Map colour), Vehicle, Units, System.

 **5**  Select the "Date format" function and press the dial to confirm.



 **6**  Confirm the format required using the dial. Select the "Time format" function and press the dial to confirm.



Confirm the format required using the dial. Pressing the SETUP button for more than 2 seconds gives access to:

**Description of the unit**

**GPS coverage**

**Demo mode**



# 10 SCREEN MENU MAP



## MAIN FUNCTION

- 1
- 2
- 3
- 3
- 2

OPTION A

option A1

option A2

OPTION B...



## "Traffic" Menu

- 1
- 2
- 2
- 2
- 2
- 2
- 3
- 3

Messages on route

Only warnings on route

All warning messages

All messages

Geo. Filter

Within 2 miles (3 km)

Within 3 miles (5 km)

- 3
- 3
- 3

Within 6 miles (10 km)

Within 30 miles (50 km)

Within 60 miles (100 km)



## "Music" Menu

- 1
- 2
- 2
- 3
- 3
- 3
- 4
- 4
- 4
- 4
- 4

Select music

Sound settings

Balance/Fader

Bass/Treble

Equalizer

Linear

Classic

Jazz

Rock/Pop

Techno

- 4

Vocal

- 3
- 3
- 3

Loudness

Speed dependent volume

Reset sound settings



## "Radio" Menu

- 1
- 2
- 3
- 3
- 2
- 2
- 3
- 3
- 4

Waveband

FM

AM

Manual tune

Sound settings

Balance/Fader

Bass/Treble

Equalizer

Linear

- 4 Classic
- 4 Jazz
- 4 Rock/Pop
- 4 Techno
- 4 Vocal
- 3 **Loudness**
- 3 **Speed dependent volume**
- 3 **Reset sound settings**

## "Navigation" Menu

- 1 **Abort guidance/Resume guidance**
- 2 **Destination input**
- 3 **Enter new address**
- 4 Country
- 4 City
- 4 Street
- 4 House number

- 4 Start route guidance
- 4 Postal code
- 4 Save to address book
- 4 Intersection
- 4 City district
- 4 Geo position
- 4 Map
- 3 **Navigate HOME**
- 3 **Choose from address book**
- 3 **Choose from last destinations**
- 3 **TMC station information**
- 2 **Stopovers**
- 3 **Add stopover**
- 4 Address input
- 4 Navigate HOME
- 4 Choose from address book
- 4 Choose from last destinations

- 3 **Rearrange route**
- 3 **Replace stopover**
- 3 **Delete stopover**
- 3 **Recalculate**
- 4 Fast route
- 4 Short route
- 4 Optimized route
- 2 **POI search**
- 3 **POI nearby**
- 3 **POI near destination**
- 3 **POI in city**
- 3 **POI in country**
- 3 **POI near route**
- 2 **Route options**
- 3 **Route type**
- 4 Fast route
- 4 Short route

- 4 Optimized route
- 3 **Route dynamics**
- 4 Traffic independent
- 4 Semi-dynamic
- 3 **Avoidance criteria**
- 4 Avoid motorways
- 4 Avoid toll roads
- 4 Avoid ferries
- 3 **Recalculate**
- 2 **Settings**
- 3 **Navi volume**
- 3 **POI categories on Map**
- 3 **Set parameters for risk areas**
- 4 Display on map
- 4 Visual alert
- 4 Sound alert



## "Phone" Menu

- 1
- 2 Dial number
- 2 Dial from address book
- 2 Call lists
- 2 Connect phone
- 3 Search phone
- 3 Phones connected
- 4 Disconnect phone
- 4 Rename phone
- 4 Delete pairing
- 4 Delete all pairings
- 4 Show details
- 2 Settings
- 3 Select ring tone
- 3 Phone/Ring tone volume
- 3 Enter mailbox number



## "SETUP" menu

- 1
- 2 System language\*
- 3 Deutsch
- 3 English
- 3 Español
- 3 Français
- 3 Italiano
- 3 Nederlands
- 3 Polski
- 3 Portuguese
- 2 Date & Time\*
- 3 Set date & time
- 3 Date format
- 3 Time format

\* Available according to model.

## **2 Display**

### **3 Brightness**

### **3 Colour**

4 Pop titanium

4 Toffee

4 Blue steel

4 Technogrey

4 Dark blue

### **3 Map colour**

4 Day mode for map

4 Night mode for map

4 Auto. Day/Night for map

## **2 Vehicle\*\***

### **3 Vehicle information**

4 Alert log

4 Status of functions

## **2 Units**

### **3 Temperature**

4 Celsius

4 Fahrenheit

### **3 Metric/Imperial**

4 Kilometres (Consumption: l/100)

4 Kilometres (Consumption: km/l)

4 Miles (Consumption: MPG)

## **2 System**

### **3 Factory reset**

### **3 Software version**

### **3 Automatic scrolling**

\*\* The parameter settings vary according to vehicle.

# FREQUENTLY ASKED QUESTIONS


| QUESTION   | ANSWER  | SOLUTION  |
|--|---|---|
| There is a difference in sound quality between the different audio sources (radio, CD...). | For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).                                  | Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the Linear musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.  |
| The CD is ejected automatically or is not played by the player.                            | The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.<br>The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment. | <ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: consult the advice in the Audio section.</li> <li>- The audio equipment's CD player does not play DVDs.</li> <li>- Because of their quality level, certain writeable CDs will not be played by the audio system.</li> </ul> |
| The CD player sound is poor.   | The CD used is scratched or of poor quality.  | Insert good quality CDs and store them in suitable conditions.  |
|  | The audio equipment settings (bass, treble, ambiences) are unsuitable.  | Set the treble or bass level to 0, without selecting an ambience.   |

| QUESTION  | ANSWER   | SOLUTION   |
|---|--|--|
| The stored stations do not function (no sound, 87.5 Mhz is displayed...).   | An incorrect waveband is selected.   | Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.                    |
| The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...). | The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.   | Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area. |
|   | The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.   | This phenomenon is normal and does not indicate a failure of the audio equipment.  |
|   | The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).  | Have the aerial checked by a PEUGEOT dealer.   |
| Sound cut-outs of 1 to 2 seconds in radio mode.   | During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.  | Deactivate the RDS function if the phenomenon is too frequent and always on the same route.                                    |
| With the engine off, the audio equipment switches off after a few minutes of use.   | When the engine is switched off, the audio equipment operating time depends on the battery charge.<br>The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery. | Start the vehicle's engine to increase the battery charge.   |

| QUESTION  | ANSWER  | SOLUTION   |
|---|---|--|
| TA is selected. However, certain traffic jams along the route are not indicated in real time. | On starting, it is several minutes before the system begins to receive the traffic information.   | Wait until the traffic information is being received correctly (displaying of the traffic information symbols on the map).   |
|   | In certain countries, only major routes (motorways...) are listed for the traffic information.  | This phenomenon is normal. The system is dependent on the traffic information available.   |
| I receive a speed camera alert for a camera which is not on my route.                         | The system announces all speed cameras located in a conical zone forward of the vehicle. It may detect speed cameras on nearby or parallel roads. | Zoom the map to view the exact position of the speed camera.   |
| The audible speed camera alert is not working.  | Audible alerts are not active.  | Activate audible alerts in Navigation Menu, Settings, Set parameters for risk areas.   |
|   | The alert volume level is set to minimum.   | Increase the speed camera alert volume.  |
| The altitude is not displayed.  | On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 3 satellites correctly.                                  | Wait until the system has started up completely. Check that there is a GPS coverage of at least 3 satellites (long press on the SETUP button, then select GPS coverage). |
|   | Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.                     | This phenomenon is normal. The system is dependent on the conditions of reception of the GPS signal.   |
| The route is not calculated successfully.   | The exclusion criteria may conflict with the current location (exclusion of toll roads on a motorway with tolls).                                 | Check the exclusion criteria.  |

| QUESTION   | ANSWER  | SOLUTION  |
|--|---|---|
| There is a long waiting time after inserting a CD. | When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take a few seconds. | This phenomenon is normal.  |
| I cannot connect my Bluetooth telephone.           | The telephone's Bluetooth function may be deactivated or the equipment may not be visible.  | <ul style="list-style-type: none"> <li>- Check that your telephone's Bluetooth function is activated.</li> <li>- Check that your telephone is visible.</li> </ul> |
| A telephone connected by Bluetooth is inaudible.   | The volume level depends on both the system and the telephone.  | Increase the Peugeot Connect Navigation volume setting, possibly to maximum, and increase the telephone volume level if necessary.                                |



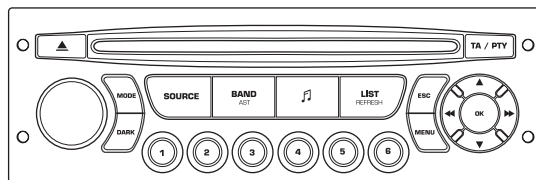

# Peugeot Connect Sound (RD5)

## AUDIO SYSTEM/BLUETOOTH



Your Peugeot Connect Sound (RD5) is coded in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact your PEUGEOT dealer for configuration of the system.




For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the audio equipment may switch off after a few minutes.

## CONTENTS

|                                     |               |
|-------------------------------------|---------------|
| <b>01 First steps</b>               | <b>p. 304</b> |
| <b>02 Steering mounted controls</b> | <b>p. 305</b> |
| <b>03 Main menu</b>                 | <b>p. 306</b> |
| <b>04 Audio</b>                     | <b>p. 307</b> |
| <b>05 Peugeot Connect USB</b>       | <b>p. 310</b> |
| <b>06 Bluetooth</b>                 | <b>p. 313</b> |
| <b>07 Configuration</b>             | <b>p. 316</b> |
| <b>08 Screen menu map</b>           | <b>p. 318</b> |
| <b>Frequently asked questions</b>   | <b>p. 323</b> |

# 01 FIRST STEPS

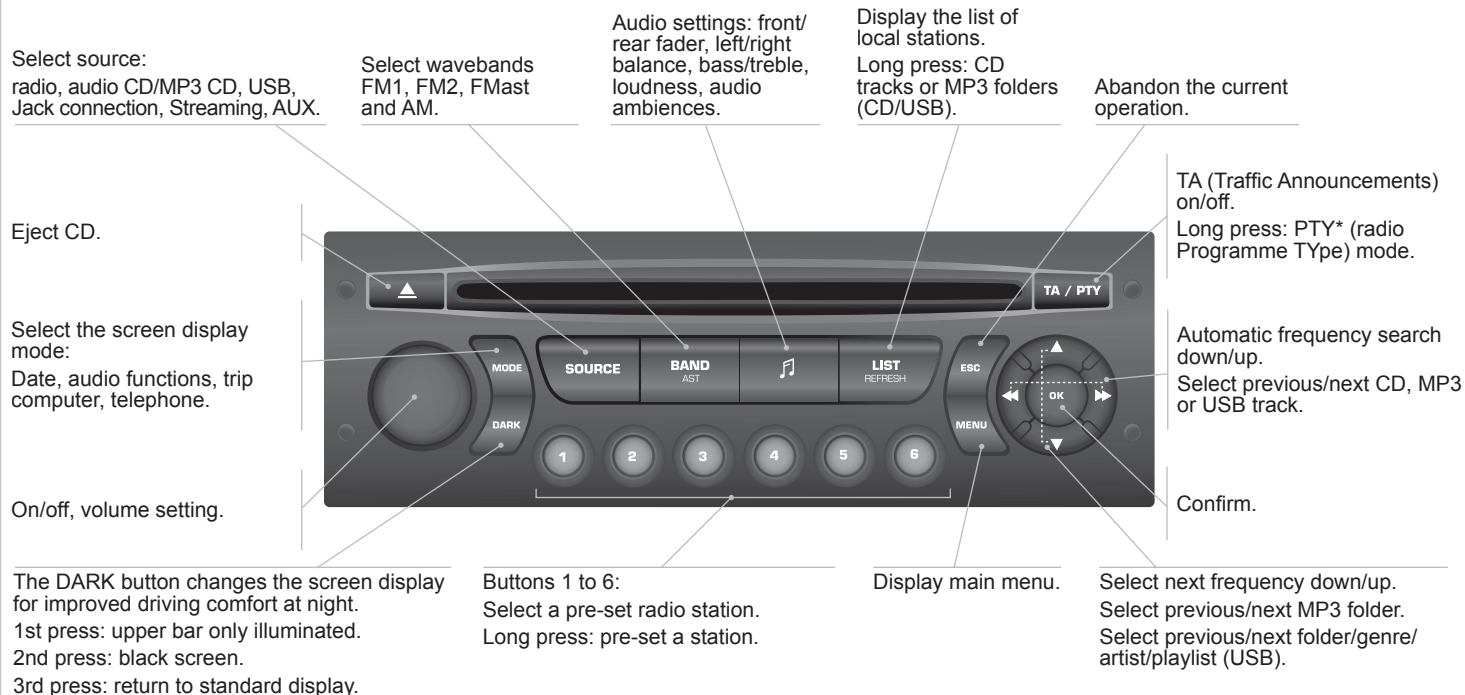

\* Available according to version.

## 02 STEERING MOUNTED CONTROLS

Radio: select the previous/next pre-set station.

USB: select genre/artist/folder from the classification list.


Select the previous/next item in a menu.

Radio: automatic search for a higher frequency.

CD/MP3/USB: selection of the next track.

CD/USB: continuous press: fast forwards play.

Move in the list.

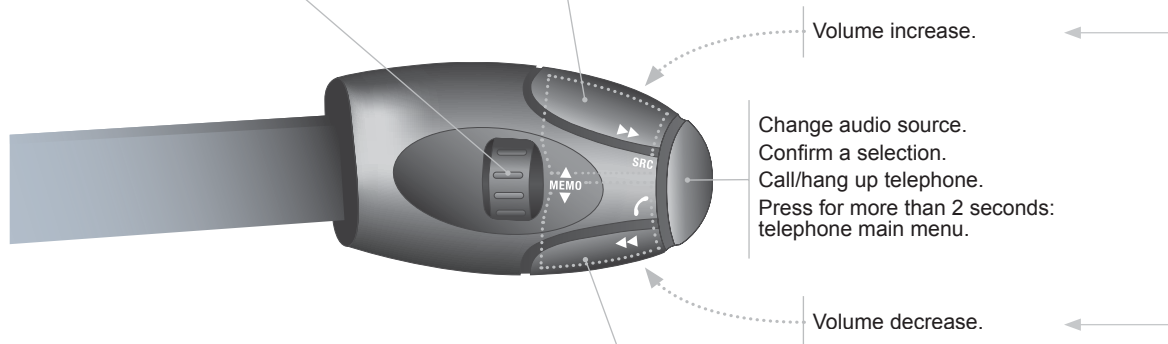

Change audio source.

Confirm a selection.

Call/hang up telephone.

Press for more than 2 seconds: telephone main menu.

Radio: automatic search for a lower frequency.

CD/MP3/USB: selection of the previous track.


CD/USB: continuous press: fast reverse. Move in the list.

## 03 MAIN MENU

### > MONOCHROME SCREEN C

**AUDIO FUNCTIONS:**  
radio, CD, USB, options.

**TELEPHONE:**  
Bluetooth hands-free,  
pairing, management  
of a call.

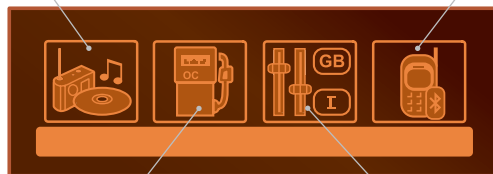

**TRIP COMPUTER:**  
entering of distances,  
alerts, status of functions.

**PERSONALISATION-  
CONFIGURATION:**  
vehicle parameters,  
display, languages.

### > MONOCHROME SCREEN A




 
For a detailed global view of the  
menus available, refer to the  
"Screen menu map" section.

## 04 AUDIO

 



### RADIO SELECTING A STATION

- 1**  Press the SOURCE button several times in succession and select the radio.




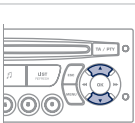
- 2**  Press the BAND button to select a waveband: FM1, FM2, FMast, AM.






- 3**  Briefly press one of the buttons to carry out an automatic search of the radio stations.



- 4**  Press one of the buttons to carry out a manual search up/down for radio frequencies.



 
-   Press the LIST button to display the list of stations received locally (30 stations maximum). To update this list, press for more than two seconds.




The external environment (hills, buildings, tunnels, basement car parks, ...) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio system.


### RDS

 
- 1**  Press the MENU button.




- 2**  Select AUDIO FUNCTIONS then press OK.

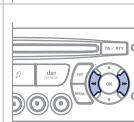


- 3**  Select the FM WAVEBAND PREFERENCES function then press OK.

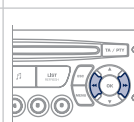

- 4**  Select ACTIVATE RDS then press OK. RDS appears on the screen.

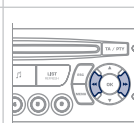

-  In radio mode, press OK directly to activate/deactivate RDS mode.

-  The RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. Under conditions of very weak reception, the system may change to a regional station.

## 04 AUDIO

### RECEIVING TA MESSAGES



 
The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1

TA / PTY



Press the TA button to activate or deactivate traffic messages.



### CD PLAYING A CD



Insert circular compact discs only.

Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the original player.

 
Without pressing the EJECT button, insert a CD in the player, play begins automatically.

1

SOURCE




To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.



2



 Press one of the buttons to select a track on the CD.




Press the LIST REFRESH button to display the list of tracks on the CD.

3



 Press and hold one of the buttons for fast forward or backward.



## 04 AUDIO

### MP3 CD PLAYING AN MP3 COMPILATION



Insert an MP3 compilation in the player.

The audio equipment searches for all of the music tracks, which may take anything between a few seconds and several tens of seconds, before play begins.



 
On a single disc, the CD player can read up to 255 MP3 files spread over 8 folder levels. However, it is advisable to keep to a limit of two levels to reduce the access time before the CD is played.

While the CD is being played, the folder structure is not followed. All of the files are displayed on a single level.

1




To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.



2



 Press one of the buttons to select a track on the CD.




Press the LIST REFRESH button to display the list of directories of the MP3 compilation.

3



 Press and hold one of the buttons for fast forward or backward play.



### MP3 CD INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1.2 & 2.5 Audio Layer 3, is an audio compression standard which permits the recording of several tens of music files on a single disc.



In order to be able to play a recorded CDR or CDRW, when recording, the ISO 9660 level 1.2 or Joliet file format is recommended.

If the disc is recorded in another format, it may not be played correctly.

It is recommended that the same recording format is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet format is recommended.



The audio system will only play files with the extension ".mp3" with a sampling rate of 22.05 KHz or 44.1 KHz. No other type of file (.wma, .mp4, .m3u...) can be played.



It is advisable to restrict file names to 20 characters without using special characters (e.g. " ? ; ù) to avoid any playing or displaying problems.



Empty CDs are not recognised and may damage the system.

# 05 PEUGEOT CONNECT USB

## USING THE PEUGEOT CONNECT USB

The list of compatible equipment and the compression rates supported are available from PEUGEOT dealers.

1

This unit consists of a USB port and an auxiliary Jack socket\*. The audio files are transmitted from portable equipment - digital player or a USB memory stick - to your Peugeot Connect Sound (RD5) and heard via the vehicle's speakers.



2

USB memory stick (1.1, 1.2 and 2.0) or Apple® player of generation 5 or later:

- USB memory sticks should be formatted FAT or FAT 32 (NTFS not supported),
- the Apple® player lead is essential,
- navigation through the file database is also possible by means of the steering mounted controls.



3

Other Apple® players of earlier generations and players using the MTP protocol\*:

 
- play via Jack-Jack lead only (not supplied),
- navigation through the file database is from the portable device.



## CONNECTING A USB MEMORY STICK

1

Connect the memory stick to the port, directly or using a lead. If the audio equipment is switched on, the USB source is detected as soon as it is connected. Play begins automatically after a delay which depends on the capacity of the USB memory stick.



The file formats supported are .mp3 (mpeg1 layer 3 only), .wma (standard 9 only, 128 kbits/sec compression), .wav and .ogg.

Certain playlist formats are supported (m3u, ...). On reconnection of the previous memory stick used, play is resumed automatically with the last track played.

!

The system puts together playlists (temporary memory) created over a period which depends on the capacity of the USB device. The other sources are available during this time.

The playlists are updated each time the ignition is switched off or each time a USB memory stick is connected.

When connecting for the first time, the classification suggested is by folder. When you reconnect, the classification selected previously is retained.

\* According to vehicle.



## 05 PEUGEOT CONNECT USB

 
### USING THE PEUGEOT CONNECT USB

2


Press and hold LIST to display the different classifications.  
Select by Folder/Artist/Genre/Playlist, press OK to select the classification required, then press OK again to confirm.



- by Folder: all folders containing audio files recognised on the peripheral device.
- by Artist: all of the artist names defined in the ID3 Tags, classified in alphabetical order.
- by Genre: all of the genres defined in the ID3 Tags.
- by Playlist: in accordance with the playlists recorded on the USB device.



 Press LIST briefly to display the previously selected classification.  
Navigate through the list using the left/right and up/down buttons.  
Confirm the selection by pressing OK.




3



Press one of these buttons to gain access to the previous/next track on the classification list currently being played.

 
Press and hold one of the buttons for fast forward or backward play.



4



 Press one of these buttons to gain access to the previous/next Genre, Folder, Artist or Playlist on the classification list currently being played.



### CONNECTING AN APPLE® PLAYER VIA THE USB PORT

1

The lists available are Artist, Genre and Playlist (as defined in the Apple® player).

Selection and Navigation are described in steps 1 to 4 above.



Do not connect a hard disk or USB connection device other than audio equipment to the USB port. This could damage your installation.

## 05 PEUGEOT CONNECT USB

### USING THE AUXILIARY INPUT (AUX)

JACK socket or USB port (according to vehicle)




The auxiliary input, JACK or USB, allows the connection of a portable device (MP3 player...).



Do not connect a device to both the JACK socket and the USB port at the same time.

1


Connect the portable device (MP3 player...) to the JACK socket or to the USB port, using a suitable cable (not supplied).

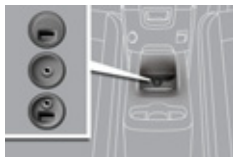

2



 Press the SOURCE button several times in succession and select AUX.



### ADJUSTING THE VOLUME OF THE AUXILIARY SOURCE

1

 
First adjust the volume of your portable device.



2



Then adjust the volume of your audio system.



The display and control is via the portable device.



# 06 BLUETOOTH



## BLUETOOTH TELEPHONE

### SCREEN C

(Available according to model and version)

The services offered depend on the network, the SIM card and the compatibility of the Bluetooth equipment used.

Consult your telephone's manual and your operator to find out which services are available to you.

### PAIRING A TELEPHONE/FIRST CONNECTION



For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio equipment must be carried out with the vehicle stationary and the ignition on.



Go to [www.peugeot.co.uk](http://www.peugeot.co.uk) for more information (compatibility, more help, ...).

1

 
Activate the telephone's Bluetooth function.



2



Press the MENU button.




3



In the menu, select:

 - Bluetooth telephone function - Audio
- Bluetooth configuration
- Perform a Bluetooth search



4

A window is displayed with a message that a search is in progress.

5

The first 4 telephones recognised are displayed in this window.



The TELEPHONE menu permits access to the following functions in particular: Directory\*, Call list, Pairing management.

\* If your telephone is fully compatible.

6

Select the telephone to be connected from the list. Only one telephone can be connected at a time.

7

A virtual keypad is displayed in the screen: enter a code with at least 4 digits. Confirm by pressing OK.



8

A message is displayed in the screen of the telephone chosen. To accept the pairing, enter the same code on the telephone, then confirm with OK.

If pairing fails, the number of attempts is not limited.



9

A message that the pairing has been successful appears in the screen.



The automatic connection authorised is only active after the telephone has been configured. The directory and the call list can be accessed after the synchronisation period.

## 06 BLUETOOTH



 
### RECEIVING A CALL

- 1 An incoming call is announced by a ring and a superimposed display in the vehicle's screen.


2



Select the YES tab on the display using the buttons and confirm by pressing OK.



 Press the steering mounted control to accept the call.



### MAKING A CALL

- 1 From the Bluetooth telephone function Audio menu, select Manage the telephone call then Call, Call list or Directory.

2

Press the steering mounted control for more than two seconds for access to your directory, then navigate with the thumb wheel.

Or

To dial a number, use your telephone's keypad, with the vehicle stationary.



### ENDING A CALL

- 1 During a call, press the steering mounted control for more than 2 seconds. Confirm with OK to end the call.



## 06 BLUETOOTH



### BLUETOOTH AUDIO STREAMING\*



Wireless transmission of the telephone's music files via the audio equipment. The telephone must be able to manage the appropriate Bluetooth profiles (Profiles A2DP/AVRCP).

1

Initiate the pairing between the telephone and the vehicle. This pairing can be initiated from the vehicle's telephone function menu or via the telephone's keypad. See steps 1 to 9 on the previous pages. During the pairing phase, the vehicle must be stationary with the key in the ignition.



 
2

Select the telephone to be connected from the telephone function menu.  
The audio system connects to a newly paired telephone automatically.

3



Activate the streaming source by pressing the SOURCE button\*\*. The tracks to be played can be controlled as usual via the buttons on the audio system control panel and the steering mounted controls\*\*\*. The contextual information can be displayed on the screen.



\* Depending on the compatibility of the telephone.

\*\* In certain cases, playing of the Audio files must be initiated from the keypad.

\*\*\* If the telephone supports the function.

# 07 CONFIGURATION

 


## SETTING THE DATE AND TIME SCREEN A

1




Press the MENU button.



2



 
Using the arrows, select DISPLAY  
CONFIGURATION.



3



 
Press to confirm the selection.



4



 
Using the arrows, select YEAR.



5



 
Press to confirm the selection.



6



 
Adjust the setting.



7



 
Press to confirm the selection.



8



 Start again from step 1 then set  
MONTH, DAY, HOUR, MINUTES.




# 07 CONFIGURATION

## SETTING THE DATE AND TIME SCREEN C

1



 
Press the MENU button.



2



 
Using the arrows, select  
PERSONALISATION  
CONFIGURATION.



3



 
Press to confirm the selection.



4



 
Using the arrows, select DISPLAY  
CONFIGURATION.



5



 
Press to confirm the selection.



6



 
Using the arrows, select ADJUST  
DATE AND TIME.



7



 
Press to confirm the selection.



8



 Adjust the settings one by one  
confirming by pressing the OK  
button. Next select the OK tab on the  
screen then confirm.



# 08 SCREEN MENU MAP

01:17 20°  
27 MAY 2011

## MONOCHROME A

### 1 RADIO-CD

2 RDS SEARCH

2 REG MODE

2 CD REPEAT

2 RANDOM PLAY



### 1 MAIN FUNCTION

2 OPTION A

3 OPTION A1

3 OPTION A2

2 OPTION B...

### 1 VEHICLE CONFIG\*

2 REV WIPE ACT

2 GUIDE LAMPS

### 1 OPTIONS

2 DIAGNOSTICS

3 CONSULT

3 ABANDON

### 1 UNITS

2 TEMPERATURE: °CELSIUS/  
°FAHRENHEIT

2 FUEL CONSUMPTION: KM/L -  
L/100 - MPG

\* The parameters vary according to vehicle.



## 08 SCREEN MENU MAP

01:17 20°  
27 MAY 2011  
10:00 AM

### 1 DISPLAY ADJUST

- 2 YEAR
- 2 MONTH
- 2 DATE
- 2 HOUR
- 2 MINUTES
- 2 12 H/24 H MODE

### 1 LANGUAGE

- 2 FRANCAIS
- 2 ITALIANO
- 2 NEDERLANDS
- 2 PORTUGUES
- 2 PORTUGUES-BRASIL
- 2 DEUTSCH
- 2 ENGLISH
- 2 ESPANOL

## 08 SCREEN MENU MAP



### MONOCHROME C



Press the OK dial for access to short-cut menus according to the display on the screen:

#### RADIO

- 1 activate/deactivate RDS
- 1 activate/deactivate REG mode
- 1 activate/deactivate radiotext

#### CD/MP3 CD

- 1 activate/deactivate Intro
- 1 activate/deactivate track repeat  
(the entire current CD for CD, the entire  
current folder for MP3 CD)
- 1 activate/deactivate random play  
(the entire current CD for CD, the entire  
current folder for MP3 CD)

#### USB

- 1 activate/deactivate track repeat (of the  
current folder/artist/genre/playlist)
- 1 activate/deactivate random play (of the  
current folder/artist/genre/playlist)

# 08 SCREEN MENU MAP



## MONOCHROME C

Pressing the MENU button displays:



### AUDIO FUNCTIONS

- 1
- 2 **FM BAND PREFERENCES**
  - 3 **alternative frequencies (RDS)**
    - 4 activate/deactivate
  - 3 **regional mode (REG)**
    - 4 activate/deactivate
  - 3 **radio-text information (RDTXT)**
    - 4 activate/deactivate

### PLAY MODES

- 2
- 3 **album repeat (RPT)**
  - 4 activate/deactivate
- 3 **track random play (RDM)**
  - 4 activate/deactivate



### TRIP COMPUTER

- 1
- 2 **ENTER DISTANCE TO DESTINATION**
  - 3 **Distance: x miles**
- 2 **ALERT LOG**
  - 3 **Diagnostics**
- 2 **STATUS OF THE FUNCTIONS\***
  - 3 **Functions activated or deactivated**

\* The parameters vary according to vehicle.



### PERSONALISATION-CONFIGURATION

- 1
- 2 **DEFINE THE VEHICLE PARAMETERS\***
- 2 **DISPLAY CONFIGURATION**
  - 3 **video brightness adjustment**
    - 4 normal video
    - 4 inverse video
    - 4 brightness (- +) adjustment
  - 3 **date and time adjustment**
    - 4 day/month/year adjustment
    - 4 hour/minute adjustment
    - 4 choice of 12 h/24 h mode
  - 3 **choice of units**
    - 4 l/100 km - mpg - km/l
    - 4 °Celsius/°Fahrenheit
- 2 **CHOICE OF LANGUAGE**

## 08 SCREEN MENU MAP



### **1 BLUETOOTH TELEPHONE**

- 2 Bluetooth configuration**
  - 3 Connect/Disconnect a device**
  - 3 Telephone function**
  - 3 Audio Streaming function**
    - 4 Consult the paired device
    - 4 Delete a paired device
    - 4 Perform a Bluetooth search
- 2 Call**
  - 3 Calls list**
    - 4 Directory
  - 2 Manage the telephone call**
    - 3 Terminate the current call**
    - 3 Activate private mode**

# FREQUENTLY ASKED QUESTIONS

| QUESTION   | ANSWER  | SOLUTION  |
|--|---|---|
| There is a difference in sound quality between the different audio sources (radio, CD...).         | For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).                                  | Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.  |
| The CD is ejected automatically or is not played by the player.                                    | The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.<br>The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment. | <ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: consult the advice in the "Audio" section.</li> <li>- The audio equipment's CD player does not play DVDs.</li> <li>- Due to their quality level, certain writeable CDs will not be played by the audio system.</li> </ul> |
| The message "USB peripheral error" is displayed on the screen.<br>The Bluetooth connection is cut. | The battery of the peripheral may not be sufficiently charged.  | Recharge the battery of the peripheral device.  |
|  | The USB memory stick is not recognised.<br>The memory stick may be corrupt.   | Reformat the memory stick.  |
| The CD player sound is poor.   | The CD used is scratched or of poor quality.  | Insert good quality CDs and store them in suitable conditions.  |
|  | The audio equipment settings (bass, treble, ambiences) are unsuitable.  | Set the treble or bass level to 0, without selecting an ambience.   |

| QUESTION  | ANSWER   | SOLUTION   |
|---|--|--|
| The stored stations do not function (no sound, 87.5 Mhz is displayed...).   | An incorrect waveband is selected.   | Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.                    |
| The traffic announcement (TA) is displayed. I do not receive any traffic information.   | The radio station is not part of the regional traffic information network.   | Tune to a radio station which broadcasts traffic information.  |
| The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...). | The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.   | Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area. |
|   | The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.   | This phenomenon is normal and does not indicate a failure of the audio equipment.  |
|   | The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).  | Have the aerial checked by a PEUGEOT dealer.   |
| Sound cut-outs of 1 to 2 seconds in radio mode.   | During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.  | Deactivate the RDS function if the phenomenon is too frequent and always on the same route.                                    |
| With the engine off, the audio equipment switches off after a few minutes of use.   | When the engine is switched off, the audio equipment operating time depends on the battery charge.<br>The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery. | Start the vehicle's engine to increase the battery charge.   |
| The message "the audio system is overheated" appears on the display.  | In order to protect the installation if the surrounding temperature is too high, the audio equipment switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.               | Switch the audio system off for a few minutes to allow the system to cool.   |



## A

Accessories ..... 213  
 Accessory socket,  
   12 volt ... 102, 104, 109, 110, 114  
 Access to  
   the 3rd row ..... 71  
 Adjusting headlamps ..... 94, 95  
 Adjusting head  
   restraints ..... 67, 69  
 Adjusting seat belt  
   height ..... 132, 133  
 Adjusting the steering  
   wheel ..... 75  
 Airbags ..... 36  
 Airbags, curtain ..... 138, 139  
 Airbags, front ..... 136, 139  
 Airbags, lateral ..... 138, 139  
 Air conditioning ..... 25  
 Air conditioning,  
   digital ..... 59, 62  
 Air conditioning,  
   manual ..... 59, 60  
 Air filter ..... 177  
 Air flow ..... 25  
 Air vents ..... 58  
 Alarm ..... 81  
 Anti-pinch ..... 83, 108  
 Anti-theft ..... 78  
 Armrest, rear ..... 110  
 Assistance call ..... 224  
 Audible warning ..... 128  
 Audio/video sockets ..... 254  
 Audio streaming  
   (Bluetooth) ..... 315  
 Automatic illumination  
   of headlamps ..... 91, 94  
 Automatic operation  
   of hazard warning lamps ..... 128  
 Automatic rain sensitive  
   windscreen wipers ..... 96, 98  
 Auxiliary socket ..... 290, 312  
 Auxiliary sockets ..... 254, 310

## B

Battery ..... 177, 206  
 Battery, charging ..... 206  
 Battery, remote control ..... 79, 80  
 Blind for panoramic sunroof ..... 108  
 Blinds ..... 115  
 Bluetooth (hands-free) ... 255-257,  
   291, 292, 313  
 Bluetooth  
   (phone) ... 255-257, 291, 292  
 Bonnet ..... 172  
 Bonnet stay ..... 172  
 Boot ..... 87  
 Boot lamp ..... 101, 115  
 Brake discs ..... 178  
 Brake lamps ..... 197  
 Brake pads ..... 178  
 Brakes ..... 178

## C

Capacity, fuel tank ..... 89  
 CD MP3 ..... 289, 309  
 Central locking ..... 77, 86  
 Centre console ..... 104  
 Changing a bulb ..... 194, 197, 198  
 Changing a fuse ..... 199  
 Changing a wheel ..... 188, 190  
 Changing a wiper  
   blade ..... 98, 208  
 Changing  
   the date ..... 260, 294, 317  
 Changing the remote  
   control battery ..... 79  
 Changing the time ... 260, 294, 317  
 Checking levels ..... 176, 177  
 Checking the engine  
   oil level ..... 40  
 Checking tyre pressures  
   (using the kit) ..... 179

## D

Checks ..... 174, 175, 177, 178  
 Child lock ..... 127  
 Children ..... 120, 124, 125  
 Child seats ..... 116  
 Child seats,  
   conventional ..... 118, 120  
 Closing the boot ..... 77, 87  
 Closing the doors ..... 77, 85  
 Cold climate screen ..... 212  
 Colour screen,  
   retractable ..... 49, 51, 53  
 Concertina boards ... 72, 109, 110  
 Connectors,  
   audio ... 103, 104, 290, 310, 312  
 Control for panoramic  
   sunroof blind ..... 108  
 Coolant level ..... 37, 176  
 Coolant temperature  
   indicator ..... 37  
 Courtesy lamps ..... 99  
 Courtesy mirror ..... 103  
 Cruise control ..... 154  
 Cup holder ..... 102, 109, 110

Date  
   (setting) ..... 260, 294, 316, 317  
 Daytime running  
   lamps ..... 93, 194, 196  
 Deactivating ESP ..... 131  
 Deactivating the passenger  
   airbag ..... 136  
 Deadlocking ..... 77  
 Defrosting ..... 60, 61  
 Demisting ..... 60  
 Dials and gauges ..... 27  
 Diesel additive level ..... 177  
 Dimensions ..... 221  
 Dipped beam ..... 91, 194, 195  
 Dipstick ..... 40, 176

|                            |               |
|----------------------------|---------------|
| Directional lighting ..... | 95            |
| Direction                  |               |
| indicators .....           | 128, 194, 197 |
| Distance alert .....       | 150           |
| Doors .....                | 85            |
| Doors emergency            |               |
| control .....              | 87            |
| Door trays .....           | 102           |
| Dynamic emergency          |               |
| braking .....              | 143           |

## E

|                              |               |
|------------------------------|---------------|
| Eco-driving .....            | 25            |
| Economical driving .....     | 25            |
| Economy mode .....           | 208           |
| Electric window              |               |
| controls .....               | 83            |
| Electronic engine            |               |
| immobiliser .....            | 78, 80        |
| Electronic stability control |               |
| (ESC) .....                  | 130           |
| Emergency boot               |               |
| release .....                | 88            |
| Emergency call .....         | 224, 225      |
| Emergency warning            |               |
| lamps .....                  | 128           |
| Energy economy               |               |
| mode .....                   | 208           |
| Engine, Diesel .....         | 90, 173, 175, |
| 214, 215, 216, 217, 220      |               |
| Engine, petrol .....         | 90, 174       |
| Engine compartment .....     | 174, 175      |
| Engine compartment           |               |
| fusebox .....                | 199           |
| Engine oil level             |               |
| indicator .....              | 40, 176       |
| Engines .....                | 214, 216      |
| Environment .....            | 25, 80        |
| ESC/ASR .....                | 130           |
| ESP/ASR .....                | 131           |

## F

|                              |              |
|------------------------------|--------------|
| Filling with fuel .....      | 89, 90       |
| Fitting a wheel .....        | 192          |
| Fitting roof bars .....      | 211          |
| Fittings, boot .....         | 109, 110     |
| Flashing indicators .....    | 128          |
| Fog lamps, rear .....        | 92           |
| Folding the rear seats ..... | 69, 71, 72   |
| Front fog lamps .....        | 92, 194, 196 |
| Front seats .....            | 65, 66, 68   |
| Fuel .....                   | 25, 89, 90   |
| Fuel consumption .....       | 25           |
| Fuel filler cap .....        | 89           |
| Fuel filler flap .....       | 89, 90       |
| Fuel gauge .....             | 89           |
| Fuel tank .....              | 89, 90       |
| Fusebox, dashboard .....     | 199          |
| Fuses .....                  | 199          |

## G

|                             |               |
|-----------------------------|---------------|
| G.P.S. ....                 | 238, 277      |
| Gearbox, automatic .....    | 161, 178      |
| Gearbox, electronic         |               |
| gear control .....          | 157, 164, 178 |
| Gearbox,                    |               |
| manual .....                | 156, 164, 178 |
| Gear efficiency             |               |
| indicator .....             | 156           |
| Gear lever .....            | 25            |
| Gear lever,                 |               |
| automatic gearbox .....     | 161           |
| Gear lever, electronic gear |               |
| control gearbox .....       | 157           |
| Gear lever,                 |               |
| manual gearbox .....        | 156           |
| Glove box .....             | 102, 103      |
| Grab handles .....          | 102           |
| Guidance .....              | 238, 277      |
| Guide-me-home .....         | 94            |

## H

|                               |               |
|-------------------------------|---------------|
| Halogen headlamps .....       | 194           |
| Hands-free kit .....          | 291, 292, 313 |
| Hazard warning lamps .....    | 128           |
| Head-up display .....         | 148, 152, 154 |
| Headlamp adjustment .....     | 94, 95        |
| Headlamps, directional .....  | 95, 194       |
| Headlamp wash .....           | 97            |
| Headlamp wash reservoir ..... | 176           |
| Head restraints, front .....  | 67            |
| Head restraints, rear .....   | 69            |
| Heated seats .....            | 67            |
| Heating .....                 | 25, 59, 60    |
| Height and reach adjustment,  |               |
| steering wheel .....          | 75            |
| High load retaining net ..... | 112           |
| Hill start assist .....       | 145           |
| Hooks .....                   | 110, 114      |
| Horn .....                    | 128           |

## I

|                                 |                    |
|---------------------------------|--------------------|
| Identification plates .....     | 222                |
| Indicator lamps, status .....   | 30                 |
| Indicators, direction .....     | 128                |
| Inflating accessories           |                    |
| (using the kit) .....           | 179                |
| Inflating tyres .....           | 25                 |
| Inputs for audio                |                    |
| system .....                    | 254, 290, 310, 312 |
| Instrument panel lighting ..... | 41                 |
| Instrument panels .....         | 27, 28             |
| Instrument panel                |                    |
| screen .....                    | 27, 156            |
| Intelligent Traction            |                    |
| Control .....                   | 130                |
| Interior fittings .....         | 102                |
| Interior mood lighting .....    | 100                |
| ISOFIX child seats .....        | 123-125            |
| ISOFIX mountings .....          | 123                |





## J

|                         |               |
|-------------------------|---------------|
| Jack .....              | 188, 190      |
| JACK socket .....       | 104, 310, 312 |
| Jukebox (copy) .....    | 252           |
| Jukebox (playing) ..... | 253           |

## K

|                                  |                    |
|----------------------------------|--------------------|
| Keeping children<br>safe .....   | 116, 124, 125, 136 |
| Key with remote<br>control ..... | 76-78, 80          |

## L

|                                       |               |
|---------------------------------------|---------------|
| Labels, identification .....          | 222           |
| Lamps, warning and<br>indicator ..... | 29, 32, 33    |
| Level, brake fluid .....              | 176           |
| Level, headlamp wash .....            | 97, 176       |
| Level, power steering fluid .....     | 176           |
| Levels and checks .....               | 174-177       |
| Lighting .....                        | 101           |
| Lighting, guide-me home .....         | 93, 94        |
| Lighting, interior .....              | 99, 100       |
| Lighting bulbs<br>(replacement) ..... | 194, 197, 198 |
| Lighting control stalk .....          | 91            |
| Lighting dimmer .....                 | 41            |
| Loading .....                         | 25, 73, 211   |
| Load reduction mode .....             | 208           |
| Load space cover .....                | 109-111       |
| Locating your vehicle .....           | 77            |
| Locking from the inside .....         | 86            |
| Long objects,<br>transporting .....   | 68, 73        |
| Luggage retaining net .....           | 113           |

## M

|   |             |
|---|-------------|
| Main beam .....                                   | 91, 194-196 |
| Maintenance .....                                 | 25          |
| Map reading lamps .....                           | 99          |
| Markings, identification .....                    | 222         |
| Mat .....   | 105         |
| Menu, main .....                                  | 306         |
| Mini fuel level .....                             | 89          |
| Mirror, rear view .....                           | 75          |
| Mirrors, door .....                               | 74          |
| Misfuel prevention .....                          | 90          |
| Modularity, seats .....                           | 73          |
| Motorway function<br>(direction indicators) ..... | 128         |
| Mountings for ISOFIX seats .....                  | 123         |
| MP3 CD .....                                      | 289, 309    |
| Multimedia, rear .....                            | 104, 107    |
| Music media players .....                         | 250, 288    |

## N

|                          |          |
|--------------------------|----------|
| Navigation .....         | 238, 277 |
| Net .....                | 111      |
| Number plate lamps ..... | 198      |

## O

|  |                |
|--|----------------|
| Oil filter .....                             | 177            |
| Oil level .....                              | 40, 176        |
| Opening the bonnet .....                     | 172            |
| Opening the boot .....                       | 76, 87         |
| Opening the doors .....                      | 76, 85         |
| Opening the panoramic<br>sunroof blind ..... | 108            |
| Opening the retractable screen .....         | 53             |
| Operation indicator<br>lamps .....           | 29, 30, 32, 34 |

## P

|  |  |
|--|--|
| Paint colour code .....                            | 222                                      |
| Panoramic glass<br>sunroof .....                   | 108                                      |
| Parking brake .....                                | 178                                      |
| Parking brake,<br>electric .....                   | 140, 143                                 |
| Parking sensors,<br>rear .....                     | 167                                      |
| Parking space<br>sensor .....                      | 169                                      |
| Particle emission<br>filter .....                  | 177, 178                                 |
| Passenger compartment<br>filter .....              | 177                                      |
| PEUGEOT call<br>button .....                       | 225                                      |
| PEUGEOT CONNECT<br>ASSISTANCE .....                | 224                                      |
| Peugeot Connect Media<br>Navigation (NG4 3D) ..... | 28, 51,<br>53, 55, 227, 230,<br>233, 261 |
| Peugeot Connect<br>Navigation (RNEG) .....         | 49, 53,<br>274, 295                      |
| PEUGEOT<br>CONNECT SOS .....                       | 224, 225                                 |
| Peugeot Connect<br>Sound (RD5) .....               | 46, 303,<br>318, 320                     |
| PEUGEOT services .....                             | 225                                      |
| PIN code .....                                     | 258                                      |
| Player, CD MP3 .....                               | 289, 309                                 |
| POIs<br>(updating) .....                           | 245                                      |
| Port, USB .....                                    | 104, 310, 312                            |
| Priming the fuel<br>system .....                   | 173                                      |
| Protecting children .....                          | 116, 120,<br>123-125, 136                |
| Puncture .....                                     | 179, 185                                 |

## R

Radio .....249, 287, 307  
 RCA sockets .....254  
 Reading lamps, rear .....99  
 Rear foglamp .....197, 198  
 Rear screen  
   (demisting) .....61  
 Recharging the battery .....206  
 Reduction of electrical  
   load .....208  
 Reinitialising the electric  
   windows .....83  
 Reinitialising the remote  
   control .....79  
 Remote control .....76, 77, 80  
 Removable screen  
   (snow shield) .....212  
 Removing a wheel .....192  
 Removing the mat .....105  
 Repair kit, puncture .....179, 185  
 Replacing bulbs .....194, 197, 198  
 Replacing fuses .....199  
 Replacing the air filter .....177  
 Replacing the oil filter .....177  
 Replacing the particle  
   emission filter .....178  
 Replacing the passenger  
   compartment filter .....177  
 Replacing wiper  
   blades .....98, 208  
 Resetting the service  
   indicator .....39  
 Resetting the trip recorder .....41  
 Rev counter .....27  
 Reversing lamp .....197  
 Rigid panel .....71  
 Risk areas  
   (update) .....245, 284  
 Roof bars .....211  
 Routine checks .....177, 178  
 Running out of fuel  
   (Diesel) .....173

## S

Safety for children .....83, 120, 127  
 Screen,  
   colour 16/9 .....233, 261, 274, 295  
 Screen,  
   monochrome .....306, 318, 320  
 Screen, monochrome C .....55  
 Screen, multifunction (with audio  
   equipment) .....44, 46, 49, 51, 53  
 Screen, multifunction  
   (without audio equipment) .....42  
 Screen-wash reservoir .....176  
 Screen menu  
   map .....261, 295, 318, 320  
 Screenwash, front .....97  
 Screenwash fluid level .....97, 176  
 Seat adjustment .....65, 66, 69  
 Seat belts .....110, 132, 133, 135  
 Seat configurations .....73  
 Seats, electric .....66  
 Seats, rear .....69, 71, 72  
 Serial number, vehicle .....222  
 Service indicator .....38  
 Servicing .....25  
 Setting  
   the clock .....260, 294, 316, 317  
 Short-cut menus .....234, 275, 276  
 Sidelamps .....91, 194-197  
 Side repeater .....196  
 SIM card .....103, 258  
 Spare wheel .....188, 190  
 Spectacles storage .....102  
 Speed limiter .....152  
 Speedometer .....27  
 Spotlamps, side .....100  
 Stability control (ESP) .....131  
 Starting  
   the vehicle .....78, 157, 161  
 Steering mounted controls,  
   audio .....232, 305  
 Stopping  
   the vehicle .....78, 157, 161

Stop & Start .....57, 61, 63, 89,  
   164, 172, 177, 206  
 Storage... 102, 104, 106, 109, 110  
 Storage box .....103  
 Storage drawer .....106  
 Storage wells .....109, 110  
 Stowing rings .....109, 110  
 Sun visor .....102, 103, 115  
 Synchronising  
   the remote control .....79  
 System, navigation .....238, 277  
 Systems, ASR and ESP .....131

## T

Table of weights .....215, 217, 220  
 Tables, aircraft .....106  
 Tables of engines .....214, 216  
 Tables of fuses .....199  
 Tank, fuel .....90  
 Technical  
   data .....214-216, 217, 220  
 Telephone .....225, 255-257,  
   291, 292  
 Telephone, hands-free .....255-257  
 Temperature, coolant .....37  
 Temperature control  
   for heated seats .....67  
 Temporary tyre repair kit .....179  
 Third brake lamp .....198  
 TMC (Traffic info) .....247, 285  
 Tools .....188, 190  
 Torch .....101, 109, 110, 115  
 Total distance recorder .....41  
 Towbar .....210  
 Towed loads .....215, 217, 220  
 Towing another vehicle .....209  
 Traction control  
   (ASR) .....131  
 Traffic information  
   (TA) .....248, 286, 287, 308

|   |                    |
|---|--------------------|
| Traffic information<br>(TMC).....       | 247, 248, 285, 286 |
| Trip computer .....                     | 54, 55, 57         |
| Trip distance recorder.....             | 41                 |
| Tyre pressures.....                     | 222                |
| Tyres.....                              | 25                 |
| Tyre under-inflation<br>detection ..... | 129                |

## U

|                                     |               |
|-------------------------------------|---------------|
| Under-inflation<br>(detection)..... | 129           |
| Under floor storage.....            | 114           |
| Unlocking.....                      | 76            |
| Unlocking from<br>the inside .....  | 86            |
| Update risk areas .....             | 245, 284      |
| Updating POIs .....                 | 245           |
| Updating<br>the date.....           | 260, 316, 317 |
| Updating<br>the time .....          | 260, 316, 317 |
| USB<br>(Peugeot Connect).....       | 104, 310      |

## V

|                                 |       |
|---------------------------------|-------|
| Vehicle<br>identification ..... | 222   |
| Ventilation .....               | 58-60 |
| Voice commands .....            | 230   |

## W

|                          |               |
|--------------------------|---------------|
| Warning lamps.....       | 30, 33, 34    |
| Wash-wipe, rear .....    | 97            |
| Weights.....             | 215, 217, 220 |
| Welcome lighting .....   | 93, 100       |
| Window controls .....    | 83            |
| Wiper, rear .....        | 97            |
| Wiper control stalk..... | 96-98         |
| Wipers .....             | 96, 98        |

## X

|                      |     |
|----------------------|-----|
| Xenon headlamps..... | 194 |
|----------------------|-----|

## EXTERIOR

Remote control key..... 76-80

- opening/closing
- anti-theft protection
- starting
- battery

Fuel tank..... 89-90

Misfuel prevention ..... 90

Wiper ..... 96-98

Changing a wiper blade..... 98, 208

Boot ..... 87-88

- opening/closing
- emergency release

Temporary puncture  
repair kit ..... 179-187

Changing a wheel..... 188-193

- tools
- removing


Parking sensors..... 167-168

Towing ..... 209-210

Towbar ..... 210-211

Changing  
rear bulbs ..... 197-198

- rear lamps
- 3rd brake lamp
- number plate lamps
- foglamps

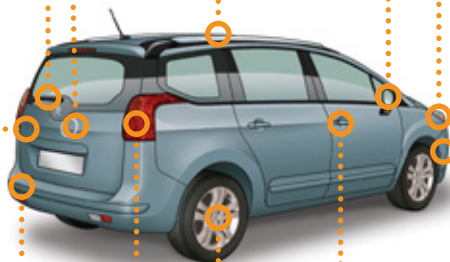

Accessories ..... 213

Roof bars, finishers..... 211

Panoramic sunroof ..... 108

Door mirrors..... 74

Exterior welcome lighting..... 93

Door mirror spotlamps ..... 100

Directional lighting ..... 91-95

Headlamp height adjustment..... 94, 95

Very cold climate screen..... 212

Changing  
bulbs ..... 194-196

- front lamps
- foglamps
- direction indicator repeaters

Parking  
space sensors..... 169-170

Doors ..... 85-88

- opening/closing
- central locking
- emergency control

Alarm ..... 81-82

Electric windows ..... 83-84


ESC:

ABS, EBA, ASR, CDS..... 130-131

Tyre under-inflation detection ..... 129

Tyre pressures..... 222

## INTERIOR

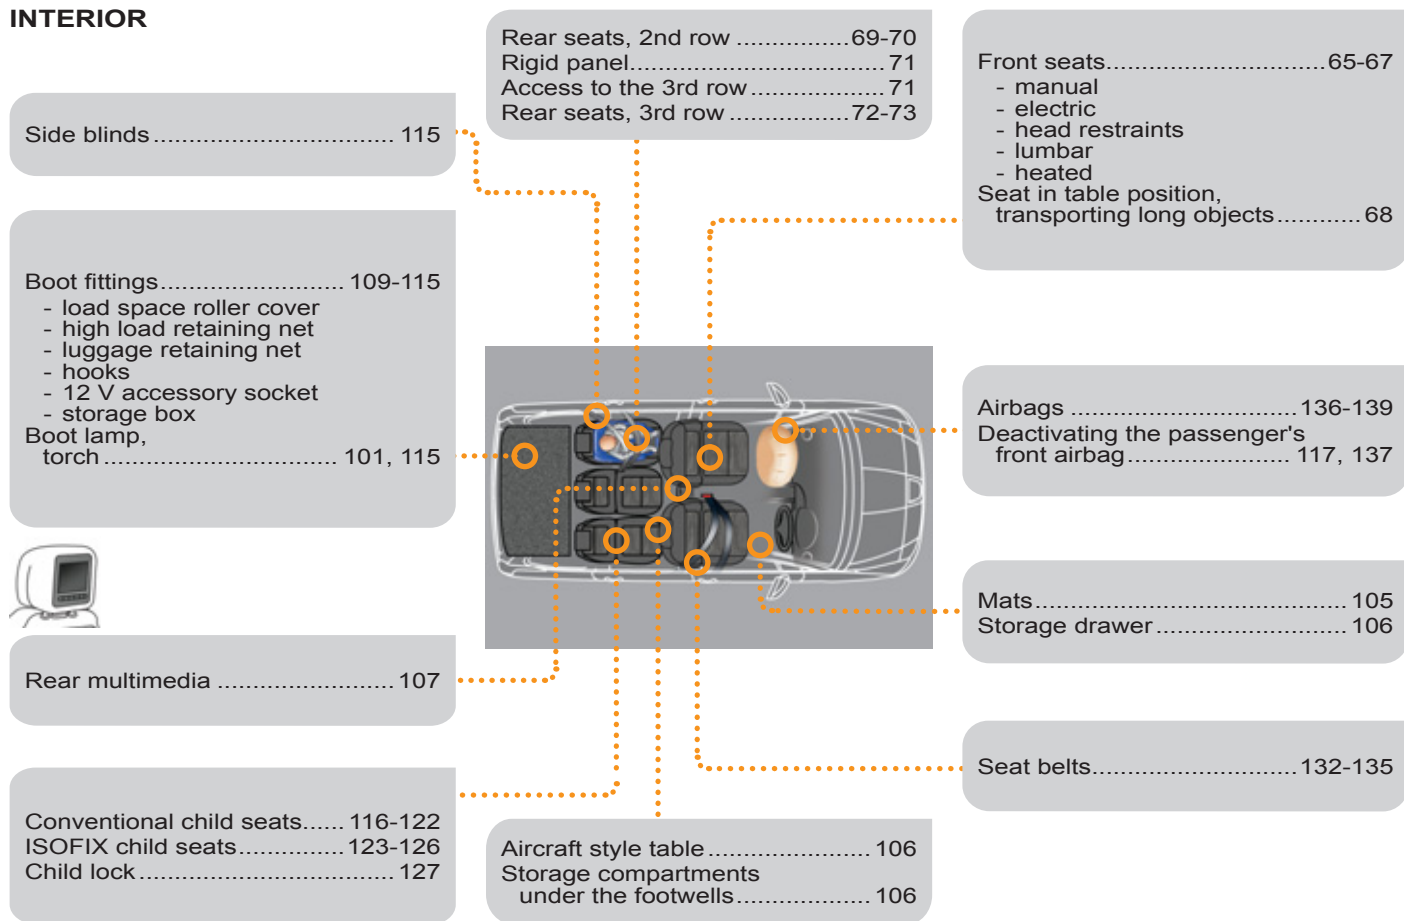

## INSTRUMENTS AND CONTROLS

Sun visor..... 103



Dashboard fuses ..... 199-202

Opening the bonnet..... 172

Interior fittings..... 102-103, 105


- sun visor
- driver's storage compartments
- glove box
- mat

12 V accessory socket..... 104

Courtesy lamps..... 99, 100

Seat belt/passenger's front airbag  
warning lamps display..... 133, 137

Rear view mirror ..... 75

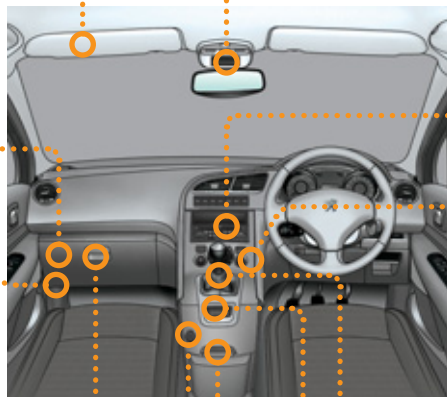

Centre console ..... 104

Peugeot Connect USB .... 112, 288, 310



Peugeot Connect Media  
navigation (RT6) ..... 227-270

Setting the date/time ..... 260



Peugeot Connect Navigation  
(RNEG) ..... 271-302

Setting the date/time ... 294



Peugeot Connect  
Sound (RD5) ..... 303-324

Setting the date/time .... 316, 317

Ventilation ..... 58-59

Rear ventilation..... 59

Manual air conditioning..... 60-61

Digital air conditioning ..... 62-64

Demist/defrost ..... 61

6-speed manual gearbox..... 156

Gear efficiency indicator..... 156

Electronic gear control  
gearbox ..... 157-160

Automatic  
gearbox ..... 161-163

Stop & Start ..... 164-166

Hill start assist ..... 145

Eco-driving..... 25-26

Electric parking  
brake ..... 140-144, 146-147

## INSTRUMENTS AND CONTROLS (CONTINUED)

Multifunction screens ..... 42-52

- Screen A
- Screen C
- 16/9 colour screen
- 16/9 high definition colour screen

Retractable screen ..... 53

Screen A:  
setting the date/time ..... 43, 45

Lighting controls ..... 91-95

Direction indicators ..... 128

Hazard warning lamps ..... 128

Head-up display ..... 148-149

Distance alert ..... 150-151

Speed limiter ..... 152-153

Cruise control ..... 154-155

Panoramic sunroof ..... 108

Instrument panels,  
screens ..... 27-29

Warning lamps ..... 29-37

Indicators ..... 37-40

Gear efficiency indicator ..... 156

Buttons ..... 39, 41

- check/service indicator/trip distance recorder
- lighting dimmer

Head-up display ..... 148-149

Distance alert ..... 150-151

Wiper controls ..... 96-98

Trip computer ..... 54-57

Ignition switch ..... 78

Door mirrors ..... 74

Electric windows, deactivating ..... 83-84


Switch panel ..... 16

Stop & Start ..... 164-166

Headlamp height adjustment ..... 94, 95

Steering wheel adjustment ..... 75

Horn ..... 128

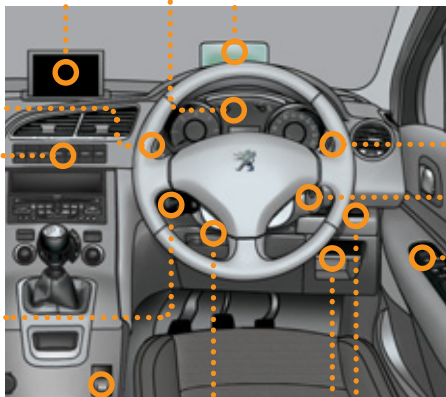

## TECHNICAL DATA - MAINTENANCE

Running out of fuel, Diesel ..... 173

Checking levels ..... 176-177

- oil
- brake fluid
- power steering fluid
- coolant
- screenwash/headlamp wash fluid

Checking components ..... 177-178

- air filter
- passenger compartment filter
- oil filter
- brake pads/discs

Changing bulbs ..... 194-198



- front
- rear

12 V battery ..... 206-207  
Load reduction, economy mode ... 208  
Engine compartment  
fuses ..... 199, 203-205

Petrol weights ..... 215  
Diesel weights ..... 217-219  
Diesel weights - LCV ..... 220

Identification markings ..... 222

Dimensions ..... 221

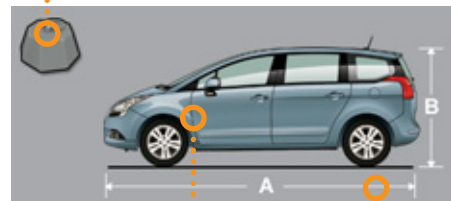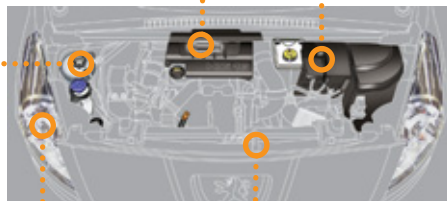







This handbook describes all of the equipment available in the whole range.

Your vehicle will be fitted with some of this equipment described in this document, depending on its trim level, version and the specification for the country in which it is sold.

The descriptions and illustrations are given without any obligation. Automobiles PEUGEOT reserves the right to modify the technical specifications, equipment and accessories without having to update the current handbook.

This document is an integral part of your vehicle. It should be passed on to the new user in the event of sale or transfer.

Automobiles PEUGEOT declares, by application of the provisions of the European regulation (Directive 2000/53) relating to End of Life Vehicles, that it achieves the objectives set by this regulation and that recycled materials are used in the manufacture of the products that it sells.

Reproduction or translation of all or part of this handbook is prohibited without written authorisation from Automobiles PEUGEOT.

For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a PEUGEOT dealer is able to provide.

Printed in the EU



Anglais



05-11



Automobiles PEUGEOT - Siège Social : 75, avenue de la Grande-Armée 75016 PARIS

Tél. 33 (0)1 40 66 55 11 - Fax 33 (0)1 40 66 54 14

Adresse postale : Automobiles PEUGEOT B.P. 01 75761 PARIS cedex 16 - Adresse Internet : <http://www.peugeot.com>

Société Anonyme au capital de 171 284 850 Euros - R.C.S. PARIS B 552 144 503. SIRET 552 144 503 00018. APE 341 Z

