

SECTION **FSU**
FRONT SUSPENSION

A
B
C
D

FSU

CONTENTS

<p>2WD</p> <p>SYMPTOM DIAGNOSIS 3</p> <p>NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING 3</p> <p> NVH Troubleshooting Chart3</p> <p>PRECAUTION 4</p> <p>PRECAUTIONS 4</p> <p> Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"4</p> <p> Precaution Necessary for Steering Wheel Rotation after Battery Disconnect4</p> <p> Precaution for Procedure without Cowl Top Cover.....5</p> <p> Precautions for Suspension5</p> <p>PREPARATION 6</p> <p>PREPARATION 6</p> <p> Special Service Tool6</p> <p> Commercial Service Tool6</p> <p>PERIODIC MAINTENANCE 7</p> <p>FRONT SUSPENSION ASSEMBLY 7</p> <p> Inspection7</p> <p>WHEEL ALIGNMENT 8</p> <p> Inspection8</p> <p>REMOVAL AND INSTALLATION 9</p> <p>FRONT COIL SPRING AND SHOCK ABSORBER 9</p> <p> Exploded View9</p> <p> Removal and Installation9</p> <p> Disassembly and Assembly9</p> <p> Inspection12</p> <p> Disposal12</p>	<p>TRANSVERSE LINK13</p> <p> Exploded View13</p> <p> Removal and Installation13</p> <p> Inspection13</p> <p>UPPER LINK15</p> <p> Exploded View15</p> <p> Removal and Installation15</p> <p> Inspection15</p> <p>FRONT STABILIZER17</p> <p> Exploded View17</p> <p> Removal and Installation17</p> <p> Inspection17</p> <p>UNIT REMOVAL AND INSTALLATION18</p> <p>FRONT SUSPENSION MEMBER18</p> <p> Exploded View18</p> <p> Removal and Installation18</p> <p> Inspection18</p> <p>SERVICE DATA AND SPECIFICATIONS (SDS)19</p> <p>SERVICE DATA AND SPECIFICATIONS (SDS)19</p> <p> Wheel Alignment19</p> <p> Ball Joint19</p> <p> Wheel Height20</p> <p style="text-align: center;">AWD</p> <p>SYMPTOM DIAGNOSIS21</p> <p>NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING21</p> <p> NVH Troubleshooting Chart21</p> <p>PRECAUTION22</p> <p>PRECAUTIONS22</p>	<p>F G H I J K L M N O P</p>
--	---	--

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	22	TRANSVERSE LINK	32
Precaution Necessary for Steering Wheel Rotation after Battery Disconnect	22	Exploded View	32
Precaution for Procedure without Cowl Top Cover..	23	Removal and Installation	32
Precautions for Suspension	23	Inspection	32
PREPARATION	24	UPPER LINK	34
PREPARATION	24	Exploded View	34
Special Service Tool	24	Removal and Installation	34
Commercial Service Tool	24	Inspection	34
PERIODIC MAINTENANCE	25	FRONT STABILIZER	36
FRONT SUSPENSION ASSEMBLY	25	Exploded View	36
Inspection	25	Removal and Installation	36
WHEEL ALIGNMENT	26	Inspection	36
Inspection	26	UNIT REMOVAL AND INSTALLATION	37
REMOVAL AND INSTALLATION	27	FRONT SUSPENSION MEMBER	37
FRONT COIL SPRING AND SHOCK ABSORBER	27	Exploded View	37
Exploded View	27	Removal and Installation	37
Removal and Installation	28	Inspection	37
Disassembly and Assembly	28	SERVICE DATA AND SPECIFICATIONS (SDS)	39
Inspection	30	SERVICE DATA AND SPECIFICATIONS (SDS)	39
Disposal	31	Wheel Alignment	39
		Ball Joint	39
		Wheel Height	40

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[2WD]

SYMPTOM DIAGNOSIS

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:000000005246407

Use chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Reference page																							
Possible cause and SUSPECTED PARTS																							
Symptom	FRONT SUSPENSION	Noise	Shake	Vibration	Shimmy	Judder	Poor quality ride or handling	Improper installation, looseness	Shock absorber deformation, damage or deflection	Bushing or mounting deterioration	Parts interference	Spring fatigue	Suspension looseness	Incorrect wheel alignment	Stabilizer bar fatigue	PROPELLER SHAFT	FRONT AXLE AND FRONT SUSPENSION	ROAD WHEEL	BRAKE	STEERING			
				x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
				x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
				x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
				x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
				x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
				x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x

x: Applicable

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

FSU

PRECAUTION**PRECAUTIONS****Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"**

INFOID:000000005548668

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".**
- **Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS**WARNING:**

- **When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.**
- **When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.**

Precaution Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:000000005548671

NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

For vehicle with steering lock unit, if the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the operation procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Turn the push-button ignition switch to ACC position.
(At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.

PRECAUTIONS

[2WD]


< PRECAUTION >

5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT-III.

Precaution for Procedure without Cowl Top Cover

INFOID:000000005548673

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

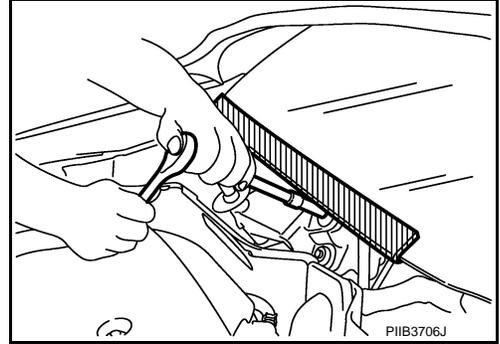

Precautions for Suspension

INFOID:000000005246411

CAUTION:

- When installing rubber bushings, the final tightening must be carried out under unladen conditions with tires on ground. Spilled oil might shorten the life of rubber bushings. Be sure to wipe off any spilled oil.
- Unladen conditions mean that fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.
- After servicing suspension parts, be sure to check wheel alignment.
- Self-lock nuts are not reusable. Always use new ones when installing. Since new self-lock nuts are pre-oiled, tighten as they are.

PREPARATION

< PREPARATION >

[2WD]



PREPARATION

PREPARATION

Special Service Tool



INFOID:000000005246412

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

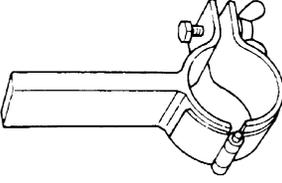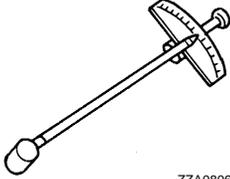Tool number (Kent-Moore No.) Tool name		Description
ST35652000 (-) Shock absorber attachment	 <small>ZZA0807D</small>	Disassembling and assembling shock absorber
ST3127S000 (J-25765-A) Preload gauge	 <small>ZZA0806D</small>	Measuring rotating torque of ball joint

Commercial Service Tool

INFOID:000000005246413

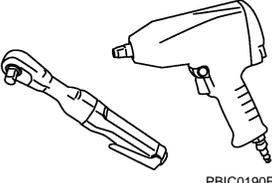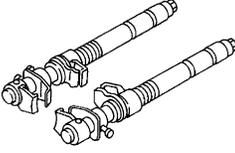Tool name		Description
Power tool	 <small>PBIC0190E</small>	Loosening bolts and nuts
Spring compressor	 <small>S-NT717</small>	Removing and installing coil spring

FRONT SUSPENSION ASSEMBLY

< PERIODIC MAINTENANCE >

[2WD]

PERIODIC MAINTENANCE

FRONT SUSPENSION ASSEMBLY

Inspection

INFOID:000000005246414

MOUNTING INSPECTION

Make sure the mounting conditions (looseness, backlash) of each component and component conditions (wear, damage) are normal.

BALL JOINT AXIAL END PLAY

1. Set front wheels in a straight-ahead position.
2. Measure axial end play by playing and moving up/down with iron bar or equivalent between transverse link or upper link and steering knuckle.

Axial end play : Refer to [FSU-19, "Ball Joint"](#).

CAUTION:

- Never depress brake pedal when measuring.
- Never perform with tires on level ground.
- Be careful not to damage ball joint boot. never damage the installation position by applying excessive force.

SHOCK ABSORBER

Check for oil leakage, damage. Replace it if necessary.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

FSU

WHEEL ALIGNMENT

Inspection

INFOID:000000005246415

DESCRIPTION

CAUTION:

- **Camber, caster, kingpin inclination angles cannot be adjusted.**
- **If camber, caster, or kingpin inclination angle is outside the standard, check front suspension parts for wear and damage. Replace suspect parts if a malfunction is detected.**
- **Kingpin inclination angle is reference value, no inspection is required.**
- Measure wheel alignment under unladen conditions.

NOTE:

“Unladen conditions” means that fuel, engine coolant, and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.

PRELIMINARY CHECK

Check the following:

- Tires for improper air pressure and wear.
- Road wheels for runout. Refer to [WT-74, "Inspection"](#).
- Wheel bearing axial end play. Refer to [FAX-5, "Inspection"](#).
- Transverse link or upper link ball joint axial end play. Refer to [FSU-13, "Inspection"](#) or [FSU-15, "Inspection"](#).
- Shock absorber operation.
- Each mounting part of axle and suspension for looseness and deformation.
- Each of suspension member, shock absorber, upper link and transverse link for cracks, deformation and other damage.
- Vehicle height (posture).

GENERAL INFORMATION AND RECOMMENDATIONS

- A four-wheel thrust alignment should be performed.
- This type of alignment is recommended for any NISSAN/INFINITI vehicle.
- The four-wheel “thrust” process helps ensure that the vehicle is properly aligned and the steering wheel is centered.
- The alignment rack itself should be capable of accepting any NISSAN/INFINITI vehicle.
- The rack should be checked to ensure that it is level.
- Make sure the machine is properly calibrated.
- Your alignment equipment should be regularly calibrated in order to give correct information.
- Check with the manufacturer of your specific equipment for their recommended Service/Calibration Schedule.

ALIGNMENT PROCESS

IMPORTANT:

Use only the alignment specifications listed in this Service Manual.

- When displaying the alignment settings, many alignment machines use “indicators”: (Green/red, plus or minus, Go/No Go). **Do not use these indicators.**
- The alignment specifications programmed into your machine that operate these indicators may not be correct.
- This may result in an ERROR.
- Some newer alignment machines are equipped with an “optional Rolling Compensation” method to “compensate” the sensors (alignment targets or head units). **Never use this “Rolling Compensation” method.**
- Use the “Jacking Compensation Method”. After installing the alignment targets or head units, raise the vehicle and rotate the wheels 1/2 turn both ways.
- See Instructions in the alignment machine you’re using for more information on this.

FRONT COIL SPRING AND SHOCK ABSORBER

< REMOVAL AND INSTALLATION >


[2WD]

REMOVAL AND INSTALLATION

FRONT COIL SPRING AND SHOCK ABSORBER

Exploded View

INFOID:000000005246416

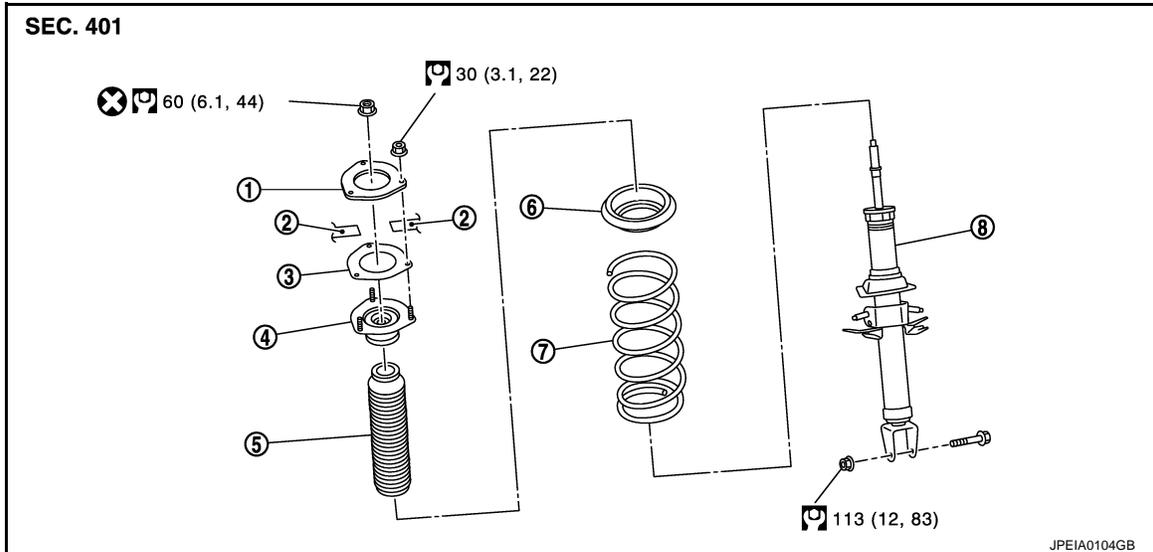

- | | | |
|------------------------------------|-------------------|------------------|
| 1. Gusset | 2. Vehicle body | 3. Mounting seal |
| 4. Shock absorber mounting bracket | 5. Bound bumper | 6. Rubber seat |
| 7. Coil spring | 8. Shock absorber | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000005246417

REMOVAL

1. Remove tires with power tool.
2. Remove wheel sensor and harness connector from shock absorber. Refer to [BRC-131, "FRONT WHEEL SENSOR : Exploded View"](#).
CAUTION:
Never pull on wheel sensor harness.
3. Remove brake hose bracket. Refer to [BR-20, "FRONT : Exploded View"](#).
4. Remove shock absorber from transverse link with power tool.
5. Separate upper link from steering knuckle. Refer to [FAX-6, "Exploded View"](#)
6. Remove shock absorber mounting bracket mounting nuts, and remove shock absorber assembly.
NOTE:
If removing shock absorber is difficult, loosen upper link mounting bolts (vehicle side).

INSTALLATION

Note the following, and install in the reverse order of removal.

- Never tap on the ball joint cap of the stabilizer connecting rod with a hammer or a similar item when inserting the stabilizer connecting rod into the transverse link.
- Perform final tightening of bolts and nuts at the shock absorber lower side (rubber bushing), under unladen conditions with tires on level ground.

Disassembly and Assembly

INFOID:000000005246418

DISASSEMBLY

CAUTION:

Never damage shock absorber piston rod when removing components from shock absorber.

FRONT COIL SPRING AND SHOCK ABSORBER


< REMOVAL AND INSTALLATION >

[2WD]

1. Install shock absorber attachment (A) [SST: ST35652000 (-)] to shock absorber and secure it in a vise.

CAUTION:

When installing the shock absorber attachment to shock absorber, wrap a shop cloth around shock absorber to protect it from damage.

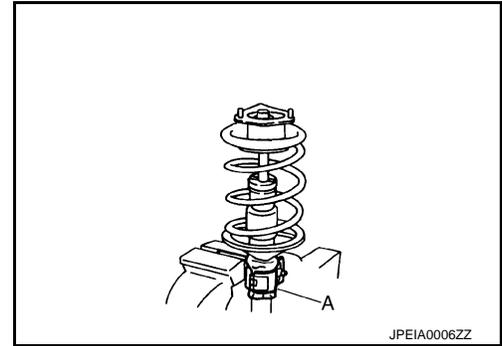


2. Using a spring compressor (A) (commercial service tool), compress coil spring between rubber seat and shock absorber until coil spring with a spring compressor is free.

CAUTION:

Be sure a spring compressor is securely attached coil spring. Compress coil spring.

3. Make sure coil spring with a spring compressor between rubber seat and shock absorber is free. And then remove piston rod lock nut while securing the piston rod tip so that piston rod does not turn.
4. Remove mounting seal, shock absorber mounting bracket, rubber seat, bound bumper from shock absorber.

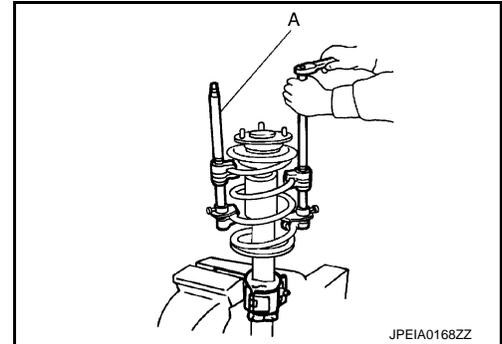

5. After removing coil spring with a spring compressor, then gradually release a spring compressor.

CAUTION:

Loosen while making sure coil spring attachment position does not move.

6. Remove the shock absorber attachment from shock absorber.

ASSEMBLY

1. Install shock absorber attachment (A) [SST: ST35652000 (-)] to shock absorber and secure it in a vise.


CAUTION:

When installing the shock absorber attachment to shock absorber, wrap a shop cloth around shock absorber to protect it from damage.

2. Compress coil spring using a spring compressor (commercial service tool), and install it onto shock absorber.

CAUTION:

- Install with the large-diameter side (A) facing up and the small-diameter side (B) facing down.
- Be sure a spring compressor is securely attached to coil spring. Compress coil spring.

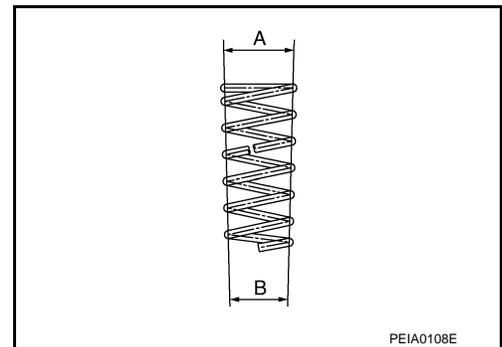

FRONT COIL SPRING AND SHOCK ABSORBER

< REMOVAL AND INSTALLATION >

[2WD]

Inspection

INFOID:000000005246419

INSPECTION AFTER INSTALLATION

1. Check wheel sensor harness for proper connection. Refer to [BRC-131. "FRONT WHEEL SENSOR : Exploded View"](#).
2. Check wheel alignment. Refer to [FSU-8. "Inspection"](#).
3. Adjust neutral position of steering angle sensor. Refer to [BRC-9. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

INSPECTION AFTER DISASSEMBLY

Shock Absorber

Check the following items, and replace the part if necessary.

- Shock absorber for deformation, cracks or damage.
- Piston rod for damage, uneven wear or distortion.
- Oil leakage.

Shock Absorber Mounting Bracket and Rubber Parts Inspection

Check shock absorber mounting bracket for cracks and rubber parts for wear. Replace it if necessary.

Coil Spring

Check coil spring for cracks, wear or damage. Replace it if necessary.

Disposal

INFOID:000000005246420


1. Set shock absorber horizontally with the piston rod fully extended.
2. Drill 2 – 3 mm (0.08 – 0.12 in) hole at the position (●) from top as shown in the figure to release gas gradually.

CAUTION:

- **Wear eye protection (safety glasses).**
- **Wear gloves.**
- **Be careful with metal chips or oil blown out by the compressed gas.**

NOTE:

- Drill vertically in this direction (←).
- Directly to the outer tube avoiding brackets.
- The gas is clear, colorless, odorless, and harmless.

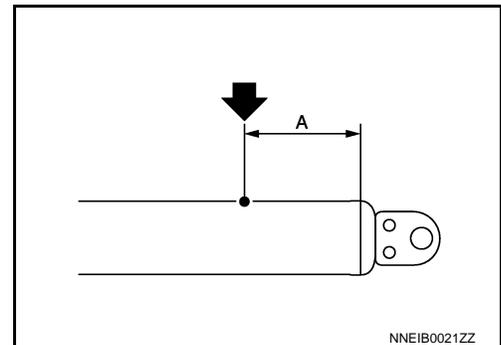

A : 20 – 30 mm (0.79 – 1.18 in)

3. Position the drilled hole downward and drain oil by moving the piston rod several times.

CAUTION:

Dispose of drained oil according to the law and local regulations.

TRANSVERSE LINK


< REMOVAL AND INSTALLATION >

[2WD]

TRANSVERSE LINK

Exploded View

INFOID:000000005246421

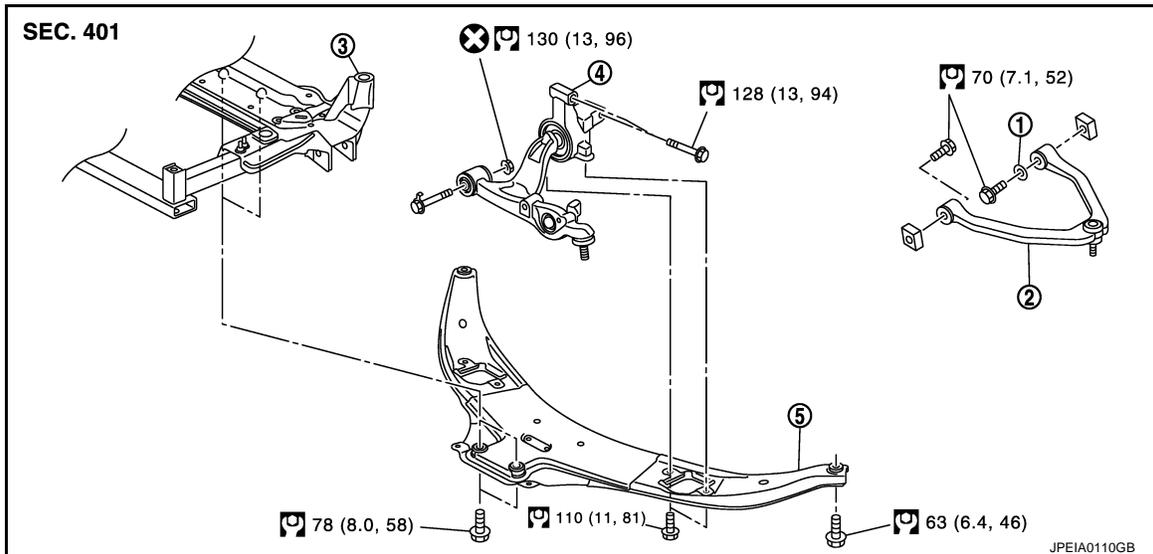

- | | | |
|------------------------|--------------------|----------------------------|
| 1. Stopper arm bushing | 2. Upper link | 3. Front suspension member |
| 4. Transverse link | 5. Front cross bar | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000005246422

REMOVAL

1. Remove tires with power tool.
2. Remove shock absorber. Refer to [FSU-9, "Exploded View"](#).
3. Temporarily install upper link and steering knuckle. Refer to [FAX-6, "Exploded View"](#).
4. Remove stabilizer connecting rod. Refer to [FSU-17, "Exploded View"](#).
5. Remove front cross bar.
6. Remove transverse link from steering knuckle.
7. Set suitable jack under transverse link.
8. Remove transverse link.

NOTE:

If removing transverse link mounting bolt (front side) is difficult, rotating steering wheel and remove steering outer socket. Refer to [ST-26, "Exploded View"](#).

INSTALLATION

Note the following, and install in the reverse order of removal.

- Never tap on the ball joint cap of the stabilizer connecting rod with a hammer or a similar item when inserting the stabilizer connecting rod into the transverse link.
- Perform final tightening of bolts and nuts at the front suspension member installation and shock absorber lower side (rubber bushing), under unladen conditions with tires on level ground.

Inspection

INFOID:000000005246423

INSPECTION AFTER REMOVAL

Appearance

Check the following items, and replace the part if necessary.

- Transverse link and bushing for deformation, cracks or damage.
- Ball joint boot for cracks or other damage, and also for grease leakage.

TRANSVERSE LINK

[2WD]

< REMOVAL AND INSTALLATION >

Ball Joint Inspection

Manually move ball stud to confirm it moves smoothly with no binding.

Swing Torque Inspection


NOTE:

Before measurement, move ball stud at least ten times by hand to check for smooth movement.

- Hook a spring balance (A) at cotter pin mounting hole. Confirm spring balance measurement value is within specifications when ball stud begins moving.

Swing torque : Refer to [FSU-19, "Ball Joint"](#).

- If swing torque exceeds standard range, replace transverse link assembly.

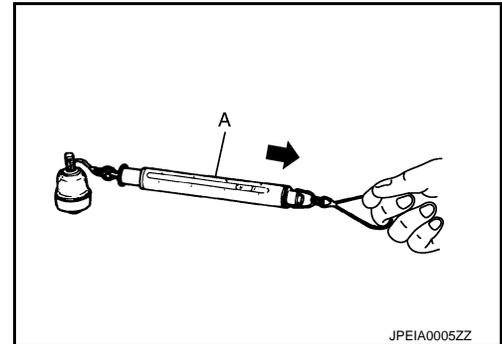


Rotating Torque Inspection

- Attach mounting nut to ball stud. Make sure that rotating torque is within specifications with a preload gauge (A) [SST: ST3127S000 (J-25765-A)].

Rotating torque : Refer to [FSU-19, "Ball Joint"](#).

- If rotating torque exceeds standard range, replace transverse link assembly.

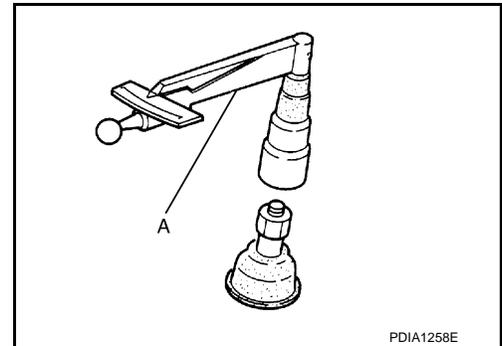

Axial End Play Inspection

- Move tip of ball stud in axial direction to check for looseness.

Axial end play : Refer to [FSU-19, "Ball Joint"](#).

- If axial end play exceeds standard range, replace transverse link assembly.

INSPECTION AFTER INSTALLATION

1. Check wheel sensor harness for proper connection. Refer to [BRC-131, "FRONT WHEEL SENSOR : Exploded View"](#).
2. Check wheel alignment. Refer to [FSU-8, "Inspection"](#).
3. Adjust neutral position of steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

UPPER LINK


< REMOVAL AND INSTALLATION >

[2WD]

UPPER LINK

Exploded View

INFOID:000000005246424

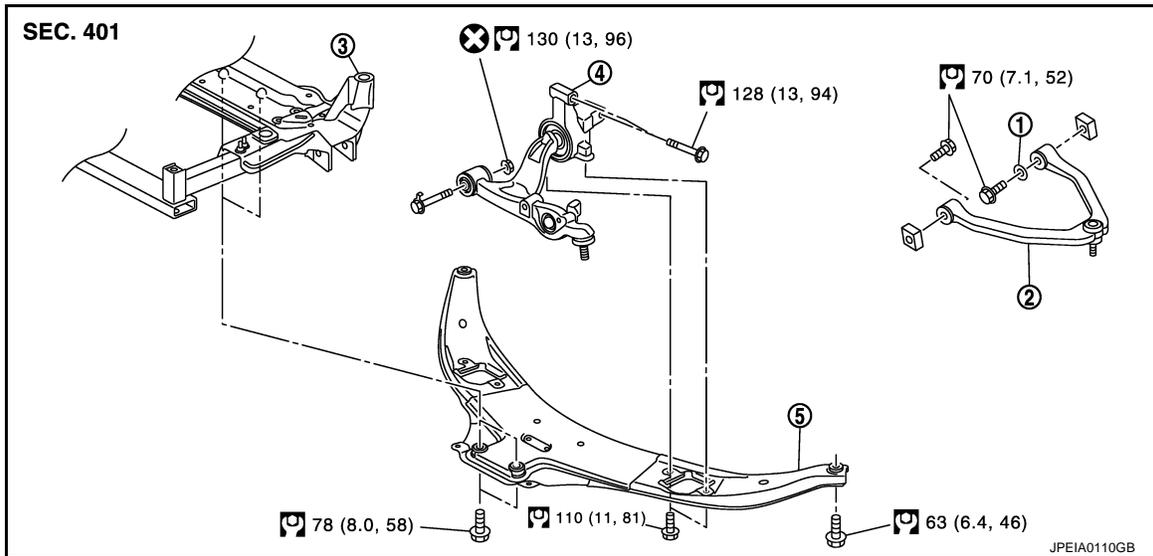

- | | | |
|------------------------|--------------------|----------------------------|
| 1. Stopper arm bushing | 2. Upper link | 3. Front suspension member |
| 4. Transverse link | 5. Front cross bar | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000005246425

REMOVAL

1. Remove tires with power tool.
2. Remove shock absorber. Refer to [FSU-9, "Exploded View"](#).
3. Remove upper link and stopper arm bushing.

INSTALLATION

Note the following, and install in the reverse order of removal.

- Perform final tightening of bolts and nuts at the vehicle installation position (rubber bushing), under unladen conditions with tires on level ground.

Inspection

INFOID:000000005246426

INSPECTION AFTER REMOVAL

Appearance

Check the following items, and replace the part if necessary.

- Upper link and bushing for deformation, cracks or damage.
- Ball joint boot for cracks or other damage, and also for grease leakage.

Ball Joint Inspection

Manually move ball stud to confirm it moves smoothly with no binding.

Swing Torque Inspection

NOTE:

Before measurement, move ball stud at least ten times by hand to check for smooth movement.

UPPER LINK


< REMOVAL AND INSTALLATION >

[2WD]

- Hook a spring balance (A) at cutout on ball stud. Confirm spring balance measurement value is within specifications when ball stud begins moving.

Swing torque : Refer to [FSU-19, "Ball Joint"](#).

- If swing torque exceeds standard range, replace upper link assembly.

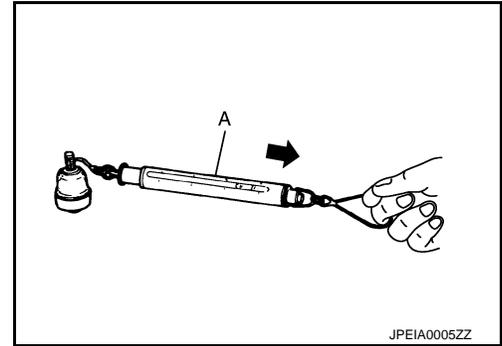

Axial End Play Inspection

- Move tip of ball stud in axial direction to check for looseness.

Axial end play : Refer to [FSU-19, "Ball Joint"](#).

- If axial end play exceeds standard range, replace upper link assembly.

INSPECTION AFTER INSTALLATION

1. Check wheel sensor harness for proper connection. Refer to [BRC-131, "FRONT WHEEL SENSOR : Exploded View"](#).
2. Check wheel alignment. Refer to [FSU-8, "Inspection"](#).
3. Adjust neutral position of steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

FRONT STABILIZER


< REMOVAL AND INSTALLATION >

[2WD]

FRONT STABILIZER

Exploded View

INFOID:000000005246427

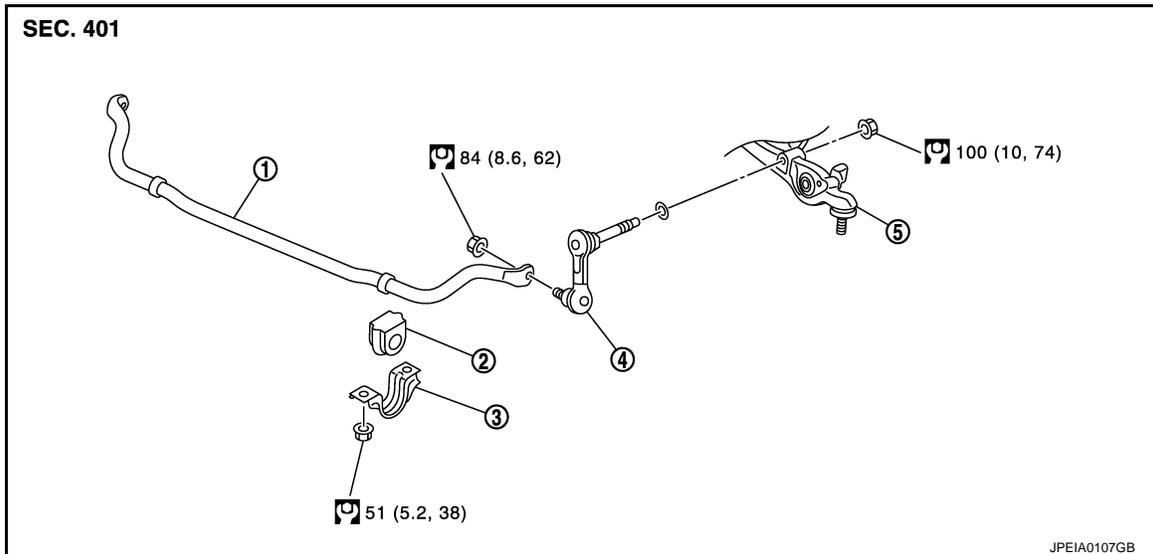

- | | | |
|------------------------------|-----------------------|---------------------|
| 1. Stabilizer bar | 2. Stabilizer bushing | 3. Stabilizer clamp |
| 4. Stabilizer connecting rod | 5. Transverse link | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000005246428

REMOVAL

1. Remove under cover with power tool.
2. Remove stabilizer connecting rod with power tool.
CAUTION:
Apply a matching mark to identify the installation position.
3. Remove stabilizer clamp and stabilizer bushing.
4. Remove stabilizer bar.

INSTALLATION

Note the following, and install in the reverse order of removal.

- Check the matching mark when installing.
- Tighten the mounting nut to the specified torque while holding a hexagonal part of stabilizer connecting rod side.

Inspection

INFOID:000000005246429

INSPECTION AFTER REMOVAL

Check stabilizer bar, stabilizer connecting rod, stabilizer bushing and stabilizer clamp for deformation, cracks or damage. Replace it if necessary.

FRONT SUSPENSION MEMBER

< UNIT REMOVAL AND INSTALLATION >


[2WD]

UNIT REMOVAL AND INSTALLATION

FRONT SUSPENSION MEMBER

Exploded View

INFOID:000000005246430

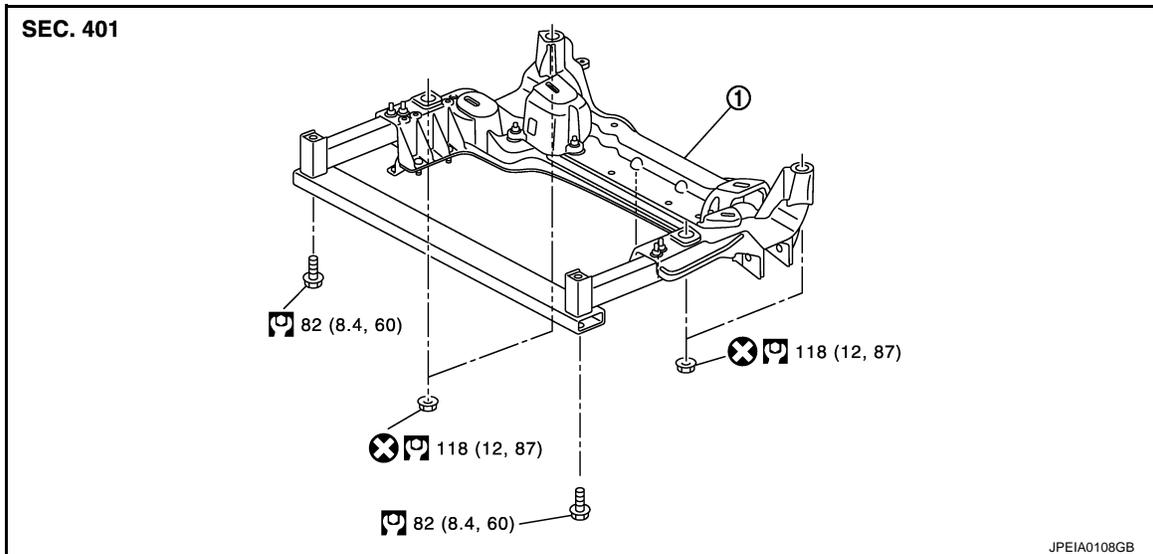

1. Front suspension member

Refer to [GI-4. "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000005246431

REMOVAL

1. Remove tires with power tool.
2. At first, remove the engine and the transmission assembly with front suspension member downward. Then separate the engine, transmission Refer to [EM-82. "2WD : Removal and Installation"](#).
3. Remove the following parts.
 - Steering knuckle and wheel hub and bearing assembly: refer to [FAX-6. "Exploded View"](#).
 - Steering gear assembly and hydraulic line: refer to [ST-26. "Exploded View"](#), [ST-48. "VQ35HR : Exploded View"](#).
 - Stabilizer bar and stabilizer connecting rod: refer to [FSU-17. "Exploded View"](#).
 - Transverse link: refer to [FSU-13. "Exploded View"](#).
 - Engine mount insulator: refer to [EM-82. "2WD : Exploded View"](#).

INSTALLATION

Note the following, and install in the reverse order of removal.

- Perform final tightening of bolts and nuts at the vehicle installation position (rubber bushing), under unladen condition with tires on level ground.

Inspection

INFOID:000000005246432

INSPECTION AFTER REMOVAL

Check the front suspension member for significant deformation, cracks, or damages. Replace if necessary.

INSPECTION AFTER INSTALLATION

1. Check wheel sensor harness for proper connection. Refer to [BRC-131. "FRONT WHEEL SENSOR : Exploded View"](#).
2. Check wheel alignment. Refer to [FSU-8. "Inspection"](#).
3. Adjust the neutral position of the steering angle sensor. Refer to [BRC-9. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[2WD]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Wheel Alignment

INFOID:000000005246433

Item		Standard	
Camber Degree minute (Decimal degree)	Minimum	-1° 05' (-1.08°)	
	Nominal	-0° 20' (-0.33°)	
	Maximum	0° 25' (0.41°)	
	Left and right difference	0° 33' (0.55°) or less	
Caster Degree minute (Decimal degree)	Minimum	2° 55' (2.92°)	
	Nominal	3° 40' (3.67°)	
	Maximum	4° 25' (4.41°)	
	Left and right difference	0° 39' (0.65°) or less	
Kingpin inclination Degree minute (Decimal degree)	Minimum	7° 55' (7.92°)	
	Nominal	8° 40' (8.67°)	
	Maximum	9° 25' (9.41°)	
Toe-in	Total toe-in Distance	Minimum	In 1 mm (0.04 in)
		Nominal	In 2 mm (0.08 in)
		Maximum	In 3 mm (0.11 in)
	Toe angle (left wheel or right wheel) Degree minute (Decimal Degree)	Minimum	In 0° 02' 12" (0.04°)
		Nominal	In 0° 04' 24" (0.07°)
		Maximum	In 0° 06' 36" (0.11°)

Measure value under unladen* conditions.

*: Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.

Ball Joint

INFOID:000000005246434

Item		Standard
Swing torque	Transverse link	0.5 – 3.6 N·m (0.06 – 0.36 kg·m, 5 – 31 in-lb)
	Upper link	0 – 2.0 N·m (0 – 0.20 kg·m, 0 – 17 in-lb)
Measurement on spring balance	Transverse link	7.8 – 56.3 N (0.8 – 5.7 kg, 1.8 – 12.6 lb)
	Upper link	0 – 61.5 N (0 – 6.2 kg, 0 – 13.8 lb)
Rotating torque	Transverse link	0.5 – 3.9 N·m (0.06 – 0.39 kg·m, 5 – 34 in-lb)
Axial end play		0 mm (0 in)

SERVICE DATA AND SPECIFICATIONS (SDS)


< SERVICE DATA AND SPECIFICATIONS (SDS)

[2WD]

Wheel Height

INFOID:000000005246435

Tire size	265/60R18	265/50R20
Front (Hf)	831 mm (32.72 in)	832 mm (32.76 in)

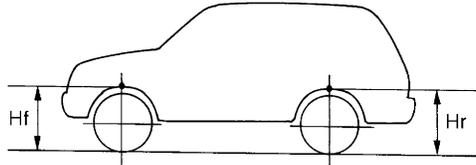

SFA746B

Measure value under unladen* conditions

*: Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[AWD]

SYMPTOM DIAGNOSIS

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:000000005246436

Use chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Symptom		Possible cause and SUSPECTED PARTS	Reference page															
			FSU-27, FSU-32, FSU-34, FSU-36, FSU-37	FSU-30	—	—	—	FSU-27, FSU-32, FSU-34, FSU-36, FSU-37	FSU-26	FSU-36	NVH in DLN section.	NVH in RFD section.	NVH in FAX and FSU sections.	NVH in WT section.	NVH in WT section.	NVH in FAX section.	NVH in BR section.	NVH in ST section.
FRONT SUSPENSION	Noise	Improper installation, looseness	x	x	x	x	x	x			x	x	x	x	x	x	x	x
	Shake	Shock absorber deformation, damage or deflection	x	x	x	x					x		x	x	x	x	x	x
	Vibration	Bushing or mounting deterioration	x	x	x	x	x											
	Shimmy	Parts interference	x	x	x	x												
	Judder	Spring fatigue	x	x	x													
	Poor quality ride or handling	Suspension looseness	x	x	x													
		Incorrect wheel alignment																
		Stabilizer bar fatigue																
		PROPELLER SHAFT																
		DIFFERENTIAL																
		FRONT AXLE AND FRONT SUSPENSION																
		TIRE																
		ROAD WHEEL																
		DRIVE SHAFT																
		BRAKE																
		STEERING																

x: Applicable

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

FSU

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005548669

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:000000005548672

NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

For vehicle with steering lock unit, if the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the operation procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Turn the push-button ignition switch to ACC position.
(At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.

PRECAUTIONS

[AWD]


< PRECAUTION >

5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT-III.

Precaution for Procedure without Cowl Top Cover

INFOID:000000005548675

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

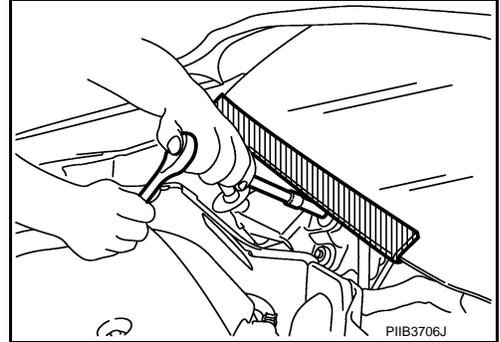

Precautions for Suspension

INFOID:000000005246440

CAUTION:

- When installing rubber bushings, the final tightening must be carried out under unladen conditions with tires on ground. Spilled oil might shorten the life of rubber bushings. Be sure to wipe off any spilled oil.
- Unladen conditions mean that fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.
- After servicing suspension parts, be sure to check wheel alignment.
- Self-lock nuts are not reusable. Always use new ones when installing. Since new self-lock nuts are pre-oiled, tighten as they are.

PREPARATION

[AWD]

< PREPARATION >

PREPARATION


PREPARATION

Special Service Tool


INFOID:000000005246441

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

Tool number (Kent-Moore No.) Tool name	Description
ST35652000 (-) Shock absorber attachment	Disassembling and assembling shock absorber
ST3127S000 (J-25765-A) Preload gauge	Measuring rotating torque of ball joint

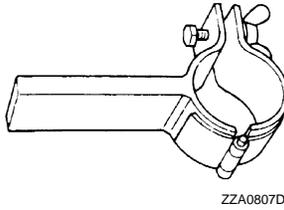

ZZA0807D

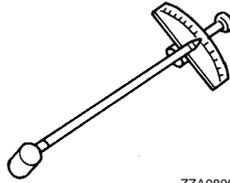


ZZA0806D


Commercial Service Tool

INFOID:000000005246442

Tool name	Description
Power tool	Loosening bolts and nuts
Spring compressor	Removing and installing coil spring

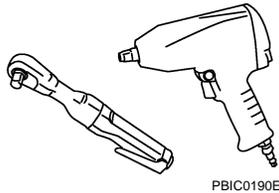

PBIC0190E

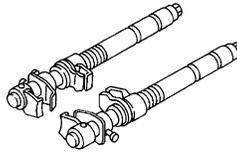

S-NT717

FRONT SUSPENSION ASSEMBLY

< PERIODIC MAINTENANCE >

[AWD]

PERIODIC MAINTENANCE

FRONT SUSPENSION ASSEMBLY

Inspection

INFOID:000000005246443

MOUNTING INSPECTION

Make sure the mounting conditions (looseness, backlash) of each component and component conditions (wear, damage) are normal.

BALL JOINT AXIAL END PLAY

1. Set front wheels in a straight-ahead position.
2. Measure axial end play by playing and moving up/down with iron bar or equivalent between transverse link or upper link and steering knuckle.

Axial end play : Refer to [FSU-39, "Ball Joint"](#).

CAUTION:

- Never depress brake pedal when measuring.
- Never perform with tires on level ground.
- Be careful not to damage ball joint boot. never damage the installation position by applying excessive force.

SHOCK ABSORBER

Check for oil leakage, damage. Replace it if necessary.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

FSU

WHEEL ALIGNMENT

Inspection

INFOID:000000005246444

DESCRIPTION

CAUTION:

- **Camber, caster, kingpin inclination angles cannot be adjusted.**
- **If camber, caster, or kingpin inclination angle is outside the standard, check front suspension parts for wear and damage. Replace suspect parts if a malfunction is detected.**
- **Kingpin inclination angle is reference value, no inspection is required.**
- Measure wheel alignment under unladen conditions.

NOTE:

“Unladen conditions” means that fuel, engine coolant, and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.

PRELIMINARY CHECK

Check the following:

- Tires for improper air pressure and wear.
- Road wheels for runout. Refer to [WT-74, "Inspection"](#).
- Wheel bearing axial end play. Refer to [FAX-14, "Inspection"](#).
- Transverse link or upper link ball joint axial end play. Refer to [FSU-32, "Inspection"](#) or [FSU-34, "Inspection"](#).
- Shock absorber operation.
- Each mounting part of axle and suspension for looseness and deformation.
- Each of suspension member, shock absorber, upper link and transverse link for cracks, deformation and other damage.
- Vehicle height (posture).

GENERAL INFORMATION AND RECOMMENDATIONS

- A four-wheel thrust alignment should be performed.
- This type of alignment is recommended for any NISSAN/INFINITI vehicle.
- The four-wheel “thrust” process helps ensure that the vehicle is properly aligned and the steering wheel is centered.
- The alignment rack itself should be capable of accepting any NISSAN/INFINITI vehicle.
- The rack should be checked to ensure that it is level.
- Make sure the machine is properly calibrated.
- Your alignment equipment should be regularly calibrated in order to give correct information.
- Check with the manufacturer of your specific equipment for their recommended Service/Calibration Schedule.

ALIGNMENT PROCESS

IMPORTANT:

Use only the alignment specifications listed in this Service Manual.

- When displaying the alignment settings, many alignment machines use “indicators”: (Green/red, plus or minus, Go/No Go). **Do not use these indicators.**
- The alignment specifications programmed into your machine that operate these indicators may not be correct.
- This may result in an ERROR.
- Some newer alignment machines are equipped with an optional “Rolling Compensation” method to “compensate” the sensors (alignment targets or head units). **Never use this “Rolling Compensation” method.**
- Use the “Jacking Compensation Method”. After installing the alignment targets or head units, raise the vehicle and rotate the wheels 1/2 turn both ways.
- See Instructions in the alignment machine you’re using for more information on this.

FRONT COIL SPRING AND SHOCK ABSORBER

< REMOVAL AND INSTALLATION >

[AWD]


REMOVAL AND INSTALLATION

FRONT COIL SPRING AND SHOCK ABSORBER

Exploded View

INFOID:000000005246445


WITHOUT CONTINUOUS DAMPING CONTROL

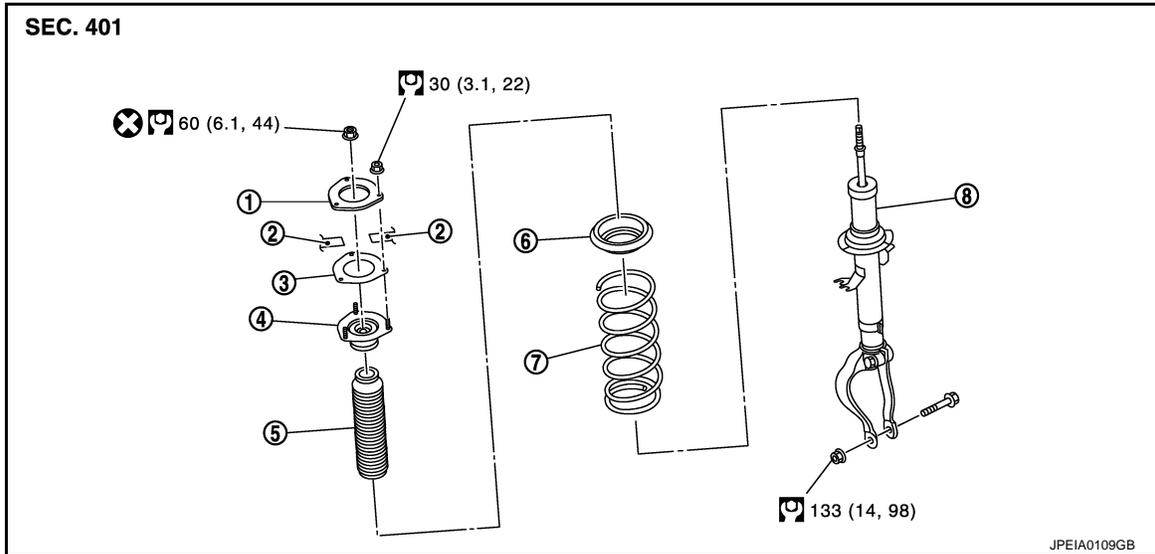

- | | | |
|------------------------------------|-------------------|------------------|
| 1. Gusset | 2. Vehicle body | 3. Mounting seal |
| 4. Shock absorber mounting bracket | 5. Bound bumper | 6. Rubber seat |
| 7. Coil spring | 8. Shock absorber | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

WITH CONTINUOUS DAMPING CONTROL

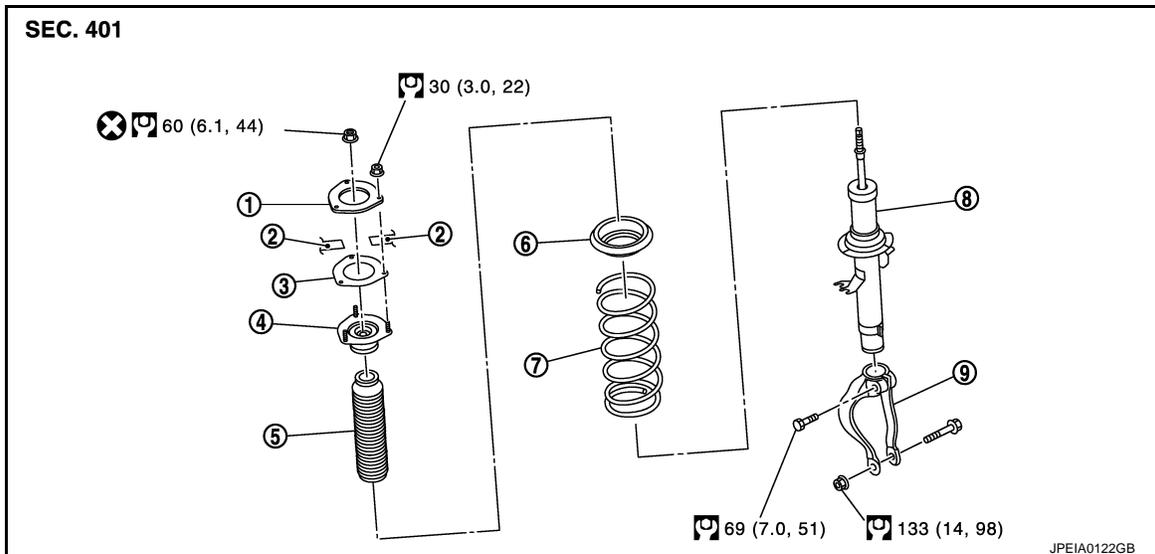

- | | | |
|------------------------------------|-------------------|-----------------------|
| 1. Gusset | 2. Vehicle body | 3. Mounting seal |
| 4. Shock absorber mounting bracket | 5. Bound bumper | 6. Rubber seat |
| 7. Coil spring | 8. Shock absorber | 9. Shock absorber arm |

Refer to [GI-4, "Components"](#) for symbols in the figure.

FRONT COIL SPRING AND SHOCK ABSORBER

< REMOVAL AND INSTALLATION >

[AWD]

Removal and Installation

INFOID:000000005246446

REMOVAL

1. Remove engine cover. Refer to [EM-27, "Exploded View"](#) (VQ35HR), [EM-174, "Exploded View"](#) (VK50VE).
2. Remove front fender protector. Refer to [EXT-25, "FENDER PROTECTOR : Exploded View"](#).
3. Remove tires with power tool.
4. Remove wheel sensor and harness connector from vehicle. Refer to [BRC-131, "FRONT WHEEL SENSOR : Exploded View"](#).

CAUTION:

Never pull on wheel sensor harness.

5. Remove shock absorber actuator harness connector (with Continuous Damping Control).
6. Remove front wheel vertical G sensor (with Continuous Damping Control). Refer to [SCS-63, "Exploded View"](#).
7. Remove brake hose bracket. Refer to [BR-20, "FRONT : Exploded View"](#).
8. Remove stabilizer connecting rod with power tool. Refer to [FSU-36, "Exploded View"](#).
9. Remove wheel hub lock nut. Refer to [FAX-16, "Exploded View"](#).
10. Remove shock absorber from transverse link with power tool.
11. Separate upper link from steering knuckle. Refer to [FAX-16, "Exploded View"](#).
12. Separate drive shaft from wheel hub and bearing assembly.
13. Remove shock absorber assembly.

NOTE:

If removing shock absorber is difficult, loosen upper link mounting bolts (vehicle side).

INSTALLATION

Note the following, and install in the reverse order of removal.

- Never tap on the ball joint cap of the stabilizer connecting rod with a hammer or a similar item when inserting the stabilizer connecting rod into the transverse link.
- Perform final tightening of bolts and nuts at the shock absorber lower side (rubber bushing), under unladen conditions with tires on level ground.

Disassembly and Assembly

INFOID:000000005246447

DISASSEMBLY


CAUTION:

Never damage shock absorber piston rod when removing components from shock absorber.

1. Remove shock absorber arm. (With continuous damping control)
2. Install shock absorber attachment (A) [SST: ST35652000 (-)] to shock absorber and secure it in a vise.

CAUTION:

When installing the shock absorber attachment to shock absorber, wrap a shop cloth around shock absorber to protect it from damage.

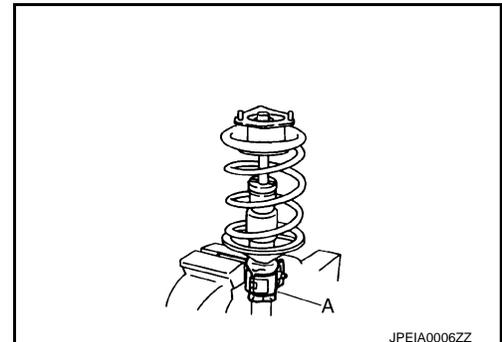

JPEIA0006ZZ

FRONT COIL SPRING AND SHOCK ABSORBER

[AWD]

< REMOVAL AND INSTALLATION >

- Using a spring compressor (A) (commercial service tool), compress coil spring between rubber seat and shock absorber until coil spring with a spring compressor is free.

CAUTION:


Be sure a spring compressor is securely attached coil spring. Compress coil spring

- Make sure coil spring with a spring compressor between rubber seat and shock absorber is free. And then remove piston rod lock nut while securing the piston rod tip so that piston rod does not turn.
- Remove mounting seal, shock absorber mounting bracket, rubber seat, bound bumper from shock absorber.
- After removing coil spring with a spring compressor, then gradually release a spring compressor.

CAUTION:

Loosen while making sure coil spring attachment position does not move.

- Remove the shock absorber attachment from shock absorber.

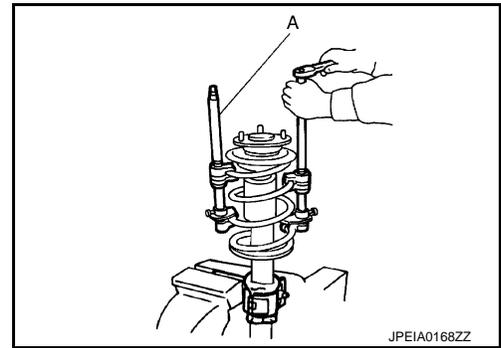

A
B
C
D

FSU

ASSEMBLY

- Install shock absorber attachment (A) [SST: ST35652000 (-)] to shock absorber and secure it in a vise.


CAUTION:

When installing the shock absorber attachment to shock absorber, wrap a shop cloth around shock absorber to protect it from damage.

- Compress coil spring using a spring compressor (commercial service tool), and install it onto shock absorber.

CAUTION:

- Install with the large-diameter side (A) facing up and the small-diameter side (B) facing down.
- Be sure a spring compressor is securely attached to coil spring. Compress coil spring.

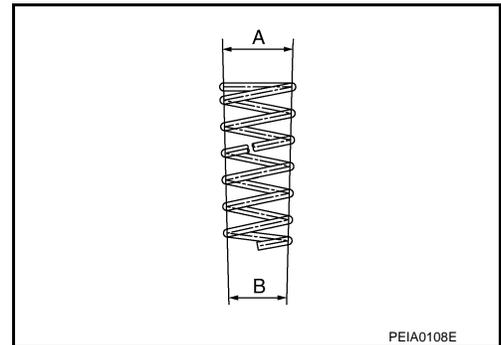

F
G
H
I
J
K
L

- Install the shock absorber mounting bracket and rubber seat.

CAUTION:


Align the paint mark (A) to the stud bolt (1) position when assembling.

- Apply soapy water to bound bumper.

CAUTION:

Never use machine oil.

- Remove shock absorber arm. (With continuous damping control)

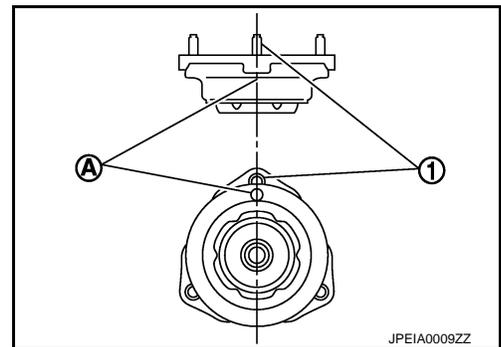


M
N
O
P

- Insert bound bumper into shock absorber mounting bracket, and then install it to shock absorber together with rubber seat.

FRONT COIL SPRING AND SHOCK ABSORBER

< REMOVAL AND INSTALLATION >

[AWD]

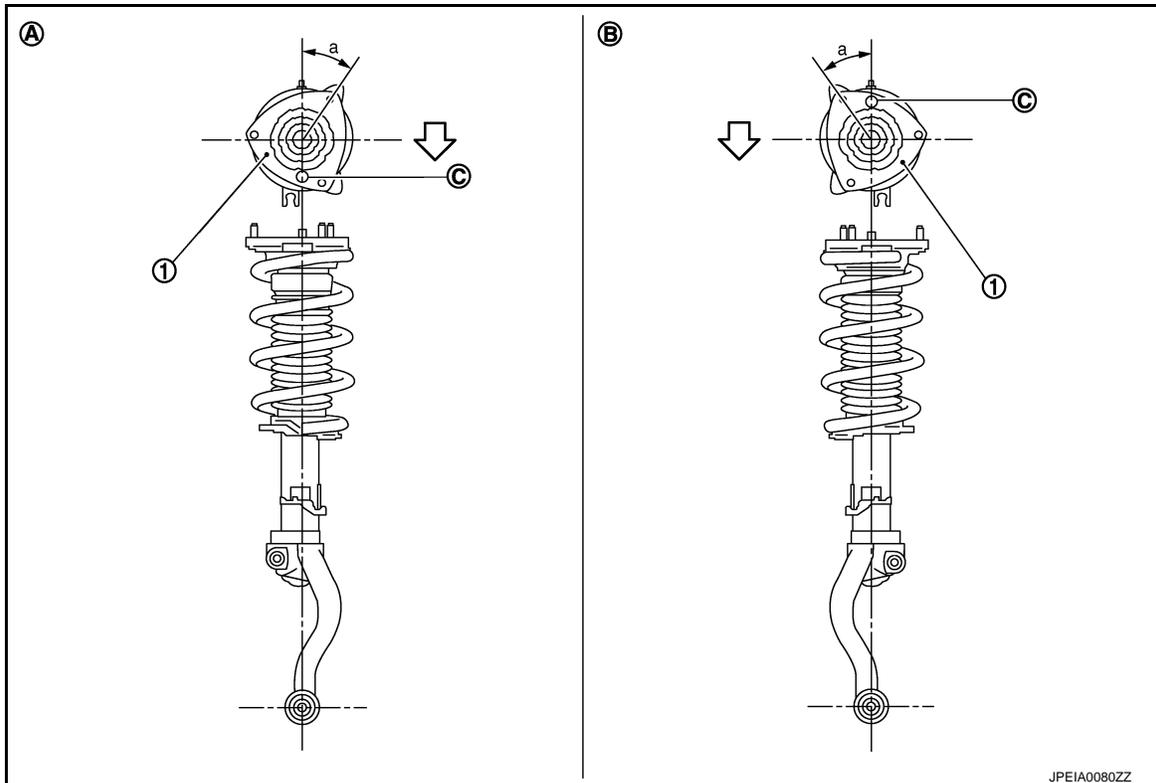

1. Shock absorber mounting bracket

A. Right side

B. Left side

C. Coil spring lower end position

↙ : Vehicle front

- Install the shock absorber mounting bracket as shown in the figure.

Angle (a) : 30.0°

- Check that the lower end of the coil spring (C) is positioned at the spring lower seat of the shock absorber.
7. Secure piston rod tip so that piston rod does not turn, then tighten piston rod lock nut to the specified torque.
 8. Gradually release a spring compressor, and remove coil spring.
CAUTION:
Loosen while making sure coil spring attachment position does not move.
 9. Remove the shock absorber attachment from shock absorber.
 10. Install the mounting seal to shock absorber mounting bracket.

Inspection

INFOID:000000005246448

INSPECTION AFTER INSTALLATION

1. Check shock absorber actuator harness connector for proper connection (with Continuous Damping Control).
2. Check wheel sensor harness for proper connection. Refer to [BRC-131. "FRONT WHEEL SENSOR : Exploded View"](#).
3. Check wheel alignment. Refer to [FSU-26. "Inspection"](#).
4. Adjust neutral position of steering angle sensor. Refer to [BRC-9. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

INSPECTION AFTER DISASSEMBLY

Shock Absorber

FRONT COIL SPRING AND SHOCK ABSORBER

[AWD]

< REMOVAL AND INSTALLATION >

Check the following items, and replace the part if necessary.

- Shock absorber for deformation, cracks or damage.
- Piston rod for damage, uneven wear or distortion.
- Oil leakage.

Shock Absorber Mounting Bracket and Rubber Parts Inspection

Check shock absorber mounting bracket for cracks and rubber parts for wear. Replace it if necessary

Coil Spring

Check coil spring for cracks, wear or damage. Replace it if necessary.

Disposal

INFOID:000000005246449


1. Set shock absorber horizontally with the piston rod fully extended.
2. Drill 2 – 3 mm (0.08 – 0.12 in) hole at the position (●) from top as shown in the figure to release gas gradually.

CAUTION:

- Wear eye protection (safety glasses).
- Wear gloves.
- Be careful with metal chips or oil blown out by the compressed gas.

NOTE:

- Drill vertically in this direction (←).
- Directly to the outer tube avoiding brackets.
- The gas is clear, colorless, odorless, and harmless.

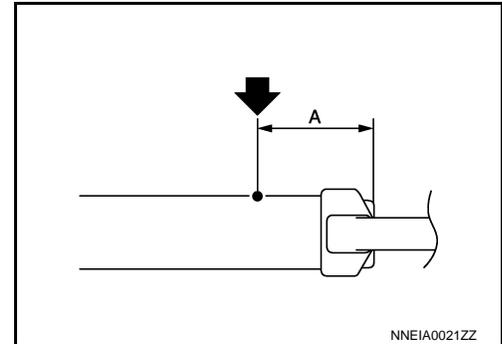

A : 20 – 30 mm (0.79 – 1.18 in)

3. Position the drilled hole downward and drain oil by moving the piston rod several times.

CAUTION:

Dispose of drained oil according to the law and local regulations.

A
B
C
D
FSU
F
G
H
I
J
K
L
M
N
O
P

TRANSVERSE LINK


< REMOVAL AND INSTALLATION >

[AWD]

TRANSVERSE LINK

Exploded View

INFOID:000000005246450

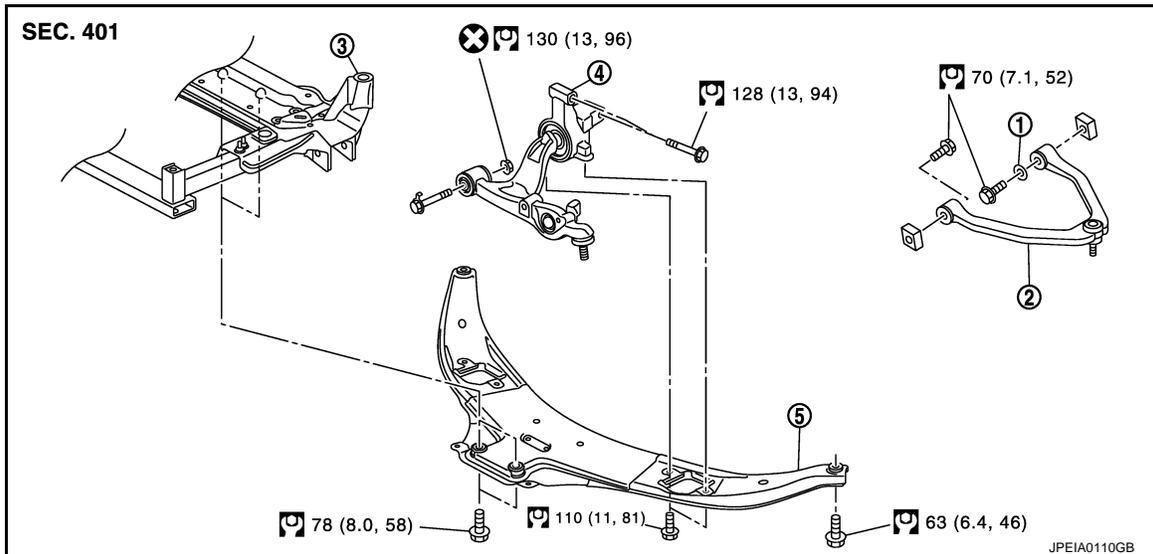

- | | | |
|------------------------|--------------------|----------------------------|
| 1. Stopper arm bushing | 2. Upper link | 3. Front suspension member |
| 4. Transverse link | 5. Front cross bar | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000005246451

REMOVAL

1. Remove tires with power tool.
2. Remove shock absorber. Refer to [FSU-27, "Exploded View"](#).
3. Temporarily install upper link and steering knuckle. Refer to [FAX-16, "Exploded View"](#).
4. Remove front cross bar.
5. Remove transverse link from steering knuckle.
6. Set suitable jack under transverse link.
7. Remove transverse link.

NOTE:

If removing transverse link mounting bolt (front side) is difficult, rotating steering wheel and remove steering outer socket. Refer to [ST-26, "Exploded View"](#).

INSTALLATION

Note the following, and install in the reverse order of removal.

- Never tap on the ball joint cap of the stabilizer connecting rod with a hammer or a similar item when inserting the stabilizer connecting rod into the transverse link.
- Perform final tightening of bolts and nuts at the front suspension member installation and shock absorber lower side (rubber bushing), under unladen conditions with tires on level ground.

Inspection

INFOID:000000005246452

INSPECTION AFTER REMOVAL

Appearance

Check the following items, and replace the part if necessary.

- Transverse link and bushing for deformation, cracks or damage.
- Ball joint boot for cracks or other damage, and also for grease leakage.

Ball Joint Inspection

TRANSVERSE LINK

[AWD]

< REMOVAL AND INSTALLATION >

Manually move ball stud to confirm it moves smoothly with no binding.

Swing Torque Inspection


NOTE:

Before measurement, move ball stud at least ten times by hand to check for smooth movement.

- Hook a spring balance (A) at cotter pin mounting hole. Confirm spring balance measurement value is within specifications when ball stud begins moving.

Swing torque : Refer to [FSU-39, "Ball Joint"](#).

- If swing torque exceeds standard range, replace transverse link assembly.

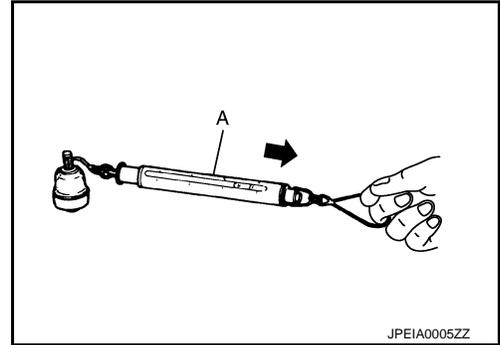


Rotating Torque Inspection

- Attach mounting nut to ball stud. Make sure that rotating torque is within specifications with a preload gauge (A) [SST: 3127S000 (J-25765-A)].

Rotating torque : Refer to [FSU-39, "Ball Joint"](#).

- If rotating torque exceeds standard range, replace transverse link assembly.

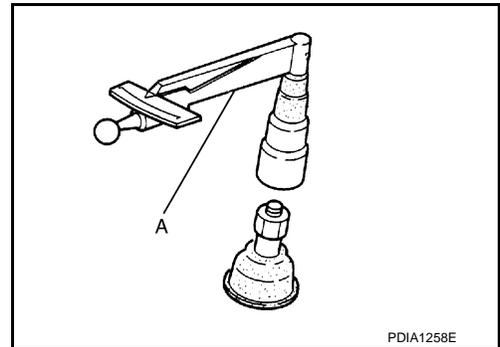

Axial End Play Inspection

- Move tip of ball stud in axial direction to check for looseness.

Axial end play : Refer to [FSU-39, "Ball Joint"](#).

- If axial end play exceeds standard range, replace transverse link assembly.

INSPECTION AFTER INSTALLATION

1. Check shock absorber actuator harness connector for proper connection (with Continuous Damping Control).
2. Check wheel sensor harness for proper connection. Refer to [BRC-131, "FRONT WHEEL SENSOR : Exploded View"](#).
3. Check wheel alignment. Refer to [FSU-26, "Inspection"](#).
4. Adjust neutral position of steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

UPPER LINK


< REMOVAL AND INSTALLATION >

[AWD]

UPPER LINK

Exploded View

INFOID:000000005246453

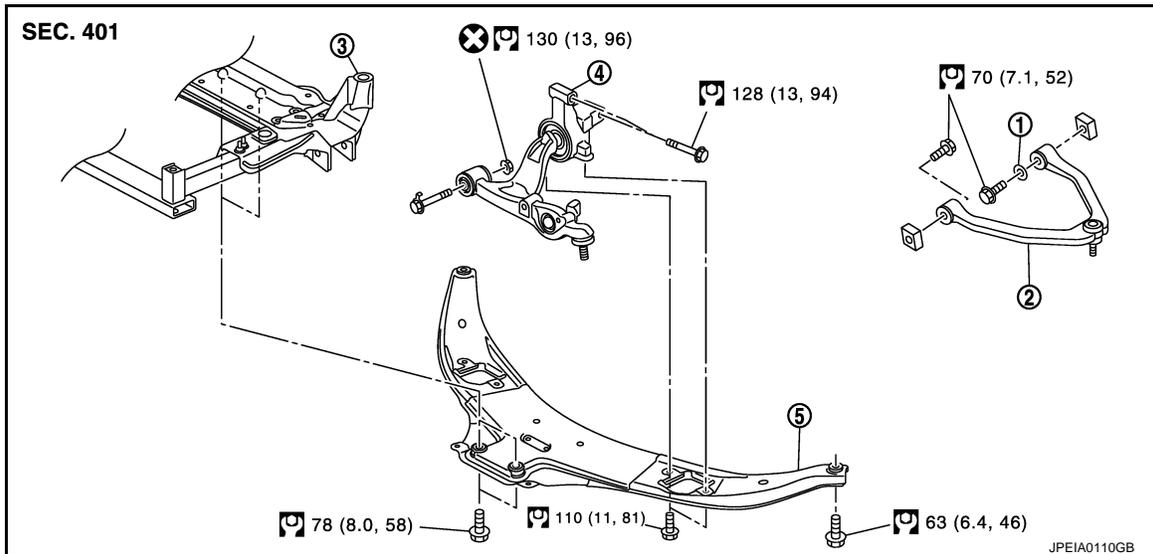

- | | | |
|------------------------|--------------------|----------------------------|
| 1. Stopper arm bushing | 2. Upper link | 3. Front suspension member |
| 4. Transverse link | 5. Front cross bar | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000005246454

REMOVAL

1. Remove tires from with power tool.
2. Remove shock absorber. Refer to [FSU-27, "Exploded View"](#).
3. Remove upper link and stopper arm bushing.

INSTALLATION

Note the following, and install in the reverse order of removal.

- Perform final tightening of bolts and nuts at the vehicle installation position (rubber bushing), under unladen conditions with tires on level ground.

Inspection

INFOID:000000005246455

INSPECTION AFTER REMOVAL

Appearance

Check the following items, and replace the part if necessary.

- Upper link and bushing for deformation, cracks or damage.
- Ball joint boot for cracks or other damage, and also for grease leakage.

Ball Joint Inspection

Manually move ball stud to confirm it moves smoothly with no binding.

Swing Torque Inspection

NOTE:

Before measurement, move ball stud at least ten times by hand to check for smooth movement.

UPPER LINK


< REMOVAL AND INSTALLATION >

[AWD]

- Hook a spring balance (A) at cutout on ball stud. Confirm spring balance measurement value is within specifications when ball stud begins moving.

Swing torque : Refer to [FSU-39, "Ball Joint"](#).

- If swing torque exceeds standard range, replace upper link assembly.

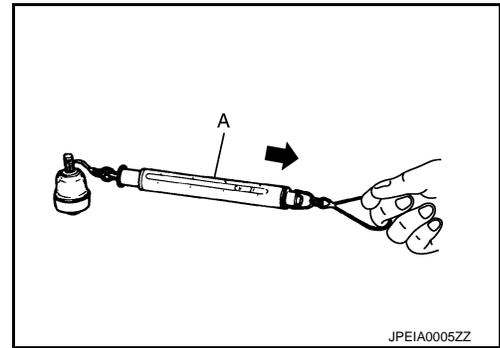

Axial End Play Inspection

- Move tip of ball stud in axial direction to check for looseness.

Axial end play : Refer to [FSU-39, "Ball Joint"](#).

- If axial end play exceeds standard range, replace upper link assembly.

INSPECTION AFTER INSTALLATION

1. Check shock absorber actuator harness connector for proper connection (with Continuous Damping Control).
2. Check wheel sensor harness for proper connection. Refer to [BRC-131, "FRONT WHEEL SENSOR : Exploded View"](#).
3. Check wheel alignment. Refer to [FSU-26, "Inspection"](#).
4. Adjust neutral position of steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

A
B
C
D
FSU
F
G
H
I
J
K
L
M
N
O
P

FRONT STABILIZER


< REMOVAL AND INSTALLATION >

[AWD]

FRONT STABILIZER

Exploded View

INFOID:000000005246456

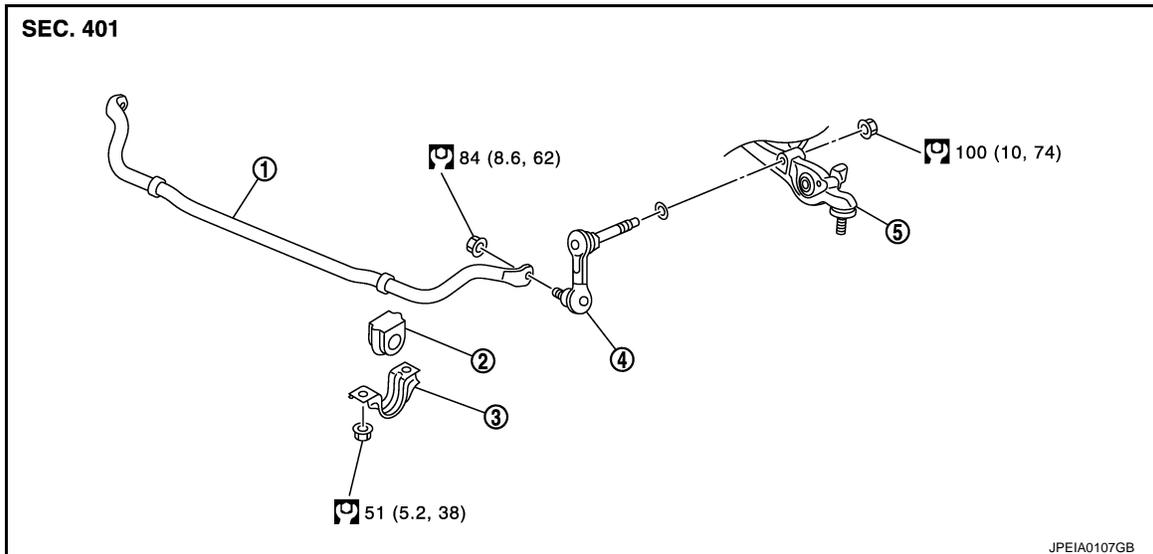

- | | | |
|------------------------------|-----------------------|---------------------|
| 1. Stabilizer bar | 2. Stabilizer bushing | 3. Stabilizer clamp |
| 4. Stabilizer connecting rod | 5. Transverse link | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000005246457

REMOVAL

1. Remove under cover.
2. Remove stabilizer connecting rod with power tool.
CAUTION:
Apply a matching mark to identify the installation position.
3. Remove stabilizer clamp and stabilizer bushing.
4. Remove stabilizer bar.

INSTALLATION

Note the following, and install in the reverse order of removal.

- Check the matching mark when installing.
- Tighten the mounting nut to the specified torque while holding a hexagonal part of stabilizer connecting rod side.

Inspection

INFOID:000000005246458

INSPECTION AFTER REMOVAL

Check stabilizer bar, stabilizer connecting rod, stabilizer bushing and stabilizer clamp for deformation, cracks or damage. Replace it if necessary.

FRONT SUSPENSION MEMBER

< UNIT REMOVAL AND INSTALLATION >


[AWD]

UNIT REMOVAL AND INSTALLATION

FRONT SUSPENSION MEMBER

Exploded View

INFOID:0000000005246459

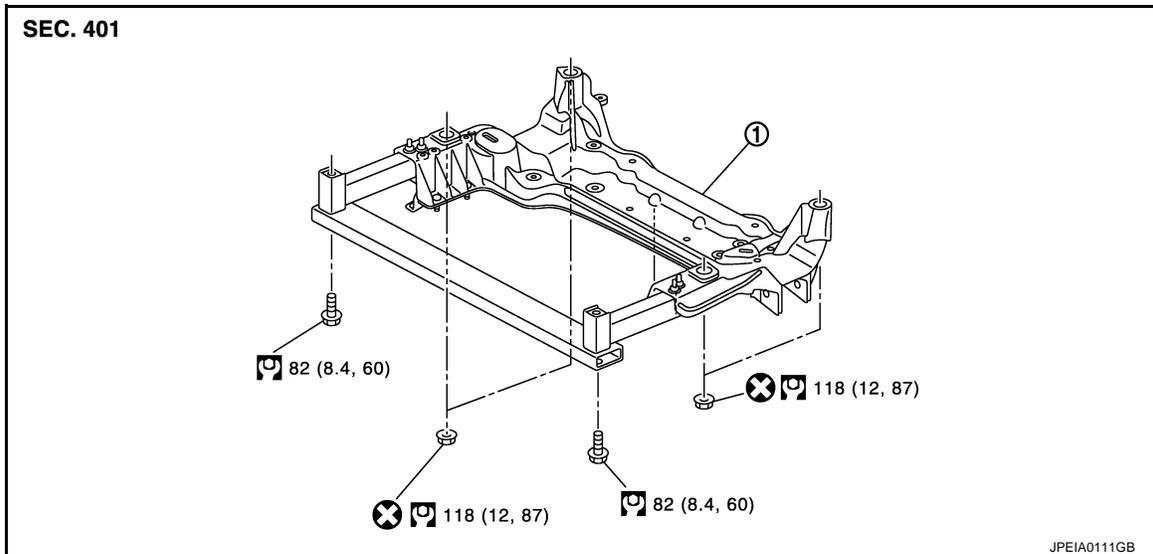

1. Front suspension member

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:0000000005246460

REMOVAL

1. Remove tire with power tool.
2. At first, remove the following parts as a set.
 - Engine, transmission assembly, transfer and front final drive: refer to [EM-87, "AWD : Removal and Installation"](#) (VQ35HR), [EM-196, "Removal and Installation"](#) (VK50VE).
 - Drive shaft: refer to [FAX-26, "Exploded View"](#).
3. Remove the following parts.
 - Steering knuckle and wheel hub and bearing assembly: refer to [FAX-16, "Exploded View"](#).
 - Steering gear assembly and hydraulic line: refer to [ST-26, "Exploded View"](#), [ST-48, "VQ35HR : Exploded View"](#) (VQ35HR), [ST-49, "VK50VE : Exploded View"](#) (VK50VE).
 - Stabilizer bar and stabilizer connecting rod: refer to [FSU-36, "Exploded View"](#).
 - Transverse link: refer to [FSU-32, "Exploded View"](#).
 - Engine mount insulator: refer to [EM-87, "AWD : Exploded View"](#) (VQ35HR), [EM-196, "Exploded View"](#) (VK50VE).

INSTALLATION

Note the following, and install in the reverse order of removal.

- Perform final tightening of bolts and nut at the vehicle installation position (rubber bushing), under unladen condition with tires on level ground.

Inspection

INFOID:0000000005246461

INSPECTION AFTER REMOVAL

Check the front suspension member for significant deformation, cracks, or damages. Replace if necessary.

INSPECTION AFTER INSTALLATION

1. Check shock absorber actuator harness connector for proper connection (with Continuous Damping Control).

FRONT SUSPENSION MEMBER

< UNIT REMOVAL AND INSTALLATION >

[AWD]

2. Check wheel sensor harness for proper connection. Refer to [BRC-131, "FRONT WHEEL SENSOR : Exploded View"](#).
3. Check wheel alignment. Refer to [FSU-26, "Inspection"](#).
4. Adjust the neutral position of the steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[AWD]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Wheel Alignment

INFOID:0000000005246462

Item		Standard	
Camber Degree minute (Decimal degree)	Minimum	-1° 05' (-1.08°)	
	Nominal	-0° 20' (-0.33°)	
	Maximum	0° 25' (0.41°)	
	Left and right difference	0° 33' (0.55°) or less	
Caster Degree minute (Decimal degree)	Minimum	2° 55' (2.92°)	
	Nominal	3° 40' (3.67°)	
	Maximum	4° 25' (4.41°)	
	Left and right difference	0° 39' (0.65°) or less	
Kingpin inclination Degree minute (Decimal degree)	Minimum	7° 55' (7.92°)	
	Nominal	8°40' (8.67°)	
	Maximum	9° 25' (9.41°)	
Toe-in	Total toe-in Distance	Minimum	In 1 mm (0.04 in)
		Nominal	In 2 mm (0.08 in)
		Maximum	In 3 mm (0.11 in)
	Toe angle (left wheel or right wheel) Degree minute (Decimal Degree)	Minimum	In 0° 02' 12" (0.04°)
		Nominal	In 0° 04' 24" (0.07°)
		Maximum	In 0° 06' 36" (0.11°)

Measure value under unladen* conditions.

*: Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.

Ball Joint

INFOID:0000000005246463

Item		Standard
Swing torque	Transverse link	0.5 – 3.6 N·m (0.06 – 0.36 kg-m, 5 – 31 in-lb)
	Upper link	0 – 2.0 N·m (0 – 0.20 kg-m, 0 – 17 in-lb)
Measurement on spring balance	Transverse link	7.8 – 56.3 N (0.8 – 5.7 kg, 1.8 – 12.6 lb)
	Upper link	0 – 61.5 N (0 – 6.2 kg, 0 – 13.8 lb)
Rotating torque	Transverse link	0.5 – 3.9 N·m (0.06 – 0.39 kg-m, 5 – 34 in-lb)
Axial end play		0 mm (0 in)

SERVICE DATA AND SPECIFICATIONS (SDS)


< SERVICE DATA AND SPECIFICATIONS (SDS)

[AWD]

Wheel Height

INFOID:000000005246464

Tire size	265/60R18	265/50R20	265/45R21
Front (Hf)	830 mm (32.68 in)		831 mm (32.72 in)

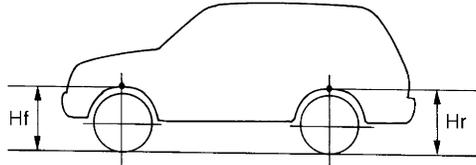

SFA746B

Measure value under unladen* conditions.

*: Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.