



OWNER'S MANUAL

FULL PREPARATION PACKAGE

MOBILE PHONE



© 2007 Bayerische Motoren Werke
Aktiengesellschaft
Munich, Germany
Reprinting, including excerpts, only with the
written consent of BMW AG, Munich.
Order No. 01 41 0 014 827
US English VII/07
Printed in Germany
Printed on environmentally friendly paper,
bleached without chlorine, suitable for recycling.

CONTENTS

NOTES

- 4 Using this Owner's Manual
- 4 Symbols used
- 4 Editorial notice

OVERVIEW

- 5 The concept
- 5 Making calls in the car
- 5 Suitable mobile phones

PUTTING THE MOBILE PHONE INTO OPERATION

- 6 Pairing the mobile phone with the vehicle
- 9 List of paired mobile phones
- 9 Deleting a mobile phone from the device list
- 10 Activating/deactivating the Bluetooth connection

OPERATION ON THE ONBOARD MONITOR

- 11 Voice quality
- 11 Requirements
- 11 Opening communication menu
- 11 Receiving a call
- 12 Making a call
- 14 Continuing an active call on the hands-free system or mobile phone

OPERATION BY VOICE

- 16 The concept
- 16 Symbols in the Owner's Manual
- 16 Voice commands
- 17 Adjusting the message volume
- 17 Making a call

SNAP-IN ADAPTER

- 18 Inserting/removing the snap-in adapter
- 18 Inserting/removing the mobile phone

MINI CONTACT

NOTES

USING THIS OWNER'S MANUAL

This manual is a supplement to your Owner's Manual for Vehicle and instructs you on how to register your mobile phone for the first time and how to operate it using features in the vehicle. Keep it together with the other vehicle documentation.

Should the day arrive when you wish to sell your MINI, please remember to hand this Owner's Manual to the next owner; it is an important part of the vehicle.

For information on other vehicle equipment, please turn to the Owner's Manuals of your vehicle or to the respective supplementary Owner's Manuals. If you have any questions, your MINI Dealer will be glad to help you.

SYMBOLS USED

 Indicates precautions that must be followed precisely in order to avoid the possibility of personal injury and serious damage to the vehicle or the full preparation package mobile phone.

 Indicates information that will assist you in gaining the optimum benefit from your full preparation package mobile phone and enable you to care more effectively for it.

◀ Marks the end of a specific item of information.

* Indicates special equipment, country-specific equipment and optional extras, as well as equipment and functions not yet available at the time of printing.

"..." Indicates texts on the Control Display for the selection of functions.

 Indicates voice commands that must be said word for word.

>...< Indicates voice commands.

>...< Indicates responses by the system to voice commands.

EDITORIAL NOTICE

The manufacturer pursues a policy of continuous, ongoing development that ensures the highest quality standards combined with advanced, state-of-the-art technology for MINI products. For this reason, the features described in this Owner's Manual could differ from those in your vehicle in rare cases.

OVERVIEW

THE CONCEPT

Your MINI is equipped with a full preparation package mobile phone. After one-time pairing of a suitable mobile phone with the vehicle, you can operate it using the onboard monitor, the buttons* on the steering wheel and your voice*.

Once a mobile phone is paired with the vehicle, it will automatically be recognized when it is located inside the vehicle if the vehicle engine is running or the ignition is switched on. Pairing data can be stored for up to four mobile phones at any one time. If several mobile phones are recognized simultaneously, the mobile phone paired last can be operated on the vehicle.

SUITABLE MOBILE PHONES

Ask your MINI Dealer which Bluetooth mobile phones the full preparation package mobile phone supports and for which mobile phones snap-in adapters* are available. When loaded with the appropriate software version, these mobile phones support the functions described in this Owner's Manual. Other mobile phones may not function properly.

MAKING CALLS IN THE CAR

Using the snap-in adapter*

The so-called snap-in adapter, or mobile phone base plate, recharges the battery and connects the mobile phone to the outside antenna of the vehicle. This provides for good network reception and consistent sound quality. Inquire with your MINI Dealer whether you can use a base plate with your vehicle and for which mobile phones snap-in adapters are available.

Avoid using the mobile phone buttons to operate a mobile phone recognized by the vehicle as this may cause the mobile phone to malfunction.

For your safety



Make entries only when traffic and road conditions allow. While driving, do not make calls with the mobile phone in your hand. Use the hands-free system instead. Otherwise, you may become distracted, potentially placing your own vehicle's occupants and other road users in danger. ◀

PUTTING THE MOBILE PHONE INTO OPERATION

Your vehicle can save the pairing data for four mobile phones at any one time. When the vehicle engine is running or the ignition is switched on, every paired mobile phone is automatically recognized whenever it is located inside the vehicle.

PAIRING THE MOBILE PHONE WITH THE VEHICLE

The following conditions must be met:

- ▷ Suitable mobile phone: The mobile phone is supported by the full preparation package mobile phone. Information on this can be found on the Internet: www.mini.com
- ▷ The mobile phone is ready to operate.
- ▷ The Bluetooth connection on the vehicle, refer to page 10, and on the mobile phone is activated.
- ▷ Depending on the mobile phone type, it may be necessary to make certain presettings, e. g. via the following menu items:
 - ▷ Bluetooth switched on
 - ▷ Connection without confirmation
 - ▷ Reconnection
- ▷ Depending on the type of mobile phone, for example, the energy-saving mode may result in the vehicle not being able to identify the mobile phone.
- ▷ To pair the phone, define a number of your choice as the Bluetooth passkey, e.g. 1. This Bluetooth passkey will not be needed again after the phone has been paired successfully.
- ▷ The ignition is switched on.

 To avoid being distracted and thus posing an unnecessary hazard both to your own vehicle's occupants and to other road users, only pair the mobile phone with the vehicle when the vehicle is parked. ◀


Switching on the ignition

1. Insert the remote control all the way into the ignition switch.
2. Switch on the ignition by pressing the start/stop button without depressing the brake or clutch pedal.

Preparation via the onboard monitor

Onboard monitor, concept, refer to Owner's Manual for Vehicle.

3.  Press the button to open the start menu.

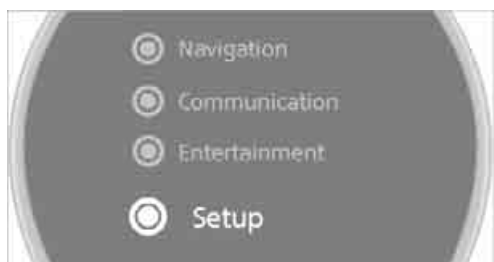


4. Move the MINI joystick to highlight "Setup" and press the MINI joystick.
5. Select "Settings".



6. Select "Bluetooth".




The Bluetooth name of the vehicle is displayed.

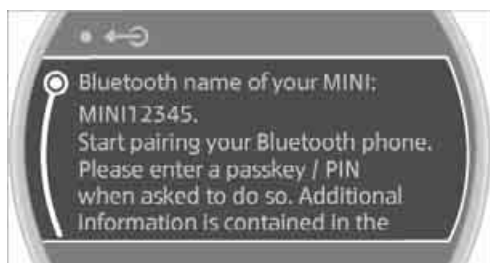

7. Select "Phone".



8. Select "Pair new phone".

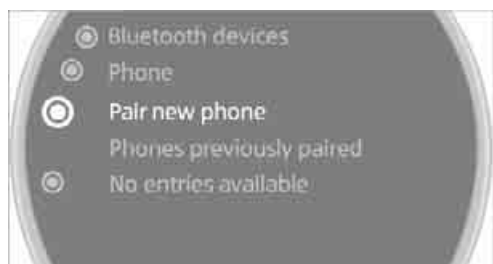

9. Select "Start pairing".



Preparations on the mobile phone

10. Additional steps must be performed on the mobile phone and vary depending on the model, refer to the operating manual of your mobile phone, e.g. under searching, connecting or linking a Bluetooth device. The Bluetooth name of the vehicle also appears on the mobile phone display.
11. Select the Bluetooth name of the vehicle on the mobile phone display.

Pairing the mobile phone

Depending on the type of mobile phone, you will be asked to enter your Bluetooth passkey on the mobile phone display and then on the onboard monitor, or vice versa.

12. Enter the Bluetooth passkey.
Depending on the mobile phone, you have approx. 30 seconds to enter your Bluetooth passkey on the mobile phone and on the Control Display.



13. Select "Confirm passkey".
14. Wait several seconds until the list of paired mobile phones appears on the Control Display and "Phone" is selected.

The next time you use the mobile phone inside the vehicle, it will be recognized within no more than 2 minutes as long as the engine is running or the ignition is switched on.



For some mobile phone types it may be necessary to make certain settings for a permanent Bluetooth connection, e.g. using the authorization or secure connection menu item, refer to your mobile phone's operating instructions. ◀

As soon as a mobile phone is recognized by the vehicle, the phone book entries stored on the SIM card or on the mobile phone are transferred to the vehicle. This procedure depends on your mobile phone, refer to the operating manual of your mobile phone, and may take several minutes.

If not all phone book entries are displayed:

- ▶ Transfer all phone book entries from the SIM card to the mobile phone, if necessary.
- ▶ Phone book entries with special characters may not be displayed.

Up to four mobile phones can be paired one after the other. If you wish to pair a fifth mobile phone, the pairing data of the mobile phone whose pairing data were the first to be stored in the vehicle are deleted.

Checks to perform if pairing is unsuccessful

- ▶ Is the mobile phone supported by the full preparation package mobile phone? Information on this can be found on the Internet: www.mini.com.
- ▶ Do the Bluetooth passkeys on the mobile phone and vehicle match? The same Bluetooth passkey must be entered on the mobile phone's display and on the onboard monitor.
- ▶ Is the mobile phone no longer responding? Switch the mobile phone off and on or disconnect it briefly from the power supply.
- ▶ Only a limited number of devices can be connected with the mobile phone. If necessary, delete connections with other devices.

To repeat pairing:

1. Select "Restart pairing" and press the MINI joystick.




2. Repeat steps 9 to 14.

If pairing remains unsuccessful after several attempts, contact Customer Relations.

To call Customer Relations:

Select "Help" and press the MINI joystick.

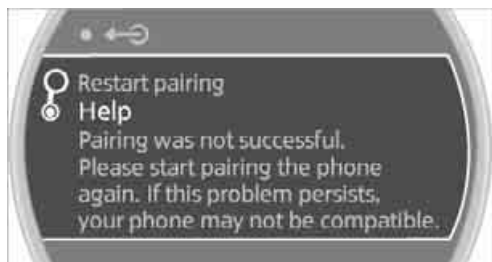

The Customer Relations phone number and the information necessary for pairing appear on the display. If the mobile phone is already connected, you can select the Customer Relations phone number to establish the connection.



LIST OF PAIRED MOBILE PHONES

You can call up a list of mobile phones whose pairing data are stored in the vehicle. If several mobile phones are detected by the vehicle at the same time, the mobile phone at the top of the list can be operated via the vehicle.

You can adjust the order in which the mobile phones are listed. As long as one of the mobile phones in this list is selected, you cannot operate the mobile phones on the vehicle.

Onboard monitor, concept, refer to Owner's Manual for Vehicle.

- 1.  Press the button to open the start menu.
- 2. Move the MINI joystick to highlight "Setup" and press the MINI joystick.
- 3. Select "Settings".
- 4. Select "Bluetooth".
- 5. Select "Phone".
- 6. Select the desired mobile phone.



- 7. Select "Move device up".



The selected mobile phone is shifted one position higher.

DELETING A MOBILE PHONE FROM THE DEVICE LIST

If you no longer wish to operate a particular mobile phone on the vehicle, you can delete the pairing data of that mobile phone:

Onboard monitor, concept, refer to Owner's Manual for Vehicle.

- 1. Switch off the mobile phone.
- 2.  Press the button to open the start menu.
- 3. Move the MINI joystick to highlight "Setup" and press the MINI joystick.
- 4. Select "Settings".
- 5. Select "Bluetooth".
- 6. Select "Phone".
- 7. Select the desired mobile phone.



- 8. Select "Delete device".



The deleted mobile phone is cleared from the list.

The phone book entries and the lists of stored phone numbers are also deleted.

ACTIVATING/DEACTIVATING THE BLUETOOTH CONNECTION



Bluetooth technology is not authorized in all countries. Please adhere to local regulations. Temporarily deactivate the Bluetooth connection between the vehicle and mobile phone if necessary.

If the Bluetooth connection is deactivated, the mobile phone can no longer be operated on the vehicle, and other devices with a Bluetooth interface, such as a laptop, can be used with the mobile phone. ◀

To temporarily deactivate the Bluetooth connection between the vehicle and your mobile phone:

1. Remove the mobile phone from the base plate and switch it off.
2. Press the button to open the start menu.
3. Move the MINI joystick to highlight "Setup" and press the MINI joystick.
4. Select "Settings".
5. Select "Bluetooth".



6. Select "Settings".

7. Select "Bluetooth communication" to activate or deactivate the connection.



- ☒ The Bluetooth connection is activated.
- ☐ The Bluetooth connection is deactivated.

OPERATION ON THE ONBOARD MONITOR

The following functions can be operated on the onboard monitor:

- ▷ Accepting/rejecting calls
- ▷ Dialing a phone number
- ▷ Dialing a phone number from the phone book
- ▷ Dialing a stored phone number, e.g. from the list of accepted calls
- ▷ Terminating a call

When the ignition and radio standby mode are switched off, e.g. after taking the remote control out of the ignition switch, you can continue an ongoing call via the hands-free system for a maximum of 25 minutes.

VOICE QUALITY

If the person you are talking to is unable to hear you clearly, this may be due to excessive background noise. The mobile phone preparation can compensate for these noises to a certain degree. To optimize voice quality, we recommend the following:

- ▷ Reduce background noise, e. g. by closing the windows, lowering the air volume of the air conditioning system or opening the four front air vents and pointing them downward.
- ▷ Reduce the volume of the hands-free system.

REQUIREMENTS


- ▷ The pairing data of the mobile phone are stored in the vehicle and the mobile phone is ready to operate.
- ▷ The engine is running or the ignition is switched on.
- ▷ The mobile phone is recognized by the vehicle.

OPENING COMMUNICATION MENU

Many of the functions described below can be operated in the "Communication" menu.

Onboard monitor, concept, refer to Owner's Manual for Vehicle.

1.  Press the button to open the start menu.

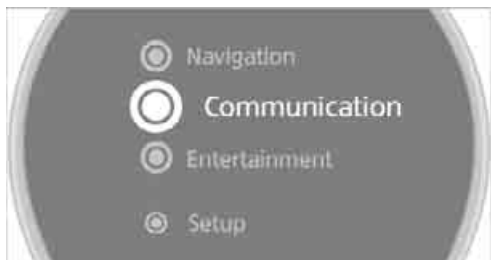

2. Move the MINI joystick to highlight "Communication" and press the MINI joystick.

RECEIVING A CALL


If you have the phone number of the caller stored in the phone book and the phone number is transmitted, the name of the entry will be displayed.

Accepting a call

 Press the button on the steering wheel.

Alternatively:

Select "Accept".

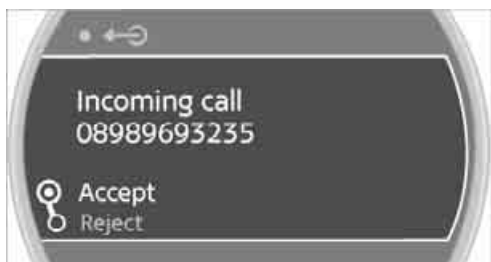

Rejecting a call

Select "Reject".


MAKING A CALL

Dialing a phone number

1. Select "Phone".



2. Select "Dial".
3. Enter the desired phone number by selecting the digits individually.
Always enter the full phone number, consisting of the area code and the phone number.
To delete the last digit:
Move the MINI joystick to the right to select the  arrow and press the MINI joystick.
4.  Press the button on the steering wheel or Select "Dial number".

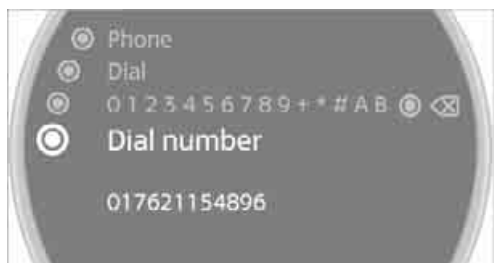


For your phone number to be displayed to the person you are calling, display of the phone number must be enabled by your service provider.

Terminating a call

 Press the button on the steering wheel.
Alternatively:

1. Select the phone number.

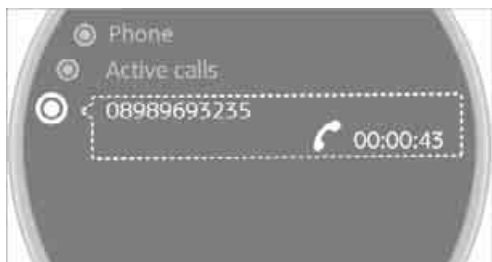

2. "End call" is selected.



Dialing a phone number from the phone book or from a list of stored phone numbers

Numbers you dialed, incoming calls and phone book entries are stored in lists if the mobile phone is connected to the vehicle via Bluetooth. If the caller is entered in the phone book, the name of the entry is displayed instead of the phone number.

You can select the desired party from the list and establish the connection.

There are five different lists of phone numbers:

- ▷ "A - Z"
The phone book entries on the SIM card and mobile phone consist of a name and phone number and are arranged in alphabetical order.
- ▷ "Top 8"
The eight phone numbers that are most frequently dialed from the "A - Z" phone book are automatically stored in the Top 8 list.
- ▷ "Redial"
The eight phone numbers dialed most recently are automatically stored. The last number dialed is at the top of the list.

▷ "Missed calls"

The phone numbers of the last eight calls that were not accepted are stored. For this function to work, it must be possible to transmit the phone number of the caller. A missed call is indicated by a mobile phone symbol in the bottom line of the Control Display.

▷ "Received calls"

The phone numbers of the last eight calls to be accepted are stored. For this function to work, it must be possible to transmit the phone number of the caller.



5. Select "Call".

The selected party is called.

You can modify a phone number stored in the phone book, e.g. to dial an extension:

1. Select "Phone".
2. Select "A - Z".
3. Select the desired entry.
4. Select "Add digits".
5. Modify the phone number.
6. Select "Dial number".

Dialing a phone number from the phone book

The phone book entries are available in the "A - Z" list. The Control Display shows the phone book entries on the SIM card or mobile phone. They are arranged in alphabetical order.

1. Select "Phone".



2. Select "A - Z".



3. To limit the number of entries displayed, select the first letter of the desired entry and press the MINI joystick.

4. Select the desired entry.

Dialing a phone number from a list of stored numbers

To select an entry and establish a connection:

1. Select "Phone".
2. Select a list:
 - ▷ "Top 8"
 - ▷ "Redial"
 - ▷ "Missed calls"
 - ▷ "Received calls"



3. Select the desired entry.



4. Select "Call".
The selected party is called.

Deleting an individual entry


1. Select the desired entry from the list.
2. Select "Delete".



The entry is deleted.

Deleting the entire list

1. Select an entry from the list.
2. Select "Delete all numbers".

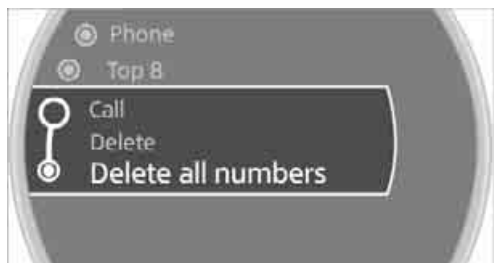

3. Select "Yes" if necessary.
The list is deleted.


Touch tone dialing

A touch tone code is needed to access network services or operate certain devices, such as


when retrieving messages remotely from an answering machine.

This function is available when a connection has been established.

1. Establish a connection.

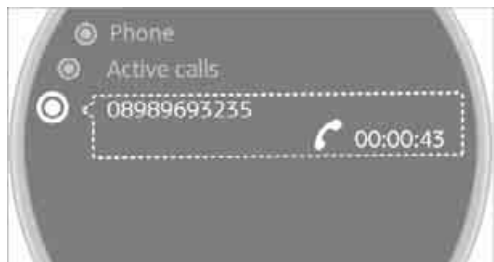

2. Press the MINI joystick.
3. Select "Keypad".
4. Select the desired character.
Each character is transmitted immediately and, depending on the type of mobile phone, is confirmed by a signal tone.

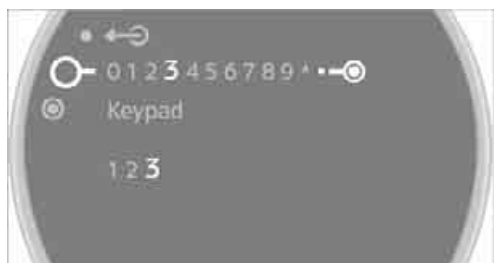

CONTINUING AN ACTIVE CALL ON THE HANDS-FREE SYSTEM OR MOBILE PHONE

From mobile phone to hands-free system*

You can continue a call that began beyond the Bluetooth range of the vehicle on the hands-free system if the engine is running or the ignition is switched on. Depending on your mobile phone, calls are automatically switched to the hands-free system.

For mobile phones that do not switch over automatically:

- ▷ Depending on the type of mobile phone, you may be able to continue the call on the hands-free system. Follow the instructions on the mobile phone display, refer to the operating manual of the mobile phone.
- ▷  Press the button above the storage tray.

From the hands-free system to the mobile phone

When you are making a call over the hands-free system, you may be able to continue the call on the mobile phone, depending on the type of mobile phone. Follow the instructions on the mobile phone display, refer to the operating manual of the mobile phone.

Alternatively, you can deactivate the Bluetooth connection.

Depending on your type of mobile phone, poor reception of the wireless network may cause the call to switch from the hands-free system to the mobile phone.

OPERATION BY VOICE*

THE CONCEPT

You can operate your mobile phone without having to remove your hands from the steering wheel. In many cases, messages and questions will support you as you make your entries.

The same requirements apply as when operating the mobile phone on the onboard monitor, refer to page 11.

SYMBOLS IN THE OWNER'S MANUAL

-  ›...‹ Say the specified commands word for word.
-  ›)...)‹ Indicates responses by the system.

VOICE COMMANDS

Activating the system

1.  Briefly press the button on the steering wheel.
A signal tone indicates that you can now say the commands.
2. Say the command.

Deactivating the system

 Briefly press the button on the steering wheel or

 ›Quit‹.

In dialogs in which you say a text and not a command, e.g. a name, the procedure can only be quit using the button on the steering wheel.

Commands

The system understands predefined commands that must be said word for word.

Opening help

You can have the available commands read aloud for you at any time:

 ›Help‹.

Using alternative commands

There are often several commands that can be used to control the same function, e.g.:

 ›Dial name‹ or ›Name‹.

The system understands the digits zero to nine. You can save each digit individually or group them in a sequence to accelerate digit entry.

Tips on voicing commands

To operate the mobile phone using the voice control system, refer to the Owner's Manual for Vehicle.

For voice commands, bear in mind the following:


- ▷ Pronounce the commands smoothly and at normal volume, avoiding excessive emphases and pauses.
- ▷ Keep the doors, windows and glass sunroof closed to prevent interference from ambient noise.
- ▷ Avoid extraneous noise in the vehicle while speaking on the mobile phone.

Dialing a phone number – an example

Briefly press the  button on the steering wheel.

You say	Voice control responds
›Dial number‹	››Please speak the number?‹
e.g. ›555-0100‹	e.g. ››555-0100. Continue?‹
›Dial‹	››Dialing‹

ADJUSTING THE MESSAGE VOLUME

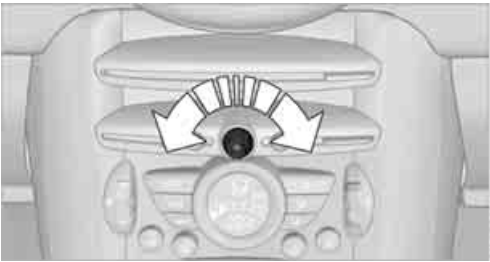

Rotate the button while a message is being voiced.

This volume will be retained for the messages even if you reduce the volume of other audio sources to a minimum level.

MAKING A CALL

Dialing a phone number

- 
- ›Dial number‹.
 - Say the phone number.
For telephone calls abroad, say ›Plus‹ and then the country code.
 - ›Dial‹.

The connection to the desired party is established.

Correcting a phone number

After the last spoken sequence of digits has been repeated by the system, you can delete this sequence of digits.

- 
- ›Correction‹.
The digit is deleted.

The ›Correction‹ command can be repeated as often as necessary.

Deleting a phone number

›Delete‹ clears all previously entered digits.

Opening phone book entries


You can automatically open the phone book entries in your mobile phone memory.

- 
- ›Select name‹.
 - Say the name when prompted by the system.
 - Confirm query with ›Yes‹.

SNAP-IN ADAPTER

INSERTING/REMOVING THE SNAP-IN ADAPTER


1. Press area **1** surrounding the button and remove the cover.

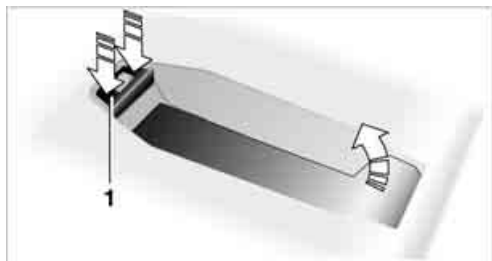

2. Insert the snap-in adapter in the front, arrow **1**, and press it downward, arrow **2**, until it engages.




3. To remove the snap-in adapter, press area **1** surrounding the button.

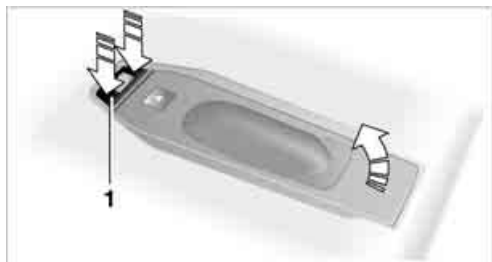

INSERTING/REMOVING THE MOBILE PHONE


1. If present, remove the protective cap of the mobile phone antenna connector so that the mobile phone can snap into place in the base plate.
2. With the buttons facing up, slide the mobile phone toward the connectors and press down until it snaps into place.

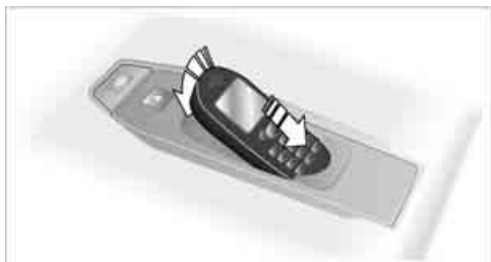

The battery will be charged when the vehicle is at least in radio readiness mode, see the charge display on the mobile phone.

To remove the mobile phone:

Press button.

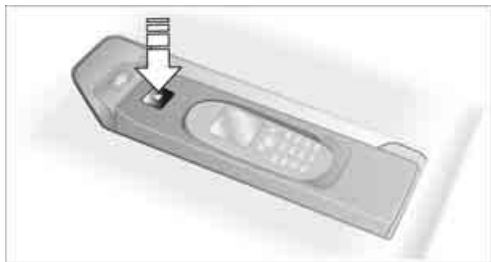

MINI CONTACT*

You can establish a voice connection to the following services with your paired mobile phone:

- ▷ Mobile Service*, if you need assistance in case of a breakdown
- ▷ Serv. Appt., to arrange a service appointment, for example
- ▷ Customer Relations*, for any information you may need on your vehicle

Onboard monitor, concept, refer to Owner's Manual for Vehicle.

1.  Press button.
The start menu opens.
2. Move the MINI joystick to highlight "Communication" and press the MINI joystick.
3. Select "MINI Contact".



4. Select "MINI Contact Numbers".
5. Select one of the following menu items:



- ▷ "Roadside Assistance"
 - ▷ "Service Request"
 - ▷ "Customer Relations"
6. Select "Call".
- Contact is established.

Establishing contact to the nearest MINI Dealer*

The navigation system can display the MINI Dealers located in your vicinity. You can call a MINI Dealer or have the dealer's address adopted as the destination in your navigation system.

1. Insert the navigation DVD if necessary.
2.  Press button.
The start menu opens.
3. Move the MINI joystick to highlight "Communication" and press the MINI joystick.
4. Select "MINI Contact".



5. Select "Nearest MINI dealer".



A list of MINI Dealers in your vicinity is displayed.

To call a MINI Dealer:

1. Select the desired MINI Dealer.
2. Select "Call".
A voice connection is established to the MINI Dealer.

To adopt a MINI Dealer as the destination in the navigation system:

1. Select the required MINI Dealer.
2. Select "Select as destination".
The MINI Dealer is selected as the destination and destination guidance is started.



01 41 0 014 827 ue Cell. Prep.

TALK TO ME.