

A  
B  
C

# SECTION **WW**

## WIPER & WASHER

### CONTENTS

|  |  |
|--|--|
| <p><b>BASIC INSPECTION</b> ..... 3</p> <p><b>DIAGNOSIS AND REPAIR WORKFLOW</b> ..... 3</p> <p style="padding-left: 20px;">Work Flow .....3</p> <p><b>FUNCTION DIAGNOSIS</b> ..... 5</p> <p><b>FRONT WIPER AND WASHER SYSTEM</b> ..... 5</p> <p style="padding-left: 20px;">System Diagram .....5</p> <p style="padding-left: 20px;">System Description .....5</p> <p style="padding-left: 20px;">Component Parts Location .....8</p> <p style="padding-left: 20px;">Component Description .....8</p> <p><b>REAR WIPER AND WASHER SYSTEM</b> .....10</p> <p style="padding-left: 20px;">System Diagram .....10</p> <p style="padding-left: 20px;">System Description .....10</p> <p style="padding-left: 20px;">Component Parts Location .....12</p> <p style="padding-left: 20px;">Component Description .....12</p> <p><b>DIAGNOSIS SYSTEM (BCM)</b> .....13</p> <p><b>COMMON ITEM</b> .....13</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM) .....13</p> <p><b>WIPER</b> .....14</p> <p style="padding-left: 20px;">WIPER : CONSULT-III Function (BCM - WIPER)... 14</p> <p><b>DIAGNOSIS SYSTEM (IPDM E/R)</b> .....16</p> <p style="padding-left: 20px;">Diagnosis Description .....16</p> <p style="padding-left: 20px;">CONSULT-III Function (IPDM E/R) .....18</p> <p><b>COMPONENT DIAGNOSIS</b> .....21</p> <p><b>WIPER AND WASHER FUSE</b> .....21</p> <p style="padding-left: 20px;">Description .....21</p> <p style="padding-left: 20px;">Diagnosis Procedure .....21</p> <p><b>POWER SUPPLY AND GROUND CIRCUIT</b> .....22</p> <p><b>BCM (BODY CONTROL MODULE)</b> .....22</p> <p style="padding-left: 20px;">BCM (BODY CONTROL MODULE) : Diagnosis Procedure .....22</p> | <p style="text-align: right;">D<br/>E<br/>F<br/>G<br/>H<br/>I<br/>J<br/>K<br/>L<br/>M<br/>N<br/>O<br/>P</p> <p><b>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</b> .....22</p> <p style="padding-left: 20px;">IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure .....22</p> <p><b>FRONT WIPER MOTOR LO CIRCUIT</b> .....24</p> <p style="padding-left: 20px;">Component Function Check .....24</p> <p style="padding-left: 20px;">Diagnosis Procedure .....24</p> <p><b>FRONT WIPER MOTOR HI CIRCUIT</b> .....26</p> <p style="padding-left: 20px;">Component Function Check .....26</p> <p style="padding-left: 20px;">Diagnosis Procedure .....26</p> <p><b>FRONT WIPER AUTO STOP SIGNAL CIRCUIT</b> .....28</p> <p style="padding-left: 20px;">Component Function Check .....28</p> <p style="padding-left: 20px;">Diagnosis Procedure .....28</p> <p><b>FRONT WIPER MOTOR GROUND CIRCUIT</b> ...30</p> <p style="padding-left: 20px;">Diagnosis Procedure .....30</p> <p><b>WASHER SWITCH</b> .....31</p> <p style="padding-left: 20px;">Description .....31</p> <p style="padding-left: 20px;">Component Inspection .....31</p> <p><b>REAR WIPER MOTOR CIRCUIT</b> .....32</p> <p style="padding-left: 20px;">Component Function Check .....32</p> <p style="padding-left: 20px;">Diagnosis Procedure .....32</p> <p><b>REAR WIPER AUTO STOP SIGNAL CIRCUIT</b> .....34</p> <p style="padding-left: 20px;">Component Function Check .....34</p> <p style="padding-left: 20px;">Diagnosis Procedure .....34</p> <p><b>FRONT WIPER AND WASHER SYSTEM</b> .....36</p> <p style="padding-left: 20px;">Wiring Diagram - FRONT WIPER AND WASHER SYSTEM - .....36</p> <p><b>REAR WIPER AND WASHER SYSTEM</b> .....40</p> <p style="padding-left: 20px;">Wiring Diagram - REAR WIPER AND WASHER SYSTEM - .....40</p> |
|--|--|



|  |        |   |     |
|--|--------|---|-----|
| <b>ECU DIAGNOSIS</b> .....   | 44     | Removal and Installation .....            | 100 |
| <b>BCM (BODY CONTROL MODULE)</b> .....   | 44     | <b>FRONT WASHER PUMP</b> .....            | 101 |
| Reference Value .....  | 44     | Exploded View .....                       | 101 |
| Wiring Diagram - BCM - .....   | 68     | Removal and Installation .....            | 101 |
| Fail-safe .....  | 74     | <b>WASHER LEVEL SWITCH</b> .....          | 102 |
| DTC Inspection Priority Chart .....  | 76     | Removal and Installation .....            | 102 |
| DTC Index .....  | 78     | <b>FRONT WASHER NOZZLE AND TUBE</b> ..... | 103 |
| <b>IPDM E/R (INTELLIGENT POWER DISTRI-<br/>BUTION MODULE ENGINE ROOM)</b> .....                          | 80     | Hydraulic Layout .....                    | 103 |
| Reference Value .....  | 80     | Removal and Installation .....            | 103 |
| Wiring Diagram - IPDM E/R - .....  | 87     | Inspection and Adjustment .....           | 103 |
| Fail-safe .....  | 90     | <b>FRONT WIPER ARM AND BLADE</b> .....    | 106 |
| DTC Index .....  | 92     | Exploded View .....                       | 106 |
| <b>SYMPTOM DIAGNOSIS</b> .....   | 93     | Removal and Installation .....            | 106 |
| <b>WIPER AND WASHER SYSTEM SYMPTOMS</b>  | ... 93 | Adjustment .....                          | 106 |
| Symptom Table .....  | 93     | Replacement .....                         | 107 |
| <b>NORMAL OPERATING CONDITION</b> .....  | 96     | <b>FRONT WIPER DRIVE ASSEMBLY</b> .....   | 108 |
| Description .....  | 96     | Exploded View .....                       | 108 |
| <b>FRONT WIPER DOES NOT OPERATE</b> .....  | 97     | Removal and Installation .....            | 108 |
| Description .....  | 97     | Disassembly and Assembly .....            | 109 |
| Diagnosis Procedure .....  | 97     | <b>WIPER AND WASHER SWITCH</b> .....      | 110 |
| <b>PRECAUTION</b> .....  | 99     | Exploded View .....                       | 110 |
| <b>PRECAUTIONS</b> .....   | 99     | <b>REAR WIPER ARM</b> .....               | 111 |
| Precaution for Supplemental Restraint System<br>(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-<br>SIONER" ..... | 99     | Exploded View .....                       | 111 |
| Precaution for Procedure without Cowl Top Cover..  | 99     | Removal and Installation .....            | 111 |
| <b>ON-VEHICLE REPAIR</b> .....   | 100    | Adjustment .....                          | 111 |
| <b>WASHER TANK</b> .....   | 100    | <b>REAR WIPER MOTOR</b> .....             | 113 |
| Exploded View .....  | 100    | Exploded View .....                       | 113 |
|  |        | Removal and Installation .....            | 113 |
|  |        | <b>REAR WASHER NOZZLE AND TUBE</b> .....  | 114 |
|  |        | Hydraulic Layout .....                    | 114 |
|  |        | Removal and Installation .....            | 114 |
|  |        | Inspection and Adjustment .....           | 115 |

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000003138972

#### OVERALL SEQUENCE

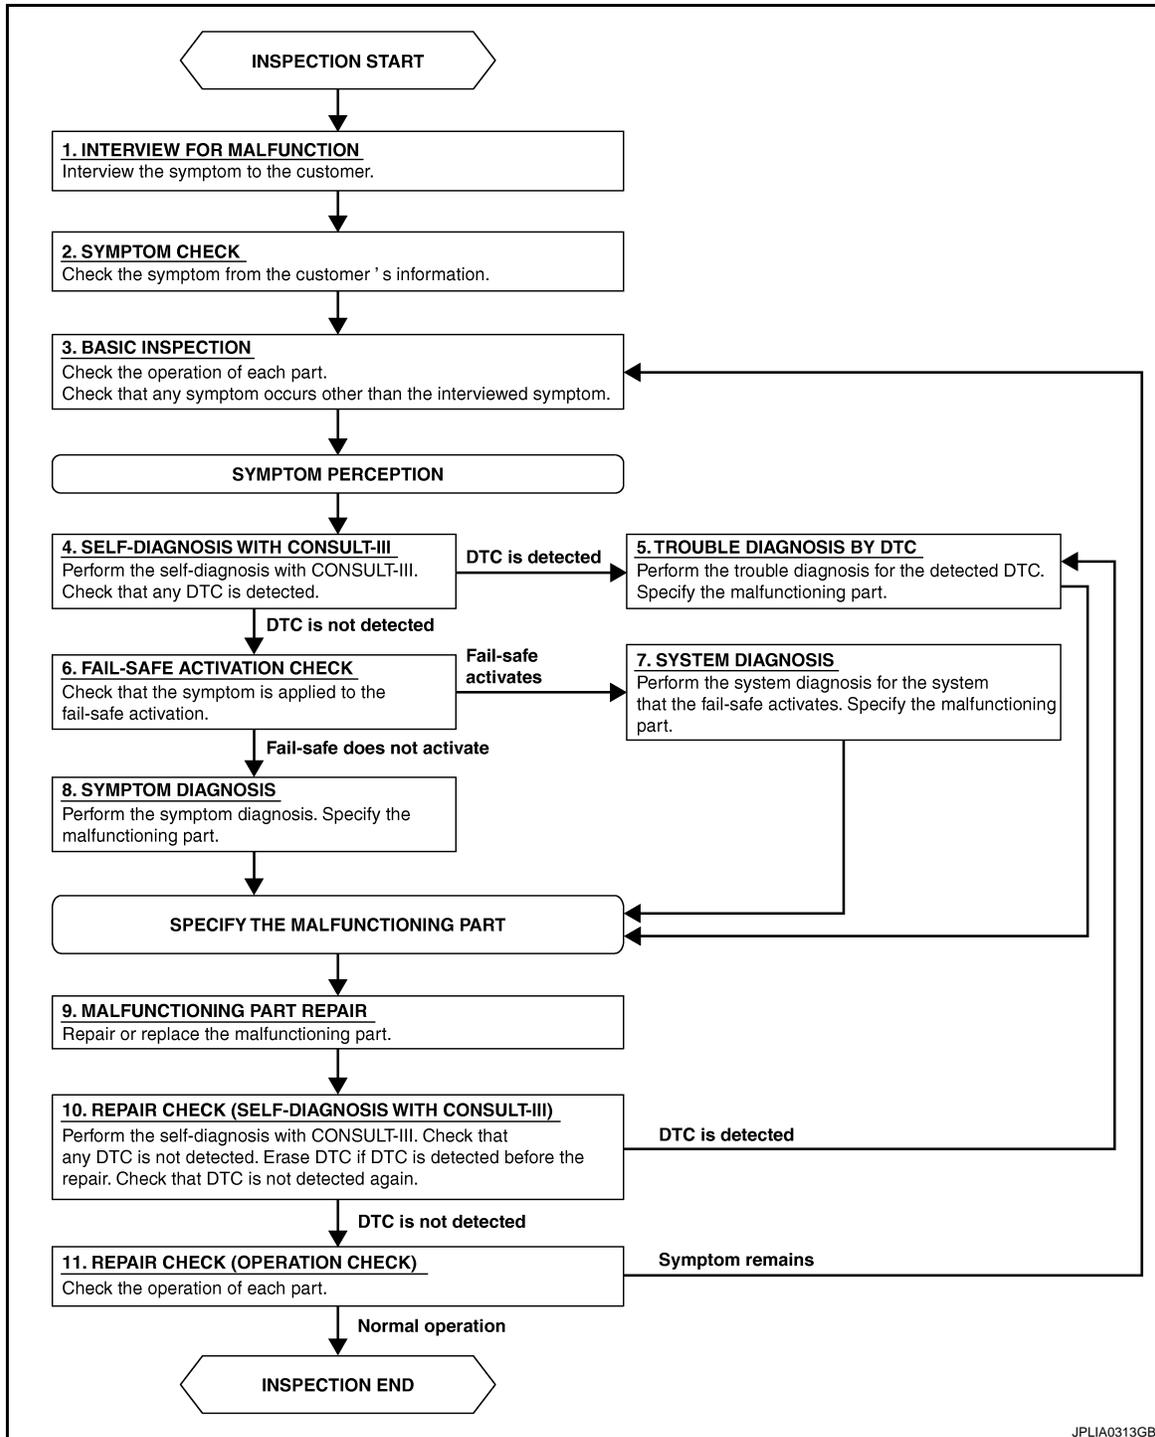

#### DETAILED FLOW

##### 1. INTERVIEW FOR MALFUNCTION

Interview the symptom to the customer.

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

---

>> GO TO 2.

## 2. SYMPTOM CHECK

---

Check the symptom from the customer's information.

>> GO TO 3.

## 3. BASIC INSPECTION

---

Check the operation of each part. Check that any symptom occurs other than the interviewed symptom.

>> GO TO 4.

## 4. SELF-DIAGNOSIS WITH CONSULT-III

---

Perform the self-diagnosis with CONSULT-III. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 6.

## 5. TROUBLE DIAGNOSIS BY DTC

---

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 9.

## 6. FAIL-SAFE ACTIVATION CHECK

---

Check that the symptom is applied to the fail-safe activation.

Does the fail-safe activate?

YES >> GO TO 7.

NO >> GO TO 8.

## 7. SYSTEM DIAGNOSIS

---

Perform the system diagnosis for the system that the fail-safe activates. Specify the malfunctioning part.

>> GO TO 9.

## 8. SYMPTOM DIAGNOSIS

---

Perform the symptom diagnosis. Specify the malfunctioning part.

>> GO TO 9.

## 9. MALFUNCTION PART REPAIR

---

Repair or replace the malfunctioning part.

>> GO TO 10.

## 10. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT-III)

---

Perform the self-diagnosis with CONSULT-III. Check that any DTC is not detected. Erase DTC if DTC is detected before the repair. Check that DTC is not detected again.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 11.

## 11. REPAIR CHECK (OPERATION CHECK)

---

Check the operation of each part.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 3.


# FRONT WIPER AND WASHER SYSTEM

< FUNCTION DIAGNOSIS >

## FUNCTION DIAGNOSIS

### FRONT WIPER AND WASHER SYSTEM

#### System Diagram

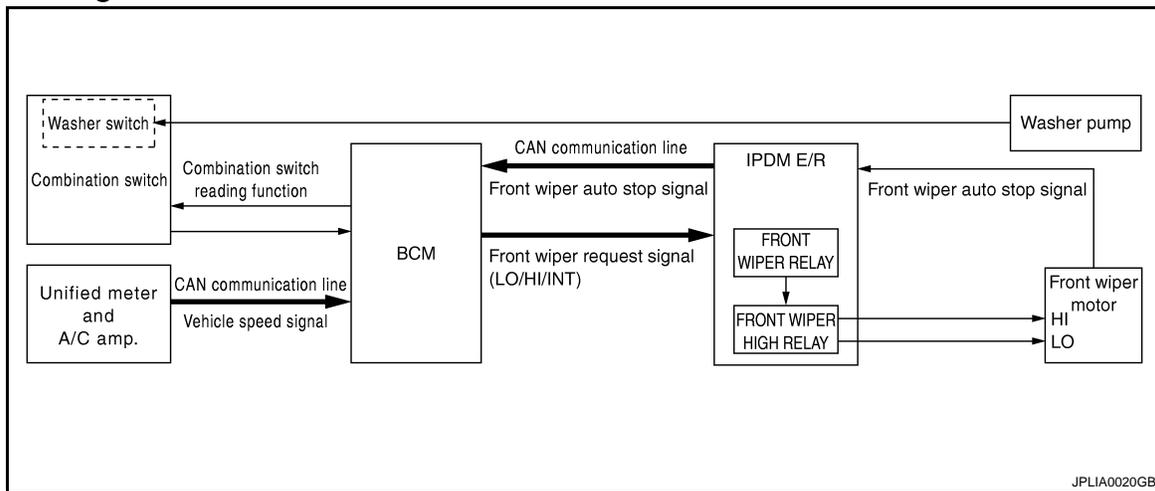

#### System Description

INFOID:000000003591517

#### OUTLINE

The front wiper is controlled by each function of BCM and IPDM E/R.

##### Control by BCM

- Combination switch reading function
- Front wiper control function

##### Control by IPDM E/R

- Front wiper control function
- Relay control function

#### FRONT WIPER BASIC OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the front wiper request signal to IPDM E/R with CAN communication depending on each operating condition of the front wiper.
- IPDM E/R turns ON/OFF the integrated front wiper relay and the front wiper high relay according to the front wiper request signal. IPDM E/R provides the power supply to operate the front wiper HI/LO operation.

#### FRONT WIPER LO OPERATION

- BCM transmits the front wiper request signal (LO) to IPDM E/R with CAN communication according to the front wiper LO operating condition.

##### Front wiper LO operating condition

- Ignition switch ON
- Front wiper switch LO or front wiper switch MIST (while pressing)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).

#### FRONT WIPER HI OPERATION

- BCM transmits the front wiper request signal (HI) to IPDM E/R with CAN communication according to the front wiper HI operating condition.

##### Front wiper HI operating condition

- Ignition switch ON
- Front wiper switch HI
- IPDM E/R turns ON the integrated front wiper relay and the front wiper high relay according to the front wiper request signal (HI).

#### FRONT WIPER INT OPERATION


# FRONT WIPER AND WASHER SYSTEM

## < FUNCTION DIAGNOSIS >

- BCM transmits the front wiper request signal (INT) to IPDM E/R with CAN communication depending on the front wiper INT operating condition and intermittent operation delay interval according to the wiper intermittent dial position.

Front wiper INT operating condition

- Ignition switch ON
- Front wiper switch INT
- IPDM E/R turns ON the integrated front wiper relay so that the front wiper is operated only once according to the front wiper request signal (INT).
- BCM detects stop position/except stop position of the front wiper motor according to the front wiper auto stop signal received from IPDM E/R with CAN communication.
- BCM transmits the front wiper request signal (INT) again after the intermittent operation delay interval.

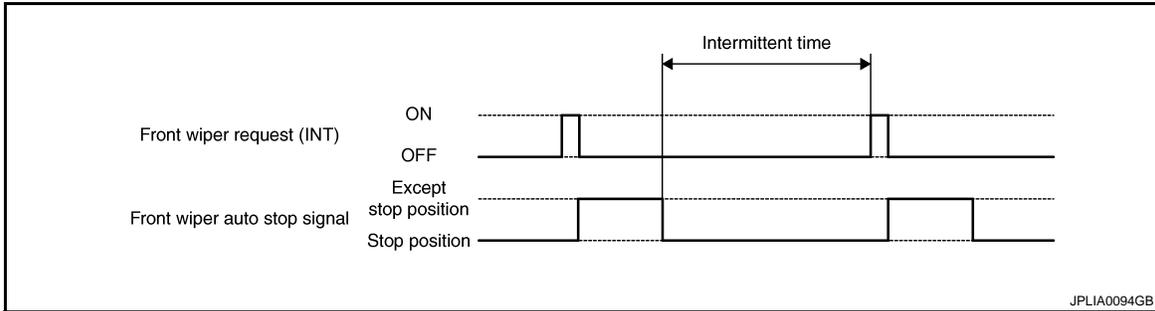

### NOTE:

Factory setting of the front wiper intermittent operation is the operation without vehicle speed. Front wiper intermittent operation can be set to the operation with vehicle speed by CONSULT-III. Refer to [WW-14, "WIPER : CONSULT-III Function \(BCM - WIPER\)"](#).

Front wiper intermittent operation with vehicle speed

- BCM calculates the intermittent operation delay interval from the following
  - Vehicle speed signal (received from the unified meter and A/C amp. with CAN communication)
  - Wiper intermittent dial position

| Wiper intermittent dial position | Intermittent operation interval | Intermittent operation delay Interval (s)     |  |  |                           |
|----------------------------------|---------------------------------|---|--|--|---------------------------|
|                                  |                                 | Vehicle speed                                 |  |  |                           |
|                                  |                                 | Vehicle stopped or less than 5 km/h (3.1 MPH) | 5 km/h (3.1MPH) or more or less than 35km/h (21.7 MPH) | 35 km/h (21.7 MPH) or more or less than 65km/h (40.4 MPH)* | 65 km/h (40.4MPH) or more |
| 1                                | Short<br>↑                      | 0.8   | 0.6  | 0.4  | 0.24                      |
| 2                                |                                 | 4   | 3  | 2  | 1.2                       |
| 3                                |                                 | 10  | 7.5  | 5  | 3                         |
| 4                                |                                 | 16  | 12   | 8  | 4.8                       |
| 5                                |                                 | 24  | 18   | 12   | 7.2                       |
| 6                                | ↓<br>Long                       | 32  | 24   | 16   | 9.6                       |
| 7                                |                                 | 42  | 31.5   | 21   | 12.6                      |

\*: When without vehicle speed setting


### FRONT WIPER AUTO STOP OPERATION

- BCM stops transmitting the front wiper request signal when the front wiper switch is turned OFF.
- IPDM E/R detects the front wiper auto stop signal from the front wiper motor and detects the front wiper motor position (stop position/except stop position).

# FRONT WIPER AND WASHER SYSTEM

## < FUNCTION DIAGNOSIS >

- When the front wiper request signal is stopped, IPDM E/R turns ON the front wiper relay until the front wiper motor returns to the stop position.

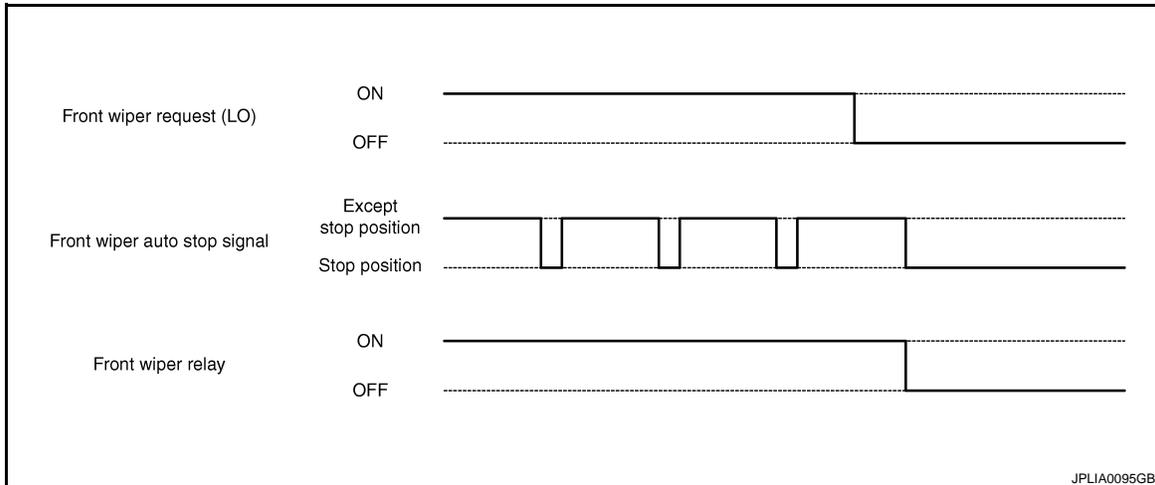

### NOTE:

- BCM stops the transmitting of the front wiper request signal when the ignition switch OFF.
- IPDM E/R turns the front wiper relay OFF when the ignition switch OFF.

### FRONT WIPER OPERATION LINKED WITH WASHER

- BCM transmits the front wiper request signal (LO) to IPDM E/R with CAN communication according to the washer linked operating condition of the front wiper.
- BCM transmits the front wiper request signal (LO) so that the front wiper operates approximately 2 times when the front washer switch OFF is detected.

Washer linked operating condition of front wiper

- Ignition switch ON
- Front washer switch ON (0.4 second or more)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).
- The washer pump is grounded through the combination switch when the front washer switch ON.

### FRONT WIPER FAIL-SAFE OPERATION

When the front wiper auto stop circuit is malfunctioning, IPDM E/R performs the fail-safe function. Refer to [PCS-30. "Fail-safe"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K


WW

# FRONT WIPER AND WASHER SYSTEM

< FUNCTION DIAGNOSIS >

## Component Parts Location

INFOID:000000003591476

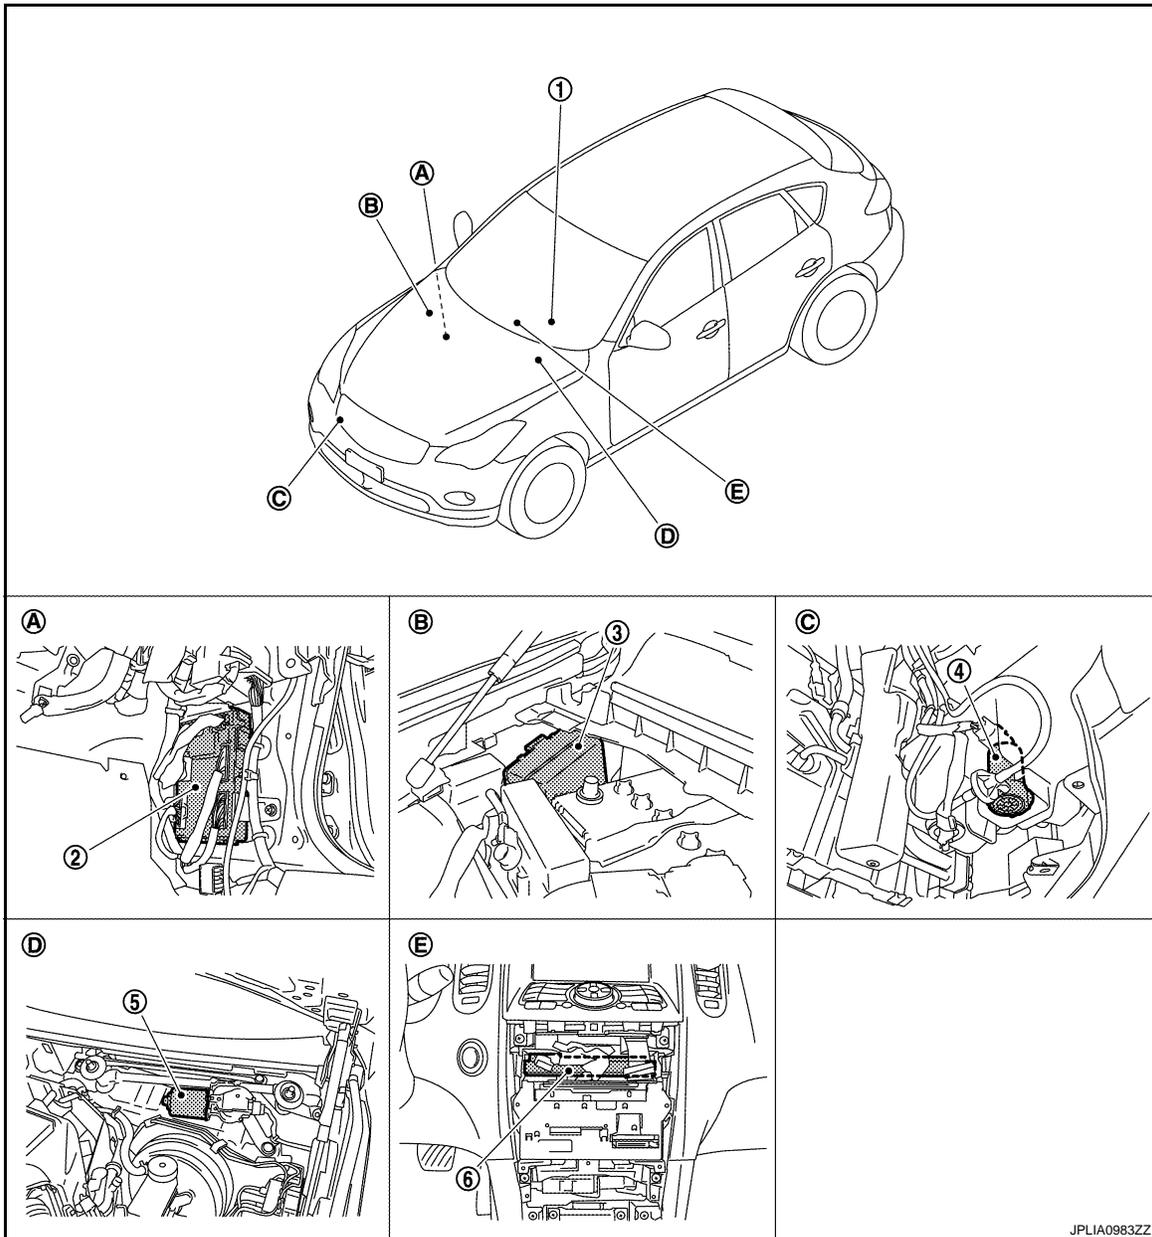

- |                                       |                                |                               |
|---------------------------------------|--------------------------------|-------------------------------|
| 1. Combination switch                 | 2. BCM                         | 3. IPDM E/R                   |
| 4. Washer pump                        | 5. Front wiper motor           | 6. Unified meter and A/C amp. |
| A. Dash side lower (Passenger side)   | B. Engine room dash panel (RH) | C. Radiator core support (RH) |
| D. Cowl top, left side of engine room | E. Behind cluster lid C        |                               |

## Component Description

INFOID:000000003591519

| Part     | Description   |
|----------|---|
| BCM      | <ul style="list-style-type: none"> <li>Judges the each switch status by the combination switch reading function.</li> <li>Requests (with CAN communication) the front wiper relay and the front wiper high relay ON to IPDM E/R.</li> </ul> |
| IPDM E/R | <ul style="list-style-type: none"> <li>Controls the integrated relay according to the request (with CAN communication) from BCM.</li> <li>Performs the auto stop control of the front wiper.</li> </ul>                                     |

# FRONT WIPER AND WASHER SYSTEM

## < FUNCTION DIAGNOSIS >

| Part  | Description   |
|---|---|
| Combination switch<br>(Wiper & washer switch) | Refer to <a href="#">BCS-8, "System Description"</a> .            |
| Unified meter and A/C amp.                    | Transmits the vehicle speed signal to BCM with CAN communication. |

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O


P



# REAR WIPER AND WASHER SYSTEM

## < FUNCTION DIAGNOSIS >

- BCM reads an auto stop signal from the rear wiper motor to detect a rear wiper motor position.
- When the rear wiper motor is at other than the stopping position, BCM continues to supply power to the rear wiper motor until it returns to the stopping position.

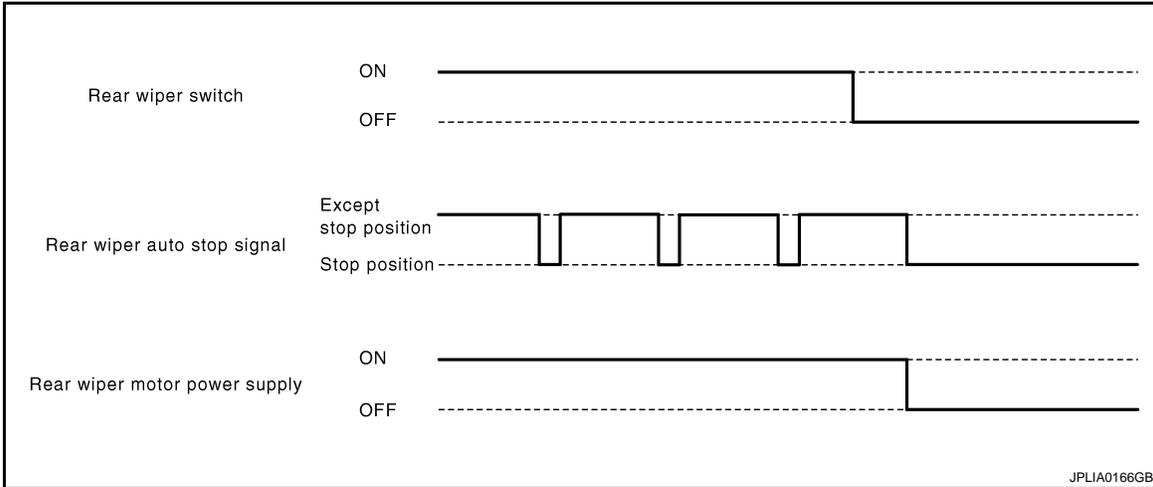

### NOTE:

BCM stops supplying power to the rear wiper motor when the ignition switch is turned OFF.

### REAR WIPER OPERATION LINKED WITH WASHER

- BCM supplies power to the rear wiper motor according to the washer linked operating condition of rear wiper. When the rear washer switch is turned OFF, BCM controls rear wiper to operate approximately 3 times.

Washer linked operating condition of rear wiper

- Ignition switch ON
- Rear washer switch ON (0.4 second or more)
- The washer pump is grounded through the combination switch with the rear washer switch ON.

### REAR WIPER FAIL-SAFE OPERATION

BCM performs the fail-safe function when the rear wiper auto stop circuit is malfunctioning. Refer to [BCS-76](#). "[Fail-safe](#)".

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K

WW


M  
N  
O  
P

# REAR WIPER AND WASHER SYSTEM

< FUNCTION DIAGNOSIS >

## Component Parts Location

INFOID:000000003591487

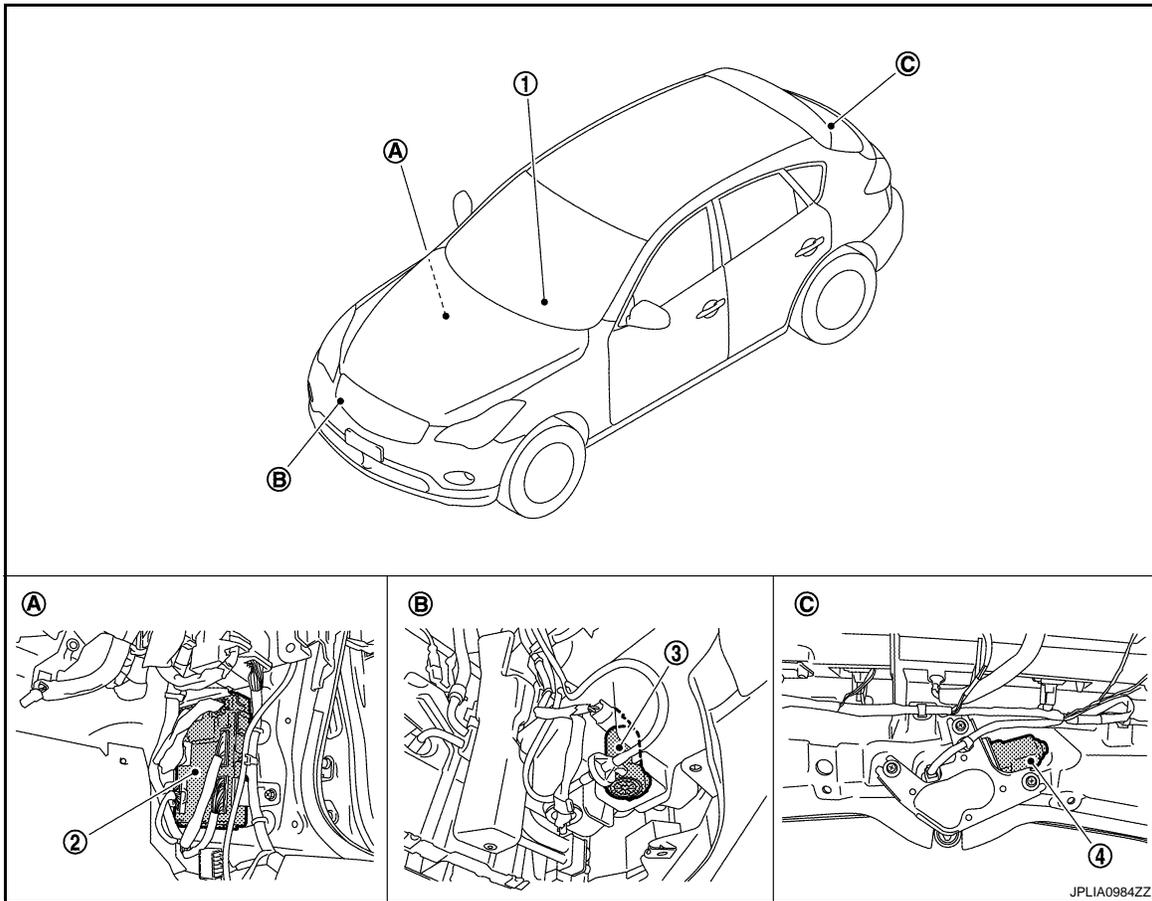

- |                       |   |                               |
|-----------------------|---|-------------------------------|
| 1. Combination switch | 2. BCM                                  | 3. Washer pump                |
| 4. Rear wiper motor   | A. Dash side lower (Passenger side)     | B. Radiator core support (RH) |
|                       | C. Back door trim finisher lower inside |                               |

## Component Description

INFOID:000000003591488

| Part  | Description   |
|---|---|
| BCM   | <ul style="list-style-type: none"> <li>Judges each switch status by the combination switch reading function.</li> <li>Supplies power to the rear wiper motor.</li> <li>Performs the auto stop control of the rear wiper.</li> </ul> |
| Combination switch<br>(Wiper & washer switch) | Refer to <a href="#">BCS-8, "System Diagram"</a> .  |

# DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

### COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000003769969

### APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

| Diagnosis mode           | Function Description  |
|--------------------------|---|
| Work Support             | Changes the setting for each system function.   |
| Self Diagnostic Result   | Displays the diagnosis results judged by BCM.   |
| CAN Diag Support Monitor | Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual.  |
| Data Monitor             | The BCM input/output signals are displayed.   |
| Active Test              | The signals used to activate each device are forcibly supplied from BCM.  |
| Ecu Identification       | The BCM part number is displayed.   |
| Configuration            | <ul style="list-style-type: none"> <li>• Read and save the vehicle specification.</li> <li>• Write the vehicle specification when replacing BCM.</li> </ul> |

### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

x: Applicable item

| System  | Sub system selection item   | Diagnosis mode |              |             |
|---|-----------------------------|----------------|--------------|-------------|
|   |                             | Work Support   | Data Monitor | Active Test |
| Door lock   | DOOR LOCK                   | x              | x            | x           |
| Rear window defogger  | REAR DEFOGGER               |                | x            | x           |
| Warning chime   | BUZZER                      |                | x            | x           |
| Interior room lamp timer  | INT LAMP                    | x              | x            | x           |
| Exterior lamp   | HEAD LAMP                   | x              | x            | x           |
| Wiper and washer  | WIPER                       |                | x            | x           |
| Turn signal and hazard warning lamps  | FLASHER                     | x              | x            | x           |
| —   | AIR CONDITONER*             |                |              |             |
| <ul style="list-style-type: none"> <li>• Intelligent Key system</li> <li>• Engine start system</li> </ul> | INTELLIGENT KEY             | x              | x            | x           |
| Combination switch  | COMB SW                     |                | x            |             |
| Body control system   | BCM                         | x              |              |             |
| IVIS - NATS   | IMMU                        |                | x            | x           |
| Interior room lamp battery saver  | BATTERY SAVER               | x              | x            | x           |
| —   | TRUNK*                      |                | x            | x           |
| Vehicle security system   | THEFT ALM                   | x              | x            | x           |
| RAP system  | RETAINED PWR                |                | x            |             |
| Signal buffer system  | SIGNAL BUFFER               |                | x            | x           |
| TPMS  | TPMS (AIR PRESSURE MONITOR) | x              | x            | x           |

#### NOTE:

\*: This item is displayed, but is not used.

### FREEZE FRAME DATA (FFD) AND IGN COUNTER

#### Freeze Frame Data

# DIAGNOSIS SYSTEM (BCM)

## < FUNCTION DIAGNOSIS >

The BCM records the following condition at the moment a particular DTC is detected.

- Vehicle Speed
- Odd Trip Meter
- Vehicle Condition (BCM detected condition)

| CONSULT screen terms | Description  |
|----------------------|--|
| SLEEP>LOCK           | While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK")              |
| SLEEP>OFF            | While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)              |
| LOCK>ACC             | While turning power supply position from "LOCK" to "ACC"   |
| ACC>ON               | While turning power supply position from "ACC" to "IGN"  |
| RUN>ACC              | While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.) |
| CRANK>RUN            | While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)                   |
| RUN>URGENT           | While turning power supply position from "RUN" to "ACC" (Emergency stop operation)                                     |
| ACC>OFF              | While turning power supply position from "ACC" to "OFF"  |
| OFF>LOCK             | While turning power supply position from "OFF" to "LOCK"   |
| OFF>ACC              | While turning power supply position from "OFF" to "ACC"  |
| ON>CRANK             | While turning power supply position from "IGN" to "CRANKING"   |
| OFF>SLEEP            | While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode              |
| LOCK>SLEEP           | While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode             |
| LOCK                 | Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)   |
| OFF                  | Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)  |
| ACC                  | Power supply position is "ACC" (Ignition switch ACC)   |
| ON                   | Power supply position is "IGN" (Ignition switch ON with engine stopped)  |
| ENGINE RUN           | Power supply position is "RUN" (Ignition switch ON with engine running)  |
| CRANKING             | Power supply position is "CRANKING" (At engine cranking)   |

### IGN Counter

IGN counter indicates the number of times that ignition switch is turned ON after DTC is detected.

- The number is 0 when a malfunction is detected now.
- The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

### WIPER

### WIPER : CONSULT-III Function (BCM - WIPER)

INFOID:000000003591501

### WORK SUPPORT

| Service item        | Setting item | Description  |
|---------------------|--------------|--|
| WIPER SPEED SETTING | On           | With vehicle speed<br>(Front wiper intermittent time linked with the vehicle speed and wiper intermittent dial position) |
|                     | Off*         | Without vehicle speed<br>(Front wiper intermittent time linked with the wiper intermittent dial position)                |

\*:Factory setting

### DATA MONITOR

# DIAGNOSIS SYSTEM (BCM)

## < FUNCTION DIAGNOSIS >

| Monitor Item<br>[Unit]    | Description  |
|---------------------------|--|
| PUSH SW<br>[Off/On]       | The switch status input from push-button ignition switch.  |
| VEHICLE SPEED 1<br>[km/h] | The value of the vehicle speed signal received from unified meter and A/C amp. with CAN communication. |
| FR WIPER HI<br>[Off/On]   | Each switch status that BCM judges from the combination switch reading function.                       |
| FR WIPER LOW<br>[Off/On]  |  |
| FR WASHER SW<br>[Off/On]  |  |
| FR WIPER INT<br>[Off/On]  |  |
| FR WIPER STOP<br>[Off/On] | Front wiper motor (stop position) status received from IPDM E/R with CAN communication.                |
| INT VOLUME<br>[1 – 7]     | Each switch status that BCM judges from the combination switch reading function.                       |
| RR WIPER ON<br>[Off/On]   | Each switch status that BCM judges from the combination switch reading function.                       |
| RR WIPER INT<br>[Off/On]  |  |
| RR WASHER SW<br>[Off/On]  |  |
| RR WIPER STOP<br>[Off/On] | Rear wiper motor (stop position) status input from the rear wiper motor.                               |

## ACTIVE TEST

| Test item | Operation | Description   |
|-----------|-----------|---|
| FR WIPER  | Hi        | Transmits the front wiper request signal (HI) to IPDM E/R with CAN communication to operate the front wiper HI operation.   |
|           | Lo        | Transmits the front wiper request signal (LO) to IPDM E/R with CAN communication to operate the front wiper LO operation.   |
|           | INT       | Transmits the front wiper request signal (INT) to IPDM E/R with CAN communication to operate the front wiper INT operation. |
|           | Off       | Stops transmitting the front wiper request signal to stop the front wiper operation.  |
| RR WIPER  | On        | Outputs the voltage to operate the rear wiper motor.  |
|           | Off       | Stops the voltage to stop.  |

# DIAGNOSIS SYSTEM (IPDM E/R)

< FUNCTION DIAGNOSIS >

## DIAGNOSIS SYSTEM (IPDM E/R)

### Diagnosis Description

INFOID:000000003769970

### AUTO ACTIVE TEST

#### Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Front wiper (LO, HI)
- Parking lamps
- License plate lamps
- Side marker lamps
- Tail lamps
- Front fog lamps
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan (cooling fan control module)

#### Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)

**NOTE:**

When auto active test is performed with hood opened, sprinkle water on windshield beforehand.

2. Turn ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the ignition switch OFF.

**CAUTION:**

**Close passenger door.**

4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. The oil pressure warning lamp starts blinking when the auto active test starts.
6. After a series of the following operations is repeated 3 times, auto active test is completed.

**NOTE:**


When auto active test mode has to be cancelled halfway through test, turn ignition switch OFF.

**CAUTION:**

- If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-63, "Component Function Check"](#).
- Do not start the engine.

#### Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 5 steps are repeated 3 times.

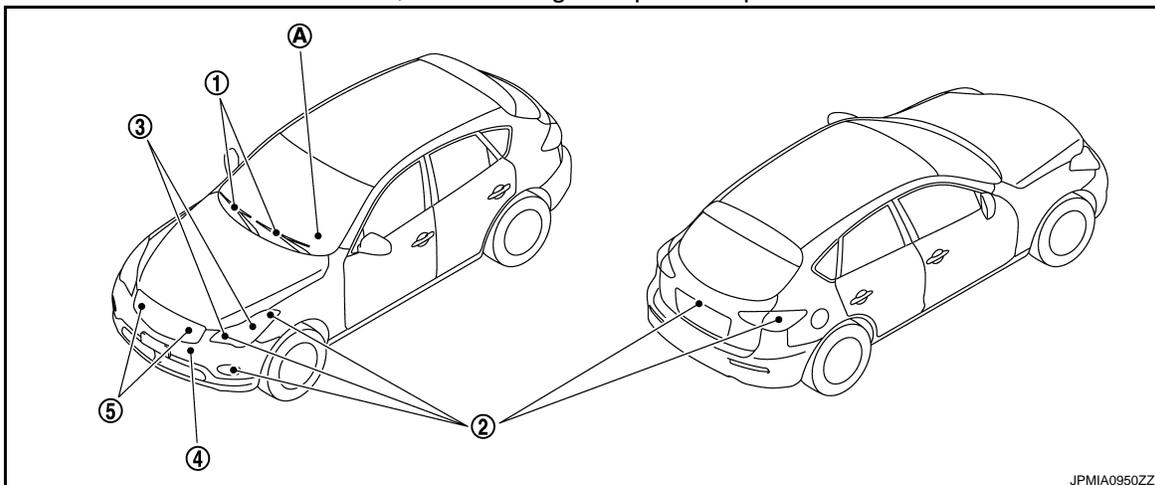


# DIAGNOSIS SYSTEM (IPDM E/R)

## < FUNCTION DIAGNOSIS >

| Operation sequence | Inspection location   | Operation  |
|--------------------|---|--|
| A                  | Oil pressure warning lamp   | Blinks continuously during operation of auto active test   |
| 1                  | Front wiper   | LO for 5 seconds → HI for 5 seconds  |
| 2                  | <ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• License plate lamps</li> <li>• Side maker lamps</li> <li>• Tail lamps</li> <li>• Front fog lamps</li> </ul> | 10 seconds   |
| 3                  | Headlamps   | <ul style="list-style-type: none"> <li>• LO 10 seconds</li> <li>• HI ON ⇔ OFF 5 times</li> </ul> |
| 4                  | A/C compressor (magnet clutch)  | ON ⇔ OFF 5 times   |
| 5*                 | Cooling fan   | MID for 5 seconds → HI for 5 seconds   |

\*: Outputs duty ratio of 50% for 5 seconds → duty ratio of 100% for 5 seconds on the cooling fan control module.

### Concept of auto active test

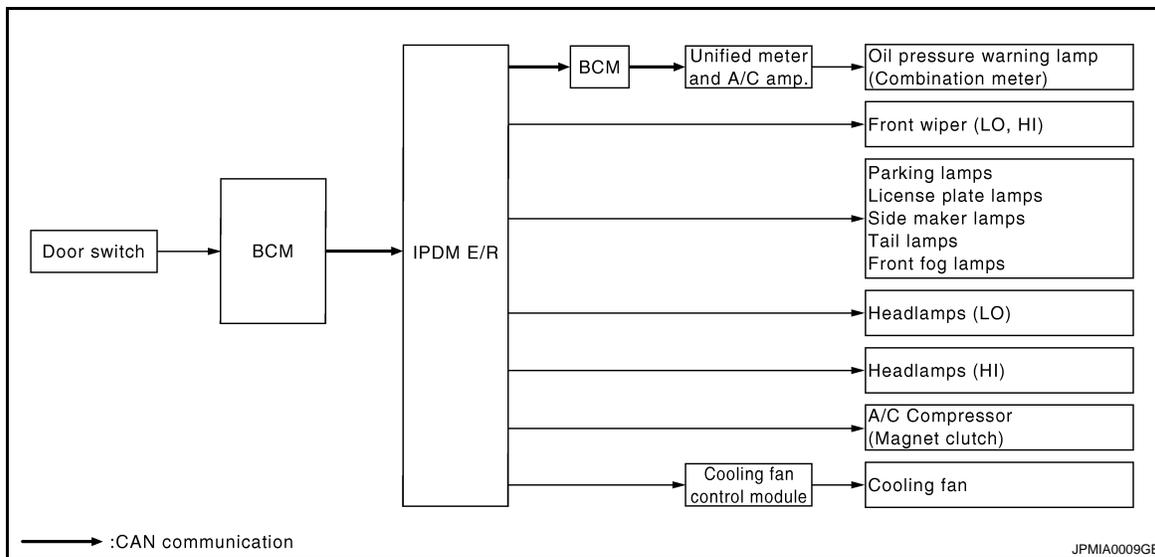

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

### Diagnosis chart in auto active test mode

| Symptom  | Inspection contents  | Possible cause  |
|--|--|---|
| Any of the following components do not operate <ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• License plate lamps</li> <li>• Side maker lamps</li> <li>• Tail lamps</li> <li>• Front fog lamps</li> <li>• Headlamp (HI, LO)</li> <li>• Front wiper</li> </ul> | Perform auto active test.<br>Does the applicable system operate? | YES<br>BCM signal input circuit   |
|  |  | NO <ul style="list-style-type: none"> <li>• Lamp or motor</li> <li>• Lamp or motor ground circuit</li> <li>• Harness or connector between IPDM E/R and applicable system</li> <li>• IPDM E/R</li> </ul> |

## DIAGNOSIS SYSTEM (IPDM E/R)

### < FUNCTION DIAGNOSIS >

| Symptom                                    | Inspection contents  | Possible cause  |
|--|--|---|
| A/C compressor does not operate            | Perform auto active test.<br>Does the magnet clutch operate?           | YES <ul style="list-style-type: none"> <li>• Unified meter and A/C amp. signal input circuit</li> <li>• CAN communication signal between unified meter and A/C amp. and ECM</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul>   |
|  |  | NO <ul style="list-style-type: none"> <li>• Magnet clutch</li> <li>• Harness or connector between IPDM E/R and magnet clutch</li> <li>• IPDM E/R</li> </ul>   |
| Oil pressure warning lamp does not operate | Perform auto active test.<br>Does the oil pressure warning lamp blink? | YES <ul style="list-style-type: none"> <li>• Harness or connector between IPDM E/R and oil pressure switch</li> <li>• Oil pressure switch</li> <li>• IPDM E/R</li> </ul>  |
|  |  | NO <ul style="list-style-type: none"> <li>• CAN communication signal between IPDM E/R and BCM</li> <li>• CAN communication signal between BCM and unified meter and A/C amp.</li> <li>• Combination meter</li> </ul>  |
| Cooling fan does not operate               | Perform auto active test.<br>Does the cooling fan operate?             | YES <ul style="list-style-type: none"> <li>• ECM signal input circuit</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul>   |
|  |  | NO <ul style="list-style-type: none"> <li>• Cooling fan</li> <li>• Harness or connector between cooling fan and cooling fan control module</li> <li>• Cooling fan control module</li> <li>• Harness or connector between IPDM E/R and cooling fan control module</li> <li>• Cooling fan relay</li> <li>• Harness or connector between IPDM E/R and cooling fan relay</li> <li>• IPDM E/R</li> </ul> |

### CONSULT-III Function (IPDM E/R)

INFOID:000000003769971

#### APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with IPDM E/R.

| Diagnosis mode           | Description   |
|--------------------------|---|
| Ecu Identification       | Allows confirmation of IPDM E/R part number.  |
| Self Diagnostic Result   | Displays the diagnosis results judged by IPDM E/R.                                      |
| Data Monitor             | Displays the real-time input/output data from IPDM E/R input/output data.               |
| Active Test              | IPDM E/R can provide a drive signal to electronic components to check their operations. |
| CAN Diag Support Monitor | The results of transmit/receive diagnosis of CAN communication can be read.             |

#### SELF DIAGNOSTIC RESULT

Refer to [WW-92. "DTC Index"](#).

#### DATA MONITOR

## DIAGNOSIS SYSTEM (IPDM E/R)

### < FUNCTION DIAGNOSIS >

#### Monitor item

| Monitor Item<br>[Unit]               | MAIN SIG-<br>NALS | Description   |
|--------------------------------------|-------------------|---|
| RAD FAN REQ<br>[%]                   | ×                 | Displays the value of the cooling fan speed signal received from ECM via CAN communication.           |
| AC COMP REQ<br>[Off/On]              | ×                 | Displays the status of the A/C compressor request signal received from ECM via CAN communication.     |
| TAIL&CLR REQ<br>[Off/On]             | ×                 | Displays the status of the position light request signal received from BCM via CAN communication.     |
| HL LO REQ<br>[Off/On]                | ×                 | Displays the status of the low beam request signal received from BCM via CAN communication.           |
| HL HI REQ<br>[Off/On]                | ×                 | Displays the status of the high beam request signal received from BCM via CAN communication.          |
| FR FOG REQ<br>[Off/On]               | ×                 | Displays the status of the front fog light request signal received from BCM via CAN communication.    |
| FR WIP REQ<br>[Stop/1LOW/Low/Hi]     | ×                 | Displays the status of the front wiper request signal received from BCM via CAN communication.        |
| WIP AUTO STOP<br>[STOP P/ACT P]      | ×                 | Displays the status of the front wiper auto stop signal judged by IPDM E/R.                           |
| WIP PROT<br>[Off/BLOCK]              | ×                 | Displays the status of the front wiper fail-safe operation judged by IPDM E/R.                        |
| IGN RLY1 -REQ<br>[Off/On]            |                   | Displays the status of the ignition switch ON signal received from BCM via CAN communication.         |
| IGN RLY<br>[Off/On]                  | ×                 | Displays the status of the ignition relay judged by IPDM E/R.   |
| PUSH SW<br>[Off/On]                  |                   | Displays the status of the push-button ignition switch judged by IPDM E/R.                            |
| INTER/NP SW<br>[Off/On]              |                   | Displays the status of the shift position judged by IPDM E/R.   |
| ST RLY CONT<br>[Off/On]              |                   | Displays the status of the starter relay status signal received from BCM via CAN communication.       |
| IHBT RLY -REQ<br>[Off/On]            |                   | Displays the status of the starter control relay signal received from BCM via CAN communication.      |
| ST/INHI RLY<br>[Off/ ST /INHI/UNKWN] |                   | Displays the status of the starter relay and starter control relay judged by IPDM E/R.                |
| DETENT SW<br>[Off/On]                |                   | Displays the status of the control device (detention switch) judged by IPDM E/R.                      |
| S/L RLY -REQ<br>[Off/On]             |                   | Displays the status of the steering lock relay request received from BCM via CAN communication.       |
| S/L STATE<br>[LOCK/UNLOCK/UNKWN]     |                   | Displays the status of the steering lock judged by IPDM E/R.  |
| DTRL REQ<br>[Off]                    |                   | <b>NOTE:</b><br>The item is indicated, but not monitored.   |
| OIL P SW<br>[Open/Close]             |                   | Displays the status of the oil pressure switch judged by IPDM E/R.                                    |
| HOOD SW<br>[Off/On]                  |                   | Displays the status of the hood switch judged by IPDM E/R.  |
| HL WASHER REQ<br>[Off]               |                   | <b>NOTE:</b><br>The item is indicated, but not monitored.   |
| THFT HRN REQ<br>[Off/On]             |                   | Displays the status of the theft warning horn request signal received from BCM via CAN communication. |

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

## DIAGNOSIS SYSTEM (IPDM E/R)

### < FUNCTION DIAGNOSIS >

| Monitor Item<br>[Unit]  | MAIN SIG-<br>NALS | Description  |
|-------------------------|-------------------|--|
| HORN CHIRP<br>[Off/On]  |                   | Displays the status of the horn reminder signal received from BCM via CAN communication. |
| CRNRNG LMP REQ<br>[Off] |                   | <b>NOTE:</b><br>The item is indicated, but not monitored.                                |

### ACTIVE TEST

#### Test item

| Test item        | Operation | Description   |
|------------------|-----------|---|
| CORNERING LAMP   | Off       | <b>NOTE:</b><br>The item is indicated, but cannot be tested.                              |
|                  | LH        |   |
|                  | RH        |   |
| HORN             | On        | Operates horn relay 1 and horn relay 2 for 20 ms.   |
| FRONT WIPER      | Off       | OFF   |
|                  | Lo        | Operates the front wiper relay.   |
|                  | Hi        | Operates the front wiper relay and front wiper high relay.                                |
| MOTOR FAN        | 1         | OFF   |
|                  | 2         | Outputs 50% pulse duty signal (PWM signal) to the cooling fan control module.             |
|                  | 3         | Outputs 80% pulse duty signal (PWM signal) to the cooling fan control module.             |
|                  | 4         | Outputs 100% pulse duty signal (PWM signal) to the cooling fan control module.            |
| HEAD LAMP WASHER | On        | <b>NOTE:</b><br>The item is indicated, but cannot be tested.                              |
| EXTERNAL LAMPS   | Off       | OFF   |
|                  | TAIL      | Operates the tail lamp relay.   |
|                  | Lo        | Operates the headlamp low relay.  |
|                  | Hi        | Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals. |
|                  | Fog       | Operates the front fog lamp relay.  |

# WIPER AND WASHER FUSE

< COMPONENT DIAGNOSIS >

## COMPONENT DIAGNOSIS

### WIPER AND WASHER FUSE

#### Description

INFOID:000000003138981

#### Fuse list

| Unit              | Location | Fuse No. | Capacity |
|-------------------|----------|----------|----------|
| Front wiper motor | IPDM E/R | #60      | 30 A     |
| Washer pump       | IPDM E/R | #47      | 10 A     |

#### Diagnosis Procedure

INFOID:000000003138982

#### 1.CHECK FUSES

Check that the following fuses are not fusing.

| Unit              | Location | Fuse No. | Capacity |
|-------------------|----------|----------|----------|
| Front wiper motor | IPDM E/R | #60      | 30 A     |
| Washer pump       | IPDM E/R | #47      | 10 A     |

#### Is the fuse fusing?

- YES >> Replace the fuse with a new one after repairing the applicable circuit.
- NO >> The fuse is normal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

## POWER SUPPLY AND GROUND CIRCUIT

### BCM (BODY CONTROL MODULE)

#### BCM (BODY CONTROL MODULE) : Diagnosis Procedure

INFOID:000000003769985

#### 1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

| Signal name          | Fuse and fusible link No. |
|----------------------|---------------------------|
| Battery power supply | K                         |
|                      | 10                        |

#### Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

#### 2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

| Terminals |          | Voltage (Approx.)         |
|-----------|----------|---------------------------|
| (+)       | (-)      |                           |
| BCM       |          | Ground<br>Battery voltage |
| Connector | Terminal |                           |
| M118      | 1        |                           |
| M119      | 11       |                           |

#### Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

#### 3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

| BCM       |          | Ground | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal |        | Existed    |
| M119      | 13       |        |            |

#### Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

### IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure

INFOID:000000003769986

#### 1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

# POWER SUPPLY AND GROUND CIRCUIT

## < COMPONENT DIAGNOSIS >

| Signal name          | Fuses and fusible link No. |
|----------------------|----------------------------|
| Battery power supply | C                          |
|                      | 50                         |
|                      | 51                         |

### Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

## 2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and ground.

| Terminals |          | Voltage<br>(Approx.) |
|-----------|----------|----------------------|
| (+)       | (-)      |                      |
| IPDM E/R  |          | Battery voltage      |
| Connector | Terminal |                      |
| E4        | 1        |                      |

### Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

## 3.CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and ground.

| IPDM E/R  |          | Ground | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal |        |            |
| E5        | 12       |        | Existed    |
| E6        | 41       |        |            |

### Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# FRONT WIPER MOTOR LO CIRCUIT

< COMPONENT DIAGNOSIS >

## FRONT WIPER MOTOR LO CIRCUIT

### Component Function Check

INFOID:000000003138983

#### 1. CHECK FRONT WIPER LO OPERATION

IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the front wiper operates at the LO operation.

CONSULT-III ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check front wiper operation.

**Lo** : Front wiper (LO) operation

**Off** : Stop the front wiper.

Is front wiper (LO) operation normally?

- YES >> Front wiper motor LO circuit is normal.  
 NO >> Refer to [WW-24, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000003138984

#### 1. CHECK FRONT WIPER MOTOR (LO) OUTPUT VOLTAGE

CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Turn the ignition switch ON.
4. Select "FRONT WIPER" of IPDM E/R active test item.
5. With operating the test item, check voltage between IPDM E/R harness connector and ground.

| Terminals |          | Test item   | Voltage (Approx.) |
|-----------|----------|-------------|-------------------|
| (+)       | (-)      |             |                   |
| IPDM E/R  |          | FRONT WIPER | Battery voltage   |
| Connector | Terminal |             |                   |
| E5        | 4        | Lo          | Battery voltage   |
|           |          | Off         | 0 V               |

Is the measurement value normal?

- YES >> GO TO 2.  
 NO >> Replace IPDM E/R.

#### 2. CHECK FRONT WIPER MOTOR (LO) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

| IPDM E/R  |          | Front wiper motor |          | Continuity |
|-----------|----------|-------------------|----------|------------|
| Connector | Terminal | Connector         | Terminal |            |
| E5        | 4        | E42               | 1        | Existed    |

Does continuity exist?

- YES >> GO TO 3.  
 NO >> Repair the harness or connector.

#### 3. CHECK FRONT WIPER MOTOR (LO) SHORT CIRCUIT

Check continuity between IPDM E/R harness connector and ground.

# FRONT WIPER MOTOR LO CIRCUIT

## < COMPONENT DIAGNOSIS >

| IPDM E/R  |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| E5        | 4        |        | Not existed |

### Does continuity exist?

YES >> Repair the harness or connector.

NO >> Replace front wiper motor.

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

# FRONT WIPER MOTOR HI CIRCUIT

< COMPONENT DIAGNOSIS >

## FRONT WIPER MOTOR HI CIRCUIT

### Component Function Check

INFOID:000000003138985

#### 1. CHECK FRONT WIPER HI OPERATION

##### ⊗ IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the front wiper operates at the HI operation.

##### Ⓟ CONSULT-III ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check front wiper operation.

**Hi** : Front wiper (HI) operation

**Off** : Stop the front wiper.

Is front wiper (HI) operation normally?

YES >> Front wiper motor HI circuit is normal.

NO >> Refer to [WW-26, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000003138986

#### 1. CHECK FRONT WIPER MOTOR (HI) OUTPUT VOLTAGE

##### Ⓟ CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Turn the ignition switch ON.
4. Select "FRONT WIPER" of IPDM E/R active test item.
5. With operating the test item, check voltage between IPDM E/R harness connector and ground.

| Terminals |          | Test item   | Voltage (Approx.) |
|-----------|----------|-------------|-------------------|
| (+)       | (-)      |             |                   |
| IPDM E/R  |          | FRONT WIPER | Battery voltage   |
| Connector | Terminal |             |                   |
| E5        | 5        | Hi          | Battery voltage   |
|           |          | Off         | 0 V               |

Is the measurement value normal?

YES >> GO TO 2.

NO >> Replace IPDM E/R.

#### 2. CHECK FRONT WIPER MOTOR (HI) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

| IPDM E/R  |          | Front wiper motor |          | Continuity |
|-----------|----------|-------------------|----------|------------|
| Connector | Terminal | Connector         | Terminal |            |
| E5        | 5        | E42               | 4        | Existed    |

Does continuity exist?

YES >> GO TO 3.

NO >> Repair the harness or connector.

#### 3. CHECK FRONT WIPER MOTOR (HI) SHORT CIRCUIT

Check continuity between IPDM E/R harness connector and ground.

# FRONT WIPER MOTOR HI CIRCUIT

## < COMPONENT DIAGNOSIS >

| IPDM E/R  |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| E5        | 5        |        | Not existed |

### Does continuity exist?

YES >> Repair the harness or connector.

NO >> Replace front wiper motor.

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

# FRONT WIPER AUTO STOP SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

## FRONT WIPER AUTO STOP SIGNAL CIRCUIT

### Component Function Check

INFOID:000000003138987

#### 1. CHECK FRONT WIPER (AUTO STOP) SIGNAL

##### CONSULT-III DATA MONITOR

1. Select "WIP AUTO STOP" of IPDM E/R data monitor item.
2. Operate the front wiper.
3. With the front wiper operation, check the monitor status.

| Monitor item  | Condition         |                      | Monitor status |
|---------------|-------------------|----------------------|----------------|
| WIP AUTO STOP | Front wiper motor | Stop position        | STOP P         |
|               |                   | Except stop position | ACT P          |

Is the status of item normal?

- YES >> Auto stop signal circuit is normal.  
NO >> Refer to [WW-28, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000003138988

#### 1. CHECK FRONT WIPER MOTOR (AUTO STOP) OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Turn the ignition switch ON.
4. Check voltage between IPDM E/R harness connector and ground.

| Terminals |          | Voltage (Approx.) |
|-----------|----------|-------------------|
| (+)       | (-)      |                   |
| IPDM E/R  |          | Ground            |
| Connector | Terminal |                   |
| E5        | 16       |                   |
|           |          | Battery voltage   |

Is the measurement value normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2. CHECK FRONT WIPER MOTOR (AUTO STOP) SHORT CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and ground.

| IPDM E/R  |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| E5        | 16       |        | Not existed |

Does continuity exist?

- YES >> Repair the harnesses or connectors.  
NO >> Replace IPDM E/R.

#### 3. CHECK FRONT WIPER MOTOR (AUTO STOP) CIRCUIT CONTINUITY

1. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

| IPDM E/R  |          | Front wiper motor |          | Continuity |
|-----------|----------|-------------------|----------|------------|
| Connector | Terminal | Connector         | Terminal |            |
| E5        | 16       | E42               | 5        | Existed    |

# FRONT WIPER AUTO STOP SIGNAL CIRCUIT

## < COMPONENT DIAGNOSIS >

---

### Does continuity exist?

- YES >> Replace front wiper motor.
- NO >> Repair the harnesses or connectors.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
WW  
M  
N  
O  
P

# FRONT WIPER MOTOR GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

## FRONT WIPER MOTOR GROUND CIRCUIT

### Diagnosis Procedure

INFOID:000000003138989

#### 1. CHECK FRONT WIPER MOTOR (GND) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Check continuity between front wiper motor harness connector and ground.

| Front wiper motor |          | Ground | Continuity |
|-------------------|----------|--------|------------|
| Connector         | Terminal |        | Existed    |
| E42               | 2        |        |            |

#### Does continuity exist?

- YES >> Front wiper motor ground circuit is normal.  
NO >> Repair the harnesses or connectors.

# WASHER SWITCH


< COMPONENT DIAGNOSIS >

## WASHER SWITCH

### Description

INFOID:000000003622881

- Washer switch is integrated with combination switch.
- Combination switch switches polarity between front washer operating and rear washer operating to supply power to the washer pump on ground.

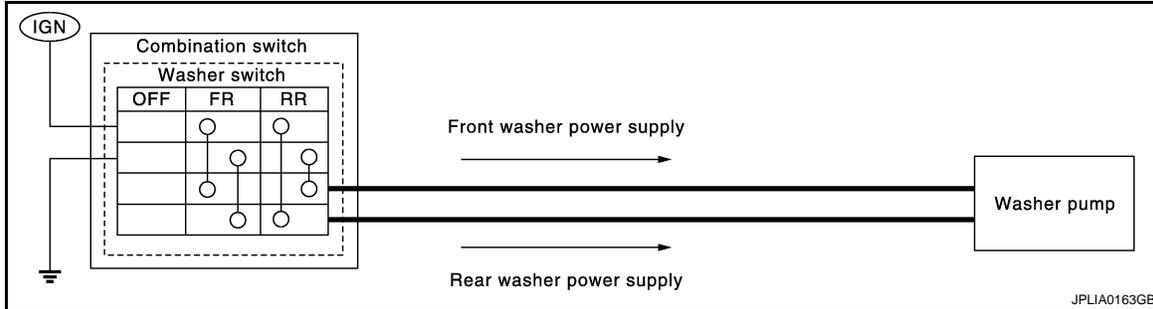


### Component Inspection

INFOID:000000003622882

#### 1. CHECK WIPER SWITCH

1. Turn the ignition switch OFF.
2. Disconnect combination switch connector.
3. Check continuity between the combination switch terminals.

- A : Terminal 4  
 B : Terminal 6  
 C : Terminal 3  
  
 D : Terminal 1

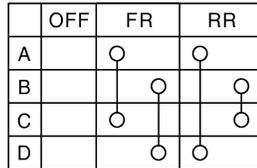

JPLIA0164GB

| Combination switch |   | Condition              | Continuity |
|--------------------|---|------------------------|------------|
| Terminal           |   |                        |            |
| 1                  | 6 | Front washer switch ON | Existed    |
| 3                  | 4 |                        |            |
| 1                  | 4 | Rear washer switch ON  |            |
| 3                  | 6 |                        |            |

#### Does continuity exist?

- YES >> Wiper and washer switch is normal.  
 NO >> Replace combination switch (Wiper and washer switch).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

# REAR WIPER MOTOR CIRCUIT

< COMPONENT DIAGNOSIS >

## REAR WIPER MOTOR CIRCUIT

### Component Function Check

INFOID:000000003464501

#### 1.CHECK REAR WIPER ON OPERATION

##### CONSULT-III ACTIVE TEST

1. Select "RR WIPER" of BCM active test item.
2. With operating the test item, check rear wiper operation.

**On** : Rear wiper ON operation

**Off** : Stop the rear wiper.

##### Is rear wiper operation normally?

- YES >> Rear wiper motor circuit is normal.  
NO >> Refer to [WW-32, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000003464502

#### 1.CHECK REAR WIPER MOTOR OUTPUT VOLTAGE

##### CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect rear wiper motor connector.
3. Turn the ignition switch ON.
4. Select "RR WIPER" of BCM active test item.
5. With operating the test item, check voltage between BCM harness connector and ground.

| Terminals |          | Test item  | Voltage (Approx.) |
|-----------|----------|------------|-------------------|
| (+)       | (-)      |            |                   |
| BCM       |          | REAR WIPER | Battery voltage   |
| Connector | Terminal |            |                   |
| M120      | 26       | On         |                   |
|           |          | Off        |                   |

##### Is the measurement value normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2.CHECK REAR WIPER MOTOR SHORT CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and ground.

| BCM       |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| M120      | 26       |        | Not existed |

##### Does continuity exist?

- YES >> Repair the harness or connector.  
NO >> Replace BCM. Refer to [BCS-84, "Exploded View"](#).

#### 3.CHECK REAR WIPER MOTOR OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and rear wiper motor harness connector.

# REAR WIPER MOTOR CIRCUIT

## < COMPONENT DIAGNOSIS >

| BCM       |          | Rear wiper motor |          | Continuity |
|-----------|----------|------------------|----------|------------|
| Connector | Terminal | Connector        | Terminal |            |
| M120      | 26       | D115             | 2        | Existed    |

### Does continuity exist?

YES >> GO TO 4.

NO >> Repair the harness or connector.

## 4.CHECK REAR WIPER MOTOR GROUND OPEN CIRCUIT

Check continuity between rear wiper motor harness connector and ground.

| Rear wiper motor |          | Ground | Continuity |
|------------------|----------|--------|------------|
| Connector        | Terminal |        |            |
| D115             | 4        |        | Existed    |

### Does continuity exist?

YES >> Replace rear wiper motor.

NO >> Repair the harness or connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# REAR WIPER AUTO STOP SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

## REAR WIPER AUTO STOP SIGNAL CIRCUIT

### Component Function Check

INFOID:000000003464503

#### 1.CHECK REAR WIPER (AUTO STOP) OPERATION

##### CONSULT-III DATA MONITOR

1. Select "WIPER" of BCM data monitor item.
2. Operate the rear wiper.
3. Check that "RR WIPER STOP" changes to "ON" and "OFF" linked with the wiper operation.

| Monitor item  | Condition        |                      | Monitor status |
|---------------|------------------|----------------------|----------------|
| RR WIPER STOP | Rear wiper motor | Stop position        | On             |
|               |                  | Except stop position | Off            |

Is the status of item normal?

YES >> Rear wiper auto stop signal circuit is normal.

NO >> Refer to [WW-34, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000003464504

#### 1.CHECK REAR WIPER MOTOR (AUTO STOP) OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect rear wiper motor connector.
3. Turn the ignition switch ON.
4. Check voltage between BCM harness connector and ground.

| Terminals |          | Voltage (Approx.) |
|-----------|----------|-------------------|
| (+)       | (-)      |                   |
| BCM       |          | Ground            |
| Connector | Terminal |                   |
| M121      | 65       |                   |
|           |          | Battery voltage   |

Is the measurement value normal?

YES >> GO TO 3.

NO >> GO TO 2.

#### 2.CHECK REAR WIPER MOTOR (AUTO STOP) SHORT CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and ground.

| BCM       |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| M121      | 65       |        | Not existed |

Does continuity exist?

YES >> Repair the harness or connector.

NO >> Replace BCM. Refer to [BCS-84, "Exploded View"](#).

#### 3.CHECK REAR WIPER MOTOR (AUTO STOP) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and rear wiper motor harness connector.

# REAR WIPER AUTO STOP SIGNAL CIRCUIT

## < COMPONENT DIAGNOSIS >

| BCM       |          | Rear wiper motor |          | Continuity |
|-----------|----------|------------------|----------|------------|
| Connector | Terminal | Connector        | Terminal |            |
| M121      | 65       | D115             | 3        | Existed    |

### Does continuity exist?

- YES >> Replace rear wiper motor.
- NO >> Repair the harness or connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW


# FRONT WIPER AND WASHER SYSTEM

< COMPONENT DIAGNOSIS >

## FRONT WIPER AND WASHER SYSTEM

### Wiring Diagram - FRONT WIPER AND WASHER SYSTEM -

INFOID:000000003138992

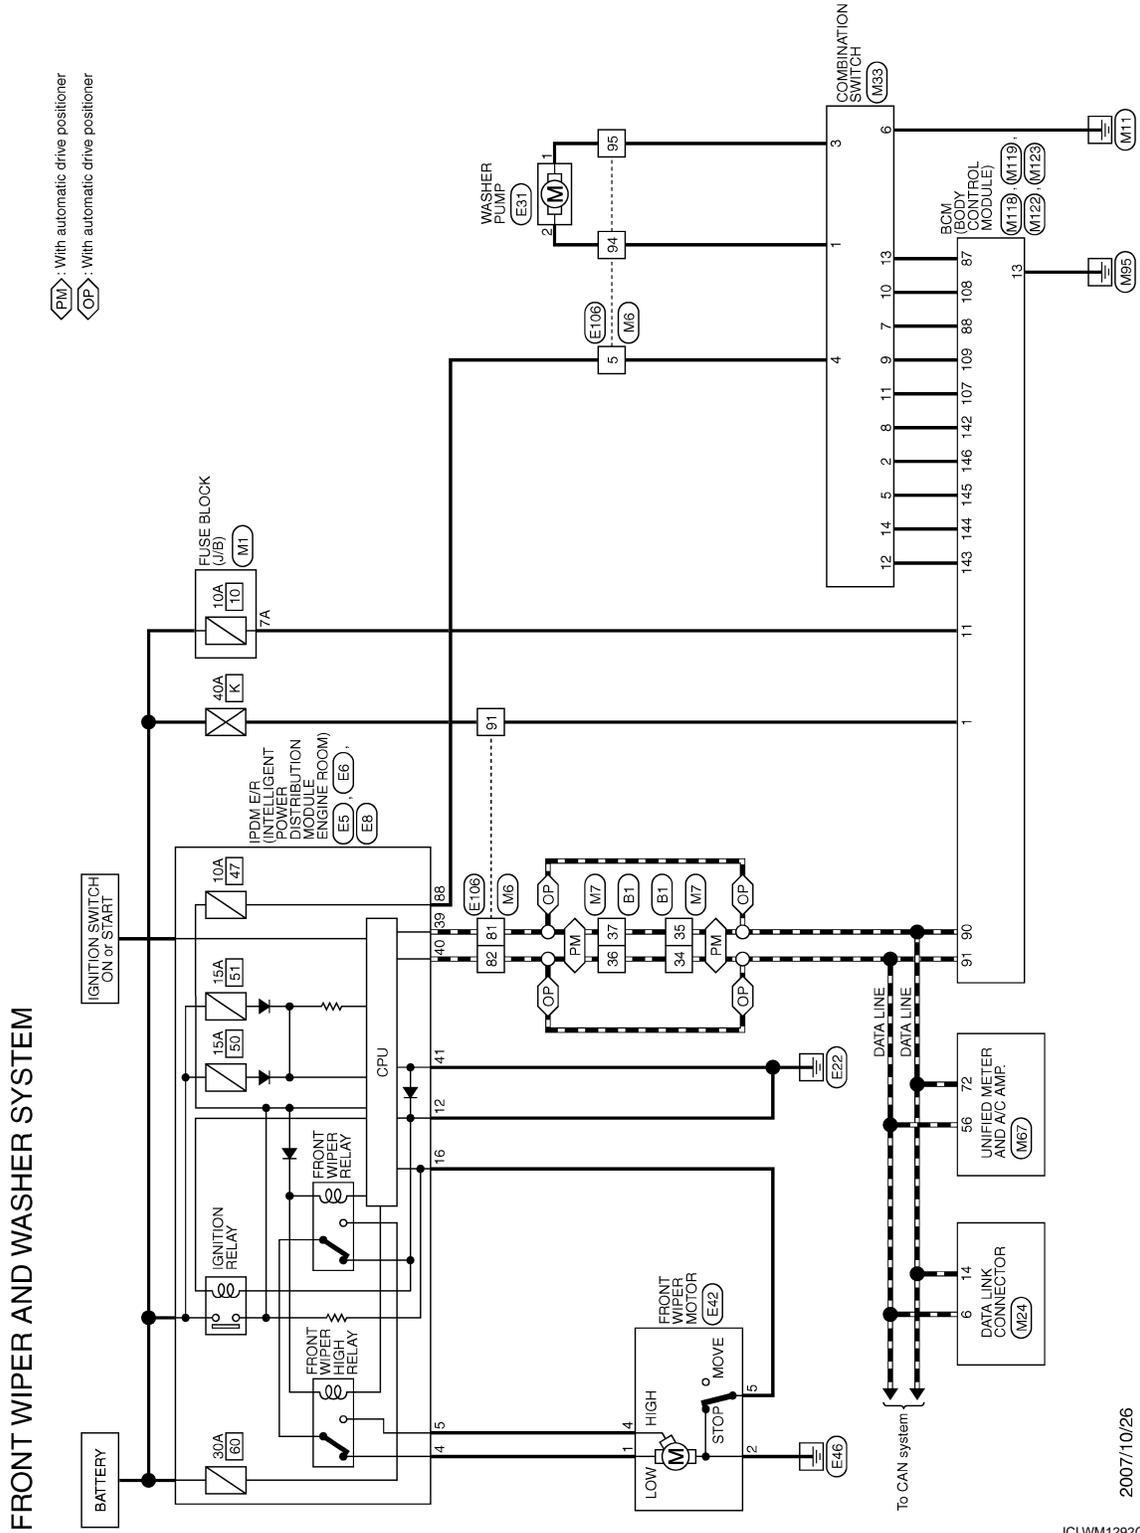






2007/10/26

JCLWM1292GE

# FRONT WIPER AND WASHER SYSTEM

## < COMPONENT DIAGNOSIS >

### FRONT WIPER AND WASHER SYSTEM

|  |  |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
|--|--|-----------------------------|----------------|--------------|----------------|-----------------|--------------|---------------|-----------------------------|----|----|---|---|---------------|-----|----------------|-------------------|----------------|---------|--------------|---------------|--|---------------|----|----------------|--|----------------|-------------------|--------------|---------------|-----------------------------|---|----|---|---|---------------|------|----------------|--------------|----------------|-----------------|--------------|---------------|---|---------------|----|----------------|--|----------------|-----------|--------------|---------------|-----------------------------|----|---|---|----|----|---|----|-----|---|--|---------------|----|----------------|--|----------------|-----------|--------------|---------------|-----------------------------|----|----|---|
| <table border="1"> <tr><td>Connector No.</td><td>B1</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>TH80FW-CS16-TM4</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>34</td><td>L</td><td>-</td></tr> <tr><td>35</td><td>P</td><td>-</td></tr> <tr><td>36</td><td>L</td><td>-</td></tr> <tr><td>37</td><td>P</td><td>-</td></tr> </table> | Connector No.  | B1                          | Connector Name | WIRE TO WIRE | Connector Type | TH80FW-CS16-TM4 | Terminal No. | Color of Wire | Signal Name [Specification] | 34 | L  | - | 35  | P             | -   | 36             | L                 | -              | 37      | P            | -             | <table border="1"> <tr><td>Connector No.</td><td>E5</td></tr> <tr><td>Connector Name</td><td>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</td></tr> <tr><td>Connector Type</td><td>TH20FW-CS12-M4-1V</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>4</td><td>V</td><td>-</td></tr> <tr><td>5</td><td>L</td><td>-</td></tr> <tr><td>12</td><td>B/W</td><td>-</td></tr> <tr><td>16</td><td>LG</td><td>-</td></tr> </table> | Connector No. | E5 | Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) | Connector Type | TH20FW-CS12-M4-1V | Terminal No. | Color of Wire | Signal Name [Specification] | 4 | V  | - | 5   | L             | -    | 12             | B/W          | -              | 16              | LG           | -             | <table border="1"> <tr><td>Connector No.</td><td>E6</td></tr> <tr><td>Connector Name</td><td>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</td></tr> <tr><td>Connector Type</td><td>TH80FW-NH</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>39</td><td>P</td><td>-</td></tr> <tr><td>40</td><td>L</td><td>-</td></tr> <tr><td>41</td><td>B/W</td><td>-</td></tr> </table> | Connector No. | E6 | Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) | Connector Type | TH80FW-NH | Terminal No. | Color of Wire | Signal Name [Specification] | 39 | P | - | 40 | L  | - | 41 | B/W | - | <table border="1"> <tr><td>Connector No.</td><td>E8</td></tr> <tr><td>Connector Name</td><td>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</td></tr> <tr><td>Connector Type</td><td>NS30FW-CS</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>88</td><td>GR</td><td>-</td></tr> </table> | Connector No. | E8 | Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) | Connector Type | NS30FW-CS | Terminal No. | Color of Wire | Signal Name [Specification] | 88 | GR | - |
| Connector No.  | B1   |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Name   | WIRE TO WIRE   |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Type   | TH80FW-CS16-TM4  |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Terminal No.   | Color of Wire  | Signal Name [Specification] |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 34   | L  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 35   | P  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 36   | L  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 37   | P  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector No.  | E5   |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Name   | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Type   | TH20FW-CS12-M4-1V  |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Terminal No.   | Color of Wire  | Signal Name [Specification] |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 4  | V  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 5  | L  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 12   | B/W  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 16   | LG   | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector No.  | E6   |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Name   | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Type   | TH80FW-NH  |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Terminal No.   | Color of Wire  | Signal Name [Specification] |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 39   | P  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 40   | L  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 41   | B/W  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector No.  | E8   |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Name   | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Type   | NS30FW-CS  |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Terminal No.   | Color of Wire  | Signal Name [Specification] |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 88   | GR   | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| <table border="1"> <tr><td>Connector No.</td><td>E1</td></tr> <tr><td>Connector Name</td><td>WASHER PUMP</td></tr> <tr><td>Connector Type</td><td>ED2FGY-RS</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>2</td><td>LG</td><td>-</td></tr> </table>   | Connector No.  | E1                          | Connector Name | WASHER PUMP  | Connector Type | ED2FGY-RS       | Terminal No. | Color of Wire | Signal Name [Specification] | 2  | LG | - | <table border="1"> <tr><td>Connector No.</td><td>E42</td></tr> <tr><td>Connector Name</td><td>FRONT WIPER MOTOR</td></tr> <tr><td>Connector Type</td><td>HS0JFGY</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>V</td><td>-</td></tr> <tr><td>2</td><td>B/W</td><td>-</td></tr> <tr><td>4</td><td>L</td><td>-</td></tr> <tr><td>5</td><td>LG</td><td>-</td></tr> </table> | Connector No. | E42 | Connector Name | FRONT WIPER MOTOR | Connector Type | HS0JFGY | Terminal No. | Color of Wire | Signal Name [Specification]  | 1             | V  | -              | 2  | B/W            | -                 | 4            | L             | -                           | 5 | LG | - | <table border="1"> <tr><td>Connector No.</td><td>E106</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>TH80FW-CS16-TM4</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>5</td><td>GR</td><td>-</td></tr> <tr><td>81</td><td>P</td><td>-</td></tr> <tr><td>82</td><td>L</td><td>-</td></tr> <tr><td>91</td><td>W</td><td>-</td></tr> <tr><td>94</td><td>LG</td><td>-</td></tr> <tr><td>95</td><td>O</td><td>-</td></tr> </table> | Connector No. | E106 | Connector Name | WIRE TO WIRE | Connector Type | TH80FW-CS16-TM4 | Terminal No. | Color of Wire | Signal Name [Specification]   | 5             | GR | -              | 81   | P              | -         | 82           | L             | -                           | 91 | W | - | 94 | LG | - | 95 | O   | - | <table border="1"> <tr><td>Connector No.</td><td>M1</td></tr> <tr><td>Connector Name</td><td>FUSE BLOK (J/B)</td></tr> <tr><td>Connector Type</td><td>NS30FW-M2</td></tr> </table>  <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>7A</td><td>R</td><td>-</td></tr> </table>   | Connector No. | M1 | Connector Name | FUSE BLOK (J/B)  | Connector Type | NS30FW-M2 | Terminal No. | Color of Wire | Signal Name [Specification] | 7A | R  | - |
| Connector No.  | E1   |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Name   | WASHER PUMP  |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Type   | ED2FGY-RS  |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Terminal No.   | Color of Wire  | Signal Name [Specification] |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 2  | LG   | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector No.  | E42  |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Name   | FRONT WIPER MOTOR  |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Type   | HS0JFGY  |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Terminal No.   | Color of Wire  | Signal Name [Specification] |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 1  | V  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 2  | B/W  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 4  | L  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 5  | LG   | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector No.  | E106   |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Name   | WIRE TO WIRE   |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Type   | TH80FW-CS16-TM4  |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Terminal No.   | Color of Wire  | Signal Name [Specification] |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 5  | GR   | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 81   | P  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 82   | L  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 91   | W  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 94   | LG   | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 95   | O  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector No.  | M1   |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Name   | FUSE BLOK (J/B)  |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Connector Type   | NS30FW-M2  |                             |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| Terminal No.   | Color of Wire  | Signal Name [Specification] |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |
| 7A   | R  | -                           |                |              |                |                 |              |               |                             |    |    |   |   |               |     |                |                   |                |         |              |               |  |               |    |                |  |                |                   |              |               |                             |   |    |   |   |               |      |                |              |                |                 |              |               |   |               |    |                |  |                |           |              |               |                             |    |   |   |    |    |   |    |     |   |  |               |    |                |  |                |           |              |               |                             |    |    |   |

JCLWM1293GE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


WW

# FRONT WIPER AND WASHER SYSTEM

## < COMPONENT DIAGNOSIS >


### FRONT WIPER AND WASHER SYSTEM

|                |                 |
|----------------|-----------------|
| Connector No.  | M6              |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80MW-CS16-TM4 |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 5            | G             | -                           |
| 81           | P             | -                           |
| 82           | L             | -                           |
| 91           | W             | -                           |
| 94           | P             | -                           |
| 95           | GR            | -                           |

|                |                 |
|----------------|-----------------|
| Connector No.  | M7              |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80MW-CS16-TM4 |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 34           | L             | -                           |
| 35           | P             | -                           |
| 36           | L             | -                           |
| 37           | P             | -                           |

|                |                     |
|----------------|---------------------|
| Connector No.  | M24                 |
| Connector Name | DATA LINK CONNECTOR |
| Connector Type | BD16FW              |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 6            | L             | -                           |
| 14           | P             | -                           |


|                |                    |
|----------------|--------------------|
| Connector No.  | M33                |
| Connector Name | COMBINATION SWITCH |
| Connector Type | TH16FW-NH          |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | P             | FR WASHER(-)                |
| 2            | SB            | OUTPUT 4                    |
| 3            | GR            | FR WASHER(-)                |
| 4            | G             | IGN                         |
| 5            | L             | OUTPUT 3                    |
| 6            | B             | GND                         |
| 7            | V             | INPUT 3                     |
| 8            | O             | OUTPUT 5                    |
| 9            | Y             | INPUT 2                     |
| 10           | R             | INPUT 4                     |
| 11           | LG            | INPUT 1                     |

|              |    |          |          |
|--------------|----|----------|----------|
| Terminal No. | 12 | P        | OUTPUT 1 |
| 13           | BR | INPUT 5  |          |
| 14           | G  | OUTPUT 2 |          |

|                |                            |
|----------------|----------------------------|
| Connector No.  | M67                        |
| Connector Name | UNIFIED METER AND A/C AMP. |
| Connector Type | TH32FW-NH                  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 56           | L             | CAN-H                       |
| 72           | P             | CAN-L                       |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M118                      |
| Connector Name | ECM (BODY CONTROL MODULE) |
| Connector Type | M03FB-LC                  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | BAT (F/L)                   |

JCLWM1294GE

# FRONT WIPER AND WASHER SYSTEM

## < COMPONENT DIAGNOSIS >

### FRONT WIPER AND WASHER SYSTEM

|                |                           |
|----------------|---------------------------|
| Connector No.  | M119                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | MS16FW-CS                 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 11           | R             | BAT (FUSE)                  |
| 13           | B             | GND                         |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M122                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH4GFB-NH                 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 87           | BR            | COMBI SW INPUT 5            |
| 88           | V             | COMBI SW INPUT 3            |
| 90           | P             | CAN-L                       |
| 91           | L             | CAN-H                       |
| 107          | LG            | COMBI SW INPUT 1            |
| 108          | R             | COMBI SW INPUT 4            |
| 109          | Y             | COMBI SW INPUT 2            |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M123                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH4GFB-NH                 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 142          | O             | COMBI SW OUTPUT 5           |
| 143          | P             | COMBI SW OUTPUT 1           |
| 144          | G             | COMBI SW OUTPUT 2           |
| 145          | L             | COMBI SW OUTPUT 3           |
| 146          | SB            | COMBI SW OUTPUT 4           |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

JCLWM1295GE


# REAR WIPER AND WASHER SYSTEM

< COMPONENT DIAGNOSIS >

## REAR WIPER AND WASHER SYSTEM

Wiring Diagram - REAR WIPER AND WASHER SYSTEM -

INFOID:000000003464506

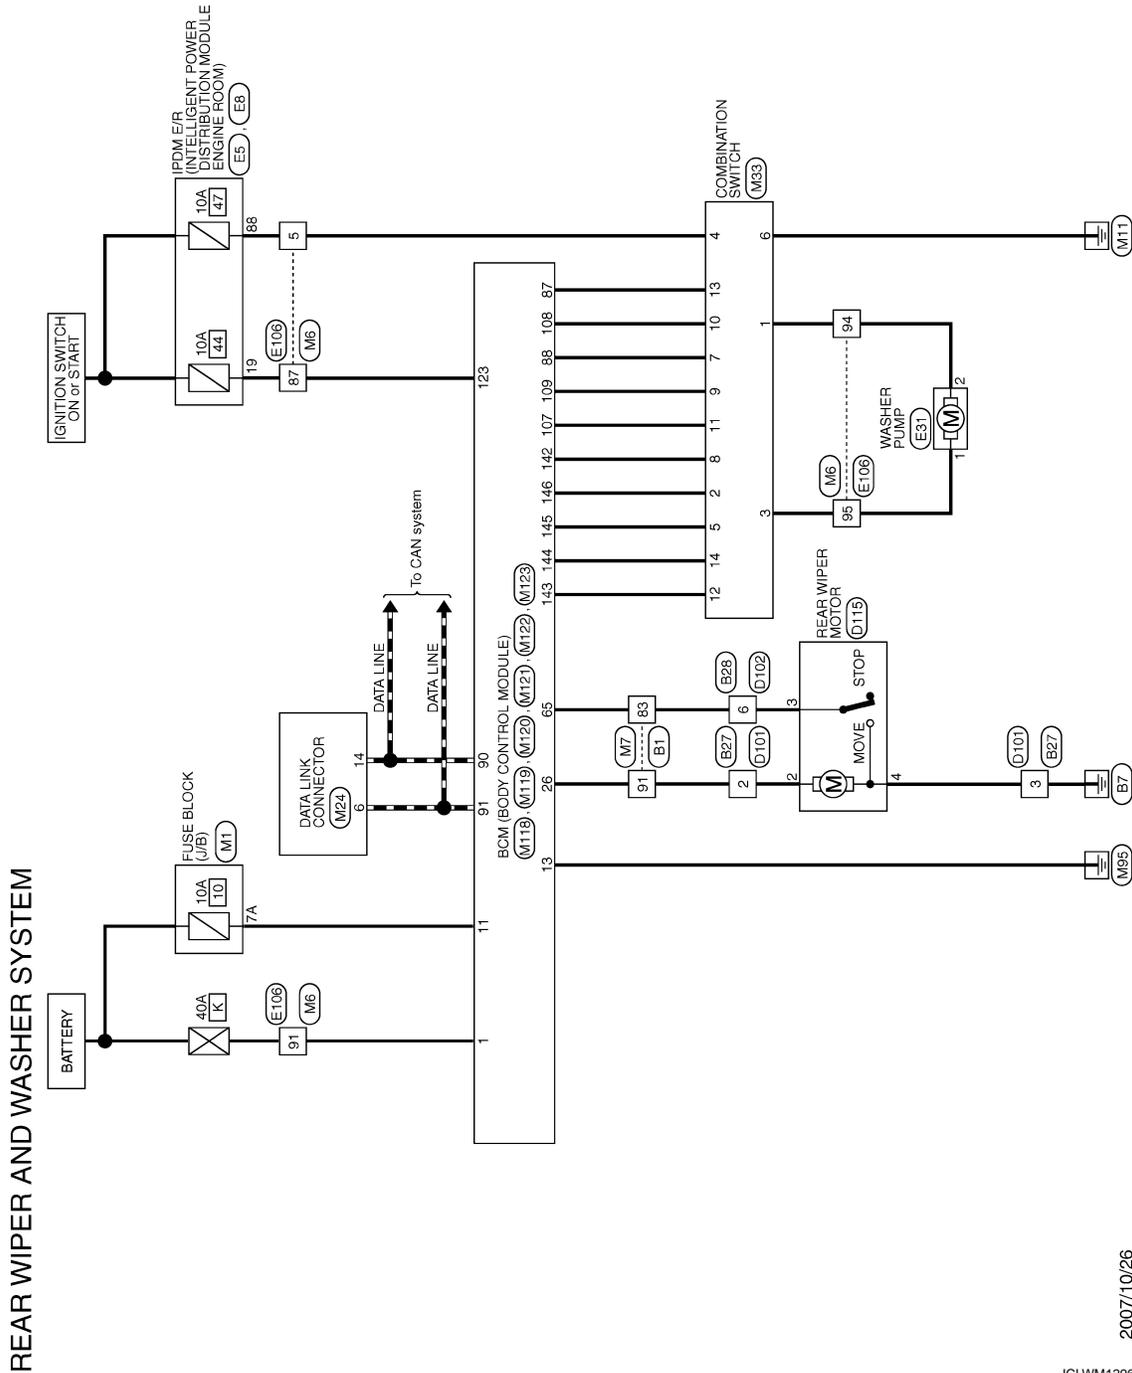

# REAR WIPER AND WASHER SYSTEM

## < COMPONENT DIAGNOSIS >

### REAR WIPER AND WASHER SYSTEM

|                |                 |                |              |                |              |                |              |
|----------------|-----------------|----------------|--------------|----------------|--------------|----------------|--------------|
| Connector No.  | B1              | Connector No.  | B27          | Connector No.  | B28          | Connector No.  | D101         |
| Connector Name | WIRE TO WIRE    | Connector Name | WIRE TO WIRE | Connector Name | WIRE TO WIRE | Connector Name | WIRE TO WIRE |
| Connector Type | THBDFW-CS16-TM4 | Connector Type | MOBAM-LC     | Connector Type | THZ4MW-NH    | Connector Type | MBDFW-LC     |

|                             |    |                             |   |                             |    |
|-----------------------------|----|-----------------------------|---|-----------------------------|----|
| Terminal No.                | 83 | Terminal No.                | 2 | Terminal No.                | 88 |
| Color of Wire               | O  | Color of Wire               | G | Color of Wire               | GR |
| Signal Name [Specification] | -  | Signal Name [Specification] | - | Signal Name [Specification] | -  |

|                             |    |                             |   |                             |   |
|-----------------------------|----|-----------------------------|---|-----------------------------|---|
| Terminal No.                | 91 | Terminal No.                | 3 | Terminal No.                | 3 |
| Color of Wire               | G  | Color of Wire               | B | Color of Wire               | B |
| Signal Name [Specification] | -  | Signal Name [Specification] | - | Signal Name [Specification] | - |

|                |              |                |                  |                |  |                |  |
|----------------|--------------|----------------|------------------|----------------|--|----------------|--|
| Connector No.  | D102         | Connector No.  | D115             | Connector No.  | E5   | Connector No.  | E8   |
| Connector Name | WIRE TO WIRE | Connector Name | REAR WIPER MOTOR | Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) | Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | THZ4FW-NH    | Connector Type | CJ04FW-IV        | Connector Type | THZDFW-CS12-M4-IV  | Connector Type | NS09FW-CS  |

|                             |   |                             |   |                             |    |                             |    |
|-----------------------------|---|-----------------------------|---|-----------------------------|----|-----------------------------|----|
| Terminal No.                | 6 | Terminal No.                | 2 | Terminal No.                | 19 | Terminal No.                | 88 |
| Color of Wire               | O | Color of Wire               | G | Color of Wire               | W  | Color of Wire               | GR |
| Signal Name [Specification] | - | Signal Name [Specification] | - | Signal Name [Specification] | -  | Signal Name [Specification] | -  |

JCLWM1297GE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

# REAR WIPER AND WASHER SYSTEM

## < COMPONENT DIAGNOSIS >


### REAR WIPER AND WASHER SYSTEM

|                |                 |
|----------------|-----------------|
| Connector No.  | E31             |
| Connector Name | WASHER PUMP     |
| Connector Type | TH80MW-CS16-TM4 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | O             | -                           |
| 2            | LG            | -                           |

|                |                 |
|----------------|-----------------|
| Connector No.  | E106            |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80FW-CS16-TM4 |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 5            | GR            | -                           |
| 87           | W             | -                           |
| 91           | W             | -                           |
| 94           | LG            | -                           |
| 95           | O             | -                           |

|                |                  |
|----------------|------------------|
| Connector No.  | M1               |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | HS8BFW-M2        |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 7A           | R             | -                           |

|                |                 |
|----------------|-----------------|
| Connector No.  | M6              |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80MW-CS16-TM4 |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 5            | G             | -                           |
| 87           | W             | -                           |
| 91           | W             | -                           |
| 94           | P             | -                           |
| 95           | GR            | -                           |

|                |                 |
|----------------|-----------------|
| Connector No.  | M7              |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80MW-CS16-TM4 |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 83           | O             | -                           |
| 91           | G             | -                           |

|                |                     |
|----------------|---------------------|
| Connector No.  | M24                 |
| Connector Name | DATA LINK CONNECTOR |
| Connector Type | BD16FW              |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 6            | L             | -                           |
| 14           | P             | -                           |

|                |                    |
|----------------|--------------------|
| Connector No.  | M33                |
| Connector Name | COMBINATION SWITCH |
| Connector Type | TH16FW-NH          |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | P             | FR WASHER(-)                |
| 2            | SB            | OUTPUT 4                    |
| 3            | GR            | FR WASHER(+)                |
| 4            | G             | IGN                         |
| 5            | L             | OUTPUT 3                    |
| 6            | B             | GND                         |
| 7            | V             | INPUT 3                     |
| 8            | O             | OUTPUT 5                    |
| 9            | Y             | INPUT 2                     |
| 10           | R             | INPUT 4                     |
| 11           | LG            | INPUT 1                     |

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 12           | P             | OUTPUT 1                    |
| 13           | BR            | INPUT 5                     |
| 14           | G             | OUTPUT 2                    |

JCLWM1298GE

# REAR WIPER AND WASHER SYSTEM

## < COMPONENT DIAGNOSIS >

### REAR WIPER AND WASHER SYSTEM

|                |                           |
|----------------|---------------------------|
| Connector No.  | M118                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | MD2EP-LC                  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | BAT (F/L)                   |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M119                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | NS12PW-CS                 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 11           | R             | BAT (FUSE)                  |
| 13           | B             | GND                         |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M120                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | NS12PW-CS                 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 28           | G             | REAR WIPER OUTPUT           |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M121                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FGY-NH                |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 65           | O             | REAR WIPER STOP POSITION    |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M122                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FB-NH                 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 87           | BR            | COMBI SW INPUT 5            |
| 88           | V             | COMBI SW INPUT 3            |
| 90           | P             | CAN-L                       |
| 91           | L             | CAN-H                       |
| 107          | LG            | COMBI SW INPUT 1            |
| 108          | R             | COMBI SW INPUT 4            |
| 109          | Y             | COMBI SW INPUT 2            |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M123                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FG-NH                 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 123          | W             | IGN F/B                     |
| 142          | O             | COMBI SW OUTPUT 5           |
| 143          | P             | COMBI SW OUTPUT 1           |
| 144          | G             | COMBI SW OUTPUT 2           |
| 145          | L             | COMBI SW OUTPUT 3           |
| 146          | SB            | COMBI SW OUTPUT 4           |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## ECU DIAGNOSIS

### BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000003769972

#### VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

| Monitor Item   | Condition   | Value/Status                     |
|----------------|---|----------------------------------|
| FR WIPER HI    | Other than front wiper switch HI                    | Off                              |
|                | Front wiper switch HI                               | On                               |
| FR WIPER LOW   | Other than front wiper switch LO                    | Off                              |
|                | Front wiper switch LO                               | On                               |
| FR WASHER SW   | Front washer switch OFF                             | Off                              |
|                | Front washer switch ON                              | On                               |
| FR WIPER INT   | Other than front wiper switch INT                   | Off                              |
|                | Front wiper switch INT                              | On                               |
| FR WIPER STOP  | Front wiper is not in STOP position                 | Off                              |
|                | Front wiper is in STOP position                     | On                               |
| INT VOLUME     | Wiper intermittent dial is in a dial position 1 - 7 | Wiper intermittent dial position |
| RR WIPER ON    | Other than rear wiper switch ON                     | Off                              |
|                | Rear wiper switch ON                                | On                               |
| RR WIPER INT   | Other than rear wiper switch INT                    | Off                              |
|                | Rear wiper switch INT                               | On                               |
| RR WASHER SW   | Rear washer switch OFF                              | Off                              |
|                | Rear washer switch ON                               | On                               |
| RR WIPER STOP  | Rear wiper is in STOP position                      | Off                              |
|                | Rear wiper is not in STOP position                  | On                               |
| TURN SIGNAL R  | Other than turn signal switch RH                    | Off                              |
|                | Turn signal switch RH                               | On                               |
| TURN SIGNAL L  | Other than turn signal switch LH                    | Off                              |
|                | Turn signal switch LH                               | On                               |
| TAIL LAMP SW   | Other than lighting switch 1ST and 2ND              | Off                              |
|                | Lighting switch 1ST or 2ND                          | On                               |
| HI BEAM SW     | Other than lighting switch HI                       | Off                              |
|                | Lighting switch HI                                  | On                               |
| HEAD LAMP SW 1 | Other than lighting switch 2ND                      | Off                              |
|                | Lighting switch 2ND                                 | On                               |
| HEAD LAMP SW 2 | Other than lighting switch 2ND                      | Off                              |
|                | Lighting switch 2ND                                 | On                               |
| PASSING SW     | Other than lighting switch PASS                     | Off                              |
|                | Lighting switch PASS                                | On                               |
| AUTO LIGHT SW  | Other than lighting switch AUTO                     | Off                              |
|                | Lighting switch AUTO                                | On                               |
| FR FOG SW      | Front fog lamp switch OFF                           | Off                              |
|                | Front fog lamp switch ON                            | On                               |

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

| Monitor Item  | Condition  | Value/Status |    |
|---------------|--|--------------|----|
| RR FOG SW     | <b>NOTE:</b><br>The item is indicated, but not monitored.            | Off          | A  |
| DOOR SW-DR    | Driver door closed   | Off          | B  |
|               | Driver door opened   | On           |    |
| DOOR SW-AS    | Passenger door closed  | Off          | C  |
|               | Passenger door opened  | On           |    |
| DOOR SW-RR    | Rear RH door closed  | Off          | D  |
|               | Rear RH door opened  | On           |    |
| DOOR SW-RL    | Rear LH door closed  | Off          | D  |
|               | Rear LH door opened  | On           |    |
| DOOR SW-BK    | Back door closed   | Off          | E  |
|               | Back door opened   | On           |    |
| CDL LOCK SW   | Other than power door lock switch LOCK                               | Off          | F  |
|               | Power door lock switch LOCK  | On           |    |
| CDL UNLOCK SW | Other than power door lock switch UNLOCK                             | Off          | G  |
|               | Power door lock switch UNLOCK  | On           |    |
| KEY CYL LK-SW | Other than driver door key cylinder LOCK position                    | Off          | H  |
|               | Driver door key cylinder LOCK position                               | On           |    |
| KEY CYL UN-SW | Other than driver door key cylinder UNLOCK position                  | Off          | H  |
|               | Driver door key cylinder UNLOCK position                             | On           |    |
| KEY CYL SW-TR | <b>NOTE:</b><br>The item is indicated, but not monitored.            | Off          | I  |
| HAZARD SW     | Hazard switch is OFF   | Off          | J  |
|               | Hazard switch is ON  | On           |    |
| REAR DEF SW   | <b>NOTE:</b><br>The item is indicated, but not monitored.            | Off          | K  |
| TR CANCEL SW  | <b>NOTE:</b><br>The item is indicated, but not monitored.            | Off          | K  |
| TR/BD OPEN SW | Back door opener switch OFF  | Off          | WW |
|               | While the back door opener switch is turned ON                       | On           |    |
| TRNK/HAT MNTR | <b>NOTE:</b><br>The item is indicated, but not monitored.            | Off          | M  |
| RKE-LOCK      | LOCK button of the key is not pressed                                | Off          | M  |
|               | LOCK button of the key is pressed                                    | On           |    |
| RKE-UNLOCK    | UNLOCK button of the key is not pressed                              | Off          | N  |
|               | UNLOCK button of the key is pressed                                  | On           |    |
| RKE-TR/BD     | <b>NOTE:</b><br>The item is indicated, but not monitored.            | Off          | O  |
| RKE-PANIC     | PANIC button of the key is not pressed                               | Off          | O  |
|               | PANIC button of the key is pressed                                   | On           |    |
| RKE-P/W OPEN  | UNLOCK button of the key is not pressed                              | Off          | P  |
|               | UNLOCK button of the key is pressed and held                         | On           |    |
| RKE-MODE CHG  | LOCK/UNLOCK button of the key is not pressed and held simultaneously | Off          | P  |
|               | LOCK/UNLOCK button of the key is pressed and held simultaneously     | On           |    |

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

| Monitor Item   | Condition   | Value/Status |
|----------------|---|--------------|
| OPTICAL SENSOR | Bright outside of the vehicle                             | Close to 5 V |
|                | Dark outside of the vehicle                               | Close to 0 V |
| REQ SW -DR     | Driver door request switch is not pressed                 | Off          |
|                | Driver door request switch is pressed                     | On           |
| REQ SW -AS     | Passenger door request switch is not pressed              | Off          |
|                | Passenger door request switch is pressed                  | On           |
| REQ SW -RR     | <b>NOTE:</b><br>The item is indicated, but not monitored. | Off          |
| REQ SW -RL     | <b>NOTE:</b><br>The item is indicated, but not monitored. | Off          |
| REQ SW -BD/TR  | Back door request switch is not pressed                   | Off          |
|                | Back door request switch is pressed                       | On           |
| PUSH SW        | Push-button ignition switch (push switch) is not pressed  | Off          |
|                | Push-button ignition switch (push switch) is pressed      | On           |
| IGN RLY2 -F/B  | Ignition switch in OFF or ACC position                    | Off          |
|                | Ignition switch in ON position                            | On           |
| CLUCH SW       | <b>NOTE:</b><br>The item is indicated, but not monitored. | Off          |
| BRAKE SW 1     | The brake pedal is not depressed                          | On           |
|                | The brake pedal is depressed                              | Off          |
| DETE/CANCL SW  | Selector lever in P position                              | Off          |
|                | Selector lever in any position other than P               | On           |
| SFT PN/N SW    | Selector lever in any position other than P and N         | Off          |
|                | Selector lever in P or N position                         | On           |
| S/L -LOCK      | Steering is locked  | Off          |
|                | Steering is unlocked                                      | On           |
| S/L -UNLOCK    | Steering is unlocked                                      | Off          |
|                | Steering is locked  | On           |
| S/L RELAY-F/B  | Ignition switch in OFF or ACC position                    | Off          |
|                | Ignition switch in ON position                            | On           |
| UNLK SEN -DR   | Driver door is unlocked                                   | Off          |
|                | Driver door is locked                                     | On           |
| PUSH SW -IPDM  | Push-button ignition switch (push-switch) is not pressed  | Off          |
|                | Push-button ignition switch (push-switch) is pressed      | On           |
| IGN RLY1 -F/B  | Ignition switch in OFF or ACC position                    | Off          |
|                | Ignition switch in ON position                            | On           |
| DETE SW -IPDM  | Selector lever in P position                              | Off          |
|                | Selector lever in any position other than P               | On           |
| SFT PN -IPDM   | Selector lever in any position other than P and N         | Off          |
|                | Selector lever in P or N position                         | On           |
| SFT P -MET     | Selector lever in any position other than P               | Off          |
|                | Selector lever in P position                              | On           |
| SFT N -MET     | Selector lever in any position other than N               | Off          |
|                | Selector lever in N position                              | On           |

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

| Monitor Item   | Condition   | Value/Status                      |    |
|----------------|---|-----------------------------------|----|
| ENGINE STATE   | Engine stopped  | Stop                              | A  |
|                | While the engine stalls   | Stall                             |    |
|                | At engine cranking  | Crank                             | B  |
|                | Engine running  | Run                               |    |
| S/L LOCK-IPDM  | Steering is locked  | Off                               |    |
|                | Steering is unlocked  | On                                | C  |
| S/L UNLK-IPDM  | Steering is unlocked  | Off                               |    |
|                | Steering is locked  | On                                | D  |
| S/L RELAY-REQ  | Ignition switch in OFF or ACC position  | Off                               |    |
|                | Ignition switch in ON position  | On                                | E  |
| VEH SPEED 1    | While driving   | Equivalent to speedometer reading |    |
| VEH SPEED 2    | While driving   | Equivalent to speedometer reading |    |
| DOOR STAT-DR   | Driver door is locked   | LOCK                              | F  |
|                | Wait with selective UNLOCK operation (5 seconds)  | READY                             |    |
|                | Driver door is unlocked   | UNLOCK                            |    |
| DOOR STAT-AS   | Passenger door is locked  | LOCK                              | G  |
|                | Wait with selective UNLOCK operation (5 seconds)  | READY                             |    |
|                | Passenger door is unlocked  | UNLOCK                            |    |
| ID OK FLAG     | Ignition switch in ACC or ON position   | Reset                             | H  |
|                | Ignition switch in OFF position   | Set                               |    |
| PRMT ENG STRT  | The engine start is prohibited  | Reset                             | I  |
|                | The engine start is permitted   | Set                               |    |
| PRMT RKE STRT  | <b>NOTE:</b><br>The item is indicated, but not monitored.                                       | Reset                             | J  |
| KEY SW -SLOT   | The key is not inserted into key slot   | Off                               |    |
|                | The key is inserted into key slot   | On                                |    |
| RKE OPE COUN1  | During the operation of the key   | Operation frequency of the key    | K  |
| RKE OPE COUN2  | <b>NOTE:</b><br>The item is indicated, but not monitored.                                       | —                                 | WW |
| CONFIRM ID ALL | The key ID that the key slot receives does not accord with any key ID registered to BCM.        | Yet                               |    |
|                | The key ID that the key slot receives accords with any key ID registered to BCM.                | DONE                              | M  |
| CONFIRM ID4    | The key ID that the key slot receives does not accord with the fourth key ID registered to BCM. | Yet                               |    |
|                | The key ID that the key slot receives accords with the fourth key ID registered to BCM.         | DONE                              | N  |
| CONFIRM ID3    | The key ID that the key slot receives does not accord with the third key ID registered to BCM.  | Yet                               | O  |
|                | The key ID that the key slot receives accords with the third key ID registered to BCM.          | DONE                              |    |
| CONFIRM ID2    | The key ID that the key slot receives does not accord with the second key ID registered to BCM. | Yet                               | P  |
|                | The key ID that the key slot receives accords with the second key ID registered to BCM.         | DONE                              |    |


## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

| Monitor Item | Condition  | Value/Status                  |
|--------------|--|-------------------------------|
| CONFIRM ID1  | The key ID that the key slot receives does not accord with the first key ID registered to BCM. | Yet                           |
|              | The key ID that the key slot receives accords with the first key ID registered to BCM.         | DONE                          |
| TP 4         | The ID of fourth key is not registered to BCM  | Yet                           |
|              | The ID of fourth key is registered to BCM  | DONE                          |
| TP 3         | The ID of third key is not registered to BCM   | Yet                           |
|              | The ID of third key is registered to BCM   | DONE                          |
| TP 2         | The ID of second key is not registered to BCM  | Yet                           |
|              | The ID of second key is registered to BCM  | DONE                          |
| TP 1         | The ID of first key is not registered to BCM   | Yet                           |
|              | The ID of first key is registered to BCM   | DONE                          |
| AIR PRESS FL | Ignition switch ON (Only when the signal from the transmitter is received)                     | Air pressure of front LH tire |
| AIR PRESS FR | Ignition switch ON (Only when the signal from the transmitter is received)                     | Air pressure of front RH tire |
| AIR PRESS RR | Ignition switch ON (Only when the signal from the transmitter is received)                     | Air pressure of rear RH tire  |
| AIR PRESS RL | Ignition switch ON (Only when the signal from the transmitter is received)                     | Air pressure of rear LH tire  |
| ID REGST FL1 | ID of front LH tire transmitter is registered  | DONE                          |
|              | ID of front LH tire transmitter is not registered  | Yet                           |
| ID REGST FR1 | ID of front RH tire transmitter is registered  | DONE                          |
|              | ID of front RH tire transmitter is not registered  | Yet                           |
| ID REGST RR1 | ID of rear RH tire transmitter is registered   | DONE                          |
|              | ID of rear RH tire transmitter is not registered   | Yet                           |
| ID REGST RL1 | ID of rear LH tire transmitter is registered   | DONE                          |
|              | ID of rear LH tire transmitter is not registered   | Yet                           |
| WARNING LAMP | Tire pressure indicator OFF  | Off                           |
|              | Tire pressure indicator ON   | On                            |
| BUZZER       | Tire pressure warning alarm is not sounding  | Off                           |
|              | Tire pressure warning alarm is sounding  | On                            |

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >  
 TERMINAL LAYOUT

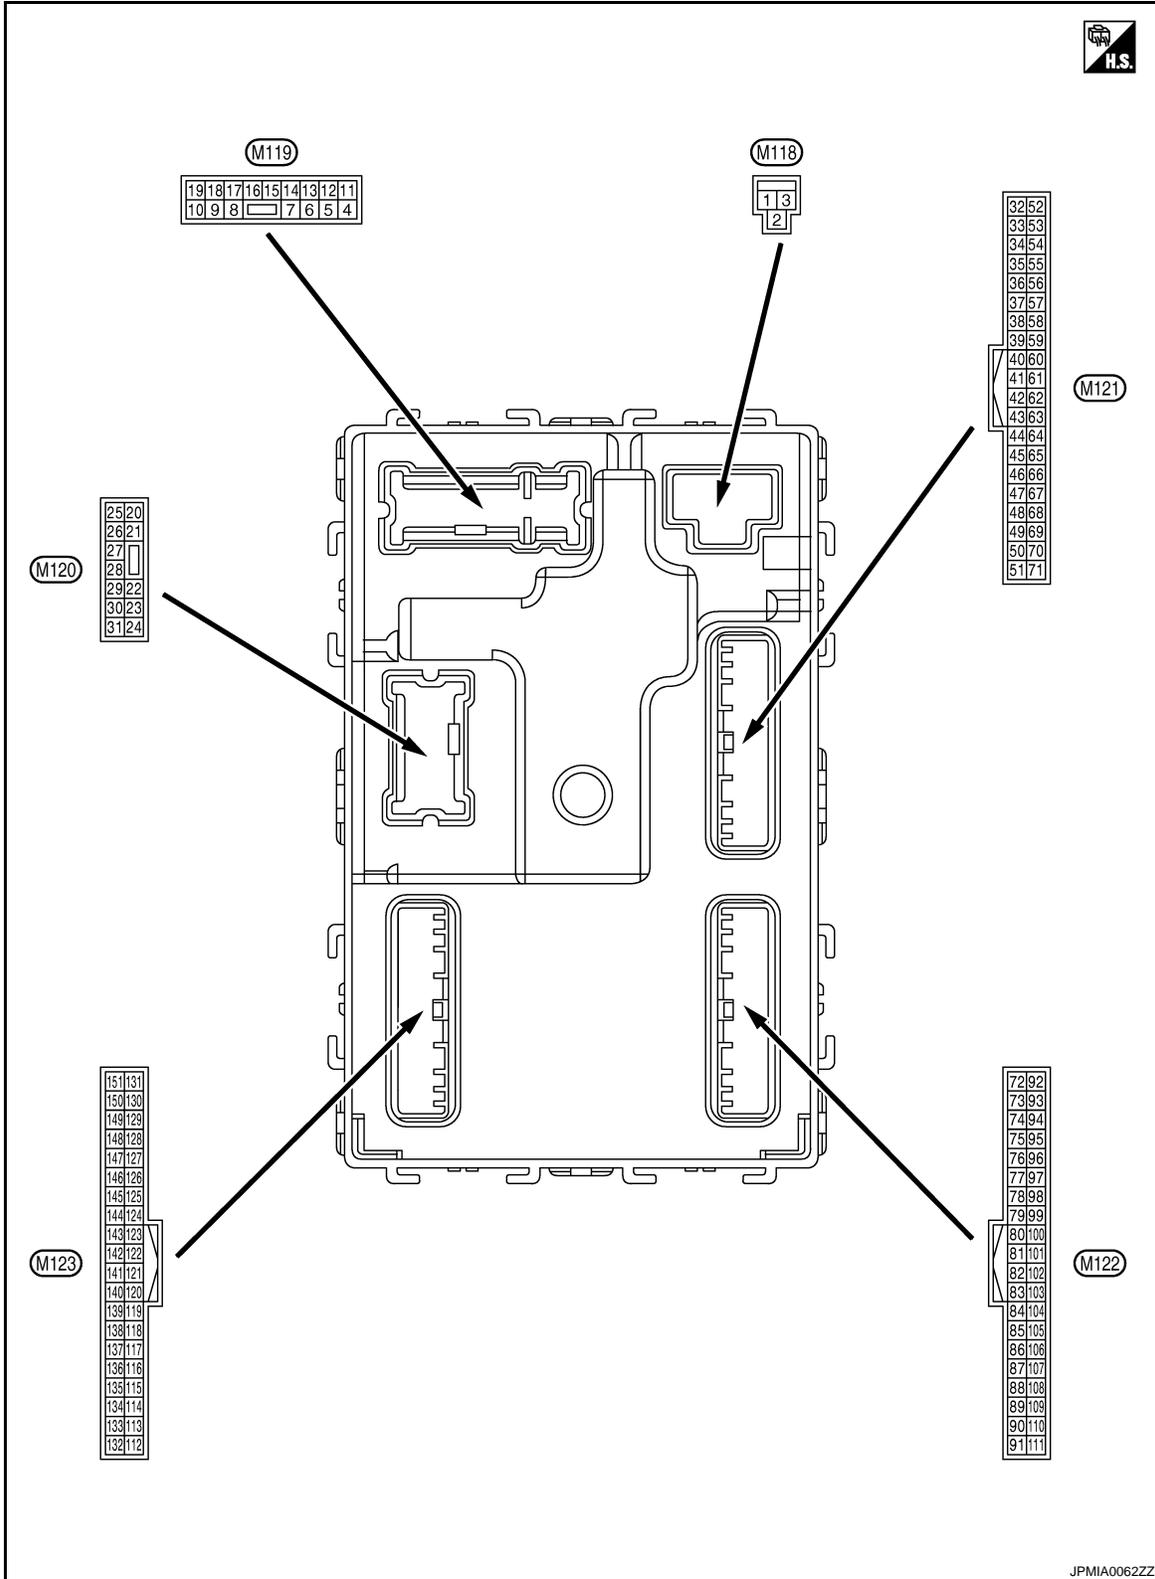


PHYSICAL VALUES

A  
 B  
 C  
 D  
 E  
 F  
 G  
 H  
 I  
 J  
 K  
 WW  
 M  
 N  
 O  
 P





# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >
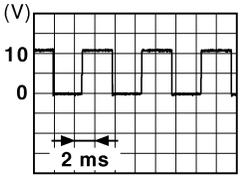
| Terminal No.<br>(Wire color) |        | Description   |                  | Condition   |  | Value<br>(Approx.)  |
|------------------------------|--------|---|------------------|---|--|---|
|                              |        | Signal name   | Input/<br>Output |   |  |   |
| +                            | -      |   |                  |   |  |   |
| 1<br>(W)                     | Ground | Battery power supply                                  | Input            | Ignition switch OFF   |  | Battery voltage   |
| 2<br>(Y)                     | Ground | P/W power supply<br>(BAT)                             | Output           | Ignition switch OFF   |  | Battery voltage   |
| 3<br>(O)                     | Ground | P/W power supply<br>(RAP)                             | Output           | Ignition switch ON  |  | Battery voltage   |
| 4<br>(LG)                    | Ground | Interior room lamp<br>power supply                    | Output           | Interior room lamp battery saver is activated.<br>(Cuts the interior room lamp power supply)        |  | 0 V   |
|                              |        |   |                  | Interior room lamp battery saver is not activated.<br>(Outputs the interior room lamp power supply) |  | Battery voltage   |
| 5<br>(L)                     | Ground | Passenger door UN-<br>LOCK                            | Output           | Passenger door  | UNLOCK<br>(Actuator is activated)                | Battery voltage   |
|                              |        |   |                  |   | Other than UNLOCK<br>(Actuator is not activated) | 0 V   |
| 7<br>(Y)                     | Ground | Step lamp   | Output           | Step lamp   | ON   | 0 V   |
|                              |        |   |                  |   | OFF  | Battery voltage   |
| 8<br>(V)                     | Ground | All doors, fuel lid<br>LOCK                           | Output           | All doors   | LOCK<br>(Actuator is activated)                  | Battery voltage   |
|                              |        |   |                  |   | Other than LOCK<br>(Actuator is not activated)   | 0 V   |
| 9<br>(G)                     | Ground | Driver door, fuel lid<br>UNLOCK                       | Output           | Driver door   | UNLOCK<br>(Actuator is activated)                | Battery voltage   |
|                              |        |   |                  |   | Other than UNLOCK<br>(Actuator is not activated) | 0 V   |
| 10<br>(BR)                   | Ground | Rear RH door and<br>rear LH door UN-<br>LOCK          | Output           | Rear RH door<br>and rear LH door  | UNLOCK<br>(Actuator is activated)                | Battery voltage   |
|                              |        |   |                  |   | Other than UNLOCK<br>(Actuator is not activated) | 0 V   |
| 11<br>(R)                    | Ground | Battery power supply                                  | Input            | Ignition switch OFF   |  | Battery voltage   |
| 13<br>(B)                    | Ground | Ground  | —                | Ignition switch ON  |  | 0 V   |
| 14<br>(W)                    | Ground | Push-button ignition<br>switch illumination<br>ground | Output           | Tail lamp   | OFF  | 0 V   |
|                              |        |   |                  |   | ON   | <p><b>NOTE:</b><br/>When the illumination brightening/dimming level is in the neutral position</p>  <p style="text-align: right;"><small>JSNIA0010GB</small></p> |
| 15<br>(Y)                    | Ground | ACC indicator lamp                                    | Output           | Ignition switch   | OFF or ON  | Battery voltage   |
|                              |        |   |                  |   | ACC  | 0 V   |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >
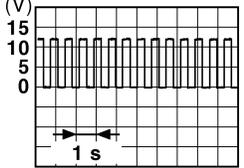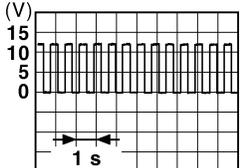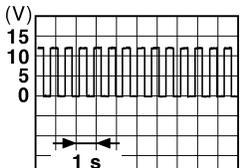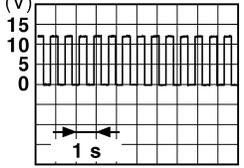
| Terminal No.<br>(Wire color) |        | Description                |                  | Condition  | Value<br>(Approx.)   |                 |
|------------------------------|--------|----------------------------|------------------|--|--|-----------------|
| +                            | -      | Signal name                | Input/<br>Output |  |  |                 |
| 17<br>(W)                    | Ground | Turn signal RH<br>(Front)  | Output           | Ignition switch<br>ON  | Turn signal switch OFF   | 0 V             |
|                              |        |                            |                  | Turn signal switch RH  | <br>6.5 V   |                 |
| 18<br>(O)                    | Ground | Turn signal LH<br>(Front)  | Output           | Ignition switch<br>ON  | Turn signal switch OFF   | 0 V             |
|                              |        |                            |                  | Turn signal switch LH  | <br>6.5 V   |                 |
| 19<br>(V)                    | Ground | Room lamp timer<br>control | Output           | Interior room<br>lamp  | OFF  | Battery voltage |
|                              |        |                            |                  | ON   | 0 V  |                 |
| 20<br>(V)                    | Ground | Turn signal RH<br>(Rear)   | Output           | Ignition switch<br>ON  | Turn signal switch OFF   | 0 V             |
|                              |        |                            |                  | Turn signal switch RH  | <br>6.5 V |                 |
| 23<br>(G)                    | Ground | Back door opening          | Output           | Back door  | OPEN<br>(Back door opener actuator<br>is activated)  | Battery voltage |
|                              |        |                            |                  | Other than OPEN<br>(Back door opener actuator<br>is not activated) | 0 V  |                 |
| 25<br>(G)                    | Ground | Turn signal LH (Rear)      | Output           | Ignition switch<br>ON  | Turn signal switch OFF   | 0 V             |
|                              |        |                            |                  | Turn signal switch LH  | <br>6.5 V |                 |
| 26<br>(G)                    | Ground | Rear wiper                 | Output           | Rear wiper   | OFF (Stopped)  | 0 V             |
|                              |        |                            |                  | ON (Operated)  | Battery voltage  |                 |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

| Terminal No.<br>(Wire color) |        | Description                |                  | Condition  | Value<br>(Approx.)  |
|------------------------------|--------|----------------------------|------------------|--|---|
| +                            | -      | Signal name                | Input/<br>Output |  |   |
| 34<br>(SB)                   | Ground | Luggage room antenna 1 (-) | Output           | Ignition switch OFF  | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
|                              |        |                            |                  | When Intelligent Key is not in the passenger compartment               | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 35<br>(V)                    | Ground | Luggage room antenna 1 (+) | Output           | Ignition switch OFF  | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
|                              |        |                            |                  | When Intelligent Key is not in the passenger compartment               | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 38<br>(B)                    | Ground | Rear bumper antenna (-)    | Output           | When the back door request switch is operated with ignition switch OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
|                              |        |                            |                  | When Intelligent Key is not in the antenna detection area              | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >





| Terminal No.<br>(Wire color) |        | Description                       |                  | Condition  | Value<br>(Approx.)  |
|------------------------------|--------|-----------------------------------|------------------|--|---|
|                              |        | Signal name                       | Input/<br>Output |  |   |
| +                            | -      |                                   |                  |  |   |
| 39<br>(W)                    | Ground | Rear bumper antenna (+)           | Output           | When the back door request switch is operated with ignition switch OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
|                              |        |                                   |                  | When Intelligent Key is not in the antenna detection area              | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 47<br>(Y)                    | Ground | Ignition relay (IPDM E/R) control | Output           | Ignition switch  | OFF or ACC<br>Battery voltage<br>ON<br>0 V                      |
|                              |        |                                   |                  | 52<br>(SB)   | Ground  |
| 61<br>(W)                    | Ground | Back door opener request switch   | Input            |  |   |
|                              |        |                                   |                  | 64<br>(V)  | Ground  |
| 65<br>(O)                    | Ground | Rear wiper stop position          | Input            |  |   |
|                              |        |                                   |                  | 64<br>(V)  | Ground  |
| 65<br>(O)                    | Ground | Rear wiper stop position          | Input            |  |   |
|                              |        |                                   |                  | 65<br>(O)  | Ground  |
|                              |        |                                   |                  |  |   |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >
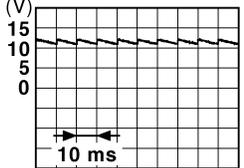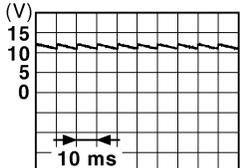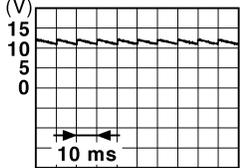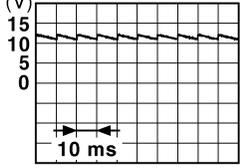
| Terminal No.<br>(Wire color) |        | Description             |                  | Condition               | Value<br>(Approx.) |   |
|------------------------------|--------|-------------------------|------------------|-------------------------|--------------------|---|
|                              |        | Signal name             | Input/<br>Output |                         |                    |   |
| +                            | -      |                         |                  |                         |                    |   |
| 66<br>(R)                    | Ground | Back door switch        | Input            | Back door switch        | OFF (Door close)   | <br>11.8 V   |
|                              |        |                         |                  |                         | ON (Door open)     | 0 V   |
| 67<br>(GR)                   | Ground | Back door opener switch | Input            | Back door opener switch | Pressed            | 0 V   |
|                              |        |                         |                  |                         | Not pressed        | <br>11.8 V   |
| 68<br>(BR)                   | Ground | Rear RH door switch     | Input            | Rear RH door switch     | OFF (Door close)   | <br>11.8 V  |
|                              |        |                         |                  |                         | ON (Door open)     | 0 V   |
| 69<br>(R)                    | Ground | Rear LH door switch     | Input            | Rear LH door switch     | OFF (Door close)   | <br>11.8 V |
|                              |        |                         |                  |                         | ON (Door open)     | 0 V   |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

| Terminal No.<br>(Wire color) |        | Description                            |                  | Condition   | Value<br>(Approx.)  |
|------------------------------|--------|--|------------------|---|---|
|                              |        | Signal name                            | Input/<br>Output |   |   |
| +                            | -      |  |                  |   |   |
| 72<br>(R)                    | Ground | Room antenna 2 (-)<br>(Center console) | Output           | Ignition switch<br>OFF  | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
|                              |        |  |                  | When Intelligent Key is not<br>in the passenger compart-<br>ment                              | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 73<br>(G)                    | Ground | Room antenna 2 (+)<br>(Center console) | Output           | Ignition switch<br>OFF  | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
|                              |        |  |                  | When Intelligent Key is not<br>in the passenger compart-<br>ment                              | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 74<br>(SB)                   | Ground | Passenger door an-<br>tenna (-)        | Output           | When the pas-<br>senger door re-<br>quest switch is<br>operated with ig-<br>nition switch OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
|                              |        |  |                  | When Intelligent Key is not<br>in the antenna detec-<br>tion<br>area                          | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

| Terminal No.<br>(Wire color) |        | Description                |                  | Condition   | Value<br>(Approx.)  |
|------------------------------|--------|----------------------------|------------------|---|---|
| +                            | -      | Signal name                | Input/<br>Output |   |   |
| 75<br>(GR)                   | Ground | Passenger door antenna (+) | Output           | When Intelligent Key is in the antenna detection area     | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
|                              |        |                            |                  | When Intelligent Key is not in the antenna detection area | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 76<br>(V)                    | Ground | Driver door antenna (-)    | Output           | When Intelligent Key is in the antenna detection area     | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
|                              |        |                            |                  | When Intelligent Key is not in the antenna detection area | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 77<br>(LG)                   | Ground | Driver door antenna (+)    | Output           | When Intelligent Key is in the antenna detection area     | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
|                              |        |                            |                  | When Intelligent Key is not in the antenna detection area | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >







| Terminal No.<br>(Wire color) |        | Description                                  |                  | Condition  | Value<br>(Approx.)  |   |
|------------------------------|--------|--|------------------|--|---|---|
| +                            | -      | Signal name                                  | Input/<br>Output |  |   |   |
| 78<br>(Y)                    | Ground | Room antenna (-)<br>(Instrument panel)       | Output           | Ignition switch<br>OFF   |   |   |
|                              |        |  |                  | When Intelligent Key is not<br>in the passenger compart-<br>ment |   |   |
| 79<br>(BR)                   | Ground | Room antenna (+)<br>(Instrument panel)       | Output           | Ignition switch<br>OFF   |   |   |
|                              |        |  |                  | When Intelligent Key is not<br>in the passenger compart-<br>ment |   |   |
| 80<br>(GR)                   | Ground | NATS antenna amp<br>(Built in key slot)      | Input/<br>Output | During waiting   | Ignition switch is pressed<br>while inserting the key into<br>the key slot. | Just after pressing ignition<br>switch. Pointer of tester should<br>move. |
| 81<br>(W)                    | Ground | NATS antenna amp<br>(Built in key slot)      | Input/<br>Output | During waiting   | Ignition switch is pressed<br>while inserting the key into<br>the key slot. | Just after pressing ignition<br>switch. Pointer of tester should<br>move. |
| 82<br>(R)                    | Ground | Ignition relay [Fuse<br>block (J/B)] control | Output           | Ignition switch  | OFF or ACC  | 0 V   |
|                              |        |  |                  | ON   | Battery voltage   |   |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW





# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >
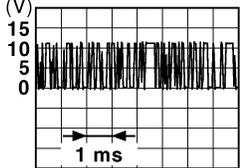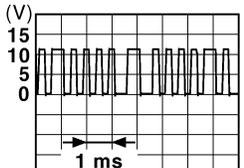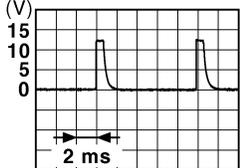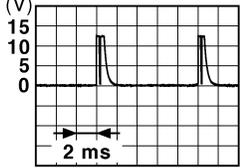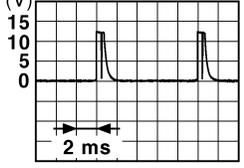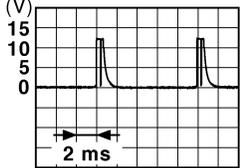
| Terminal No.<br>(Wire color) |        | Description                             |                  | Condition                               | Value<br>(Approx.)  |  |
|------------------------------|--------|---|------------------|---|---|--|
|                              |        | Signal name                             | Input/<br>Output |   |   |  |
| +                            | -      |   |                  |   |   |  |
| 83<br>(Y)                    | Ground | Remote keyless entry<br>receiver signal | Input/<br>Output | During waiting                          |  <p style="text-align: right; font-size: small;">JMKIA0064GB</p>   |  |
|                              |        |   |                  | When operating either button on the key |  <p style="text-align: right; font-size: small;">JMKIA0065GB</p>   |  |
| 87<br>(BR)                   | Ground | Combination switch<br>INPUT 5           | Input            | Combination<br>switch                   | All switch OFF<br>(Wiper intermittent dial 4)   |  <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>  |
|                              |        |   |                  |   | Front fog lamp switch ON<br>(Wiper intermittent dial 4)   |  <p style="text-align: right; font-size: small;">JPMIA0037GB</p> <p style="text-align: center;">1.3 V</p> |
|                              |        |   |                  |   | Rear wiper switch ON<br>(Wiper intermittent dial 4)   |  <p style="text-align: right; font-size: small;">JPMIA0039GB</p> <p style="text-align: center;">1.3 V</p> |
|                              |        |   |                  |   | Any of the conditions below<br>with all switch OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul> |  <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p> |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

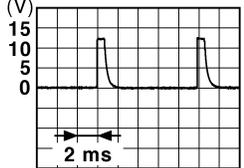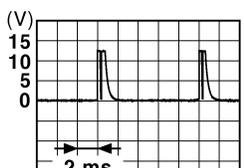
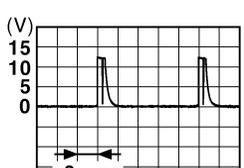
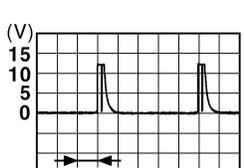
| Terminal No.<br>(Wire color) |        | Description                                  |                  | Condition   | Value<br>(Approx.)                                   |  |
|------------------------------|--------|--|------------------|---|--|--|
|                              |        | Signal name                                  | Input/<br>Output |   |  |  |
| +                            | -      |  |                  |   |  |  |
| 88<br>(V)                    | Ground | Combination switch<br>INPUT 3                | Input            | Combination<br>switch                             | All switch OFF<br>(Wiper intermittent dial 4)        | <br>1.4 V   |
|                              |        |  |                  |   | Lighting switch HI<br>(Wiper intermittent dial 4)    | <br>1.3 V   |
|                              |        |  |                  |   | Lighting switch 2ND<br>(Wiper intermittent dial 4)   | <br>1.3 V  |
|                              |        |  |                  |   | Rear washer switch ON<br>(Wiper intermittent dial 4) | <br>1.3 V |
|                              |        |  |                  |   | Any of the conditions below<br>with all switch OFF   | <br>1.3 V |
|                              |        |  |                  |   |  |  |
| 89<br>(BR)                   | Ground | Push-button ignition<br>switch (Push switch) | Input            | Push-button igni-<br>tion switch (push<br>switch) | Pressed  | 0 V  |
|                              |        |  |                  |   | Not pressed  | Battery voltage  |
| 90<br>(P)                    | Ground | CAN-L  | Input/<br>Output |   | —  | —  |
| 91<br>(L)                    | Ground | CAN-H  | Input/<br>Output |   | —  | —  |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW






# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >
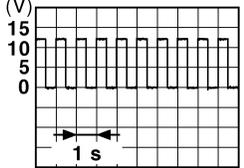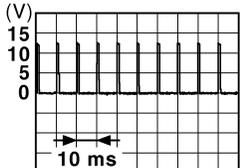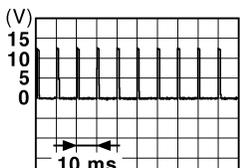
| Terminal No.<br>(Wire color) |        | Description                                    |                  | Condition                     | Value<br>(Approx.)        |  |
|------------------------------|--------|--|------------------|-------------------------------|---------------------------|--|
| +                            | -      | Signal name                                    | Input/<br>Output |                               |                           |  |
| 92<br>(LG)                   | Ground | Key slot illumination                          | Output           | Key slot illumination         | OFF                       | Battery voltage  |
|                              |        |  |                  |                               | Blinking                  |  <p style="text-align: center;">6.5 V</p> <p style="text-align: right; font-size: small;">JPMIA0015GB</p>   |
| 93<br>(V)                    | Ground | ON indicator lamp                              | Output           | Ignition switch               | OFF or ACC                | Battery voltage  |
|                              |        |  |                  |                               | ON                        | 0 V  |
| 94<br>(Y)                    | Ground | Puddle lamp control                            | Output           | Puddle lamp                   | OFF                       | Battery voltage  |
|                              |        |  |                  |                               | ON                        | 0 V  |
| 95<br>(O)                    | Ground | ACC relay control                              | Output           | Ignition switch               | OFF                       | 0 V  |
|                              |        |  |                  |                               | ACC or ON                 | Battery voltage  |
| 96<br>(GR)                   | Ground | Control device (Detention switch) power supply | Output           | —                             | Battery voltage           |  |
| 97<br>(L)                    | Ground | Steering lock condition No. 1                  | Input            | Steering lock                 | LOCK status               | 0 V  |
|                              |        |  |                  |                               | UNLOCK status             | Battery voltage  |
| 98<br>(P)                    | Ground | Steering lock condition No. 2                  | Input            | Steering lock                 | LOCK status               | Battery voltage  |
|                              |        |  |                  |                               | UNLOCK status             | 0 V  |
| 99<br>(R)                    | Ground | Selector lever P position switch               | Input            | Selector lever                | P position                | 0 V  |
|                              |        |  |                  |                               | Any position other than P | Battery voltage  |
| 100<br>(G)                   | Ground | Passenger door request switch                  | Input            | Passenger door request switch | ON (Pressed)              | 0 V  |
|                              |        |  |                  |                               | OFF (Not pressed)         |  <p style="text-align: center;">1.0 V</p> <p style="text-align: right; font-size: small;">JPMIA0016GB</p> |
| 101<br>(SB)                  | Ground | Driver door request switch                     | Input            | Driver door request switch    | ON (Pressed)              | 0 V  |
|                              |        |  |                  |                               | OFF (Not pressed)         |  <p style="text-align: center;">1.0 V</p> <p style="text-align: right; font-size: small;">JPMIA0016GB</p> |
| 102<br>(O)                   | Ground | Blower fan motor relay control                 | Output           | Ignition switch               | OFF or ACC                | 0 V  |
|                              |        |  |                  |                               | ON                        | Battery voltage  |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

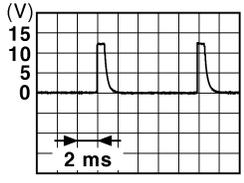
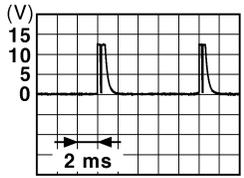
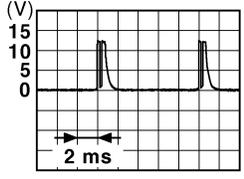
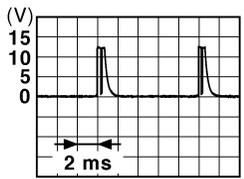
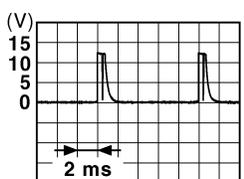
| Terminal No.<br>(Wire color) |        | Description                                |                  | Condition                                      | Value<br>(Approx.)     |  |
|------------------------------|--------|--|------------------|--|------------------------|--|
|                              |        | Signal name                                | Input/<br>Output |  |                        |  |
| +                            | -      |  |                  |  |                        |  |
| 103<br>(LG)                  | Ground | Remote keyless entry receiver power supply | Output           | Ignition switch OFF                            | Battery voltage        |  |
| 106<br>(W)                   | Ground | Steering wheel lock unit power supply      | Output           | Ignition switch                                | OFF or ACC             |  |
|                              |        |  |                  |  | ON                     | 0 V  |
| 107<br>(LG)                  | Ground | Combination switch INPUT 1                 | Input            | Combination switch (Wiper intermittent dial 4) | All switch OFF         |  <p style="text-align: center;">1.4 V</p>   |
|                              |        |  |                  |  | Turn signal switch LH  |  <p style="text-align: center;">1.3 V</p>   |
|                              |        |  |                  |  | Turn signal switch RH  |  <p style="text-align: center;">1.3 V</p> |
|                              |        |  |                  |  | Front wiper switch LO  |  <p style="text-align: center;">1.3 V</p> |
|                              |        |  |                  |  | Front washer switch ON |  <p style="text-align: center;">1.3 V</p> |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW







# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >
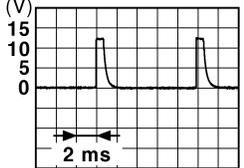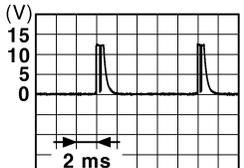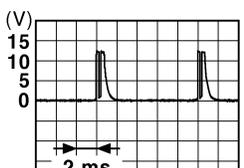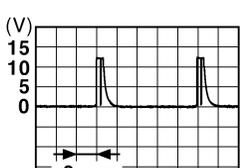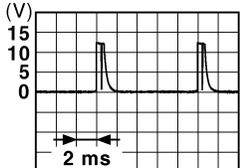
| Terminal No.<br>(Wire color) |        | Description                   |                  | Condition             | Value<br>(Approx.)                                   |  |
|------------------------------|--------|-------------------------------|------------------|-----------------------|--|--|
|                              |        | Signal name                   | Input/<br>Output |                       |  |  |
| +                            | -      |                               |                  |                       |  |  |
| 108<br>(R)                   | Ground | Combination switch<br>INPUT 4 | Input            | Combination<br>switch | All switch OFF<br>(Wiper intermittent dial 4)        |  <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>   |
|                              |        |                               |                  |                       | Lighting switch AUTO<br>(Wiper intermittent dial 4)  |  <p style="text-align: right; font-size: small;">JPMIA0038GB</p> <p style="text-align: center;">1.3 V</p>   |
|                              |        |                               |                  |                       | Lighting switch 1ST<br>(Wiper intermittent dial 4)   |  <p style="text-align: right; font-size: small;">JPMIA0036GB</p> <p style="text-align: center;">1.3 V</p>  |
|                              |        |                               |                  |                       | Rear wiper switch INT<br>(Wiper intermittent dial 4) |  <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p>   |
|                              |        |                               |                  |                       | Any of the conditions below<br>with all switch OFF   | <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 5</li> <li>• Wiper intermittent dial 6</li> </ul>  <p style="text-align: right; font-size: small;">JPMIA0039GB</p> <p style="text-align: center;">1.3 V</p> |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >
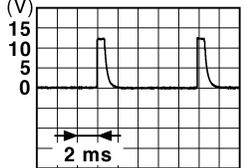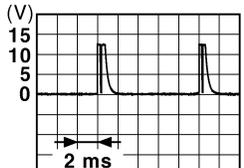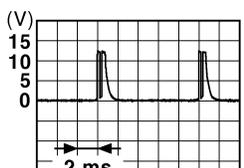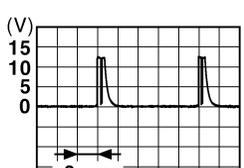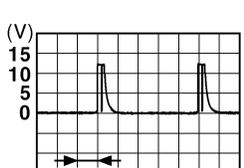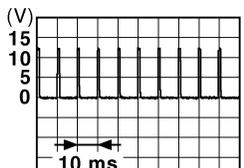
| Terminal No.<br>(Wire color) |        | Description                   |                  | Condition  | Value<br>(Approx.)     |  |
|------------------------------|--------|-------------------------------|------------------|--|------------------------|--|
|                              |        | Signal name                   | Input/<br>Output |  |                        |  |
| +                            | -      |                               |                  |  |                        |  |
| 109<br>(Y)                   | Ground | Combination switch<br>INPUT 2 | Input            | Combination<br>switch<br>(Wiper intermittent dial 4) | All switch OFF         | <br>1.4 V   |
|                              |        |                               |                  |  | Lighting switch PASS   | <br>1.3 V   |
|                              |        |                               |                  |  | Lighting switch 2ND    | <br>1.3 V  |
|                              |        |                               |                  |  | Front wiper switch INT | <br>1.3 V |
|                              |        |                               |                  |  | Front wiper switch HI  | <br>1.3 V |
|                              |        |                               |                  |  | ON                     | 0 V  |
| 110<br>(G)                   | Ground | Hazard switch                 | Input            | Hazard switch  | OFF                    | <br>1.1 V |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW





# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

| Terminal No.<br>(Wire color) |        | Description   |                  | Condition   | Value<br>(Approx.)                           |   |
|------------------------------|--------|---|------------------|---|--|---|
| +                            | -      | Signal name   | Input/<br>Output |   |  |   |
| 111<br>(Y)                   | Ground | Steering lock unit<br>communication                                     | Input/<br>Output | Steering lock   | LOCK status                                  | Battery voltage   |
|                              |        |   |                  |   | LOCK or UNLOCK                               | <p style="text-align: right; font-size: small;">JMkia0066GB</p> |
|                              |        |   |                  |   | For 15 seconds after UN-<br>LOCK             | Battery voltage   |
|                              |        |   |                  |   | 15 seconds or later after<br>UNLOCK          | 0 V   |
| 113*<br>(P)                  | Ground | Optical sensor signal   | Input            | Ignition switch<br>ON   | When bright outside of the<br>vehicle        | Close to 5 V  |
|                              |        |   |                  |   | When dark outside of the<br>vehicle          | Close to 0 V  |
| 116<br>(SB)                  | Ground | Fuse check [Stop<br>lamp switch, ICC<br>brake hold relay<br>(With ICC)] | Input            | —   | Battery voltage                              |   |
| 118<br>(P)                   | Ground | Stop lamp switch<br>(Without ICC)                                       | Input            | Stop lamp switch  | OFF (Brake pedal is not<br>depressed)        | 0 V   |
|                              |        |   |                  |   | ON (Brake pedal is de-<br>pressed)           | Battery voltage   |
|                              |        | Stop lamp switch and<br>ICC brake hold relay<br>(With ICC)              |                  | Stop lamp switch OFF (Brake pedal is not de-<br>pressed) and ICC brake hold relay OFF | 0 V  |   |
|                              |        |   |                  | Stop lamp switch ON (Brake pedal is de-<br>pressed) or ICC brake hold relay ON        | Battery voltage                              |   |
| 119<br>(SB)                  | Ground | Front door lock as-<br>sembly driver side<br>(unlock sensor)            | Input            | Driver door   | LOCK status<br>(Unlock sensor switch<br>OFF) | <p style="text-align: right; font-size: small;">JPMIA0012GB</p> |
|                              |        |   |                  |   | UNLOCK status<br>(Unlock switch sensor ON)   | 0 V   |
|                              |        |   |                  |   | 1.1 V  |   |
| 121<br>(BR)                  | Ground | Key slot switch   | Input            | When the key is inserted into key slot  | Battery voltage                              |   |
|                              |        |   |                  | When the key is not inserted into key slot  | 0 V  |   |
| 122<br>(V)                   | Ground | ACC feedback signal   | Input            | Ignition switch   | OFF  | 0 V   |
|                              |        |   |                  |   | ACC or ON                                    | Battery voltage   |
| 123<br>(W)                   | Ground | IGN feedback signal   | Input            | Ignition switch   | OFF or ACC                                   | 0 V   |
|                              |        |   |                  |   | ON   | Battery voltage   |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

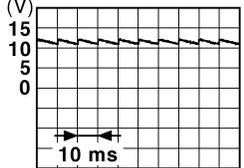
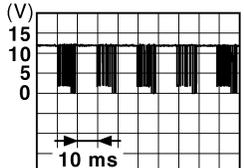
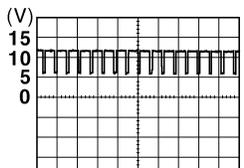
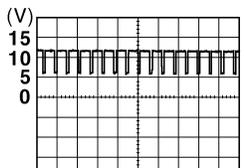
| Terminal No.<br>(Wire color) |        | Description                                 |                  | Condition  | Value<br>(Approx.)  |                 |
|------------------------------|--------|---|------------------|--|---|-----------------|
| +                            | -      | Signal name                                 | Input/<br>Output |  |   |                 |
| 124<br>(LG)                  | Ground | Passenger door<br>switch                    | Input            | Passenger door<br>switch                           |  <p style="text-align: right; font-size: small;">JPMIA0011GB</p> <p style="text-align: center;">11.8 V</p>   |                 |
|                              |        |   |                  | OFF (Door close)                                   | 0 V   |                 |
| 132<br>(V)                   | Ground | Power window switch<br>communication        | Input/<br>Output | Ignition switch ON                                 |  <p style="text-align: right; font-size: small;">JPMIA0013GB</p> <p style="text-align: center;">10.2 V</p>   |                 |
|                              |        |   |                  | Ignition switch OFF or ACC                         | Battery voltage   |                 |
| 133<br>(W)                   | Ground | Push-button ignition<br>switch illumination | Output           | Push-button igni-<br>tion switch illumina-<br>tion | <p><b>NOTE:</b><br/>The pulse width of this wave is<br/>varied by the illumination bright-<br/>ening/dimming level.</p>  <p style="text-align: right; font-size: small;">JPMIA0159GB</p> |                 |
|                              |        |   |                  | ON (Tail lamps OFF)                                | 9.5 V   |                 |
|                              |        |   |                  | ON (Tail lamps ON)                                 | <p><b>NOTE:</b><br/>The pulse width of this wave is<br/>varied by the illumination bright-<br/>ening/dimming level.</p>  <p style="text-align: right; font-size: small;">JPMIA0159GB</p> |                 |
| OFF                          | 0 V    |   |                  |  |   |                 |
| 134<br>(GR)                  | Ground | LOCK indicator lamp                         | Output           | LOCK indicator<br>lamp                             | OFF   | Battery voltage |
|                              |        |   |                  | ON   | 0 V   |                 |
| 137<br>(O)                   | Ground | Receiver and sensor<br>ground               | Input            | Ignition switch ON                                 | 0 V   |                 |
| 138<br>(Y)                   | Ground | Sensor power supply                         | Output           | Ignition switch                                    | OFF   | 0 V             |
|                              |        |   |                  | ACC or ON  | 5.0 V   |                 |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW





# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >
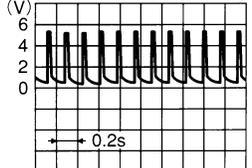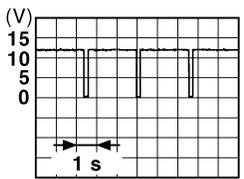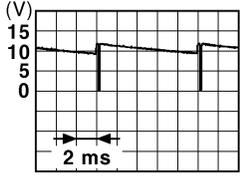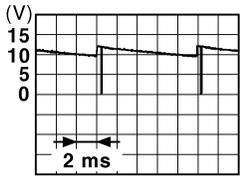
| Terminal No.<br>(Wire color) |        | Description                        |                  | Condition  | Value<br>(Approx.)   |
|------------------------------|--------|------------------------------------|------------------|--|--|
| +                            | -      | Signal name                        | Input/<br>Output |  |  |
| 139<br>(L)                   | Ground | Tire pressure receiver signal      | Input/<br>Output | Ignition switch ON   | Standby state<br> |
|                              |        |                                    |                  | When receiving the signal from the transmitter<br>  |  |
| 140<br>(GR)                  | Ground | Selector lever P/N position signal | Input            | Selector lever   | P or N position<br>Battery voltage   |
|                              |        |                                    |                  | Except P and N positions   | 0 V  |
| 141<br>(G)                   | Ground | Security indicator signal          | Output           | Security indicator   | ON<br>0 V  |
|                              |        |                                    |                  | Blinking<br>   | 11.3 V   |
|                              |        |                                    |                  | OFF  | Battery voltage  |
| 142<br>(O)                   | Ground | Combination switch OUTPUT 5        | Output           | Combination switch (Wiper intermittent dial 4)   | All switch OFF<br>0 V  |
|                              |        |                                    |                  | Lighting switch 1ST  |                 |
|                              |        |                                    |                  | Lighting switch HI   |  |
|                              |        |                                    |                  | Lighting switch 2ND  |  |
| Turn signal switch RH        | 10.7 V |                                    |                  |  |  |
| 143<br>(P)                   | Ground | Combination switch OUTPUT 1        | Output           | Combination switch   | All switch OFF (Wiper intermittent dial 4)<br>0 V  |
|                              |        |                                    |                  | Front wiper switch HI (Wiper intermittent dial 4)  |                 |
|                              |        |                                    |                  | Rear wiper switch INT (Wiper intermittent dial 4)  |  |
|                              |        |                                    |                  | Any of the conditions below with all switch OFF<br>• Wiper intermittent dial 1<br>• Wiper intermittent dial 2<br>• Wiper intermittent dial 3<br>• Wiper intermittent dial 6<br>• Wiper intermittent dial 7 |  |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >
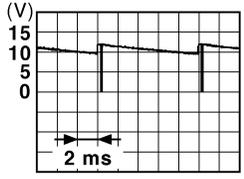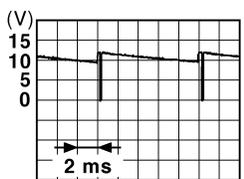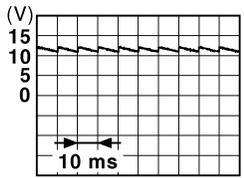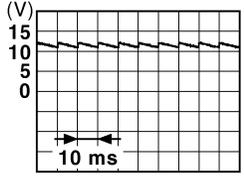
| Terminal No.<br>(Wire color) |        | Description                             |                  | Condition   | Value<br>(Approx.)   |   |        |
|------------------------------|--------|---|------------------|---|--|---|--------|
|                              |        | Signal name                             | Input/<br>Output |   |  |   |        |
| +                            | -      |   |                  |   |  |   |        |
| 144<br>(G)                   | Ground | Combination switch<br>OUTPUT 2          | Output           | Combination<br>switch                                     | All switch OFF<br>(Wiper intermittent dial 4)  | 0 V   |        |
|                              |        |   |                  |   | Front washer switch ON<br>(Wiper intermittent dial 4)  |    |        |
|                              |        |   |                  |   | Rear wiper switch ON<br>(Wiper intermittent dial 4)  |   |        |
|                              |        |   |                  |   | Rear washer switch ON<br>(Wiper intermittent dial 4)   |   |        |
|                              |        |   |                  |   | Any of the conditions below<br>with all switch OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 5</li> <li>• Wiper intermittent dial 6</li> </ul> |   | 10.7 V |
| 145<br>(L)                   | Ground | Combination switch<br>OUTPUT 3          | Output           | Combination<br>switch<br>(Wiper intermit-<br>tent dial 4) | All switch OFF   | 0 V   |        |
|                              |        |   |                  |   | Front wiper switch INT   |    |        |
|                              |        |   |                  |   | Front wiper switch LO  |   |        |
|                              |        |   |                  |   | Lighting switch AUTO   |   | 10.7 V |
| 146<br>(SB)                  | Ground | Combination switch<br>OUTPUT 4          | Output           | Combination<br>switch<br>(Wiper intermit-<br>tent dial 4) | All switch OFF   | 0 V   |        |
|                              |        |   |                  |   | Front fog lamp switch ON   |  |        |
|                              |        |   |                  |   | Lighting switch 2ND  |   |        |
|                              |        |   |                  |   | Lighting switch PASS   |   |        |
|                              |        |   |                  |   | Turn signal switch LH  |   | 10.7 V |
| 149<br>(W)                   | Ground | Tire pressure warn-<br>ing check switch | Input            | Ignition switch ON  |   | 11.8 V  |        |
| 150<br>(LG)                  | Ground | Driver door switch                      | Input            | Driver door<br>switch                                     | OFF (Door close)   |  | 11.8 V |
|                              |        |   |                  |   | ON (Door open)   | 0 V   |        |
| 151<br>(G)                   | Ground | Rear window defog-<br>ger relay         | Output           | Rear window de-<br>fogger                                 | Active   | 0 V   |        |
|                              |        |   |                  |   | Not activated  | Battery voltage   |        |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS >

NOTE:

\*: With auto light system

## Wiring Diagram - BCM -

INFOID:000000003769973

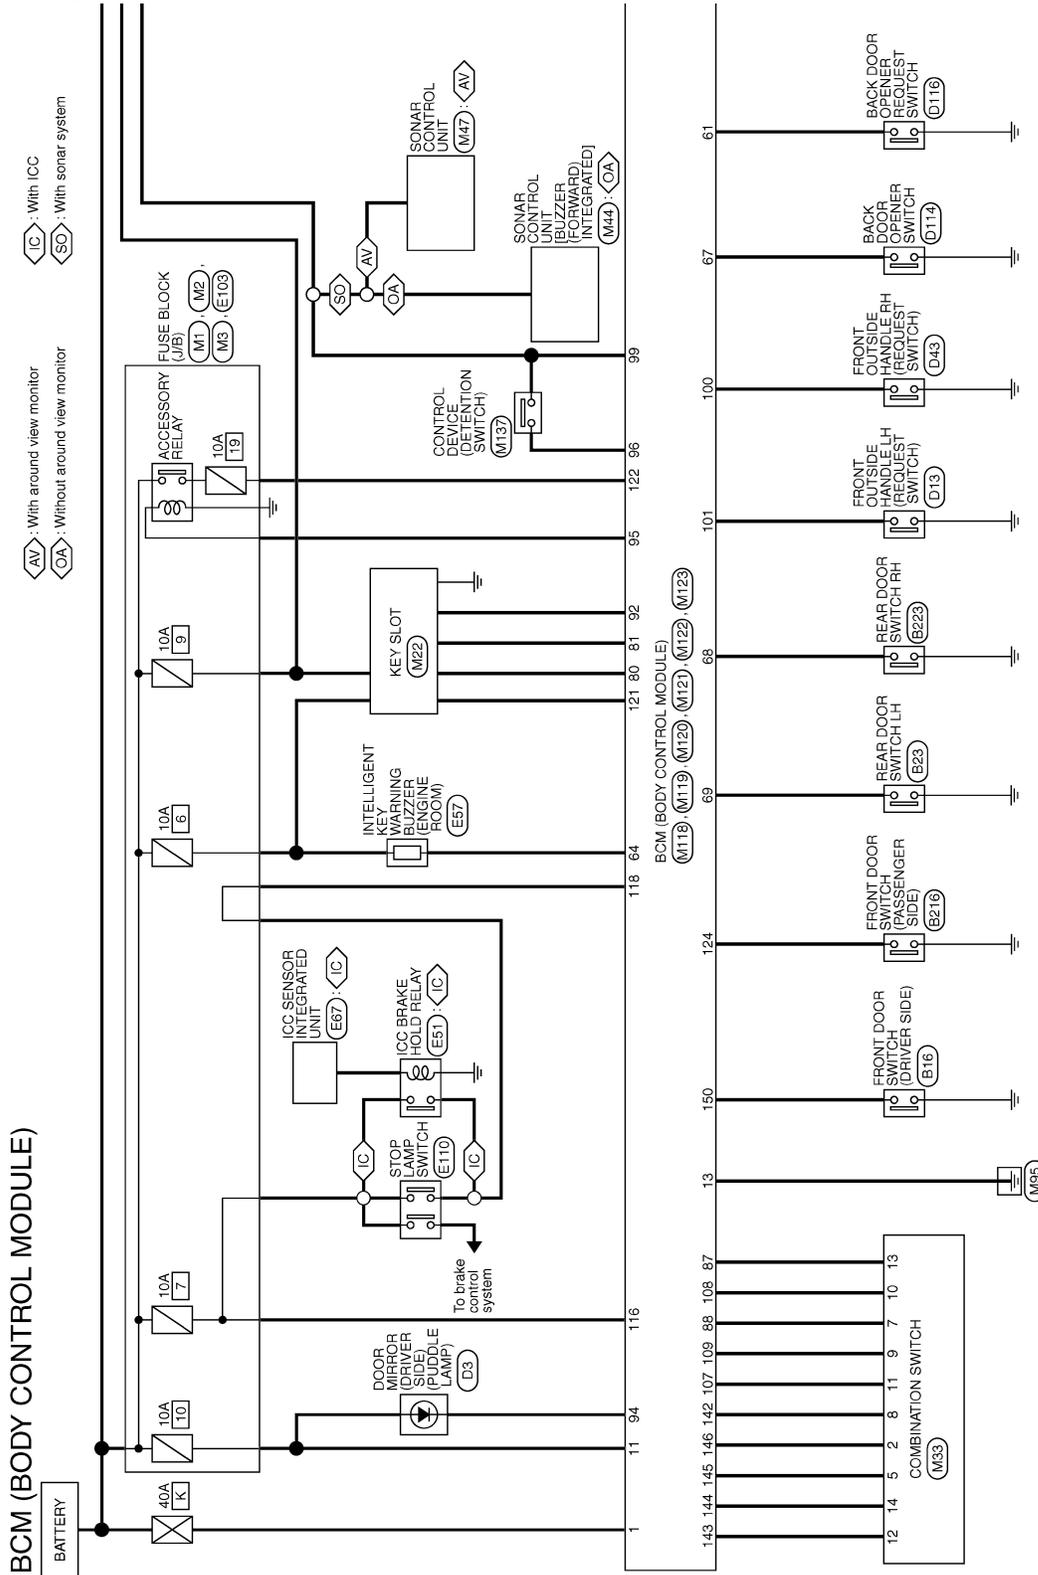


JCMWM1398G

2007/10/26

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

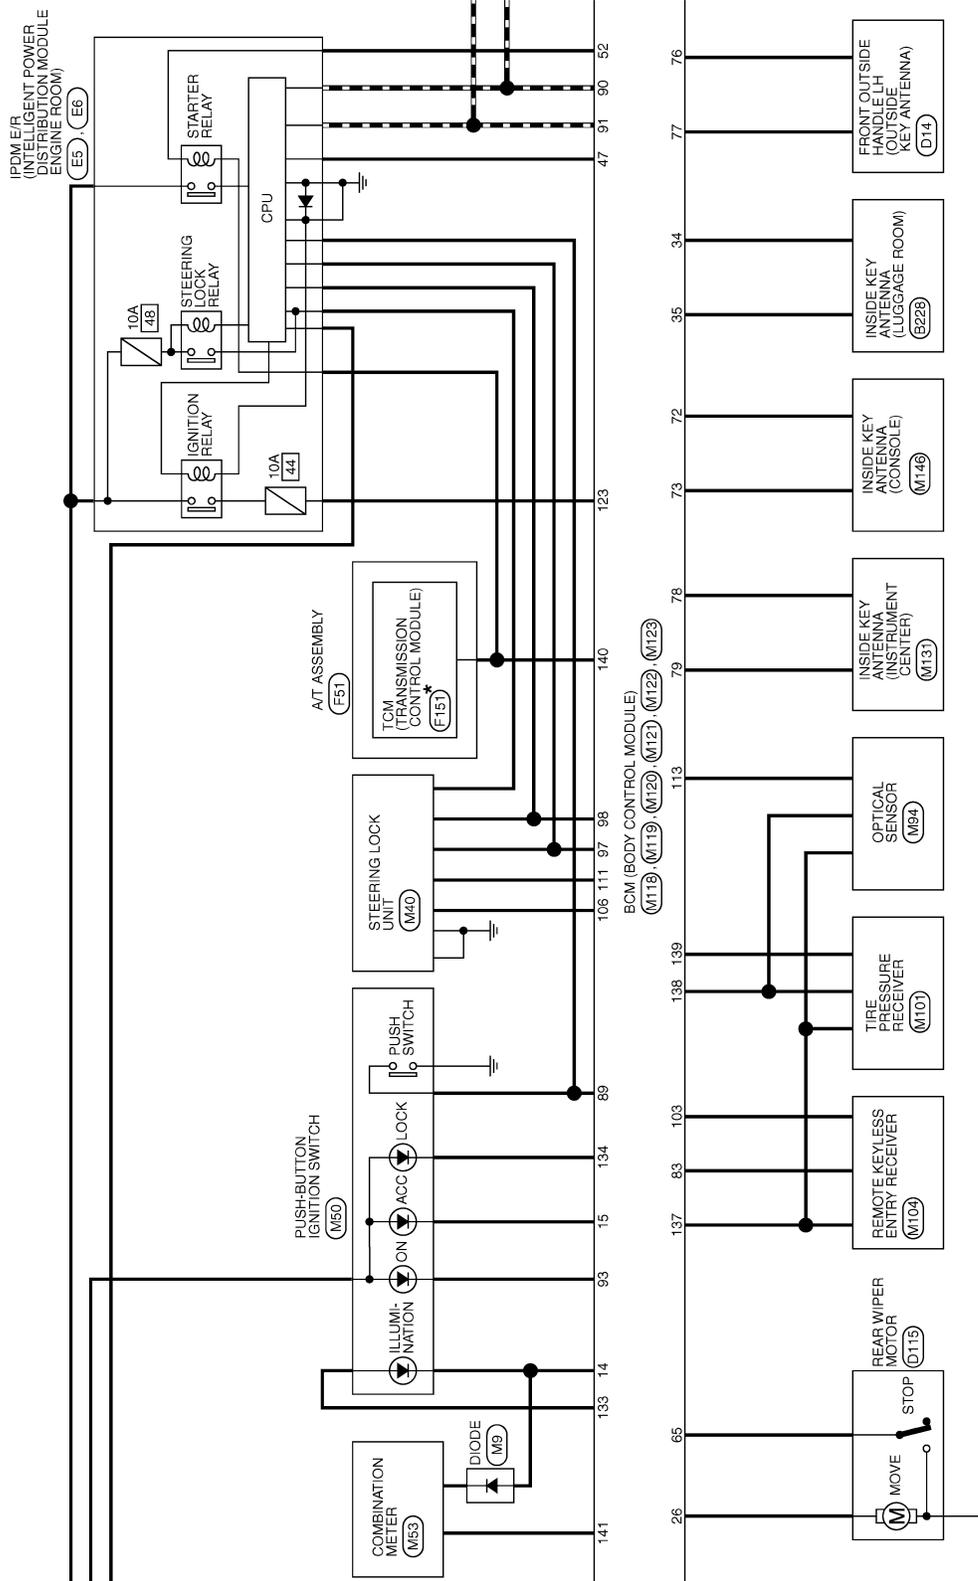

\*: This connector is not shown in "Harness Layout".

JCMWM1399G1



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

- ◊NV◊ : With NAVI
- ◊ON◊ : Without NAVI
- ◊RF◊ : With sunroof
- ◊PM◊ : With automatic drive positioner
- ◊OP◊ : Without automatic drive positioner

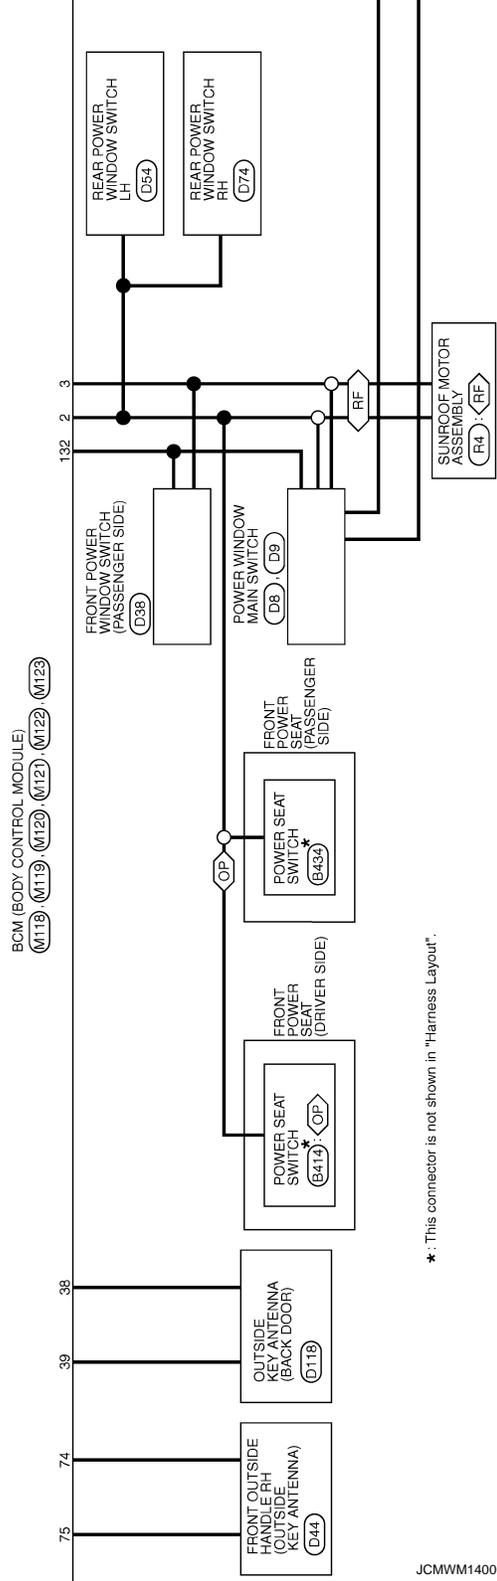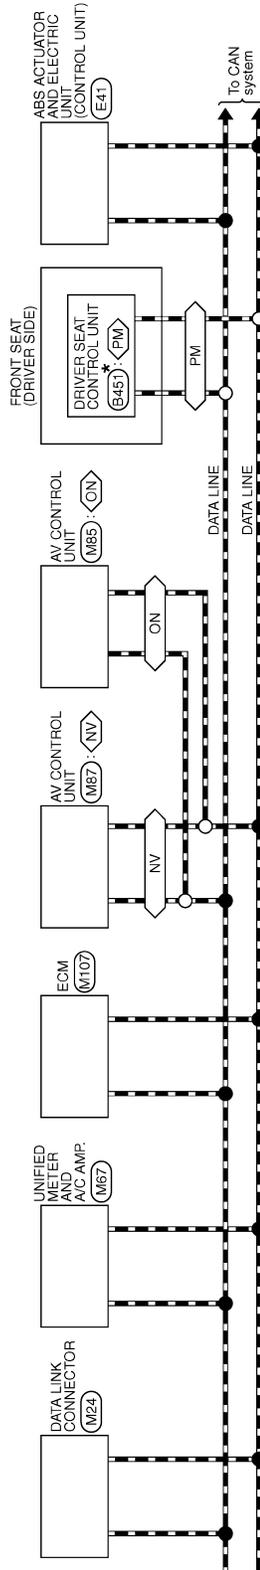


\* : This connector is not shown in "Harness Layout".

JCMWM1400G

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

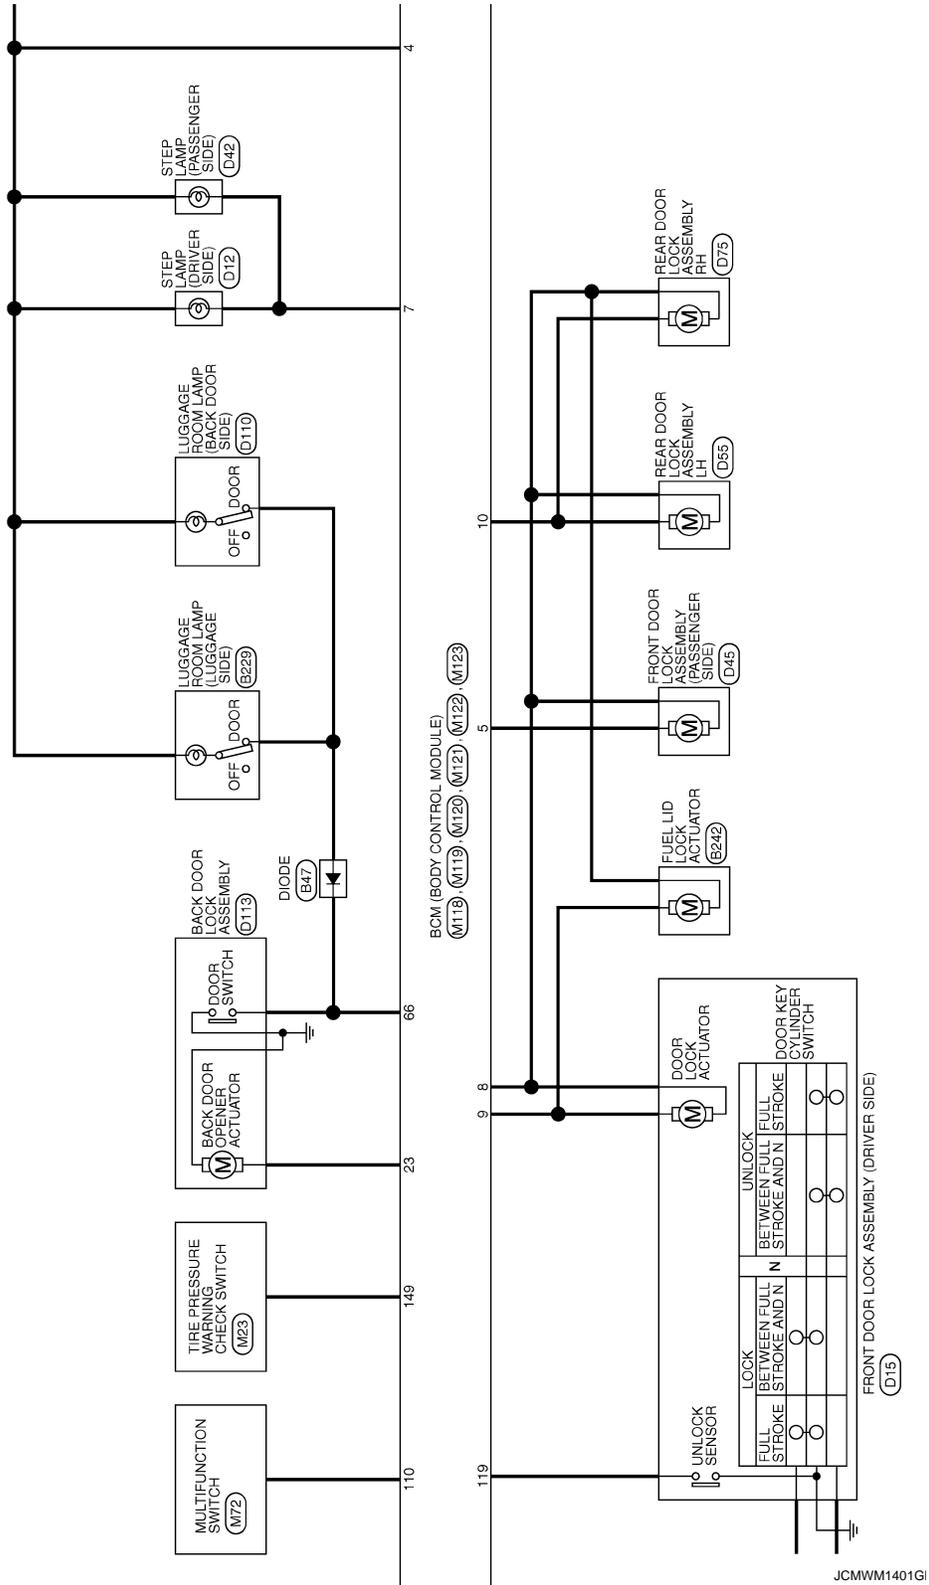


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

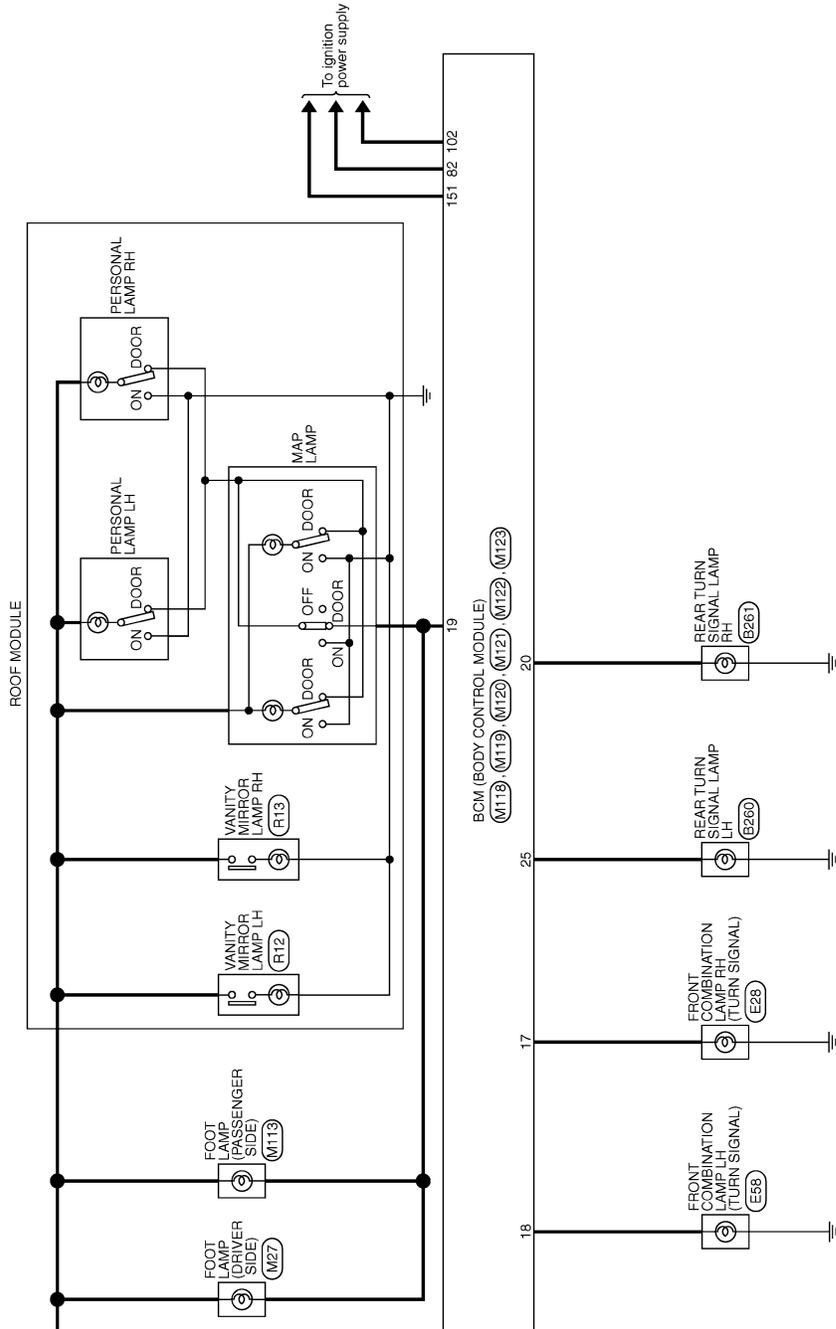


JCMWM1402G

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## BCM (BODY CONTROL MODULE)

|                |                    |
|----------------|--------------------|
| Connector No.  | M33                |
| Connector Name | COMBINATION SWITCH |
| Connector Type | TH16FW-NH          |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2            | SB            | OUTPUT 4                    |
| 5            | L             | OUTPUT 3                    |
| 7            | V             | INPUT 3                     |
| 8            | O             | OUTPUT 5                    |
| 9            | Y             | INPUT 2                     |
| 10           | R             | INPUT 4                     |
| 11           | LG            | INPUT 1                     |
| 12           | P             | OUTPUT 1                    |
| 13           | BR            | INPUT 5                     |
| 14           | G             | OUTPUT 2                    |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M120                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | NS12FW-CS                 |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 20           | V             | TURN SIGNAL RH (REAR)       |
| 23           | G             | BACK DOOR OPEN OUTPUT       |
| 25           | G             | TURN SIGNAL LH (REAR)       |
| 26           | G             | REAR WIPER OUTPUT           |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M118                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | M03FB-LC                  |




| Terminal No. | Color of Wire | Signal Name [Specification]    |
|--------------|---------------|--------------------------------|
| 1            | W             | BAT (F/L)                      |
| 2            | Y             | POWER WINDOW POWER SUPPLY(BAT) |
| 3            | O             | POWER WINDOW POWER SUPPLY(RAP) |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M121                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FGY-NH                |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 34           | SB            | LUGGAGE ROOM ANTI-          |
| 35           | V             | LUGGAGE ROOM ANTI+          |
| 38           | B             | REAR BUMPER ANTI-           |
| 39           | W             | REAR BUMPER ANTI+           |
| 47           | Y             | IGN RELAY (PDM L/R CONT)    |
| 52           | SB            | STARTER RELAY CONT          |
| 61           | W             | BACK DOOR OPENER REQUEST SW |
| 64           | V             | REQUEST SW BUZZER           |
| 65           | O             | REAR WIPER STOP POSITION    |
| 66           | R             | BACK DOOR SW                |
| 67           | GR            | BACK DOOR OPENER SW         |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M119                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | NS16FW-CS                 |



| Terminal No. | Color of Wire | Signal Name [Specification]     |
|--------------|---------------|---------------------------------|
| 4            | LG            | INTERIOR ROOM LAMP POWER SUPPLY |
| 5            | L             | PASSNGER DOOR UNLOCK OUTPUT     |
| 7            | Y             | STEP LAMP OUTPUT                |
| 8            | V             | ALL DOOR FUEL LID LOCK OUTPUT   |
| 9            | G             | DRIVER DOOR UNLOCK OUTPUT       |
| 10           | BR            | REAR DOOR UNLOCK OUTPUT         |
| 11           | R             | BAT (RUSE)                      |
| 13           | B             | GND                             |
| 14           | W             | PUSH-BUTTON IGNITION SW ILL GND |
| 15           | Y             | ACC IND                         |
| 17           | W             | TURN SIGNAL RH (FRONT)          |

|                |                 |
|----------------|-----------------|
| Connector No.  | 68              |
| Connector Name | REAR RH DOOR SW |
| Connector Type | 69              |
| Connector Name | REAR LH DOOR SW |
| Connector Type |                 |

|    |   |                         |
|----|---|-------------------------|
| 18 | O | TURN SIGNAL LH (FRONT)  |
| 19 | V | ROOM LAMP TIMER CONTROL |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## BCM (BODY CONTROL MODULE)

|                |                           |
|----------------|---------------------------|
| Connector No.  | M122                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FB-NH                 |



|    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 | 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 | 81 | 82 |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 72           | R             | ROOM ANT2-                  |
| 73           | G             | ROOM ANT2+                  |
| 74           | SB            | PASSENGER DOOR ANT-         |
| 75           | GR            | PASSENGER DOOR ANT+         |
| 76           | V             | DRIVER DOOR ANT-            |
| 77           | LG            | DRIVER DOOR ANT+            |
| 78           | Y             | ROOM ANT1-                  |
| 79           | BR            | ROOM ANT1+                  |
| 80           | GR            | IMMOBI ANTENNA CONTROL      |
| 81           | W             | IMMOBI ANTENNA SIGNAL       |
| 82           | R             | IGN RELAY (F/B) CONT        |

|     |    |                                     |
|-----|----|-------------------------------------|
| 83  | Y  | KEYLESS TUNER SIGNAL                |
| 87  | BR | COMBI SW INPUT 5                    |
| 88  | V  | COMBI SW INPUT 3                    |
| 89  | BR | PUSH SW                             |
| 90  | P  | CAN-L                               |
| 91  | L  | CAN-H                               |
| 92  | LG | KEY SLOT ILL                        |
| 93  | Y  | ON IND                              |
| 94  | V  | PUDDLE LAMP CONT                    |
| 95  | O  | ACC RELAY CONT                      |
| 96  | GR | A/T DEVICE POWER SUPPLY             |
| 97  | L  | S/L CONDITION 1                     |
| 98  | P  | S/L CONDITION 2                     |
| 99  | R  | SHIFT P                             |
| 100 | G  | PASSENGER DOOR REQUEST SW           |
| 101 | SB | DRIVER DOOR REQUEST SW              |
| 102 | O  | BLOWER FAN MOTOR RELAY CONT         |
| 103 | LG | KEYLESS ENTRY RECEIVER POWER SUPPLY |
| 106 | W  | S/L POWER SUPPLY                    |
| 107 | LG | COMBI SW INPUT 1                    |
| 108 | R  | COMBI SW INPUT 4                    |
| 109 | Y  | COMBI SW INPUT 2                    |
| 110 | G  | HAZARD SW                           |
| 111 | Y  | S/L COMM                            |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M123                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FG-NH                 |



|     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 112 | 113 | 114 | 115 | 116 | 117 | 118 | 119 | 120 | 121 | 122 | 123 | 124 | 125 | 126 | 127 | 128 | 129 | 130 | 131 | 132 | 133 | 134 | 135 | 136 | 137 | 138 | 139 | 140 | 141 | 142 | 143 | 144 | 145 | 146 | 147 | 148 | 149 | 150 | 151 |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|

| Terminal No. | Color of Wire | Signal Name [Specification]       |
|--------------|---------------|-----------------------------------|
| 113          | P             | OPTICAL SENSOR                    |
| 116          | SB            | FUSE CHECK                        |
| 118          | P             | STOP LAMP SW                      |
| 119          | SB            | DR DOOR UNLOCK SENSOR             |
| 121          | BR            | KEY SLOT SW                       |
| 122          | V             | ACC F/B                           |
| 123          | W             | IGN F/B                           |
| 124          | LG            | PASSENGER DOOR SW                 |
| 132          | V             | POWER WINDOW SW COMM              |
| 133          | W             | PUSH-BUTTON IGNITION SW ILL POWER |
| 134          | GR            | LOCK IND                          |

|     |    |                              |
|-----|----|------------------------------|
| 137 | O  | RECEIVER/SENSOR GND          |
| 138 | Y  | RECEIVER/SENSOR POWER SUPPLY |
| 139 | L  | TIRE PRESS RECEIVER SIGNAL   |
| 140 | GR | SHIFT UP                     |
| 141 | G  | SECURITY INDICATOR OUTPUT    |
| 142 | O  | COMBI SW OUTPUT 5            |
| 143 | P  | COMBI SW OUTPUT 1            |
| 144 | G  | COMBI SW OUTPUT 2            |
| 145 | L  | COMBI SW OUTPUT 3            |
| 146 | SB | COMBI SW OUTPUT 4            |
| 149 | W  | TIRE PRESS WARNING CHECK SW  |
| 150 | LG | DRIVER DOOR SW               |
| 151 | G  | REAR WINDOW DEFOGGER RELAY   |

## Fail-safe

### FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC is detected.

JCMWM1404G

INFOID:000000003769974

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

| Display contents of CONSULT | Fail-safe               | Cancellation   | A |
|-----------------------------|-------------------------|--|---|
| B2013: ID DISCORD BCM-S/L   | Inhibit engine cranking | Erase DTC  | A |
| B2014: CHAIN OF S/L-BCM     | Inhibit engine cranking | Erase DTC  | B |
| B2190: NATS ANTENNA AMP     | Inhibit engine cranking | Erase DTC  | B |
| B2191: DIFFERENCE OF KEY    | Inhibit engine cranking | Erase DTC  | C |
| B2192: ID DISCORD BCM-ECM   | Inhibit engine cranking | Erase DTC  | C |
| B2193: CHAIN OF BCM-ECM     | Inhibit engine cranking | Erase DTC  | D |
| B2557: VEHICLE SPEED        | Inhibit steering lock   | When normal vehicle speed signals have been received from ABS actuator and electric unit (control unit) for 500 ms   | D |
| B2560: STARTER CONT RELAY   | Inhibit engine cranking | 500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> <li>• Starter control relay signal</li> <li>• Starter relay status signal</li> </ul>   | E |
| B2601: SHIFT POSITION       | Inhibit steering lock   | 500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> <li>• Selector lever P position switch signal</li> <li>• P range signal (CAN)</li> </ul>  | F |
| B2602: SHIFT POSITION       | Inhibit steering lock   | 5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position</li> <li>• Selector lever P position switch signal: Except P position (battery voltage)</li> <li>• Vehicle speed: 4 km/h (2.5 MPH) or more</li> </ul>  | G |
| B2603: SHIFT POSI STATUS    | Inhibit steering lock   | 500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position</li> <li>• Selector lever P position switch signal: Except P position (battery voltage)</li> <li>• Selector lever P/N position signal: Except P and N positions (0 V)</li> </ul>  | H |
| B2604: PNP SW               | Inhibit steering lock   | 500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> <li>• Status 1               <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: P and N position (battery voltage)</li> <li>- P range signal or N range signal (CAN): ON</li> </ul> </li> <li>• Status 2               <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: Except P and N positions (0 V)</li> <li>- P range signal and N range signal (CAN): OFF</li> </ul> </li> </ul> | J |
| B2605: PNP SW               | Inhibit steering lock   | 500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position               <ul style="list-style-type: none"> <li>- Power position: IGN</li> <li>- Selector lever P/N position signal: Except P and N positions (0 V)</li> <li>- Interlock/PNP switch signal (CAN): OFF</li> </ul> </li> <li>• Status 2               <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: P or N position (battery voltage)</li> <li>- PNP switch signal (CAN): ON</li> </ul> </li> </ul>            | K |
| B2606: S/L RELAY            | Inhibit engine cranking | 500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> <li>• Steering lock relay signal (Request signal)</li> <li>• Steering lock relay signal (Condition signal)</li> </ul>  | M |
| B2607: S/L RELAY            | Inhibit engine cranking | 500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> <li>• Steering lock relay signal (Request signal)</li> <li>• Steering lock relay signal (Condition signal)</li> </ul>  | N |
|                             |                         |  | O |
|                             |                         |  | P |

WW

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

| Display contents of CONSULT | Fail-safe  | Cancellation   |
|-----------------------------|--|--|
| B2608: STARTER RELAY        | Inhibit engine cranking  | 500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Starter motor relay control signal</li> <li>• Starter relay status signal (CAN)</li> </ul>  |
| B2609: S/L STATUS           | <ul style="list-style-type: none"> <li>• Inhibit engine cranking</li> <li>• Inhibit steering lock</li> </ul> | When the following steering lock conditions agree <ul style="list-style-type: none"> <li>• BCM steering lock control status</li> <li>• Steering lock condition No. 1 signal status</li> <li>• Steering lock condition No. 2 signal status</li> </ul>   |
| B260A: IGNITION RELAY       | Inhibit engine cranking  | 500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> <li>• IGN relay (IPDM E/R) control signal: OFF (Battery voltage)</li> <li>• Ignition ON signal (CAN to IPDM E/R): OFF (Request signal)</li> <li>• Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)</li> </ul>                   |
| B260F: ENG STATE SIG LOST   | Maintains the power supply position attained at the time of DTC detection                                    | When any of the following conditions is fulfilled <ul style="list-style-type: none"> <li>• Power position changes to ACC</li> <li>• Receives engine status signal (CAN)</li> </ul>   |
| B2612: S/L STATUS           | <ul style="list-style-type: none"> <li>• Inhibit engine cranking</li> <li>• Inhibit steering lock</li> </ul> | When any of the following conditions is fulfilled <ul style="list-style-type: none"> <li>• Steering lock unit status signal (CAN) is received normally</li> <li>• The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)</li> </ul>            |
| B2617: STARTER RELAY CIRC   | Inhibit engine cranking  | 1 second after the starter motor relay control inside BCM becomes normal   |
| B2618: BCM                  | Inhibit engine cranking  | 1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal   |
| B2619: BCM                  | Inhibit engine cranking  | 1 second after the steering lock unit power supply output control inside BCM becomes normal  |
| B261E: VEHICLE TYPE         | Inhibit engine cranking  | BCM initialization   |
| B26E1: ENG STATE NO RECIV   | Inhibit engine cranking  | When any of the following conditions is fulfilled <ul style="list-style-type: none"> <li>• Power position changes to ACC</li> <li>• Receives engine status signal (CAN)</li> </ul>   |
| B26E9: S/L STATUS           | <ul style="list-style-type: none"> <li>• Inhibit engine cranking</li> <li>• Inhibit steering lock</li> </ul> | When BCM transmits the LOCK request signal to steering lock unit, and receives LOCK response signal from steering lock unit, the following conditions is fulfilled <ul style="list-style-type: none"> <li>• Steering condition No. 1 signal: LOCK (0V)</li> <li>• Steering condition No. 2 signal: LOCK (Battery voltage)</li> </ul> |

### HIGH FLASHER OPERATION

BCM detects the turn signal lamp circuit status by the current value.

BCM increases the turn signal lamp blinking speed if the bulb or harness open is detected with the turn signal lamp operating.

#### NOTE:

The blinking speed is normal while activating the hazard warning lamp.

### DTC Inspection Priority Chart

INFOID:000000003769975

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

| Priority | DTC   |
|----------|---|
| 1        | B2562: LOW VOLTAGE  |
| 2        | <ul style="list-style-type: none"> <li>• U1000: CAN COMM CIRCUIT</li> <li>• U1010: CONTROL UNIT (CAN)</li> </ul>  |
| 3        | <ul style="list-style-type: none"> <li>• B2190: NATS ANTENNA AMP</li> <li>• B2191: DIFFERENCE OF KEY</li> <li>• B2192: ID DISCORD BCM-ECM</li> <li>• B2193: CHAIN OF BCM-ECM</li> </ul> |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

| Priority | DTC   |   |  |
|----------|---|---|--|
| 4        | <ul style="list-style-type: none"> <li>• B2013: ID DISCORD BCM-S/L</li> <li>• B2014: CHAIN OF S/L-BCM</li> <li>• B2553: IGNITION RELAY</li> <li>• B2555: STOP LAMP</li> <li>• B2556: PUSH-BTN IGN SW</li> <li>• B2557: VEHICLE SPEED</li> <li>• B2560: STARTER CONT RELAY</li> <li>• B2601: SHIFT POSITION</li> <li>• B2602: SHIFT POSITION</li> <li>• B2603: SHIFT POSI STATUS</li> <li>• B2604: PNP SW</li> <li>• B2605: PNP SW</li> <li>• B2606: S/L RELAY</li> <li>• B2607: S/L RELAY</li> <li>• B2608: STARTER RELAY</li> <li>• B2609: S/L STATUS</li> <li>• B260A: IGNITION RELAY</li> <li>• B260B: STEERING LOCK UNIT</li> <li>• B260C: STEERING LOCK UNIT</li> <li>• B260D: STEERING LOCK UNIT</li> <li>• B260F: ENG STATE SIG LOST</li> <li>• B2612: S/L STATUS</li> <li>• B2614: ACC RELAY CIRC</li> <li>• B2615: BLOWER RELAY CIRC</li> <li>• B2616: IGN RELAY CIRC</li> <li>• B2617: STARTER RELAY CIRC</li> <li>• B2618: BCM</li> <li>• B2619: BCM</li> <li>• B261A: PUSH-BTN IGN SW</li> <li>• B261E: VEHICLE TYPE</li> <li>• B26E1: ENG STATE NO RECIV</li> <li>• B26E9: S/L STATUS</li> <li>• B26EA: KEY REGISTRATION</li> <li>• C1729: VHCL SPEED SIG ERR</li> <li>• U0415: VEHICLE SPEED SIG</li> </ul> | A<br>B<br>C<br>D<br>E<br>F<br>G<br>H<br>I<br>J  |  |
|          | <ul style="list-style-type: none"> <li>• C1704: LOW PRESSURE FL</li> <li>• C1705: LOW PRESSURE FR</li> <li>• C1706: LOW PRESSURE RR</li> <li>• C1707: LOW PRESSURE RL</li> <li>• C1708: [NO DATA] FL</li> <li>• C1709: [NO DATA] FR</li> <li>• C1710: [NO DATA] RR</li> <li>• C1711: [NO DATA] RL</li> <li>• C1712: [CHECKSUM ERR] FL</li> <li>• C1713: [CHECKSUM ERR] FR</li> <li>• C1714: [CHECKSUM ERR] RR</li> <li>• C1715: [CHECKSUM ERR] RL</li> <li>• C1716: [PRESSDATA ERR] FL</li> <li>• C1717: [PRESSDATA ERR] FR</li> <li>• C1718: [PRESSDATA ERR] RR</li> <li>• C1719: [PRESSDATA ERR] RL</li> <li>• C1720: [CODE ERR] FL</li> <li>• C1721: [CODE ERR] FR</li> <li>• C1722: [CODE ERR] RR</li> <li>• C1723: [CODE ERR] RL</li> <li>• C1724: [BATT VOLT LOW] FL</li> <li>• C1725: [BATT VOLT LOW] FR</li> <li>• C1726: [BATT VOLT LOW] RR</li> <li>• C1727: [BATT VOLT LOW] RL</li> <li>• C1734: CONTROL UNIT</li> </ul>   | K<br><b>WW</b><br>M<br>N<br>O<br>P  |  |
|          | 5   |   |  |
|          | 6   | <ul style="list-style-type: none"> <li>• B2621: INSIDE ANTENNA</li> <li>• B2622: INSIDE ANTENNA</li> <li>• B2623: INSIDE ANTENNA</li> </ul> |  |

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## DTC Index

INFOID:000000003769976

### NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data and IGN Counter, refer to [WW-13, "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)"](#).

| CONSULT display                                      | Fail-safe | Freeze Frame Data | Intelligent Key warning lamp ON | Tire pressure monitor warning lamp ON | Reference page         |
|--|-----------|-------------------|---------------------------------|---------------------------------------|------------------------|
| No DTC is detected. further testing may be required. | —         | —                 | —                               | —                                     | —                      |
| U1000: CAN COMM CIRCUIT                              | —         | —                 | —                               | —                                     | <a href="#">BCS-37</a> |
| U1010: CONTROL UNIT (CAN)                            | —         | —                 | —                               | —                                     | <a href="#">BCS-38</a> |
| U0415: VEHICLE SPEED SIG                             | —         | —                 | —                               | —                                     | <a href="#">BCS-39</a> |
| B2013: ID DISCORD BCM-S/L                            | ×         | ×                 | —                               | —                                     | <a href="#">SEC-48</a> |
| B2014: CHAIN OF S/L-BCM                              | ×         | ×                 | —                               | —                                     | <a href="#">SEC-49</a> |
| B2190: NATS ANTENNA AMP                              | ×         | —                 | —                               | —                                     | <a href="#">SEC-42</a> |
| B2191: DIFFERENCE OF KEY                             | ×         | —                 | —                               | —                                     | <a href="#">SEC-45</a> |
| B2192: ID DISCORD BCM-ECM                            | ×         | —                 | —                               | —                                     | <a href="#">SEC-46</a> |
| B2193: CHAIN OF BCM-ECM                              | ×         | —                 | —                               | —                                     | <a href="#">SEC-47</a> |
| B2553: IGNITION RELAY                                | —         | ×                 | —                               | —                                     | <a href="#">PCS-49</a> |
| B2555: STOP LAMP                                     | —         | ×                 | —                               | —                                     | <a href="#">SEC-52</a> |
| B2556: PUSH-BTN IGN SW                               | —         | ×                 | ×                               | —                                     | <a href="#">SEC-54</a> |
| B2557: VEHICLE SPEED                                 | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-56</a> |
| B2560: STARTER CONT RELAY                            | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-57</a> |
| B2562: LOW VOLTAGE                                   | —         | ×                 | —                               | —                                     | <a href="#">BCS-40</a> |
| B2601: SHIFT POSITION                                | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-58</a> |
| B2602: SHIFT POSITION                                | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-61</a> |
| B2603: SHIFT POSI STATUS                             | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-63</a> |
| B2604: PNP SW  | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-66</a> |
| B2605: PNP SW  | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-68</a> |
| B2606: S/L RELAY                                     | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-70</a> |
| B2607: S/L RELAY                                     | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-71</a> |
| B2608: STARTER RELAY                                 | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-73</a> |
| B2609: S/L STATUS                                    | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-75</a> |
| B260A: IGNITION RELAY                                | ×         | ×                 | ×                               | —                                     | <a href="#">PCS-51</a> |
| B260B: STEERING LOCK UNIT                            | —         | ×                 | ×                               | —                                     | <a href="#">SEC-79</a> |
| B260C: STEERING LOCK UNIT                            | —         | ×                 | ×                               | —                                     | <a href="#">SEC-80</a> |
| B260D: STEERING LOCK UNIT                            | —         | ×                 | ×                               | —                                     | <a href="#">SEC-81</a> |
| B260F: ENG STATE SIG LOST                            | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-82</a> |
| B2612: S/L STATUS                                    | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-86</a> |
| B2614: ACC RELAY CIRC                                | —         | ×                 | ×                               | —                                     | <a href="#">PCS-53</a> |
| B2615: BLOWER RELAY CIRC                             | —         | ×                 | ×                               | —                                     | <a href="#">PCS-57</a> |
| B2616: IGN RELAY CIRC                                | —         | ×                 | ×                               | —                                     | <a href="#">PCS-59</a> |
| B2617: STARTER RELAY CIRC                            | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-90</a> |

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

| CONSULT display           | Fail-safe | Freeze Frame Data | Intelligent Key warning lamp ON | Tire pressure monitor warning lamp ON | Reference page         |   |
|---------------------------|-----------|-------------------|---------------------------------|---------------------------------------|------------------------|---|
| B2618: BCM                | ×         | ×                 | ×                               | —                                     | <a href="#">PCS-61</a> | A |
| B2619: BCM                | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-92</a> | B |
| B261A: PUSH-BTN IGN SW    | —         | ×                 | ×                               | —                                     | <a href="#">SEC-93</a> |   |
| B261E: VEHICLE TYPE       | ×         | ×                 | × (Turn ON for 15 seconds)      | —                                     | <a href="#">SEC-96</a> | C |
| B2621: INSIDE ANTENNA     | —         | ×                 | —                               | —                                     | <a href="#">DLK-56</a> |   |
| B2622: INSIDE ANTENNA     | —         | ×                 | —                               | —                                     | <a href="#">DLK-58</a> | D |
| B2623: INSIDE ANTENNA     | —         | ×                 | —                               | —                                     | <a href="#">DLK-60</a> |   |
| B26E1: ENG STATE NO RES   | ×         | ×                 | ×                               | —                                     | <a href="#">SEC-83</a> |   |
| B26E9: S/L STATUS         | ×         | ×                 | × (Turn ON for 15 seconds)      | —                                     | <a href="#">SEC-84</a> | E |
| B26EA: KEY REGISTRATION   | —         | ×                 | × (Turn ON for 15 seconds)      | —                                     | <a href="#">SEC-85</a> | F |
| C1704: LOW PRESSURE FL    | —         | —                 | —                               | ×                                     | <a href="#">WT-16</a>  | G |
| C1705: LOW PRESSURE FR    | —         | —                 | —                               | ×                                     |                        |   |
| C1706: LOW PRESSURE RR    | —         | —                 | —                               | ×                                     |                        |   |
| C1707: LOW PRESSURE RL    | —         | —                 | —                               | ×                                     |                        |   |
| C1708: [NO DATA] FL       | —         | —                 | —                               | ×                                     | <a href="#">WT-18</a>  | H |
| C1709: [NO DATA] FR       | —         | —                 | —                               | ×                                     |                        |   |
| C1710: [NO DATA] RR       | —         | —                 | —                               | ×                                     |                        |   |
| C1711: [NO DATA] RL       | —         | —                 | —                               | ×                                     |                        |   |
| C1712: [CHECKSUM ERR] FL  | —         | —                 | —                               | ×                                     | <a href="#">WT-21</a>  | I |
| C1713: [CHECKSUM ERR] FR  | —         | —                 | —                               | ×                                     |                        |   |
| C1714: [CHECKSUM ERR] RR  | —         | —                 | —                               | ×                                     |                        |   |
| C1715: [CHECKSUM ERR] RL  | —         | —                 | —                               | ×                                     |                        |   |
| C1716: [PRESSDATA ERR] FL | —         | —                 | —                               | ×                                     | <a href="#">WT-24</a>  | J |
| C1717: [PRESSDATA ERR] FR | —         | —                 | —                               | ×                                     |                        |   |
| C1718: [PRESSDATA ERR] RR | —         | —                 | —                               | ×                                     |                        |   |
| C1719: [PRESSDATA ERR] RL | —         | —                 | —                               | ×                                     |                        |   |
| C1720: [CODE ERR] FL      | —         | —                 | —                               | ×                                     | <a href="#">WT-26</a>  | K |
| C1721: [CODE ERR] FR      | —         | —                 | —                               | ×                                     |                        |   |
| C1722: [CODE ERR] RR      | —         | —                 | —                               | ×                                     |                        |   |
| C1723: [CODE ERR] RL      | —         | —                 | —                               | ×                                     |                        |   |
| C1724: [BATT VOLT LOW] FL | —         | —                 | —                               | ×                                     | <a href="#">WT-29</a>  | M |
| C1725: [BATT VOLT LOW] FR | —         | —                 | —                               | ×                                     |                        |   |
| C1726: [BATT VOLT LOW] RR | —         | —                 | —                               | ×                                     |                        |   |
| C1727: [BATT VOLT LOW] RL | —         | —                 | —                               | ×                                     |                        |   |
| C1729: VHCL SPEED SIG ERR | —         | —                 | —                               | ×                                     | <a href="#">WT-32</a>  | N |
| C1734: CONTROL UNIT       | —         | —                 | —                               | ×                                     | <a href="#">WT-33</a>  | O |

WW

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000003769977

VALUES ON THE DIAGNOSIS TOOL

| Monitor Item  | Condition   |   | Value/Status |
|---------------|---|---|--------------|
| RAD FAN REQ   | Engine idle speed   | Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.                                    | 0 – 100 %    |
| AC COMP REQ   | Engine running  | A/C switch OFF  | Off          |
|               |   | A/C switch ON<br>(Compressor is operating)  | On           |
| TAIL&CLR REQ  | Lighting switch OFF   |   | Off          |
|               | Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated) |   | On           |
| HL LO REQ     | Lighting switch OFF   |   | Off          |
|               | Lighting switch 2ND HI or AUTO (Light is illuminated)       |   | On           |
| HL HI REQ     | Lighting switch OFF   |   | Off          |
|               | Lighting switch HI  |   | On           |
| FR FOG REQ    | Lighting switch 2ND or AUTO (Light is illuminated)          | Front fog lamp switch OFF   | Off          |
|               |   | <ul style="list-style-type: none"> <li>• Front fog lamp switch ON</li> <li>• Daytime running light activated (Only for Canada)</li> </ul> | On           |
| FR WIP REQ    | Ignition switch ON  | Front wiper switch OFF  | Stop         |
|               |   | Front wiper switch INT  | 1LOW         |
|               |   | Front wiper switch LO   | Low          |
|               |   | Front wiper switch HI   | Hi           |
| WIP AUTO STOP | Ignition switch ON  | Front wiper stop position   | STOP P       |
|               |   | Any position other than front wiper stop position   | ACT P        |
| WIP PROT      | Ignition switch ON  | Front wiper operates normally   | Off          |
|               |   | Front wiper stops at fail-safe operation  | BLOCK        |
| IGN RLY1 -REQ | Ignition switch OFF or ACC                                  |   | Off          |
|               | Ignition switch ON  |   | On           |
| IGN RLY       | Ignition switch OFF or ACC                                  |   | Off          |
|               | Ignition switch ON  |   | On           |
| PUSH SW       | Release the push-button ignition switch                     |   | Off          |
|               | Press the push-button ignition switch                       |   | On           |
| INTER/NP SW   | Ignition switch ON  | Selector lever in any position other than P or N  | Off          |
|               |   | Selector lever in P or N position   | On           |
| ST RLY CONT   | Ignition switch ON  |   | Off          |
|               | At engine cranking  |   | On           |
| IHBT RLY -REQ | Ignition switch ON  |   | Off          |
|               | At engine cranking  |   | On           |

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS >

| Monitor Item   | Condition   | Value/Status   |    |
|----------------|---|--|----|
| ST/INHI RLY    | Ignition switch ON  | Off  | A  |
|                | At engine cranking  | INHI → ST  |    |
|                | The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF                                  | UNKWN  | B  |
| DETENT SW      | Ignition switch ON  | <ul style="list-style-type: none"> <li>Press the selector button with selector lever in P position</li> <li>Selector lever in any position other than P</li> </ul> | C  |
|                | Release the selector button with selector lever in P position   | On   | D  |
| S/L RLY -REQ   | None of the conditions below are present  | Off  |    |
|                | <ul style="list-style-type: none"> <li>Open the driver door after the ignition switch is turned OFF (for a few seconds)</li> <li>Press the push-button ignition switch when the steering lock is activated</li> </ul> | On   | E  |
| S/L STATE      | Steering lock is activated  | LOCK   | F  |
|                | Steering lock is deactivated  | UNLOCK   |    |
|                | [DTC: B210A] is detected  | UNKWN  | G  |
| DTRL REQ       | <b>NOTE:</b><br>The item is indicated, but not monitored.   | Off  |    |
| OIL P SW       | Ignition switch OFF, ACC or engine running  | Open   | H  |
|                | Ignition switch ON  | Close  |    |
| HOOD SW        | Close the hood  | Off  | I  |
|                | Open the hood   | On   |    |
| HL WASHER REQ  | <b>NOTE:</b><br>The item is indicated, but not monitored.   | Off  |    |
| THFT HRN REQ   | Not operation   | Off  | J  |
|                | <ul style="list-style-type: none"> <li>Panic alarm is activated</li> <li>Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM</li> </ul>  | On   | K  |
| HORN CHIRP     | Not operating   | Off  |    |
|                | Door locking with Intelligent Key (horn chirp mode)   | On   |    |
| CRNRNG LMP REQ | <b>NOTE:</b><br>The item is indicated, but not monitored.   | Off  | WW |

WW

M

N


O

P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

## TERMINAL LAYOUT

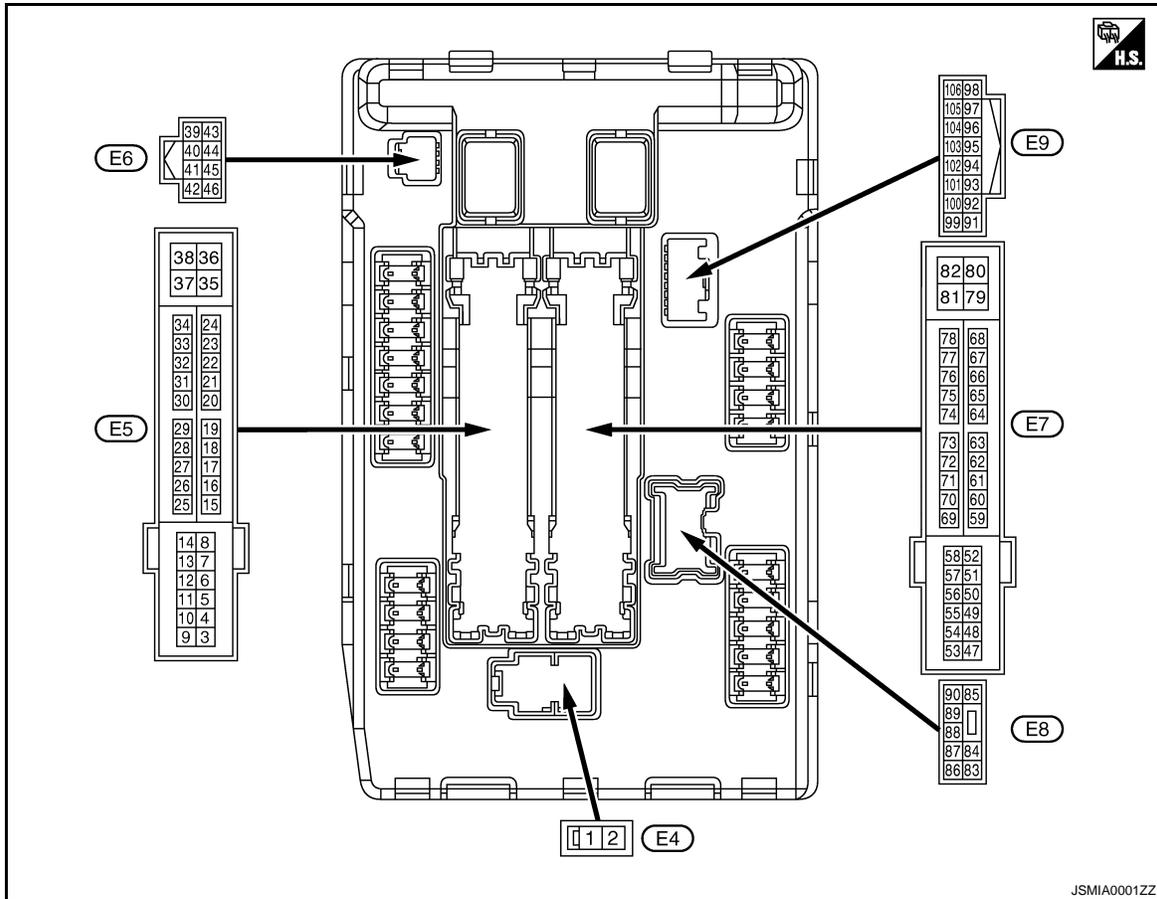

## PHYSICAL VALUES

| Terminal No.<br>(Wire color) |        | Description                                   |                  | Condition                 |  | Value<br>(Approx.) |
|------------------------------|--------|---|------------------|---------------------------|--|--------------------|
| +                            | -      | Signal name                                   | Input/<br>Output |                           |  |                    |
| 1<br>(W)                     | Ground | Battery power supply                          | Input            | Ignition switch OFF       |  | Battery voltage    |
| 2<br>(L)                     | Ground | Battery power supply                          | Input            | Ignition switch OFF       |  | Battery voltage    |
| 4<br>(V)                     | Ground | Front wiper LO                                | Output           | Ignition switch OFF       | Front wiper switch OFF                           | 0 V                |
|                              |        |   |                  | Ignition switch ON        | Front wiper switch LO                            | Battery voltage    |
| 5<br>(L)                     | Ground | Front wiper HI                                | Output           | Ignition switch OFF       | Front wiper switch OFF                           | 0 V                |
|                              |        |   |                  | Ignition switch ON        | Front wiper switch HI                            | Battery voltage    |
| 7<br>(R)                     | Ground | Tail, license plate lamps &<br>interior lamps | Output           | Ignition switch OFF       | Lighting switch OFF                              | 0 V                |
|                              |        |   |                  | Ignition switch ON        | Lighting switch 1ST                              | Battery voltage    |
| 11<br>(BR)                   | Ground | Steering lock unit power<br>supply            | Output           | Ignition switch OFF       | A few seconds after open-<br>ing the driver door | Battery voltage    |
|                              |        |   |                  | Ignition switch LOCK      | Press the push-button ig-<br>nition switch       | Battery voltage    |
|                              |        |   |                  | Ignition switch ACC or ON |  | 0 V                |
| 12<br>(B/W)                  | Ground | Ground  | —                | Ignition switch ON        |  | 0 V                |

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS >

| Terminal No.<br>(Wire color) |        | Description                       |                  | Condition   | Value<br>(Approx.) |
|------------------------------|--------|-----------------------------------|------------------|---|--------------------|
| +                            | -      | Signal name                       | Input/<br>Output |   |                    |
| 13<br>(SB)                   | Ground | Fuel pump power supply            | Output           | Approximately 1 second or more after turning the ignition switch ON   | 0 V                |
|                              |        |                                   |                  | <ul style="list-style-type: none"> <li>Approximately 1 second after turning the ignition switch ON</li> <li>Engine running</li> </ul>               | Battery voltage    |
| 16<br>(LG)                   | Ground | Front wiper auto stop             | Input            | Ignition switch ON  | 0 V                |
|                              |        |                                   |                  | Front wiper stop position   | Battery voltage    |
| 19<br>(W)                    | Ground | Ignition relay power supply       | Output           | Ignition switch OFF   | 0 V                |
|                              |        |                                   |                  | Ignition switch ON  | Battery voltage    |
| 25<br>(G)                    | Ground | Ignition relay power supply       | Output           | Ignition switch OFF   | 0 V                |
|                              |        |                                   |                  | Ignition switch ON  | Battery voltage    |
| 26*<br>(R)                   | Ground | Ignition relay power supply       | Output           | Ignition switch OFF   | 0 V                |
|                              |        |                                   |                  | Ignition switch ON  | Battery voltage    |
| 27<br>(O)                    | Ground | Ignition relay monitor            | Input            | Ignition switch OFF or ACC  | Battery voltage    |
|                              |        |                                   |                  | Ignition switch ON  | 0 V                |
| 28<br>(L)                    | Ground | Push-button ignition switch       | Input            | Press the push-button ignition switch   | 0 V                |
|                              |        |                                   |                  | Release the push-button ignition switch   | Battery voltage    |
| 30<br>(GR)                   | Ground | Starter relay control             | Input            | Ignition switch ON  | 0 V                |
|                              |        |                                   |                  | Selector lever in any position other than P or N  | Battery voltage    |
| 32<br>(L)                    | Ground | Steering lock unit condition-1    | Input            | Steering lock is activated  | 0 V                |
|                              |        |                                   |                  | Steering lock is deactivated  | Battery voltage    |
| 33<br>(P)                    | Ground | Steering lock unit condition-2    | Input            | Steering lock is activated  | Battery voltage    |
|                              |        |                                   |                  | Steering lock is deactivated  | 0 V                |
| 36<br>(G)                    | Ground | Battery power supply              | Input            | Ignition switch OFF   | Battery voltage    |
| 39<br>(P)                    | —      | CAN-L                             | Input/<br>Output | —   | —                  |
| 40<br>(L)                    | —      | CAN-H                             | Input/<br>Output | —   | —                  |
| 41<br>(B/W)                  | Ground | Ground                            | —                | Ignition switch ON  | 0 V                |
| 42<br>(Y)                    | Ground | Cooling fan relay control         | Input            | Ignition switch OFF or ACC  | 0 V                |
|                              |        |                                   |                  | Ignition switch ON  | 0.7 V              |
| 43<br>(SB)                   | Ground | Control device (Detention switch) | Input            | Ignition switch ON  | Battery voltage    |
|                              |        |                                   |                  | <ul style="list-style-type: none"> <li>Press the selector button (Selector lever P)</li> <li>Selector lever in any position other than P</li> </ul> | 0 V                |
| 44<br>(W)                    | Ground | Horn relay control                | Input            | The horn is deactivated   | Battery voltage    |
|                              |        |                                   |                  | The horn is activated   | 0 V                |
| 45<br>(G)                    | Ground | Anti theft horn relay control     | Input            | The horn is deactivated   | Battery voltage    |
|                              |        |                                   |                  | The horn is activated   | 0 V                |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW




# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS >

| Terminal No.<br>(Wire color) |        | Description                               |                  | Condition   |  | Value<br>(Approx.)                             |
|------------------------------|--------|---|------------------|---|--|--|
| +                            | -      | Signal name                               | Input/<br>Output |   |  |  |
| 46<br>(R)                    | Ground | Starter relay control                     | Input            | Ignition switch ON  | Selector lever in any position other than P or N | 0 V  |
|                              |        |   |                  |   | Selector lever P or N                            | Battery voltage                                |
| 48<br>(L)                    | Ground | A/C relay power supply                    | Output           | Engine running  | A/C switch OFF                                   | 0 V  |
|                              |        |   |                  |   |  | A/C switch ON<br>(A/C compressor is operating) |
| 49<br>(R)                    | Ground | ECM relay power supply                    | Output           | Ignition switch OFF<br>(More than a few seconds after turning ignition switch OFF)  |  | 0 V  |
|                              |        |   |                  | <ul style="list-style-type: none"> <li>Ignition switch ON</li> <li>Ignition switch OFF<br/>(For a few seconds after turning ignition switch OFF)</li> </ul> |  | Battery voltage                                |
| 51<br>(G)                    | Ground | Ignition relay power supply               | Output           | Ignition switch OFF   |  | 0 V  |
|                              |        |   |                  | Ignition switch ON  |  | Battery voltage                                |
| 53<br>(W)                    | Ground | ECM relay power supply                    | Output           | Ignition switch OFF<br>(More than a few seconds after turning ignition switch OFF)  |  | 0 V  |
|                              |        |   |                  | <ul style="list-style-type: none"> <li>Ignition switch ON</li> <li>Ignition switch OFF<br/>(For a few seconds after turning ignition switch OFF)</li> </ul> |  | Battery voltage                                |
| 54<br>(LG)                   | Ground | Throttle control motor relay power supply | Output           | Ignition switch OFF<br>(More than a few seconds after turning ignition switch OFF)  |  | 0 V  |
|                              |        |   |                  | <ul style="list-style-type: none"> <li>Ignition switch ON</li> <li>Ignition switch OFF<br/>(For a few seconds after turning ignition switch OFF)</li> </ul> |  | Battery voltage                                |
| 55<br>(BR)                   | Ground | ECM power supply                          | Output           | Ignition switch OFF   |  | Battery voltage                                |
| 56<br>(V)                    | Ground | Ignition relay power supply               | Output           | Ignition switch OFF   |  | 0 V  |
|                              |        |   |                  | Ignition switch ON  |  | Battery voltage                                |
| 57<br>(SB)                   | Ground | Ignition relay power supply               | Output           | Ignition switch OFF   |  | 0 V  |
|                              |        |   |                  | Ignition switch ON  |  | Battery voltage                                |
| 58<br>(P)                    | Ground | Ignition relay power supply               | Output           | Ignition switch OFF   |  | 0 V  |
|                              |        |   |                  | Ignition switch ON  |  | Battery voltage                                |
| 69<br>(W)                    | Ground | ECM relay control                         | Output           | Ignition switch OFF<br>(More than a few seconds after turning ignition switch OFF)  |  | Battery voltage                                |
|                              |        |   |                  | <ul style="list-style-type: none"> <li>Ignition switch ON</li> <li>Ignition switch OFF<br/>(For a few seconds after turning ignition switch OFF)</li> </ul> |  | 0 – 1.5 V                                      |
| 70<br>(O)                    | Ground | Throttle control motor relay control      | Output           | Ignition switch ON → OFF  |  | 0 – 1.0 V<br>↓<br>Battery voltage<br>↓<br>0 V  |
|                              |        |   |                  | Ignition switch ON  |  | 0 – 1.0 V                                      |

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS >
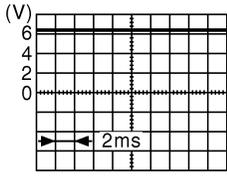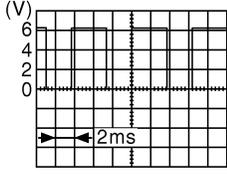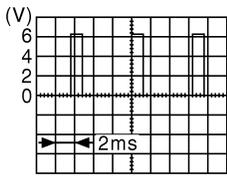
| Terminal No.<br>(Wire color) |        | Description                     |                  | Condition   |   | Value<br>(Approx.)  |
|------------------------------|--------|---------------------------------|------------------|---|---|---|
| +                            | -      | Signal name                     | Input/<br>Output |   |   |   |
| 74<br>(P)                    | Ground | Ignition relay power supply     | Output           | Ignition switch OFF   |   | 0 V   |
|                              |        |                                 |                  | Ignition switch ON  |   | Battery voltage   |
| 75<br>(Y)                    | Ground | Oil pressure switch             | Input            | Ignition switch ON  | Engine stopped  | 0 V   |
|                              |        |                                 |                  |   | Engine running  | Battery voltage   |
| 76<br>(V)                    | Ground | Power generation command signal | Output           | Ignition switch ON  |   |  <p style="text-align: right;">JPMIA0001GB<br/>6.3 V</p>   |
|                              |        |                                 |                  | 40% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"  |   |  <p style="text-align: right;">JPMIA0002GB<br/>3.8 V</p>   |
|                              |        |                                 |                  | 80% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"  |   |  <p style="text-align: right;">JPMIA0003GB<br/>1.4 V</p> |
| 77<br>(L)                    | Ground | Fuel pump relay control         | Output           | <ul style="list-style-type: none"> <li>Approximately 1 second after turning the ignition switch ON</li> <li>Engine running</li> </ul> |   | 0 – 1.0 V   |
|                              |        |                                 |                  | Approximately 1 second or more after turning the ignition switch ON   |   | Battery voltage   |
| 80<br>(W)                    | Ground | Starter motor                   | Output           | At engine cranking  |   | Battery voltage   |
| 83<br>(O)                    | Ground | Headlamp LO (RH)                | Output           | Ignition switch ON  | Lighting switch OFF   | 0 V   |
|                              |        |                                 |                  |   | Lighting switch 2ND   | Battery voltage   |
| 84<br>(V)                    | Ground | Headlamp LO (LH)                | Output           | Ignition switch ON  | Lighting switch OFF   | 0 V   |
|                              |        |                                 |                  |   | Lighting switch 2ND   | Battery voltage   |
| 86<br>(W)                    | Ground | Front fog lamp (RH)             | Output           | Lighting switch 2ND   | <ul style="list-style-type: none"> <li>Front fog lamp switch ON</li> <li>Daytime running light activated (Only for Canada)</li> </ul> | Battery voltage   |
|                              |        |                                 |                  |   | Front fog lamp switch OFF   | 0 V   |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS >

| Terminal No.<br>(Wire color) |        | Description              |                  | Condition                 |   | Value<br>(Approx.) |
|------------------------------|--------|--------------------------|------------------|---------------------------|---|--------------------|
| +                            | -      | Signal name              | Input/<br>Output |                           |   |                    |
| 87<br>(L)                    | Ground | Front fog lamp (LH)      | Output           | Lighting<br>switch<br>2ND | <ul style="list-style-type: none"> <li>• Front fog lamp switch ON</li> <li>• Daytime running light activated (Only for Canada)</li> </ul> | Battery voltage    |
|                              |        |                          |                  |                           | Front fog lamp switch OFF   | 0 V                |
| 88<br>(GR)                   | Ground | Washer pump power supply | Output           | Ignition switch ON        |   | Battery voltage    |
| 89<br>(BR)                   | Ground | Headlamp HI (RH)         | Output           | Ignition<br>switch ON     | <ul style="list-style-type: none"> <li>• Lighting switch HI</li> <li>• Lighting switch PASS</li> </ul>                                    | Battery voltage    |
|                              |        |                          |                  |                           | Lighting switch OFF   | 0 V                |
| 90<br>(P)                    | Ground | Headlamp HI (LH)         | Output           | Ignition<br>switch ON     | <ul style="list-style-type: none"> <li>• Lighting switch HI</li> <li>• Lighting switch PASS</li> </ul>                                    | Battery voltage    |
|                              |        |                          |                  |                           | Lighting switch OFF   | 0 V                |
| 91<br>(P)                    | Ground | Parking lamp (RH)        | Output           | Ignition<br>switch ON     | Lighting switch 1ST   | Battery voltage    |
|                              |        |                          |                  |                           | Lighting switch OFF   | 0 V                |
| 92<br>(O)                    | Ground | Parking lamp (LH)        | Output           | Ignition<br>switch ON     | Lighting switch 1ST   | Battery voltage    |
|                              |        |                          |                  |                           | Lighting switch OFF   | 0 V                |
| 97<br>(V)                    | Ground | Cooling fan control      | Output           | Engine idling             |   | 0 – 5 V            |
| 104<br>(LG)                  | Ground | Hood switch              | Input            | Close the hood            |   | Battery voltage    |
|                              |        |                          |                  | Open the hood             |   | 0 V                |


\*: Only for the models with ICC system

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

## Wiring Diagram - IPDM E/R -

INFOID:000000003769978

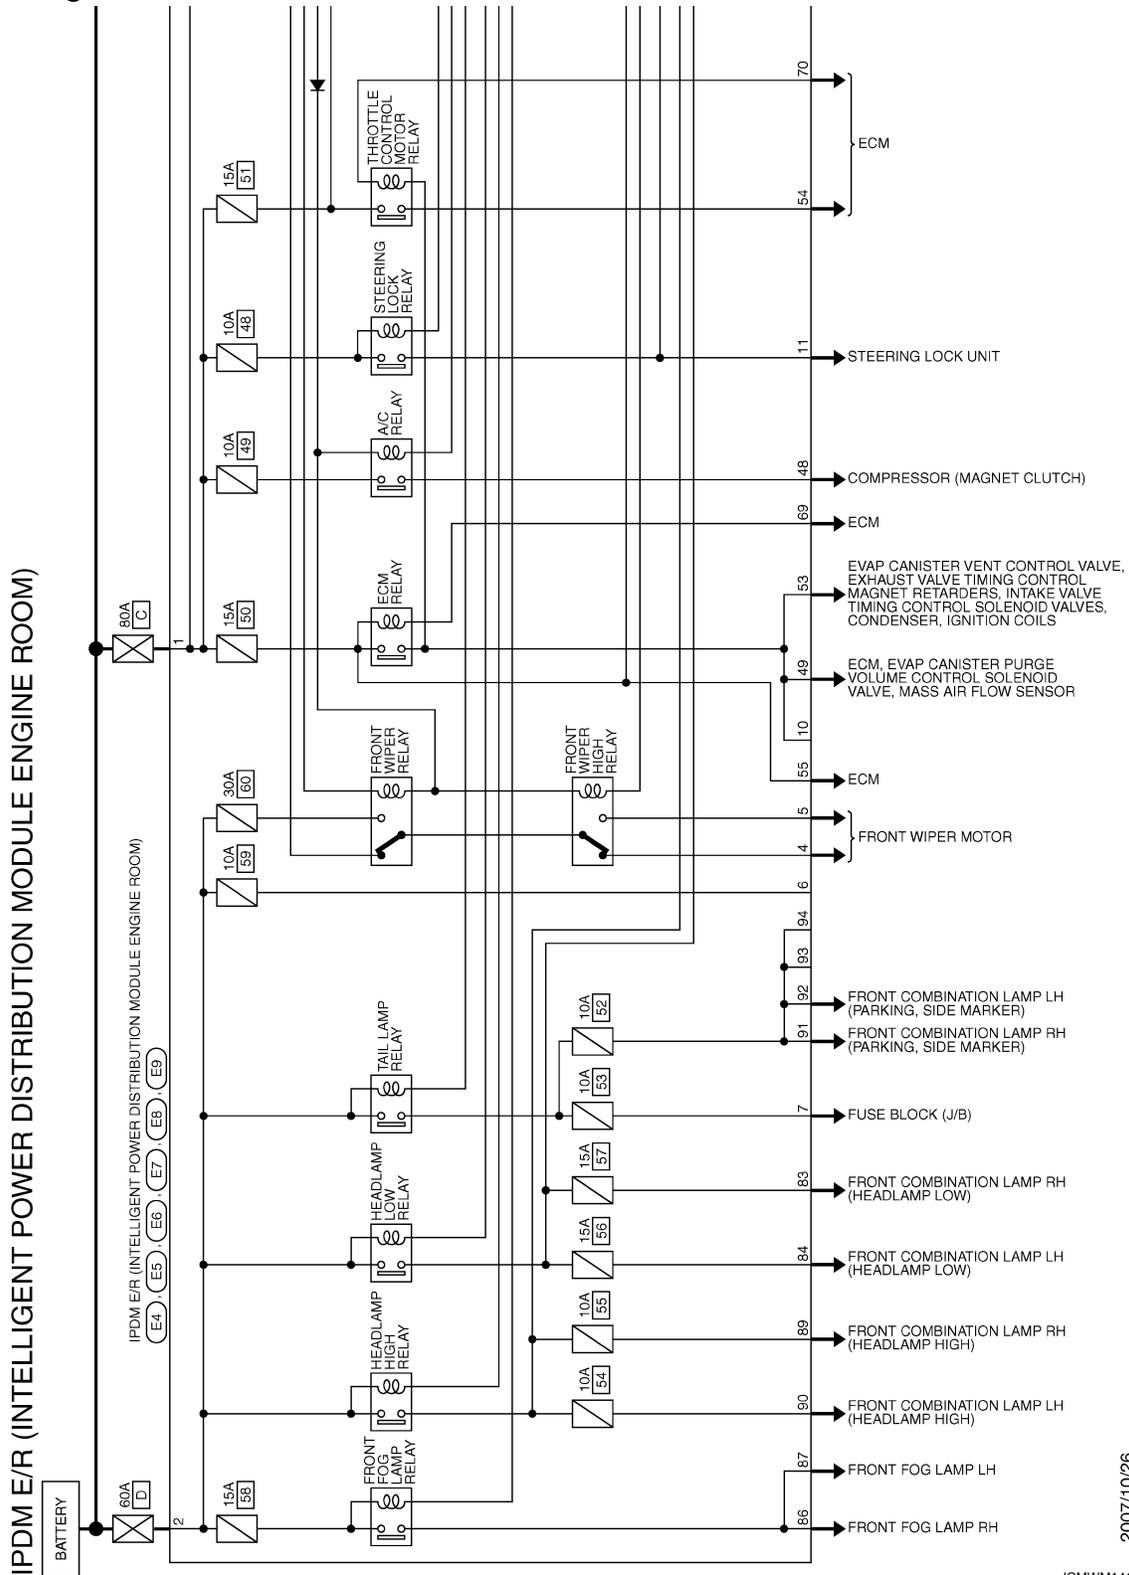

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


WW

2007/10/26

JCMWM141GI

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

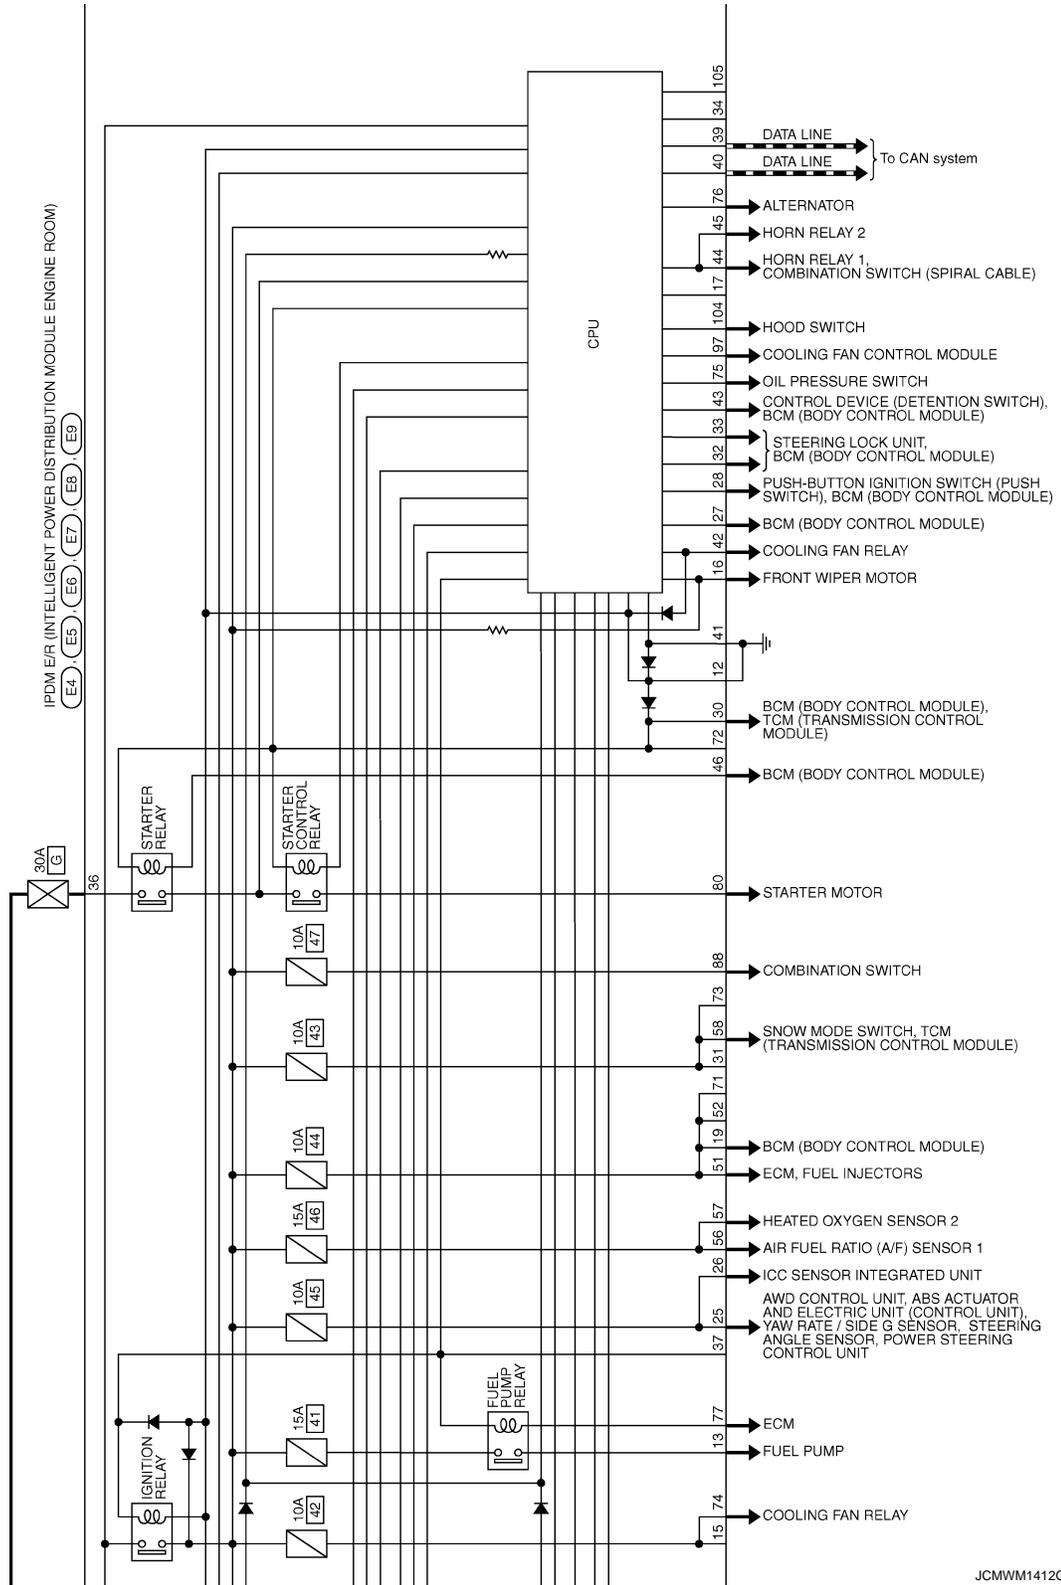


# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

---

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

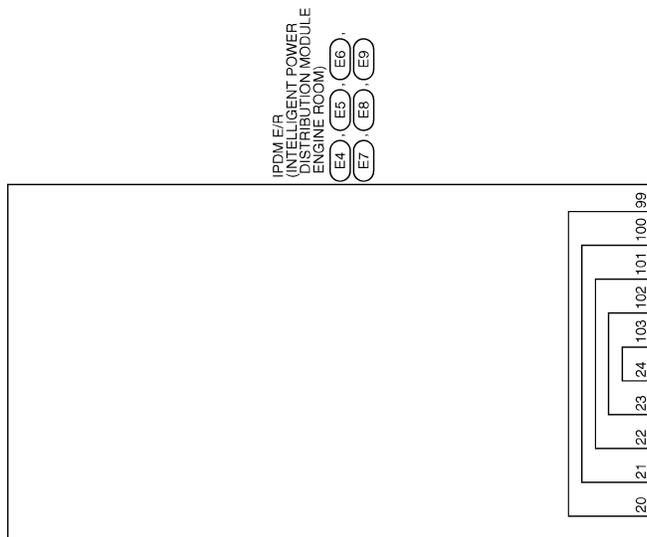

**WW**

JCMWM1413G1

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**

|                |  |
|----------------|--|
| Connector No.  | E4   |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | 10PFB-MC   |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | -                           |
| 2            | L             | -                           |

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**

|                |  |
|----------------|--|
| Connector No.  | E5   |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | TH20FW-CS12-M4-1V  |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 4            | V             | -                           |
| 5            | L             | -                           |
| 7            | R             | -                           |
| 11           | BR            | -                           |
| 12           | B/W           | -                           |
| 13           | SB            | -                           |
| 16           | LG            | -                           |
| 19           | W             | -                           |
| 25           | G             | -                           |
| 26           | R             | -                           |
| 27           | O             | -                           |

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**


|                |  |
|----------------|--|
| Connector No.  | E7   |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | TH20FW-CS12-M4   |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 48           | L             | -                           |
| 49           | R             | -                           |
| 51           | G             | -                           |
| 53           | W             | -                           |
| 54           | LG            | -                           |
| 55           | BR            | -                           |
| 56           | V             | -                           |
| 57           | SB            | -                           |
| 58           | P             | -                           |
| 68           | W             | -                           |
| 70           | O             | -                           |

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**

|                |  |
|----------------|--|
| Connector No.  | E8   |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | NS08FW-CS  |

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 74           | P             | -                           |
| 75           | Y             | -                           |
| 76           | V             | -                           |
| 77           | L             | -                           |
| 80           | W             | -                           |

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**

|                |  |
|----------------|--|
| Connector No.  | E9   |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | TH18FW-NH  |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 39           | P             | -                           |
| 40           | L             | -                           |
| 41           | B/W           | -                           |
| 43           | Y             | -                           |
| 44           | W             | -                           |
| 45           | G             | -                           |
| 46           | R             | -                           |

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**

|                |  |
|----------------|--|
| Connector No.  | E6   |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | TH08FW-NH  |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 30           | L             | -                           |
| 30           | GR            | -                           |
| 32           | L             | -                           |
| 33           | P             | -                           |
| 33           | G             | -                           |

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**


|                |  |
|----------------|--|
| Connector No.  | E3   |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | TH20FW-CS12-M4-1V  |




| Terminal No. | Color of Wire | Signal Name [Specification] |    |    |    |    |    |    |    |    |    |    |    |
|--------------|---------------|-----------------------------|----|----|----|----|----|----|----|----|----|----|----|
| 9            | 10            | 11                          | 12 | 13 | 14 | 22 | 23 | 24 | 25 | 26 | 27 | 37 | 38 |
| 3            | 4             | 5                           | 6  | 7  | 8  | 11 | 12 | 13 | 14 | 15 | 16 | 35 | 36 |

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**

|                |  |
|----------------|--|
| Connector No.  | E2   |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | TH18FW-NH  |

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 83           | O             | -                           |
| 84           | V             | -                           |
| 86           | W             | -                           |
| 87           | L             | -                           |
| 88           | GR            | -                           |
| 89           | BR            | -                           |
| 90           | P             | -                           |

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**

|                |  |
|----------------|--|
| Connector No.  | E1   |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | TH18FW-NH  |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 91           | P             | -                           |
| 92           | O             | -                           |
| 97           | V             | -                           |
| 104          | LG            | -                           |

JCMWM1414G

INFOID:000000003769979

## Fail-safe

### CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS >

| Control part   | Fail-safe operation   |
|----------------|---|
| Cooling fan    | <ul style="list-style-type: none"> <li>• Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON</li> <li>• Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF</li> </ul> |
| A/C compressor | A/C relay OFF   |
| Alternator     | Outputs the power generation command signal (PWM signal) 0%   |

### If No CAN Communication Is Available With BCM

| Control part  | Fail-safe operation  |
|---|--|
| Headlamp  | <ul style="list-style-type: none"> <li>• Turns ON the headlamp low relay when the ignition switch is turned ON</li> <li>• Turns OFF the headlamp low relay when the ignition switch is turned OFF</li> <li>• Headlamp high relay OFF</li> </ul>  |
| <ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• License plate lamps</li> <li>• Side maker lamps</li> <li>• Illuminations</li> <li>• Tail lamps</li> </ul> | <ul style="list-style-type: none"> <li>• Turns ON the tail lamp relay when the ignition switch is turned ON</li> <li>• Turns OFF the tail lamp relay when the ignition switch is turned OFF</li> </ul>   |
| Front wiper   | <ul style="list-style-type: none"> <li>• The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed.</li> <li>• The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.</li> </ul> |
| Front fog lamps   | Front fog lamp relay OFF   |
| Horn  | Horn OFF   |
| Ignition relay  | The status just before activation of fail-safe is maintained.  |
| Starter motor   | Starter control relay OFF  |
| Steering lock unit  | Steering lock relay OFF  |

### IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

| Voltage judgment            |                                     | IPDM E/R judgment         | Operation  |
|-----------------------------|-------------------------------------|---------------------------|--|
| Ignition relay contact side | Ignition relay excitation coil side |                           |  |
| ON                          | ON                                  | Ignition relay ON normal  | —  |
| OFF                         | OFF                                 | Ignition relay OFF normal | —  |
| ON                          | OFF                                 | Ignition relay ON stuck   | <ul style="list-style-type: none"> <li>• Detects DTC "B2098: IGN RELAY ON"</li> <li>• Turns ON the tail lamp relay for 10 minutes</li> </ul> |
| OFF                         | ON                                  | Ignition relay OFF stuck  | Detects DTC "B2099: IGN RELAY OFF"   |

### FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS >

| Ignition switch | Front wiper switch | Front wiper auto stop signal   |
|-----------------|--------------------|--|
| ON              | OFF                | The front wiper auto stop signal (stop position) cannot be input for 10 seconds. |
|                 | ON                 | The front wiper auto stop signal does not change for 10 seconds.                 |

### NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

### STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

### DTC Index

INFOID:000000003769980

### NOTE:

- The details of time display are as follows.
  - CRNT: A malfunction is detected now
  - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
  - The number is 0 when is detected now
  - The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
  - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

| CONSULT display  | Fail-safe | Reference               |
|--|-----------|-------------------------|
| No DTC is detected.<br>further testing<br>may be required. | —         | —                       |
| U1000: CAN COMM CIRCUIT                                    | ×         | <a href="#">PCS-16</a>  |
| B2098: IGN RELAY ON  | ×         | <a href="#">PCS-17</a>  |
| B2099: IGN RELAY OFF                                       | —         | <a href="#">PCS-18</a>  |
| B2108: STRG LCK RELAY ON                                   | —         | <a href="#">SEC-97</a>  |
| B2109: STRG LCK RELAY OFF                                  | —         | <a href="#">SEC-98</a>  |
| B210A: STRG LCK STATE SW                                   | —         | <a href="#">SEC-99</a>  |
| B210B: START CONT RLY ON                                   | —         | <a href="#">SEC-103</a> |
| B210C: START CONT RLY OFF                                  | —         | <a href="#">SEC-104</a> |
| B210D: STARTER RELAY ON                                    | —         | <a href="#">SEC-105</a> |
| B210E: STARTER RELAY OFF                                   | —         | <a href="#">SEC-106</a> |
| B210F: INTRLCK/PNP SW ON                                   | —         | <a href="#">SEC-108</a> |
| B2110: INTRLCK/PNP SW OFF                                  | —         | <a href="#">SEC-110</a> |

# WIPER AND WASHER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### WIPER AND WASHER SYSTEM SYMPTOMS

#### Symptom Table

INFOID:000000003591483

**CAUTION:**

Perform the self-diagnosis with CONSULT-III before performing the diagnosis by symptom. Perform the diagnosis by DTC if DTC is detected.

| Symptom                       | Probable malfunction location | Inspection item  |  |
|-------------------------------|-------------------------------|--|--|
| Front wiper does not operate. | HI only                       | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul> Combination switch<br>Refer to <a href="#">BCS-82, "Symptom Table"</a> .                               |  |
|                               |                               | <ul style="list-style-type: none"> <li>• IPDM E/R</li> <li>• Harness between IPDM E/R and front wiper motor</li> <li>• Front wiper motor</li> </ul> Front wiper motor (HI) circuit<br>Refer to <a href="#">WW-26, "Component Function Check"</a> . |  |
|                               |                               | Front wiper request signal<br><ul style="list-style-type: none"> <li>• BCM</li> <li>• IPDM E/R</li> </ul> IPDM E/R DATA MONITOR<br>"FR WIP REQ"  |  |
|                               | LO and INT                    | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul> Combination switch<br>Refer to <a href="#">BCS-82, "Symptom Table"</a> .                               |  |
|                               |                               | <ul style="list-style-type: none"> <li>• IPDM E/R</li> <li>• Harness between IPDM E/R and front wiper motor</li> <li>• Front wiper motor</li> </ul> Front wiper motor (LO) circuit<br>Refer to <a href="#">WW-24, "Component Function Check"</a> . |  |
|                               |                               | Front wiper request signal<br><ul style="list-style-type: none"> <li>• BCM</li> <li>• IPDM E/R</li> </ul> IPDM E/R DATA MONITOR<br>"FR WIP REQ"  |  |
|                               | INT only                      | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul> Combination switch<br>Refer to <a href="#">BCS-82, "Symptom Table"</a> .                               |  |
|                               |                               | Front wiper request signal<br><ul style="list-style-type: none"> <li>• BCM</li> <li>• IPDM E/R</li> </ul> IPDM E/R DATA MONITOR<br>"FR WIP REQ"  |  |
|                               | HI, LO and INT                | SYMPTOM DIAGNOSIS<br>"FRONT WIPER DOES NOT OPERATE"<br>Refer to <a href="#">WW-97, "Diagnosis Procedure"</a> .   |  |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

## WIPER AND WASHER SYSTEM SYMPTOMS

### < SYMPTOM DIAGNOSIS >

| Symptom  | Probable malfunction location   | Inspection item  |   |
|--|---|--|---|
| Front wiper does not stop.   | HI only   | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>  | Combination switch<br>Refer to <a href="#">BCS-82, "Symptom Table"</a> .  |
|  |   | Front wiper request signal <ul style="list-style-type: none"> <li>• BCM</li> <li>• IPDM E/R</li> </ul>   | IPDM E/R DATA MONITOR<br>"FR WIP REQ"   |
|  |   | IPDM E/R   | —   |
|  | LO only   | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>  | Combination switch<br>Refer to <a href="#">BCS-82, "Symptom Table"</a> .  |
|  |   | Front wiper request signal <ul style="list-style-type: none"> <li>• BCM</li> <li>• IPDM E/R</li> </ul>   | IPDM E/R DATA MONITOR<br>"FR WIP REQ"   |
|  |   | IPDM E/R   | —   |
|  | INT only  | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>  | Combination switch<br>Refer to <a href="#">BCS-82, "Symptom Table"</a> .  |
|  |   | Front wiper request signal <ul style="list-style-type: none"> <li>• BCM</li> <li>• IPDM E/R</li> </ul>   | IPDM E/R DATA MONITOR<br>"FR WIP REQ"   |
|  | Front wiper does not operate normally.  | Intermittent adjustment cannot be performed.   | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul> |
| BCM  |   |  | —   |
| Intermittent control linked with vehicle speed cannot be performed.  |   | Check the vehicle speed detection wiper setting.<br>Refer to <a href="#">WW-14, "WIPER : CONSULT-III Function (BCM - WIPER)"</a> .<br><b>NOTE:</b><br>Factory setting of the front wiper intermitted operation is the operation without vehicle speed. |   |
| Wiper is not linked to the washer operation.   |   | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>  | Combination switch<br>Refer to <a href="#">BCS-82, "Symptom Table"</a> .  |
|  |   | BCM  | —   |
| Does not return to stop position [Repeatedly operates for 10 seconds and then stops for 20 seconds. After that, it stops the operation. (Fail-safe)] | <ul style="list-style-type: none"> <li>• IPDM E/R</li> <li>• Harness between IPDM E/R and front wiper motor</li> <li>• Front wiper motor</li> </ul> | Front wiper auto stop signal circuit<br>Refer to <a href="#">WW-28, "Component Function Check"</a> .   |   |
| Rear wiper does not operate.   | ON only   | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>  | Combination switch<br>Refer to <a href="#">BCS-82, "Symptom Table"</a> .  |
|  | INT only  | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>  | Combination switch<br>Refer to <a href="#">BCS-82, "Symptom Table"</a> .  |
|  | ON and INT  | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>  | Combination switch<br>Refer to <a href="#">BCS-82, "Symptom Table"</a> .  |
|  |   | <ul style="list-style-type: none"> <li>• BCM</li> <li>• Harness between rear wiper motor and BCM</li> <li>• Harness between rear wiper motor and ground</li> <li>• Rear wiper motor</li> </ul>   | Combination switch<br>Refer to <a href="#">BCS-82, "Symptom Table"</a> .  |

## WIPER AND WASHER SYSTEM SYMPTOMS

### < SYMPTOM DIAGNOSIS >

| Symptom                               |  | Probable malfunction location   | Inspection item   |
|---------------------------------------|--|---|---|
| Rear wiper does not stop.             | ON only  | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>   | Rear wiper motor circuit<br>Refer to <a href="#">WW-32, "Component Function Check"</a> .            |
|                                       | INT only   | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>   | Combination switch<br>Refer to <a href="#">BCS-82, "Symptom Table"</a> .                            |
| Rear wiper does not operate normally. | Wiper is not linked to the washer operation.   | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between rear wiper motor and BCM</li> <li>• BCM</li> </ul> | Combination switch<br>Refer to <a href="#">BCS-82, "Symptom Table"</a> .                            |
|                                       |  | BCM   | —   |
|                                       | Rear wiper does not return to the stop position [Stops after a five-second operation. (Fail-safe)] | <ul style="list-style-type: none"> <li>• BCM</li> <li>• Harness between rear wiper motor and BCM</li> <li>• Rear wiper motor</li> </ul>   | Rear wiper auto stop signal circuit<br>Refer to <a href="#">WW-34, "Component Function Check"</a> . |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K

WW

M  
N  
O  
P

## NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

---

### NORMAL OPERATING CONDITION

#### Description

INFOID:000000003591484

#### FRONT WIPER MOTOR PROTECTION FUNCTION

- IPDM E/R may stop the front wiper to protect the front wiper motor if any obstruction (operation resistance) such as a large amount of snow is detected during the front wiper operation.
- At that time turn OFF the front wiper and remove the foreign object. Then wait for approximately 20 seconds or more and reactivate the front wiper. The wiper will operate normally.

#### REAR WIPER MOTOR PROTECTION FUNCTION

- BCM may stop rear wiper to protect the rear wiper motor when the rear wiper is stopped for 5 seconds or more due to a snowfall.
- Rear wiper operates normally one minute after the obstacles are removed with rear wiper OFF.

# FRONT WIPER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

## FRONT WIPER DOES NOT OPERATE

### Description

INFOID:000000003139003

The front wiper does not operate under any operating conditions.

### Diagnosis Procedure

INFOID:000000003139004

#### 1. CHECK WIPER RELAY OPERATION

##### IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the front wiper operates at the LO/Hi operation.

##### CONSULT-III ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check that front wiper LO/Hi operation and OFF.

**Lo** : Front wiper LO operation

**Hi** : Front wiper HI operation

**Off** : Stop the front wiper.

##### Does the front wiper operate?

YES >> GO TO 5.

NO >> GO TO 2.

#### 2. CHECK FRONT WIPER MOTOR FUSE

1. Turn the ignition switch OFF.
2. Check that the front wiper motor 30A (#60) fuse is not fusing.

##### Is the fuse fusing?

YES >> Replace the fuse after repairing the applicable circuit.

NO >> GO TO 3.

#### 3. CHECK FRONT WIPER MOTOR (GND) OPEN CIRCUIT

1. Disconnect front wiper motor connector.
2. Check continuity between front wiper motor harness connector and ground.

| Front wiper motor |          | Ground | Continuity |
|-------------------|----------|--------|------------|
| Connector         | Terminal |        |            |
| E42               | 2        |        | Existed    |

##### Does continuity exist?

YES >> GO TO 4.

NO >> Repair the harnesses or connectors.

#### 4. CHECK FRONT WIPER MOTOR OUTPUT VOLTAGE

##### CONSULT-III ACTIVE TEST

1. Disconnect front wiper motor connector.
2. Turn the ignition switch ON.
3. Select "FRONT WIPER" of IPDM E/R active test item.
4. With operating the test item, check voltage between IPDM E/R harness connector and ground.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# FRONT WIPER DOES NOT OPERATE

## < SYMPTOM DIAGNOSIS >

| Terminals |          | Test item   | Voltage<br>(Approx.) |
|-----------|----------|-------------|----------------------|
| (+)       | (-)      |             |                      |
| IPDM E/R  |          | FRONT WIPER |                      |
| Connector | Terminal |             |                      |
| E5        | 4        | Lo          | Battery voltage      |
|           |          | Off         | 0 V                  |
|           | 5        | Hi          | Battery voltage      |
|           |          | Off         | 0 V                  |

**Is the measurement normal?**

- YES >> Replace front wiper motor.  
 NO >> Replace IPDM E/R.

## 5.CHECK FRONT WIPER REQUEST SIGNAL INPUT

### ⓅCONSULT-III DATA MONITOR

1. Select "FR WIP REQ" of IPDM E/R data monitor item.
2. Switch the front wiper switch to HI and LO.
3. With operating the front wiper switch, check the monitor status.

| Monitor item | Condition             |     | Monitor status |
|--------------|-----------------------|-----|----------------|
| FR WIPER REQ | Front wiper switch HI | ON  | Hi             |
|              |                       | OFF | Stop           |
|              | Front wiper switch LO | ON  | Low            |
|              |                       | OFF | Stop           |

**Is the status of item normal?**

- YES >> Replace IPDM E/R.  
 NO >> GO TO 6.

## 6.CHECK COMBINATION SWITCH

Perform the inspection of the combination switch. Refer to [BCS-82. "Symptom Table"](#).

**Is combination switch normal?**

- YES >> Replace BCM. Refer to [BCS-84. "Exploded View"](#).  
 NO >> Repair or replace the applicable parts.

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003139006

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.


#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### Precaution for Procedure without Cowl Top Cover

INFOID:000000003139007

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

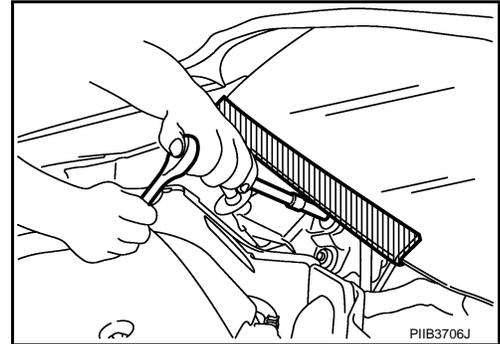

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# WASHER TANK


< ON-VEHICLE REPAIR >

## ON-VEHICLE REPAIR

### WASHER TANK

#### Exploded View

INFOID:000000003139008

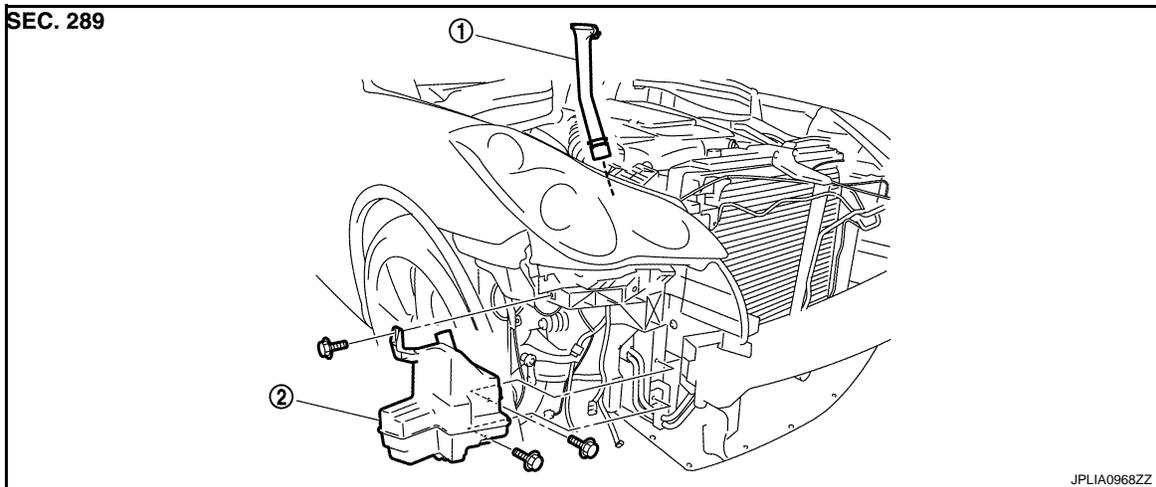

1. Washer tank inlet

2. Washer tank

#### Removal and Installation


INFOID:000000003139009

##### REMOVAL

1. Remove the clip (A).

← : Vehicle front

2. Pull out the washer tank inlet (1) from the washer tank.
3. Remove the fender protector RH (front). Refer to [EXT-25, "FENDER PROTECTOR : Exploded View"](#).
4. Remove the engine lower cover. Refer to [EXT-31, "Exploded View"](#).
5. Disconnect washer pump connector.
6. Disconnect the washer level switch connector.
7. Remove front washer tube and rear washer tube.
8. Remove washer tank mounting bolts.
9. Remove washer tank from the vehicle.

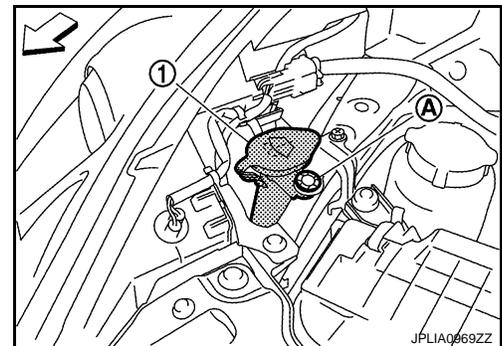

##### INSTALLATION

Note the following, and install in the reverse order of removal.

##### **CAUTION:**

**Add water up to the top of the washer tank inlet after installing. Check that there is no leakage.**


# FRONT WASHER PUMP

< ON-VEHICLE REPAIR >

## FRONT WASHER PUMP

Exploded View

INFOID:000000003139010

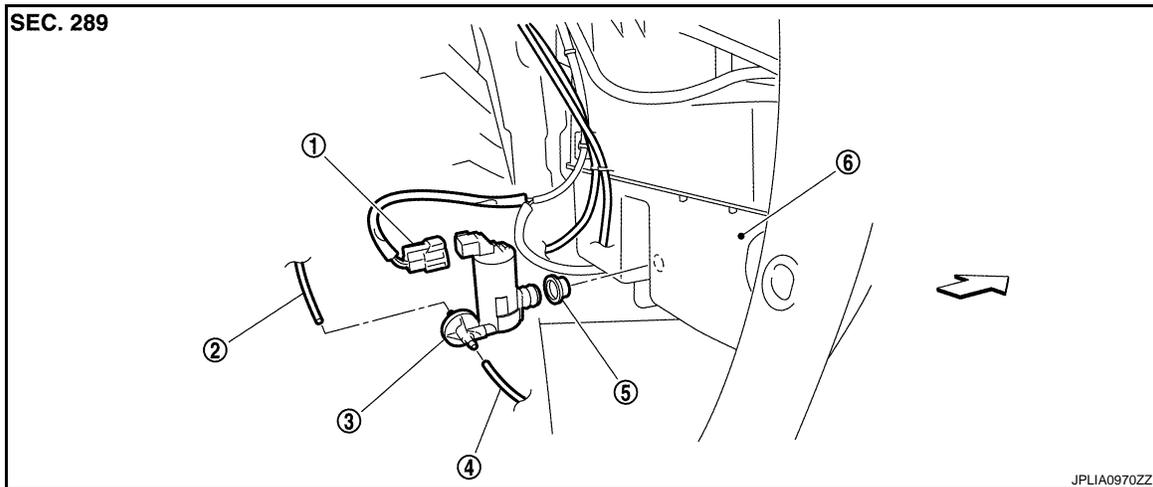

- |                          |                     |                |
|--------------------------|---------------------|----------------|
| 1. Washer pump connector | 2. Rear washer tube | 3. Washer pump |
| 4. Front washer tube     | 5. Packing          | 6. Washer tank |

⇐ : Vehicle front

## Removal and Installation

INFOID:000000003139011

### REMOVAL

1. Remove the fender protector RH (front). Refer to [EXT-25, "FENDER PROTECTOR : Removal and Installation"](#).
2. Disconnect the washer pump connector.
3. Remove front washer tube and rear washer tube.
4. Remove washer pump from the washer tank.
5. Remove the packing from the washer tank.

### INSTALLATION

Note the following, and install in the reverse order of removal.

#### **CAUTION:**

**Never twist the packing when installing the washer pump.**

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

## WASHER LEVEL SWITCH

< ON-VEHICLE REPAIR >

---

### WASHER LEVEL SWITCH

#### Removal and Installation

INFOID:000000003139012

The washer level switch must be replaced together with the washer tank as an assembly. Refer to [WW-100](#), "[Removal and Installation](#)".


# FRONT WASHER NOZZLE AND TUBE

< ON-VEHICLE REPAIR >

## FRONT WASHER NOZZLE AND TUBE

### Hydraulic Layout

INFOID:000000003139013

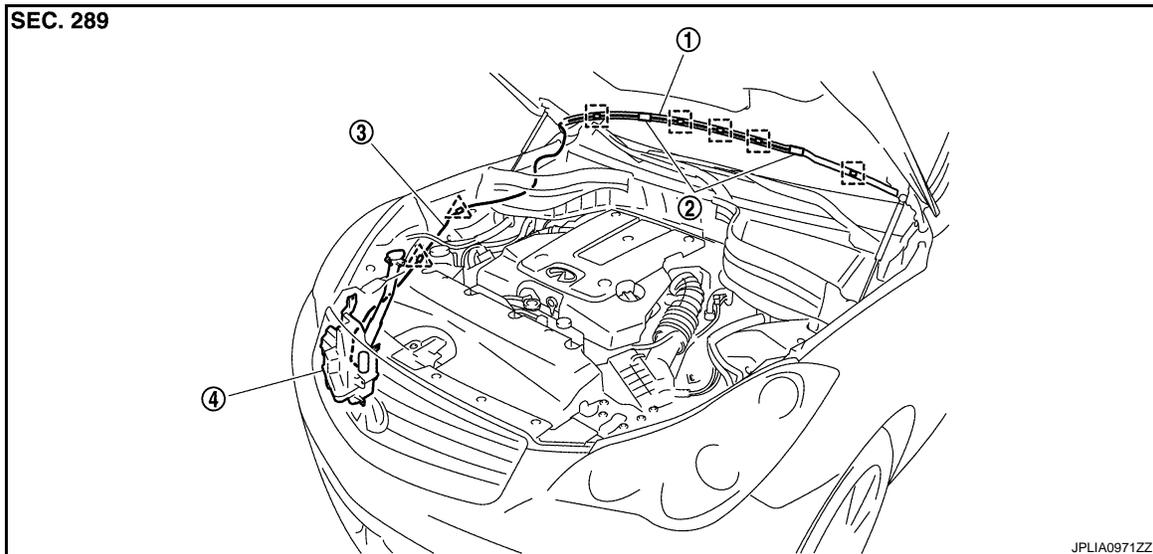

- 1. Front washer tube
- 2. Front washer nozzle
- 3. Front washer tube
- 4. Washer tank


 : Clip  
 : Clip

### Removal and Installation

INFOID:000000003587113

#### REMOVAL

1. Open the hood.
2. Use the stop point of washer nozzle (1) as the support point and rotate nozzle to remove it from body, while pushing nozzle spray point side along the hood.
3. Remove the washer tube (2) from the washer nozzle.

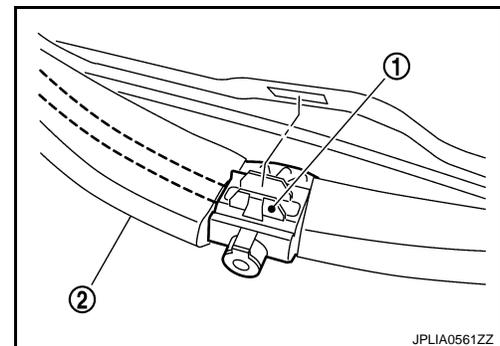

#### INSTALLATION

1. Install washer tube into the washer nozzle.
2. Install the washer nozzle to the hood.
3. Adjust the washer nozzle spray position. Refer to [WW-103, "Inspection and Adjustment"](#).

#### CAUTION:

The spray positions differ. Check that left and right nozzles are installed correctly.

### Inspection and Adjustment

INFOID:000000003587114


#### INSPECTION

##### Washer Nozzle Inspection

# FRONT WASHER NOZZLE AND TUBE

## < ON-VEHICLE REPAIR >

Check that air can pass through the hose by blowing forward (toward the nozzle), and check that air cannot pass through by sucking.

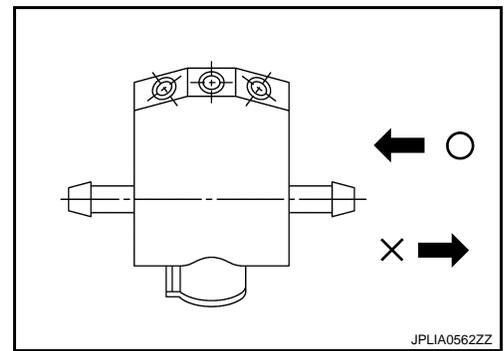


JPLIA0562ZZ

## ADJUSTMENT

### Washer Nozzle Spray Position Adjustment

Adjust spray positions to match the positions shown in the figure.

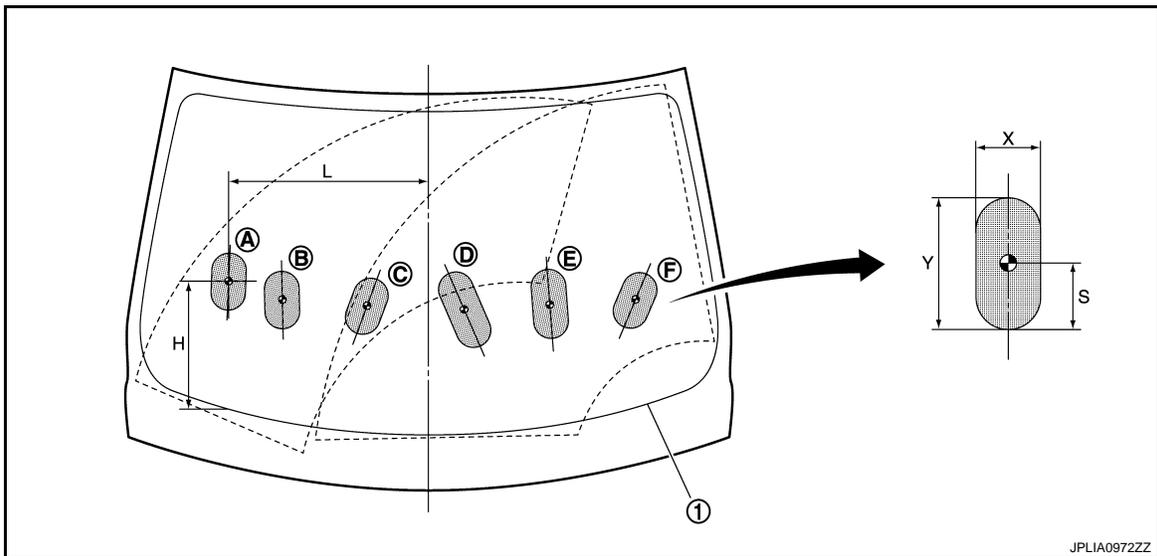

JPLIA0972ZZ

1. Black printed frame line

: Spray area

: Target spray position

Unit: mm (in)

| Spray position | H           | L           | X         | Y          | S         |
|----------------|-------------|-------------|-----------|------------|-----------|
| A              | 295 (11.61) | 453 (17.83) | 80 (3.15) | 130 (5.12) | 65 (2.56) |
| B              | 279 (10.98) | 333 (13.11) | 80 (3.15) | 130 (5.12) | 65 (2.56) |
| C              | 288 (11.34) | 139 (5.47)  | 80 (3.15) | 130 (5.12) | 65 (2.56) |
| D              | 283 (11.14) | 82 (3.23)   | 80 (3.15) | 180 (7.09) | 90 (3.54) |
| E              | 277 (10.91) | 275 (10.83) | 80 (3.15) | 160 (6.30) | 80 (3.15) |
| F              | 247 (9.72)  | 470 (18.50) | 80 (3.15) | 130 (5.12) | 65 (2.56) |


# FRONT WASHER NOZZLE AND TUBE

## < ON-VEHICLE REPAIR >

Insert a needle or similar object (A) into the spray opening (1) and move up/down and left/right to adjust the spray position.

**NOTE:**

If wax or dust gets into the nozzle, remove wax or dust with a needle or small pin.

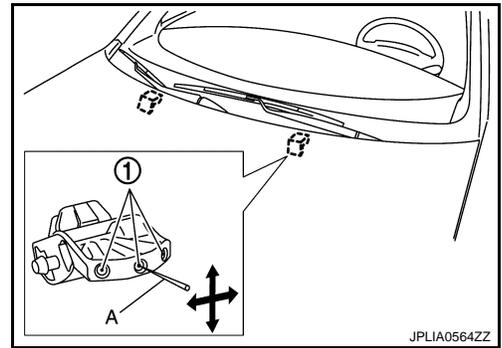

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW


# FRONT WIPER ARM AND BLADE

< ON-VEHICLE REPAIR >

## FRONT WIPER ARM AND BLADE

Exploded View

INFOID:000000003139016

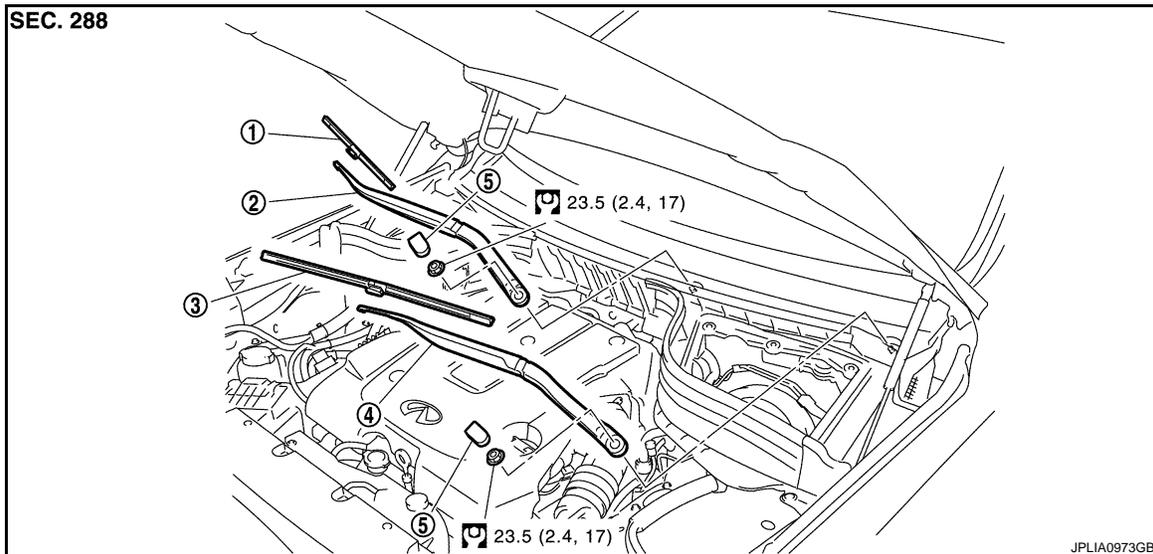

1. Front wiper blade (RH)
2. Front wiper arm (RH)
3. Front wiper blade (LH)
4. Front wiper arm (LH)
5. Front wiper arm cap

Refer to [GI-4. "Components"](#) for symbols in the figure.

## Removal and Installation


INFOID:000000003139017

### REMOVAL

1. Operate the front wiper to move it to the auto stop position.
2. Open the hood.
3. Remove front wiper arm caps.
4. Remove the front wiper arm mounting nuts.
5. Raise front wiper arm, and remove front wiper arm from the vehicle.

### INSTALLATION

1. Clean wiper arm mount as shown in the figure to prevent nuts from being loosened.
2. Operate the front wiper motor to move the front wiper to the auto stop position.
3. Adjust the front wiper blade position. Refer to [WW-106. "Adjustment"](#).
4. Install the front wiper arm by tightening the mounting nuts.
5. Inject the washer fluid.
6. Operate the front wiper to move it to the auto stop position.
7. Check that the front wiper blades stop at the specified position.
8. Install front wiper arm caps.

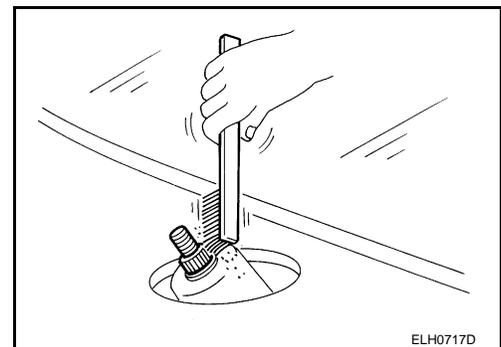

## Adjustment

INFOID:000000003139018

### WIPER BLADE POSITION ADJUSTMENT

Clearance between the end of cowl top cover and the top of wiper blade center


# FRONT WIPER ARM AND BLADE

## < ON-VEHICLE REPAIR >

Standard clearance

**R** :  $48.0 \pm 7.5 \text{ mm}$  ( $1.890 \pm 0.295 \text{ in}$ )

**L** :  $76.5 \pm 7.5 \text{ mm}$  ( $3.012 \pm 0.295 \text{ in}$ )

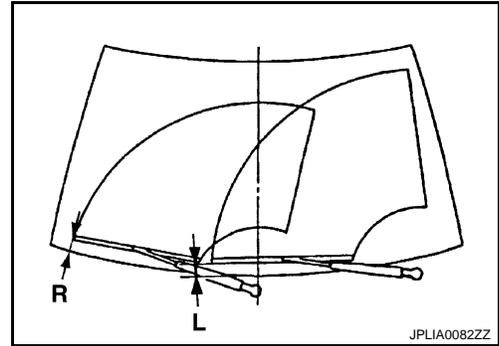

## Replacement


INFOID:000000003601794

### FLAT BLADE REFILL

1. Remove the wiper blade from wiper arm.
2. Pick up the blade refill rear end to direction (A), pull out the wiper blade refill to direction (B).

**CAUTION:**

**Never use excessive force to pull the blade refill out. The blade refill may be torn.**

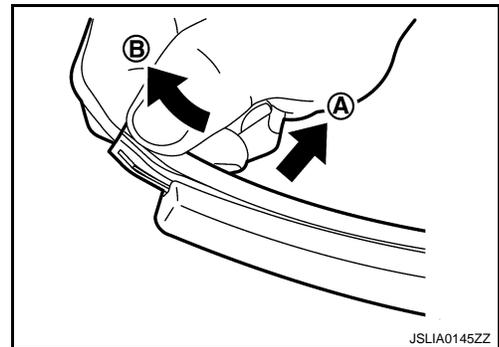


3. Insert a tip of new blade refill ("LOCK" mark is blade refill rear end) from the wiper blade rear end. And then slide until the hole of the blade refill fits in the tab of the wiper blade.

**NOTE:**

Confirm that "▼" mark (Wiper blade side) fits to "LOCK" mark (Blade refill side).

4. Confirm that an installation condition of the blade refill.
5. Install the wiper blade to the wiper arm.

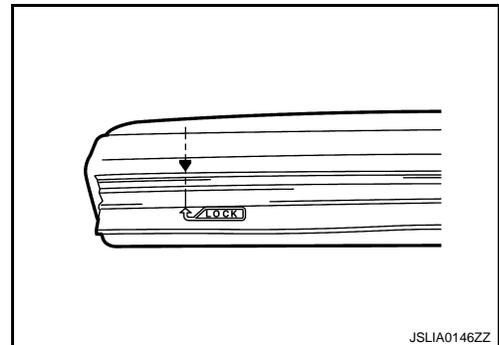

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

# FRONT WIPER DRIVE ASSEMBLY


< ON-VEHICLE REPAIR >

## FRONT WIPER DRIVE ASSEMBLY

Exploded View


INFOID:000000003139019

### REMOVAL

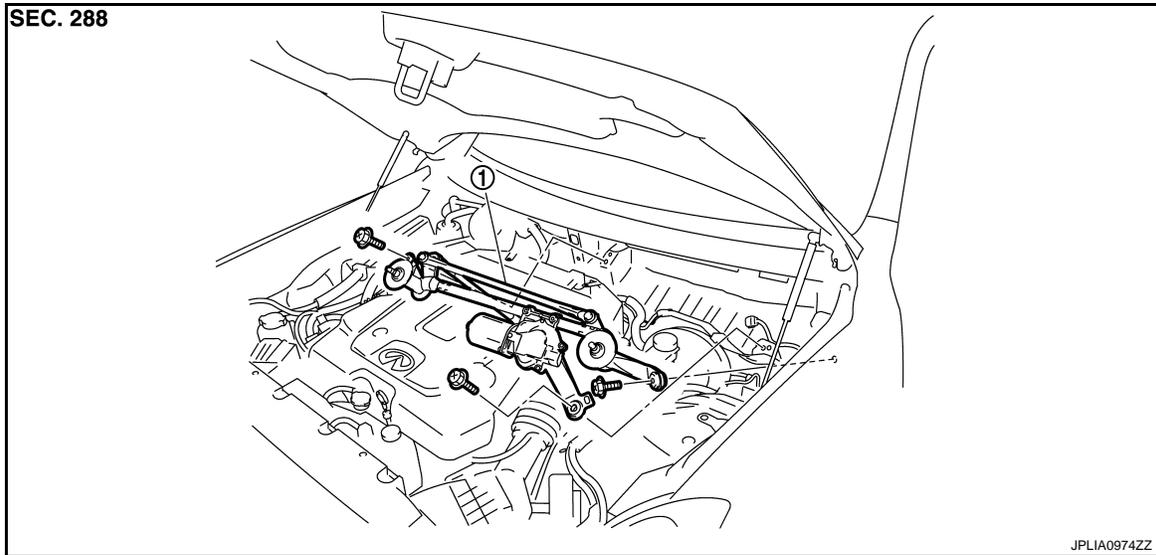

1. Front wiper drive assembly

### DISASSEMBLY

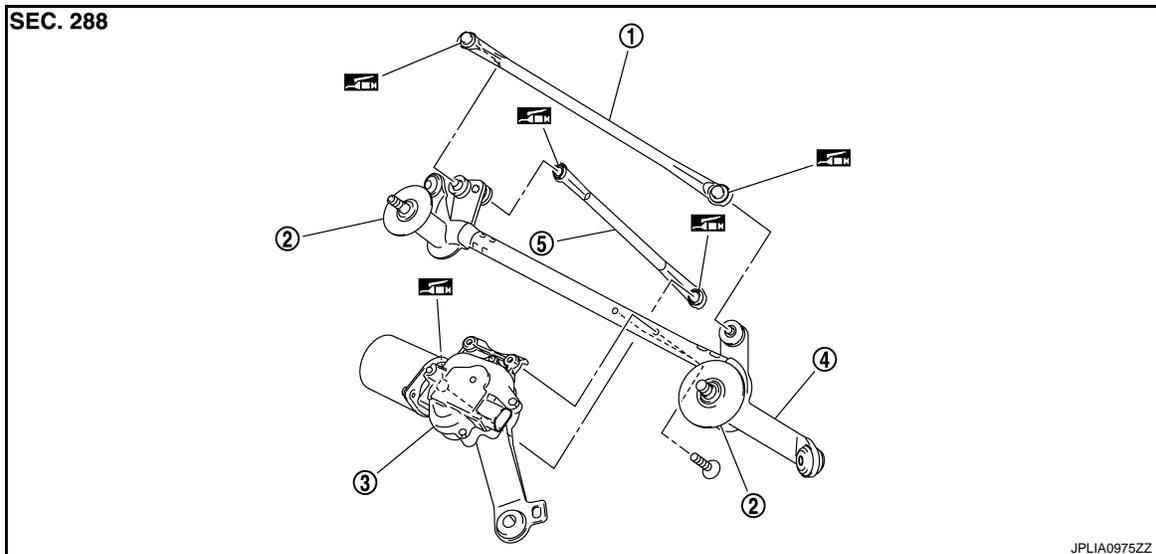

1. Front wiper linkage 1
2. Shaft seal
3. Front wiper motor
4. Front wiper frame
5. Front wiper linkage 2

: Multi-purpose grease or an equivalent.

### Removal and Installation

INFOID:000000003139020

#### REMOVAL

1. Remove front wiper arm. Refer to [WW-106, "Removal and Installation"](#).
2. Remove cowl top cover. Refer to [EXT-23, "Removal and Installation"](#).
3. Remove bolts from the front wiper drive assembly.

# FRONT WIPER DRIVE ASSEMBLY

## < ON-VEHICLE REPAIR >

---

4. Disconnect the front wiper motor connector.
5. Remove front wiper drive assembly from the vehicle.

A

## INSTALLATION

1. Install the front wiper drive assembly to the vehicle.
2. Connect the front wiper motor connector.
3. Operate the front wiper to move it to the auto stop position.
4. Install the cowl top cover. Refer to [EXT-23. "Removal and Installation"](#).
5. Install front wiper arms. Refer to [WW-106. "Removal and Installation"](#).

B

C

## Disassembly and Assembly

INFOID:000000003139021

D

## DISASSEMBLY

1. Remove the front wiper linkage 1 and 2 from the front wiper drive assembly.  
**CAUTION:**  
**Do not bend the linkage or damage the plastic part of the ball joint when removing the wiper linkage.**
2. Remove the front wiper motor mounting screws, and then remove the front wiper motor from the front wiper frame.

E

F

## ASSEMBLY

1. Connect the front wiper motor connector.
2. Operate the front wiper to move it to the auto stop position.
3. Disconnect the front wiper motor connector.
4. Install front wiper motor to front wiper frame.
5. Install the front wiper linkage 2 to the front wiper motor and the front wiper frame.
6. Install the front wiper linkage 1 to the front wiper frame.  
**CAUTION:**
  - Do not drop front wiper motor or cause it to come into contact with other parts.
  - Be careful for the grease condition at the front wiper motor and front wiper linkage joint (retainer). Apply Multi-purpose grease or an equivalent if necessary.

G

H

I

J

K

WW

M

N

O

P

## WIPER AND WASHER SWITCH

< ON-VEHICLE REPAIR >

---

### WIPER AND WASHER SWITCH

Exploded View

INFOID:000000003464507

Refer to [BCS-85. "Exploded View"](#).


# REAR WIPER ARM

< ON-VEHICLE REPAIR >

## REAR WIPER ARM

### Exploded View

INFOID:000000003464509

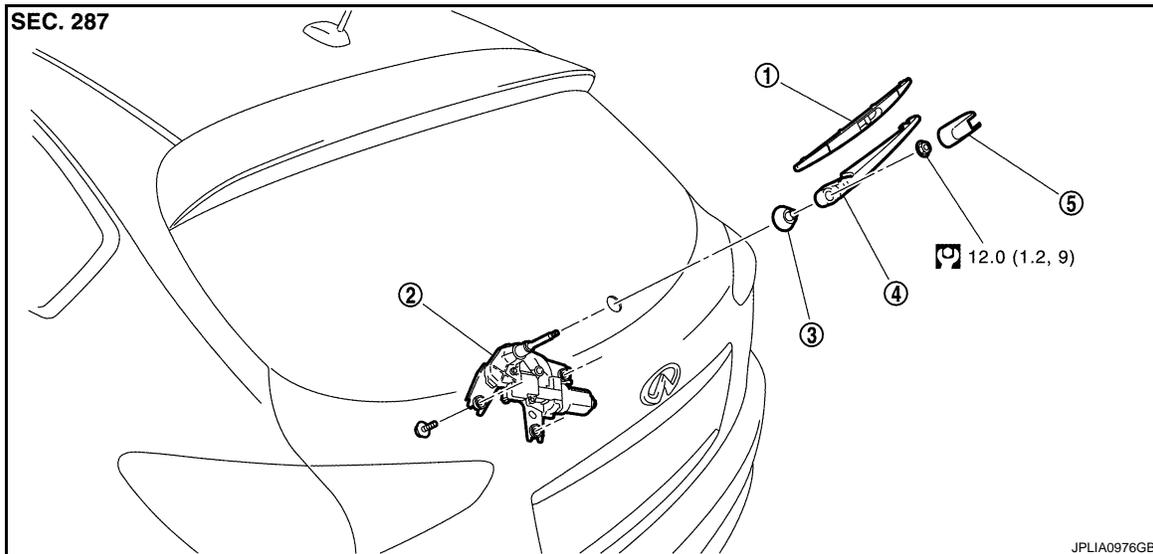

- |                     |                         |               |
|---------------------|-------------------------|---------------|
| 1. Rear wiper blade | 2. Rear wiper motor     | 3. Pivot seal |
| 4. Rear wiper arm   | 5. Rear wiper arm cover |               |

Refer to [GI-4, "Components"](#) for symbols in the figure.

### Removal and Installation


INFOID:000000003464510

#### REMOVAL

1. Operate the rear wiper to the auto stop position.
2. Remove the rear wiper arm cover.
3. Remove the rear wiper arm mounting nut.
4. Raise rear wiper arm, and remove wiper arm from the vehicle.

#### INSTALLATION

1. Clean wiper arm mount as shown in the figure to prevent nut from being loosened.
2. Operate the rear wiper motor to the auto stop position.
3. Adjust the rear wiper blade position. Refer to [WW-111, "Adjustment"](#).
4. Install the rear wiper arm by tightening the mounting nut.
5. Inject the washer fluid.
6. Operate the rear wiper to the auto stop position.
7. Check that the rear wiper blades stop at the specified position.
8. Install the rear wiper arm cover.

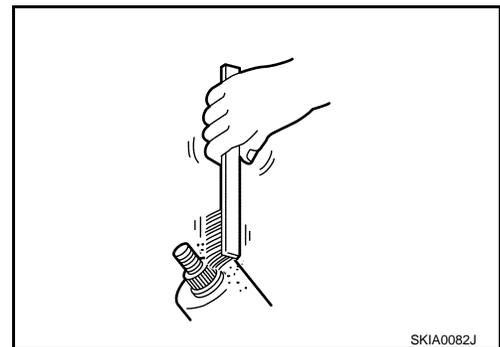

### Adjustment

INFOID:000000003464511

#### REAR WIPER BLADE POSITION ADJUSTMENT


Clearance between the end of back door glass and the top of wiper blade center.

# REAR WIPER ARM

## < ON-VEHICLE REPAIR >

Standard clearance

**L : 35.0 ± 7.5 mm (1.378 ± 0.295 in)**

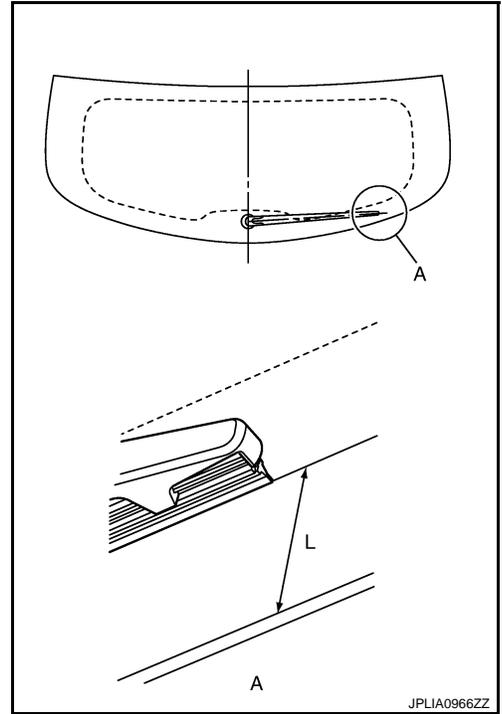


# REAR WIPER MOTOR

< ON-VEHICLE REPAIR >

## REAR WIPER MOTOR

### Exploded View

INFOID:000000003591459

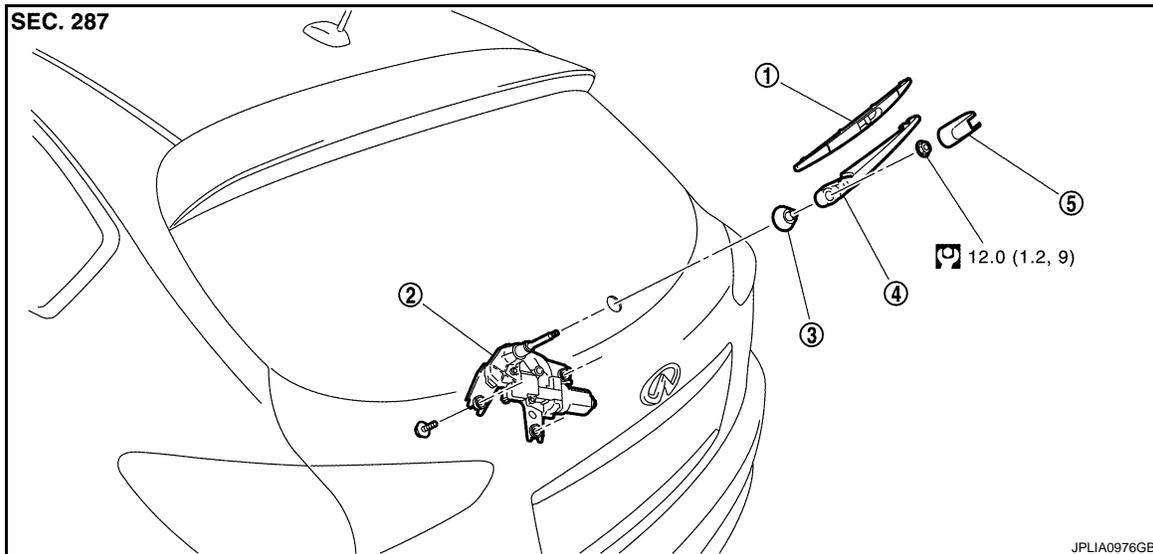

- |                     |                         |               |
|---------------------|-------------------------|---------------|
| 1. Rear wiper blade | 2. Rear wiper motor     | 3. Pivot seal |
| 4. Rear wiper arm   | 5. Rear wiper arm cover |               |

Refer to [GI-4, "Components"](#) for symbols in the figure.

### Removal and Installation

INFOID:000000003464513

#### REMOVAL

1. Remove rear wiper arm cover and rear wiper arm. Refer to [WW-111, "Removal and Installation"](#).
2. Remove back door finisher inner. Refer to [INT-38, "Exploded View"](#).
3. Disconnect the rear wiper motor connector.
4. Remove rear wiper motor mounting bolts.
5. Remove rear wiper motor from the vehicle.
6. Remove pivot seal.

#### INSTALLATION

1. Install the pivot seal.
2. Install the rear wiper motor to the vehicle.
3. Connect the rear wiper motor connector.
4. Operate the rear wiper to the auto stop position.
5. Install the back door finisher inner. Refer to [INT-38, "Exploded View"](#).
6. Install rear wiper arm cover and rear wiper arm. Refer to [WW-111, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW


# REAR WASHER NOZZLE AND TUBE

< ON-VEHICLE REPAIR >

## REAR WASHER NOZZLE AND TUBE

Hydraulic Layout

INFOID:000000003464515

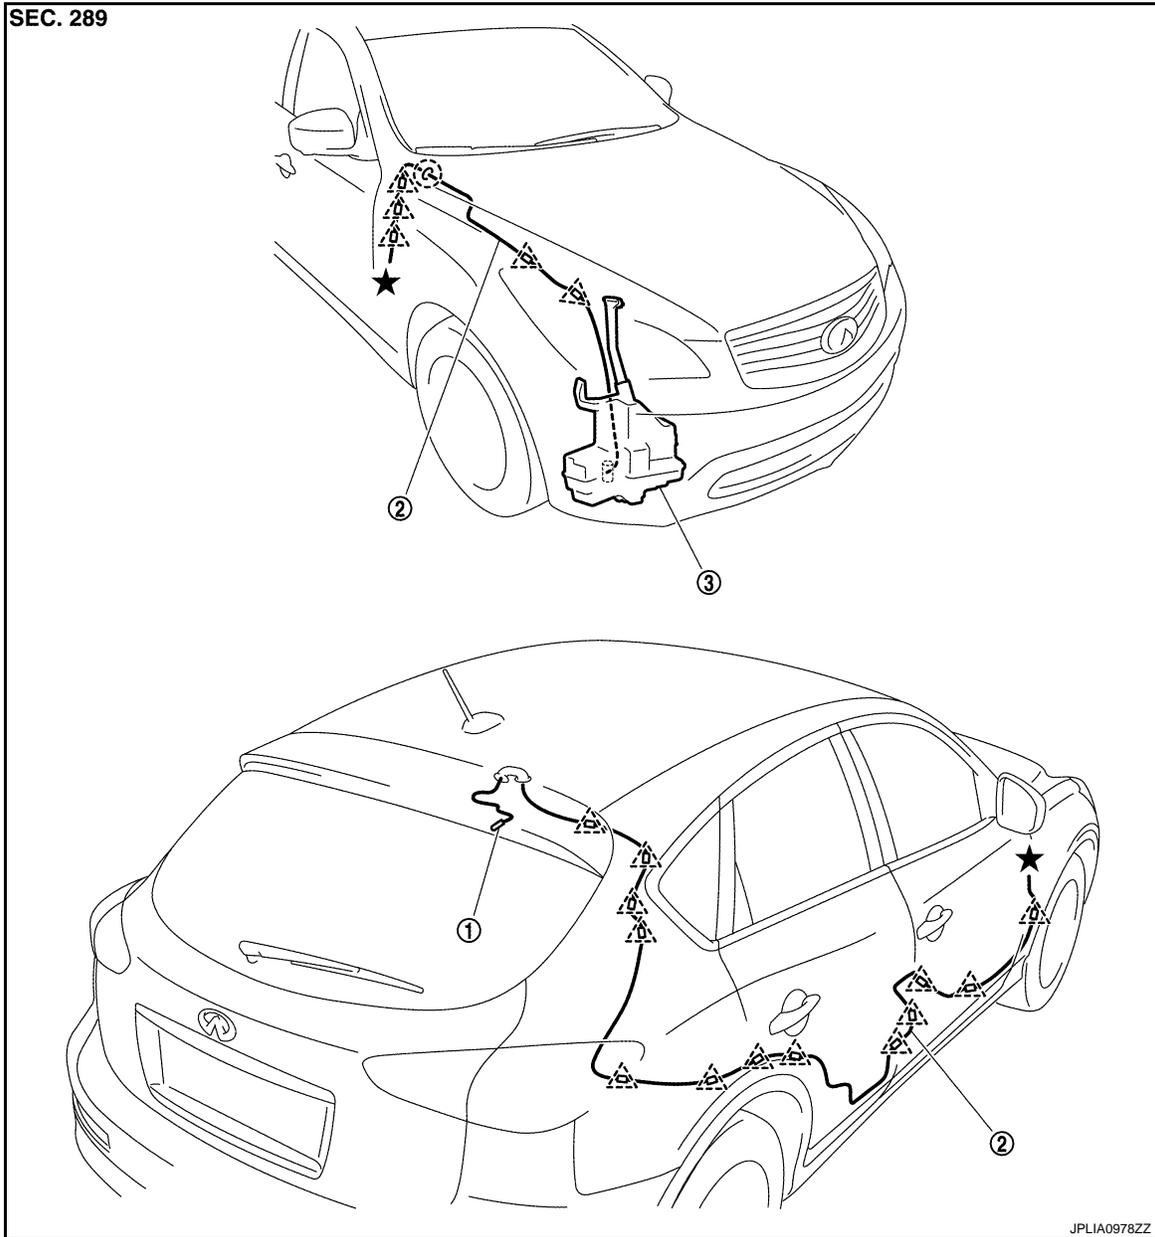

## Removal and Installation

INFOID:000000003464516


### REMOVAL

1. Remove the high-mounted stop lamp. Refer to [EXL-206, "Exploded View"](#).
2. Remove the rear washer tube from the rear washer nozzle.

# REAR WASHER NOZZLE AND TUBE

## < ON-VEHICLE REPAIR >

- Remove the rear washer nozzle (1) from the high-mounted stop lamp (2).

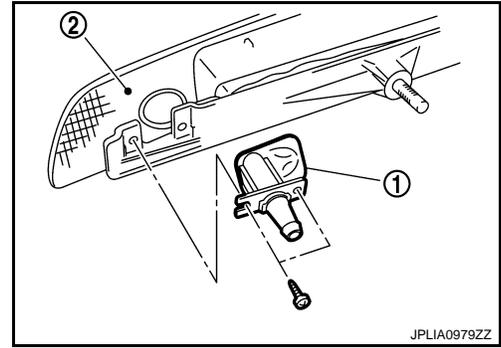

## INSTALLATION

Install in the reverse order of removal.


## Inspection and Adjustment

INFOID:000000003464517

## INSPECTION

### Washer Nozzle Inspection

Check that air can pass through the hose by blowing forward (toward the nozzle), and check that air cannot pass through by sucking.

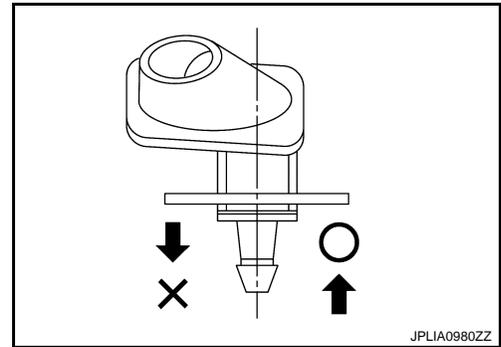

## ADJUSTMENT


### Washer Nozzle Spray Position adjustment

Adjust spray positions to match the positions shown in the figure.

1 : Black printed frame line

Unit: mm (in)


| Spray position | H : Height  | L : Length   | $\phi$ : Spray position area |
|----------------|-------------|--------------|------------------------------|
| A              | 32.0 (1.26) | 120.5 (4.74) | 30 (1.18)                    |
| B              | 49.6 (1.95) | 189.7 (7.47) | 30 (1.18)                    |

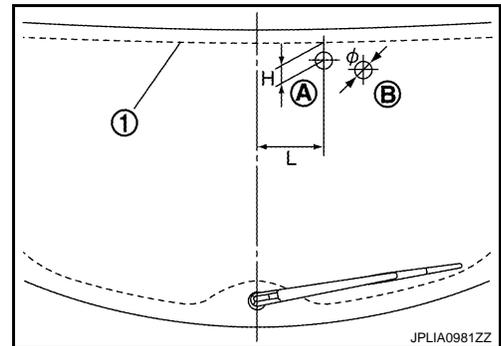

Insert a needle or similar object (A) into the spray opening (1) and move up/down and left/right to adjust the spray position.

### NOTE:

If wax or dust gets into the nozzle, remove wax or dust with a needle or small pin.

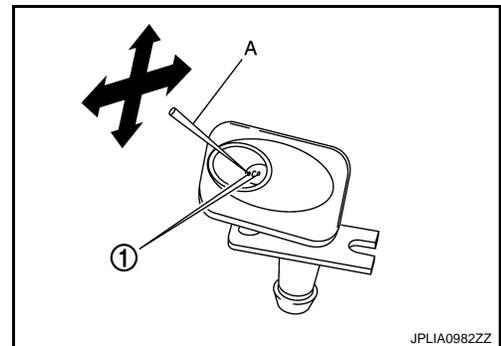

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW