

SECTION **SE**
SEAT

A
B
C

CONTENTS

BASIC INSPECTION	3	SEATBACK THERMAL ELECTRIC DEVICE ...	17	F
DIAGNOSIS AND REPAIR WORK FLOW	3	Description	17	
Work Flow	3	Component Function Check	17	
SYSTEM DESCRIPTION	4	Diagnosis Procedure	17	G
POWER SEAT	4	SEATBACK THERMAL ELECTRIC DEVICE		
System Description	4	SENSOR	19	H
Component Parts Location	4	Description	19	
Component Description	5	Diagnosis Procedure	19	
SIDE SUPPORT	6	SEAT CUSHION THERMAL ELECTRIC DE-		I
System Description	6	VICE	21	
Component Parts Location	6	Description	21	
Component Description	6	Component Function Check	21	
LUMBAR SUPPORT	7	Diagnosis Procedure	21	SE
System Description	7	SEAT CUSHION THERMAL ELECTRIC DE-		
Component Parts Location	7	VICE SENSOR	23	K
Component Description	7	Description	23	
CLIMATE CONTROLLED SEAT	8	Diagnosis Procedure	23	
System Diagram	8	CLIMATE CONTROLLED SEAT BLOWER		L
System Description	8	MOTOR	25	
Component Parts Location	9	Description	25	
Component Description	9	Component Function Check	25	M
DTC/CIRCUIT DIAGNOSIS	10	Diagnosis Procedure	25	
POWER SUPPLY AND GROUND CIRCUIT	10	CLIMATE CONTROLLED SEAT SWITCH IN-		N
CLIMATE CONTROLLED SEAT CONTROL UNIT...	10	DICATOR	28	
CLIMATE CONTROLLED SEAT CONTROL UNIT		Description	28	
: Diagnosis Procedure	10	Component Function Check	28	
CLIMATE CONTROLLED SEAT CONTROL UNIT		Diagnosis Procedure	28	O
: Component Inspection	13	Component Inspection	29	
CLIMATE CONTROLLED SEAT SWITCH	14	CLIMATE CONTROLLED SEAT BLOWER		P
Description	14	FILTER	31	
Component Function Check	14	Diagnosis Procedure	31	
Diagnosis Procedure	14	POWER SEAT	32	
Component Inspection	16	Wiring Diagram - POWER SEAT FOR DRIVER		
		SIDE (WITHOUT AUTOMATIC DRIVE POSI-		
		TIONER) -	32	

Wiring Diagram - POWER SEAT FOR PASSENGER SIDE -	37	Diagnostic Worksheet	76
SIDE SUPPORT	42	PRECAUTION	78
Wiring Diagram - SIDE SUPPORT -	42	PRECAUTIONS	78
LUMBAR SUPPORT	47	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	78
Wiring Diagram - LUMBAR SUPPORT -	47	Precaution Necessary for Steering Wheel Rotation after Battery Disconnect	78
ECU DIAGNOSIS INFORMATION	52	Service Notice	79
CLIMATE CONTROLLED SEAT CONTROL UNIT	52	Precaution for Work	79
Reference Value	52	PREPARATION	80
Wiring Diagram - CLIMATE CONTROLLED SEAT CONTROL SYSTEM -	54	PREPARATION	80
Fail-safe	63	Special Service Tool	80
SYMPTOM DIAGNOSIS	66	Commercial Service Tool	80
CLIMATE CONTROLLED SEAT DOES NOT OPERATE.	66	REMOVAL AND INSTALLATION	81
BOTH SIDES	66	FRONT SEAT	81
BOTH SIDES : Diagnosis Procedure	66	Exploded View	81
DRIVER SIDE	66	Removal and Installation	84
DRIVER SIDE : Diagnosis Procedure	66	Disassembly and Assembly	85
PASSENGER SIDE	66	REAR SEAT	93
PASSENGER SIDE : Diagnosis Procedure	66	Exploded View	93
CLIMATE CONTROLLED SEAT BLOWER MOTOR SPEED CANNOT ADJUST.	68	Removal and Installation	94
Diagnosis Procedure	68	Disassembly and Assembly	95
CLIMATE CONTROLLED SEAT DOES NOT OPERATES WHEN SWITCH IS DONE IN HEAT OR COOL.	69	SEATBACK CONTROL CABLE	101
Diagnosis Procedure	69	Exploded View	101
WHEN THE CLIMATE CONTROLLED SEAT SWITCH IS TURNED ON, OPERATION STOP AT NOSE.	70	Removal and Installation	101
Diagnosis Procedure	70	POWER SEAT SWITCH	103
SEAT SWITCH INDICATOR DOES NOT OPERATE IN HEAT OR COOL POSITION	71	Exploded View	103
Diagnosis Procedure	71	Removal and Installation	103
SQUEAK AND RATTLE TROUBLE DIAGNOSES	72	LUMBAR SUPPORT SWITCH	104
Work Flow	72	Exploded View	104
Inspection Procedure	74	Removal and Installation	104
		SIDE SUPPORT SWITCH	105
		Removal and Installation	105
		CLIMATE CONTROLLED SEAT SWITCH	106
		Exploded View	106
		Removal and Installation	106
		CLIMATE CONTROLLED SEAT BLOWER FILTER	107
		Exploded View	107
		Removal and Installation	107

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000005236595

DETAILED FLOW

1.OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much malfunction information (conditions and environment when the malfunction occurred) as possible when the customer brings the vehicle in.

>> GO TO 2.

2.REPRODUCE THE MALFUNCTION INFORMATION

Check the malfunction on the vehicle that the customer describes.
Inspect the relation of the symptoms and the condition when the symptoms occur.

>> GO TO 3.

3.IDENTIFY THE MALFUNCTIONING SYSTEM WITH "SYMPTOM DIAGNOSIS"

Use "Symptom diagnosis" from the symptom inspection result in step 2 and then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 4.

4.IDENTIFY THE MALFUNCTIONING PARTS WITH "COMPONENT DIAGNOSIS"

Perform the diagnosis with "Component diagnosis" of the applicable system.

>> GO TO 5.

5.REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 6.

6.FINAL CHECK

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 2.

Are the malfunctions corrected?

YES >> INSPECTION END

NO >> GO TO 3.

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

POWER SEAT

< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

POWER SEAT

System Description

INFOID:000000005236596

BCM can operate regardless of the ignition switch position, because battery power is supplied at all times to power seat switch.

SLIDING OPERATION

While operating the sliding switch located in power seat switch, sliding motor operates and makes the seat front and back position adjustment possible.

RECLINING OPERATION


While operating the reclining switch located in power seat switch, reclining motor operates and makes the seat back forward and backward position adjustment possible.

LIFTING OPERATION

While operating the lifting switch located in power seat switch, lifting motor operates and makes the seat cushion up and down position adjustment possible.

Component Parts Location

INFOID:000000005236597

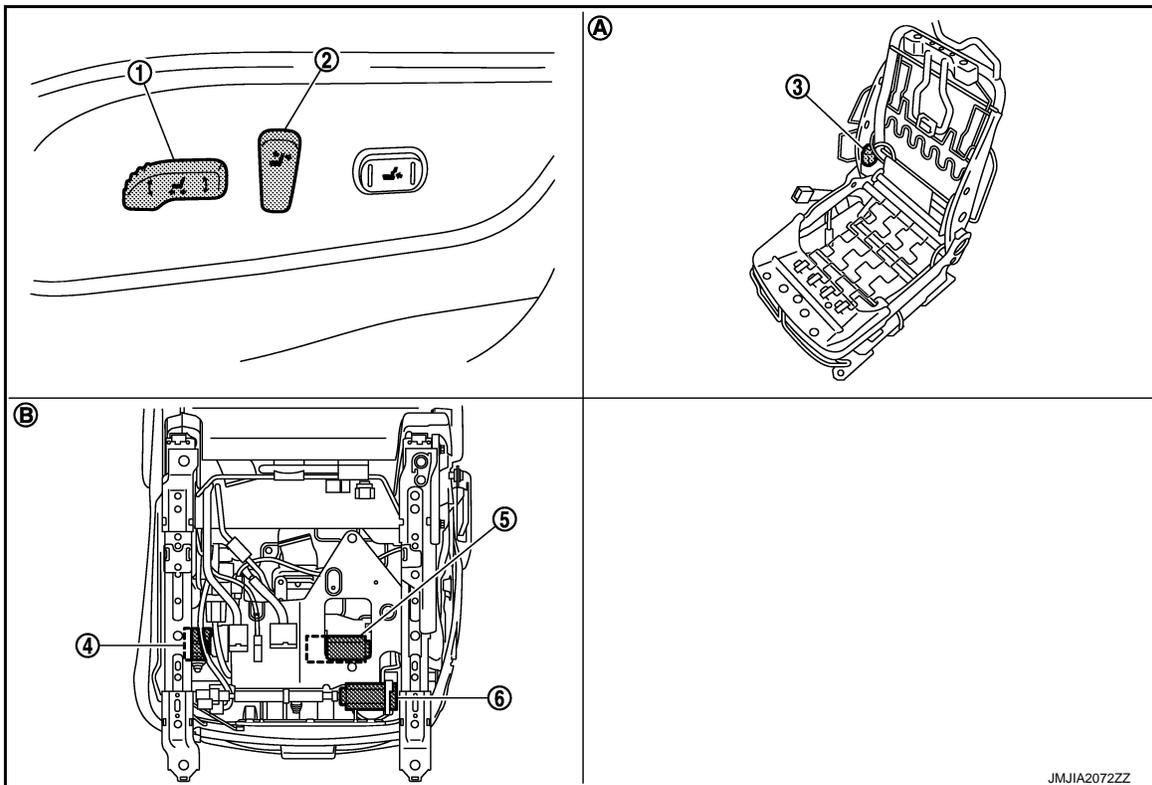

- | | | |
|--|---|---------------------------------------|
| 1. Sliding switch and lifting switch (driver side) B414 | 2. Reclining switch (driver side) B414 | 3. Reclining motor (driver side) B415 |
| 4. Lifting motor (rear) (driver side) B418 | 5. Lifting motor (front) (driver side) B417 | 6. Sliding motor (driver side) B416 |
| A. View with seat cushion pad and seat back pad removed. | B. Backside of seat cushion | |

POWER SEAT

< SYSTEM DESCRIPTION >

Component Description

INFOID:000000005236598

Item	Function
BCM	Supplies at all times the power received from battery to power seat switch
Power seat switch	Built-in reclining switch, sliding switch and lifting switch, and controls the power supplied to each motor
Reclining motor	With the power supplied from power seat switch, operates forward and backward movement of seatback
Sliding motor	With the power supplied from power seat switch, operates forward and backward slide of seat
Lifting motor (front/rear)	With the power supplied from power seat switch, operates up and down movement of seat cushion

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

SIDE SUPPORT

< SYSTEM DESCRIPTION >

SIDE SUPPORT


System Description

INFOID:000000005236599

- While operating the side support switch, the pump located inside side support unit operates and adjusts the air pressure in seat cushion and seatback side support.
- It is possible to soften the side support by allowing some air to escape or by deflating the solenoid located inside side support.
- It is possible to adjust seat cushion and seatback differently while inflating or deflating solenoid located in side support unit.

Component Parts Location

INFOID:000000005236600

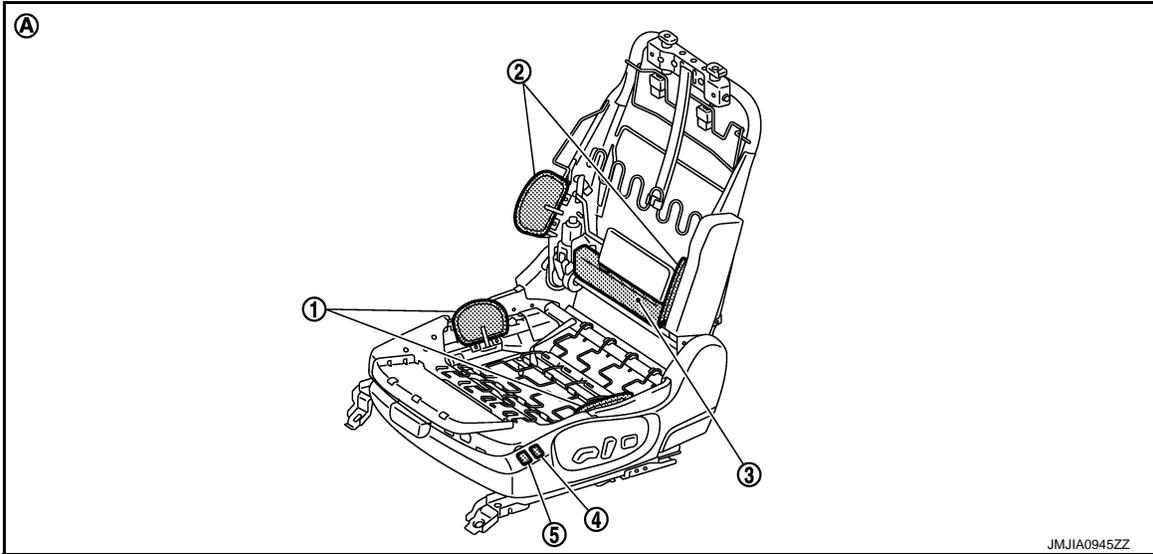

- | | | |
|--|---|---------------------------|
| 1. Side support (seat cushion)
(Side support unit B467) | 2. Side support (seat back)
(Side support unit B467) | 3. Side support unit B467 |
| 4. Side support switch (seat back side)
B464 | 5. Side support switch (cushion side)
B464 | |

A. View with seat cushion pad and seat back pad removed.

Component Description

INFOID:000000005236601

Item	Function
Side support switch	With a built-in cushion side and seat back side, and controls the power supplied to pump and to each solenoid.
Side support unit	Built-in pump, pump relay, and solenoid, and operates when pressing ON/OFF on side support switch.

LUMBAR SUPPORT

< SYSTEM DESCRIPTION >

LUMBAR SUPPORT


System Description

INFOID:000000005236602

- Lumbar support can operate regardless of the ignition switch position because battery power is supplied to it at all times.
- While operating the lumbar support switch, lumbar support motor operates which allows forward and backward operation of seatback support.

Component Parts Location

INFOID:000000005236603

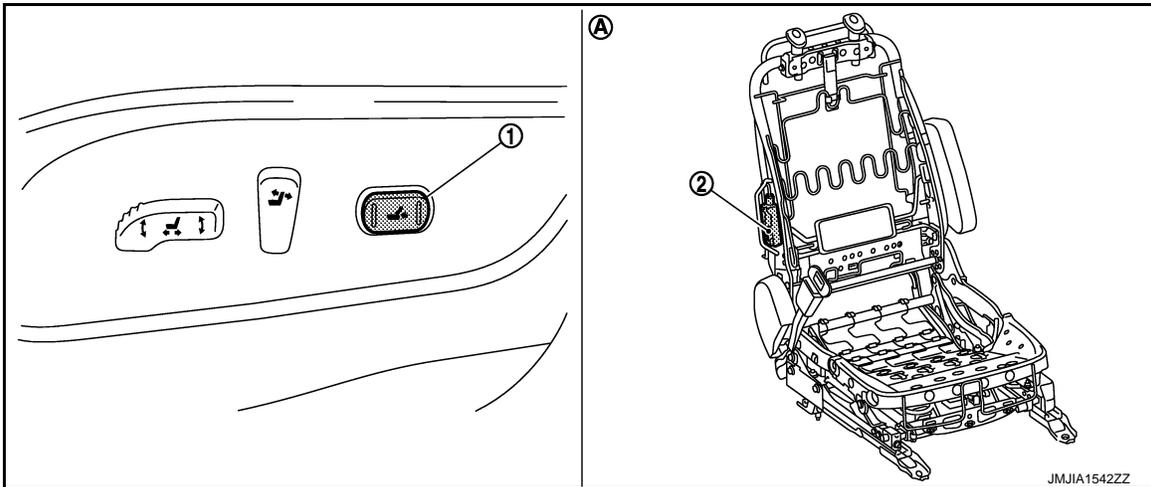

1. Lumbar support switch B457 2. Lumbar support motor B458
 A. View with seat back pad removed

Component Description

INFOID:000000005236604

Item	Function
Lumbar support switch	Controls the power supplied to lumbar support motor
Lumbar support motor	With the power supplied from lumbar support switch, operates forward and backward movement of seatback support device

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P


CLIMATE CONTROLLED SEAT

< SYSTEM DESCRIPTION >

CLIMATE CONTROLLED SEAT

System Diagram

INFOID:000000005236605

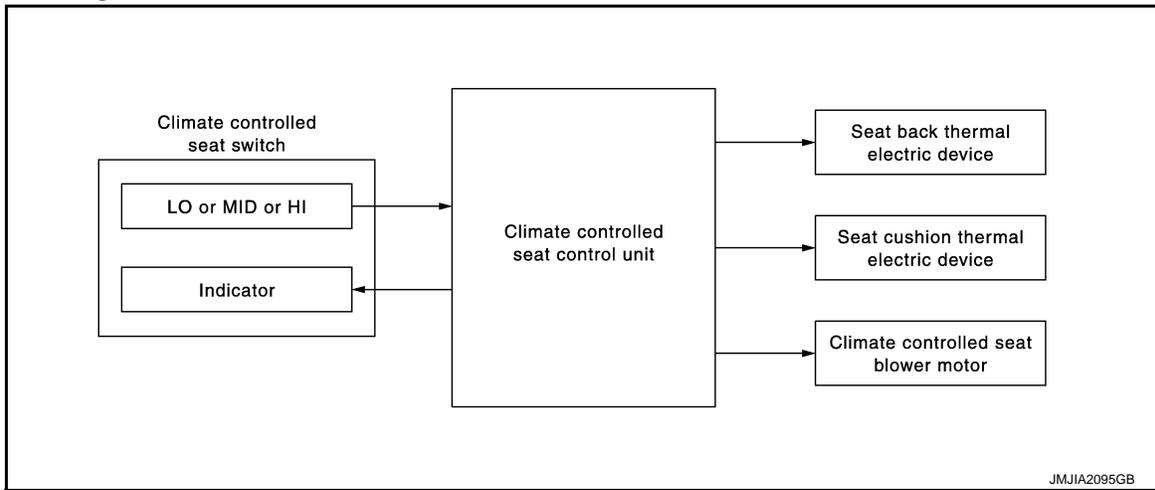

System Description

INFOID:000000005236606

- The climate controlled seat system is controlled by the climate controlled seat control unit.
- Operation of the climate controlled switch sends heated or cooled airflow and adjusts the seat temperature.

SEAT CUSHION AND SEAT BACK TEMPERATURE ADJUSTMENT FUNCTION

- One thermal electric device (TED) unit is installed in each seat cushion and seatback. The device heats or cools, sends airflow to the seat surface, and adjusts the seat temperature.
- The thermal electric device (TED) is a heat exchanger that has a function to heat or cool the airflow from the climate controlled seat blower motor. (By changing the direction of the current from the power supply, the device takes or gives heat, and adjusts heat exchange process depending on voltage.

NOTE:

The climate controlled seat blower maintains low speed for approximately 60 seconds after turning the climate controlled seat switch.

CAUTION:

- **The thermal electric device has a dual-climate function that allows one side to operate at a high temperature and the other to operate at a low temperature simultaneously.**
- **Before starting the work, always turn OFF the switch and check that the thermal electric device is cold.**

FAIL-SAFE


The fail-safe function is adopted for the climate controlled seat control unit. Refer to [SE-63, "Fail-safe"](#).

CLIMATE CONTROLLED SEAT

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000005236607

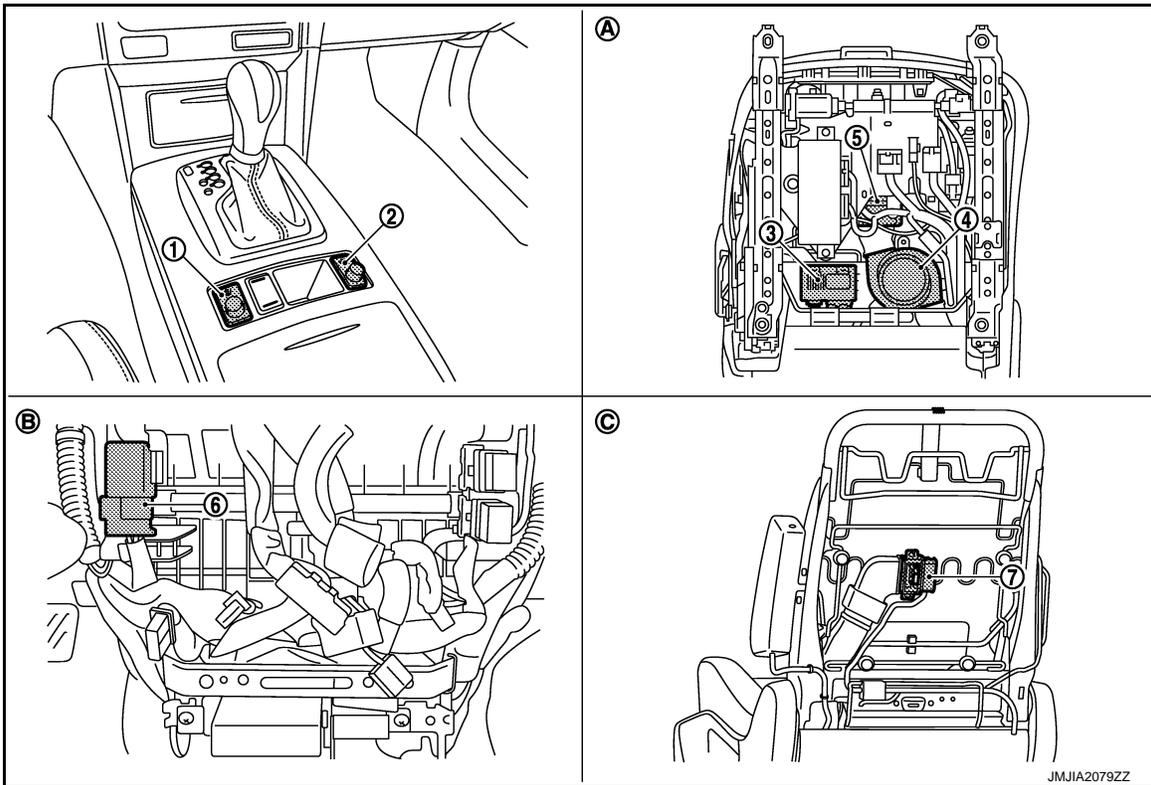

- | | | |
|--|--|--|
| 1. Climate controlled seat switch (driver side) M177 | 2. Climate controlled seat switch (passenger side) M178 | 3. Climate controlled seat control unit (driver side) B507,B508,B509 |
| 4. Climate controlled seat blower motor (driver side) B506 | 5. Seat cushion thermal electric device (driver side) B505 | 6. Climate controlled seat relay M64 |
| 7. Seatback thermal electric device (driver side) B504 | | |

Component Description

INFOID:000000005236608

Item	Function
Climate controlled seat relay	Supplies power to the climate controlled seat control unit in accordance with the key switch position that is ON or OFF
Climate controlled seat control unit	Installed in the seat cushion backside and controls the climate controlled seat blower motor, seatback thermal electric device, and seat cushion thermal electric device in accordance with the input signal
Climate controlled seat switch	Installed in the center console and transmits signals to climate controlled seat control unit in accordance with the HEAT (heated airflow) or COOL (cooled airflow) switch operation and the temperature switch operation
Climate controlled seat blower motor	Installed in the seat cushion backside and sends the airflow to the seatback thermal electric device and seat cushion thermal electric device in accordance with the control from the climate controlled seat control unit
Seatback thermal electric device	Installed in the seatback backside and heats or cools the airflow from the climate controlled seat blower motor in accordance with the control from the climate controlled seat control unit
Seat cushion thermal electric device	Installed in the seat cushion backside and heats or cools the airflow from the climate controlled seat blower motor in accordance with the control from the climate controlled seat control unit

A
B
C
D
E
F
G
H
I

SE

K

L

M

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT CLIMATE CONTROLLED SEAT CONTROL UNIT

CLIMATE CONTROLLED SEAT CONTROL UNIT : Diagnosis Procedure INFOID:000000005236609

Driver side

1.CHECK FUSE

Check that the following fuses are not fusing.

Signal name	Fuse No.
Battery power supply	63 (15A)
IGN power supply	3 (10A)

Is the fuse fusing?

YES >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

NO >> GO TO 2.

2.CHECK CLIMATE CONTROLLED SEAT CONTROL UNIT POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect climate controlled seat control unit (driver side) connector.
3. Turn ignition switch ON.
4. Check voltage between climate controlled seat control unit (driver side) harness connector and ground.

(+)		(-)	Voltage (Approx.)
Connector	Terminal		
B508	55	Ground	Battery voltage
B509	70		

Is the measurement value normal?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK GROUND CIRCUIT

Check continuity between climate control unit (driver side) harness connector and ground.

Climate controlled seat control unit (driver side)		Ground	Continuity
Connector	Terminal		
B509	56		Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair or replace harness or connector.

4.CHECK CLIMATE CONTROLLED SEAT CONTROL UNIT POWER SUPPLY CIRCUIT 1

1. Turn ignition switch OFF.
2. Disconnect climate controlled seat relay.
3. Check continuity between climate controlled seat control unit (driver side) harness connector and climate controlled seat relay harness connector.

Climate controlled seat control unit (driver side)		Climate controlled seat relay		Continuity
Connector	Terminal	Connector	Terminal	
B508	55	M64	6	Existed
B509	70			

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

4. Check continuity between climate controlled seat control unit (driver side) harness connector and ground.

Climate controlled seat control unit (driver side)		Ground	Continuity
Connector	Terminal		
B508	55	Ground	Not existed
B509	70		

Is the measurement value normal?

- YES >> GO TO 5.
NO >> Repair or replace harness or connector.

5.CHECK CLIMATE CONTROLLED SEAT RELAY POWER SUPPLY CIRCUIT 2

1. Turn ignition switch ON.
2. Check voltage between climate controlled seat relay harness connector and ground.

Terminals		Ground	Voltage (Approx.)
(+)	(-)		
Climate controlled seat relay		Ground	Battery voltage
Connector	Terminal		
M64	2		
	7		

Is the measurement value normal?

- YES >> GO TO 6.
NO >> Repair or replace harness or connector.

6.CHECK CLIMATE CONTROLLED SEAT RELAY

Check climate controlled seat relay.

Refer to [SE-13. "CLIMATE CONTROLLED SEAT CONTROL UNIT : Component Inspection"](#)

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Replace climate controlled seat relay.

7.CHECK CLIMATE CONTROLLED SEAT RELAY GROUND CIRCUIT

Check continuity between climate controlled seat relay harness connector and ground.

Climate controlled seat relay		Ground	Continuity
Connector	Terminal		
M64	1	Ground	Existed

Does continuity exist?

- YES >> GO TO 8.
NO >> Repair or replace harness.

8.CHECK INTERMITTENT INCIDENT

Refer to [GI-36. "Intermittent Incident"](#).

>> INSPECTION END

Passenger side

1.CHECK FUSE

Check that the following fuses are not fusing.

Signal name	Fuse No.
Battery power supply	62 (15A)
IGN power supply	3 (10A)

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Is the fuse fusing?

- YES >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.
NO >> GO TO 2.

2. CHECK CLIMATE CONTROLLED SEAT CONTROL UNIT POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect climate controlled seat control unit (passenger side) connector.
3. Turn ignition switch ON.
4. Check voltage between climate controlled seat control unit (passenger side) harness connector and ground.

(+)		(-)	Voltage (Approx.)
Climate controlled seat control unit (passenger side)			
Connector	Terminal	Ground	Battery voltage
B518	55		
B519	70		

Is the measurement value normal?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK GROUND CIRCUIT

Check continuity between harness connector and ground.

Climate controlled seat control unit (passenger side)		Ground	Continuity
Connector	Terminal		
B519	56		Existed

Does continuity exist?

- YES >> INSPECTION END
NO >> Repair harness or connector.

4. CHECK CLIMATE CONTROLLED SEAT CONTROL UNIT POWER SUPPLY CIRCUIT 1

1. Turn ignition switch OFF.
2. Disconnect climate controlled seat relay.
3. Check continuity between climate controlled seat control unit (passenger side) harness connector and climate controlled seat relay harness connector.

Climate controlled seat control unit (passenger side)		Climate controlled seat relay		Continuity
Connector	Terminal	Connector	Terminal	
B518	55	M64	3	Existed
B519	70			

4. Check continuity between climate controlled seat control unit (driver side) harness connector and ground.

Climate controlled seat control unit (driver side)		Ground	Continuity
Connector	Terminal		
B518	55		Not existed
B519	70		

Is the measurement value normal?

- YES >> GO TO 5.
NO >> Repair or replace harness or connector.

5. CHECK CLIMATE CONTROLLED SEAT RELAY POWER SUPPLY CIRCUIT 2

1. Turn ignition switch ON.
2. Check voltage between climate controlled seat relay harness connector and ground.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Terminals		Voltage (Approx.)
(+)	(-)	
Climate controlled seat relay		Battery voltage
Connector	Terminal	
M64	2	
	5	

Is the measurement value normal?

- YES >> GO TO 6.
NO >> Repair or replace harness or connector.

6.CHECK CLIMATE CONTROLLED SEAT RELAY

Check climate controlled seat relay.

Refer to [SE-13. "CLIMATE CONTROLLED SEAT CONTROL UNIT : Component Inspection"](#)

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Replace climate controlled seat relay.

7.CHECK CLIMATE CONTROLLED SEAT RELAY GROUND CIRCUIT

Check continuity between climate controlled seat relay harness connector and ground.

Climate controlled seat relay		Ground	Continuity
Connector	Terminal		
M64	1		Existed

Does continuity exist?

- YES >> GO TO 8.
NO >> Repair or replace harness.

8.CHECK INTERMITTENT INCIDENT

Refer to [GI-36. "Intermittent Incident"](#).


>> INSPECTION END

CLIMATE CONTROLLED SEAT CONTROL UNIT : Component Inspection INFOID:000000005236610

1.CHECK CLIMATE CONTROLLED SEAT RELAY

- Turn ignition switch OFF.
- Disconnect climate controlled seat relay.
- Check climate controlled seat relay.

Climate controlled seat relay		Condition	Continuity
Terminal			
3	5	12 V direct current supply between terminals 1 and 2.	Existed
		No current supply	Not existed
6	7	12 V direct current supply between terminals 1 and 2.	Existed
		No current supply	Not existed

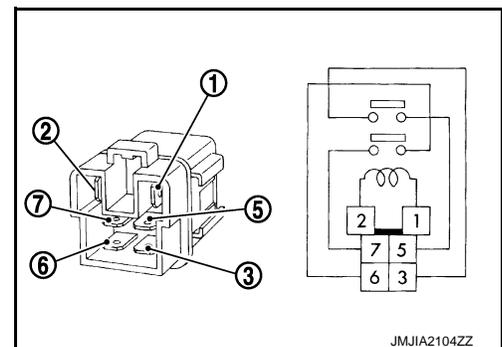

Is the inspection result normal?

- YES >> INSPECTION END.
NO >> Replace climate controlled seat relay.

CLIMATE CONTROLLED SEAT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

CLIMATE CONTROLLED SEAT SWITCH

Description

INFOID:000000005236611

Installed in the center console and transmits signals to climate controlled seat control unit in accordance with the HEAT or COOL switch operation and the temperature switch operation.

Component Function Check

INFOID:000000005236612

1.CHECK FUNCTION

Check that climate controlled seat activates when operating climate controlled seat control switch.

Is the inspection result normal?

- YES >> Climate controlled seat switch is OK.
 NO >> Refer to [SE-14, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000005236613

1.CHECK CLIMATE CONTROLLED SEAT CONTROL UNIT INPUT SIGNAL

- Turn ignition switch ON.
- Check voltage between climate controlled seat control unit harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)	
Climate controlled seat control unit					
Connector	Terminal				
Driver side	B508	6	Climate controlled seat switch	LO COOL	0.8 - 1.5
				MID COOL	1.6 - 2.5
				HI COOL	2.6 - 4.2
				OFF	0
	16	Climate controlled seat switch	LO HEAT	0.8 - 1.5	
			MID HEAT	1.6 - 2.5	
			HI HEAT	2.6 - 4.2	
			OFF	0	
Passenger side	B518	6	Climate controlled seat switch	LO COOL	0.8 - 1.5
				MID COOL	1.6 - 2.5
				HI COOL	2.6 - 4.2
				OFF	0
	16	Climate controlled seat switch	LO HEAT	0.8 - 1.5	
			MID HEAT	1.6 - 2.5	
			HI HEAT	2.6 - 4.2	
			OFF	0	

Is the inspection result normal?

- YES >> Climate controlled seat switch circuit is OK.
 NO-1 >> HEAT or COOL mode is NG :GO TO 2.
 NO-2 >> HEAT and COOL modes are NG : GO TO 3.

2.CHECK CLIMATE CONTROLLED SEAT SWITCH CIRCUIT

- Turn ignition switch OFF.
- Disconnect climate controlled seat switch connector and climate controlled seat control unit connector.
- Check continuity between climate controlled seat switch harness connector and climate controlled seat control unit harness connector.

CLIMATE CONTROLLED SEAT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Climate controlled seat switch			Climate cotrolled seat control unit		Continuity
Connector		Terminal	Connector	Terminal	
Driver side	COOL	M177	2	B508	Existed
	HEAT		3		
Passenger side	COOL	M178	2	B518	
	HEAT		3		

4. Check continuity between climate controlled seat switch harness connector and ground.

Climate controlled seat switch			Ground	Continuity
Connector		Terminal		
Driver side	COOL	M177	2	Not existed
	HEAT		3	
Passenger side	COOL	M178	2	
	HEAT		3	

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

3. CHECK CLIMATE CONTROLLED SEAT SWITCH POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect climate controlled seat switch connector.
- Turn ignition switch ON.
- Check voltage between climate controlled seat switch harness connector and ground.

Climate controlled seat switch			Ground	Voltage (V) (Approx.)
Connector		Terminal		
Driver side	M177	1	Ground	Battery voltage
Passenger side	M178	1		

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. CHECK CLIMATE CONTROLLED SEAT SWITCH POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect climate controlled seat control unit connector.
- Check continuity between climate controlled seat switch harness connector and climate controlled seat control unit harness connector.

Climate controlled seat switch			Climate cotrolled seat control unit		Continuity
Connector		Terminal	Connector	Terminal	
Driver side	M177	1	B508	21	Existed
Passenger side	M178	1	B518	21	

4. Check continuity between climate controlled seat switch harness connector and ground.

Climate controlled seat switch			Ground	Continuity
Connector		Terminal		
Driver side	M177	1	Ground	Not existed
Passenger side	M178	1		

Is the inspection result normal?

CLIMATE CONTROLLED SEAT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

- YES >> Replace climate controlled seat control unit. Refer to [SE-85. "Disassembly and Assembly"](#).
 NO >> Repair or replace harness.

5.CHECK CLIMATE CONTROLLED SEAT SWITCH

Check climate controlled seat switch.
 Refer to [SE-16. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 6.
 NO >> Replace Climate controlled seat switch. Refer to [SE-106. "Removal and Installation"](#).

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-36. "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000005236614

1.CHECK CLIMATE CONTROLLED SEAT SWITCH

1. Turn ignition OFF.
2. Disconnect climate controlled seat switch connector.
3. Check climate controlled seat switch terminals.

Climate controlled seat switch		Terminal		Condition	Continuity	
Driver side	M177	2	1			COOL mode
				Released	Not existed	
		3		HEAT mode	Pressed	Existed
					Released	Not existed
Passenger side	M178	2	1	COOL mode	Pressed	Existed
					Released	Not existed
		3		HEAT mode	Pressed	Existed
					Released	Not existed

Is the inspection result normal?

- YES >> Climate controlled seat switch is OK.
 NO >> Replace climate controlled seat switch. Refer to [SE-106. "Removal and Installation"](#).

SEATBACK THERMAL ELECTRIC DEVICE

< DTC/CIRCUIT DIAGNOSIS >

SEATBACK THERMAL ELECTRIC DEVICE

Description

INFOID:000000005236615

Installed in the seatback backside and heats or cools the airflow from the climate controlled seat blower motor in accordance with the control from the climate controlled seat control unit.

Component Function Check

INFOID:000000005236616

1.CHECK FUNCTION

Checks whether or not the temperature of the seatback thermal electric device changes in accordance with the HEAT or COOL switch operation of the climate controlled seat control switch.

Is the inspection result normal?

- YES >> Seatback thermal device function is OK.
 NO >> Refer to [SE-17. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000005236617

1.CHECK SEATBACK THERMAL ELECTRIC DEVICE SIGNAL

- Turn ignition switch ON.
- Check voltage between seatback thermal electric device harness connector and ground.

(+)		Terminal	(-)	Condition	Voltage (V) (Approx.)
Seatback thermal electric device					
Connector					
Driver side	B504	35	Ground	Climate controlled seat switch	HEAT and COOL 0 - battery voltage*
		36		Other than above	0
Passenger side	B514			35	Climate controlled seat switch
		36		Other than above	0

*:It changes between battery voltage or 0V

NOTE:

Wait 1 minute or more after the activation start, and then start the measurement.

Is the inspection result normal?

- YES >> Replace seatback thermal electric device.
 NO >> GO TO 2.

2.CHECK SEATBACK THERMAL ELECTRIC DEVICE CIRCUIT

- Turn ignition switch OFF.
- Disconnect climate controlled seat control unit connector and seatback thermal electric device connector.
- Check continuity between climate controlled seat control unit harness connector and seatback thermal electric device harness connector.

Climate controlled seat control unit		Seatback thermal electric device		Continuity
Connector	Terminal	Connector	Terminal	
Driver side	B509	B504	35	Existed
			36	
Passenger side	B519	B514	35	
			36	

- Check continuity between climate controlled seat control unit harness connector and ground.

SEATBACK THERMAL ELECTRIC DEVICE

< DTC/CIRCUIT DIAGNOSIS >

Climate controlled seat control unit			Ground	Continuity
Connector		Terminal		Not existed
Driver side	B509	35		
		36		
Passenger side	B519	35		
		36		

Is the inspection result normal?

- YES >> Replace climate controlled seat control unit. Refer to [SE-85, "Disassembly and Assembly"](#).
NO >> Repair or replace harness.

SEATBACK THERMAL ELECTRIC DEVICE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

SEATBACK THERMAL ELECTRIC DEVICE SENSOR

Description

INFOID:000000005236618

Measures seatback temperature.

Diagnosis Procedure

INFOID:000000005236619

1. CHECK SEATBACK THERMAL ELECTRIC DEVICE SENSOR CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between climate controlled seat control unit harness connector and ground.

(+)		Terminal	(-)	Condition	Voltage (V) (Approx.)
Climate controlled seat control unit					
Connector					
Driver side	B507	37	Ground	Climate controlled seat operated	1 - 5
Passenger side	B517				

Is the inspection result normal?

YES >> Seatback thermal electric device sensor circuit is OK.

NO >> GO TO 2.

2. CHECK SEATBACK THERMAL ELECTRIC DEVICE SENSOR HARNESS

1. Turn ignition switch OFF.
2. Disconnect climate controlled seat control unit connector and seatback thermal electric device connector.
3. Check continuity between climate controlled seat control unit harness connector and seatback thermal electric device harness connector.

Climate controlled seat control unit		Seatback thermal electric device		Continuity
Connector	Terminal	Connector	Terminal	
Driver side	B507	B504	37	Existed
			38	
Passenger side	B517	B514	37	
			38	

4. Check continuity between front ventilation seat control unit harness connector and ground.

Climate controlled seat control unit		Terminal	Ground	Continuity
Connector				
Driver side	B507	37	Ground	Not existed
		38		
Passenger side	B517	37		
		38		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3. CHECK SEATBACK THERMAL ELECTRIC DEVICE SENSOR

Check resistance between seatback thermal electric device connector.

Seatback thermal electric device		Terminal		Resistance (K Ω) (Approx.)
Connector				
Driver side	B504	37	38	1
Passenger side	B514			

SEATBACK THERMAL ELECTRIC DEVICE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> Replace climate controlled seat control unit. Refer to [SE-84, "Removal and Installation"](#).
- NO >> Replace seatback thermal electric device.

SEAT CUSHION THERMAL ELECTRIC DEVICE

< DTC/CIRCUIT DIAGNOSIS >

SEAT CUSHION THERMAL ELECTRIC DEVICE

Description

INFOID:000000005236620

Installed in the seat cushion backside and heats or cools the airflow from the climate controlled seat blower motor in accordance with the control from the climate controlled seat control unit.

Component Function Check

INFOID:000000005236621

1.CHECK FUNCTION

Checks whether or not the temperature of the seatback thermal electric device changes in accordance with the HEAT or COOL switch operation of the climate controlled seat control switch.

Is the inspection result normal?

- YES >> Seatack thermal device function is OK.
 NO >> Refer to [SE-17. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000005236622

1.CHECK SEAT CUSHION THERMAL ELECTRIC DEVICE SIGNAL

- Turn ignition switch ON.
- Check voltage between seat cushion thermal electric device harness connector and ground.

(+)		Terminal	(-)	Condition	Voltage (V) (Approx.)
Seat cushion thermal electric device					
Connector					
Driver side	B505	31	Ground	HEAT and COOL	0 - battery voltage*
				Other than above	0
		32		HEAT and COOL	0 - battery voltage*
				Other than above	0
Passenger side	B515	31		HEAT and COOL	0 - battery voltage*
				Other than above	0
		32		HEAT and COOL	0 - battery voltage*
				Other than above	0

*:It changes between battery voltage or 0V

NOTE:

Wait 1 minute or more after the activation start, and then start the measurement.

Is the inspection result normal?

- YES >> Replace seat cushion thermal electric device.
 NO >> GO TO 2.

2.CHECK SEAT CUSHION THERMAL ELECTRIC DEVICE CIRCUIT

- Turn ignition switch OFF.
- Disconnect climate controlled seat control unit connector and seat cushion thermal electric device connector.
- Check continuity between climate controlled seat control unit harness connector and seat cushion thermal electric device harness connector.

Climate controlled seat control unit		Seat cushion thermal electric device		Continuity
Connector	Terminal	Connector	Terminal	
Driver side	B509	B505	31	Existed
			32	
Passenger side	B519	B515	31	
			32	

SEAT CUSHION THERMAL ELECTRIC DEVICE

< DTC/CIRCUIT DIAGNOSIS >

4. Check continuity between climate controlled seat control unit harness connector and ground.

Climate controlled seat control unit			Ground	Continuity
Connector		Terminal		
Driver side	B509	31		Not existed
		32		
Passenger side	B519	31		
		32		

Is the inspection result normal?

YES >> Replace climate controlled seat control unit. Refer to [SE-85, "Disassembly and Assembly"](#).

NO >> Repair or replace harness.

SEAT CUSHION THERMAL ELECTRIC DEVICE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

SEAT CUSHION THERMAL ELECTRIC DEVICE SENSOR

Description

INFOID:000000005236623

Measures seat cushion temperature.

Diagnosis Procedure

INFOID:000000005236624

1. CHECK SEAT CUSHION THERMAL ELECTRIC DEVICE SENSOR CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between climate controlled seat control unit harness connector and ground.

Climate controlled seat control unit		Terminal	(-)	Condition	Voltage (V) (Approx.)
Connector					
Driver side	B507	34	Ground	Climate controlled seat operated	1 - 5
Passenger side	B517				

Is the inspection result normal?

YES >> Seat cushion thermal electric device sensor circuit is OK.

NO >> GO TO 2.

2. CHECK SEAT CUSHION THERMAL ELECTRIC DEVICE SENSOR HARNESS

1. Turn ignition switch OFF.
2. Disconnect climate controlled seat control unit connector and seat cushion thermal electric device connector.
3. Check continuity between climate controlled seat control unit harness connector and seat cushion thermal electric device harness connector.

Climate controlled seat control unit		Seat cushion thermal electric device		Continuity
Connector	Terminal	Connector	Terminal	
Driver side	B507	B505	33	Existed
			34	
Passenger side	B517	B515	33	
			34	

4. Check continuity between font ventilation seat control unit harness connector and ground.

Climate controlled seat control unit		Terminal	Ground	Continuity
Connector				
Driver side	B507	33	Ground	Not existed
		34		
Passenger side	B517	33		
		34		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3. CHECK SEAT CUSHION THERMAL ELECTRIC DEVICE SENSOR

Check resistance between seat cushion thermal electric device connector.

SEAT CUSHION THERMAL ELECTRIC DEVICE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Seat cushion thermal electric device		Terminal		Resistance (K Ω) (Approx.)
Connector				
Driver side	B505	33	34	1
Passenger side	B515			

Is the inspection result normal?

- YES >> Replace climate controlled seat control unit. Refer to [SE-84, "Removal and Installation"](#).
NO >> Replace seat cushion thermal electric device.

CLIMATE CONTROLLED SEAT BLOWER MOTOR

< DTC/CIRCUIT DIAGNOSIS >

CLIMATE CONTROLLED SEAT BLOWER MOTOR

Description

INFOID:000000005236625

- Sends air flow to the seat cushion and seatback.

Component Function Check

INFOID:000000005236626

1.CHECK FUNCTION

When turning the climate controlled seat switch to the HEAT and COOL mode position, check that the climate controlled seat blower is operated in each specific mode.

Is the inspection result normal?

- YES >> Climate controlled seat blower motor is OK.
 NO >> Refer to [SE-25, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000005236627

1.CHECK CLIMATE CONTROLLED SEAT BLOWER MOTOR POWER SUPPLY

1. Turn ignition switch ON.
2. Check voltage between climate controlled seat blower motor harness connector and ground.

(+)		Terminal	(-)	Condition	Voltage (V) (Approx.)	
Climate controlled seat blower motor						
Connector						
Driver side	B506	39	Ground	Climate controlled seat switch	HEAT mode	Battery voltage
					COOL mode	
					Other than above	
Passenger side	B516			Climate controlled seat switch	HEAT mode	Battery voltage
					COOL mode	
					Other than above	

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> GO TO 2.

2.CHECK CLIMATE CONTROLLED BLOWER MOTOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect climate controlled blower motor connector and climate controlled seat control unit connector.
3. Check continuity between climate controlled seat blower motor harness connector and climate controlled seat control unit harness connector.

Climate controlled seat blower motor		Climate controlled seat control unit		Continuity
Connector	Terminal	Connector	Terminal	
Driver side	B506	B507	39	Existed
Passenger side	B516			

4. Check continuity between climate controlled seat blower motor harness connector and ground.

Climate controlled seat blower motor		Terminal	Ground	Continuity
Connector				
Driver side	B506	39		Not existed
Passenger side	B516			

Is the inspection result normal?

- YES >> Replace climate controlled seat control unit. Refer to [SE-85, "Disassembly and Assembly"](#).
 NO >> Repair or replace harness.

CLIMATE CONTROLLED SEAT BLOWER MOTOR

< DTC/CIRCUIT DIAGNOSIS >

3. CHECK CLIMATE CONTROLLED SEAT BLOWER MOTOR SPEED CONTROL SIGNAL

Check voltage between climate controlled seat blower motor harness connector and ground.

Climate controlled seat blower motor		Terminal	(-)	Condition	Voltage (V) (Approx.)	
(+)						
Connector						
Driver side	B506	40	Ground	Climate controlled seat	HEAT mode	8.5 - 9
					LO COOL	8
MID COOL	9					
Passenger side	B516				HI COOL	12
					Other than above	0

Is the inspection result normal?

- YES >> GO TO 5.
NO >> GO TO 4.

4. CHECK CLIMATE CONTROLLED SEAT BLOWER MOTOR SPEED CONTROL SIGNAL CIRCUIT

- Turn ignition switch OFF.
- Disconnect climate controlled seat blower motor connector and climate controlled seat control unit connector.
- Check continuity between climate controlled seat blower motor harness connector and climate controlled seat control unit harness connector.

Climate controlled seat blower motor		Climate controlled seat control unit		Continuity
Connector	Terminal	Connector	Terminal	
Driver side	B506	B507	40	Existed
Passenger side	B516			

- Check continuity between climate controlled seat blower motor harness connector and ground.

Climate controlled seat blower motor		Ground	Continuity
Connector	Terminal		
Driver side	B506	40	Not existed
Passenger side	B516		

Is the inspection result normal?

- YES >> Replace climate controlled seat control unit. Refer to [SE-85, "Disassembly and Assembly"](#).
NO >> Repair or replace harness.

5. CHECK CLIMATE CONTROLLED SEAT BLOWER MOTOR GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect climate controlled seat blower motor and climate controlled seat control unit connector.
- Check continuity between climate controlled seat blower motor harness connector and climate controlled seat control unit harness connector.

Climate controlled seat blower motor		Climate controlled seat control unit		Continuity
Connector	Terminal	Connector	Terminal	
Driver side	B506	B507	41	Existed
Passenger side	B516			

- Check continuity between climate controlled seat blower motor harness connector and ground.

CLIMATE CONTROLLED SEAT BLOWER MOTOR

< DTC/CIRCUIT DIAGNOSIS >

Climate controlled seat blower motor		Terminal	Ground	Continuity
Connector				Continuity
Driver side	B506	41		Not existed
Passenger side	B516			Not existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6.CHECK CLIMATE CONTROLLED SEAT BLOWER MOTOR GROUND

1. Connect climate controlled seat blower motor connector and climate controlled seat control unit connector.
2. Check continuity between climate controlled seat blower motor harness connector and ground.

Climate controlled seat blower motor		Terminal	Ground	Continuity
Connector				Continuity
Driver side	B506	41		Existed
Passenger side	B516			Existed

Is the inspection result normal?

YES >> Replace climate controlled seat control unit. Refer to [SE-85. "Disassembly and Assembly"](#).

NO >> Replace climate controlled seat blower motor. Refer to [SE-85. "Disassembly and Assembly"](#).

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE

CLIMATE CONTROLLED SEAT SWITCH INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

CLIMATE CONTROLLED SEAT SWITCH INDICATOR

Description

INFOID:000000005236628

- Turns ON the indicator that indicates the operating status of climate controlled seat HEAT or COOL mode.

Component Function Check

INFOID:000000005236629

1.CHECK FUNCTION

Check that the related indicator lamp illuminates when climate controlled seat switch is set to HEAT or COOL mode.

Is the inspection result normal?

- YES >> Climate controlled seat switch indicator function is OK.
 NO >> Refer to [SE-28. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000005236630

1.CHECK CLIMATE CONTROLLED SEAT SWITCH INDICATOR

Check climate controlled seat switch indicator.

Which side of indicator does not turn ON?

- Only HEAT or COOL mode>>GO TO 3.
 Both HEAT and COOL mode>>GO TO 2.

2.CHECK CLIMATECONTROLLED SEAT SWITCH GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect climate controlled seat switch connector.
3. Check continuity between climate controlled seat switch harness connector and ground.

Climate controlled seat switch		Ground	Continuity
Connector	Terminal		
Driver side	M177	6	Existed
Passenger side	M178		

Is the inspection result normal?

- YES >> GO TO 5.
 NO >> Repair or replace harness.

3.CHECK CLIMATE CONTROLLED SEAT CONTROL UNIT OUTPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between climate controlled seat control unit harness connector and ground.

Climate controlled seat control unit		Terminal	(-)	Condition	Voltage (V) (Approx.)
Connector					
Driver side	B507	7	Ground	HEAT mode	Battery voltage
		15		OFF	0
Passenger side	B517			7	COOL mode
		15			OFF
Passenger side	B517		7	HEAT mode	Battery voltage
		15		OFF	0
Passenger side	B517		7	COOL mode	Battery voltage
		15		OFF	0

Is the inspection result normal?

- YES >> GO TO 4.

CLIMATE CONTROLLED SEAT SWITCH INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

NO >> Replace climate controlled seat control unit. Refer to [SE-85. "Disassembly and Assembly"](#).

4.CHECK CLIMATE CONTROLLED SEAT SWITCH INDICATOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect climate controlled seat control unit connector and climate controlled seat switch.
3. Check continuity between climate controlled seat switch harness connector and climate controlled seat control unit harness connector.

Climate controlled seat switch		Climate controlled seat control unit		Continuity
Connector	Terminal	Connector	Terminal	
Driver side	M177	B507	4	15
			5	7
Passenger side	M178	B517	4	15
			5	7

4. Check continuity between climate controlled seat switch harness connector and ground.

Climate controlled seat switch		Ground	Continuity
Connector	Terminal		
Driver side	M177	4	Not existed
		5	
Passenger side	M178	4	
		5	

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

5.CHECK CLIMATE CONTROLLED SEAT SWITCH INDICATOR

Check climate controlled seat switch.

Refer to [SE-29. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace climate controlled seat switch. Refer to [SE-106. "Removal and Installation"](#)

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-36. "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000005236631

1.CHECK CLIMATE CONTROLLED SEAT SWITCH INDICATOR

1. Turn ignition OFF.
2. Disconnect climate controlled seat switch connector.
3. Check climate controlled seat switch terminals.

Climate controlled seat switch		Terminal		Continuity
		(+)*	(-)*	
Driver side	COOL indicator	4	6	Existed
	HEAT indicator	5		
Passenger side	COOL indicator	4	6	
	HEAT indicator	5		

*For a digital tester.

NOTE:

CLIMATE CONTROLLED SEAT SWITCH INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

When checking by an analog tester, the polarity (+) and (-) becomes inverse.

Is the inspection result normal?

YES >> Climate controlled seat switch indicator is OK.

NO >> Replace climate controlled seat switch. Refer to [SE-106, "Removal and Installation"](#).

CLIMATE CONTROLLED SEAT BLOWER FILTER

< DTC/CIRCUIT DIAGNOSIS >

CLIMATE CONTROLLED SEAT BLOWER FILTER

Diagnosis Procedure

INFOID:000000005236632

1. CHECK CLIMATE CONTROLLED SEAT BLOWER FILTER

Remove climate controlled seat blower motor filter and check that there is no clogging by dirt or foreign matters.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace climate controlled seat blower filter. Refer to [SE-107. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE

POWER SEAT


< DTC/CIRCUIT DIAGNOSIS >

POWER SEAT

Wiring Diagram - POWER SEAT FOR DRIVER SIDE (WITHOUT AUTOMATIC DRIVE POSITIONER) -

INFOID:000000005568455

POWER SEAT FOR DRIVER SIDE (WITHOUT AUTOMATIC DRIVE POSITIONER)

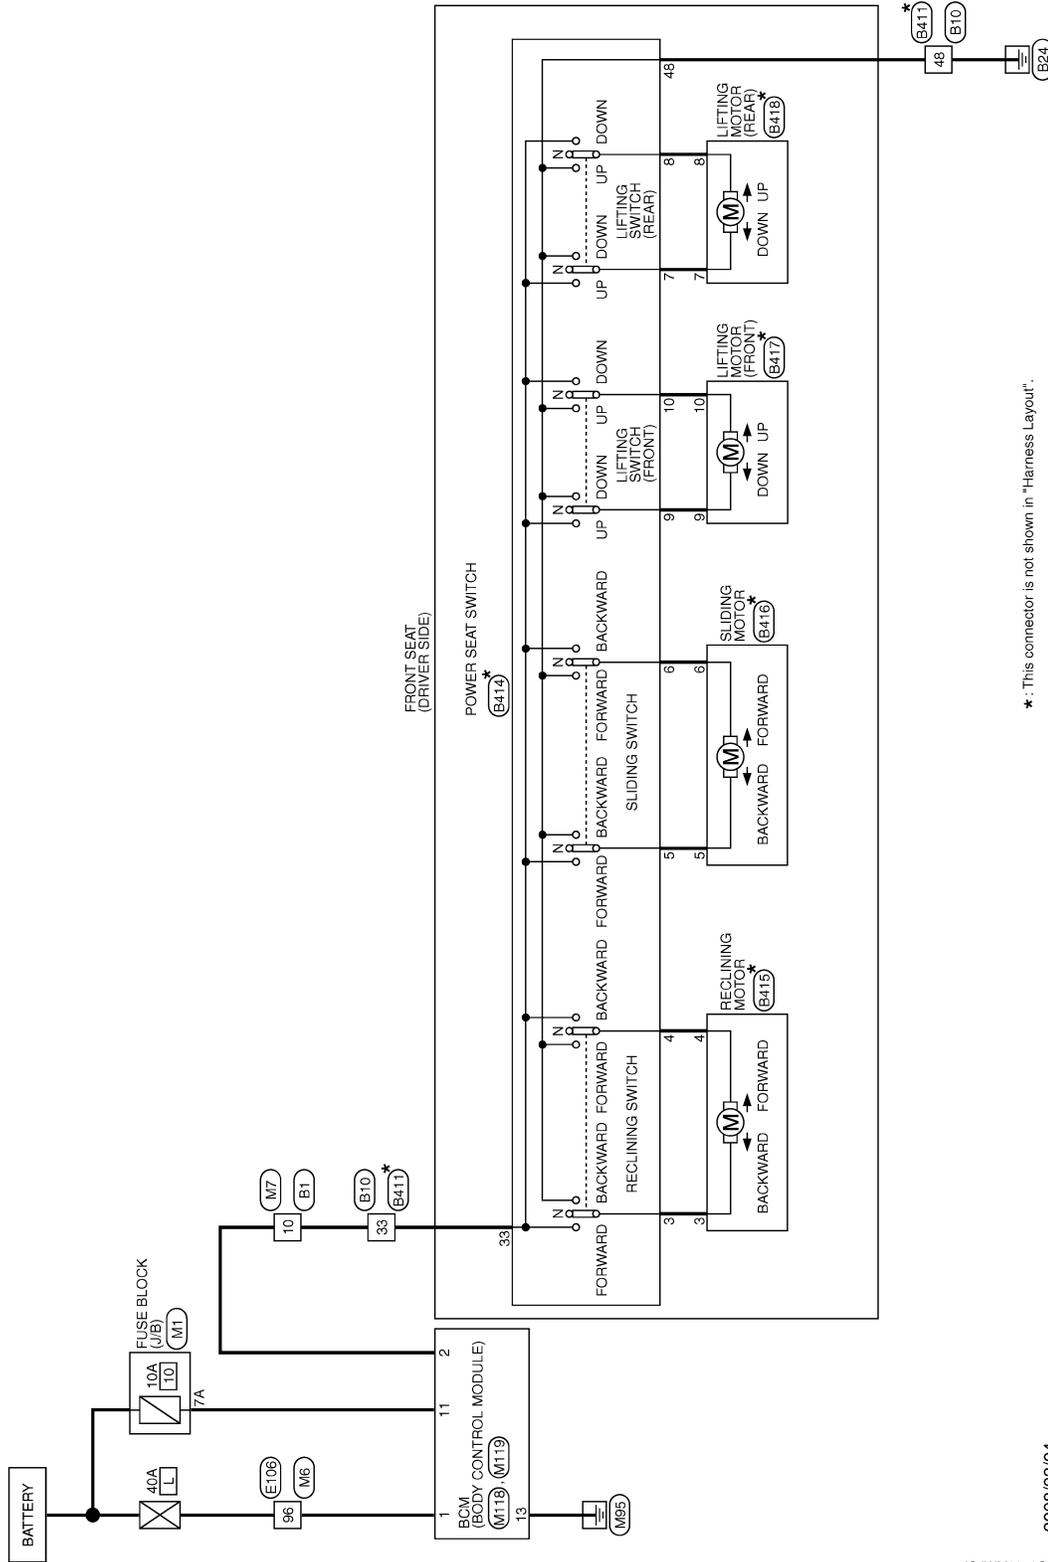

* : This connector is not shown in "Harness Layout".

2008/03/04

JCJWM0372GB

POWER SEAT

< DTC/CIRCUIT DIAGNOSIS >

POWER SEAT FOR DRIVER SIDE (WITHOUT AUTOMATIC DRIVE POSITIONER)

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	THBDFW-CS16-TM4



53	SHIELD	-
54	BR	-
55	Y	-
56	SHIELD	-
57	P	-
58	L	-
59	SHIELD	-
60	L	-
61	P	-
62	GR	-
63	G	-
64	O	-
65	W	-
66	V	-
67	LG	-
68	Y	-
69	G	-
70	GR	-
71	G	-
72	B	-
73	W	-
74	V	-
75	O	-
76	LG	-
77	L	-
78	GR	-
79	W	-
80	L	-
81	P	-
82	L	-
83	P	-
84	SB	-
85	R	-
86	Y	-
87	B	-
88	G	-
89	BR	-
90	W	-
91	R	-
92	O	-
93	BR	-
94	V	-
95	Y	-
96	O	-
97	W	-
98	GR	-
99	W	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	L	-
3	W	-
5	G	-
6	G	-
7	P	-
8	O	-
9	W	-
10	SB	-
11	SB	-
12	B	-
13	G	-
14	R	-
15	W	-
16	SHIELD	-
17	L	-
18	P	-
19	G	-
20	Y	-
21	W	-
23	V	-
24	P	-
25	BR	-
26	GR	-
27	O	-
28	W	-
29	SHIELD	-
38	B	-
39	B	-
40	LG	-
41	G	-
42	GR	-
43	SB	-
44	V	-
45	GR	-
50	B	-
51	V	-
52	SB	-


Connector No.	B10
Connector Name	WIRE TO WIRE
Connector Type	MGAFW-LC



Terminal No.	Color of Wire	Signal Name [Specification]
33	SB	-
48	B	-




Connector No.	B411
Connector Name	WIRE TO WIRE
Connector Type	MGAMW-LC

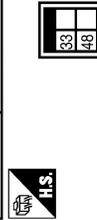

Terminal No.	Color of Wire	Signal Name [Specification]
33	R	-
48	B	-


Connector No.	B414
Connector Name	POWER SEAT SWITCH
Connector Type	NS1DFW-CS

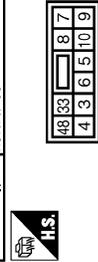

Terminal No.	Color of Wire	Signal Name [Specification]
3	G.Y	-
4	P	-

5	W	-
6	V	-
7	L.Y	-
8	L	-
9	L/R	-
10	G/W	-
33	R	-
48	B	-

Connector No.	B415
Connector Name	RECLINING MOTOR
Connector Type	NS02FW-CS

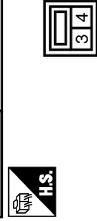

Terminal No.	Color of Wire	Signal Name [Specification]
3	G.Y	-
4	P	-

Connector No.	B416
Connector Name	SLIDING MOTOR
Connector Type	IS098-0238



Terminal No.	Color of Wire	Signal Name [Specification]
5	W	-
6	V	-

JCJWA1157GB

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

POWER SEAT

< DTC/CIRCUIT DIAGNOSIS >

POWER SEAT FOR DRIVER SIDE (WITHOUT AUTOMATIC DRIVE POSITIONER)

Connector No.	B417
Connector Name	LIFTING MOTOR (FRONT)
Connector Type	NS02FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
9	L/R	-
10	G/W	-



Connector No.	B418
Connector Name	LIFTING MOTOR (REAR)
Connector Type	NS02FW-CS

Terminal No.	Color of Wire	Signal Name [Specification]
7	L/Y	-
8	L	-

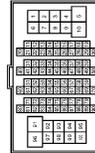

Connector No.	E105
Connector Name	WIPE TO WIRE
Connector Type	TH00FW-CS16-TM4

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	O	-

3	SB	-	-	-	-
4	LG	-	-	-	-
5	Y	-	-	-	-
6	W	-	-	-	-
7	G	-	-	-	-
8	V	-	-	-	-
9	R	-	-	-	-
10	BR	-	-	-	-
11	B	-	-	-	-
12	G	-	-	-	-
13	R	-	-	-	-
14	W	-	-	-	-
15	SHIELD	-	-	-	-
16	SB	-	-	-	-
17	L	-	-	-	-
18	P	-	-	-	-
19	G	-	-	-	-
20	W	- [With ICC]	-	-	-
21	Y	- [Without ICC]	-	-	-
22	BR	-	-	-	-
23	R	- [With ICC]	-	-	-
24	V	- [Without ICC]	-	-	-
25	G	-	-	-	-
26	L	- [With ICC]	-	-	-
27	SHIELD	-	-	-	-
28	G	-	-	-	-
29	LG	-	-	-	-
30	O	-	-	-	-
31	BR	-	-	-	-
32	W	-	-	-	-
33	Y	-	-	-	-
34	O	-	-	-	-
35	SB	-	-	-	-
36	P	-	-	-	-
37	Y	-	-	-	-
38	GR	-	-	-	-
39	LG	-	-	-	-
41	LG	-	-	-	-
42	V	-	-	-	-
43	R	-	-	-	-
44	G	-	-	-	-
45	GR	-	-	-	-
46	W	-	-	-	-
47	L	-	-	-	-
48	P	-	-	-	-
49	SB	-	-	-	-
50	BR	-	-	-	-
51	B	-	-	-	-
52	Y	-	-	-	-
53	O	-	-	-	-
54	R	-	-	-	-
55	SB	-	-	-	-
56	P	-	-	-	-
59	P	-	-	-	-
60	SB	-	-	-	-
61	V	-	-	-	-
62	P	-	-	-	-
63	LG	-	-	-	-
64	L	-	-	-	-
65	O	-	-	-	-
66	L	-	-	-	-
69	L	-	-	-	-
70	SHIELD	-	-	-	-
71	G	-	-	-	-
72	G	-	-	-	-
73	R	-	-	-	-
74	BR	-	-	-	-
76	L	-	-	-	-
77	W	-	-	-	-
78	Y	-	-	-	-
80	SB	-	-	-	-
81	L	-	-	-	-
82	W	-	-	-	-
83	LG	-	-	-	-
84	GR	-	-	-	-
85	G	-	-	-	-
86	P	-	-	-	-
87	W	-	-	-	-
88	O	-	-	-	-
89	LG	-	-	-	-
90	BR	-	-	-	-
91	GR	-	-	-	-
92	BR	-	-	-	-
93	SB	-	-	-	-
94	W	-	-	-	-
95	Y	-	-	-	-
96	W	-	-	-	-
100	Y	-	-	-	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS00FW-M2




Terminal No.	Color of Wire	Signal Name [Specification]
1A	O	-
2A	G	-
3A	L	-
4A	P	-
5A	V	-
6A	Y	-
7A	R	-
8A	L	-

POWER SEAT

< DTC/CIRCUIT DIAGNOSIS >

POWER SEAT FOR DRIVER SIDE (WITHOUT AUTOMATIC DRIVE POSITIONER)

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH8DMW-CS16-TM4

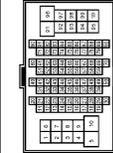

94	L	-
95	G	-
96	W	-
100	Y	-

35	P	-
36	L	-
37	G	-
38	R	-
39	G	-
41	L	-
42	W	-
43	R	-
44	LG	-
45	GR	-
46	W	-
47	L	-
48	P	-
49	O	-
50	LG	-
51	SB	-
52	Y	-
53	O	-
54	BR	-
55	SB	-
56	P	-
59	SB	-
60	SB	-
61	V	-
62	P	-
63	R	-
64	L	-
65	O	-
66	L	-
69	V	-
70	SHIELD	-
71	O	-
72	GR	-
73	W	-
74	SB	-
76	V	-
77	V	-
78	Y	-
80	O	-
81	L	-
82	W	-
83	Y	-
84	L	-
85	P	-
86	BR	-
87	P	-
88	V	-
89	G	-
90	P	-
91	R	-
92	R	-
93	GR	-

Terminal No.	Color of Wire	Signal Name (Specification)
1	G	-
2	O	-
3	SB	-
4	LG	-
5	GR	-
6	W	-
7	G	-
8	W	-
9	P	-
10	BR	-
11	B	-
12	G	-
13	R	-
14	W	-
15	SHIELD	-
16	BR	-
17	L	-
18	P	-
19	G	-
20	W	- [With ICC] - [Without ICC]
21	BR	- [With ICC] - [Without ICC]
22	R	- [With ICC] - [Without ICC]
23	G	- [With ICC] - [Without ICC]
24	P	- [With ICC] - [Without ICC]
25	Y	- [With ICC] - [Without ICC]
26	SHIELD	-
28	GR	-
29	V	-
30	O	-
31	BR	-
32	W	-
33	Y	-
34	L	-

JCJWA1159GB


A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

POWER SEAT

< DTC/CIRCUIT DIAGNOSIS >


POWER SEAT FOR DRIVER SIDE (WITHOUT AUTOMATIC DRIVE POSITIONER)

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

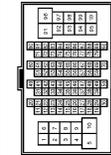

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	
2	B	
3	W	
5	G	
6	P	
7	V	
8	O	
9	W	
10	W	
11	O	
12	B	
13	G	
14	R	
15	W	
16	SHIELD	
17	L	
18	P	
19	G	
20	R	
21	LG	
23	V	
24	P	
25	BR	
26	GR	
27	O	
28	W	
29	SHIELD	
38	B	
39	B	
40	LG	
41	G	
42	Y	
43	SB	
44	W	
45	B	
50	B	
51	V	
52	LG	

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MS8FB-1C

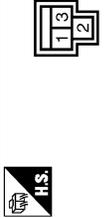

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	Y	POWER WINDOW POWER SUPPLY (BAT)
3	O	POWER WINDOW POWER SUPPLY (RAP)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
4	P	INT ROOM LAMP PWR SUPPLY (BAT SAVE)
5	V	PASSENGER DOOR UNLOCK OUTPUT
7	Y	STEP LAMP OUTPUT
8	V	ALL DOOR, FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR, FUEL LID UNLOCK OUTPUT
10	BR	REAR DOOR UNLOCK OUTPUT
11	R	BAT (FUSE)
13	B	GND
15	Y	ACC IND
17	W	TURN SIGNAL RH (FRONT)
18	O	TURN SIGNAL LH (FRONT)
19	SB	ROOM LAMP TIMER

53	SHIELD	-
54	BR	-
55	Y	-
56	SHIELD	-
57	P	-
58	L	-
59	SHIELD	-
60	L	-
61	BR	-
62	R	-
63	Y	-
64	L	-
65	W	-
66	V	-
67	LG	-
68	Y	-
69	G	-
70	V	-
71	W	-
72	B	-
73	W	-
74	LG	-
75	P	-
76	LG	-
77	SB	-
78	GR	-
79	R	-
80	P	-
81	P	-
82	L	-
83	P	-
84	SB	-
85	W	-
86	Y	-
87	B	-
88	G	-
89	O	-
90	W	-
91	R	-
92	O	-
93	BR	-
94	V	-
95	Y	-
96	O	-
97	W	-
98	R	-
99	G	-
99	O	-

- [With VK engine]
- [With VG engine]

JCJWA1160GB


POWER SEAT

< DTC/CIRCUIT DIAGNOSIS >

Wiring Diagram - POWER SEAT FOR PASSENGER SIDE -

INFOID:000000005568456

POWER SEAT FOR PASSENGER SIDE

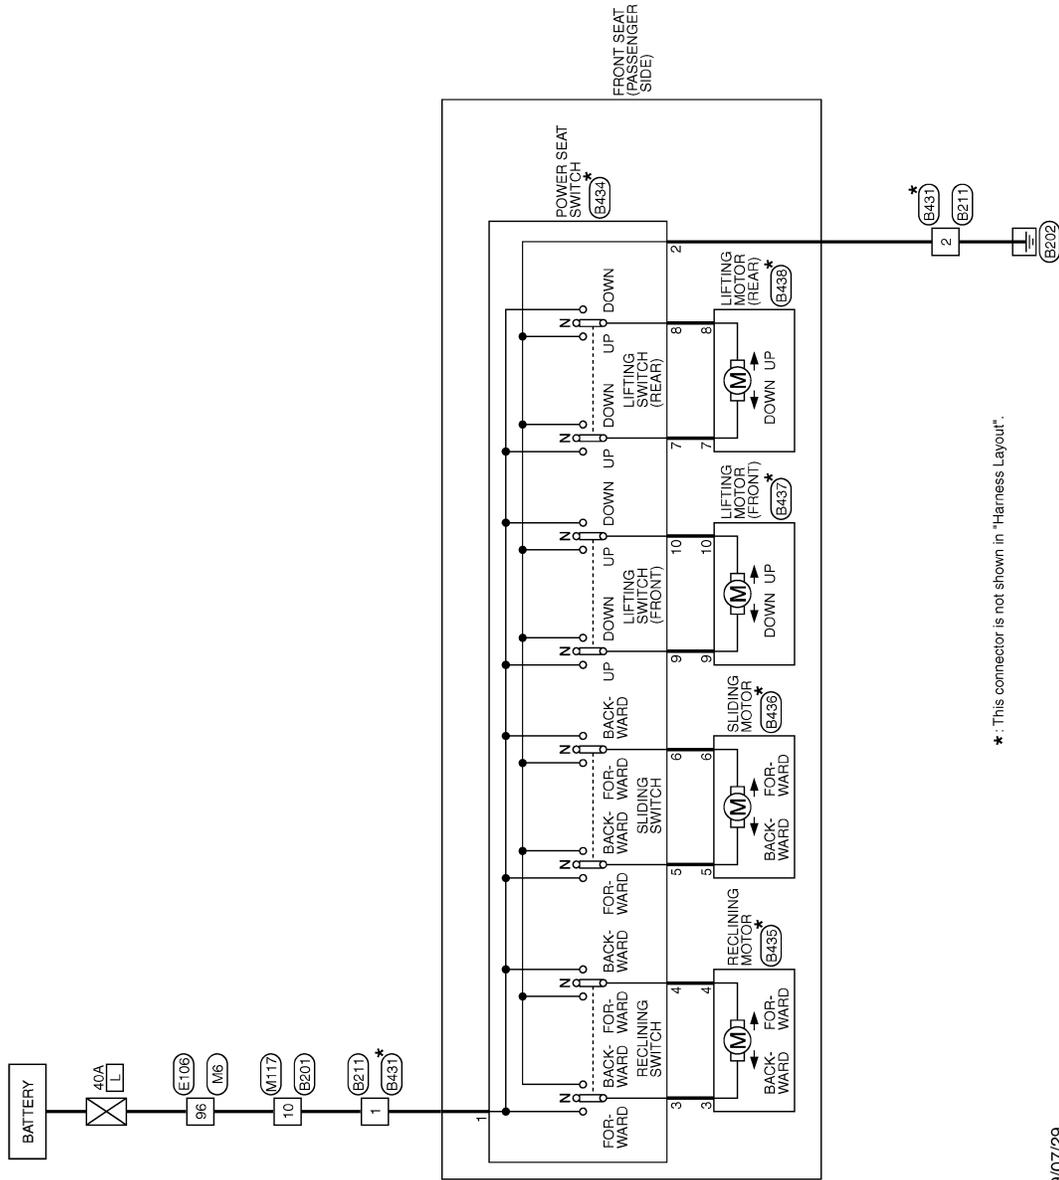

*: This connector is not shown in "Harness Layout".

2009/07/29

JCJWA1161GB

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

POWER SEAT

< DTC/CIRCUIT DIAGNOSIS >

POWER SEAT FOR PASSENGER SIDE

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	THBDFW-CS16-TM4



41	Y	- [Without ICC] - [With ICC]
42	W	- [Without ICC] - [With ICC]
43	BR	- [Without ICC] - [With ICC]
44	R	- [Without ICC] - [With ICC]
45	G	- [Without ICC] - [With ICC]
46	O	- [Without ICC] - [With ICC]
47	L	- [Without ICC] - [With ICC]
48	P	- [Without ICC] - [With ICC]
49	G	- [Without ICC] - [With ICC]
50	SHIELD	- [Without ICC] - [With ICC]
51	W	- [Without ICC] - [With ICC]
52	R	- [Without ICC] - [With ICC]
53	G	- [Without ICC] - [With ICC]
54	L	- [Without ICC] - [With ICC]
55	SB	- [Without ICC] - [With ICC]
60	GR	- [Without ICC] - [With ICC]
61	LG	- [Without ICC] - [With ICC]
62	SB	- [Without ICC] - [With ICC]
63	P	- [Without ICC] - [With ICC]
64	BR	- [Without ICC] - [With ICC]
65	O	- [Without ICC] - [With ICC]
66	Y	- [Without ICC] - [With ICC]
67	W	- [Without ICC] - [With ICC]
68	SHIELD	- [Without ICC] - [With ICC]
69	G	- [Without ICC] - [With ICC]
71	SB	- [Without ICC] - [With ICC]
72	V	- [Without ICC] - [With ICC]
73	LG	- [Without ICC] - [With ICC]
74	W	- [Without ICC] - [With ICC]
75	BR	- [Without ICC] - [With ICC]
76	V	- [Without ICC] - [With ICC]
77	LG	- [Without ICC] - [With ICC]
80	O	- [Without ICC] - [With ICC]
81	G	- [Without ICC] - [With ICC]
82	P	- [Without ICC] - [With ICC]
83	Y	- [Without ICC] - [With ICC]
84	R	- [Without ICC] - [With ICC]
85	SB	- [Without ICC] - [With ICC]
86	GR	- [Without ICC] - [With ICC]
87	L	- [Without ICC] - [With ICC]
91	V	- [Without ICC] - [With ICC]
92	W	- [Without ICC] - [With ICC]
93	R	- [Without ICC] - [With ICC]
94	LG	- [Without ICC] - [With ICC]
95	GR	- [Without ICC] - [With ICC]
96	W	- [Without ICC] - [With ICC]

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	R	-
3	BR	-
4	SB	-
6	O	-
7	GR	-
8	W	-
10	G	-
11	BR	-
12	Y	-
13	SHIELD	-
14	G	-
15	R	-
16	SHIELD	-
17	LG	-
18	GR	-
19	V	-
20	SB	-
21	LG	-
22	B	- [With entertainment system] - [Without entertainment system]
23	W	- [With entertainment system] - [Without entertainment system]
23	LG	- [With entertainment system] - [Without entertainment system]
24	R	- [With entertainment system] - [Without entertainment system]
24	W	- [With entertainment system] - [Without entertainment system]
25	SHIELD	- [With entertainment system] - [Without entertainment system]
25	V	- [With entertainment system] - [Without entertainment system]
26	SB	-
27	V	-
28	SHIELD	-
29	O	-
30	P	-
31	W	-
32	GR	-
33	SB	-
40	LG	- [With ICC] - [Without ICC]
40	V	- [With ICC] - [Without ICC]
41	SB	-

97	G	-
98	O	-
99	L	-
100	Y	-

Connector No.	B211
Connector Name	WIRE TO WIRE
Connector Type	MM4FW-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	B	-

Connector No.	B431
Connector Name	WIRE TO WIRE
Connector Type	MM4MF-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	B	-

Connector No.	B434
Connector Name	POWER SEAT SWITCH
Connector Type	NSDFW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	B	-
3	G/Y	-
4	P	-
5	W	-
6	V	-
7	L/Y	-
8	L	-
9	L/R	-
10	G/W	-

Connector No.	B435
Connector Name	RECLINING MOTOR
Connector Type	NSDFW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
3	G/Y	-
4	P	-

POWER SEAT

< DTC/CIRCUIT DIAGNOSIS >

95	Y	-
96	W	-
100	Y	-

36	P	-
37	Y	-
38	GR	-
39	LG	-
41	LG	-
42	V	-
43	R	-
44	G	-
45	GR	-
46	W	-
47	L	-
48	P	-
49	SB	-
50	BR	-
51	B	-
52	Y	-
53	O	-
54	R	-
55	SB	-
56	P	-
59	P	-
60	SB	-
61	V	-
62	P	-
63	LG	-
64	L	-
65	O	-
66	L	-
69	L	-
70	SHIELD	-
71	G	-
72	G	-
73	R	-
74	BR	-
76	L	-
77	W	-
78	Y	-
80	SB	-
81	L	-
82	W	-
83	LG	-
84	GR	-
85	G	-
86	P	-
87	W	-
88	O	-
89	LG	-
90	BR	-
91	GR	-
92	BR	-
93	SB	-
94	W	-

POWER SEAT FOR PASSENGER SIDE

Connector No.	B436
Connector Name	SLIDING MOTOR
Connector Type	8008-0239



Terminal No.	Color of Wire	Signal Name [Specification]
5	W	-
6	V	-

Connector No.	B437
Connector Name	LIFTING MOTOR (FRONT)
Connector Type	NS02FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
9	L/R	-
10	G/W	-

Connector No.	B438
Connector Name	LIFTING MOTOR (REAR)
Connector Type	NS02FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
7	L/Y	-
8	L	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	THE02FW-CS16-TM4

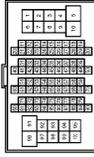

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	O	-
3	SB	-
4	LG	-
5	Y	-
6	W	-
7	G	-
8	V	-
9	R	-
10	BR	-
11	B	-
12	G	-
13	R	-
14	W	-
15	SHIELD	-
16	SB	-
17	L	-
18	P	-
19	G	-
20	W	- [With ICC]
20	Y	- [Without ICC]
21	BR	-
22	R	- [With ICC]
22	V	- [Without ICC]
23	G	-
24	L	- [With ICC]
24	P	- [Without ICC]
25	Y	- [With ICC]
25	L	- [Without ICC]
26	SHIELD	-
28	G	-
29	LG	-
30	O	-
31	BR	-
32	W	-
33	Y	-
34	O	-
35	SB	-

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

POWER SEAT

< DTC/CIRCUIT DIAGNOSIS >

POWER SEAT FOR PASSENGER SIDE

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



94	L	-
95	G	-
96	W	-
100	Y	-

35	L	-
36	P	-
37	G	-
38	R	-
39	G	-
41	L	-
42	W	-
43	R	-
44	LG	-
45	GR	-
46	W	-
47	L	-
48	P	-
49	O	-
50	LG	-
51	SB	-
52	Y	-
53	O	-
54	BR	-
55	SB	-
56	P	-
59	SB	-
60	SB	-
61	V	-
62	P	-
63	R	-
64	L	-
65	O	-
66	L	-
68	V	-
70	SHIELD	-
71	O	-
72	GR	-
73	W	-
74	SB	-
76	V	-
77	V	-
78	Y	-
80	O	-
81	L	-
82	W	-
83	Y	-
84	L	-
85	P	-
86	BR	-
87	P	-
88	V	-
89	G	-
90	P	-
91	R	-
92	R	-
93	GR	-

Terminal No.	Color of Wire	Signal Name (Specification)
1	G	-
2	O	-
3	SB	-
4	LG	-
5	GR	-
6	W	-
7	G	-
8	W	-
9	P	-
10	BR	-
11	B	-
12	G	-
13	R	-
14	W	-
15	SHIELD	-
16	BR	-
17	L	-
18	P	-
19	G	-
20	W	- [With ICC]
20	GR	- [Without ICC]
21	BR	- [With ICC]
21	R	- [Without ICC]
22	R	- [With ICC]
22	L	- [Without ICC]
23	G	-
24	L	- [With ICC]
24	P	- [Without ICC]
25	Y	- [With ICC]
25	W	- [Without ICC]
26	SHIELD	-
28	GR	-
29	V	-
30	O	-
31	BR	-
32	W	-
33	Y	-
34	L	-


JCJWA1164GB

POWER SEAT

< DTC/CIRCUIT DIAGNOSIS >

POWER SEAT FOR PASSENGER SIDE

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH8DMW-C516-TM44

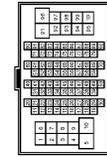

Terminal No.	Color of Wire	Signal Name (Specification)
1	GR	-
2	BR	-
3	V	-
4	SB	-
6	Y	-
7	B	-
8	W	-
10	W	-
11	BR	-
12	GR	-
13	SHIELD	-
14	Y	-
15	B	-
16	SHIELD	-
17	Y	-
18	Y	-
19	LG	-
20	SB	-
21	LG	-
22	B	- [With entertainment system]
22	GR	- [Without entertainment system]
23	W	- [With entertainment system]
23	W	- [Without entertainment system]
24	R	- [With entertainment system]
24	R	- [Without entertainment system]
25	SHIELD	- [With entertainment system]
25	R	- [Without entertainment system]
26	SB	-
27	V	-
28	SHIELD	-
29	O	-
30	P	-
31	W	-
32	W	-
33	SB	-
34	Y	-
40	Y	-
41	SB	- [With ICC]
41	SB	- [Without ICC]
41	Y	-

95	V	-
96	G	-
97	G	-
98	L	-
99	LG	-
100	Y	-

42	V	- [With ICC]
42	W	- [Without ICC]
43	P	- [With ICC]
43	P	- [Without ICC]
44	R	-
45	L	- [With ICC]
45	G	- [Without ICC]
46	O	- [With ICC]
46	SHIELD	- [Without ICC]
47	L	- [With ICC]
47	B	- [Without ICC]
48	P	- [With ICC]
48	R	- [Without ICC]
49	G	- [With ICC]
49	W	- [Without ICC]
50	SHIELD	-
51	O	-
52	GR	-
53	G	-
54	L	-
55	P	-
60	LG	-
61	R	-
62	SB	-
63	V	-
64	Y	-
65	BR	-
66	O	-
67	W	-
68	SHIELD	-
69	G	-
71	SB	-
72	V	-
73	V	-
74	LG	-
75	R	- [With VK engine]
75	BR	- [With VQ engine]
76	V	-
77	LG	-
80	R	-
81	L	-
82	Y	-
83	O	-
84	W	-
85	SB	-
86	B	-
87	P	-
91	L	-
92	L	-
93	G	-
94	W	- [With VK engine]
94	W	- [With VQ engine]
94	O	-

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

JCJWA1165GB

SIDE SUPPORT


< DTC/CIRCUIT DIAGNOSIS >

SIDE SUPPORT

Wiring Diagram - SIDE SUPPORT -

INFOID:000000005568457

SIDE SUPPORT

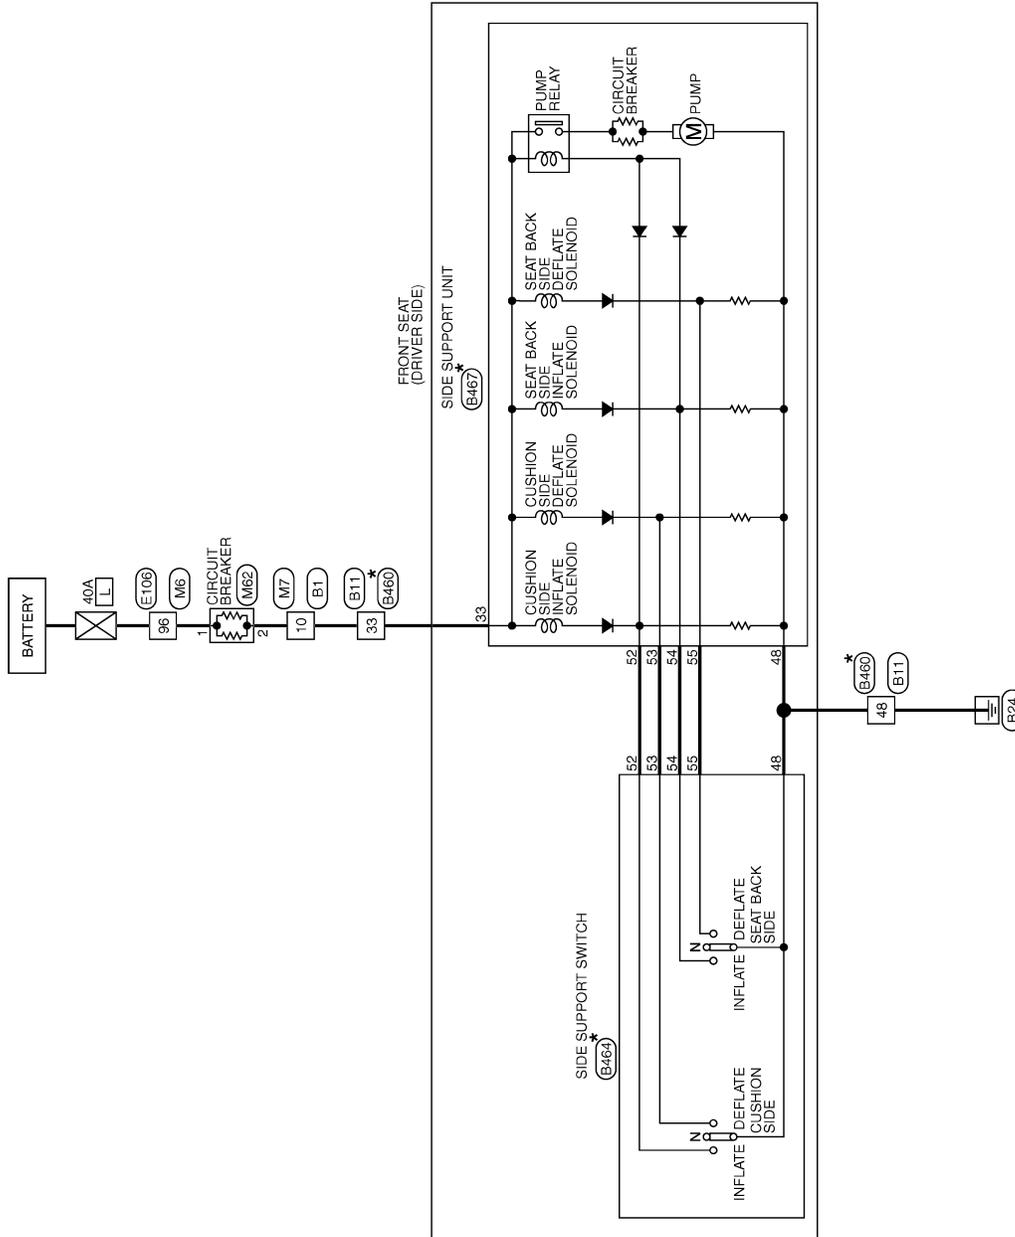

* : This connector is not shown in "Harness Layout".

2008/03/04

JCJWM0378GB

SIDE SUPPORT

< DTC/CIRCUIT DIAGNOSIS >

SIDE SUPPORT

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	THBDFW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	L	-
3	W	-
5	G	-
6	G	-
7	P	-
8	O	-
9	W	-
10	SB	-
11	SB	-
12	B	-
13	G	-
14	R	-
15	W	-
16	SHIELD	-
17	L	-
18	P	-
19	G	-
20	Y	-
21	W	-
23	V	-
24	P	-
25	BR	-
26	GR	-
27	O	-
28	W	-
29	SHIELD	-
38	B	-
39	B	-
40	LG	-
41	G	-
42	GR	-
43	SB	-
44	V	-
45	GR	-
50	B	-
51	V	-
52	SB	-

53	SHIELD	-
54	BR	-
55	Y	-
56	SHIELD	-
57	P	-
58	L	-
59	SHIELD	-
60	L	-
61	P	-
62	GR	-
63	G	-
64	O	-
65	W	-
66	V	-
67	LG	-
68	Y	-
69	G	-
70	GR	-
71	G	-
72	B	-
73	W	-
74	V	-
75	O	-
76	LG	-
77	L	-
78	GR	-
79	W	-
80	L	-
81	P	-
82	P	-
83	P	-
84	SB	-
85	R	-
86	Y	-
87	B	-
88	G	-
89	BR	-
90	W	-
91	R	-
92	O	-
93	BR	-
94	V	-
95	Y	-
96	O	-
97	W	-
98	GR	-
99	W	-

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Type	NS1.6MF-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
3	L	-
17	LG	-
19	P	-
21	Y	-
32	B	-
33	SB	-
40	R	-
48	B	-

Connector No.	B460
Connector Name	WIRE TO WIRE
Connector Type	NS1.6MF-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	L/W	-
3	R/Y	-
17	Y/R	-
19	V	-
21	L/Y	-
32	B/W	-
33	R	-
40	R/W	-
48	B	-

Connector No.	B464
Connector Name	SIDE SUPPORT SWITCH
Connector Type	NS06FY-CS

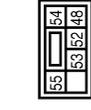

Terminal No.	Color of Wire	Signal Name [Specification]
48	B	-
52	B	-
53	R	-
54	W	-
55	L	-

Connector No.	B467
Connector Name	SIDE SUPPORT UNIT
Connector Type	NS06FY-CS

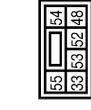

Terminal No.	Color of Wire	Signal Name [Specification]
33	R	-
48	B	-
52	B	-
53	R	-
54	W	-
55	L	-

JCJWA1166GB

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

SIDE SUPPORT


< DTC/CIRCUIT DIAGNOSIS >

95	Y	-
96	W	-
100	Y	-

36	P	-
37	Y	-
38	GR	-
39	LG	-
41	LG	-
42	V	-
43	R	-
44	G	-
45	GR	-
46	W	-
47	L	-
48	P	-
49	SB	-
50	BR	-
51	B	-
52	Y	-
53	O	-
54	R	-
55	SB	-
56	P	-
59	P	-
60	SB	-
61	V	-
62	P	-
63	LG	-
64	L	-
65	O	-
66	L	-
68	L	-
69	L	-
70	SHIELD	-
71	G	-
72	G	-
73	R	-
74	BR	-
76	L	-
77	W	-
78	Y	-
80	SB	-
81	L	-
82	W	-
83	LG	-
84	GR	-
85	G	-
86	P	-
87	W	-
88	O	-
89	LG	-
90	BR	-
91	GR	-
92	BR	-
93	SB	-
94	W	-

SIDE SUPPORT

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	THBDFW-CS16-1M4

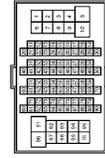

Terminal No.	Color of Wire	Signal Name (Specification)
1	G	-
2	O	-
3	SB	-
4	LG	-
5	Y	-
6	W	-
7	G	-
8	V	-
9	R	-
10	BR	-
11	B	-
12	G	-
13	R	-
14	W	-
15	SHIELD	-
16	SB	-
17	L	-
18	P	-
19	G	-
20	W	- [With ICC] - [Without ICC]
21	BR	- [With ICC] - [Without ICC]
22	R	- [With ICC] - [Without ICC]
23	G	- [With ICC] - [Without ICC]
24	L	- [With ICC] - [Without ICC]
25	Y	- [With ICC] - [Without ICC]
26	SHIELD	- [Without ICC]
28	G	-
29	LG	-
30	O	-
31	BR	-
32	W	-
33	Y	-
34	O	-
35	SB	-

JCJWA1167GB

SIDE SUPPORT

< DTC/CIRCUIT DIAGNOSIS >


A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

94	L	-
95	G	-
96	W	-
100	Y	-

35	L	-
36	P	-
37	G	-
38	R	-
39	G	-
41	L	-
42	W	-
43	R	-
44	LG	-
45	GR	-
46	W	-
47	L	-
48	P	-
49	O	-
50	LG	-
51	SB	-
52	Y	-
53	O	-
54	BR	-
55	SB	-
56	P	-
59	SB	-
60	SB	-
61	V	-
62	P	-
63	R	-
64	L	-
65	O	-
66	L	-
69	V	-
70	SHIELD	-
71	O	-
72	GR	-
73	W	-
74	SB	-
76	V	-
77	V	-
78	Y	-
80	O	-
81	L	-
82	W	-
83	Y	-
84	L	-
85	P	-
86	BR	-
87	P	-
88	V	-
89	G	-
90	P	-
91	R	-
92	R	-
93	GR	-

SIDE SUPPORT

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH8DMW-CST16-TM4

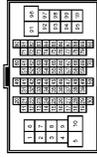

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	O	-
3	SB	-
4	LG	-
5	GR	-
6	W	-
7	G	-
8	W	-
9	P	-
10	BR	-
11	B	-
12	G	-
13	R	-
14	W	-
15	SHIELD	-
16	BR	-
17	L	-
18	P	-
19	G	-
20	W	- [With ICC] - [Without ICC]
21	BR	- [With ICC] - [Without ICC]
22	R	- [With ICC] - [Without ICC]
23	G	-
24	L	- [With ICC] - [Without ICC]
25	Y	- [With ICC] - [Without ICC]
26	SHIELD	-
28	GR	-
29	V	-
30	O	-
31	BR	-
32	W	-
33	Y	-
34	L	-


JCJWA1168GB

SIDE SUPPORT

< DTC/CIRCUIT DIAGNOSIS >

SIDE SUPPORT

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-1M4

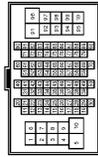

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	B	-
3	W	-
5	G	-
6	P	-
7	V	-
8	O	-
9	W	-
10	W	-
11	O	-
12	B	-
13	G	-
14	R	-
15	W	-
16	SHIELD	-
17	L	-
18	P	-
19	G	-
20	R	-
21	LG	-
23	V	-
24	P	-
25	BR	-
26	GR	-
27	O	-
28	W	-
29	SHIELD	-
38	B	-
39	B	-
40	LG	-
41	G	-
42	Y	-
43	SB	-
44	W	-
45	B	-
50	B	-
51	V	-
52	LG	-

Connector No.	M82
Connector Name	CIRCUIT BREAKER
Connector Type	MM2EW-P-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	W	-

53	SHIELD	-
54	BR	-
55	Y	-
56	SHIELD	-
57	P	-
58	L	-
59	SHIELD	-
60	L	-
61	BR	-
62	R	-
63	Y	-
64	L	-
65	W	-
66	V	-
67	LG	-
68	Y	-
69	G	-
70	V	-
71	W	-
72	B	-
73	W	-
74	LG	-
75	P	-
76	LG	-
77	SB	-
78	GR	-
79	R	-
80	L	-
81	P	-
82	L	-
83	P	-
84	SB	-
85	W	-
86	Y	-
87	B	-
88	G	-
89	O	-
90	W	-
91	R	-
92	O	-
93	BR	-
94	V	-
95	Y	-
96	O	-
97	W	-
98	R	-
99	G	-
99	O	-

- [With VK engine]
- [With VG engine]

JCJWA1169GB

LUMBAR SUPPORT

< DTC/CIRCUIT DIAGNOSIS >


LUMBAR SUPPORT

Wiring Diagram - LUMBAR SUPPORT -

INFOID:000000005568458

PM : With automatic drive positioner
OP : Without automatic drive positioner

LUMBAR SUPPORT

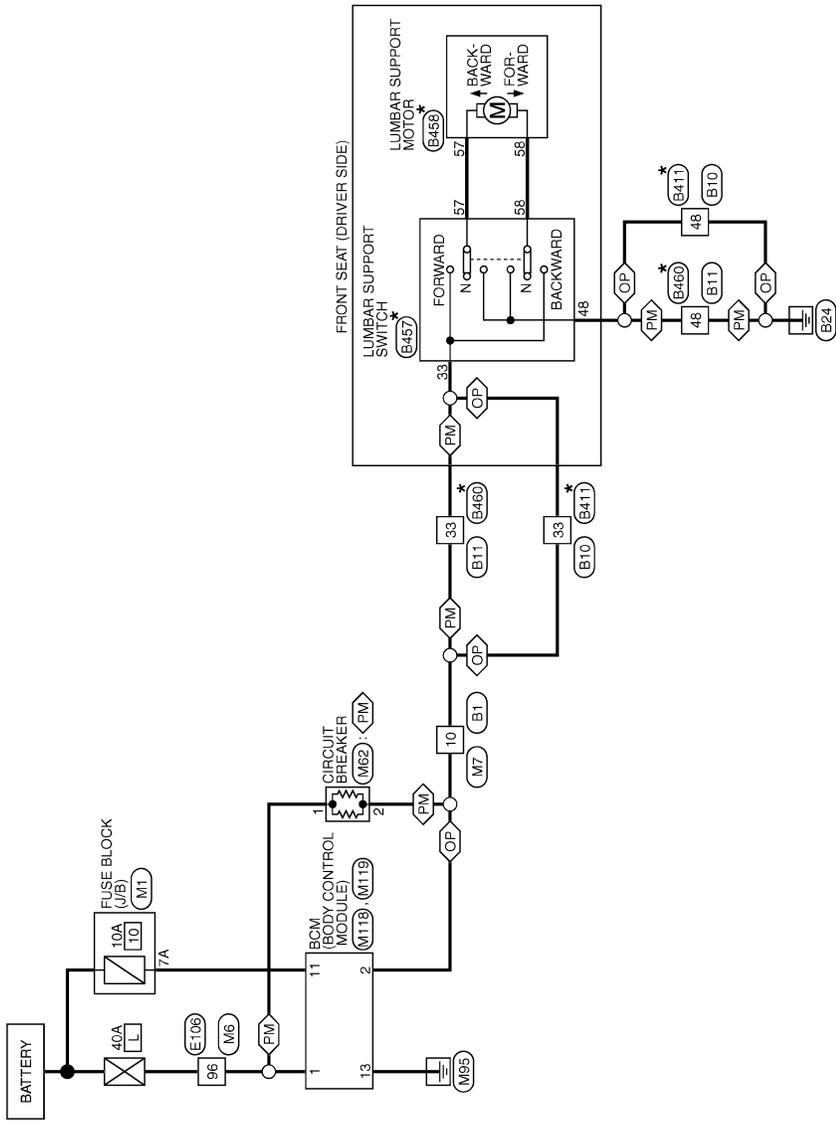

*: This connector is not shown in "Harness Layout".

2008/03/04

JCJWM0381GB


A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

LUMBAR SUPPORT

< DTC/CIRCUIT DIAGNOSIS >

LUMBAR SUPPORT

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH00FW-CS16-TM4

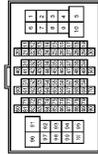

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	
2	L	
3	W	
5	G	
6	G	
7	P	
8	O	
9	W	
10	SB	
11	SB	
12	B	
13	G	
14	R	
15	W	
16	SHIELD	
17	L	
18	P	
19	G	
20	Y	
21	W	
23	V	
24	P	
25	BR	
26	GR	
27	O	
28	W	
29	SHIELD	
38	B	
39	B	
40	LG	
41	G	
42	GR	
43	SB	
44	V	
45	GR	
50	B	
51	V	
52	SB	


53	SHIELD	-
54	BR	-
55	Y	-
56	SHIELD	-
57	P	-
58	L	-
59	SHIELD	-
60	L	-
61	P	-
62	GR	-
63	G	-
64	O	-
65	W	-
66	V	-
67	LG	-
68	Y	-
69	G	-
70	GR	-
71	G	-
72	B	-
73	W	-
74	V	-
75	O	-
76	LG	-
77	L	-
78	GR	-
79	W	-
80	L	-
81	P	-
82	L	-
83	P	-
84	SB	-
85	R	-
86	Y	-
87	B	-
88	G	-
89	BR	-
90	W	-
91	R	-
92	O	-
93	BR	-
94	V	-
95	Y	-
96	O	-
97	W	-
98	GR	-
99	W	-

Connector No.	B10
Connector Name	WIRE TO WIRE
Connector Type	IM04FW-LC



Terminal No.	Color of Wire	Signal Name [Specification]
33	SB	
48	B	

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Type	NS116FW-CS

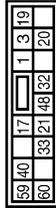

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	
3	L	
17	LG	
19	P	
21	Y	
32	B	
33	SB	
40	R	
48	B	

Connector No.	B411
Connector Name	WIRE TO WIRE
Connector Type	MC04MW-LC



Terminal No.	Color of Wire	Signal Name [Specification]
33	R	
48	B	

Connector No.	B457
Connector Name	LUMBAR SUPPORT SWITCH
Connector Type	NS04FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
33	R	
48	B	
57	W	
58	L	

JCJWA1170GB

LUMBAR SUPPORT

< DTC/CIRCUIT DIAGNOSIS >

LUMBAR SUPPORT

Connector No.	B458
Connector Name	LUMBAR SUPPORT MOTOR
Connector Type	CS2FW




Terminal No.	Color of Wire	Signal Name [Specification]
57	W	-
58	L	-

Connector No.	B460
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-LG



Terminal No.	Color of Wire	Signal Name [Specification]
1	L/W	-
3	R/Y	-
17	Y/R	-
19	V	-
21	L/Y	-
32	B/W	-
33	R	-
40	R/W	-
48	B	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	THEORV-CS16-TM4

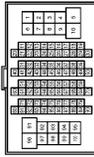

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	O	-
3	SB	-
4	LG	-
5	Y	-
6	W	-
7	G	-
8	V	-
9	R	-
10	BR	-
11	B	-
12	G	-
13	R	-
14	W	-
15	SHIELD	-
16	SB	-
17	L	-
18	P	-
19	G	-
20	W	- [With ICC]
20	Y	- [Without ICC]
21	BR	-
22	R	- [With ICC]
22	V	- [Without ICC]
23	G	-
24	L	- [With ICC]
24	P	- [Without ICC]
25	Y	- [With ICC]
25	L	- [Without ICC]
26	SHIELD	-
28	G	-
29	LG	-
30	O	-
31	BR	-
32	W	-
33	Y	-
34	O	-
35	SB	-

36	P	-
37	Y	-
38	GR	-
39	LG	-
41	LG	-
42	V	-
43	R	-
44	G	-
45	GR	-
46	W	-
47	L	-
48	P	-
49	SB	-
50	BR	-
51	B	-
52	Y	-
53	O	-
54	R	-
55	SB	-
56	P	-
59	P	-
60	SB	-
61	V	-
62	P	-
63	LG	-
64	L	-
65	O	-
66	L	-
69	L	-
70	SHIELD	-
71	G	-
72	G	-
73	R	-
74	BR	-
76	L	-
77	W	-
78	Y	-
80	SB	-
81	L	-
82	W	-
83	LG	-
84	GR	-
85	G	-
86	P	-
87	W	-
88	O	-
89	LG	-
90	BR	-
91	GR	-
92	BR	-
93	SB	-
94	W	-

95	Y	-
96	W	-
100	Y	-



Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2



Terminal No.	Color of Wire	Signal Name [Specification]
1A	O	-
2A	G	-
3A	L	-
4A	P	-
5A	V	-
6A	Y	-
7A	R	-
8A	L	-

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

LUMBAR SUPPORT


< DTC/CIRCUIT DIAGNOSIS >

94	L	-
95	G	-
96	W	-
100	Y	-

35	L	-
36	P	-
37	G	-
38	R	-
39	G	-
41	U	-
42	W	-
43	R	-
44	LG	-
45	GR	-
46	W	-
47	L	-
48	P	-
49	O	-
50	LG	-
51	SB	-
52	Y	-
53	O	-
54	BR	-
55	SB	-
56	P	-
59	SB	-
60	SB	-
61	V	-
62	P	-
63	R	-
64	L	-
65	O	-
66	O	-
68	V	-
70	SHIELD	-
71	O	-
72	GR	-
73	W	-
74	SB	-
76	V	-
77	V	-
78	Y	-
80	O	-
81	L	-
82	W	-
83	Y	-
84	L	-
85	P	-
86	BR	-
87	P	-
88	V	-
89	G	-
90	P	-
91	R	-
92	R	-
93	GR	-

LUMBAR SUPPORT

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

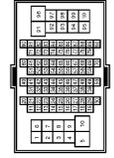

Terminal No.	Color of Wire	Signal Name (Specification)
1	G	-
2	O	-
3	SB	-
4	LG	-
5	GR	-
6	W	-
7	G	-
8	W	-
9	P	-
10	BR	-
11	B	-
12	G	-
13	R	-
14	W	-
15	SHIELD	-
16	BR	-
17	L	-
18	P	-
19	G	-
20	W	- [With ICC]
20	GR	- [Without ICC]
21	BR	- [With ICC]
21	R	- [Without ICC]
22	R	- [With ICC]
22	L	- [Without ICC]
23	G	-
24	L	- [With ICC]
24	P	- [Without ICC]
25	Y	- [With ICC]
25	W	- [Without ICC]
26	SHIELD	-
28	GR	-
29	V	-
30	O	-
31	BR	-
32	W	-
33	Y	-
34	L	-


JCJWA1172GB

LUMBAR SUPPORT

< DTC/CIRCUIT DIAGNOSIS >

LUMBAR SUPPORT

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

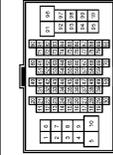

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	B	-
3	W	-
5	G	-
6	P	-
7	V	-
8	O	-
9	W	-
10	W	-
11	O	-
12	B	-
13	G	-
14	R	-
15	W	-
16	SHIELD	-
17	L	-
18	P	-
19	G	-
20	R	-
21	LG	-
23	V	-
24	P	-
25	BR	-
26	GR	-
27	O	-
28	W	-
29	SHIELD	-
38	B	-
39	B	-
40	LG	-
41	G	-
42	Y	-
43	SB	-
44	W	-
45	B	-
50	B	-
51	V	-
52	LG	-

53	SHIELD	-
54	BR	-
55	Y	-
56	SHIELD	-
57	P	-
58	L	-
59	SHIELD	-
60	L	-
61	BR	-
62	R	-
63	Y	-
64	L	-
65	W	-
66	V	-
67	LG	-
68	Y	-
69	G	-
70	V	-
71	W	-
72	B	-
73	W	-
74	LG	-
75	P	-
76	LG	-
77	SB	-
78	GR	-
79	R	-
80	L	-
81	P	-
82	L	-
83	P	-
84	SB	-
85	W	-
86	Y	-
87	B	-
88	G	-
89	O	-
90	W	-
91	R	-
92	O	-
93	BR	-
94	V	-
95	Y	-
96	O	-
97	W	-
98	R	-
99	G	-
99	O	-


- [With VK engine]
- [With VG engine]

Connector No.	M82
Connector Name	CIRCUIT BREAKER
Connector Type	M02FW-P-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	W	-

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC

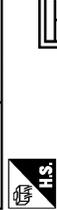

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	Y	POWER WINDOW POWER SUPPLY (BAT)
3	O	POWER WINDOW POWER SUPPLY (RAP)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
4	P	INT ROOM LAMP PWR SUPPLY (BAT SAVE)

5	V	PASSENGER DOOR UNLOCK OUTPUT
7	Y	STEP LAMP OUTPUT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
10	BR	REAR DOOR UNLOCK OUTPUT
11	R	BAT FUSE
13	B	GND
15	Y	ACC IND
17	W	TURN SIGNAL RH (FRONT)
18	O	TURN SIGNAL LH (FRONT)
19	SB	ROOM LAMP TIMER

JCJWA1173GB

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE

CLIMATE CONTROLLED SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


ECU DIAGNOSIS INFORMATION

CLIMATE CONTROLLED SEAT CONTROL UNIT

Reference Value

INFOID:000000005236637

TERMINAL LAYOUT

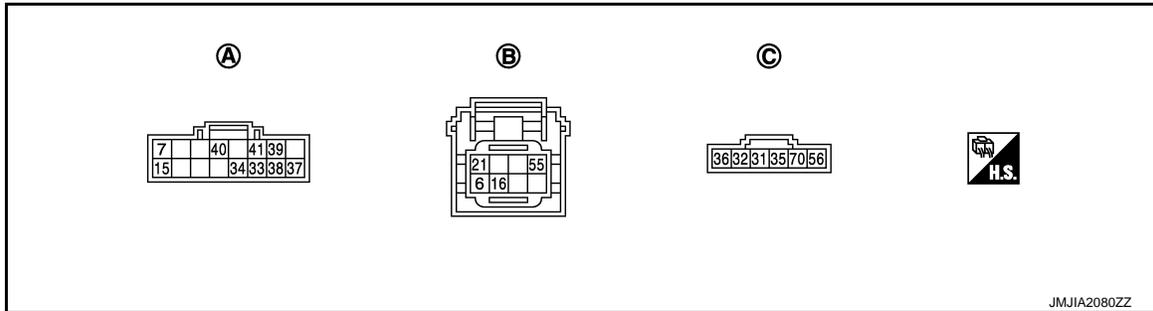

A. B507

B. B508

C. B509

PHYSICAL VALUES

Terminal No.		Wire color	Description		Condition	Value (Approx.)	
+	-		Signal name	Input/Output			
6	Ground	R	COOL switch signal	Input	Climate controlled seat switch	HI COOL	2.6 - 4.2
						MID COOL	1.6 - 2.5
						LO COOL	0.8 - 1.5
						OFF	0
7	Ground	L	HEAT switch indicator signal	Output	Climate controlled seat switch	HEAT	Battery voltage
						OFF	0
15	Ground	W	COOL switch indicator signal	Output	Climate controlled seat switch	COOL	Battery voltage
						OFF	0
16	Ground	G	HEAT switch signal	Input	Climate controlled seat switch	HI HEAT	2.6 - 4.2
						MID HEAT	1.6 - 2.5
						LO HEAT	0.8 - 1.5
						OFF	0
21	Ground	P	Climate controlled seat switch power supply	Output	Ignition switch ON	Battery voltage	
31	Ground	L/R	Seat cushion thermal electric device HEAT signal	Input	Climate controlled seat switch	HEAT or COOL	0 - Battery voltage*
						OFF	0
32	Ground	G/R	Seat cushion thermal electric device COOL-signal	Input	Climate controlled seat switch	HEAT or COOL	0 - Battery voltage*
						OFF	0
33	Ground	B/R	Seat cushion thermal electric device sensor signal	Input	Climate controlled seat operated	1 - 5	
34	Ground	Y/R	Seat cushion thermal electric device sensor ground	—	Ignition switch ON	0	

CLIMATE CONTROLLED SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Terminal No.		Wire color	Description		Condition		Value (Approx.)
+	-		Signal name	Input/Output			
35	Ground	V	Seatback thermal electric device HEAT signal	Input	Climate controlled seat switch	HEAT or COOL	0 - Battery voltage*
						OFF	0
36	Ground	O	Seatback thermal electric device COOL signal	Input	Climate controlled seat switch	HEAT or COOL	0 - Battery voltage*
						OFF	0
37	Ground	SB	Seatback thermal electric device sensor signal	Input	Climate controlled seat operated		1 - 5
38	Ground	B	Seatback thermal electric device sensor ground	—	Ignition switch ON		0
39	Ground	G/W	Blower motor power supply	Output	Climate controlled seat switch	HEAT or COOL	Battery voltage
					Other than the above		0
40	Ground	R/W	Blower motor speed control signal	Input	Climate controlled seat switch	HEAT	8.5 - 9
						HI COOL	12
						MID COOL	9
						LO COOL	8
41	Ground	B/W	Blower motor ground	—	—		0
55	Ground	W	Ignition switch power supply	Input	Ignition switch ON		Battery voltage
56	Ground	B	Ground	—	—		0
70	Ground	R	Ignition switch power supply	Input	Ignition switch ON		Battery voltage

*:It changes between battery voltage or 0V


NOTE:

- Measure the value on the condition that the battery voltage is 14 V
- Wait 1 minute or more after terminal electric device is activated, and then start the measurement

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

CLIMATE CONTROLLED SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

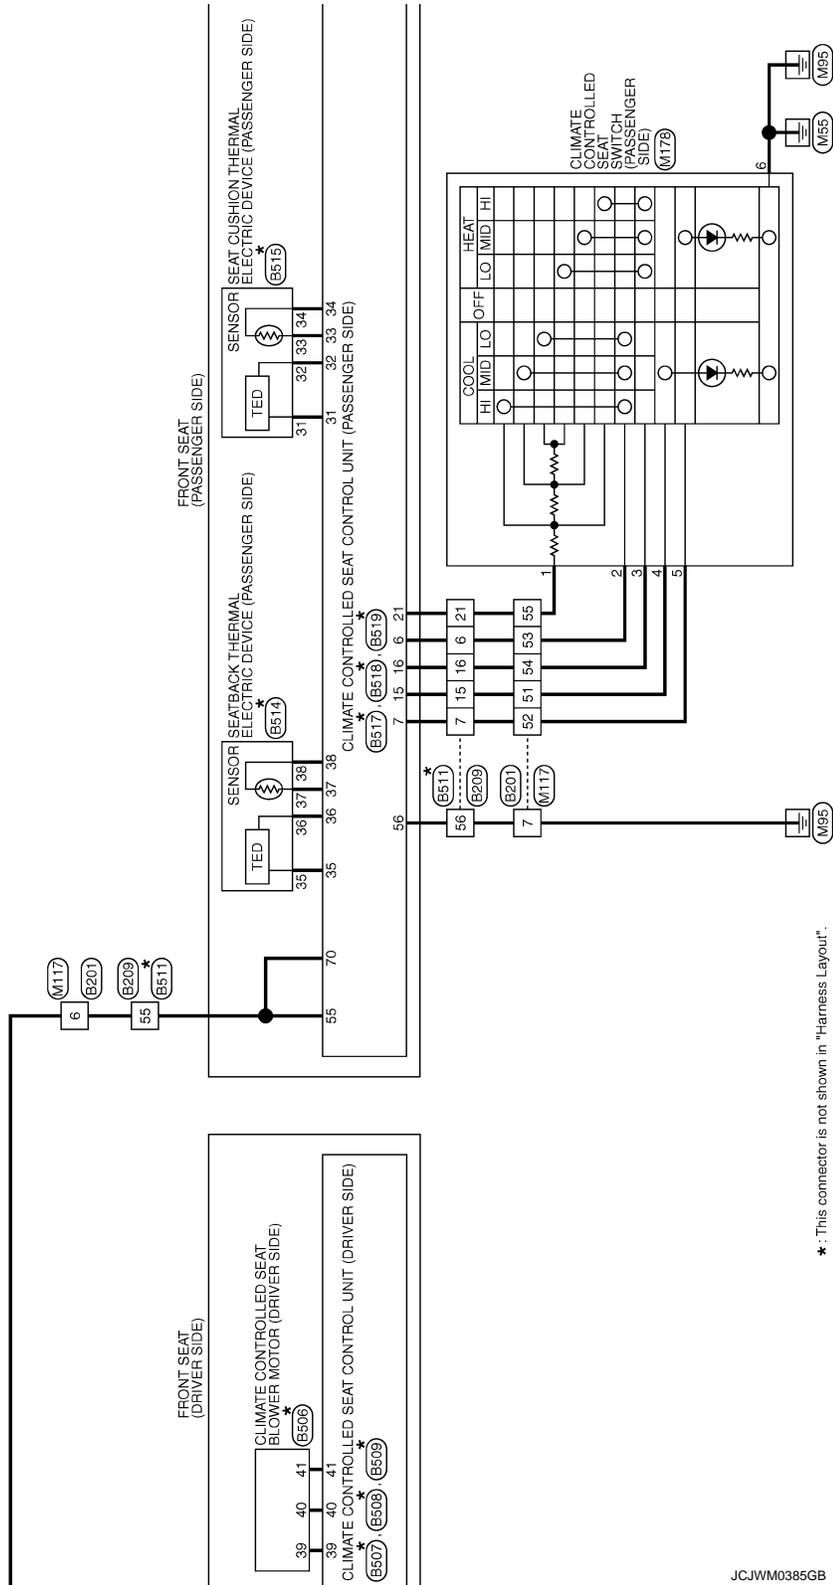


*: This connector is not shown in "Harness Layout".

JCJWM0385GB

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

CLIMATE CONTROLLED SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

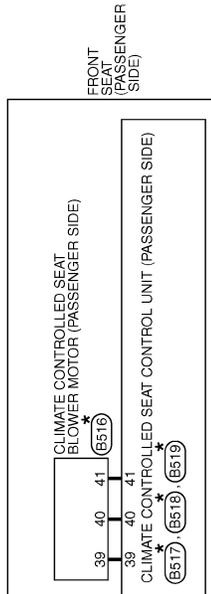

*: This connector is not shown in "Harness Layout".


JCJWM0386GB

CLIMATE CONTROLLED SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

CLIMATE CONTROLLED SEAT

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	THBDPW-CS16-TM4

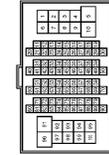

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	L	-
3	W	-
5	G	-
6	G	-
7	P	-
8	O	-
9	W	-
10	SB	-
11	SB	-
12	B	-
13	G	-
14	R	-
15	W	-
16	SHIELD	-
17	L	-
18	P	-
19	G	-
20	Y	-
21	W	-
23	V	-
24	P	-
25	BR	-
26	GR	-
27	O	-
28	W	-
29	SHIELD	-
38	B	-
39	B	-
40	LG	-
41	G	-
42	GR	-
43	SB	-
44	V	-
45	GR	-
50	B	-
51	V	-
52	SB	-

53	SHIELD	-
54	BR	-
55	Y	-
56	SHIELD	-
57	P	-
58	L	-
59	SHIELD	-
60	L	-
61	P	-
62	GR	-
63	G	-
64	O	-
65	W	-
66	V	-
67	LG	-
68	Y	-
69	G	-
70	GR	-
71	G	-
72	B	-
73	W	-
74	V	-
75	O	-
76	LG	-
77	L	-
78	GR	-
79	W	-
80	L	-
81	P	-
82	L	-
83	P	-
84	SB	-
85	R	-
86	Y	-
87	B	-
88	G	-
89	BR	-
90	W	-
91	R	-
92	O	-
93	BR	-
94	V	-
95	Y	-
96	O	-
97	W	-
98	GR	-
99	W	-

Connector No.	B58
Connector Name	WIRE TO WIRE
Connector Type	NS10FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
6	V	-
7	GR	-
15	BR	-
16	P	-
21	O	-
55	G	-
56	L	-
59	LG	-
60	B	-
61	SB	-

JCJWA1174GB

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

CLIMATE CONTROLLED SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

CLIMATE CONTROLLED SEAT

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	THBDFW-CS16-1M4



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	R	-
3	BR	-
4	SB	-
6	O	-
7	GR	-
8	W	-
10	G	-
11	BR	-
12	Y	-
13	SHIELD	-
14	G	-
15	R	-
16	SHIELD	-
17	LG	-
18	GR	-
19	V	-
20	SB	-
21	LG	-
22	B	- [With entertainment system] - [Without entertainment system]
23	GR	- [With entertainment system] - [Without entertainment system]
23	W	- [With entertainment system] - [Without entertainment system]
23	LG	- [With entertainment system] - [Without entertainment system]
24	R	- [With entertainment system] - [Without entertainment system]
24	W	- [With entertainment system] - [Without entertainment system]
25	SHIELD	- [With entertainment system] - [Without entertainment system]
25	V	- [With entertainment system] - [Without entertainment system]
26	SB	-
27	V	-
28	SHIELD	-
29	O	-
30	P	-
31	W	-
32	GR	-
33	SB	-
40	LG	- [With ICC] - [Without ICC]
40	V	- [With ICC] - [Without ICC]
41	SB	- [With ICC]

41	Y	- [Without ICC]
42	V	- [With ICC]
42	W	- [Without ICC]
43	BR	- [With ICC]
43	R	- [Without ICC]
44	R	-
45	G	-
46	O	- [With ICC]
46	SHIELD	- [Without ICC]
47	L	- [With ICC]
47	B	- [Without ICC]
48	P	- [With ICC]
48	R	- [Without ICC]
49	G	- [With ICC]
49	W	- [Without ICC]
50	SHIELD	-
51	W	-
52	R	-
53	G	-
54	L	-
55	SB	-
60	GR	-
61	LG	-
62	SB	-
63	P	-
64	BR	-
65	O	-
66	Y	-
67	W	-
68	SHIELD	-
69	G	-
71	SB	-
72	V	-
73	LG	-
74	W	-
75	BR	-
76	V	-
77	LG	-
80	O	-
81	G	-
82	P	-
83	Y	-
84	R	-
85	SB	-
86	GR	-
87	L	-
91	V	-
92	W	-
93	R	-
94	LG	-
95	GR	-
96	W	-

97	G	-
98	O	-
99	L	-
100	Y	-

Connector No.	B209
Connector Name	WIRE TO WIRE
Connector Type	NS10FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
6	G	-
15	W	-
16	L	-
21	SB	-
55	O	-
56	GR	-
59	V	-
60	B	-
61	LG	-

Connector No.	B801
Connector Name	WIRE TO WIRE
Connector Type	NS10MM-CS



Terminal No.	Color of Wire	Signal Name [Specification]
6	R	-
7	L	-
15	W	-
16	G	-
21	P	-
55	W	-

56	B	-
59	L/Y	-
60	R/X	-
61	B/Y	-

Connector No.	B804
Connector Name	SEATBACK THERMAL ELECTRIC DEVICE (DRIVER SIDE)
Connector Type	8098-2163



Terminal No.	Color of Wire	Signal Name [Specification]
35	V	-
38	O	-
37	SB	-
38	B	-

Connector No.	B805
Connector Name	SEAT CUSHION THERMAL ELECTRIC DEVICE (DRIVER SIDE)
Connector Type	8098-2163



Terminal No.	Color of Wire	Signal Name [Specification]
31	L/R	-
32	G/R	-
33	B/R	-
34	Y/R	-

CLIMATE CONTROLLED SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


CLIMATE CONTROLLED SEAT

Connector No.	B506
Connector Name	CLIMATE CONTROLLED SEAT BLOWER/MOTOR (DRIVER SIDE)
Connector Type	7283-5830




Terminal No.	Color of Wire	Signal Name [Specification]
38	G/W	-
40	R/W	-
41	B/W	-

Connector No.	B507
Connector Name	CLIMATE CONTROLLED SEAT CONTROL UNIT (DRIVER SIDE)
Connector Type	15384150

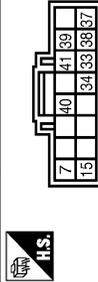

Terminal No.	Color of Wire	Signal Name [Specification]
7	L	-
15	W	-
33	B/R	-
34	Y/R	-
37	SB	-
38	B	-
39	G/W	-
40	R/W	-
41	B/W	-

Connector No.	B508
Connector Name	CLIMATE CONTROLLED SEAT CONTROL UNIT (DRIVER SIDE)
Connector Type	15406141

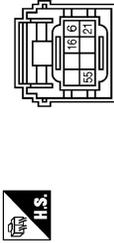

Terminal No.	Color of Wire	Signal Name [Specification]
6	R	-
16	G	-
21	P	-
55	W	-

Connector No.	B509
Connector Name	CLIMATE CONTROLLED SEAT CONTROL UNIT (DRIVER SIDE)
Connector Type	15332141



Terminal No.	Color of Wire	Signal Name [Specification]
31	L/R	-
32	G/R	-
35	V	-
36	O	-
56	B	-
70	R	-

Connector No.	B511
Connector Name	WIRE TO WIRE
Connector Type	NS10MM-CS



Terminal No.	Color of Wire	Signal Name [Specification]
6	R	-
7	L	-
15	W	-
16	G	-
21	P	-
55	W	-
56	B	-
59	L/Y	-
60	R/Y	-
61	B/Y	-

Connector No.	B514
Connector Name	SEATBACK THERMAL ELECTRIC DEVICE (PASSENGER SIDE)
Connector Type	6898-2163



Terminal No.	Color of Wire	Signal Name [Specification]
35	V	-
37	SB	-
38	B	-

Connector No.	B515
Connector Name	SEAT CUSHION THERMAL ELECTRIC DEVICE (PASSENGER SIDE)
Connector Type	6898-2163



Terminal No.	Color of Wire	Signal Name [Specification]
31	L/R	-
32	G/R	-
33	B/R	-
34	Y/R	-

Connector No.	B516
Connector Name	CLIMATE CONTROLLED SEAT BLOWER/MOTOR (PASSENGER SIDE)
Connector Type	7283-5830



Terminal No.	Color of Wire	Signal Name [Specification]
39	G/W	-
40	R/W	-
41	B/W	-

JCJWA1176GB


A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

CLIMATE CONTROLLED SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


CLIMATE CONTROLLED SEAT

Connector No.	B517
Connector Name	CLIMATE CONTROLLED SEAT CONTROL UNIT PASSENGER SIDE
Connector Type	15384150

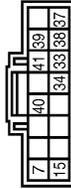

Terminal No.	Color of Wire	Signal Name [Specification]
7	L	
15	W	
33	B/R	
34	Y/R	
37	SB	
38	B	
39	G/W	
40	R/W	
41	B/W	

Connector No.	B518
Connector Name	CLIMATE CONTROLLED SEAT CONTROL UNIT PASSENGER SIDE
Connector Type	15006141

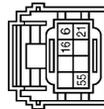


Terminal No.	Color of Wire	Signal Name [Specification]
6	R	
16	G	
21	P	
55	W	

Connector No.	B519
Connector Name	CLIMATE CONTROLLED SEAT CONTROL UNIT PASSENGER SIDE
Connector Type	15332141



Terminal No.	Color of Wire	Signal Name [Specification]
31	L/R	
32	G/R	
35	V	
36	O	
56	B	
70	R	

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH60FW-CS16-TM44

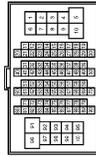

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	
2	O	
3	SB	
4	LG	
5	Y	
6	W	
7	G	
8	V	
9	R	
10	BR	
11	B	
12	G	
13	R	
14	W	
15	SHIELD	
16	SB	

Terminal No.	Color of Wire	Signal Name [Specification]
17	L	
18	P	
19	G	
20	W	
21	Y	
22	BR	
23	R	
24	V	
25	G	
26	L	
27	P	
28	Y	
29	L	
30	SHIELD	
31	G	
32	LG	
33	O	
34	BR	
35	W	
36	Y	
37	P	
38	SB	
39	R	
40	LG	
41	V	
42	Y	
43	R	
44	G	
45	GR	
46	W	
47	L	
48	P	
49	SB	
50	BR	
51	B	
52	Y	
53	O	
54	R	
55	SB	
56	P	
59	P	
60	SB	
61	V	
62	P	
63	LG	
64	L	
65	O	
66	L	
69	L	
70	SHIELD	

Terminal No.	Color of Wire	Signal Name [Specification]
71	G	
72	G	
73	R	
74	BR	
76	L	
77	W	
78	Y	
80	SB	
81	L	
82	W	
83	LG	
84	GR	
85	G	
86	P	
87	W	
88	O	
89	LG	
90	BR	
91	GR	
92	BR	
93	SB	
94	W	
95	Y	
96	W	
100	Y	

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS00FV-M2



Terminal No.	Color of Wire	Signal Name [Specification]
1A	O	
2A	G	
3A	L	
4A	P	
5A	V	
6A	Y	
7A	R	
8A	L	


CLIMATE CONTROLLED SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

CLIMATE CONTROLLED SEAT

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH8DMW-CST16-TM4

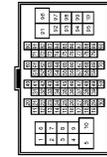

94	L	-
95	G	-
96	W	-
100	Y	-

35	L	-
36	P	-
37	G	-
38	R	-
39	G	-
41	L	-
42	W	-
43	R	-
44	LG	-
45	GR	-
46	W	-
47	L	-
48	P	-
49	O	-
50	LG	-
51	SB	-
52	Y	-
53	O	-
54	BR	-
55	SB	-
56	P	-
59	SB	-
60	SB	-
61	V	-
62	P	-
63	R	-
64	L	-
65	O	-
66	L	-
69	V	-
70	SHIELD	-
71	O	-
72	GR	-
73	W	-
74	SB	-
76	V	-
77	V	-
78	Y	-
80	O	-
81	L	-
82	W	-
83	Y	-
84	L	-
85	P	-
86	BR	-
87	P	-
88	V	-
89	G	-
90	P	-
91	R	-
92	R	-
93	GR	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	O	-
3	SB	-
4	LG	-
5	GR	-
6	W	-
7	G	-
8	W	-
9	P	-
10	BR	-
11	B	-
12	G	-
13	R	-
14	W	-
15	SHIELD	-
16	BR	-
17	L	-
18	P	-
19	G	-
20	W	- [With ICC] - [Without ICC]
21	BR	- [With ICC] - [Without ICC]
22	R	- [With ICC] - [Without ICC]
23	G	- [With ICC] - [Without ICC]
24	P	- [With ICC] - [Without ICC]
25	Y	- [With ICC] - [Without ICC]
26	SHIELD	-
28	GR	-
29	V	-
30	O	-
31	BR	-
32	W	-
33	Y	-
34	L	-

JCJWA1178GB

CLIMATE CONTROLLED SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

CLIMATE CONTROLLED SEAT

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-1M4



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	B	-
3	W	-
5	G	-
6	P	-
7	V	-
8	O	-
9	W	-
10	W	-
11	O	-
12	B	-
13	G	-
14	R	-
15	W	-
16	SHIELD	-
17	L	-
18	P	-
19	G	-
20	R	-
21	LG	-
23	V	-
24	P	-
25	BR	-
26	GR	-
27	O	-
28	W	-
29	SHIELD	-
38	B	-
39	B	-
40	LG	-
41	G	-
42	Y	-
43	SB	-
44	W	-
45	B	-
50	B	-
51	V	-
52	LG	-

53	SHIELD	-
54	BR	-
55	Y	-
56	SHIELD	-
57	P	-
58	L	-
59	SHIELD	-
60	L	-
61	BR	-
62	R	-
63	Y	-
64	L	-
65	W	-
66	V	-
67	LG	-
68	Y	-
69	G	-
70	V	-
71	W	-
72	B	-
73	W	-
74	LG	-
75	P	-
76	LG	-
77	SB	-
78	GR	-
79	R	-
80	L	-
81	P	-
82	L	-
83	P	-
84	SB	-
85	W	-
86	Y	-
87	B	-
88	G	-
89	O	-
90	W	-
91	R	-
92	O	-
93	BR	-
94	V	-
95	Y	-
96	O	-
97	W	-
98	R	-
99	G	-
99	O	-

- [With VK engine]
- [With VG engine]

Connector No.	M84
Connector Name	CLIMATE CONTROLLED SEAT RELAY
Connector Type	MM8FBR-R-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	Y	-
3	Y	-
5	LG	-
6	G	-
7	SB	-


JCJWA1179GB

CLIMATE CONTROLLED SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

CLIMATE CONTROLLED SEAT

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-C516-TM44

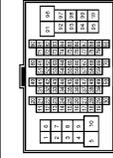

Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	BR	-
3	V	-
4	SB	-
6	Y	-
7	B	-
8	W	-
10	W	-
11	BR	-
12	GR	-
13	SHIELD	-
14	P	-
15	P	-
16	SHIELD	-
17	Y	-
18	Y	-
19	LG	-
20	SB	-
21	LG	-
22	B	- [With entertainment system]
22	GR	- [Without entertainment system]
23	W	- [With entertainment system]
23	V	- [Without entertainment system]
24	R	- [With entertainment system]
24	W	- [Without entertainment system]
25	SHIELD	- [With entertainment system]
25	R	- [Without entertainment system]
26	SB	-
27	V	-
28	SHIELD	-
29	O	-
30	P	-
31	W	-
32	W	-
33	SB	-
40	Y	-
41	SB	- [With ICC]
41	Y	- [Without ICC]

42	V	- [With ICC]
42	W	- [Without ICC]
43	P	- [With ICC]
43	P	- [Without ICC]
44	R	- [With ICC]
45	L	- [With ICC]
45	G	- [Without ICC]
46	O	- [With ICC]
46	SHIELD	- [Without ICC]
47	L	- [With ICC]
47	B	- [Without ICC]
48	P	- [With ICC]
48	R	- [Without ICC]
49	G	- [With ICC]
49	W	- [Without ICC]
50	SHIELD	-
51	O	-
52	GR	-
53	G	-
54	L	-
55	P	-
60	LG	-
61	R	-
62	SB	-
63	V	-
64	Y	-
65	BR	-
66	O	-
67	W	-
68	SHIELD	-
69	G	-
71	SB	-
72	V	-
73	V	-
74	LG	-
75	R	- [With VK engine]
75	BR	- [With VQ engine]
76	V	-
77	LG	-
80	R	-
81	L	-
82	Y	-
83	O	-
84	W	-
85	SB	-
86	B	-
87	P	-
91	L	-
92	L	-
93	G	-
94	W	- [With VK engine]
94	O	- [With VQ engine]

85	V	-
86	G	-
87	G	-
88	L	-
89	LG	-
100	Y	-

Connector No.	M177
Connector Name	CLIMATE CONTROLLED SEAT SWITCH (DRIVER SIDE)
Connector Type	TK10FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-
3	P	-
4	BR	-
5	GR	-
6	B	-
7	R	-
8	R	-

Connector No.	M178
Connector Name	CLIMATE CONTROLLED SEAT SWITCH (PASSENGER SIDE)
Connector Type	TK08FBR



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	G	-
3	L	-
4	O	-
5	GR	-
6	B	-

7	R	-
8	R	-

Fail-safe

- Climate controlled seat control unit equips fail-safe function.
- When a malfunction occurs in the systems shown as per the following, climate controlled seat control unit stops output.

JCJWA1180GB

INFOID:000000005236639

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

CLIMATE CONTROLLED SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Malfunction	Malfunctioning condition
<p>The temperature difference between the seatback thermal electric device and seat cushion thermal electric device is 30°C or more</p>	<ul style="list-style-type: none"> When it detects for 4 seconds that the temperature difference between the seatback thermal electric device and seat cushion thermal electric device is 30°C or more, stops the output to the thermal electric device, activates the climate controlled seat blower motor in the maximum position, and sends the external airflow for 30 seconds If the temperature difference is still 30°C or more after 30 seconds pass, it stops all output and enters the system OFF condition When the temperature difference between seatback thermal electric device and seat cushion thermal electric device becomes 20°C or less, the system recovers automatically If it detects that the temperature difference is 30°C or more after the automatic system recovery, it immediately stops all output and enters the system OFF condition <p>NOTE: When the switch operation is performed before entering the system OFF condition, the fail-safe mode is reset.</p>
<p>The temperature of thermal electric device is 110°C or more in the HEAT mode (any thermal electric device in the seatback or seat cushion)</p>	<ul style="list-style-type: none"> When it detects for 4 seconds that the temperature of the thermal electric device is 110°C or more, stops the output to the thermal electric device, activates climate the controlled seat blower motor in the maximum position, and sends the external airflow for 30 seconds If the temperature does not become 105°C or less after 30 seconds pass, it stops all output and enters the system OFF condition When the temperature of the thermal electric device becomes 105°C or less, the system recovers automatically If it detects that the temperature of the thermal electric device is 110°C or more after the automatic system recovery, it immediately stops all output and enters the system OFF condition
<p>The temperature of the thermal electric device is 45°C or more in the COOL mode (any thermal electric device in the seatback or seat cushion)</p>	<ul style="list-style-type: none"> When it detects for 4 seconds that the temperature of the thermal electric device is between 45°C and 70°C, it starts the temperature monitoring of the thermal electric device at 3 second intervals While monitoring, if it detects that the temperature raises 2°C or more 4 times continuously or reaches 70°C or more, it stops all output and enters the system OFF condition If it detects other results of monitoring, it continues activating in the COOL mode
<p>Thermal electric device sensor system open circuit</p>	<ul style="list-style-type: none"> When it detects for 4 seconds that the thermal electric device sensor system is an open circuit
<p>Climate controlled seat blower motor system open circuit</p>	<ul style="list-style-type: none"> When it detects for 2 seconds that climate controlled seat blower motor system is an open circuit while the climate controlled seat is being activated, it stops output to the thermal electric device When it detects for 10 seconds that the climate controlled seat blower motor system is an open circuit while the climate controlled seat is being activated, it stops all output and enters the system OFF condition <p>NOTE: After detecting the climate seat blower motor system open circuit for 2 seconds, the system recovers automatically if the activation of the climate controlled seat blower motor is detected for 1 second or more.</p>
<p>Switch input out of the specified range</p>	<ul style="list-style-type: none"> When it detects for 4 seconds that the rotary switch input is 30% or less of the vehicle battery voltage, it stops all output and enters the system OFF condition When the switch input returns to a value within the specified range, the system recovers automatically
<p>HEAT or COOL switch input out of the specified range</p>	<ul style="list-style-type: none"> When it detects for 4 seconds that rotary switch input is 6% or less of the vehicle battery voltage, it stops all output and enters the system OFF condition When the switch input returns to a value within the specified range, the system recovers automatically
<p>System voltage out of range</p>	<ul style="list-style-type: none"> System voltage* of the climate controlled seat control unit is out of the operation range (8.5 V – 16.5 V)

*: System voltage is the voltage between ventilation seat control unit power source and the ground.

NOTE:

CLIMATE CONTROLLED SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

When the system enters in the fail-safe mode again after performing resetting procedure, perform diagnosis.

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

CLIMATE CONTROLLED SEAT DOES NOT OPERATE.

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

CLIMATE CONTROLLED SEAT DOES NOT OPERATE.
BOTH SIDES

BOTH SIDES : Diagnosis Procedure

INFOID:000000005236640

1.CHECK CLIMATE CONTROLLED CONTROL UNIT POWER SUPPLY AND GROUND CIRCUIT

Check climate controlled control unit power supply and ground circuit.

Refer to [SE-10. "CLIMATE CONTROLLED SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-36. "Intermittent Incident"](#).

NO >> GO TO 1.

DRIVER SIDE

DRIVER SIDE : Diagnosis Procedure

INFOID:000000005236641

1.CHECK CLIMATE CONTROLLED SEAT CONTROL UNIT POWER SUPPLY CIRCUIT

Check climate controlled seat control unit power supply circuit.

Refer to [SE-10. "CLIMATE CONTROLLED SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK CLIMATE CONTROLLED SEAT SWITCH

Check climate controlled seat switch.

Refer to [SE-14. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CHECK CLIMATE CONTROLLED SEAT BLOWER MOTOR

Check climate controlled seat blower motor.

Refer to [SE-25. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-36. "Intermittent Incident"](#).

NO >> GO TO 1.

PASSENGER SIDE

PASSENGER SIDE : Diagnosis Procedure

INFOID:000000005236642

1.CHECK CLIMATE CONTROLLED SEAT CONTROL UNIT POWER SUPPLY AND GROUND CIRCUIT

Check climate controlled seat control unit power supply circuit.

CLIMATE CONTROLLED SEAT DOES NOT OPERATE.

< SYMPTOM DIAGNOSIS >

Refer to [SE-10, "CLIMATE CONTROLLED SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK CLIMATE CONTROLLED SEAT SWITCH

Check climate controlled seat switch.

Refer to [SE-14, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CHECK CLIMATE CONTROLLED SEAT BLOWER MOTOR

Check climate controlled seat blower motor.

Refer to [SE-25, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-36, "Intermittent Incident"](#).

NO >> GO TO 1.

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

CLIMATE CONTROLLED SEAT BLOWER MOTOR SPEED CANNOT ADJUST.

< SYMPTOM DIAGNOSIS >

CLIMATE CONTROLLED SEAT BLOWER MOTOR SPEED CANNOT ADJUST.

Diagnosis Procedure

INFOID:000000005236643

1. CHECK CLIMATE CONTROLLED SEAT BLOWER FILTER

Check climate controlled seat blower filter.

Refer to [SE-31, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK CLIMATE CONTROLLED SEAT SWITCH

Check climate controlled seat switch.

Refer to [SE-14, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CHECK CLIMATE CONTROLLED SEAT BLOWER MOTOR

Check climate controlled seat blower motor.

Refer to [SE-25, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-36, "Intermittent Incident"](#).

NO >> GO TO 1.

CLIMATE CONTROLLED SEAT DOES NOT OPERATES WHEN SWITCH IS DONE IN HEAT OR COOL.

< SYMPTOM DIAGNOSIS >

CLIMATE CONTROLLED SEAT DOES NOT OPERATES WHEN SWITCH IS DONE IN HEAT OR COOL.

Diagnosis Procedure

INFOID:000000005236644

1.CHECK CLIMATE CONTROLLED SEAT SWITCH

Check climate controlled seat switch.

Refer to [SE-14, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-36, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE

WHEN THE CLIMATE CONTROLLED SEAT SWITCH IS TURNED ON, OPERATION STOP AT NOSE.

< SYMPTOM DIAGNOSIS >

WHEN THE CLIMATE CONTROLLED SEAT SWITCH IS TURNED ON, OPERATION STOP AT NOSE.

Diagnosis Procedure

INFOID:000000005236645

1. CHECK CLIMATE CONTROLLED SEAT BLOWER FILTER

Check climate controlled seat blower filter.

Refer to [SE-31, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK SEAT CUSHION THERMAL ELECTRIC DEVICE SENSOR

Check seat cushion thermal electric device sensor.

Refer to [SE-23, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CHECK SEAT CUSHION THERMAL ELECTRIC DEVICE

Check seat cushion thermal electric device.

Refer to [SE-21, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4. CHECK SEATBACK THERMAL ELECTRIC DEVICE SENSOR

Check seatback thermal electric device sensor.

Refer to [SE-19, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace the malfunctioning parts.

5. CHECK SEATBACK THERMAL ELECTRIC DEVICE

Check seatback thermal electric device.

Refer to [SE-17, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace the malfunctioning parts.

6. CHECK CLIMATE CONTROLLED BLOWER MOTOR

Check climate controlled blower motor.

Refer to [SE-25, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace the malfunctioning parts.

7. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-36, "Intermittent Incident"](#).

NO >> GO TO 1.

SEAT SWITCH INDICATOR DOES NOT OPERATE IN HEAT OR COOL POSITION

< SYMPTOM DIAGNOSIS >

SEAT SWITCH INDICATOR DOES NOT OPERATE IN HEAT OR COOL POSITION

Diagnosis Procedure

INFOID:000000005236646

1. CHECK CLIMATE CONTROLLED SEAT SWITCH INDICATOR

Check climate controlled seat indicator.

Refer to [SE-28, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-36, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE


SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

SQUEAK AND RATTLE TROUBLE DIAGNOSES

Work Flow

INFOID:000000005236647

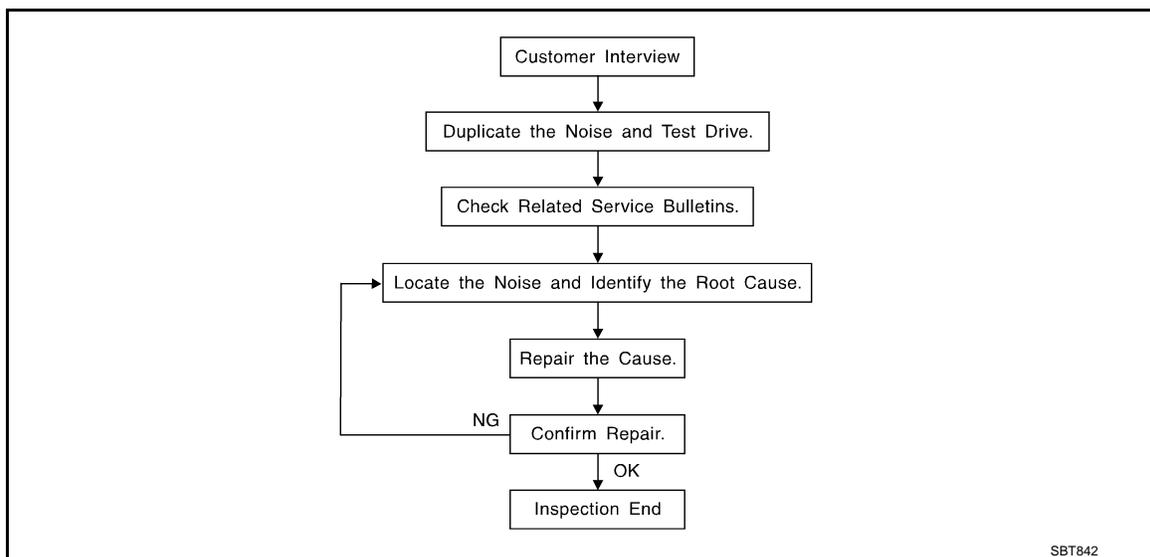

CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any of customer's comments; refer to [SE-76, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, perform a diagnosis and repair the noise that the customer is concerned about. This can be accomplished by performing a cruise test on the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak – (Like tennis shoes on a clean floor)
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces = higher pitch noise/softer surfaces = lower pitch noises/edge to surface = chirping
- Creak – (Like walking on an old wooden floor)
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle – (Like shaking a baby rattle)
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock – (Like a knock on a door)
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick – (Like a clock second hand)
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump – (Heavy, muffled knock noise)
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz – (Like a bumblebee)
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending up on the person. A noise that a technician may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

DUPLICATE THE NOISE AND TEST DRIVE

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when the repair is reconfirmed.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
 - 2) Tap or push/pull around the area where the noise appears to be coming from.
 - 3) Rev the engine.
 - 4) Use a floor jack to recreate vehicle "twist".
 - 5) At idle, apply engine load (electrical load, half-clutch on M/T models, drive position on A/T models).
 - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
 - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis ear: J-39570, Engine ear and mechanics stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
 - Removing the components in the area that is are suspected to be the cause of the noise.
Do not use too much force when removing clips and fasteners, otherwise clips and fastener can be broken or lost during the repair, resulting in the creation of new noise.
 - Tapping or pushing/pulling the component that is are suspected to be the cause of the noise.
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
 - Feeling for a vibration by hand by touching the component(s) that is are suspected to be the cause of the noise.
 - Placing a piece of paper between components that are suspected to be the cause of the noise.
 - Looking for loose components and contact marks.
Refer to [SE-74. "Inspection Procedure"](#).

REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
 - Separate components by repositioning or loosening and retightening the component, if possible.
 - Insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A Nissan Squeak and Rattle Kit (J-43980) is available through the authorized Nissan Parts Department.

CAUTION:

Never use excessive force as many components are constructed of plastic and may be damaged.

NOTE:

Always check with the Parts Department for the latest parts information.

The following materials are contained in the Nissan Squeak and Rattle Kit (J-43980). Each item can be ordered separately as needed.

URETHANE PADS [1.5 mm (0.059 in) thick]

Insulates connectors, harness, etc.

76268-9E005: 100 × 135 mm (3.94 × 5.31 in)/76884-71L01: 60 × 85 mm (2.36 × 3.35 in)/76884-71L02: 15 × 25 mm (0.59 × 0.98 in)

INSULATOR (Foam blocks)

Insulates components from contact. Can be used to fill space behind a panel.

73982-9E000: 45 mm (1.77 in) thick, 50 × 50 mm (1.97 × 1.97 in)/73982-

50Y00: 10 mm (0.39 in) thick, 50 × 50 mm (1.97 × 1.97 in)

INSULATOR (Light foam block)

80845-71L00: 30 mm (1.18 in) thick, 30 × 50 mm (1.18 × 1.97in)

FELT CLOTHTAPE

Used to insulate where movement does not occur. Ideal for instrument panel applications.

68370-4B000: 15 × 25 mm (0.59 × 0.98 in) pad/68239-13E00: 5 mm (0.20 in) wide tape roll

The following materials, not found in the kit, can also be used to repair squeaks and rattles.

UHMW (TEFLON) TAPE

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

Insulates where slight movement is present. Ideal for instrument panel applications.

SILICONE GREASE

Used in place of UHMW tape that is be visible or does not fit. Will only last a few months.

SILICONE SPRAY

Used when grease cannot be applied.

DUCT TAPE

Used to eliminate movement.

CONFIRM THE REPAIR

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

Inspection Procedure

INFOID:000000005236648

Refer to Table of Contents for specific component removal and installation information.

INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

1. The cluster lid A and instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar garnish
4. Instrument panel to windshield
5. Instrument panel mounting pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicon spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

CAUTION:

Never use silicone spray to isolate a squeak or rattle. If the area is saturated with silicone, the recheck of repair becomes impossible.

CENTER CONSOLE

Components to pay attention to include:

1. Shifter assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

DOORS

Pay attention to the following:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. The areas can usually be insulated with felt cloth tape or insulator foam blocks from the Nissan Squeak and Rattle Kit (J-43980) to repair the noise.

TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the customer.

In addition look for the following:

1. Trunk lid dumpers out of adjustment
2. Trunk lid striker out of adjustment
3. The trunk lid torsion bars knocking together
4. A loose license plate or bracket

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sunvisor shaft shaking in the holder
3. Front or rear windshield touching headlining and squeaking

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

SEATS

When isolating seat noise it's important to note the position the seats in and the load placed on the seat when the noise occurs. These conditions should be duplicated when verifying and isolating the cause of the noise.

Cause of seat noise include:

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

Causes of transmitted underhood noise include:

1. Any component mounted to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator mounting pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine RPM or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

Diagnostic Worksheet

INFOID:000000005236649







SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

Dear Infiniti Customer:

We are concerned about your satisfaction with your Infiniti vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your Infiniti right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service consultant or technician to ensure we confirm the noise you are hearing.

I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

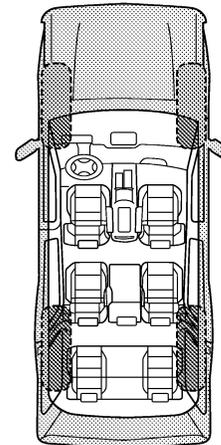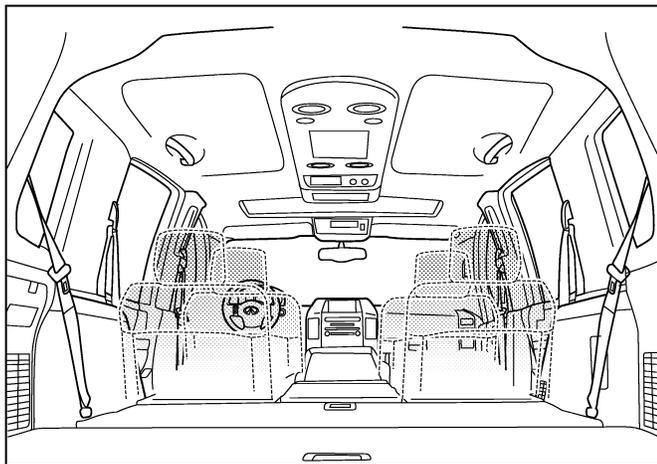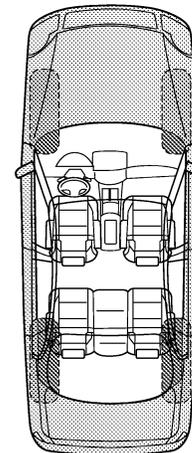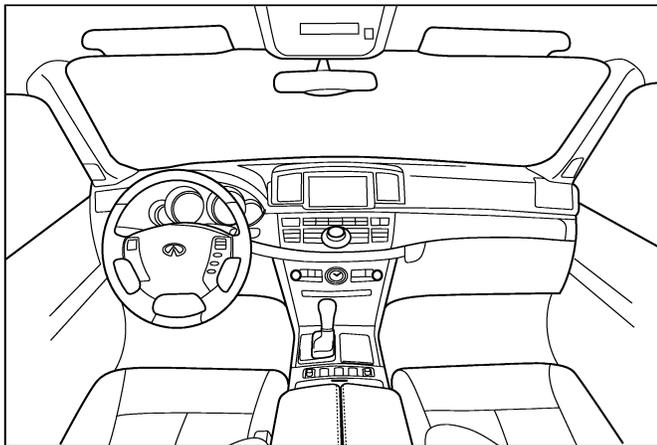

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

PIIB8741E

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- | | |
|---|--|
| <input type="checkbox"/> anytime | <input type="checkbox"/> after sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning | <input type="checkbox"/> when it is raining or wet |
| <input type="checkbox"/> only when it is cold outside | <input type="checkbox"/> dry or dusty conditions |
| <input type="checkbox"/> only when it is hot outside | <input type="checkbox"/> other: |

III. WHEN DRIVING:

- through driveways
- over rough roads
- over speed bumps
- only about ____ mph
- on acceleration
- coming to a stop
- on turns: left, right or either (circle)
- with passengers or cargo
- other: _____
- after driving ____ miles or ____ minutes

IV. WHAT TYPE OF NOISE

- squeak (like tennis shoes on a clean floor)
- creak (like walking on an old wooden floor)
- rattle (like shaking a baby rattle)
- knock (like a knock at the door)
- tick (like a clock second hand)
- thump (heavy, muffled knock noise)
- buzz (like a bumble bee)

TO BE COMPLETED BY DEALERSHIP PERSONNEL

Test Drive Notes:

	YES	NO	Initials of person performing
Vehicle test driven with customer	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise verified on test drive	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise source located and repaired	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Follow up test drive performed to confirm repair	<input type="checkbox"/>	<input type="checkbox"/>	_____

VIN: _____ Customer Name: _____
W.O.# _____ Date: _____

This form must be attached to Work Order

PIIB8742E

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005236650

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:000000005236651

NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

For vehicle with steering lock unit, if the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the operation procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Turn the push-button ignition switch to ACC position.
(At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.

PRECAUTIONS

< PRECAUTION >

5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT-III.

Service Notice

INFOID:000000005236652

- When removing or installing various parts, place a cloth or padding onto the vehicle body to prevent scratches.
- Handle trim, molding, instruments, grille, etc. carefully during removing or installing. Be careful not to oil or damage them.
- Apply sealing compound where necessary when installing parts.
- When applying sealing compound, be careful that the sealing compound does not protrude from parts.
- When replacing any metal parts (for example body outer panel, members, etc.), be sure to take rust prevention measures.

Precaution for Work

INFOID:000000005236653

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and keep them.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After re-installation is completed, be sure to check that each part works normally.
- Follow the steps below to clean components.
 - Water soluble foul: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the fouled area.
Then rub with a soft and dry cloth.
 - Oily foul: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the fouled area.
Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.
- Never use organic solvent such as thinner, benzene, alcohol, and gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

PREPARATION

< PREPARATION >


PREPARATION

PREPARATION

Special Service Tool


INFOID:000000005236654

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

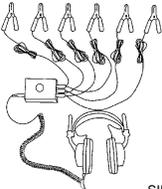Tool number (Kent-Moore No.) Tool name	Description
<p>(J39570) Chassis ear</p>  <p>SIIA0993E</p>	<p>Locates the noise</p>
<p>(J43980) NISSAN Squeak and Rattle Kit</p>  <p>SIIA0994E</p>	<p>Repairs the cause of noise</p>

Commercial Service Tool

INFOID:000000005236655

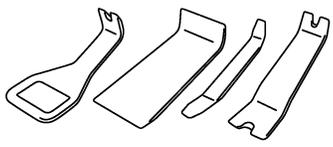Tool name	Description
<p>Engine ear</p>  <p>SIIA0995E</p>	<p>Locates the noise</p>
<p>Remover tool</p>  <p>PIIB7923J</p>	<p>Removes clips, pawls and metal clips</p>

FRONT SEAT

< REMOVAL AND INSTALLATION >


REMOVAL AND INSTALLATION

FRONT SEAT

Exploded View

INFOID:000000005236656

DRIVER'S SEAT

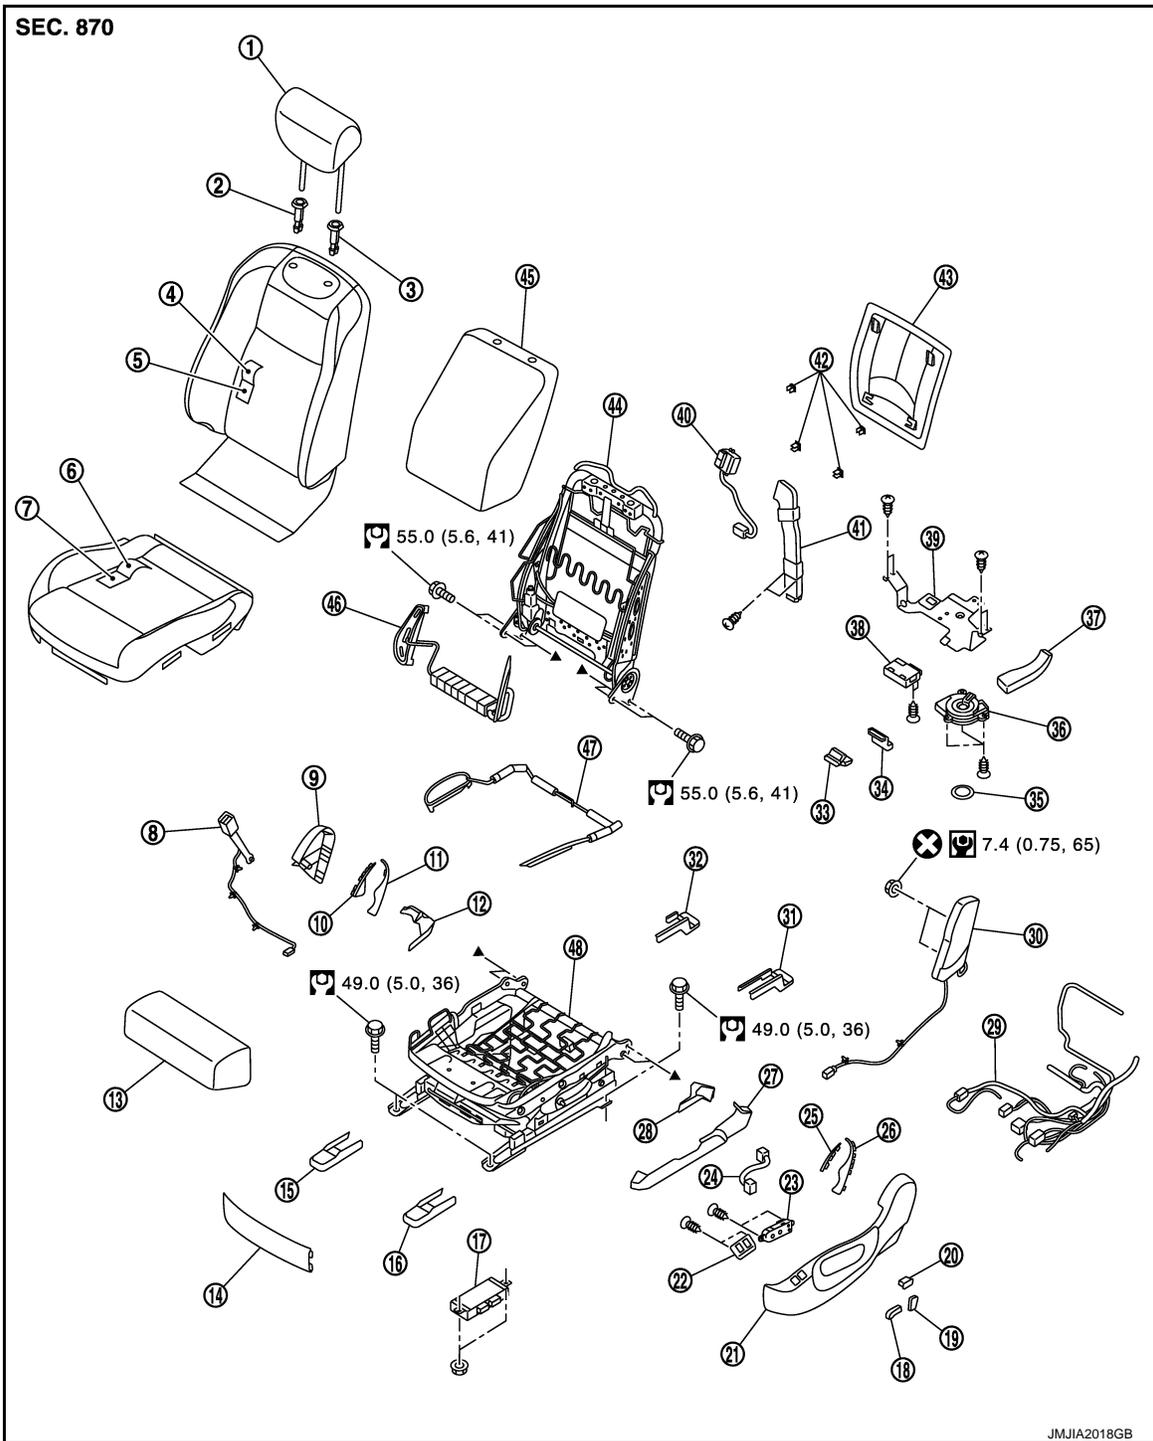

- | | | |
|---------------------|---------------------------|--|
| 1. Headrest | 2. Headrest holder (free) | 3. Headrest holder (locked) |
| 4. Seatback trim | 5. Seatback pad | 6. Seat cushion trim |
| 7. Seat cushion pad | 8. Seat belt buckle | 9. Seat cushion inner finisher outside |

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

FRONT SEAT

< REMOVAL AND INSTALLATION >


- | | | |
|--|---|---|
| 10. Seat cushion inner finisher inside (front) | 11. Seat cushion inner finisher inside (rear) | 12. Seat cushion inner lower finisher |
| 13. Seat cushion pad (front) | 14. Seat cushion front finisher | 15. Front inner slide cover |
| 16. Front outer slide cover | 17. Seat control unit | 18. Seat slide and lifter switch knob |
| 19. Seat reclining switch knob | 20. Lumbar support switch | 21. Seat cushion outer finisher outside |
| 22. Slide support switch | 23. Seat control switch | 24. Seat switch harness |
| 25. Seat cushion outer finisher inside (front) | 26. Seat cushion outer finisher inside (rear) | 27. Seat cushion outer lower finisher (outside) |
| 28. Seat cushion outer lower finisher (inside) | 29. Seat harness | 30. Side air bag module |
| 31. Rear outer slide cover | 32. Rear inner slide cover | 33. Seat cushion thermal electric device (TED) |
| 34. Seat cushion duct A | 35. Blower filter | 36. Climate controlled seat blower motor |
| 37. Seat cushion duct B | 38. Climate controlled seat control unit | 39. Climate unit bracket |
| 40. Seatback thermal electric device (TED) | 41. Seatback duct | 42. Clip |
| 43. Seatback board | 44. Seatback frame | 45. Seatback silencer |
| 46. Seatback side support bag and unit | 47. Seat cushion side support bag | 48. Seat cushion frame |

Refer to [GI-4, "Components"](#) for symbols in the figure.

PASSENGER'S SEAT

FRONT SEAT

< REMOVAL AND INSTALLATION >

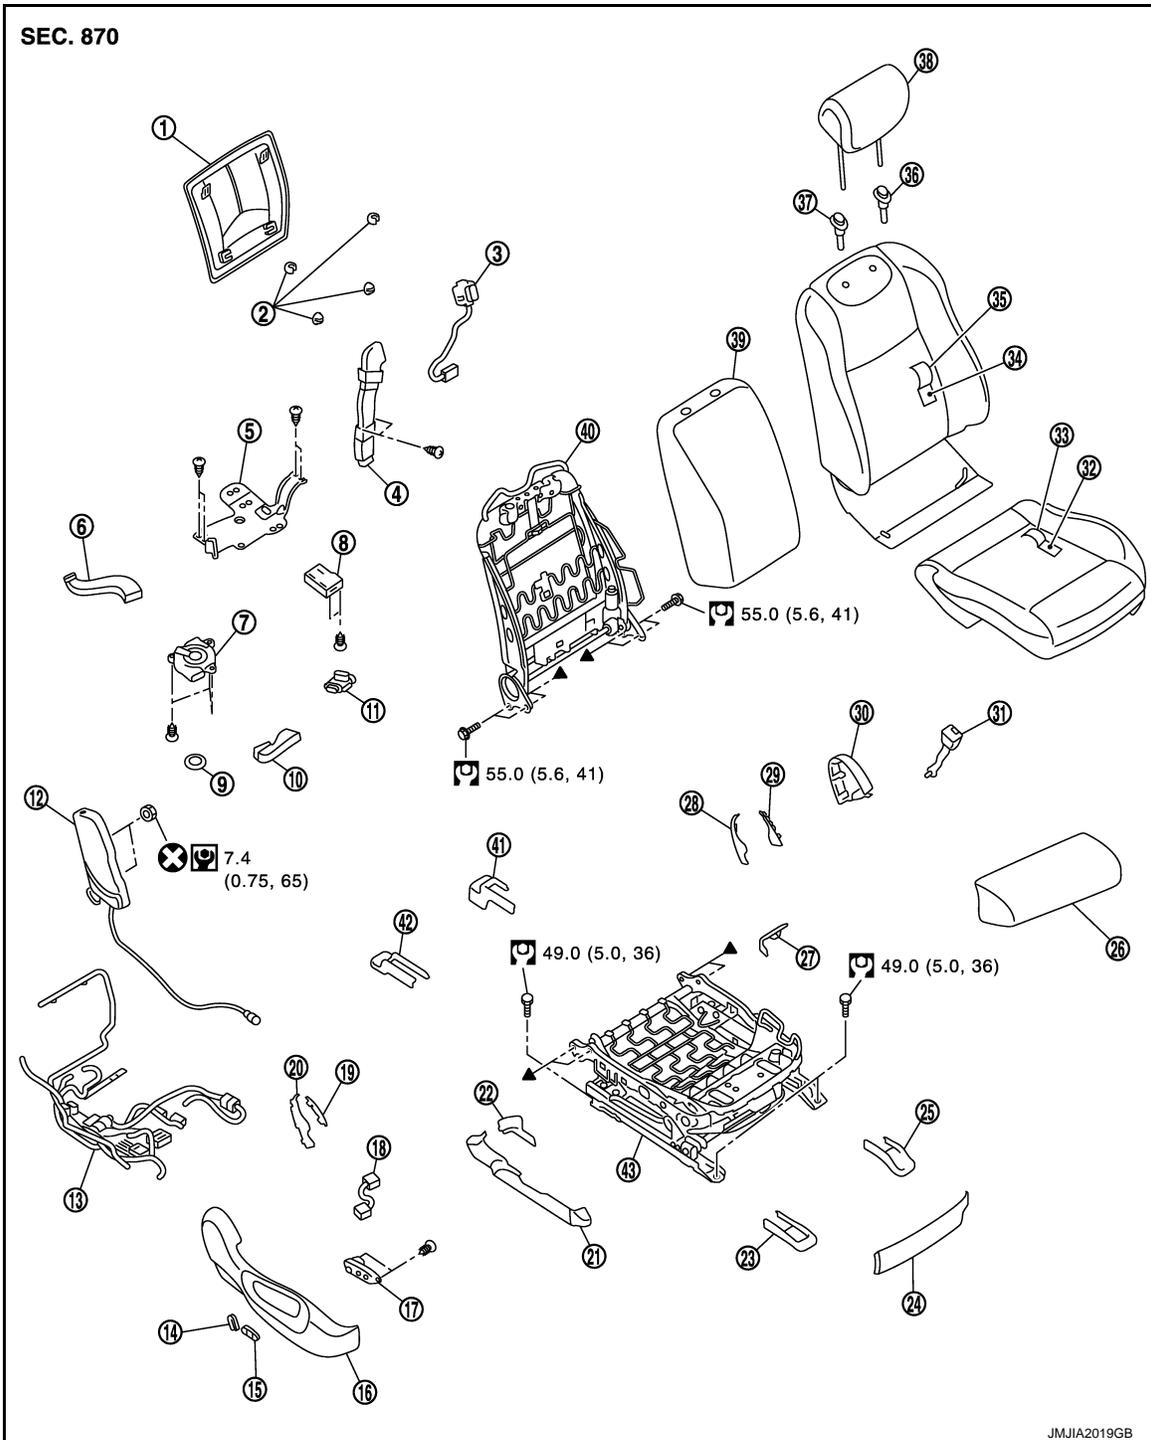

- | | | |
|--|--|---|
| 1. Seatback board | 2. Clip | 3. Seatback thermal electric device (TED) |
| 4. Seatback duct | 5. Climate unit bracket | 6. Seat cushion duct B |
| 7. Climate controlled seat blower motor | 8. Climate controlled seat control unit | 9. Blower filter |
| 10. Seat cushion duct A | 11. Seat cushion thermal electric device (TED) | 12. Side air bag module |
| 13. Seat harness | 14. Seat reclining switch knob | 15. Seat slide and lifter switch knob |
| 16. Seat cushion outer finisher outside | 17. Seat control switch | 18. Seat switch harness |
| 19. Seat cushion outer finisher inside (front) | 20. Seat cushion outer finisher inside (rear) | 21. Seat cushion outer lower finisher (outside) |

A
B
C
D
E
F
G
H
I
SE
K
L
M
N

FRONT SEAT

< REMOVAL AND INSTALLATION >

- | | | |
|--|--|---|
| 22. Seat cushion outer lower finisher (inside) | 23. Front outer slide cover | 24. Seat cushion front finisher |
| 25. Front inner slide cover | 26. Seat cushion pad (front) | 27. Seat cushion inner lower finisher |
| 28. Seat cushion inner finisher inside (rear) | 29. Seat cushion inner finisher inside (front) | 30. Seat cushion inner finisher outside |
| 31. Seat belt buckle | 32. Seat cushion pad | 33. Seat cushion trim |
| 34. Seatback pad | 35. Seatback trim | 36. Headrest holder (locked) |
| 37. Headrest holder (free) | 38. Headrest | 39. Seatback silencer |
| 40. Seatback frame | 41. Rear inner slide cover | 42. Rear outer slide cover |
| 43. Seat cushion frame | | |

Refer to [GI-4. "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000005236657


REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.


1. Remove the headrest.
2. Remove the front slide cover.
 - a. Front outer slide cover
 - Slide the seat to the rear-most position.
 - Pull up the front edge of the front outer slide cover to release the pawls.
 - Slide the front outer slide cover forward to release the pawls.

 : Pawl

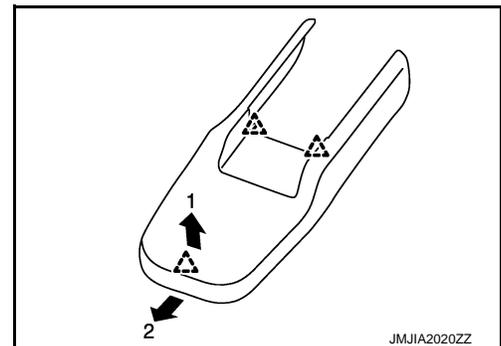


- b. Front inner slide cover
 - Slide the seat to the rear-most position.
 - Pull up the front edge of the front inner slide cover to release the pawls.
 - Slide the front inner slide cover forward to release the pawls.

 : Pawl

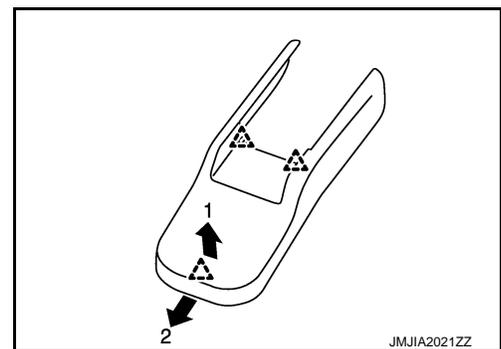

3. Remove the mounting bolts on the front side of the front seat.
4. Remove the rear slide cover.
 - a. Rear outer slide cover
 - Slide the seat to the front-most position.
 - Pull up the rear edge of the rear outer slide cover to release the pawls.
 - Slide the rear outer slide cover to release the pawls.

 : Pawl

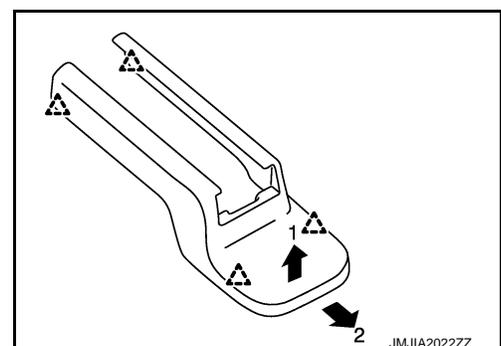


FRONT SEAT

< REMOVAL AND INSTALLATION >

- b. Rear inner slide cover
- Slide the seat to the front-most position.
 - Pull up the rear edge of the rear inner slide cover to release the pawls.
 - Slide the rear inner slide cover rearward to release the pawls.

 : Pawl

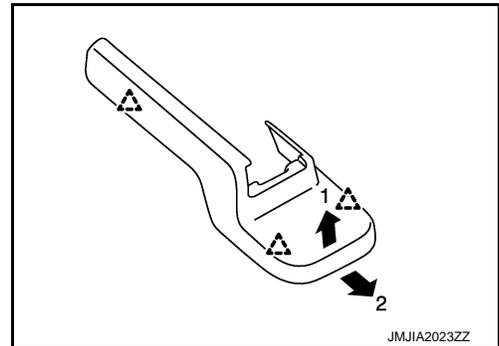

5. Remove the mounting bolts on the rear side of the front seat.
6. Set seatback in a standing position.
7. Disconnect harness connector under the seat and remove harness securing clips.

CAUTION:

Before removal, turn ignition switch OFF, disconnect battery negative terminal and then wait for at least 3 minutes.

8. Remove seat from the vehicle.

CAUTION:

- **When removing and installing, use shop cloths to protect parts from damage.**
- **When removing and installing, 2 workers are required so as to prevent it from dropping.**

INSTALLATION

Install in the reverse order of removal.

CAUTION:

- **Before installation, turn ignition switch OFF, disconnect battery negative terminal and then wait for at least 3 minutes.**
- **Clamp the harness in position.**

NOTE:

- After installing the front seat, perform additional service when removing battery negative terminal (automatic drive positioner model only). Refer to [ADP-8, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement"](#).
- After installing the passenger seat, perform zero point reset. Refer to [SRC-8, "ZERO POINT RESET : Special Repair Requirement"](#).

Disassembly and Assembly

INFOID:000000005236658


SEATBACK

Disassembly

1. Remove the seatback board.
- Remove the clips, and then pull out seatback board.
 - Pull down the seatback board to release the upper pawls.

 : Clip

 : Pawl

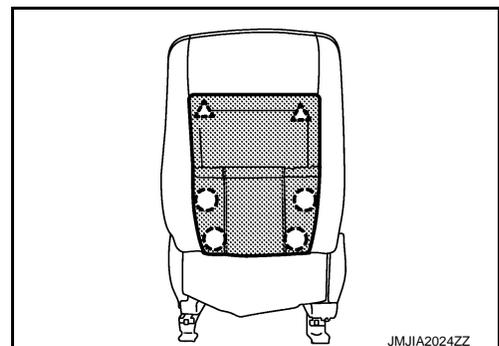

2. Remove the seat cushion outer finisher.


FRONT SEAT

< REMOVAL AND INSTALLATION >



- Remove the clip, metal clips and pawls, and then pull out seat cushion outer finisher.




- Remove the connector clamps, and then disconnect harness connectors.

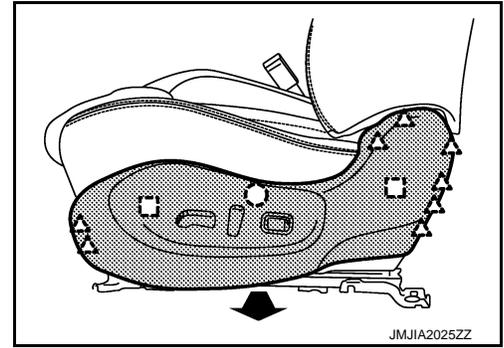


- Remove the seat cushion outer finisher inside (front and rear).
- Remove the seat cushion inner finisher. Remove the metal clip and pawls, and then pull out seat cushion inner finisher.

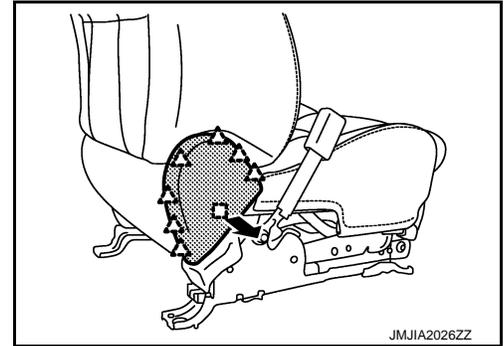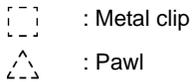

- Remove the seat cushion inner finisher inside (front and rear).
- Remove the seatback trim retainer and seatback trim band from seat cushion frame.
- Remove the seatback assembly.
 - Remove the side air bag module harness (A).

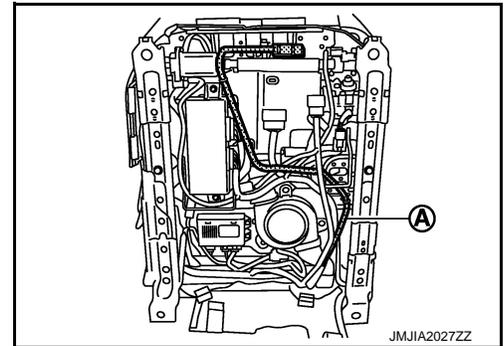


- Cut the seatback duct band (1) of seat cushion under side.
- Disconnect the side support air hose joint (2).

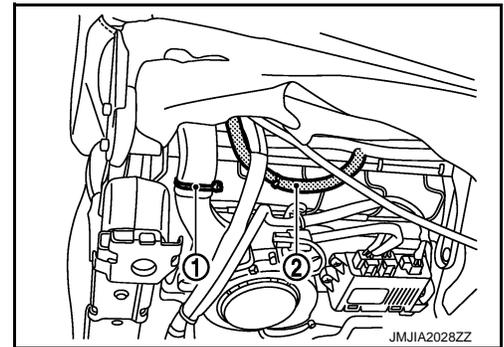


FRONT SEAT

< REMOVAL AND INSTALLATION >

- Disconnect the reclining motor harness connector (B).
- Disconnect the lumbar support unit harness connector (C).
- Disconnect the side support unit harness connector (D).
- Disconnect the seatback thermal electric device (TED) harness connector (E).

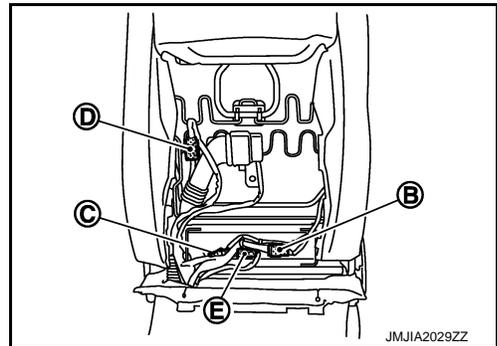

- Pull out harness from the seatback trim and seat cushion trim.
- Remove the seatback assembly mounting bolts (F).

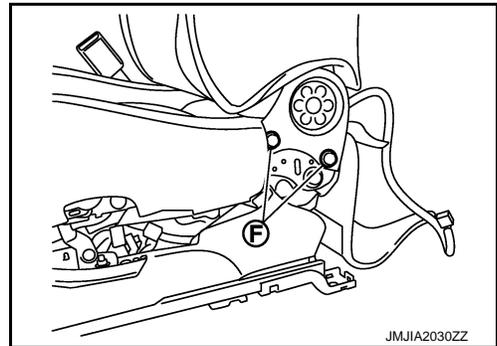


8. Remove the seatback trim and seatback pad.


- Remove the headrest holder.

CAUTION:

Before installing headrest holder check its orientation. (front/rear and right/left)

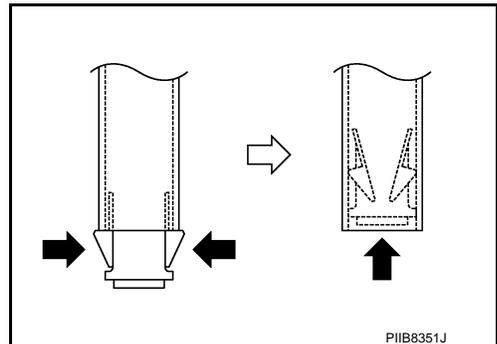

- Remove the side air bag module mounting nuts (A).

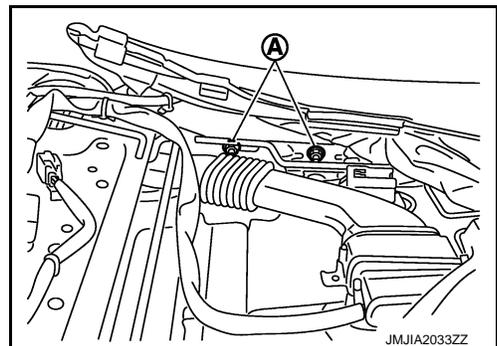

- Remove the seatback trim and seatback pad from the seatback frame.
- Remove the side air bag module.
- Remove the hog rings, and separate the seatback trim and seatback pad.

9. Remove the seatback silencer.

10. Remove the seatback side support bag and unit. (Side support model only.)


A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

FRONT SEAT

< REMOVAL AND INSTALLATION >

- Remove the pawls, and then remove side support bag (1).
- Remove the side support unit (2).

 : Pawl

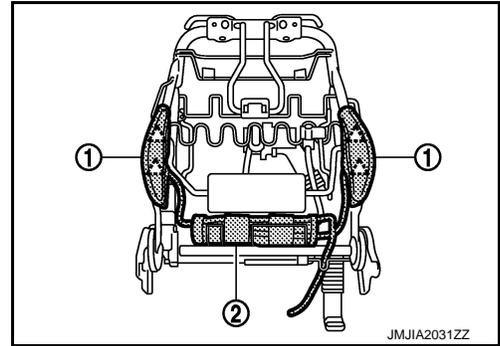

Assembly

Assemble in the reverse order of disassembly.

CAUTION:

Install the hog rings of seatback trim in position, and then securely connect the trim or trim cord with the pad side wire.


SEAT CUSHION

Disassembly

1. Remove the seatback board.
 - Remove the clips, and then pull out seatback board.
 - Pull down the seatback board to release the upper pawls.

 : Clip


 : Pawl

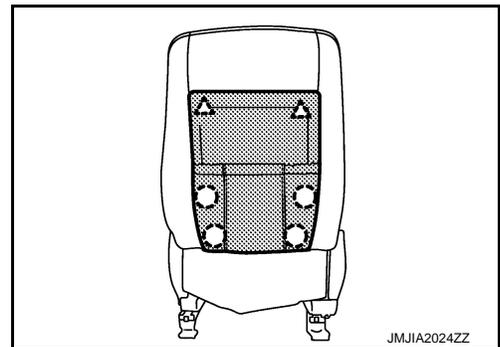

2. Remove the seat cushion front finisher. Remove the metal clips and pawls, pull out seat cushion front finisher.

 : Metal clip

 : Pawl

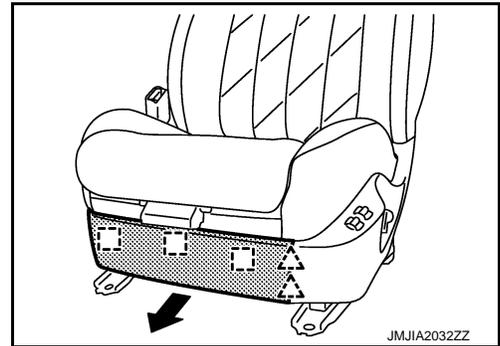


3. Remove the seat cushion outer finisher.
 - Remove the clip, metal clips and pawls, and then pull out seat cushion outer finisher.

 : Clip

 : Metal clip

 : Pawl

- Remove the connector clamps, and then disconnect harness connectors.

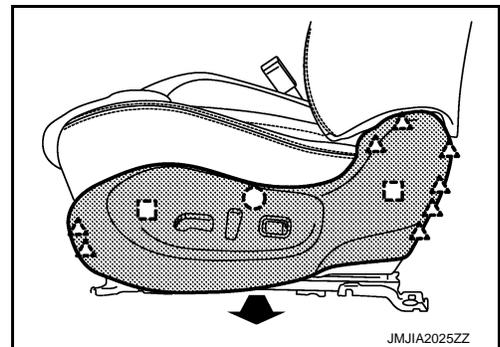

4. Remove the seat cushion outer finisher inside (front and rear).


FRONT SEAT

< REMOVAL AND INSTALLATION >


5. Remove the seat cushion inner finisher.
Remove the metal clip and pawls, and then pull out seat cushion inner finisher.

□ : Metal clip


△ : Pawl

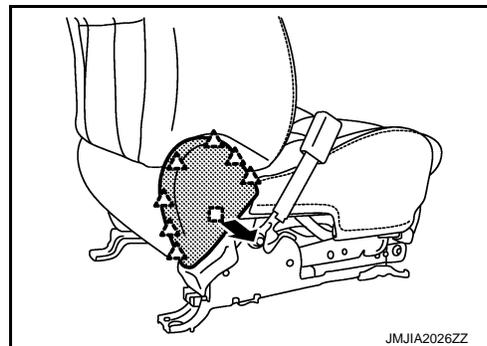


6. Remove the seat cushion inner finisher inside (front and rear).
7. Remove the seatback trim retainer and seatback trim band from seat cushion frame.
8. Remove the seatback assembly.
 - Remove the side air bag module harness (A).

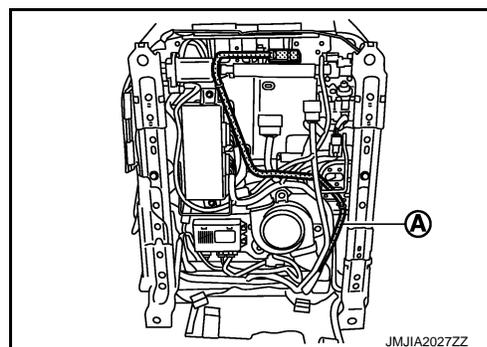

- Cut the seatback duct band (1) of seat cushion under side.
- Disconnect the side support air hose joint (2).

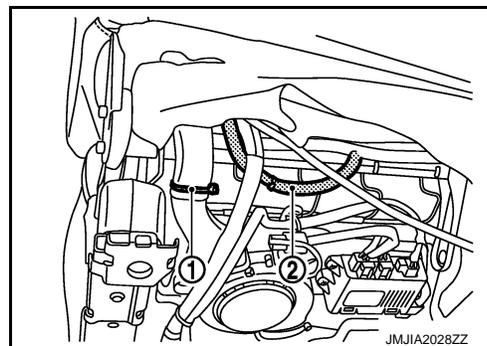

- Disconnect the reclining motor harness connector (B).
- Disconnect the lumbar support unit harness connector (C).
- Disconnect the side support unit harness connector (D).
- Disconnect the thermal electric device (TED) harness connector (E).

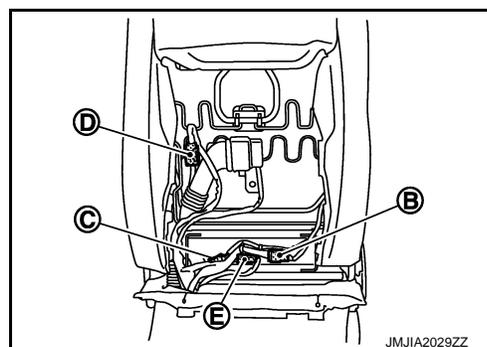


- Pull out harness from the seatback trim and seat cushion trim.

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P


FRONT SEAT

< REMOVAL AND INSTALLATION >


- Remove the seatback assembly mounting bolts (F).

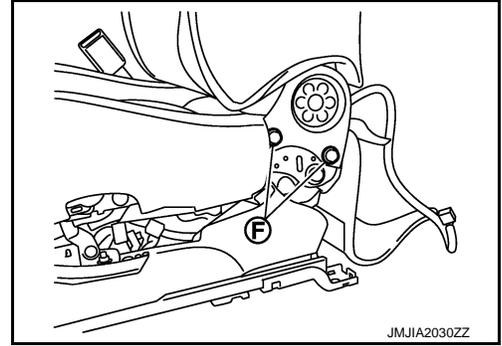


9. Remove the seat belt buckle. Refer to [SB-8. "SEAT BELT BUCKLE : Removal and Installation"](#).
10. Remove the seat cushion pad (front). (Thigh extension model only.)
 - Remove the retainer.
 - Remove the seat cushion pad (front).

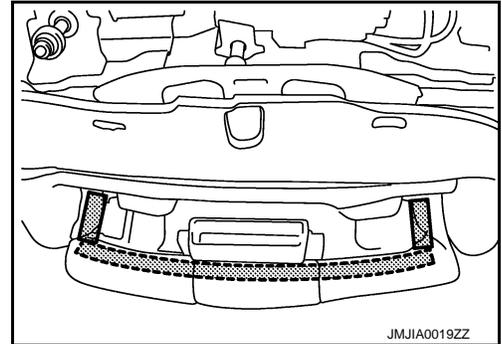

11. Remove the seat cushion trim and seat cushion pad.
 - Remove the seat cushion trim wire (1) from the hook (2). (Thigh extension model only.)

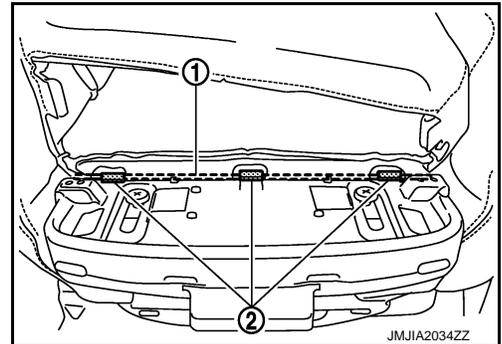

- Remove the clip (A). (Thigh extension model only.)

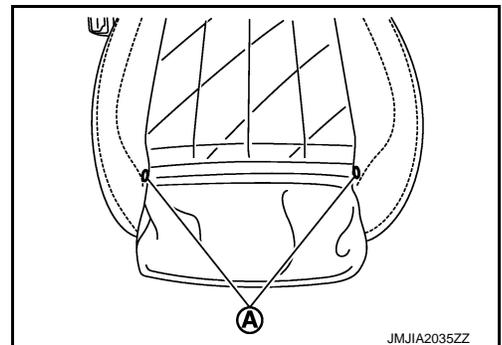


- Remove the seat cushion retainer.
 - Disconnect the seat cushion heater unit harness connector.
 - Remove the hog rings, and separate the seat cushion trim and seat cushion pad.
12. Remove the seat cushion side support bag. (Side support model only.)
 - Remove the hose clamp.

FRONT SEAT

< REMOVAL AND INSTALLATION >

- Remove the pawls, and then remove side support bag (1).


 : Pawl

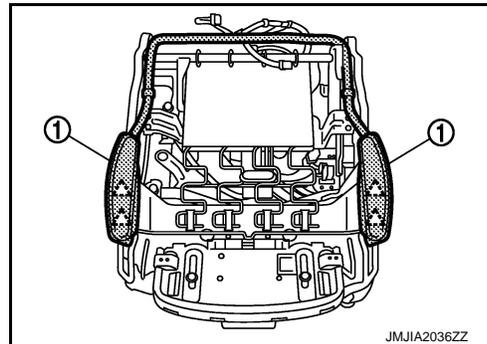

13. Remove the metal clips and pawl, and then pull out seat cushion outer lower finisher outside (1) and inside (2).


 : Metal clip

 : Pawl

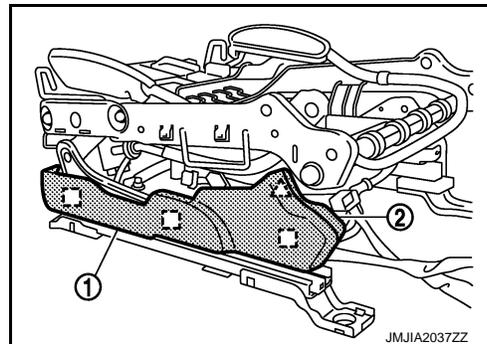

14. Remove the seat cushion inner lower finisher.

 : Metal clip

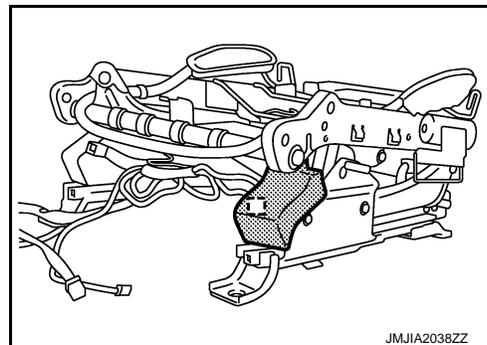

15. Remove the driver seat control unit (Automatic drive positioner model only). Refer to [ADP-215. "Removal and Installation"](#).

Assembly

Assemble in the reverse order of disassembly.


CAUTION:

Install the hog rings of seat cushion trim in position, and then securely connect the trim or trim cord with the pad side wire.

CLIMATE CONTROLLED SEAT UNIT

Disassembly


1. Remove the seatback duct and seatback thermal electric device (TED). Remove the screws (A), and then cut the band (1).

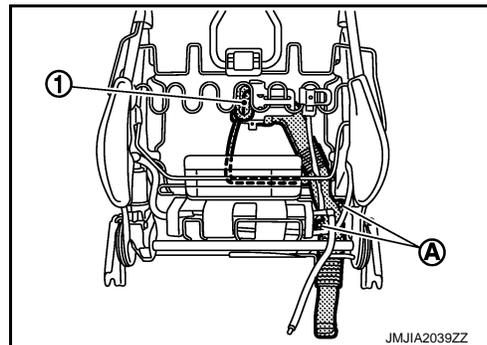


FRONT SEAT

< REMOVAL AND INSTALLATION >

2. Remove the climate controlled seat control unit.
 - Disconnect the harness connectors (A).
 - Remove the climate controlled seat control unit mounting screws (B).

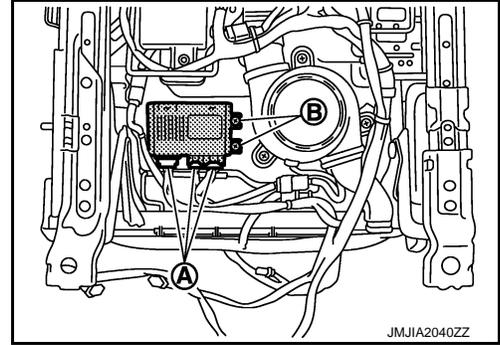

3. Remove the seat cushion duct, seat cushion thermal electric device (TED) and climate controlled seat brower motor.
 - Disconnect the harness connectors (A).
 - Remove the thermal electric device (TED) mounting screw (B).
 - Remove the climate controlled seat brower motor mounting screws (C).

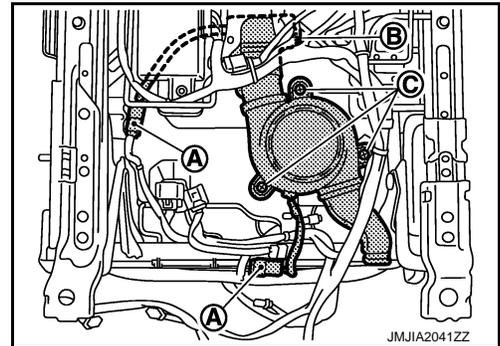

Assembly

Assemble in the reverse order of disassembly.

REAR SEAT

< REMOVAL AND INSTALLATION >

- | | | |
|----------------------------------|---|--------------------------------|
| 10. Armrest lid assembly | 11. Cup holder | 12. Spacer |
| 13. Armrest strap | 14. Armrest pad and frame assembly | 15. Armrest hinge cover (RH) |
| 16. Armrest bracket | 17. Rear center device cover | 18. Seat cushion hook |
| 19. Seat cushion pad | 20. Seat cushion trim | 21. Rear center back bracket |
| 22. Seat belt guide (upper) | 23. Seat belt guide (lower) | 24. Seat belt finisher |
| 25. Center seat belt retractor | 26. Center seat belt retractor cover | 27. Headrest |
| 28. Headrest holder (free) | 29. Headrest holder (locked) | 30. Seatback trim |
| 31. Seatback pad | 32. Seatback frame | 33. Seatback hinge outer cover |
| 34. Seatback hinge | 35. Armrest hinge cover (LH) | 36. Reclining device (LH) |
| 37. Reclining device inner cover | 38. Reclining device inner cover inside | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000005236660


REMOVAL

CAUTION:

- When removing and installing, use shop cloths to protect parts from damage.
- Always remove seat back while the reclining device is in the locked condition. Never release the locked condition after removing seat back.


1. Remove the seat cushion.

- Pull the lock lever (1) at the front bottom of the seat cushion forward (1 for each side), and pull the seat cushion upward to release the wire (2) from the seat cushion hook. Then pull the seat cushion forward the remove
- Remove the seat cushion from vehicle.

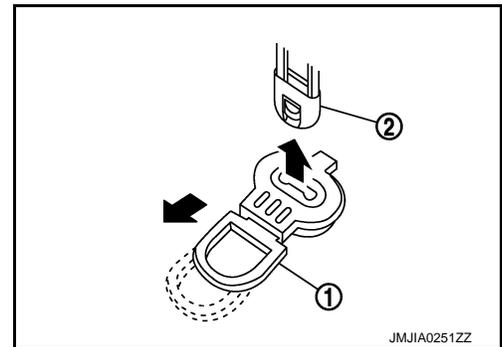

2. Remove the seatback (RH).

- Remove the rear seat belt inner anchor. Refer to [SB-11, "SEAT BELT RETRACTOR : Removal and Installation"](#).
- Remove the LATCH system. Refer to [SB-17, "Removal and Installation"](#).
- Remove the seatback control cable (RH). Refer to [SE-101, "Removal and Installation"](#).
- Remove the mounting nuts (A) and bolt (B).

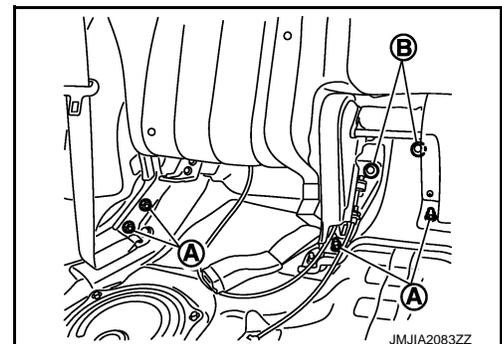


3. Remove the seatback (LH).

- Remove the LATCH system. Refer to [SB-17, "Removal and Installation"](#).
- Remove the seatback control cable (LH). Refer to [SE-101, "Removal and Installation"](#).

REAR SEAT

< REMOVAL AND INSTALLATION >

- Remove the mounting nuts (A) and bolt (B).

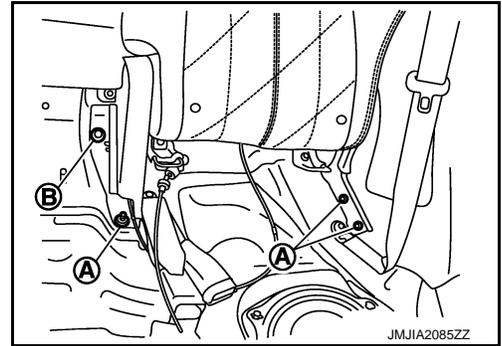


INSTALLATION


CAUTION:

- When removing and installing, use shop cloths to protect parts from damage.
- Always remove seat back while the reclining device is in the locked condition. Never release the locked condition after removing seat back.

1. Install the seatback (LH) mounting bolt (1) and nuts (2), (3), (4).

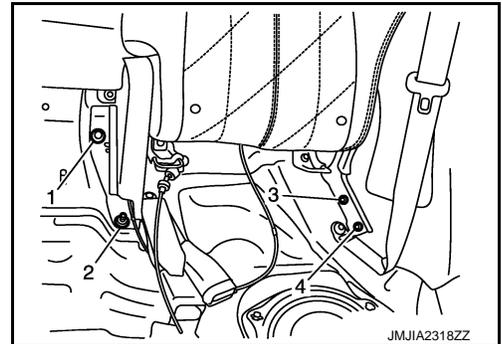

2. Install the seatback (RH) mounting bolts (1), (2) and nuts (3), (4) (5), (6).

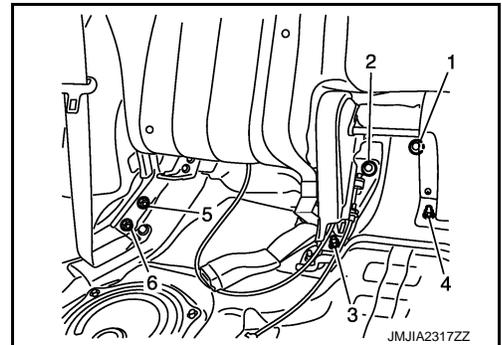

3. Install the seatback control cable. Refer to [SE-101, "Removal and Installation"](#).
4. Install the seat cushion.

Disassembly and Assembly

INFOID:000000005236661

SEATBACK

Disassembly


1. Remove the seatback board.

REAR SEAT

< REMOVAL AND INSTALLATION >

Remove the clips.


 : Clip

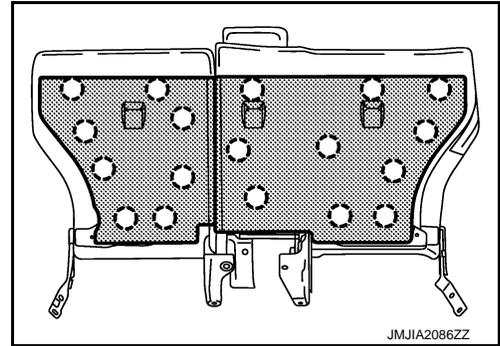


2. Remove the armrest assembly. (RH seat only)
 - Remove the hog lings, and then pull the seatback trim.
 - Remove the metal clips and pawl, and then pull out armrest bracket cover.

 : Metal clip

 : Pawl

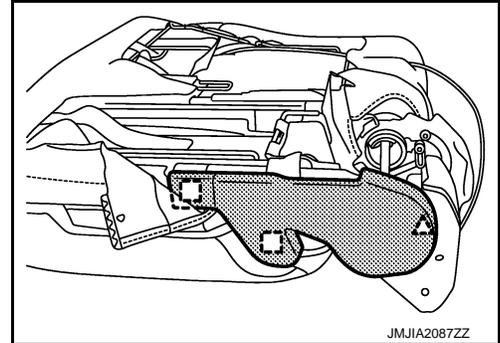


- Remove the mounting bolts (A), and then remove the armrest bracket (1).

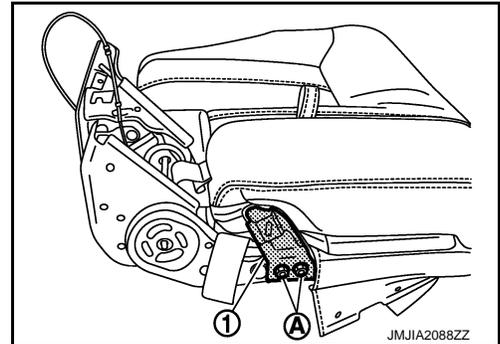

- Remove the armrest assembly.

3. Remove the reclining device cover.
Remove the screws (A) and clip (B), and then reclining device inner cover (1) and reclining device inner cover inside (2).

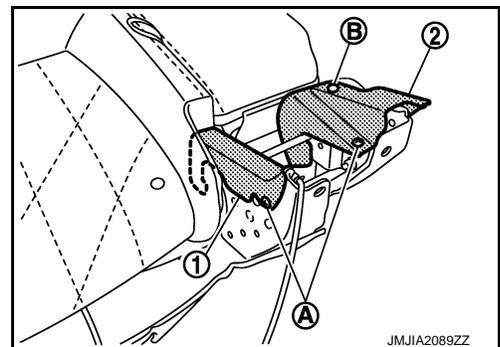


4. Remove the reclining lever knob assembly.


REAR SEAT

< REMOVAL AND INSTALLATION >


- Remove the push nut (1), cable resin part (2) and cable clamp (3).

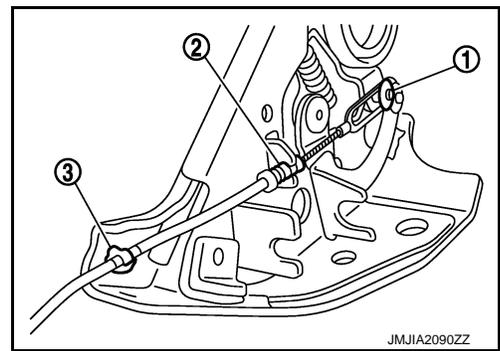


- Remove the hog rings (A) and cable clamp.

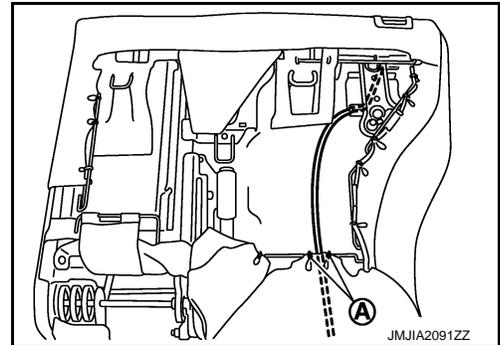

- Remove the reclining lever knob cap.
- Remove the screw (B), and then remove reclining knob lever assembly (4).

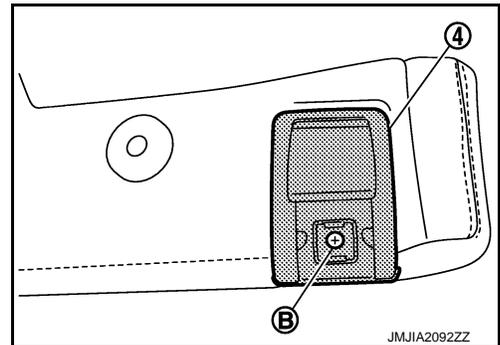

- Remove the seatback trim and pad.
 - Remove the seatback hinge outer cover.
 - Remove the mounting bolt (A) and then remove seatback hinge.

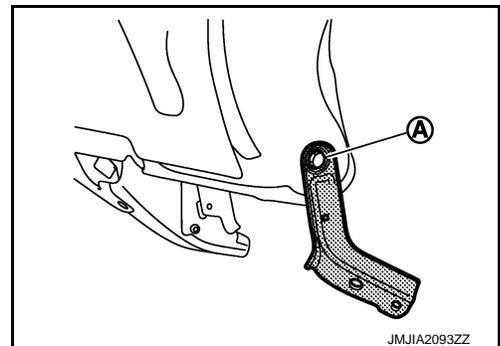

- Remove the hog rings from back side.
- Remove the seatback retainer.
- Remove the seat belt finisher. Refer to [SB-11. "SEAT BELT RETRACTOR : Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P


REAR SEAT

< REMOVAL AND INSTALLATION >

- Remove the headrest holder.


CAUTION:

Before installing headrest holder check its orientation.
(front/rear and right/left)

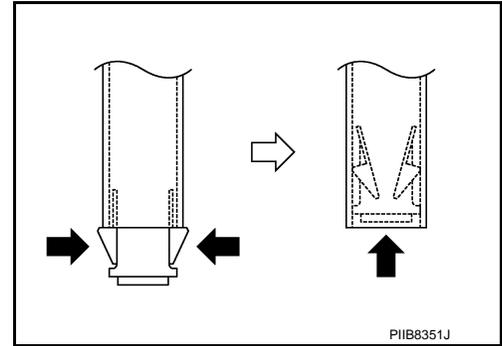


- Remove the seatback trim and pad.
- Remove the hog rings to separate the seatback trim and seatback pad.

6. Remove the reclining device (LH). (LH seat only)
Remove the mounting bolts (A), and then remove reclining device (LH).

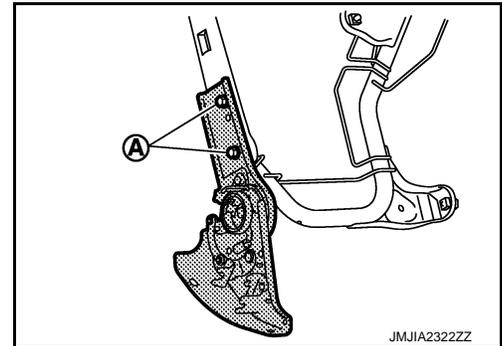

7. Remove the dynamic damper.
Remove the dynamic damper mounting nuts (A).

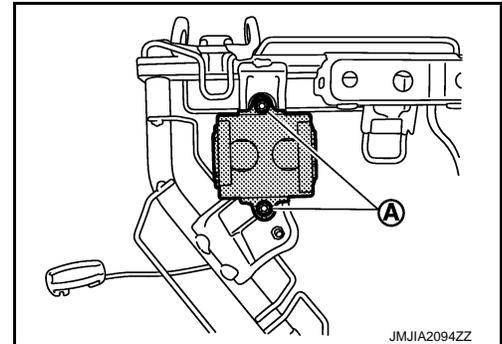


8. Remove the seat belt hook.
9. Remove the rear center seat belt retractor. Refer to [SB-11. "SEAT BELT RETRACTOR : Removal and Installation"](#).

Assembly

Assemble in the reverse order of disassembly.

CAUTION:


- Always slacken cable end and link pin when installing reclining lever knob cable.

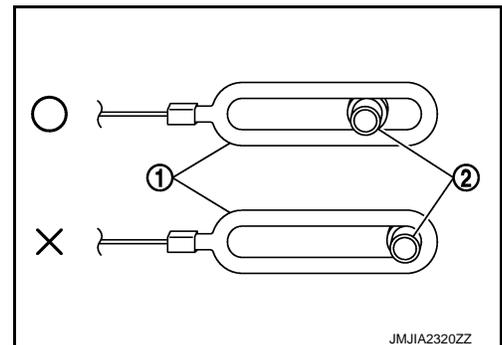

REAR SEAT

< REMOVAL AND INSTALLATION >

- Always install in the position that the reclining device lock can be released, because cable resin part is adjustable (3 stages).

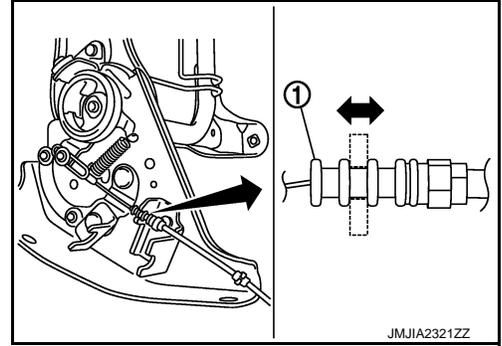

- Install the hog rings of seatback trim in position, and then securely connect the trim or trim cord with the seatback frame.

SEAT CUSHION

Disassembly

Remove the hog rings to separate the trim and pad.

Assembly

Assemble in the reverse order of disassembly.



CAUTION:

Install the hog rings of seat cushion trim in position, and then securely connect the trim or trim cord with the seat cushion pad wire.


ARMREST

Disassembly

1. Remove the cup holder.
Remove the metal clips and pawls.

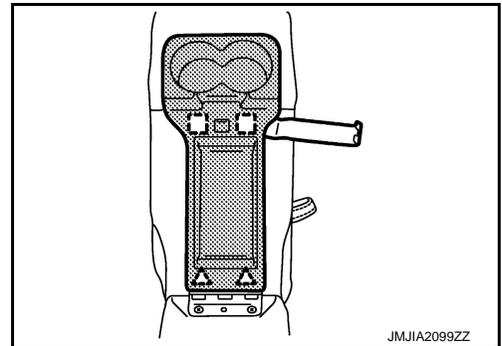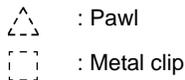

2. Remove the armrest lid assembly.
Remove the mounting screw.
3. Remove the armrest strap.
 - Open the fastener (1), and then pull up armrest trim.

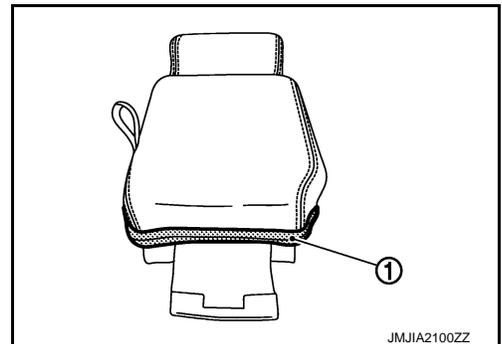


A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

REAR SEAT

< REMOVAL AND INSTALLATION >

- Remove the mounting bolt (A), and then remove armrest strap (2).

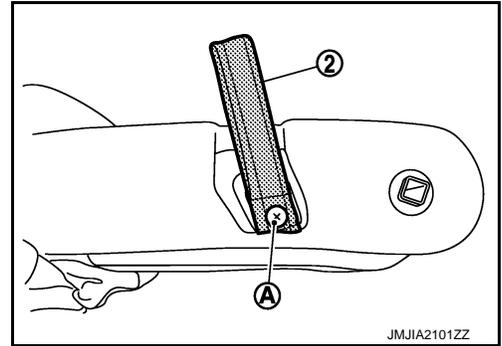

Assembly

Assemble in the reverse order of disassembly.

SEATBACK CONTROL CABLE

< REMOVAL AND INSTALLATION >

SEATBACK CONTROL CABLE

Exploded View

INFOID:000000005236662


Refer to [SE-93, "Exploded View"](#).

Removal and Installation


INFOID:000000005236663

REMOVAL


1. Remove the seat cushion assembly. Refer to [SE-94, "Removal and Installation"](#).
2. Remove the seatback control cable finisher. Refer to [INT-29, "Removal and Installation"](#).
3. Remove the luggage side finisher. Refer to [INT-29, "Removal and Installation"](#).
4. Remove the seatback control cable.
 - Remove the seatback control cable (RH) (1).

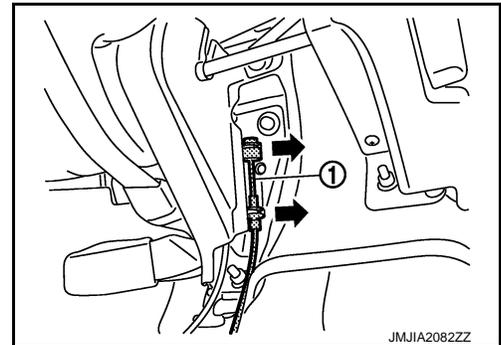

- Remove the seatback control cable (LH) (2).

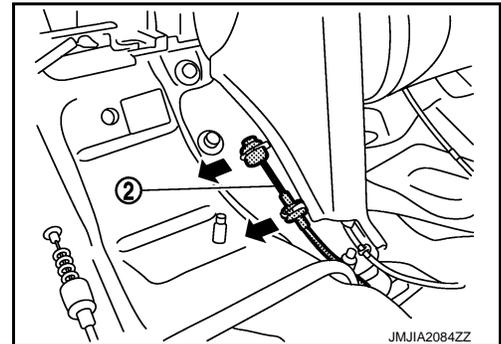

- Remove the mounting bolt (A).

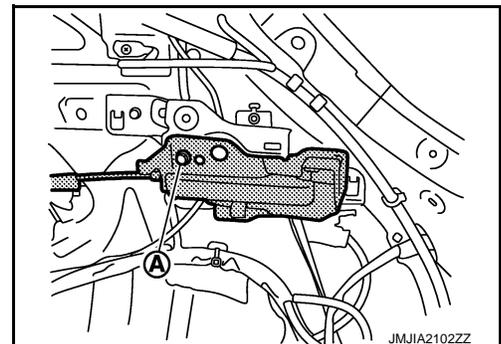


A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

SEATBACK CONTROL CABLE

< REMOVAL AND INSTALLATION >

- Remove the cable clamps (3), and then remove seatback control cable.

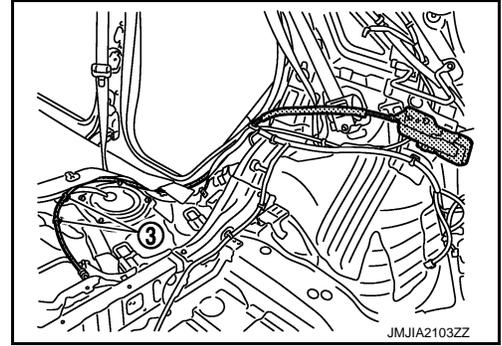


INSTALLATION

Install in the reverse order of removal.

CAUTION:

Always slacken cable end and cable clamp when installing seat back control cable.

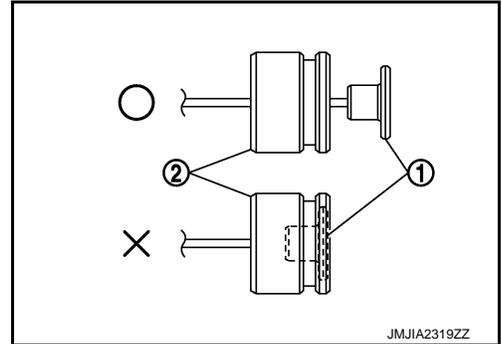

POWER SEAT SWITCH

< REMOVAL AND INSTALLATION >

POWER SEAT SWITCH

Exploded View

INFOID:000000005236664

Refer to [SE-81, "Exploded View"](#).

Removal and Installation


INFOID:000000005236665

REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the seat cushion outer finisher (1). Refer to [SE-84, "Removal and Installation"](#).
2. Remove the screws (A).
3. Remove the power seat switch (2) from the seat cushion outer finisher.

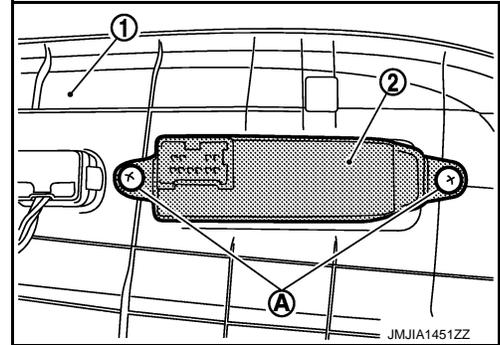

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be careful to clamp the harness to the right place.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE

LUMBAR SUPPORT SWITCH

< REMOVAL AND INSTALLATION >

LUMBAR SUPPORT SWITCH

Exploded View

INFOID:000000005236666

Refer to [SE-81. "Exploded View"](#).

Removal and Installation

INFOID:000000005236667


REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the seat cushion outer finisher (1). Refer to [SE-84. "Removal and Installation"](#).
2. Remove the lumbar support switch (2) from the seat cushion outer finisher with flat-bladed screw driver (A).

 : Pawl

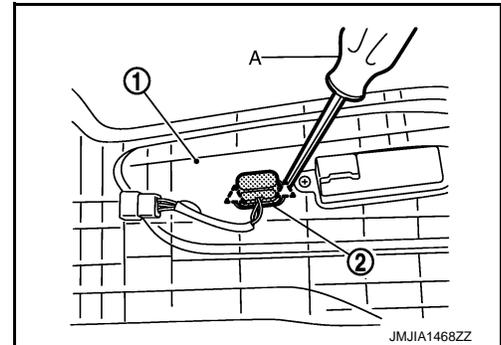

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be careful to clamp the harness to the right place.

SIDE SUPPORT SWITCH

< REMOVAL AND INSTALLATION >

SIDE SUPPORT SWITCH

Removal and Installation


INFOID:000000005236668

REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the seat cushion outer finisher (1). Refer to [SE-84, "Removal and Installation"](#).
2. Remove the screws (A).
3. Remove side support switch (2) from the seat cushion outer finisher.

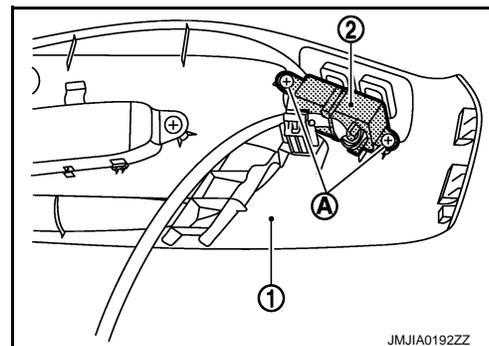

INSTALLATION

Install in the reverse order of removal.

CAUTION:

- **Clamp the harness in position.**

NOTE:

After installing the driver seat, perform additional service when removing battery negative terminal. Refer to [ADP-8, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"](#).

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE

CLIMATE CONTROLLED SEAT SWITCH

< REMOVAL AND INSTALLATION >

CLIMATE CONTROLLED SEAT SWITCH

Exploded View

INFOID:000000005236669

Refer to [IP-22, "Exploded View"](#).

Removal and Installation


INFOID:000000005236670

REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the console upper finisher, console finisher assembly, cup holder assembly and console switch finisher. Refer to [IP-22, "Removal and Installation"](#)
2. Climate controlled seat switch (1) is removed from console switch finisher (2) using flat-bladed screwdriver (A) etc.

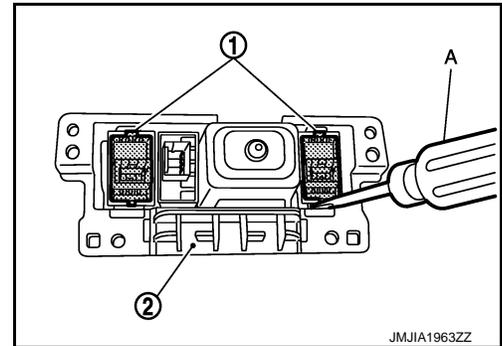

INSTALLATION

Install in the reverse order of removal.

CLIMATE CONTROLLED SEAT BLOWER FILTER

< REMOVAL AND INSTALLATION >

CLIMATE CONTROLLED SEAT BLOWER FILTER

Exploded View

INFOID:000000005236671

Refer to [SE-81. "Exploded View"](#).

Removal and Installation


INFOID:000000005236672

REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Disconnect seat cushion rear fixing belt.
2. Turn blower filter (1) counter clockwise and remove it from climate controlled seat blower motor (2).

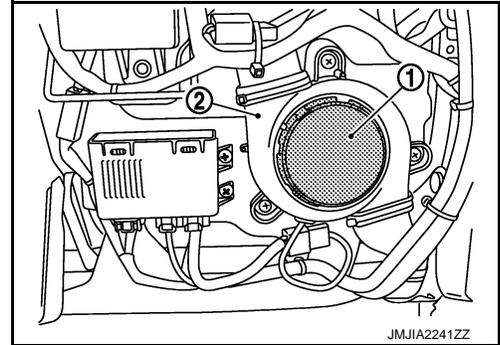

INSTALLATION

Install in the reverse order of removal.

Replacement intervals

Blower filter replacement intervals :Every 24 months or 48,000km

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE