

# SECTION GI

## GENERAL INFORMATION

GI  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

### CONTENTS

<b>HOW TO USE THIS MANUAL .....</b>	<b>3</b>	Precautions For Xenon Headlamp Service .....	23
<b>HOW TO USE THIS MANUAL .....</b>	<b>3</b>	Precautions for Removing Battery Terminal .....	24
Description .....	3	General Precautions .....	24
Terms .....	3	Three Way Catalyst .....	26
Units .....	3	Multiport Fuel Injection System or Engine Control	
Contents .....	3	System .....	26
Relation between Illustrations and Descriptions .....	4	Hoses .....	26
Components .....	4	Engine Oils .....	27
<b>HOW TO FOLLOW TROUBLE DIAGNOSES.....</b>	<b>6</b>	Air Conditioning .....	27
Description .....	6	Fuel .....	28
How to Follow Test Groups in Trouble Diagnosis.....	6	<b>LIFTING POINT .....</b>	<b>29</b>
Key to Symbols Signifying Measurements or Pro-		Commercial Service Tools .....	29
cedures .....	7	Garage Jack and Safety Stand and 2-Pole Lift .....	29
<b>HOW TO READ WIRING DIAGRAMS .....</b>	<b>9</b>	Board-On Lift .....	30
Connector Symbols .....	9	<b>TOW TRUCK TOWING .....</b>	<b>31</b>
Sample/Wiring Diagram -Example- .....	10	Tow Truck Towing .....	31
Connector Information .....	12	Vehicle Recovery (Freeing a Stuck Vehicle) .....	32
<b>ABBREVIATIONS .....</b>	<b>14</b>	<b>VEHICLE INFORMATION .....</b>	<b>34</b>
Abbreviation List .....	14	<b>IDENTIFICATION INFORMATION .....</b>	<b>34</b>
<b>TIGHTENING TORQUE OF STANDARD</b>		Model Variation .....	35
<b>BOLTS .....</b>	<b>19</b>	Information About Identification or Model Code .....	36
Description .....	19	Dimensions .....	38
Tightening Torque Table (New Standard Includ-		Wheels & Tires .....	39
ed) .....	19	<b>BASIC INSPECTION .....</b>	<b>40</b>
<b>RECOMMENDED CHEMICAL PRODUCTS</b>		<b>SERVICE INFORMATION FOR ELECTRICAL</b>	
<b>AND SEALANTS .....</b>	<b>22</b>	<b>INCIDENT .....</b>	<b>40</b>
Recommended Chemical Products and Sealants...	22	Work Flow .....	40
<b>PRECAUTION .....</b>	<b>23</b>	Control Units and Electrical Parts .....	40
<b>PRECAUTIONS .....</b>	<b>23</b>	How to Check Terminal .....	41
Description .....	23	Intermittent Incident .....	44
Precaution for Supplemental Restraint System		Circuit Inspection .....	47
(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-		<b>CONSULT/GST CHECKING SYSTEM .....</b>	<b>52</b>
SIONER" .....	23	Description .....	52
Precaution for Procedure without Cowl Top Cover...	23	CONSULT Function and System Application*1 .....	52

---

CONSULT/GST Data Link Connector (DLC) Circuit .....	53	ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL .....	72
Wiring Diagram - CONSULT/GST CHECKING SYSTEM - .....	54	ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Required Procedure After Battery Disconnection .....	72
<b>INSPECTION AND ADJUSTMENT .....</b>	<b>72</b>		

# HOW TO USE THIS MANUAL

< HOW TO USE THIS MANUAL >

## HOW TO USE THIS MANUAL

### HOW TO USE THIS MANUAL

#### Description

INFOID:0000000011251244

G1

This volume explains "Removal, Disassembly, Installation, Inspection and Adjustment" and "Trouble Diagnoses".

#### Terms

INFOID:0000000011251245

B

- The captions **WARNING** and **CAUTION** warn you of steps that must be followed to prevent personal injury and/or damage to some part of the vehicle.

D

**WARNING** indicates the possibility of personal injury if instructions are not followed.

C

**CAUTION** indicates the possibility of component damage if instructions are not followed.

E

**BOLD TYPED STATEMENTS** except **WARNING** and **CAUTION** give you helpful information.

F

Standard value: Tolerance at inspection and adjustment.

G

Limit value: The maximum or minimum limit value that should not be exceeded at inspection and adjustment.

H

#### Units

INFOID:0000000011251246

I

- The **UNITS** given in this manual are primarily expressed as the SI UNIT (International System of Unit), and alternatively expressed in the metric system and in the yard/pound system.

J

Also with regard to tightening torque of bolts and nuts, there are descriptions both about range and about the standard tightening torque.

K

#### "Example"

L

##### Range

M

**Outer Socket Lock Nut : 59 - 78 N·m (6.0 - 8.0 kg·m, 43 - 58 ft-lb)**

N

##### Standard

O

**Drive Shaft Installation Bolt : 44.3 N·m (4.5 kg·m, 33 ft-lb)**

P

#### Contents

INFOID:0000000011251247

K

- A QUICK REFERENCE INDEX**, a black tab (e.g. **BR**) is provided on the first page. You can quickly find the first page of each section by matching it to the section's black tab.
- THE CONTENTS** are listed on the first page of each section.
- THE TITLE** is indicated on the upper portion of each page and shows the part or system.
- THE PAGE NUMBER** of each section consists of two or three letters which designate the particular section and a number (e.g. "BR-5").
- THE SMALL ILLUSTRATIONS** show the important steps such as inspection, use of special tools, knacks of work and hidden or tricky steps which are not shown in the previous large illustrations.  
Assembly, inspection and adjustment procedures for the complicated units such as the automatic transaxle or transmission, etc. are presented in a step-by-step format where necessary.

# HOW TO USE THIS MANUAL

< HOW TO USE THIS MANUAL >

## Relation between Illustrations and Descriptions


INFOID:0000000011251248

The following sample explains the relationship between the part description in an illustration, the part name in the text and the service procedures.

< Example 1 >

1. Remove return spring (1) from parking pawl (2).


The identifier number of the part name in the text is consistent with the identifier part number in the illustration.

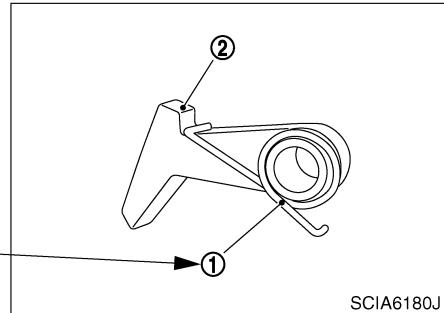

< Example 2 >

- : Vehicle front
- Tighten rear member mounting bolts following the numerical order shown in the illustration.
- Note : View upward

The numbers in the illustration are consistent with the service operation instructions.

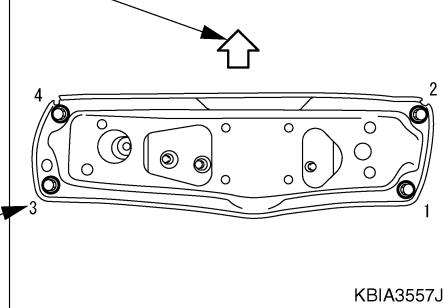

SAIA0519E

## Components

INFOID:0000000011251249

- **THE LARGE ILLUSTRATIONS** are exploded views (see the following) and contain tightening torques, lubrication points, section number of the **PARTS CATALOG** (e.g. SEC. 440) and other information necessary to perform repairs.

The illustrations should be used in reference to service matters only. When ordering parts, refer to the appropriate **PARTS CATALOG**.

Components shown in an illustration may be identified by a circled number. When this style of illustration is used, the text description of the components will follow the illustration.

# HOW TO USE THIS MANUAL

< HOW TO USE THIS MANUAL >

GI

B

C

D

E

F

G

H

I

J

K


L

M

N

O

P

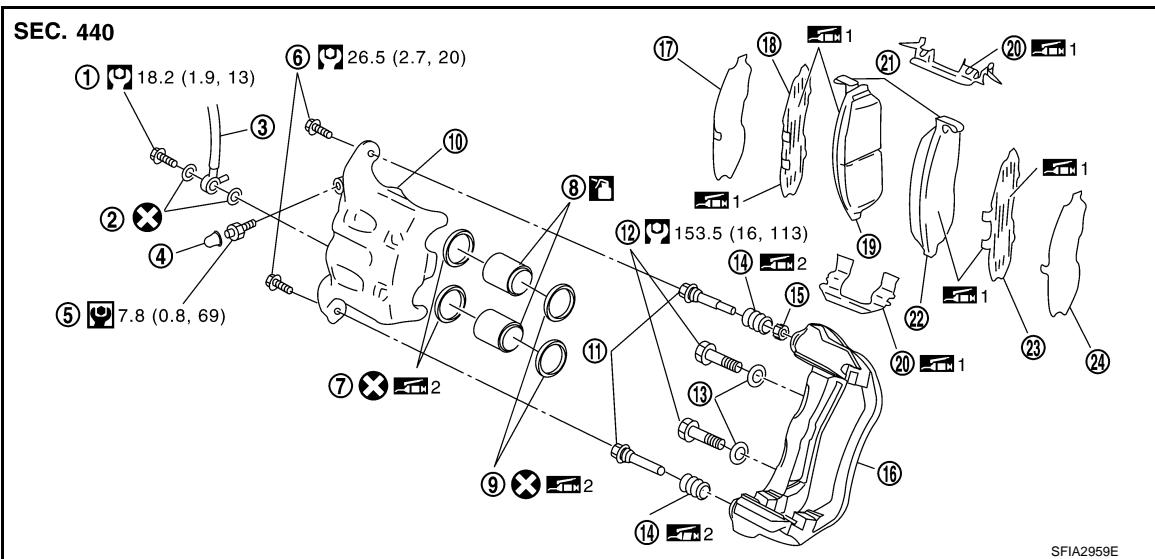

- |                   |                      |                                 |
|-------------------|----------------------|---------------------------------|
| 1. Union bolt     | 2. Copper washer     | 3. Brake hose                   |
| 4. Cap            | 5. Bleed valve       | 6. Sliding pin bolt             |
| 7. Piston seal    | 8. Piston            | 9. Piston boot                  |
| 10. Cylinder body | 11. Sliding pin      | 12. Torque member mounting bolt |
| 13. Washer        | 14. Sliding pin boot | 15. Bushing                     |
| 16. Torque member | 17. Inner shim cover | 18. Inner shim                  |
| 19. Inner pad     | 20. Pad retainer     | 21. Pad wear sensor             |
| 22. Outer pad     | 23. Outer shim       | 24. Outer shim cover            |
- 1: PBC (Poly Butyl Cuprysil) grease    2: Rubber grease or silicone-based grease
- : Brake fluid

Refer to GI section for additional symbol definitions.

## SYMBOLS

SYMBOL	DESCRIPTION		SYMBOL	DESCRIPTION
	Tightening torque The tightening torque specifications of bolts and nuts may be presented as either a range or a standard tightening torque.	: N·m (kg-m, ft-lb)		Always replace after every disassembly.
		: N·m (kg-m, in-lb)		Apply petroleum jelly.
	Should be lubricated with grease. Unless otherwise indicated, use recommended multi-purpose grease.			Apply molybdenum added petroleum jelly.
	Should be lubricated with oil.			Apply ATF.
	Sealing point			Select with proper thickness.
	Sealing point with locking sealant.			Adjustment is required.
	Checking point			

SAIA0749E

# HOW TO FOLLOW TROUBLE DIAGNOSES

< HOW TO USE THIS MANUAL >

## HOW TO FOLLOW TROUBLE DIAGNOSES

### Description

INFOID:0000000011251250


#### NOTICE:

Trouble diagnoses indicate work procedures required to diagnose problems effectively. Observe the following instructions before diagnosing.

- Before performing trouble diagnoses, read the "Work Flow" in each section.
  - After repairs, re-check that the problem has been completely eliminated.
  - Refer to Component Parts and Harness Connector Location for the Systems described in each section for identification/location of components and harness connectors.
  - When checking circuit continuity, ignition switch should be OFF.
  - Refer to the Circuit Diagram for quick pinpoint check.
- If you need to check circuit continuity between harness connectors in more detail, such as when a sub-harness is used, refer to Wiring Diagram in each individual section and Harness Layout in PG section for identification of harness connectors.
- Before checking voltage at connectors, check battery voltage.
  - After accomplishing the Diagnosis Procedures and Electrical Components Inspection, check that all harness connectors are reconnected as they were.

### How to Follow Test Groups in Trouble Diagnosis

INFOID:0000000011251251

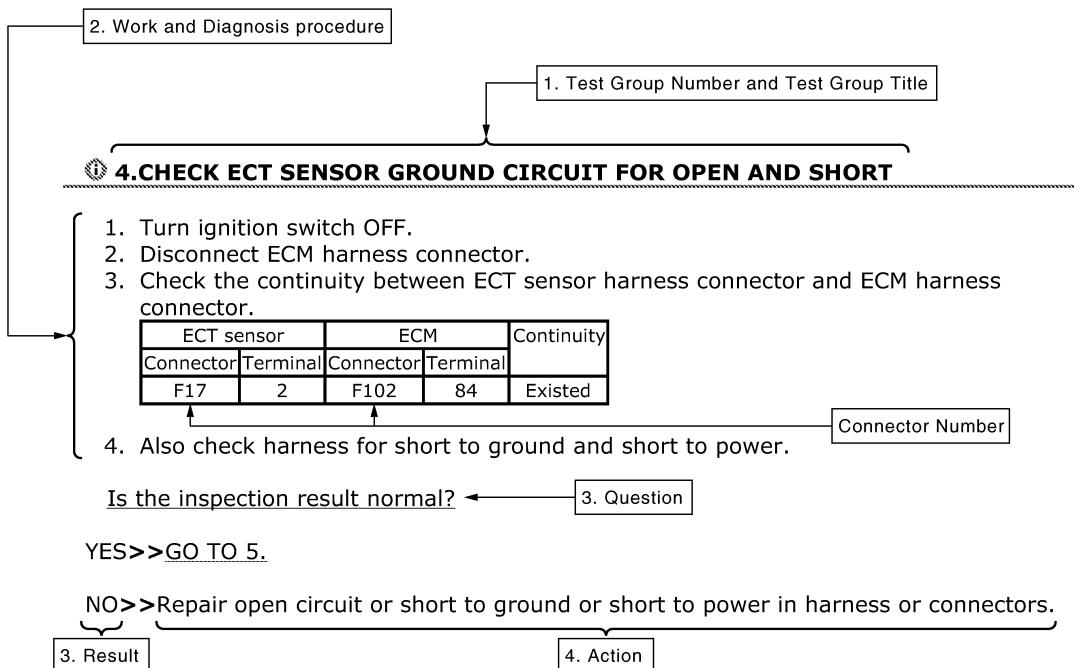

JPAIA0021GB



1. Test group number and test group title
  - Test group number and test group title are shown in the upper portion of each test group.
2. Work and diagnosis procedure
  - Start to diagnose a problem using procedures indicated in enclosed test groups.
3. Questions and results
  - Questions and required results are indicated in test group.
4. Action
  - Next action for each test group is indicated based on result of each question.

# HOW TO FOLLOW TROUBLE DIAGNOSES

< HOW TO USE THIS MANUAL >

## Key to Symbols Signifying Measurements or Procedures

INFOID:000000011251252

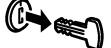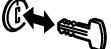SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Check after disconnecting the connector to be measured.		Procedure with Generic Scan Tool. (GST, OBD-II scan tool)
	Check after connecting the connector to be measured.		Procedure without CONSULT or GST
	Insert key into ignition switch.		A/C switch is "OFF".
	Remove key from ignition switch.		A/C switch is "ON".
	Insert and remove key repeatedly.		REC switch is "ON".
	Turn ignition switch to "OFF" position.		REC switch is "OFF".
	Turn ignition switch to "ACC" position.		Fan switch is "ON". (At any position except for "OFF" position)
	Turn ignition switch to "ON" position.		Fan switch is "OFF".
	Turn ignition switch to "START" position.		Apply fuse.
	Turn ignition switch from "OFF" to "ACC" position.		Apply positive voltage from battery with fuse directly to components.
	Turn ignition switch from "ACC" to "ON" position.		
	Turn ignition switch from "ACC" to "OFF" position.		

JPAIA0982GB

GI

B

C

D

E

F

G

H

I

J

K

L

M


N

O

P

# HOW TO FOLLOW TROUBLE DIAGNOSES

< HOW TO USE THIS MANUAL >

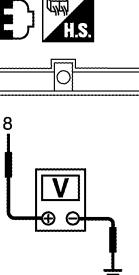SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Turn ignition switch from "OFF" to "ON" position.		Drive vehicle.
	Turn ignition switch from "ON" to "OFF" position.		
	Do not start engine, or check with engine stopped.		Disconnect battery negative cable.
	Start engine, or check with engine running.		Depress brake pedal.
	Apply parking brake.		Release brake pedal.
	Release parking brake.		Depress accelerator pedal.
	Check after engine is warmed up sufficiently.		Release accelerator pedal.
	Voltage should be measured with a voltmeter.	 	Pin terminal check for SMJ type ECM or TCM connectors. For details regarding the terminal arrangement, refer to the "ELECTRICAL UNITS" electrical reference page at the end of the manual.
	Circuit resistance should be measured with an ohmmeter.		
	Current should be measured with an ammeter.		
	Pulse signal should be checked with an oscilloscope.		
	Procedure with CONSULT		
	Procedure without CONSULT		
	Place selector lever in "P" position.		
	Place selector lever in "N" position.		
	Jack up front portion.		
	Jack up rear portion.		
	Inspect under engine room.		
	Inspect under floor.		
	Inspect rear under floor.		

JSAIA1461GB

# HOW TO READ WIRING DIAGRAMS

< HOW TO USE THIS MANUAL >

## HOW TO READ WIRING DIAGRAMS


### Connector Symbols

INFOID:0000000011251253

GI


Most of connector symbols in wiring diagrams are shown from the terminal side.

- Connector symbols shown from the terminal side are enclosed by a single line and followed by the direction mark.
- Connector symbols shown from the harness side are enclosed by a double line and followed by the direction mark.
- Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to PG section, "Description", "HARNESS CONNECTOR".

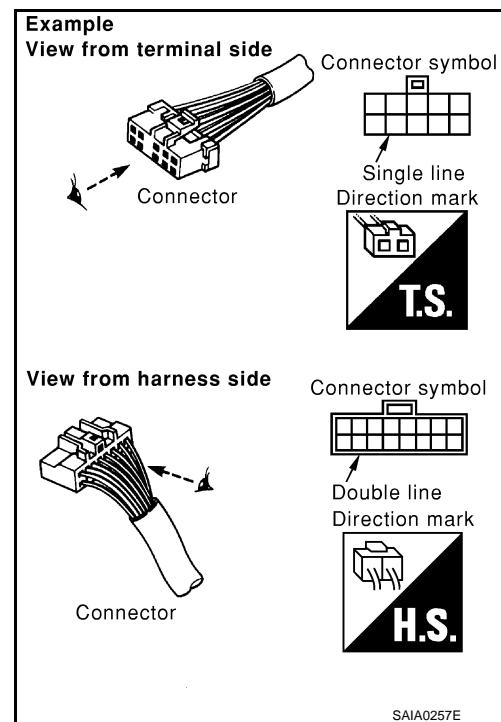

- Male and female terminals

Connector guides for male terminals are shown in black and female terminals in white in wiring diagrams.

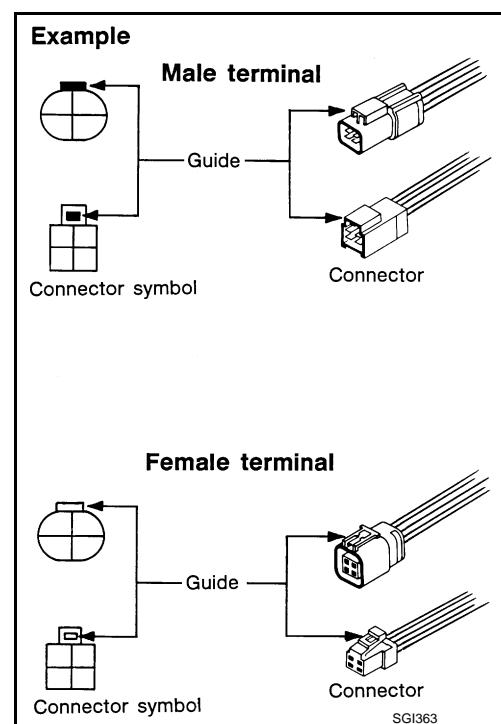

# HOW TO READ WIRING DIAGRAMS


< HOW TO USE THIS MANUAL >

## Sample/Wiring Diagram -Example-

INFOID:000000011251254


Each section includes wiring diagrams.

### EXAMPLE

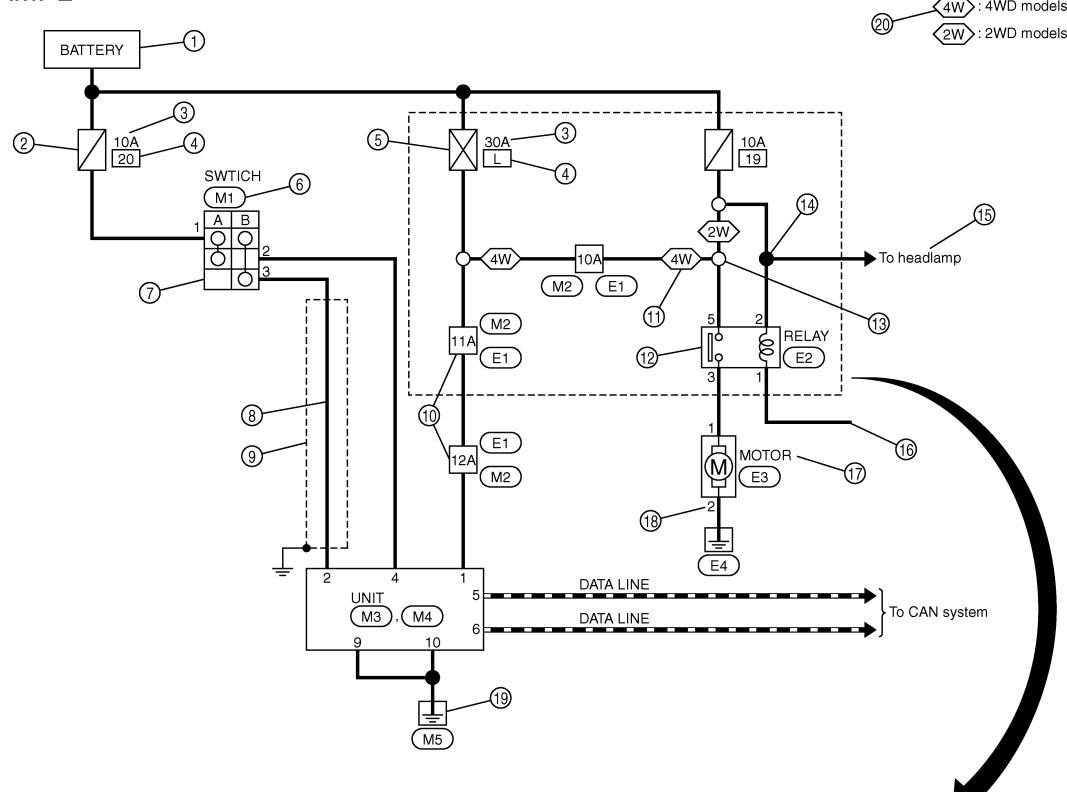

(20) : 4WD models  
(21) : 2WD models

#### Optional splice

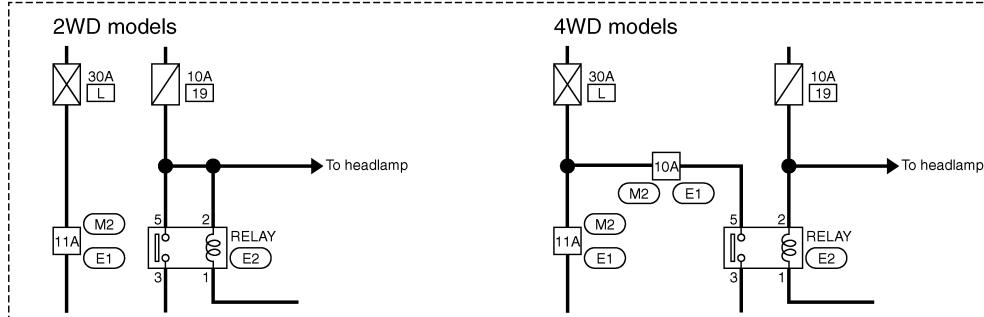

JCAWA0150GB

#### Description

Number	Item	Description
1	Power supply	<ul style="list-style-type: none"> <li>This means the power supply of fusible link or fuse.</li> </ul>
2	Fuse	<ul style="list-style-type: none"> <li>"/" means the fuse.</li> </ul>
3	Current rating of fusible link/fuse	<ul style="list-style-type: none"> <li>This means the current rating of the fusible link or fuse.</li> </ul>
4	Number of fusible link/fuse	<ul style="list-style-type: none"> <li>This means the number of fusible link or fuse location.</li> </ul>
5	Fusible link	<ul style="list-style-type: none"> <li>"X" means the fusible link.</li> </ul>
6	Connector number	<ul style="list-style-type: none"> <li>Alphabetic characters show to which harness the connector is placed.</li> <li>Numeric characters show the identification number of connectors.</li> </ul>
7	Switch	<ul style="list-style-type: none"> <li>This shows that continuity exists between terminals 1 and 2 when the switch is in the A position. Continuity exists between terminals 1 and 3 when the switch is in the B position.</li> </ul>
8	Circuit (Wiring)	<ul style="list-style-type: none"> <li>This means the wiring.</li> </ul>

# HOW TO READ WIRING DIAGRAMS

< HOW TO USE THIS MANUAL >

Number	Item	Description
9	Shielded line	• The line enclosed by broken line circle shows shield wire.
10	Connectors	• This means that a transmission line bypasses two connectors or more.
11	Option abbreviation	• This means the vehicle specifications which layouts the circuit between "O".
12	Relay	• This shows an internal representation of the relay.
13	Optional splice	• The open circle shows that the splice is optional depending on vehicle application.
14	Splice	• The shaded circle "●" means the splice.
15	System branch	• This shows that the circuit is branched to other systems.
16	Page crossing	• This circuit continues to an adjacent page.
17	Component name	• This shows the name of a component.
18	Terminal number	• This means the terminal number of a connector.
19	Ground (GND)	• This shows the ground connection.
20	Explation of option de- scription	• This shows a description of the option abbreviation used on the page.

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O


P

## SWITCH POSITIONS

Switches are shown in wiring diagrams as if the vehicle is in the "normal" condition.

A vehicle is in the "normal" condition when:

- ignition switch is "OFF"
- doors, hood and trunk lid/back door are closed
- pedals are not depressed
- parking brake is released

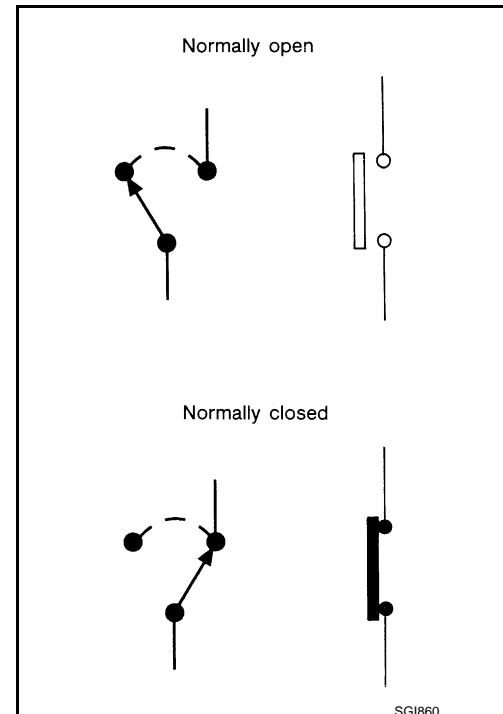

## MULTIPLE SWITCH

The continuity of multiple switch is described in two ways as shown below.

- The switch chart is used in schematic diagrams.

# HOW TO READ WIRING DIAGRAMS

## < HOW TO USE THIS MANUAL >


- The switch diagram is used in wiring diagrams.

### Example

(SWITCH CHART)

	OFF	INT	LO	HI	WASH
1					
2					
3	○	○	○		
4	○	○			
5		○			
6	○	○	○		

(SWITCH DIAGRAM)

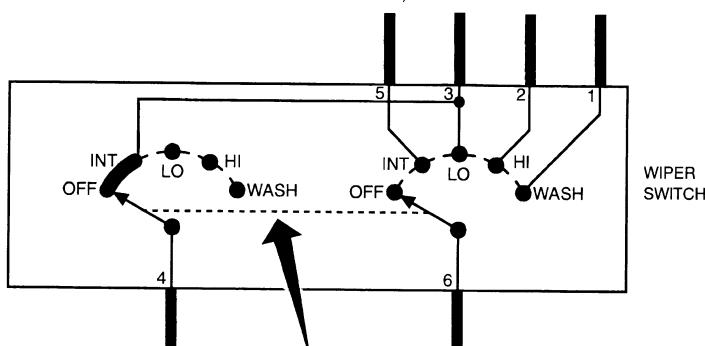

Continuity circuit of wiper switch


SWITCH POSITION	CONTINUITY CIRCUIT
OFF	3 - 4
INT	3 - 4, 5 - 6
LO	3 - 6
HI	2 - 6
WASH	1 - 6

JSAIA0017GB

## Connector Information

INFOID:0000000011251255

## HOW TO USE CONNECTOR INFORMATION

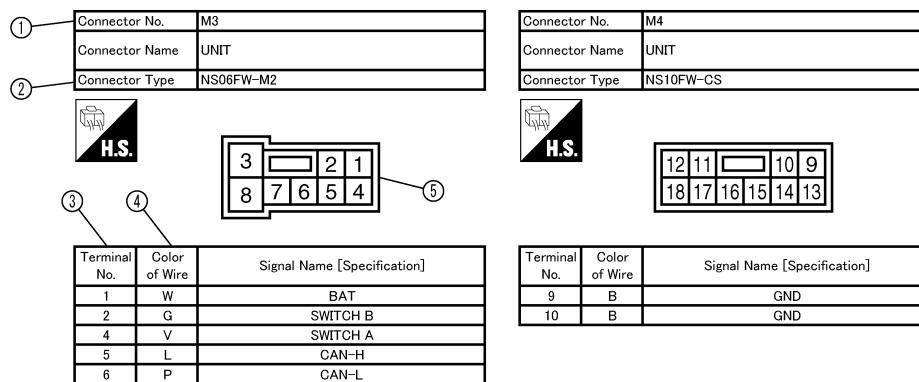

JCAWA0152GB

# HOW TO READ WIRING DIAGRAMS

< HOW TO USE THIS MANUAL >

Description																					
Number	Item	Description	GI																		
1	Connector number	<ul style="list-style-type: none"> <li>Alphabetic characters show to which harness the connector is placed.</li> <li>Numeric characters show the identification number of connectors.</li> </ul>	B C D E																		
2	Connector type	<p>1: Connector model      2: Cavity      3: Male (M) and female (F) terminals      4: Connector color      5: Special type</p> <p>Example:</p> <p>JPMIA0113GB</p>	F G H I J																		
3	Terminal number	<ul style="list-style-type: none"> <li>This means the terminal number of a connector.</li> </ul>	K L M N O P																		
4	Wire color	<table> <tbody> <tr> <td>B = Black</td> <td>BR = Brown</td> </tr> <tr> <td>W = White</td> <td>OR or O = Orange</td> </tr> <tr> <td>R = Red</td> <td>P = Pink</td> </tr> <tr> <td>G = Green</td> <td>PU or V (Violet) = Purple</td> </tr> <tr> <td>L = Blue</td> <td>GY or GR = Gray</td> </tr> <tr> <td>Y = Yellow</td> <td>SB = Sky Blue</td> </tr> <tr> <td>LG = Light Green</td> <td>CH = Dark Brown</td> </tr> <tr> <td>BG or BE = Beige</td> <td>DG = Dark Green</td> </tr> <tr> <td>LA = Lavender</td> <td></td> </tr> </tbody> </table> <ul style="list-style-type: none"> <li>When the wire color is striped, the base color is given first, followed by the stripe color as shown below:          Example: L/W = Blue with White Stripe</li> </ul>	B = Black	BR = Brown	W = White	OR or O = Orange	R = Red	P = Pink	G = Green	PU or V (Violet) = Purple	L = Blue	GY or GR = Gray	Y = Yellow	SB = Sky Blue	LG = Light Green	CH = Dark Brown	BG or BE = Beige	DG = Dark Green	LA = Lavender		
B = Black	BR = Brown																				
W = White	OR or O = Orange																				
R = Red	P = Pink																				
G = Green	PU or V (Violet) = Purple																				
L = Blue	GY or GR = Gray																				
Y = Yellow	SB = Sky Blue																				
LG = Light Green	CH = Dark Brown																				
BG or BE = Beige	DG = Dark Green																				
LA = Lavender																					
5	Connector	<ul style="list-style-type: none"> <li>This means the connector information.</li> <li>This unit-side is described by the connector symbols.</li> </ul>																			

# ABBREVIATIONS

< HOW TO USE THIS MANUAL >

## ABBREVIATIONS

### Abbreviation List

INFOID:0000000011251257

The following **ABBREVIATIONS** are used:

A

ABBREVIATION	DESCRIPTION
A/C	Air conditioner
A/C	Air conditioning
A/F sensor	Air fuel ratio sensor
A/T	Automatic transaxle/transmission
ABS	Anti-lock braking system
ACCS	Advance climate control system
ACL	Air cleaner
AP	Accelerator pedal
APP	Accelerator pedal position
ATF	Automatic transmission fluid
AV	Audio visual
AWD	All wheel drive

B

ABBREVIATION	DESCRIPTION
BARO	Barometric pressure
BCM	Body control module
BLSD	Brake limited slip differential
BPP	Brake pedal position
BSI	Blind spot intervention
BSW	Blind spot warning

C

ABBREVIATION	DESCRIPTION
CKP	Crankshaft position
CL	Closed loop
CMP	Camshaft position
CPP	Clutch pedal position
CTP	Closed throttle position
CVT	Continuously variable transaxle/transmission

D

ABBREVIATION	DESCRIPTION
D1	Drive range first gear
D2	Drive range second gear
D3	Drive range third gear
D4	Drive range fourth gear
DCA	Distance control assist
DDS	Downhill drive support
DFI	Direct fuel injection system
DLC	Data link connector
DTC	Diagnostic trouble code

# ABBREVIATIONS

< HOW TO USE THIS MANUAL >

ABBREVIATION		DESCRIPTION	
E/T	Exhaust temperature		GI
EBD	Electric brake force distribution		B
EC	Engine control		C
ECL	Engine coolant level		D
ECM	Engine control module		E
ECT	Engine coolant temperature		F
ECV	Electrical control valve		G
EEPROM	Electrically erasable programmable read only memory		H
EFT	Engine fuel temperature		I
EGR	Exhaust gas recirculation		J
EGRT	Exhaust gas recirculation temperature		K
EGT	Exhaust gas temperature		L
EOP	Engine oil pressure		M
EP	Exhaust pressure		N
EPR	Exhaust pressure regulator		O
EPS	Electronically controlled power steering		P
ESP	Electronic stability program system		
EVAP canister	Evaporative emission canister		
EXC	Exhaust control		
ABBREVIATION		DESCRIPTION	
FC	Fan control		
FCW	Forward collision warning		
FIC	Fuel injector control		
FP	Fuel pump		
FR	Front		
FRP	Fuel rail pressure		
FRT	Fuel rail temperature		
FTP	Fuel tank pressure		
FTT	Fuel tank temperature		
ABBREVIATION		DESCRIPTION	
GND	Ground		
GPS	Global positioning system		
GST	Generic scan tool		
ABBREVIATION		DESCRIPTION	
HBMC	Hydraulic body-motion control system		
HDD	Hard disk drive		
HO2S	Heated oxygen sensor		
HOC	Heated oxidation catalyst		
HPCM	Hybrid power train control module		

## ABBREVIATIONS

< HOW TO USE THIS MANUAL >

ABBREVIATION	DESCRIPTION
I/M	Inspection and maintenance
IA	Intake air
IAC	Idle air control
IAT	Intake air temperature
IBA	Intelligent brake assist
IC	Ignition control
ICC	Intelligent cruise control
ICM	Ignition control module
IPDM E/R	Intelligent power distribution module engine room
ISC	Idle speed control
ISS	Input shaft speed
K	
ABBREVIATION	DESCRIPTION
KS	Knock sensor
L	
ABBREVIATION	DESCRIPTION
LBC	Li-ion battery controller
LCD	Liquid crystal display
LCU	Local control unit
LDP	Lane departure prevention
LDW	Lane departure warning
LED	Light emitting diode
LH	Left-hand
LIN	Local interconnect network
M	
ABBREVIATION	DESCRIPTION
M/T	Manual transaxle/transmission
MAF	Mass airflow
MAP	Manifold absolute pressure
MDU	Multi display unit
MI	Malfunction indicator
MIL	Malfunction indicator lamp
N	
ABBREVIATION	DESCRIPTION
NOX	Nitrogen oxides
O	
ABBREVIATION	DESCRIPTION
O2	Oxygen
O2S	Oxygen sensor
OBD	On board diagnostic
OC	Oxidation catalytic converter
OD	Overdrive
OL	Open loop
OSS	Output shaft speed

# ABBREVIATIONS

< HOW TO USE THIS MANUAL >

P	ABBREVIATION	DESCRIPTION	GI
	P/S	Power steering	B
	PBR	Potentio balance resistor	C
	PCV	Positive crankcase ventilation	D
	PNP	Park/Neutral position	E
	PSP	Power steering pressure	F
	PTC	Positive temperature coefficient	G
	PTO	Power takeoff	H
	PWM	Pulse width modulation	I
R	ABBREVIATION	DESCRIPTION	J
	RAM	Random access memory	K
	RAS	Rear active steer	L
	RH	Right-hand	M
	ROM	Read only memory	N
	RPM	Engine speed	O
	RR	Rear	P
S	ABBREVIATION	DESCRIPTION	
	SAE	Society of Automotive Engineers, Inc.	
	SCK	Serial clock	
	SDS	Service Data and Specifications	
	SRT	System readiness test	
	SST	Special Service Tools	
T	ABBREVIATION	DESCRIPTION	
	TC	Turbocharger	
	TCM	Transmission control module	
	TCS	Traction control system	
	TCU	Telematics communication unit	
	TP	Throttle position	
	TPMS	Tire pressure monitoring system	
	TSS	Turbine shaft speed	
	TWC	Three way catalytic converter	
U	ABBREVIATION	DESCRIPTION	
	USS	Uphill start support	
V	ABBREVIATION	DESCRIPTION	
	VCM	Vehicle control module	
	VDC	Vehicle dynamics control system	
	VIN	Vehicle identification number	
	VSS	Vehicle speed sensor	

## ABBREVIATIONS

< HOW TO USE THIS MANUAL >

W

ABBREVIATION	DESCRIPTION
WOT	Wide open throttle

1

ABBREVIATION	DESCRIPTION
11	1st range first gear
12	1st range second gear
1GR	First gear

2

ABBREVIATION	DESCRIPTION
21	2nd range first gear
22	2nd range second gear
2GR	Second gear
2WD	2-wheel drive

3

ABBREVIATION	DESCRIPTION
3GR	Third gear

4

ABBREVIATION	DESCRIPTION
4GR	Fourth gear
4WAS	Four wheel active steer
4WD	Four wheel drive

5

ABBREVIATION	DESCRIPTION
5GR	Fifth gear

6

ABBREVIATION	DESCRIPTION
6GR	Sixth gear

7

ABBREVIATION	DESCRIPTION
7GR	Seventh gear

# TIGHTENING TORQUE OF STANDARD BOLTS

< HOW TO USE THIS MANUAL >

## TIGHTENING TORQUE OF STANDARD BOLTS

GI

### Description

INFOID:0000000011251258

This vehicle has both new standard based on ISO\* and previous standard bolts/nuts. There are some differences between these two types of bolts/ nuts; shape of the head, grade of strength, hexagonal width across flats and the standard tightening torque.

- For guidance in discriminating, refer to [GI-19, "Tightening Torque Table \(New Standard Included\)".](#)
- The new standard machine screws and tapping screws have a head of ISO standard torx recess.
- If the tightening torque is not described in the description or figure, refer to [GI-19, "Tightening Torque Table \(New Standard Included\)".](#)

\*ISO: International Organization for Standardization

### Tightening Torque Table (New Standard Included)

INFOID:0000000011251259

#### CAUTION:

- The special parts are excluded.
- The bolts/nuts in these tables have a strength (discrimination) number/symbol assigned to the head or the like. As to the relation between the strength grade in these tables and the strength (discrimination) number/symbol, refer to "DISCRIMINATION OF BOLTS AND NUTS".

### PREVIOUS STANDARD

Grade (Strength grade)	Bolt size	Bolt di- ameter mm	Hexagonal width across flats mm	Pitch mm	Tightening torque (Without lubricant)							
					Hexagon head bolt				Hexagon flange bolt			
					N·m	kg-m	ft-lb	in-lb	N·m	kg-m	ft-lb	in-lb
4T	M6	6.0	10	1.0	5.5	0.56	4	49	7	0.71	5	62
	M8	8.0	12	1.25	13.5	1.4	10	—	17	1.7	13	—
				1.0	13.5	1.4	10	—	17	1.7	13	—
	M10	10.0	14	1.5	28	2.9	21	—	35	3.6	26	—
				1.25	28	2.9	21	—	35	3.6	26	—
	M12	12.0	17	1.75	45	4.6	33	—	55	5.6	41	—
				1.25	45	4.6	33	—	65	6.6	48	—
	M14	14.0	19	1.5	80	8.2	59	—	100	10	74	—
	7T	M6	6.0	10	1.0	9	0.92	7	80	11	1.1	8
		M8	8.0	12	1.25	22	2.2	16	—	28	2.9	21
					1.0	22	2.2	16	—	28	2.9	21
		M10	10.0	14	1.5	45	4.6	33	—	55	5.6	41
					1.25	45	4.6	33	—	55	5.6	41
		M12	12.0	17	1.75	80	8.2	59	—	100	10	74
					1.25	80	8.2	59	—	100	10	74
		M14	14.0	19	1.5	130	13	96	—	170	17	125
		9T	M6	6.0	10	1.0	11	1.1	8	—	13.5	1.4
			M8	8.0	12	1.25	28	2.9	21	—	35	3.6
						1.0	28	2.9	21	—	35	3.6
			M10	10.0	14	1.5	55	5.6	41	—	80	8.2
						1.25	55	5.6	41	—	80	8.2
			M12	12.0	17	1.75	100	10	74	—	130	13
						1.25	100	10	74	—	130	13
			M14	14.0	19	1.5	170	17	125	—	210	21

#### CAUTION:

# TIGHTENING TORQUE OF STANDARD BOLTS

< HOW TO USE THIS MANUAL >

**The parts with aluminum or the cast iron washer surface/thread surface are excluded.**

**NEW STANDARD BASED ON ISO**

Grade (Strength grade)	Bolt size	Bolt di- ameter mm	Hexagonal width across flats mm	Pitch mm	Tightening torque							
					Hexagon head bolt				Hexagon flange bolt			
					N·m	kg-m	ft-lb	in-lb	N·m	kg-m	ft-lb	in-lb
4.8 (Without lubricant)	M6	6.0	10	1.0	5.5	0.56	4	49	7	0.71	5	62
	M8	8.0	13	1.25	13.5	1.4	10	—	17	1.7	13	—
				1.0	13.5	1.4	10	—	17	1.7	13	—
	M10	10.0	16	1.5	28	2.9	21	—	35	3.6	26	—
				1.25	28	2.9	21	—	35	3.6	26	—
	M12	12.0	18	1.75	45	4.6	33	—	55	5.6	41	—
				1.25	45	4.6	33	—	65	6.6	48	—
	M14	14.0	21	1.5	80	8.2	59	—	100	10	74	—
4.8 (With lu- bricant)	M6	6.0	10	1.0	4	0.41	3	35	5.5	0.56	4	49
	M8	8.0	13	1.25	11	1.1	8	—	13.5	1.4	10	—
				1.0	11	1.1	8	—	13.5	1.4	10	—
	M10	10.0	16	1.5	22	2.2	16	—	28	2.9	21	—
				1.25	22	2.2	16	—	28	2.9	21	—
	M12	12.0	18	1.75	35	3.6	26	—	45	4.6	33	—
				1.25	35	3.6	26	—	45	4.6	33	—
	M14	14.0	21	1.5	65	6.6	48	—	80	8.2	59	—
8.8 (With lu- bricant)	M6	6.0	10	1.0	8	0.82	6	71	10	1.0	7	89
	M8	8.0	13	1.25	21	2.1	15	—	25	2.6	18	—
				1.0	21	2.1	15	—	25	2.6	18	—
	M10	10.0	16	1.5	40	4.1	30	—	50	5.1	37	—
				1.25	40	4.1	30	—	50	5.1	37	—
	M12	12.0	18	1.75	70	7.1	52	—	85	8.7	63	—
				1.25	70	7.1	52	—	85	8.7	63	—
	M14	14.0	21	1.5	120	12	89	—	140	14	103	—
10.9 (With lu- bricant)	M6	6.0	10	1.0	10	1.0	7	89	12	1.2	9	106
	M8	8.0	13	1.25	27	2.8	20	—	32	3.3	24	—
				1.0	27	2.8	20	—	32	3.3	24	—
	M10	10.0	16	1.5	55	5.6	41	—	65	6.6	48	—
				1.25	55	5.6	41	—	65	6.6	48	—
	M12	12.0	18	1.75	95	9.7	70	—	110	11	81	—
				1.25	95	9.7	70	—	110	11	81	—
	M14	14.0	21	1.5	160	16	118	—	180	18	133	—

**CAUTION:**

1. Use tightening torque with lubricant for the new standard bolts/nuts in principle. Friction coefficient stabilizer is applied to the new standard bolts/nuts.
2. However, use tightening torque without lubricant for the following cases. Friction coefficient stabilizer is not applied to the following bolts/nuts.
  - Grade 4.8, M6 size bolt, Conical spring washer installed
  - Paint removing nut (Size M6 and M8) for fixing with weld bolt

# TIGHTENING TORQUE OF STANDARD BOLTS

< HOW TO USE THIS MANUAL >

## DISCRIMINATION OF BOLTS AND NUTS

GI

### BOLTS


	Grade (Strength)	Discrimination	
Previous standard	4T (392N/mm <sup>2</sup> )		
	7T (686N/mm <sup>2</sup> )		
	9T (883N/mm <sup>2</sup> )		
New Standard	4.8 (420N/mm <sup>2</sup> )		
	8.8 (800N/mm <sup>2</sup> )		
	10.9 (1040N/mm <sup>2</sup> )		

### NUTS

	Grade (Proof load stress)	Discrimination		
Previous standard	7N (686N/mm <sup>2</sup> )			
	9N (883N/mm <sup>2</sup> )			
New Standard	8 (800N/mm <sup>2</sup> )			
	10 (1040N/mm <sup>2</sup> )			

#### NOTICE:

- A number is assigned on the side of the nuts in some cases.
- A number or symbol is assigned on the upper surface of the flange for the nut with flange.

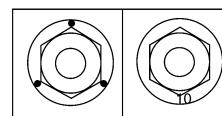

### MACHINE SCREWS AND TAPPING SCREWS

Shape of the head :

Cross recess for the previous standard

Torx recess for the new standard

Screw size	Screw diameter	Torx size
M4	4.0	T20
M5	5.0	T20
M6	6.0	T30

#### NOTICE:

Use torx size T20 (united with M4 screw) for M5 screw although ISO standard specifies T25.

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

SAIA0453E

# RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS

< HOW TO USE THIS MANUAL >

## RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS

### Recommended Chemical Products and Sealants

INFOID:0000000011251260

Refer to the following chart for help in selecting the appropriate chemical product or sealant.

	Product Description	Purpose	Nissan North America Part No. (USA)	Nissan Canada Part No. (Canada)	Aftermarket Cross-reference Part Nos.
1	Rear View Mirror Adhesive	Used to permanently re-mount rear view mirrors to windows.	999MP-AM000P	99998-50505	Permatex 81844
2	Anaerobic Liquid Gasket	For metal-to-metal flange sealing. Can fill a 0.38 mm (0.015 inch) gap and provide instant sealing for most powertrain applications.	999MP-AM001P	99998-50503	Permatex 51813 and 51817
3	High Performance Thread Sealant	Provides instant sealing on any threaded straight or parallel threaded fitting. (Thread sealant only, no locking ability.) • Do not use on plastic.	999MP-AM002P	999MP-AM002P	Permatex 56521
4	Silicone RTV	Gasket Maker	999MP-AM003P (Ultra Grey)	99998-50506 (Ultra Grey)	Permatex Ultra Grey 82194; Three Bond 1207, 1215, 1216, 1217F, 1217G and 1217H Nissan RTV Part No. 999MP-A7007
		Gasket Maker for Maxima/Quest 5-speed automatic transmission (RE5F22A)	–	–	Three Bond 1281B or exact equivalent in its quality
5	High Temperature, High Strength Thread Locking Sealant (Red)	Threadlocker	999MP-AM004P	999MP-AM004P	Permatex 27200; Three Bond 1360, 1360N, 1305 N&P, 1307N, 1335, 1335B, 1363B, 1377C, 1386B, D&E and 1388 Loctite 648
6	Medium Strength Thread Locking Sealant (Blue)	Threadlocker (service tool removable)	999MP-AM005P	999MP-AM005P	Permatex 24200, 24206, 24240, 24283 and 09178; Three Bond 1322, 1322N, 1324 D&N, 1333D, 1361C, 1364D, 1370C and 1374

## PRECAUTIONS

< PRECAUTION >

# PRECAUTION

## PRECAUTIONS

GI

### Description

INFOID:0000000011251261

B

Observe the following precautions to ensure safe and proper servicing. These precautions are not described in each individual section.

### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000011251262

C

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

D

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

E

### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

F

#### **WARNING:**

Always observe the following items for preventing accidental activation.

G

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

H


### Precaution for Procedure without Cowl Top Cover

INFOID:0000000011251263

I

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

J

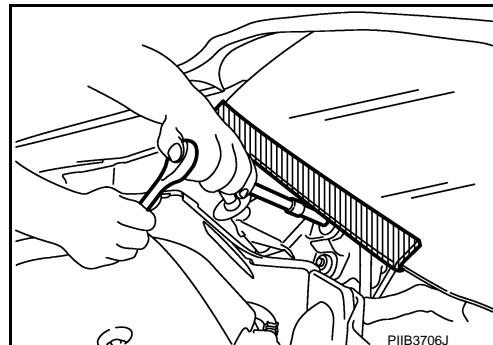

### Precautions For Xenon Headlamp Service

INFOID:0000000011251264

K

#### **WARNING:**

Comply with the following warnings to prevent any serious accident.

L

M

N

O

P

# PRECAUTIONS

## < PRECAUTION >

- Disconnect the battery cable (negative terminal) or the power supply fuse before installing, removing, or touching the xenon headlamp (bulb included). The xenon headlamp contains high-voltage generated parts.
- Never work with wet hands.
- Check the xenon headlamp ON-OFF status after assembling it to the vehicle. Never turn the xenon headlamp ON in other conditions. Connect the power supply to the vehicle-side connector. (Turning it ON outside the lamp case may cause fire or visual impairments.)
- Never touch the bulb glass immediately after turning it OFF. It is extremely hot.

### CAUTION:

Comply with the following cautions to prevent any error and malfunction.

- Install the xenon bulb securely. (Insufficient bulb socket installation may melt the bulb, the connector, the housing, etc. by high-voltage leakage or corona discharge.)
- Never perform HID circuit inspection with a tester.
- Never touch the xenon bulb glass with hands. Never put oil and grease on it.
- Dispose of the used xenon bulb after packing it in thick vinyl without breaking it.
- Never wipe out dirt and contamination with organic solvent (thinner, gasoline, etc.).

## Precautions for Removing Battery Terminal

INFOID:0000000011251265

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

### NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


### NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

### NOTE:

The removal of 12V battery may cause a DTC detection error.

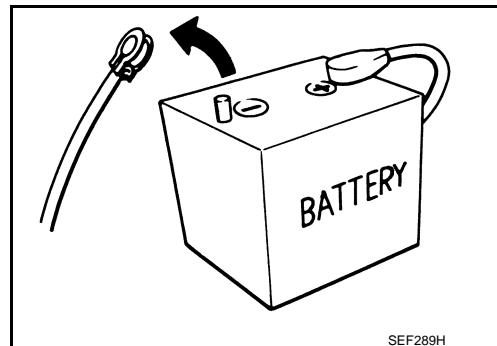

SEF289H


## General Precautions

INFOID:0000000011251266

- Do not operate the engine for an extended period of time without proper exhaust ventilation.

Keep the work area well ventilated and free of any inflammable materials. Special care should be taken when handling any inflammable or poisonous materials, such as gasoline, refrigerant gas, etc. When working in a pit or other enclosed area, be sure to properly ventilate the area before working with hazardous materials.

Do not smoke while working on the vehicle.

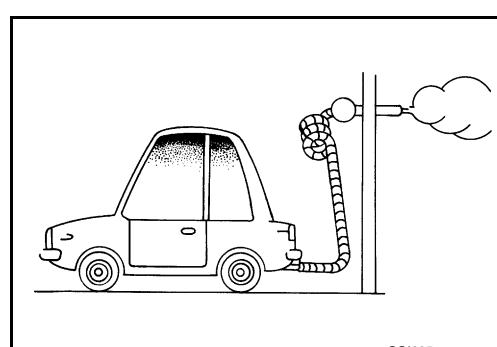


SGI285

- Before jacking up the vehicle, apply wheel chocks or other tire blocks to the wheels to prevent the vehicle from moving. After jacking up the vehicle, support the vehicle weight with safety stands at the points designated for proper lifting before working on the vehicle.

These operations should be done on a level surface.

- When removing a heavy component such as the engine or transmission, be careful not to lose your balance and drop them. Also, do not allow them to strike adjacent parts, especially the brake tubes and master cylinder.

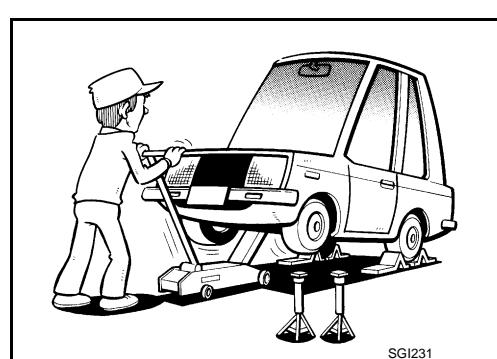


SGI231

## PRECAUTIONS

### < PRECAUTION >

- Before starting repairs which do not require battery power:  
Turn off ignition switch.  
Disconnect the negative battery terminal.
- If the battery terminals are disconnected, recorded memory of radio and each control unit is erased.
- For vehicles with two batteries, be sure to remove both batteries when instructed to remove 12V battery in the service manual. If specified as main battery or sub battery, then do as instructed.

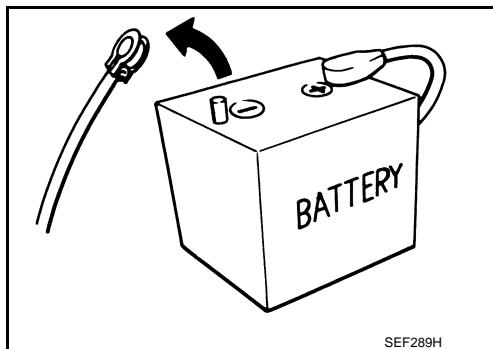


GI  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

- To prevent serious burns:  
Avoid contact with hot metal parts.  
Do not remove the radiator cap when the engine is hot.
- Dispose of drained oil or the solvent used for cleaning parts in an appropriate manner.
- Do not attempt to top off the fuel tank after the fuel pump nozzle shuts off automatically.  
Continued refueling may cause fuel overflow, resulting in fuel spray and possibly a fire.
- Clean all disassembled parts in the designated liquid or solvent prior to inspection or assembly.
- Replace oil seals, gaskets, packings, O-rings, locking washers, cotter pins, self-locking nuts, etc. with new ones.
- Replace inner and outer races of tapered roller bearings and needle bearings as a set.
- Arrange the disassembled parts in accordance with their assembled locations and sequence.
- Do not touch the terminals of electrical components which use microcomputers (such as ECM).  
Static electricity may damage internal electronic components.
- After disconnecting vacuum or air hoses, attach a tag to indicate the proper connection.
- Use only the fluids and lubricants specified in this manual.
- Use approved bonding agent, sealants or their equivalents when required.
- Use hand tools, power tools (disassembly only) and recommended special tools where specified for safe and efficient service repairs.
- When repairing the fuel, oil, water, vacuum or exhaust systems, check all affected lines for leakage.




SGI233

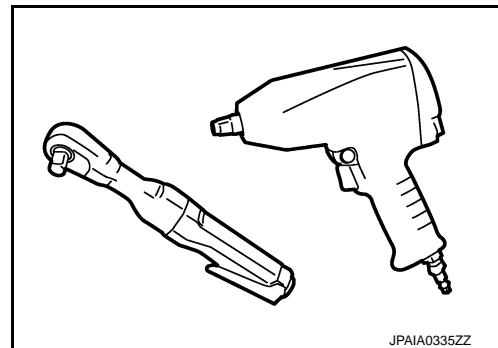

JPAIA0335ZZ

- Before servicing the vehicle:  
Protect fenders, upholstery and carpeting with appropriate covers.  
Take caution that keys, buckles or buttons do not scratch paint.

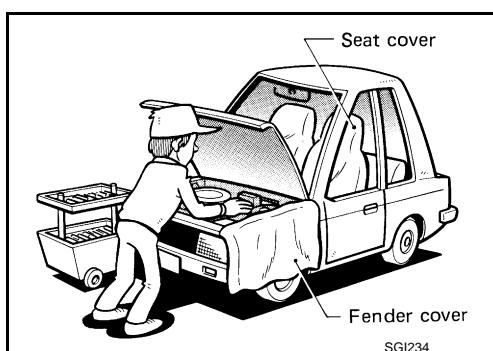

SGI234

### WARNING:

## PRECAUTIONS

### < PRECAUTION >

To prevent ECM from storing the diagnostic trouble codes, never carelessly disconnect the harness connectors which are related to the engine control system and TCM (transmission control module) system. The connectors should be disconnected only when working according to the WORK FLOW of TROUBLE DIAGNOSES in EC and TM sections.

### Three Way Catalyst

INFOID:0000000011251267

If a large amount of unburned fuel flows into the catalyst, the catalyst temperature will be excessively high. To prevent this, follow the instructions.

- Use unleaded gasoline only. Leaded gasoline will seriously damage the three way catalyst.
- When checking for ignition spark or measuring engine compression, make tests quickly and only when necessary.
- Do not run engine when the fuel tank level is low, otherwise the engine may misfire, causing damage to the catalyst.

Do not place the vehicle on flammable material. Keep flammable material off the exhaust pipe and the three way catalyst.

### Multiport Fuel Injection System or Engine Control System

INFOID:0000000011251268

- Before connecting or disconnecting any harness connector for the multiport fuel injection system or ECM:  
Turn ignition switch to "OFF" position.  
Disconnect negative battery terminal.  
Otherwise, there may be damage to ECM.
- Before disconnecting pressurized fuel line from fuel pump to injectors, be sure to release fuel pressure.
- Be careful not to jar components such as ECM and mass air flow sensor.




SGI787

### Hoses

INFOID:0000000011251269


#### HOSE REMOVAL AND INSTALLATION

- To prevent damage to rubber hose, do not pry off rubber hose with tapered tool or screwdriver.

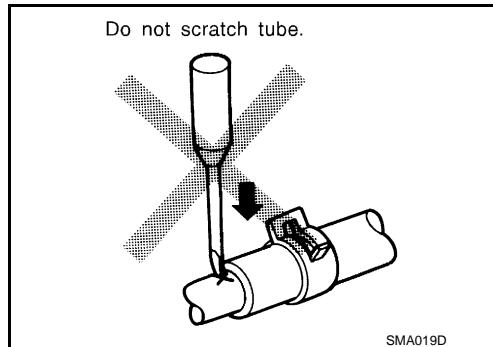

SMA019D

- To reinstall the rubber hose securely, check that hose insertion length and orientation is correct. (If tube is equipped with hose stopper, insert rubber hose into tube until it butts up against hose stopper.)

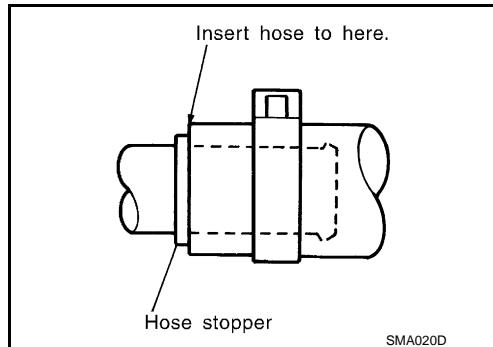


SMA020D

### HOSE CLAMPING


# PRECAUTIONS

## < PRECAUTION >

- If old rubber hose is re-used, install hose clamp in its original position (at the indentation where the old clamp was). If there is a trace of tube bulging left on the old rubber hose, align rubber hose at that position.
- Discard old clamps; replace with new ones.

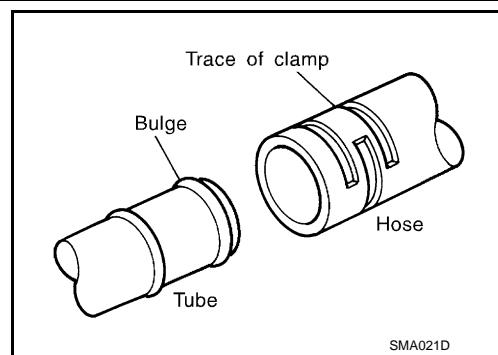

- After installing plate clamps, apply force to them in the direction of the arrow, tightening rubber hose equally all around.

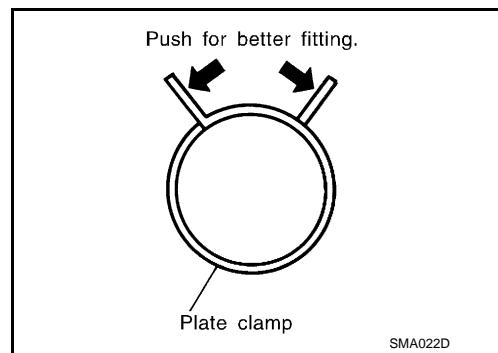

## Engine Oils

INFOID:000000011251270

Prolonged and repeated contact with used engine oil may cause skin cancer. Try to avoid direct skin contact with used oil.

If skin contact is made, wash thoroughly with soap or hand cleaner as soon as possible.

## HEALTH PROTECTION PRECAUTIONS

- Avoid prolonged and repeated contact with oils, particularly used engine oils.
- Wear protective clothing, including impervious gloves where practicable.
- Do not put oily rags in pockets.
- Avoid contaminating clothes, particularly underpants, with oil.
- Heavily soiled clothing and oil-impregnated footwear should not be worn. Overalls must be cleaned regularly.
- First aid treatment should be obtained immediately for open cuts and wounds.
- Use barrier creams, applying them before each work period, to help the removal of oil from the skin.
- Wash with soap and water to ensure all oil is removed (skin cleansers and nail brushes will help). Preparations containing lanolin replace the natural skin oils which have been removed.
- Do not use gasoline, kerosene, diesel fuel, gas oil, thinners or solvents for cleaning skin.
- If skin disorders develop, obtain medical advice without delay.
- Where practical, degrease components prior to handling.
- Where there is a risk of eye contact, eye protection should be worn, for example, chemical goggles or face shields; in addition an eye wash facility should be provided.

## ENVIRONMENTAL PROTECTION PRECAUTIONS

Dispose of used oil and used oil filters through authorized waste disposal contractors to licensed waste disposal sites, or to the waste oil reclamation trade. If in doubt, contact the local authority for advice on disposal facilities.

It is illegal to pour used oil on to the ground, down sewers or drains, or into water sources.

The regulations concerning pollution vary between regions.

## Air Conditioning

INFOID:000000011251271

Use an approved refrigerant recovery unit any time the air conditioning system must be discharged. Refer to HA section "REFRIGERANT" for specific instructions.

G  
I

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

## PRECAUTIONS

< PRECAUTION >

### Fuel

INFOID:000000011251272

Use unleaded premium gasoline with an octane rating of at least 91 AKI (Anti-Knock index) number (Research octane number 96).

If unleaded premium gasoline is not available, unleaded regular gasoline with an octane rating of 87 AKI number (Research octane number 91) may be temporarily used, but only under the following precautions:

- Have the fuel tank filled only partially with unleaded regular gasoline, and fill up with unleaded premium gasoline as soon as possible.

- Avoid full throttle driving and abrupt acceleration.

**Use unleaded premium gasoline for maximum vehicle performance.**

**CAUTION:**

- Using a fuel other than that specified could adversely affect the emission control system, and may also affect warranty coverage.
- Under no circumstances should a leaded gasoline be used, because this will damage the three-way catalyst.
- Do not use E-15 or E-85 fuel in the vehicle. The vehicle is not designed to run on E-15 or E-85 fuel. Using E-15 or E-85 fuel in a vehicle not specifically designed for E-15 or E-85 fuel can adversely affect the emission control devices and systems of the vehicle. Damage caused by such fuel is not covered by the INFINITI new vehicle limited warranty.
- U.S. government regulations require ethanol dispensing pumps to be identified by a small, square, orange and black label with the common abbreviation or the appropriate percentage for that region.

# LIFTING POINT

< PRECAUTION >

## LIFTING POINT

Commercial Service Tools

INFOID:0000000011251273

GI

B

C

D

E

F

G

H

I

J

K



L

M

N

O

P

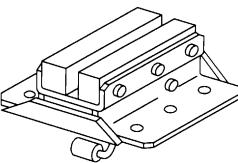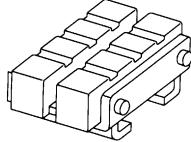Tool name	Description
Board on attachment	 S-NT001
Safety stand attachment	 S-NT002

### CAUTION:

- Every time the vehicle is lifted up, maintain the complete vehicle curb condition.
- Since the vehicle's center of gravity changes when removing main parts on the front side (engine, transmission, suspension etc.), support a jack up point on the rear side garage jack with a mission jack or equivalent.
- Since the vehicle's center of gravity changes when removing main parts on the rear side (rear axle, suspension, etc.), support a jack up point on the front side garage jack with a mission jack or equivalent.
- Be careful not to smash or never do anything that would affect piping parts.

## Garage Jack and Safety Stand and 2-Pole Lift

INFOID:0000000011251274

K

L

M

N

O


P

### WARNING:

- Park the vehicle on a level surface when using the jack. Check to avoid damaging pipes, tubes, etc. under the vehicle.
- Never get under the vehicle while it is supported only by the jack. Always use safety stands when you have to get under the vehicle.
- Place wheel chocks at both front and back of the wheels on the ground.
- When lifting the vehicle, open the lift arms as wide as possible and ensure that the front and rear of the vehicle are well balanced.
- When setting the lift arm, never allow the arm to contact the brake tubes, brake cable, fuel lines and sill spoiler.

## LIFTING POINT

< PRECAUTION >

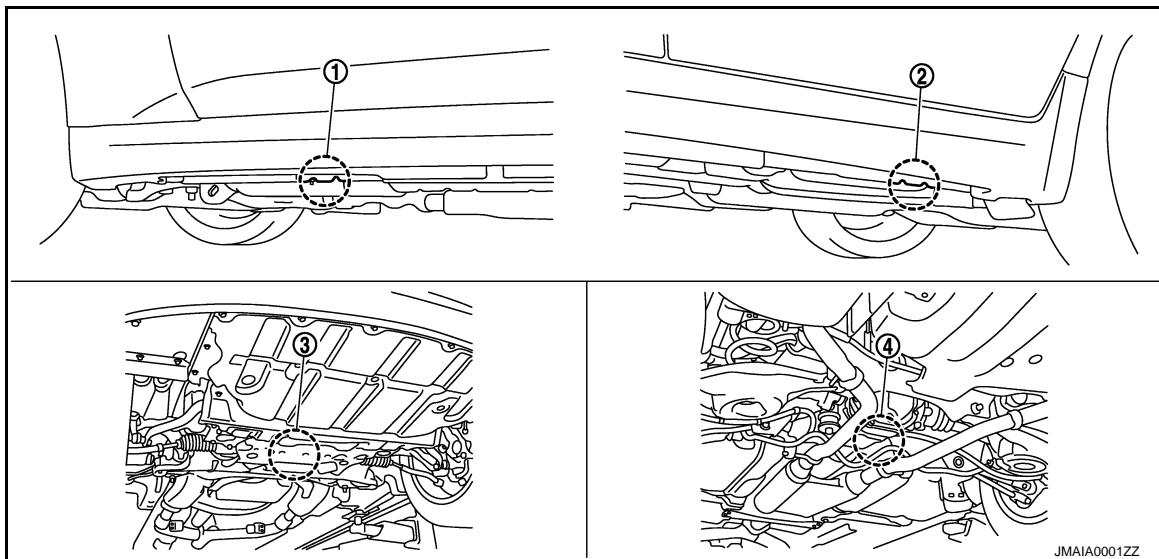

1. Safety stand point and lift up point (front)
2. Safety stand point and lift up point (rear)
3. Garage jack point (front)
4. Garage jack point (rear)

**CAUTION:**

**There is canister just behind Garage jack point rear. Jack up carefully.**

Board-On Lift


INFOID:0000000011251275

**CAUTION:**

Check that vehicle is empty when lifting.

- The board-on lift attachment (A) set at front end of vehicle should be set on the front of the sill under the front door opening.
- Position attachments at front and rear ends of board-on lift.

◀ : Vehicle front

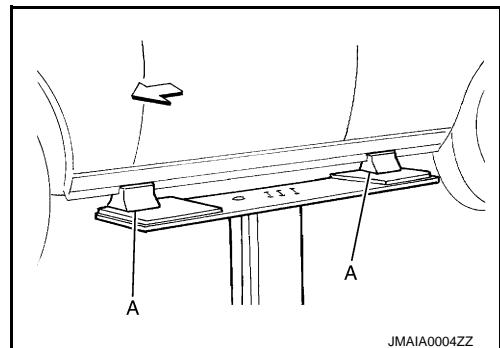

JMAIA0004ZZ

&lt; PRECAUTION &gt;


**TOW TRUCK TOWING****Tow Truck Towing**

GI

INFOID:0000000011251276

**CAUTION:**

- All applicable state or Provincial (in Canada) laws and local laws regarding the towing operation must be obeyed.
- It is necessary to use proper towing equipment to avoid possible damage to the vehicle during towing operation. Towing is in accordance with Towing Procedure Manual at dealer.
- Always attach safety chains before towing.
- When towing, check that the transmission, steering system and powertrain are in good order. If any unit is damaged, dollies must be used.
- Never tow an automatic transmission model from the rear (that is backward) with four wheels on the ground. This may cause serious and expensive damage to the transmission.

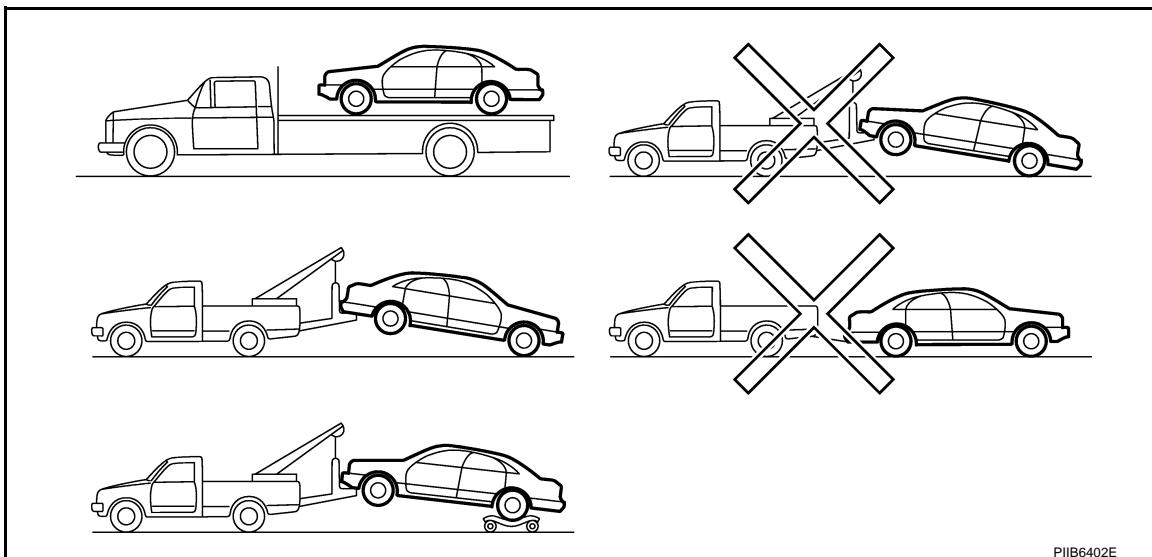**2WD MODELS**

INFINITI recommends that vehicle be towed with the driving (rear) wheels off the ground or that a dolly be used as illustrated.

**CAUTION:**

- Never tow automatic transmission models with the rear wheels on the ground or four wheels on the ground (forward or backward), as this may cause serious and expensive damage to the transmission.
- If it is necessary to tow the vehicle with the front wheels raised, always use towing dollies under the rear wheels.
- When towing rear wheel drive models with the front wheels on the ground or on towing dollies:
  - Turn the ignition switch to the OFF position, and secure the steering wheel in a straight ahead position with a rope or similar device. Never secure the steering wheel by turning the ignition switch to the LOCK position. This may damage the steering lock mechanism.
  - Move the selector lever to the N (Neutral) position.
- When the battery of vehicle equipped with the Intelligent Key system is discharged, your vehicle should be towed with the front wheels on towing dollies or place the vehicle on a flat bed truck.

If the speed or distance must necessarily be greater, remove the propeller shaft before towing to prevent damage to the transmission.

B

C

D

E

F

G

H

I

J

K

L

M

N


O

P

# TOW TRUCK TOWING

## < PRECAUTION >

### AWD MODELS

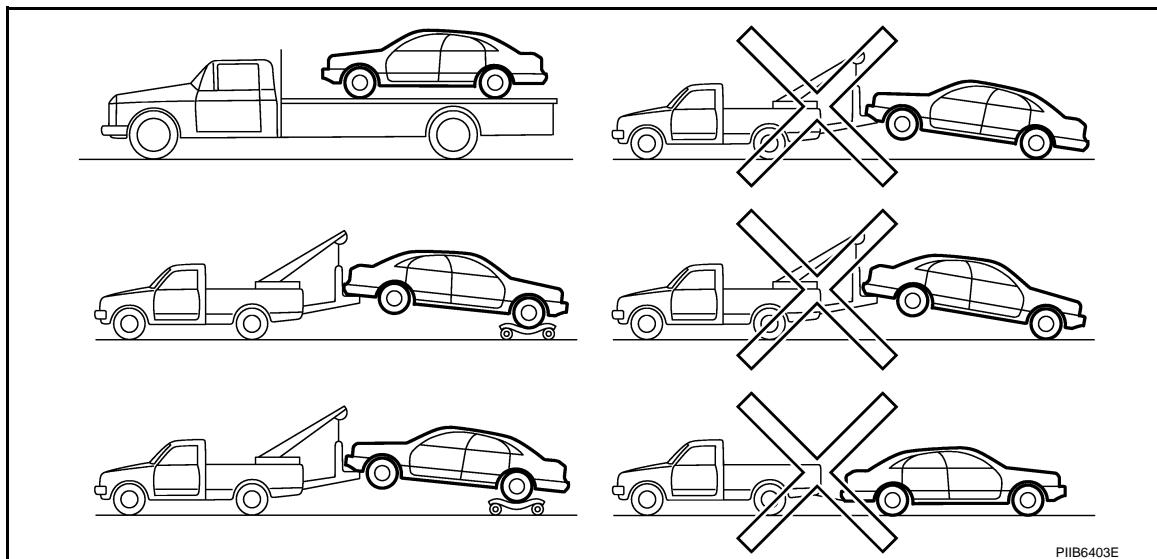

PIIB6403E

INFINITI recommends that a dolly be used as illustrated when towing AWD models.

#### CAUTION:

Never tow AWD models with any of the wheels on the ground as this may cause serious and expensive damage to the powertrain.

## Vehicle Recovery (Freeing a Stuck Vehicle)

INFOID:0000000011251277

### FRONT


Securely install the vehicle recovery hook stored with jacking tools. Check that the hook is properly secured in the stored place after use.

#### WARNING:

- Stand clear of a stuck vehicle.
- Never spin your tires at high speed. This could cause them to explode and result in serious injury. Parts of your vehicle could also overheat and be damaged.

#### CAUTION:

- Tow chains or cables must be attached only to the vehicle recovery hooks or main structural members of the vehicle. Otherwise, the vehicle body will be damaged.
- Never use the vehicle tie downs to free a vehicle stuck in sand, snow, mud, etc. Never tow the vehicle using the vehicle tie downs or recovery hooks.
- Always pull the cable straight out from the front of the vehicle. Never pull on the hook at an angle.
- Pulling devices should be routed so they never touch any part of the suspension, steering, brake or cooling systems.
- Pulling devices such as ropes or canvas straps are not recommended for use in vehicle towing or recovery.

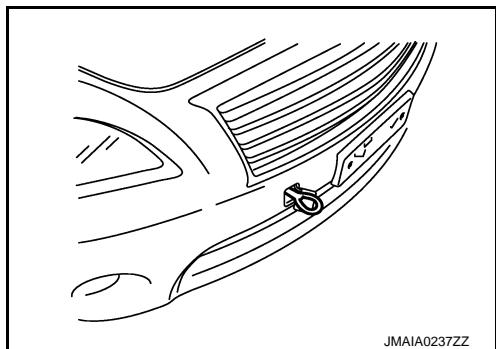

### REAR

#### WARNING:

- Rear hook is not available.

## AUTOMATIC TRANSMISSION

To tow a vehicle equipped with an automatic transmission, an appropriate vehicle dolly **MUST** be placed under the towed vehicle's drive wheels. **Always** follow the dolly manufacturer's recommendations when using their product.

If the vehicle is stuck in sand, snow, mud, etc., use the following procedure:

1. Turn off the Vehicle Dynamic Control System.
2. Check the area in front and behind the vehicle is clear of obstructions.

## TOW TRUCK TOWING

### < PRECAUTION >

3. Turn the steering wheel right and left to clear an area around the front tires.
4. Slowly rock the vehicle forward and backward.  
Shift back and forth between R (reverse) and D (drive).  
Apply the accelerator as little as possible to maintain the rocking motion.  
Release the accelerator pedal before shifting between R and D.  
Do not spin the tires above 35 mph (55 km/h).
5. If the vehicle can not be freed after a few tries, contact a professional towing service to remove the vehicle.

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

## **IDENTIFICATION INFORMATION**

< VEHICLE INFORMATION >

### **VEHICLE INFORMATION**

#### **IDENTIFICATION INFORMATION**

# IDENTIFICATION INFORMATION

< VEHICLE INFORMATION >

Model Variation

INFOID:000000011251281


GI

Destination	Body	Engine	Axle	Handle	Transmission	Grade	Model		
USA	Sedan	VK56VD	2WD	LHD	7A/T	Premium	BPKALUL-EUA		
						Premium Touring Technology	BPKALYL-EUA		
			AWD			Sport Premium Touring	BPKALQL-EUA		
						Sport premium Touring Technology	BPKALRL-EUA		
						Premium	BPKNLUL-EUA		
		VQ37VHR	2WD			Premium Touring Technology	BPKNLYL-EUA		
						Sport Premium Touring	BPKNLQL-EUA		
			AWD			Sport premium Touring Technology	BPKNLRL-EUA		
						Base	BLSALTL-EUA		
						Premium	BLSALUL-EUA		
	Sedan Long wheel base	VK56VD	2WD			Premium Technology	BLSALVL-EUA		
			AWD			Sport Premium	BLSALQL-EUA		
						Sport premium Touring Technology	BLSALRL-EUA		
						Base	BLSNLTL-EUA		
						Premium	BLSNLUL-EUA		
		VQ37VHR	2WD			Premium Technology	BLSNLVL-EUA		
			AWD			Sport Premium	BLSNLQL-EUA		
						Sport premium Touring Technology	BLSNLRL-EUA		
						Premium	CPKALUL-EUA		
						Premium Touring Technology	CPKALYL-EUA		
Canada	Sedan	VK56VD	2WD	LHD	7A/T	Premium	CPKNLUL-EUA		
						Premium	CPKNLYL-EUA		
			AWD			Base	CLSALTL-EUA		
						Premium	CLSALUL-EUA		
						Premium Technology	CLSALVL-EUA		
		VQ37VHR	2WD			Base	CLSNLTL-EUA		
			AWD			Premium	CLSNLUL-EUA		
						Premium Technology	CLSNLVL-EUA		
						Premium	BPKALUL-ENA		
							BPKNLUL-ENA		
	Sedan Long wheel base	VQ37VHR	2WD			Premium Touring Technology	BPKNLYL-ENA		
			AWD			Sport premium Touring Technology	BPKNRL-ENA		
						Base	BLSALTL-ENA		
						Premium	BLSNLUL-ENA		
						Premium Touring Technology	BLSNLYL-ENA		

# IDENTIFICATION INFORMATION

## < VEHICLE INFORMATION >


### Model variation code (Prefix and suffix designations)

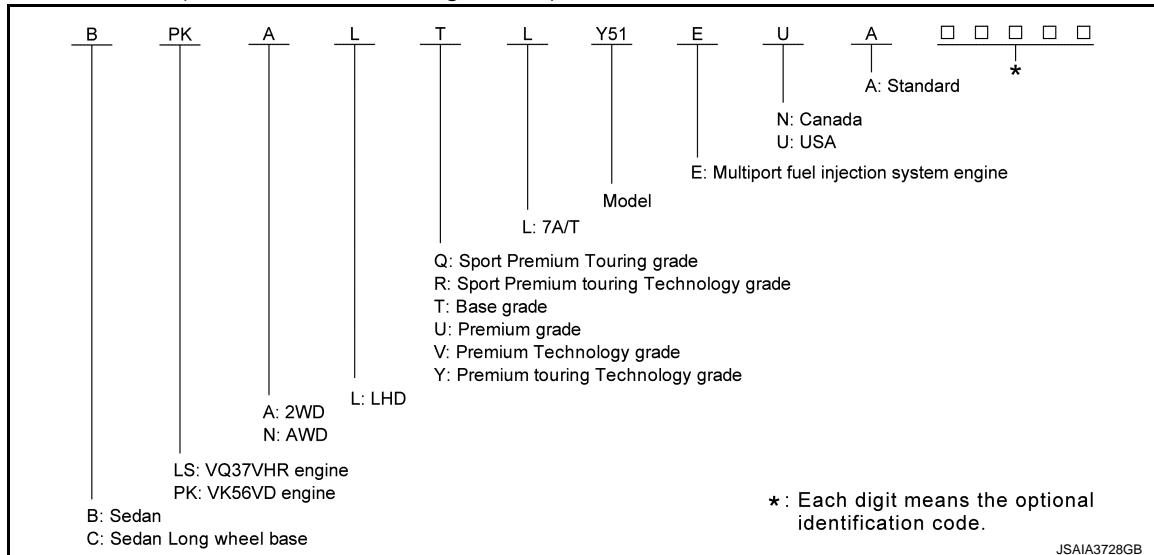

## Information About Identification or Model Code

INFOID:0000000011251282

### IDENTIFICATION NUMBER

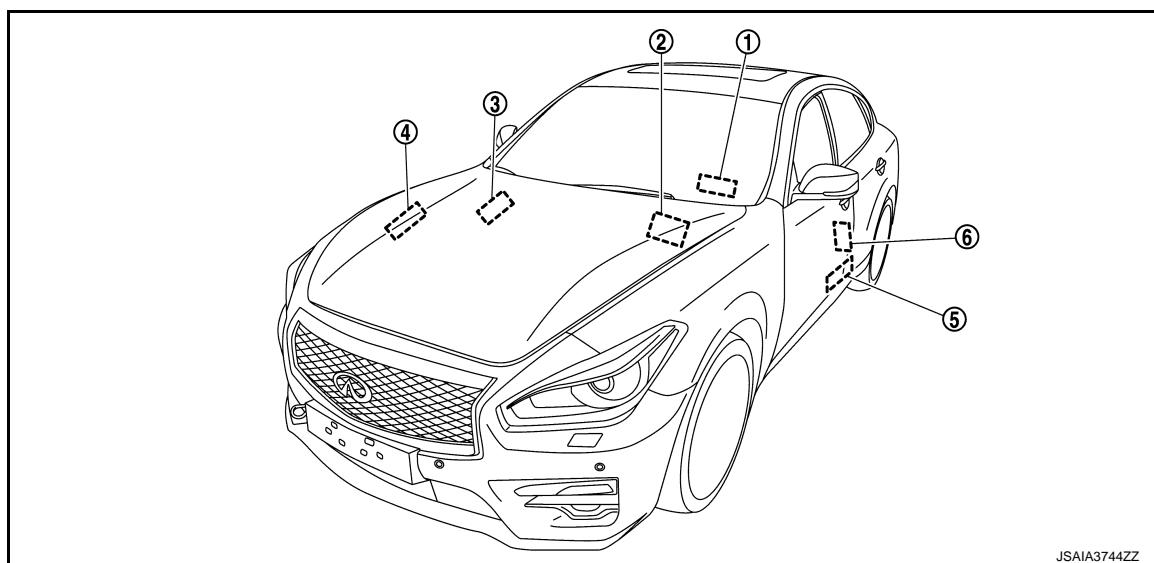


1. Vehicle identification number plate
2. Air conditioner specification label
3. Vehicle identification number (Chassis number)
4. Emission control information label
5. FMVSS certification label  
(For USA)  
CMVSS certification label  
(For Canada)
6. Tire and loading information label

# IDENTIFICATION INFORMATION


< VEHICLE INFORMATION >

## VEHICLE IDENTIFICATION NUMBER ARRANGEMENT

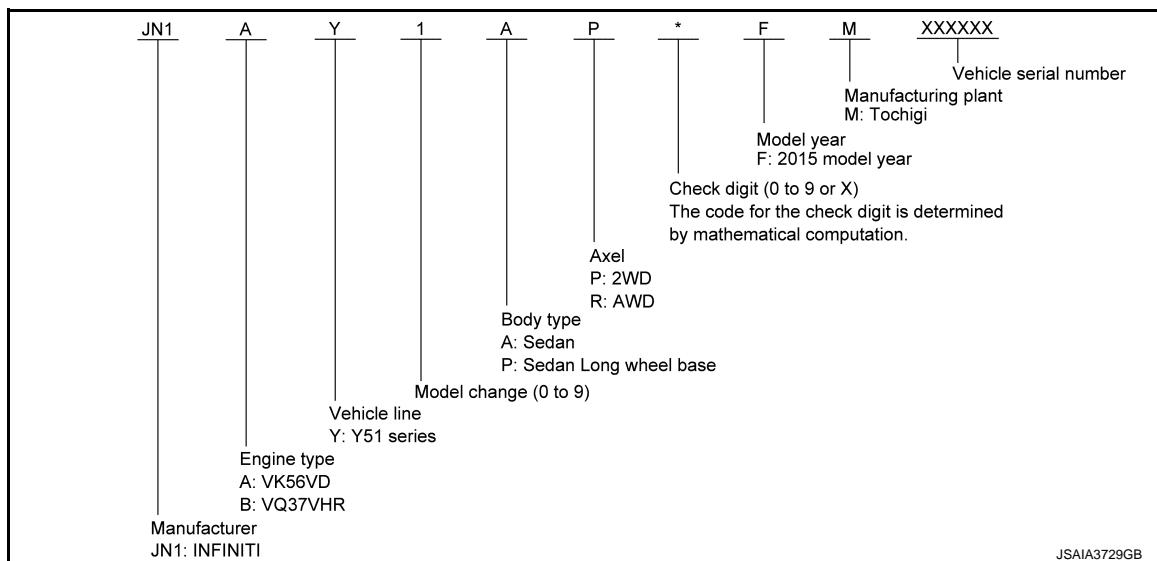


## CERTIFICATION LABEL

For USA

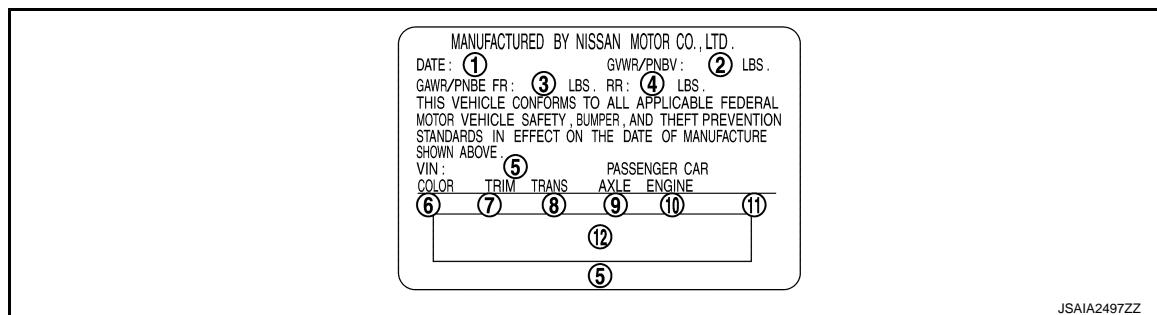

1. MFR Month/Year
2. Gross vehicle weight rating
3. Gross axle weight rating (Front)
4. Gross axle weight rating (Rear)
5. Vehicle identification number
6. Body color code
7. Trim color code
8. Transmission model
9. Axle model
10. Engine model
11. Engine displacement
12. Vin bar code

For Canada

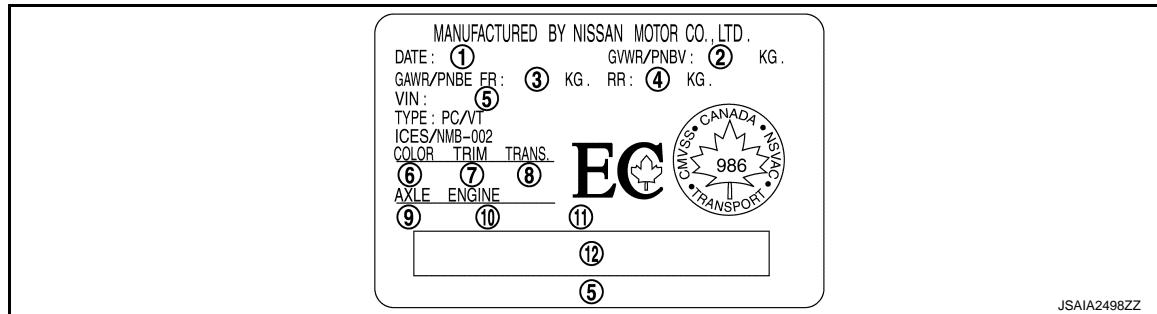

1. MFR Month/Year
2. Gross vehicle weight rating
3. Gross axle weight rating (Front)
4. Gross axle weight rating (Rear)
5. Vehicle identification number
6. Body color code
7. Trim color code
8. Transmission model
9. Axle model
10. Engine model
11. Engine displacement
12. Vin bar code

## ENGINE SERIAL NUMBER

VQ37VHR

GI

B

C

D

E

F

G

H

I

J

K

L

M

N


O

P

# IDENTIFICATION INFORMATION

## < VEHICLE INFORMATION >


◀ : Vehicle front

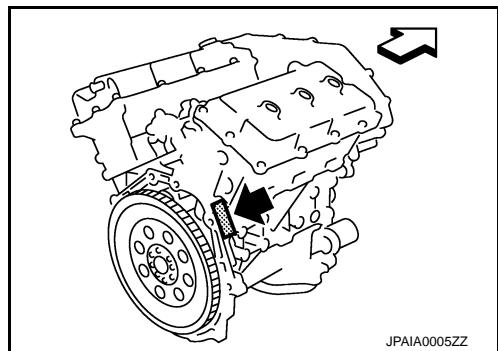

JPAIA0005ZZ

VK56VD


◀ : Vehicle front

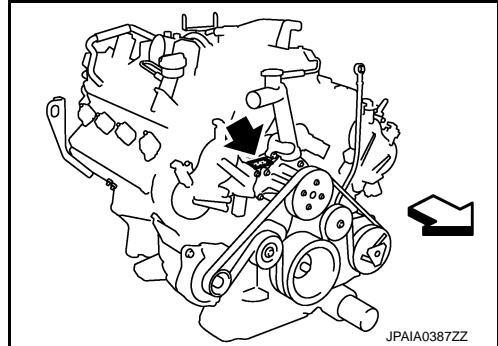

JPAIA0387ZZ

## AUTOMATIC TRANSMISSION NUMBER

◀ : Vehicle front

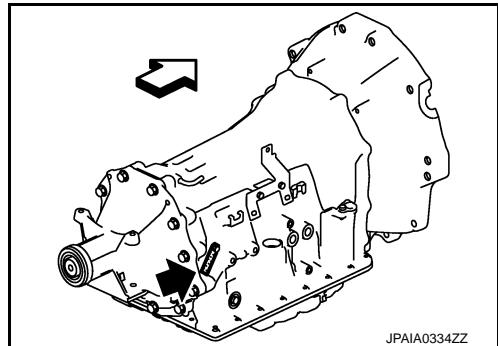

JPAIA0334ZZ

## Dimensions

INFOID:0000000011251283

Unit: mm (in)

Overall length (with front license plate)	4,980 (196.1) <sup>*1</sup> 5,130 (202.0) <sup>*2</sup>
Overall length (without front license plate)	4,970 (195.7) <sup>*1</sup> 5,120 (201.6) <sup>*2</sup>
Overall width	1,845 (72.6)
Overall height	1,500 (59.1) <sup>*3</sup> 1,515 (59.6) <sup>*4</sup>
Front tread	1,575 (62.0)
Rear tread	1,570 (61.8) <sup>*3</sup> 1,565 (61.6) <sup>*4</sup>
Wheelbase	2,900 (114.2) <sup>*1</sup> 3,050 (120.1) <sup>*2</sup>

\*1: Except for long wheelbase models

\*2: Long wheelbase models

\*3: Two-Wheel Drive (2WD) models

# IDENTIFICATION INFORMATION

## < VEHICLE INFORMATION >

\*4: Intelligent All-Wheel Drive (AWD) models

### Wheels & Tires

INFOID:0000000011251284

GI

Conventional	18 inch	Tire	P245/50R18 99V
		Road wheel (Aluminum)	Size Inset
	20 inch	Tire	18 × 8J 43 mm (1.69 in)
			245/40R20 95W 245/40R20 95V
		Road wheel (Aluminum)	Size Inset
			20 × 9J 43 mm (1.69 in)
Spare	17 inch	Tire	T165/80D17 104M
		Road wheel (Aluminum)	Size Inset
	18 inch	Tire	17 × 4T 30 mm (1.18 in)
			T155/80D18 102M
		Road wheel (Aluminum)	Size Inset
			18 × 4T 0 mm (0 in)

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >


## BASIC INSPECTION

### SERVICE INFORMATION FOR ELECTRICAL INCIDENT

#### Work Flow

INFOID:0000000011251285

#### WORK FLOW

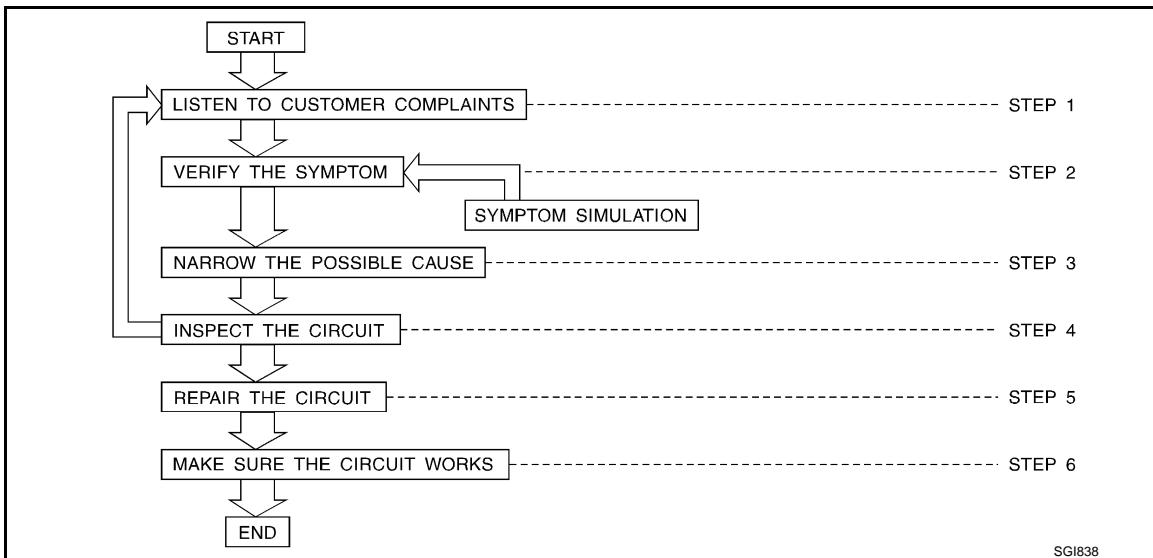

STEP	DESCRIPTION	
STEP 1	Get detailed information about the conditions and the environment when the incident occurred. The following are key pieces of information required to make a good analysis:  <b>WHAT</b> Vehicle Model, Engine, Transmission/Transaxle and the System (i.e. Radio). <b>WHEN</b> Date, Time of Day, Weather Conditions, Frequency. <b>WHERE</b> Road Conditions, Altitude and Traffic Situation. <b>HOW</b> System Symptoms, Operating Conditions (Other Components Interaction). Service History and if any After Market Accessories have been installed.	
STEP 2	Operate the system, road test if necessary. Verify the parameter of the incident. If the problem cannot be duplicated, refer to "Incident Simulation Tests".	
STEP 3	Get the proper diagnosis materials together including: <ul style="list-style-type: none"><li>• Power Supply Routing</li><li>• System Operation Descriptions</li><li>• Applicable Service Manual Sections</li><li>• Check for any Service Bulletins</li></ul> Identify where to begin diagnosis based upon your knowledge of the system operation and the customer comments.	
STEP 4	Inspect the system for mechanical binding, loose connectors or wiring damage. Determine which circuits and components are involved and diagnose using the Power Supply Routing and Harness Layouts.	
STEP 5	Repair or replace the incident circuit or component.	
STEP 6	Operate the system in all modes. Verify the system works properly under all conditions. check you have not inadvertently created a new incident during your diagnosis or repair steps.	

#### Control Units and Electrical Parts

INFOID:0000000011251286

#### PRECAUTIONS

- Never reverse polarity of battery terminals.
- Install only parts specified for a vehicle.
- Before replacing the control unit, check the input and output and functions of the component parts.
- Do not apply excessive force when disconnecting a connector.

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT


## < BASIC INSPECTION >

- Do not apply excessive shock to the control unit by dropping or hitting it.
- Be careful to prevent condensation in the control unit due to rapid temperature changes and do not let water or rain get on it. If water is found in the control unit, dry it fully and then install it in the vehicle.
- Be careful not to let oil to get on the control unit connector.
- Avoid cleaning the control unit with volatile oil.
- Do not disassemble the control unit, and do not remove the upper and lower covers.



GI

- When using a DMM, be careful not to let test probes get close to each other to prevent the power transistor in the control unit from damaging battery voltage because of short circuiting.
- When checking input and output signals of the control unit, use the specified check adapter.

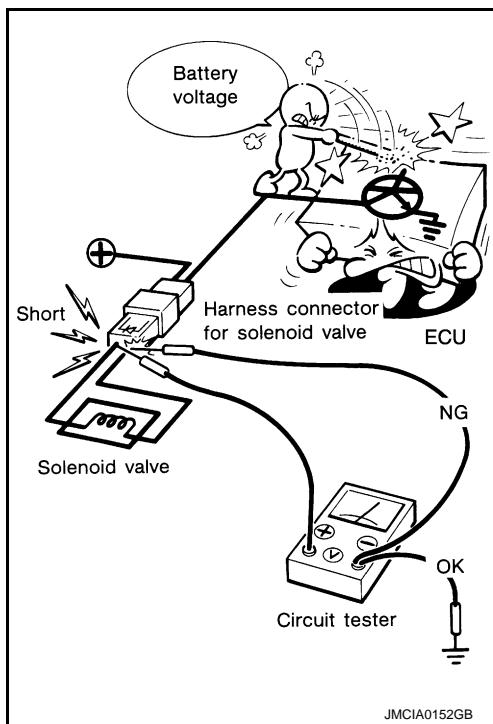

B

C

D

E

F

G

H

I

J

K

## How to Check Terminal

INFOID:000000011251287

### CONNECTOR AND TERMINAL PIN KIT

- Use the connector and terminal pin kits listed below when replacing connectors or terminals.
- The connector and terminal pin kits contain some of the most commonly used NISSAN/INFINITI connectors and terminals. For detailed connector and terminal pin replacement procedures, refer to the latest NISSAN/INFINITI CONNECTOR AND TERMINAL PIN SERVICE MANUAL.

L

M





N

O

P

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < BASIC INSPECTION >

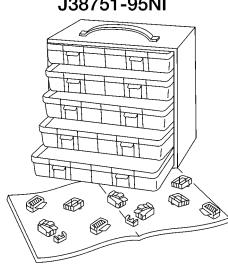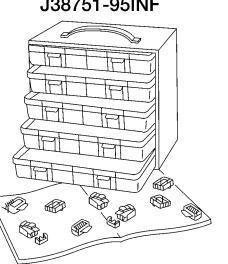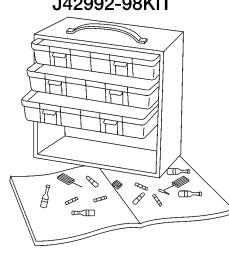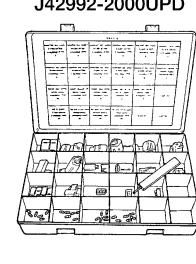Tool number (TechMate No.) Tool name	Description
- (J38751-95NI) Connector and terminal pin kit (NISSAN)	 <b>J38751-95NI</b> WAIA0004E
- (J38751-95INF) Connector and terminal pin kit (INFINITI)	 <b>J38751-95INF</b> WAIA0004E
- (J42992-98KIT) OBD and terminal repair kit	 <b>J42992-98KIT</b> WAIA0005E
- (J42992-2000UPD) OBD-II Connector Kit Update	 <b>J42992-2000UPD</b> WAIA0005E


### HOW TO PROBE CONNECTORS

- Connector damage and an intermittent connection can result from improperly probing of the connector during circuit checks.
- The probe of a digital multimeter (DMM) may not correctly fit the connector cavity. To correctly probe the connector, follow the procedures below using a "T" pin. For the best contact grasp the "T" pin using an alligator clip.

#### Probing from Harness Side

Standard type (not waterproof type) connector should be probed from harness side with "T" pin.


- If the connector has a rear cover such as a ECM connector, remove the rear cover before probing the terminal.
- Do not probe waterproof connector from harness side. Damage to the seal between wire and connector may result.

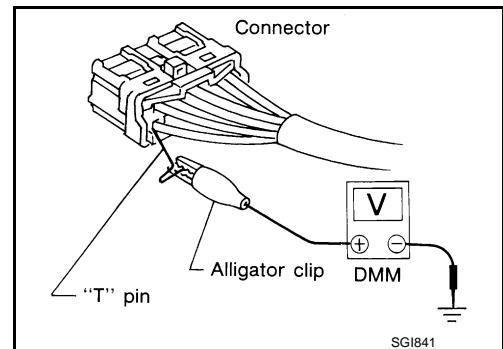

#### Probing from Terminal Side

##### FEMALE TERMINAL


- There is a small notch above each female terminal. Probe each terminal with the "T" pin through the notch.  
Do not insert any object other than the same type male terminal into female terminal.

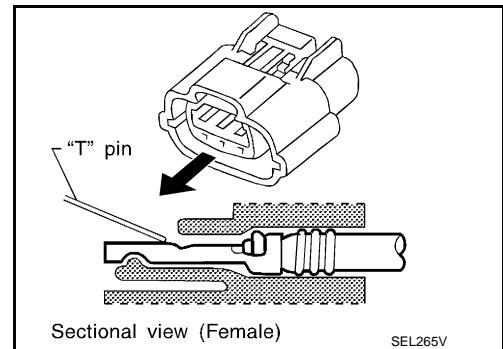

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < BASIC INSPECTION >

- Some connectors do not have a notch above each terminal. To probe each terminal, remove the connector retainer to make contact space for probing.

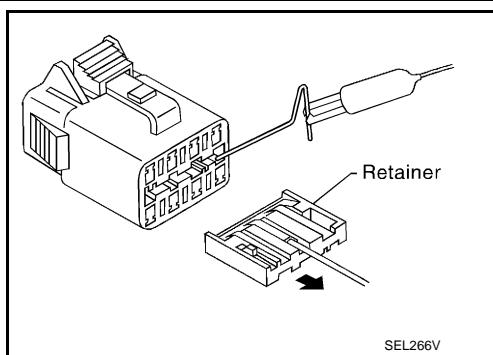

SEL266V

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P


### MALE TERMINAL

- Carefully probe the contact surface of each terminal using a "T" pin.

#### CAUTION:

Never bend terminal.

#### Sectional view (Male)

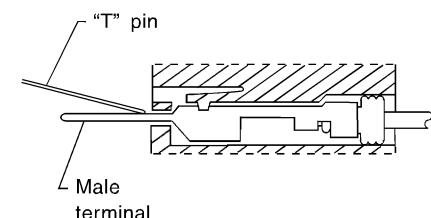

SEL267V

E

### How to Check Enlarged Contact Spring of Terminal


- An enlarged contact spring of a terminal may create intermittent signals in the circuit.
- If the intermittent open circuit occurs, follow the procedure below to inspect for open wires and enlarged contact spring of female terminal.

- Assemble a male terminal and approx. 10 cm (3.9 in) of wire.

#### NOTE:

Use a male terminal which matches the female terminal.

- Disconnect the suspected faulty connector and hold it terminal side up.

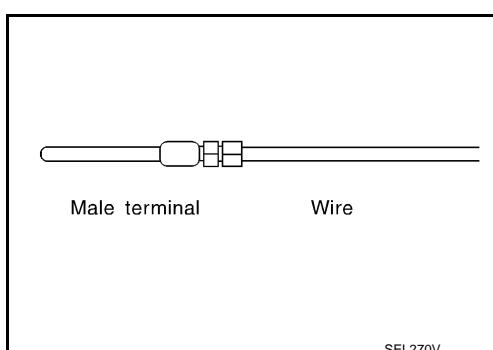


SEL270V

I

- While holding the wire of the male terminal, try to insert the male terminal into the female terminal.

#### CAUTION:

Never force the male terminal into the female terminal with your hands.

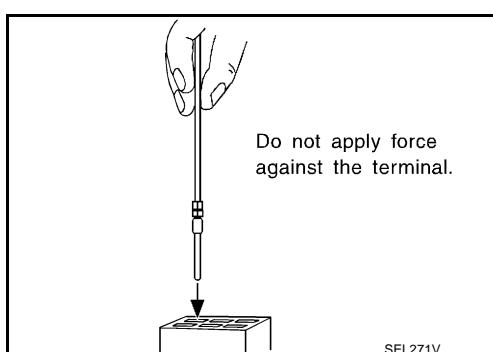

SEL271V

M

N


O

P


# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < BASIC INSPECTION >

4. While moving the connector, check whether the male terminal can be easily inserted or not.

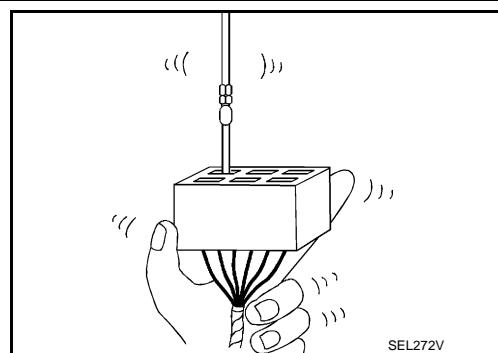

- If the male terminal can be easily inserted into the female terminal, replace the female terminal.

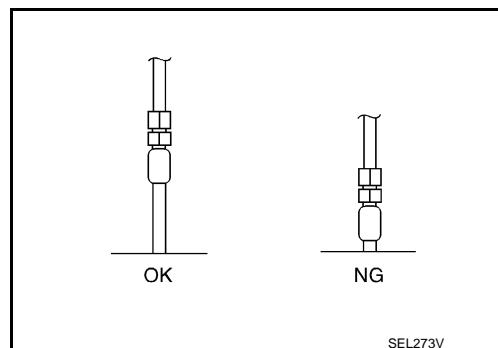


## Waterproof Connector Inspection

If water enters the connector, it can short interior circuits. This may lead to intermittent problems. Check the following items to maintain the original waterproof characteristics.


### RUBBER SEAL INSPECTION

- Most waterproof connectors are provided with a rubber seal between the male and female connectors. If the seal is missing, the waterproof performance may not meet specifications.
- The rubber seal may come off when connectors are disconnected. Whenever connectors are reconnected, check the rubber seal is properly installed on either side of male or female connector.

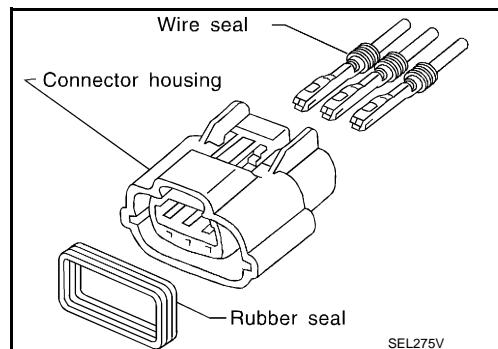

### WIRE SEAL INSPECTION

- The wire seal must be installed on the wire insertion area of a waterproof connector. Be sure that the seal is installed properly.

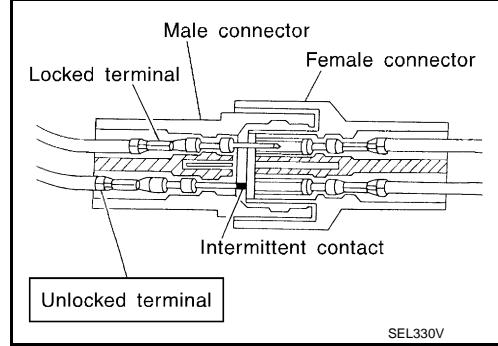

## Intermittent Incident

INFOID:0000000011251288

### DESCRIPTION

Sometimes the symptom is not present when the vehicle is brought in for service. If possible, re-create the conditions present at the time of the incident. Doing so may help avoid a No Trouble Found Diagnosis. The fol-

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < BASIC INSPECTION >

l owing section illustrates ways to simulate the conditions/environment under which the owner experiences an electrical incident.

GI

The section is broken into the six following topics:

- Vehicle vibration
- Heat sensitive
- Freezing
- Water intrusion
- Electrical load
- Cold or hot start up

B

C

D

E

Get a thorough description of the incident from the customer. It is important for simulating the conditions of the problem.

F

G

H

### VEHICLE VIBRATION

The problem may occur or become worse while driving on a rough road or when engine is vibrating (idle with A/C on). In such a case, you will want to check for a vibration related condition. Refer to the following illustration.

I

J

K

L

M

N

O

P

#### Connector & Harness


Determine which connectors and wiring harness would affect the electrical system you are inspecting. Gently shake each connector and harness while monitoring the system for the incident you are trying to duplicate. This test may indicate a loose or poor electrical connection.

#### Hint

Connectors can be exposed to moisture. It is possible to get a thin film of corrosion on the connector terminals. A visual inspection may not reveal this without disconnecting the connector. If the problem occurs intermittently, perhaps the problem is caused by corrosion. It is a good idea to disconnect, inspect and clean the terminals on related connectors in the system.

#### Sensor & Relay

Gently apply a slight vibration to sensors and relays in the system you are inspecting. This test may indicate a loose or poorly mounted sensor or relay.

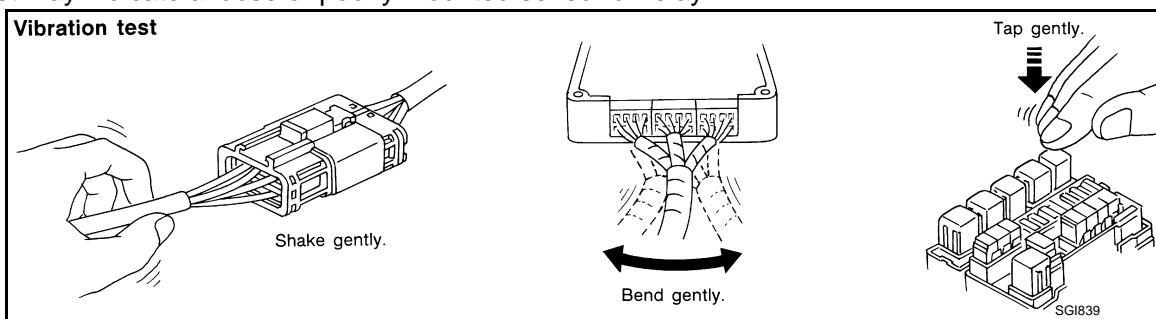

#### Engine Compartment

There are several reasons a vehicle or engine vibration could cause an electrical complaint. Some of the things to check for are:

- Connectors not fully seated.
- Wiring harness not long enough and is being stressed due to engine vibrations or rocking.
- Wires laying across brackets or moving components.
- Loose, dirty or corroded ground wires.
- Wires routed too close to hot components.

Q

To inspect components under the hood, start by verifying the integrity of ground connections. (Refer to Ground Inspection described later.) First check that the system is properly grounded. Then check for loose connection by gently shaking the wiring or components as previously explained. Using the wiring diagrams inspect the wiring for continuity.

P

#### Behind the Instrument Panel

An improperly routed or improperly clamped harness can become pinched during accessory installation. Vehicle vibration can aggravate a harness which is routed along a bracket or near a screw.

#### Under Seating Areas

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < BASIC INSPECTION >

An unclamped or loose harness can cause wiring to be pinched by seat components (such as slide guides) during vehicle vibration. If the wiring runs under seating areas, inspect wire routing for possible damage or pinching.


### HEAT SENSITIVE

- The customer's concern may occur during hot weather or after car has sat for a short time. In such cases you will want to check for a heat sensitive condition.
- To determine if an electrical component is heat sensitive, heat the component with a heat gun or equivalent.

#### CAUTION:


**Never heat components above 60°C (140°F).**

- If incident occurs while heating the unit, either replace or properly insulate the component.

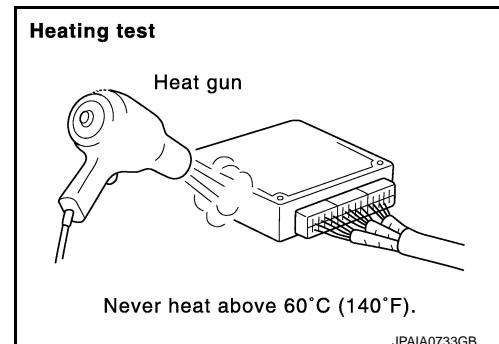

### FREEZING

- The customer may indicate the incident goes away after the car warms up (winter time). The cause could be related to water freezing somewhere in the wiring/electrical system.
- There are two methods to check for this. The first is to arrange for the owner to leave his car overnight. Check it will get cold enough to demonstrate his complaint. Leave the car parked outside overnight. In the morning, do a quick and thorough diagnosis of those electrical components which could be affected.
- The second method is to put the suspect component into a freezer long enough for any water to freeze. Reinstall the part into the car and check for the reoccurrence of the incident. If it occurs, repair or replace the component.

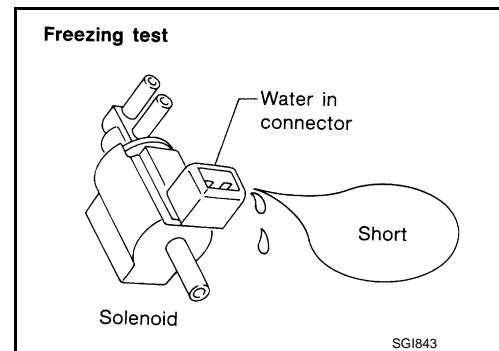


### WATER INTRUSION

The incident may occur only during high humidity or in rainy/snowy weather. In such cases the incident could be caused by water intrusion on an electrical part. This can be simulated by soaking the car or running it through a car wash.


#### CAUTION:

**Never spray water directly on any electrical components.**

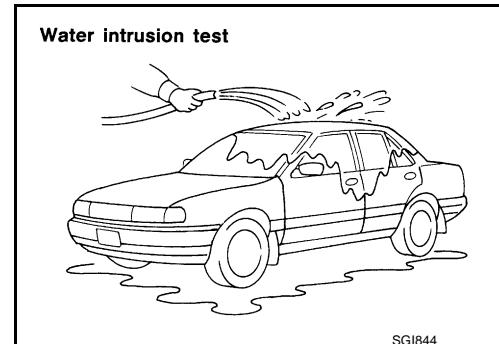

### ELECTRICAL LOAD

The incident may be electrical load sensitive. Perform diagnosis with all accessories (including A/C, rear window defogger, radio, fog lamps) turned on.

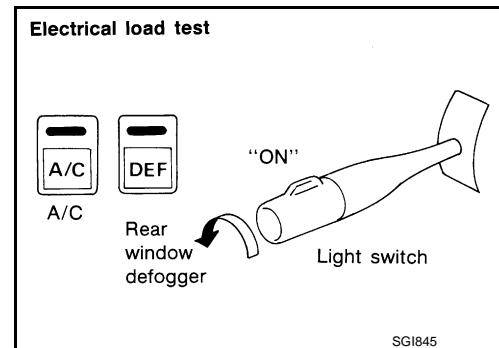

### COLD OR HOT START UP

On some occasions an electrical incident may occur only when the car is started cold, or it may occur when the car is restarted hot shortly after being turned off. In these cases you may have to keep the car overnight to make a proper diagnosis.

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

## Circuit Inspection

INFOID:000000011251289

GI

### DESCRIPTION

- In general, testing electrical circuits is an easy task if it is approached in a logical and organized method. Before beginning it is important to have all available information on the system to be tested. Also, get a thorough understanding of system operation. Then you will be able to use the appropriate equipment and follow the correct test procedure.
- You may have to simulate vehicle vibrations while testing electrical components. Gently shake the wiring harness or electrical component to do this.


OPEN	A circuit is open when there is no continuity through a section of the circuit.
	There are two types of shorts.
SHORT	• SHORT CIRCUIT When a circuit contacts another circuit and causes the normal resistance to change.
	• SHORT TO GROUND When a circuit contacts a ground source and grounds the circuit.

### NOTE:

Refer to [GI-41, "How to Check Terminal"](#) to probe or check terminal.

### TESTING FOR “OPENS” IN THE CIRCUIT

Before you begin to diagnose and test the system, you should rough sketch a schematic of the system. This will help you to logically walk through the diagnosis process. Drawing the sketch will also reinforce your working knowledge of the system.

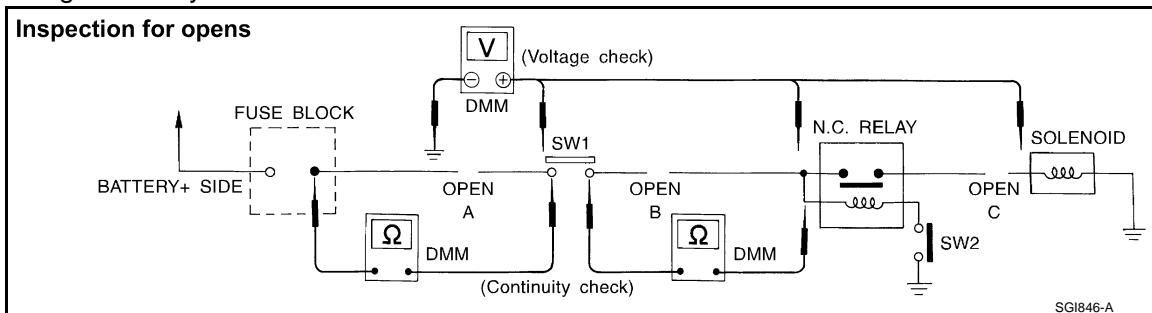

### Continuity Check Method

The continuity check is used to find an open in the circuit. The digital multimeter (DMM) set on the resistance function will indicate an open circuit as over limit (no beep tone or no ohms symbol). Check to always start with the DMM at the highest resistance level.

To help in understanding the diagnosis of open circuits, please refer to the previous schematic.

- Disconnect the battery negative cable.
- Start at one end of the circuit and work your way to the other end. (At the fuse block in this example)
- Connect one probe of the DMM to the fuse block terminal on the load side.
- Connect the other probe to the fuse block (power) side of SW1. Little or no resistance will indicate that portion of the circuit has good continuity. If there were an open in the circuit, the DMM would indicate an over limit or infinite resistance condition. (point A)
- Connect the probes between SW1 and the relay. Little or no resistance will indicate that portion of the circuit has good continuity. If there were an open in the circuit, the DMM would indicate an over limit or infinite resistance condition. (point B)
- Connect the probes between the relay and the solenoid. Little or no resistance will indicate that portion of the circuit has good continuity. If there were an open in the circuit, the DMM would indicate an over limit or infinite resistance condition. (point C)

Any circuit can be diagnosed using the approach in the previous example.

### Voltage Check Method

To help in understanding the diagnosis of open circuits please refer to the previous schematic.

In any powered circuit, an open can be found by methodically checking the system for the presence of voltage. This is done by switching the DMM to the voltage function.

- Connect one probe of the DMM to a known good ground.
- Begin probing at one end of the circuit and work your way to the other end.
- With SW1 open, probe at SW1 to check for voltage.  
voltage: open is further down the circuit than SW1.

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < BASIC INSPECTION >

no voltage: open is between fuse block and SW1 (point A).

- Close SW1 and probe at relay.

voltage: open is further down the circuit than the relay.

no voltage: open is between SW1 and relay (point B).

- Close the relay and probe at the solenoid.


voltage: open is further down the circuit than the solenoid.

no voltage: open is between relay and solenoid (point C).

Any powered circuit can be diagnosed using the approach in the previous example.

## TESTING FOR "SHORTS" IN THE CIRCUIT

To simplify the discussion of shorts in the system, please refer to the following schematic.

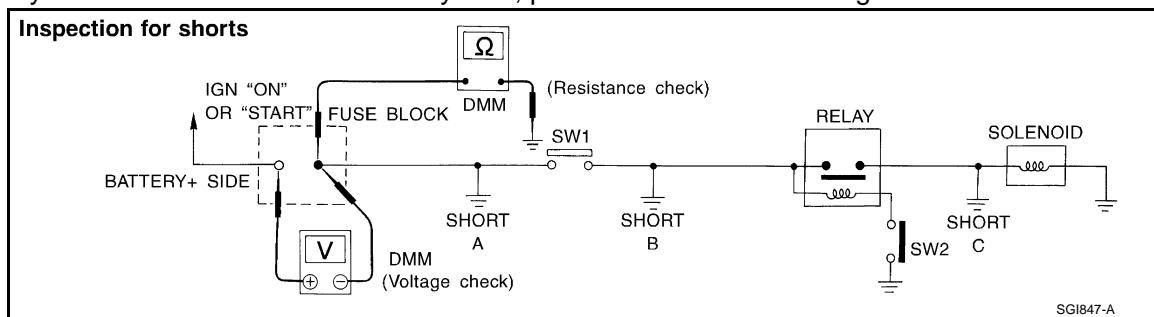

### Resistance Check Method

- Disconnect the battery negative cable and remove the blown fuse.
- Disconnect all loads (SW1 open, relay disconnected and solenoid disconnected) powered through the fuse.
- Connect one probe of the DMM to the load side of the fuse terminal. Connect the other probe to a known good ground.
- With SW1 open, check for continuity.  
continuity: short is between fuse terminal and SW1 (point A).  
no continuity: short is further down the circuit than SW1.
- Close SW1 and disconnect the relay. Put probes at the load side of fuse terminal and a known good ground. Then, check for continuity.  
continuity: short is between SW1 and the relay (point B).  
no continuity: short is further down the circuit than the relay.
- Close SW1 and jump the relay contacts with jumper wire. Put probes at the load side of fuse terminal and a known good ground. Then, check for continuity.  
continuity: short is between relay and solenoid (point C).  
no continuity: check solenoid, retrace steps.

### Voltage Check Method

- Remove the blown fuse and disconnect all loads (i.e. SW1 open, relay disconnected and solenoid disconnected) powered through the fuse.
- Turn the ignition switch to the ON or START position. Verify battery voltage at the battery + side of the fuse terminal (one lead on the battery + terminal side of the fuse block and one lead on a known good ground).
- With SW1 open and the DMM leads across both fuse terminals, check for voltage.  
voltage: short is between fuse block and SW1 (point A).  
no voltage: short is further down the circuit than SW1.
- With SW1 closed, relay and solenoid disconnected and the DMM leads across both fuse terminals, check for voltage.  
voltage: short is between SW1 and the relay (point B).  
no voltage: short is further down the circuit than the relay.
- With SW1 closed, relay contacts jumped with fused jumper wire check for voltage.  
voltage: short is down the circuit of the relay or between the relay and the disconnected solenoid (point C).  
no voltage: retrace steps and check power to fuse block.


## GROUND INSPECTION

- Ground connections are very important to the proper operation of electrical and electronic circuits. Ground connections are often exposed to moisture, dirt and other corrosive elements. The corrosion (rust) can become an unwanted resistance. This unwanted resistance can change the way a circuit works.
- Electronically controlled circuits are very sensitive to proper grounding. A loose or corroded ground can drastically affect an electronically controlled circuit. A poor or corroded ground can easily affect the circuit. Even when the ground connection looks clean, there can be a thin film of rust on the surface.

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < BASIC INSPECTION >

- When inspecting a ground connection follow these rules:
  - Remove the ground bolt or screw.
  - Inspect all mating surfaces for tarnish, dirt, rust, etc.
  - Clean as required to assure good contact.
  - Reinstall bolt or screw securely.
  - Inspect for "add-on" accessories which may be interfering with the ground circuit.
  - If several wires are crimped into one ground eyelet terminal, check for proper crimps. Check all of the wires are clean, securely fastened and providing a good ground path. If multiple wires are cased in one eyelet check no ground wires have excess wire insulation.
- For detailed ground distribution information, refer to "Ground Distribution" in PG section.

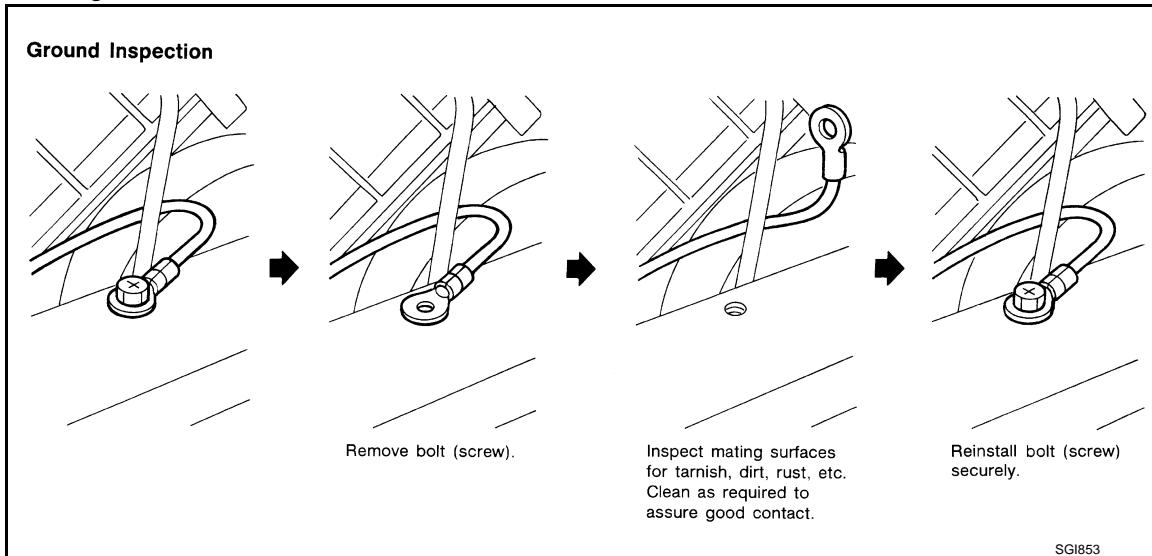

## VOLTAGE DROP TESTS

- Voltage drop tests are often used to find components or circuits which have excessive resistance. A voltage drop in a circuit is caused by a resistance when the circuit is in operation.
- Check the wire in the illustration. When measuring resistance with DMM, contact by a single strand of wire will give reading of 0 ohms. This would indicate a good circuit. When the circuit operates, this single strand of wire is not able to carry the current. The single strand will have a high resistance to the current. This will be picked up as a slight voltage drop.
- Unwanted resistance can be caused by many situations as follows:
  - Undersized wiring (single strand example)
  - Corrosion on switch contacts
  - Loose wire connections or splices.
- If repairs are needed always use wire that is of the same or larger gauge.

### Measuring Voltage Drop — Accumulated Method

- Connect the DMM across the connector or part of the circuit you want to check. The positive lead of the DMM should be closer to power and the negative lead closer to ground.
- Operate the circuit.
- The DMM will indicate how many volts are being used to "push" current through that part of the circuit.

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P


# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < BASIC INSPECTION >

Note in the illustration that there is an excessive 4.1 volt drop between the battery and the bulb.

**Symptom: Dim bulb or no operation**


0 (zero) ohm  
resistance  
between switch  
and bulb

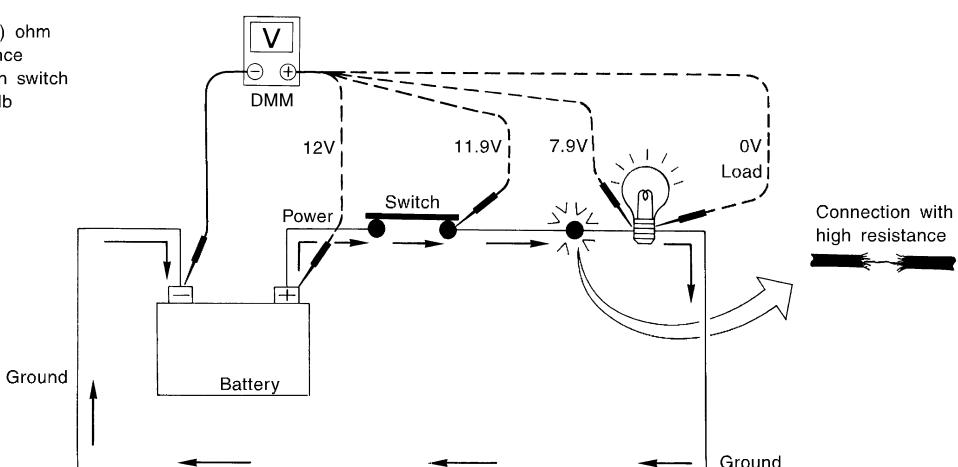

SGI974

### Measuring Voltage Drop — Step-by-Step

- The step-by-step method is most useful for isolating excessive drops in low voltage systems (such as those in "Computer Controlled Systems").
- Circuits in the "Computer Controlled System" operate on very low amperage.
- The (Computer Controlled) system operations can be adversely affected by any variation in resistance in the system. Such resistance variation may be caused by poor connection, improper installation, improper wire gauge or corrosion.
- The step by step voltage drop test can identify a component or wire with too much resistance.

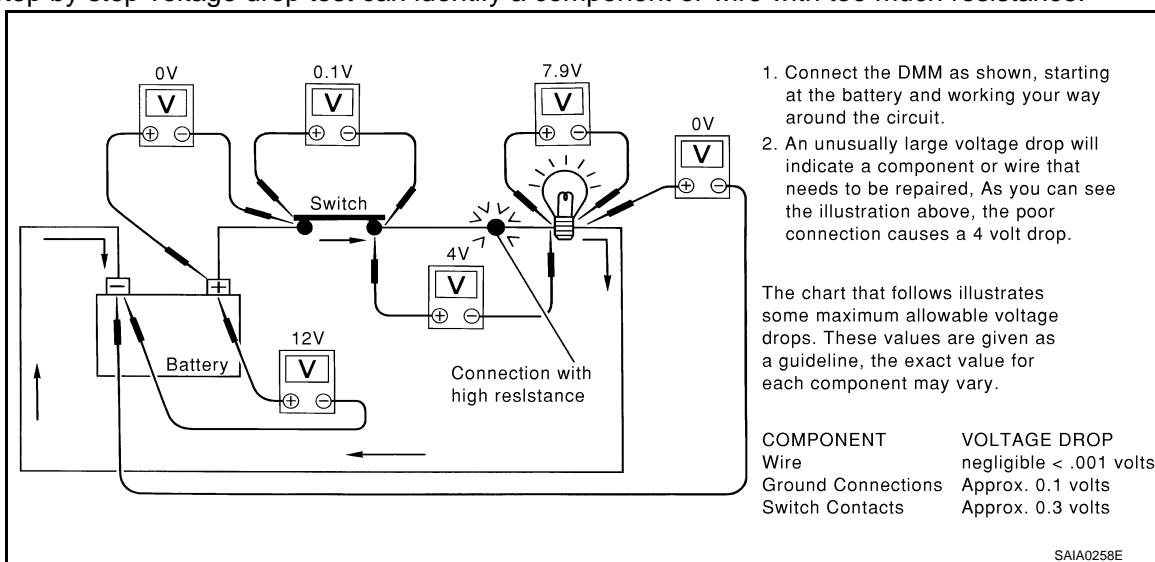


SAIA0258E

## CONTROL UNIT CIRCUIT TEST

### System Description

- When the switch is ON, the control unit lights up the lamp.

### CASE 1

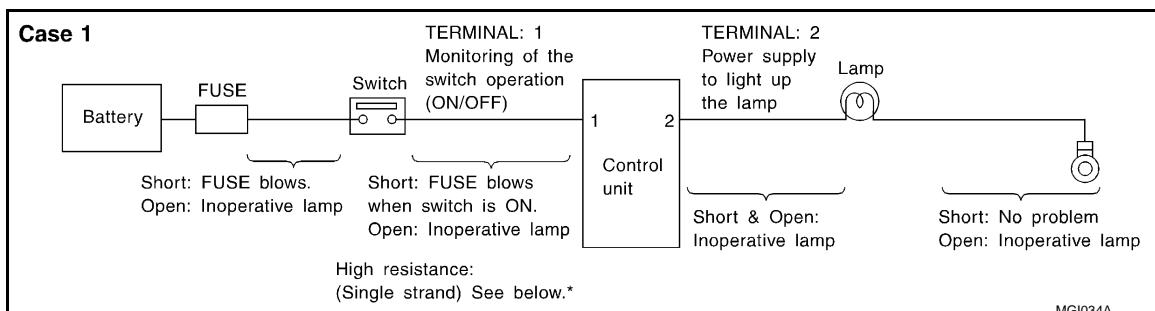

MGI034A

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT


## < BASIC INSPECTION >

### INPUT-OUTPUT VOLTAGE CHART

Terminal No.		Description		Condition	Value (Approx.)	In case of high resistance such as single strand (V) *
+	-	Signal name	Input/Output			
1	Body ground	Switch	Input	Switch ON	Battery voltage	Lower than battery voltage Approx. 8 (Example)
				Switch OFF	0 V	Approx. 0
2	Body ground	Lamp	Output	Switch ON	Battery voltage	Approx. 0 (Inoperative lamp)
				Switch OFF	0 V	Approx. 0

- The voltage value is based on the body ground.
- \*: If high resistance exists in the switch side circuit (caused by a single strand), terminal 1 does not detect battery voltage. Control unit does not detect the switch is ON even if the switch does not turn ON. Therefore, the control unit does not supply power to light up the lamp.

### CASE 2

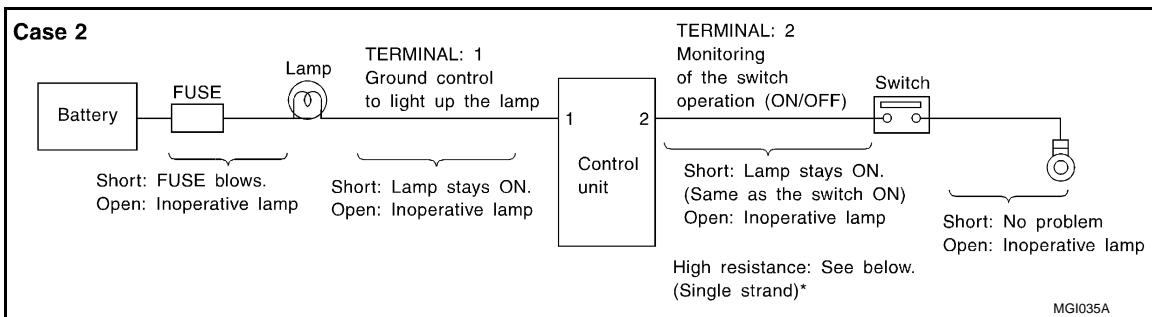

### INPUT-OUTPUT VOLTAGE CHART

Terminal No.		Description		Condition	Value (Approx.)	In case of high resistance such as single strand (V) *
+	-	Signal name	Input/Output			
1	Body ground	Lamp	Output	Switch ON	0 V	Battery voltage (Inoperative lamp)
				Switch OFF	Battery voltage	Battery voltage
2	Body ground	Switch	Input	Switch ON	0 V	Higher than 0 Approx. 4 (Example)
				Switch OFF	5 V	Approx. 5

- The voltage value is based on the body ground.
- \*: If high resistance exists in the switch side circuit (caused by a single strand), terminal 2 does not detect approx. 0 V. Control unit does not detect the switch is ON even if the switch does not turn ON. Therefore, the control unit does not control ground to light up the lamp.

# CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

## CONSULT/GST CHECKING SYSTEM


### Description

INFOID:0000000011251290

- When CONSULT/GST is connected with a data link connector (A) equipped on the vehicle side, it will communicate with the control unit equipped in the vehicle and then enable various kinds of diagnostic tests.

1 : Instrument lower panel LH

- Refer to "CONSULT Software Operation Manual" for more information.

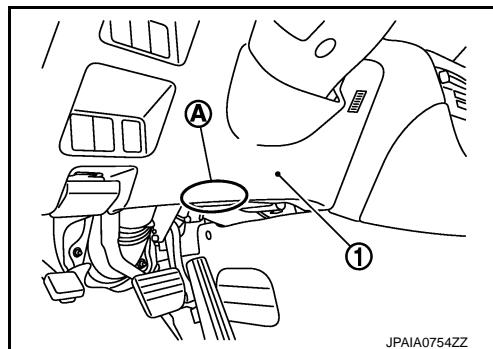

JPAIA0754ZZ

### CONSULT Function and System Application\*1

INFOID:0000000011251291

### FUNCTION

Mode	Function
All DTC Reading	Display all DTCs or diagnostic items that all ECUs are recording and judging.
Work Support	This mode enables a technician to adjust some devices faster and more accurately.
Self Diagnostic Results	Retrieve DTC from ECU and display diagnostic items.
Data Monitor	Monitor the input/output signal of the control unit in real time.
CAN Diagnosis	This mode displays a network diagnosis result about CAN by diagram.
CAN Diagnosis Support Monitor	It monitors the status of CAN communication.
Active Test	Send the drive signal from CONSULT to the actuator. The operation check can be performed.
ECU Identification	Display the ECU identification number (part number etc.) of the selected system.
Configuration	Function to READ/WRITE vehicle configuration.
SRT&P-DTC Confirmation	The state of System Readiness Test (SRT) items, the presence or absence of permanent DTC*, and driving conditions can be checked.
DTC work support	DTC reproduction procedure can be performed speedily and precisely.
Others	Other results or histories, etc. that are recorded in ECU are displayed.

\*: Permanent DTC is not applied for regions where it is not mandated.

### SYSTEM APPLICATION\*1

System	All DTC Reading	Work Support	Self Diagnostic Results	Data Monitor	CAN Diagnosis	CAN Diagnosis Support Monitor	Active Test	ECU Identification	Configuration	SRT&P-DTC Confirmation	DTC work support	Others
ENGINE	x	x	x	x	x	x	x	x	-	x <sup>2</sup>	x	-
TRANSMISSION	x	x	x	x	x	x	-	x	-	-	x	• CALIB DATA
AIR BAG	x	-	x	-	x	-	-	x	-	-	-	• TROUBLE DIAG RECORD • CAUSE OF WARNING LAMP
METER / M&A	x	-	x	x	x	x	-	-	-	-	-	• Warning History

# CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

System	All DTC Reading	Work Support	Self Diagnostic Results		Data Monitor	CAN Diagnosis	CAN Diagnosis Support Monitor		Active Test	ECU Identification		Configuration	SRT&P-DTC Confirmation	DTC work support	Others
AVM	x	x	x	x	x	x	x	-	x	x	-	-	-	-	
BCM	x	x	x	x	x	x	x	x	x	x	-	-	-	-	
AUTO DRIVE POS.	x	x	x	x	x	x	x	x	x	-	-	-	-	-	
ABS	x	x	x	x	x	x	x	x	x	-	-	-	-	-	
IPDM E/R	x	-	x	x	x	x	x	x	x	-	-	-	-	-	
ICC/ADAS	x	x	x	x	x	x	x	x	x	x	-	-	-	-	
BSW/BUZZER	x	-	x	x	x	x	x	x	x	-	-	-	-	-	
AIR PRESSURE MONITOR	x	x	x	x	x	-	x	x	x	-	-	-	-	-	
ALL MODE AWD/4WD	x	-	x	x	x	x	x	x	x	-	-	-	-	-	
MULTI AV	-	x	x	x	x	x	x	-	x	x	-	-	-	-	
TCU	x	x	x	x	x	x	-	x	-	-	-	-	-	-	
SONAR	x	x	x	x	x	x	x	x	x	x	-	-	-	-	
PRECRASH SEAT BELT	x	-	x	x	x	x	-	x	-	-	-	-	-	-	
ADAPTIVE LIGHT	x	x	x	x	x	x	x	x	x	x	-	-	-	-	
HVAC	-	x	x	x	x	x	x	x	x	x	-	-	-	-	
SIDE RADAR LEFT	x	-	x	x	x	x	x	x	x	x	-	-	-	-	
SIDE RADAR RIGHT	x	-	x	x	x	x	x	x	x	x	-	-	-	-	
CAN GATEWAY	x	-	x	-	x	x	-	x	x	x	-	-	-	-	
LASER/RADAR	x	x	x	x	x	x	x	-	x	-	-	-	-	-	
LANE CAMERA	x	x	x	x	x	x	x	-	x	-	-	-	-	-	
ACCELE PEDAL ACT	x	-	x	x	x	x	x	x	x	x	-	-	-	-	

x: Applicable

\*1: If GST application is equipped, functions in accordance with SAE J1979 and ISO 15031-5 can be used.

\*2: Permanent DTC is not applied for regions where it is not mandated.

## CONSULT/GST Data Link Connector (DLC) Circuit

INFOID:0000000011251292

### INSPECTION PROCEDURE

If the CONSULT/GST cannot diagnose the system properly, check the following items.

Symptom	Check item
CONSULT/GST cannot access any system.	<ul style="list-style-type: none"> <li>CONSULT/GST DLC power supply circuit (Terminal 8 and 16) and ground circuit (Terminal 4 and 5)</li> </ul>
CONSULT cannot access individual system. (Other systems can be accessed.)	<ul style="list-style-type: none"> <li>Power supply and ground circuit for the control unit of the system (For detailed circuit, refer to wiring diagram for each system.)</li> <li>Open or short circuit between the system and CONSULT DLC (For detailed circuit, refer to wiring diagram for each system.)</li> <li>Open or short circuit CAN communication line. Refer to <a href="#">LAN-25, "Trouble Diagnosis Flow Chart"</a>.</li> </ul>

### NOTE:

The DDL1 and DDL2 circuits from DLC pins 12, 13, 14 and 15 may be connected to more than one system. A short in a DDL circuit connected to a control unit in one system may affect CONSULT access to other systems.

# CONSULT/GST CHECKING SYSTEM


## < BASIC INSPECTION >

If the GST cannot operate properly, check the circuit based on the information of SAE J1962 and ISO 15031-3.

## Wiring Diagram - CONSULT/GST CHECKING SYSTEM -


INFOID:0000000011251293

WITH ICC

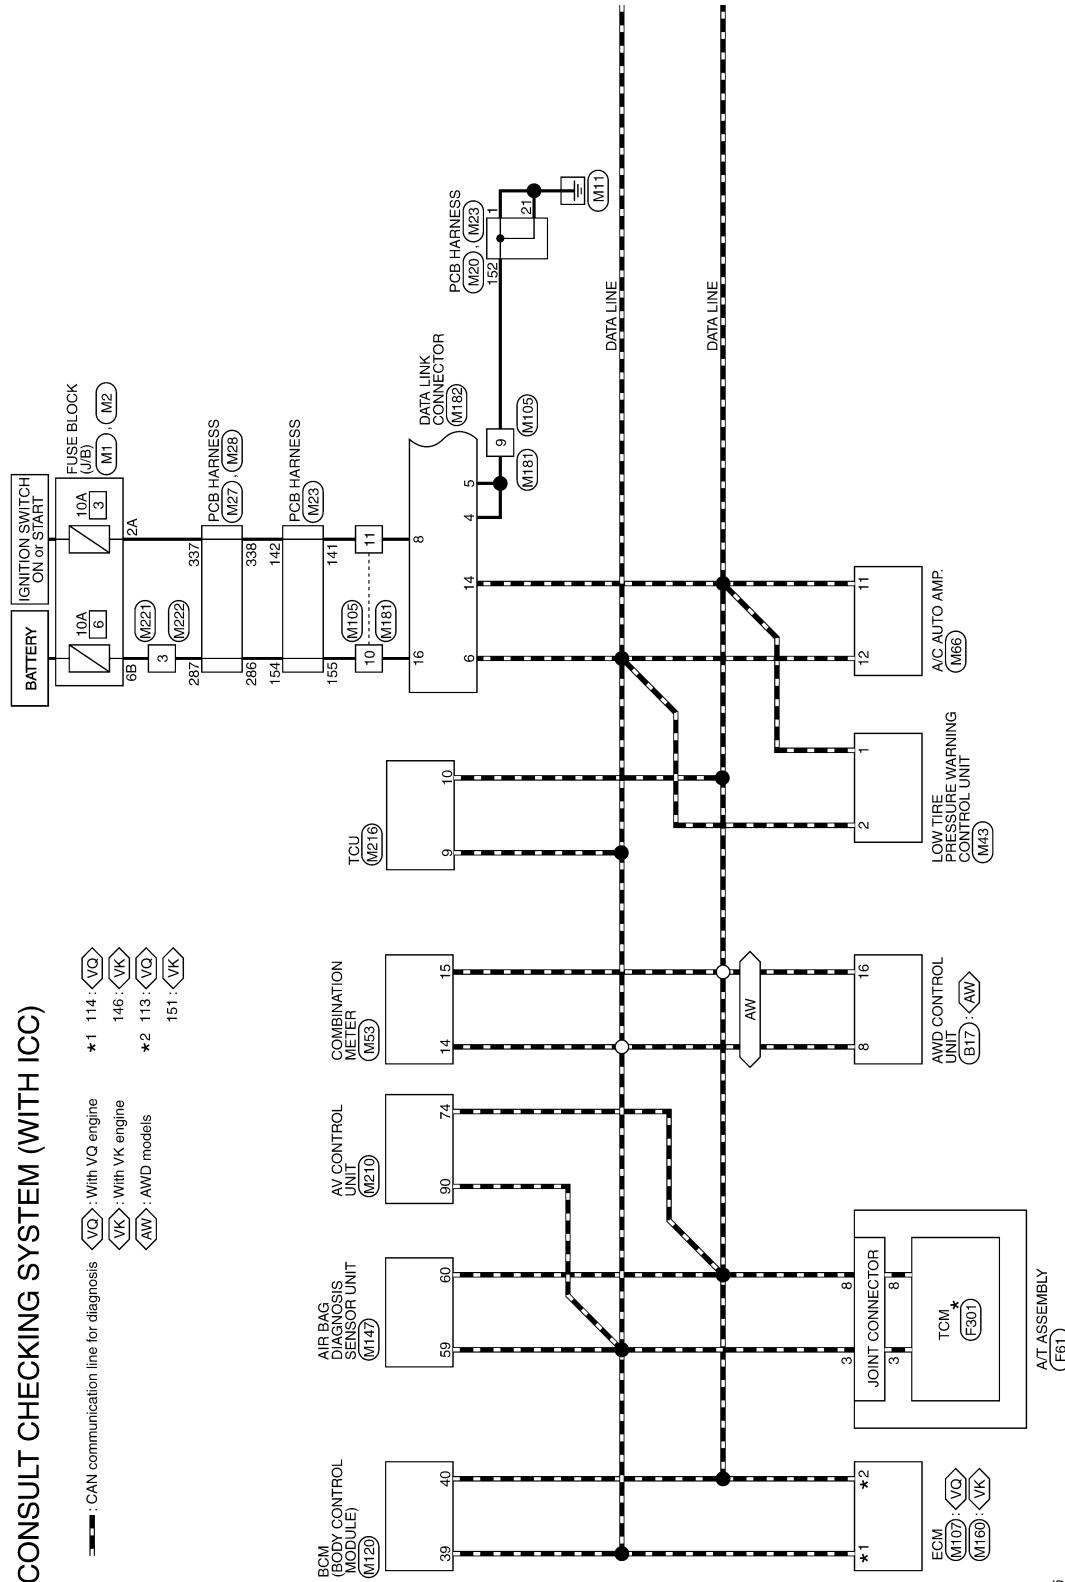

# CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

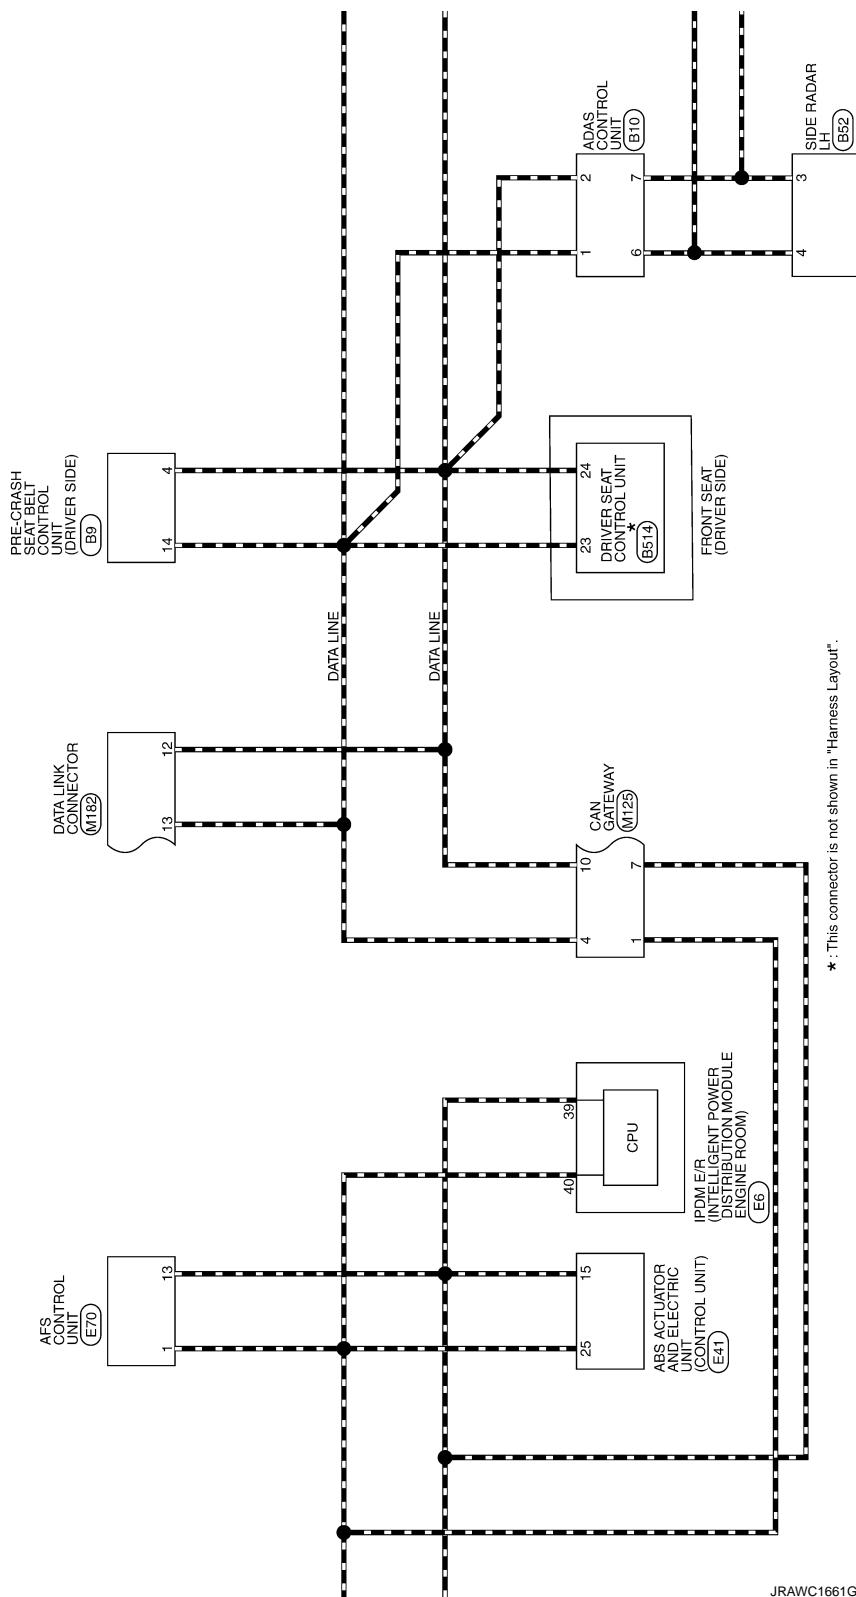


\* : This connector is not shown in "Harness Layout".

JRAWC1661GB

GI B C D E F G H I J K L M N O P

# CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

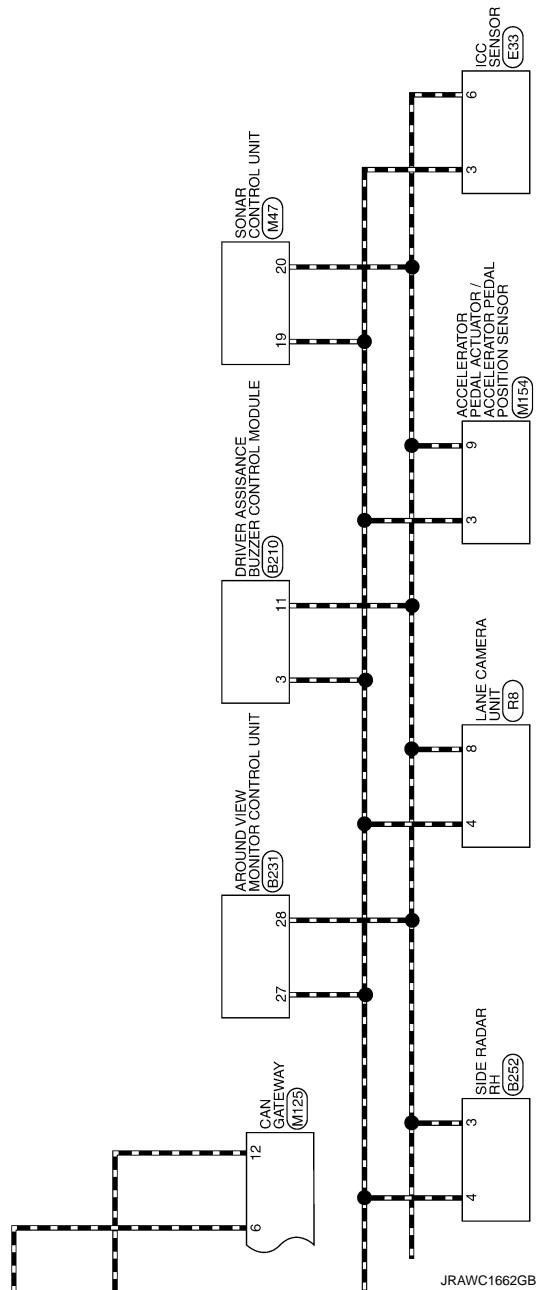


# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

G

## CONSULT CHECKING SYSTEM (WITH IC)

Connector No.	B9	19 O	WARNING SYSTEMS ON IND	28 Y	CANL [With [C]]
Connector Name	PRE-CRASH SEAT BELT CONTROL UNIT (DRIVER SIDE)	22 BR	BLUETOOTH WIRELESS BAND SW/INTERMEDIATE INDICATOR	30 SB	RETRACT/MOTOR OPERATION SIGNAL (OPEN)
Connector Type	TH18FW/C52			32 P	RETRACT/MOTOR OPERATION SIGNAL (CLOSE)

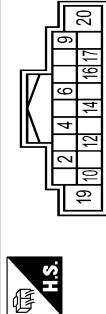

Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
2 G	OUT 1	1 G	IGNITION
4 R	CAN LO	3 L	ITS COMM-H
6 LG	BUCKLE SW/LH NO	5 BR	GROUND
9 SHIELD	SHIELD GND	7 R	SPEAKER OUT(+)
10 R	SENS POWER 1	11 Y	ITS COMM-L
12 B	OUT 2	13 BR	GROUND
14 L	CANH	15 R	ITS COMM-H
16 Y	LOCAL COMM 1	16 G	SPEAKER OUT(-)
17 W	SENS GND 1	18 Y	IGNITION
19 Y	MOTOR BAT	20 Y	GND
20 B	MOTOR GND		

Connector No.	B17	19 O	WARNING SYSTEMS ON IND	28 Y	CANL [With [C]]
Connector Name	AWD CONTROL UNIT	22 BR	BLUETOOTH WIRELESS BAND SW/INTERMEDIATE INDICATOR	30 SB	RETRACT/MOTOR OPERATION SIGNAL (OPEN)
Connector Type	TH16FW/NH			32 P	RETRACT/MOTOR OPERATION SIGNAL (CLOSE)



Terminal Color Of Wire

Terminal No.	Color Of Wire	Signal Name [Specification]	Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	AWD SOL (+)	3	L	IGNITION
2	R	AWD SOL (-)	5	BR	GROUND
3	W	FLUID TEMP (-)	6	R	SPEAKER OUT(+)
7	Y	IGN	11	Y	ITS COMM-L
8	L	CANH	13	BR	GROUND
9	SB	AWD SOL BAT	15	R	ITS COMM-H
10	BY	GND	16	G	SPEAKER OUT(-)
11	BY	GND	17	Y	IGNITION
13	LG	FLUID TEMP (+)	18	Y	GND
15	G	BATTERY POWER SUPPLY	19	BR	IGNITION
16	P	CANL	20	Y	IGNITION

Terminal Color Of Wire

Connector No.	B210	19 O	WARNING SYSTEMS ON IND	28 Y	CANL [With [C]]
Connector Name	DRIVER ASSISTANCE BUZZER CONTROL MODULE	22 BR	BLUETOOTH WIRELESS BAND SW/INTERMEDIATE INDICATOR	30 SB	RETRACT/MOTOR OPERATION SIGNAL (OPEN)
Connector Type	TH16FW/NH			32 P	RETRACT/MOTOR OPERATION SIGNAL (CLOSE)



Connector No.	B252	19 O	WARNING SYSTEMS ON IND	28 Y	CANL [With [C]]
Connector Name	SIDE RADAR RH	22 BR	BLUETOOTH WIRELESS BAND SW/INTERMEDIATE INDICATOR	30 SB	RETRACT/MOTOR OPERATION SIGNAL (OPEN)
Connector Type	AA0C06FE-WP-MP			32 P	RETRACT/MOTOR OPERATION SIGNAL (CLOSE)



Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]		
1	BR	RIGHT/EFT SWITCHING SIGNAL	1	BR	GROUND
2	Y	ITS COMM-L	2	Y	ITS COMM-H
3	LG	GROUNDS	3	LG	IGNITION
4	LG	RECLINER SW (FORWARD)	4	LG	RECLINER SW (BACKWARD)
5	LG	REAR LIFTER SW (DOWNWARD)	5	LG	REAR LIFTER SW (UPWARD)
6	LG	FRONT LIFTER SW (DOWNWARD)	6	LG	FRONT LIFTER SW (UPWARD)
7	LG	FRONT LIFTER SW (UPWARD)	7	LG	FRONT LIFTER SW (DOWNWARD)
8	LG	FRONT LIFTER SW (DOWNWARD)	8	LG	FRONT LIFTER SW (UPWARD)

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	SLIDE SW (BACKWARD)
2	Y	SLIDE SW (FORWARD)
3	LG	IGNITION SIGNAL
4	V	ACC POWER SUPPLY
5	LG	AV COMMUNICATION SIGNAL (H)
6	LG	AV COMMUNICATION SIGNAL (L)
7	LG	REVERSE SIGNAL
8	LG	REAR LIFTER SW (DOWNWARD)
9	LG	REAR LIFTER SW (UPWARD)
10	LG	FRONT LIFTER SW (DOWNWARD)
11	LG	FRONT LIFTER SW (UPWARD)
12	LG	FRONT LIFTER SW (DOWNWARD)
13	LG	FRONT LIFTER SW (UPWARD)
14	LG	FRONT LIFTER SW (DOWNWARD)
15	LG	FRONT LIFTER SW (UPWARD)
16	LG	FRONT LIFTER SW (DOWNWARD)
17	LG	FRONT LIFTER SW (UPWARD)
18	LG	FRONT LIFTER SW (DOWNWARD)
19	LG	FRONT LIFTER SW (UPWARD)
20	LG	FRONT LIFTER SW (DOWNWARD)
21	LG	FRONT LIFTER SW (UPWARD)
22	LG	FRONT LIFTER SW (DOWNWARD)
23	LG	FRONT LIFTER SW (UPWARD)
24	LG	FRONT LIFTER SW (DOWNWARD)
25	LG	FRONT LIFTER SW (UPWARD)
26	LG	FRONT LIFTER SW (DOWNWARD)
27	LG	FRONT LIFTER SW (UPWARD)
28	LG	FRONT LIFTER SW (DOWNWARD)

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	SLIDE SW (BACKWARD)
2	Y	SLIDE SW (FORWARD)
3	LG	IGNITION SIGNAL
4	V	ACC POWER SUPPLY
5	LG	AV COMMUNICATION SIGNAL (H)
6	LG	AV COMMUNICATION SIGNAL (L)
7	LG	REVERSE SIGNAL
8	LG	REAR LIFTER SW (DOWNWARD)
9	LG	REAR LIFTER SW (UPWARD)
10	LG	FRONT LIFTER SW (DOWNWARD)
11	LG	FRONT LIFTER SW (UPWARD)
12	LG	FRONT LIFTER SW (DOWNWARD)
13	LG	FRONT LIFTER SW (UPWARD)
14	LG	FRONT LIFTER SW (DOWNWARD)
15	LG	FRONT LIFTER SW (UPWARD)
16	LG	FRONT LIFTER SW (DOWNWARD)
17	LG	FRONT LIFTER SW (UPWARD)
18	LG	FRONT LIFTER SW (DOWNWARD)
19	LG	FRONT LIFTER SW (UPWARD)
20	LG	FRONT LIFTER SW (DOWNWARD)
21	LG	FRONT LIFTER SW (UPWARD)
22	LG	FRONT LIFTER SW (DOWNWARD)
23	LG	FRONT LIFTER SW (UPWARD)
24	LG	FRONT LIFTER SW (DOWNWARD)
25	LG	FRONT LIFTER SW (UPWARD)
26	LG	FRONT LIFTER SW (DOWNWARD)
27	LG	FRONT LIFTER SW (UPWARD)
28	LG	FRONT LIFTER SW (DOWNWARD)

# **CONSULT/GST CHECKING SYSTEM**

## < BASIC INSPECTION >

CONSULT CHECKING SYSTEM (WITH ICC)

19	GY	PULSE (SLIDE) PULSE (RECEIVER)	E33	20 O F-r-LH POWER			
20	RY	PULSE (REAR LIFTER)		25 L CAN-H			
21	Y	PULSE (FRONT LIFTER)		28 V VAC SEN(POWER)			
22	R	CAN-H		30 R VDC OFF SW			
23	P			32 SHIELD VAC SEN(GND)			
24	PIL	CAN-L		34 G IGN(POWER)			
25	GO	IND-1					
26	LO	IND-2					
27	VW	ADDRESS 2	Connector No. E70				
28	VW	ADDRESS 1	Connector Name AFS CONTROL UNIT				
29	L	SET SW	Connector Type TH4FWWNH				
30	BR	PULSE(SETL)T					
31	BR/W	PULSE(TELESCOP)C					
32	WL	UART (TX/RX)					
33	S	POWER SUPPLY (ENCODER)	Terminal No.	Color Of Wire	Signal Name [Specification]		
34	W	SET SW	1	LG	IGNITION		
35	W	PULSE(SETL)	2	Y	ITS COMM-H		
36	W	POWER SUPPLY (ENCODER)	3	Y	ITS COMM-L		
37	W	GROUND	4	BY	GROUND		
38							
39			Connector No. E41	Terminal Color Of Wire	Signal Name [Specification]		
40			Connector Name ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	1	L	CAN-L	
41			Connector Type SA23DFB-S1Z4-U	3	GR	AFS SWITCH SIGNAL	
42				6	Y	HEIGHT SENSOR SIGNAL	
43				8	Y	SWIVEL ACTUATOR LIN SIGNAL	
44				11	B	SWIVEL ACTUATOR LIN SIGNAL	
45				12	G	IGNITION POWER SUPPLY	
46				13	P	CAN-L	
47				19	BR	SWIVEL ACTUATOR GROUND	
48				21	V	HEIGHT SENSOR POWER SUPPLY	
49				22	SB	AIMING MOTOR DRIVE SIGNAL	
50				23	LG	HEIGHT SENSOR GROUND	
51				24	B	AIMING MOTOR GROUND	
52							
53			Terminal No.	Color Of Wire	Signal Name [Specification]		
54			1	BW	ECU(GND)		
55			2	W	MOTOR(GND)		
56			3	Y	SOLENOID(GND)		
57			4	G	MOTOR(POWER)		
58			5	SB	STOP LAMP SW		
59			6	Y	CAN(2+)		
60			7	W	R-r-LH SEN(SIGNAL)		
61			8	G	R-r-LH SEN(POWER)		
62			9	BR	F-r-RH SEN(SIGNAL)		
63			10	B	F-r-RH SEN(POWER)		
64			13	LG	VAC SEN(SIGNAL)		
65			15	P	CAN(L)		
66			16	B	CAN(R)		
67			17	Y	R-r-RH SEN(SIGNAL)		
68			18	BR	R-r-LH SEN(POWER)		
69			19	SB	F-r-LH SEN(SIGNAL)		
70							

JRAWC1677GB

# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

GI

## CONSULT CHECKING SYSTEM (WITH ICC)

Connector No.	M1
Connector Name	FUSE BLOCK (JB)
Connector Type	NS36FW-M2



Connector No.	M27
Connector Name	PCB HARNESS
Connector Type	TH40FB-NH



Connector No.	M23
Connector Name	PCB HARNESS
Connector Type	TH40FW-NH



Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1A R	-	121 R	O
2A W	-	122 V	BG
3A Y	-	123 BG	BG
4A W	-	124 BG	BG
5A V	-	125 B	B
6A Y	-	131 SB	W
8A Y	-	132 LG	Y
11 R	-	133 L	SHIELD
12 R	-	134 L	B
15 B	-	135 P	SHIELD
16 SHIELD	-	136 P	B
17 R	-	137 Y	B
18 P	-	138 L	B
19 W	-	141 W	GR
21 B	-	142 W	B
22 Y	- (With CC)	145 B	B
23 L	- (Without CC)	146 LG	L
23 SB	- (With CC)	147 B	W
24 L	- (Without CC)	149 B	R
27 P	-	150 P	R
31 V	-	151 L	R
33 V	-	152 B	SHIELD
35 L	-	153 W	P
36 P	-	154 W	V
38 L	-	155 W	G
40 Y	-	156 R	R
5B SB	-	159 R	R
6B W	- (With X0 engine)	160 P	W
6B Y	- (With X0 engine)	162 B	B
7B Y	-	163 B	Y
8B R	-	164 Y	G
9B R	-	166 R	R



Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
121 R	-	281 O	-
122 V	-	282 BG	-
123 BG	-	283 BG	-
124 BG	-	284 BG	-
125 B	-	285 W	-
131 SB	-	287 Y	-
132 LG	-	289 SHIELD	-
133 L	-	290 B	-
134 L	-	291 SHIELD	-
135 P	-	292 B	-
136 P	-	293 B	-
137 Y	-	294 B	-
138 L	-	295 B	-
141 W	-	296 GR	-
142 W	-	297 B	-
145 B	-	298 B	-
146 LG	-	299 L	-
147 B	-	300 W	-
149 B	-	301 R	-
150 P	-	302 R	-
151 L	-	303 R	-
152 B	-	304 SHIELD	-
153 W	-	305 P	-
154 W	-	306 V	-
155 W	-	308 G	-
156 R	-	310 R	-
159 R	-	311 W	-
160 P	-	312 B	-
162 B	-	313 B	-
163 B	-	314 Y	-
164 Y	-	315 G	-
166 R	-	316 R	-
167 W	-	317 W	-
168 SHIELD	-	318 SHIELD	-
169 V	-	319 V	-
170 W	-	320 W	-



Connector No.	M20
Connector Name	PCB HARNESS
Connector Type	TH40FB-NH



Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1 R	-	121 R	O
2 B	-	122 V	BG
3 Y	-	123 BG	BG
4 G	-	124 BG	BG
5 R	-	125 B	B
6 W	-	131 SB	W
8A Y	-	132 LG	Y
11 BR	-	133 L	SHIELD
12 R	-	134 L	B
15 B	-	135 P	SHIELD
16 SHIELD	-	136 P	B
17 R	-	137 Y	B
18 P	-	138 L	B
19 W	-	141 W	GR
21 B	-	142 W	B
22 Y	- (With CC)	145 B	B
23 L	- (Without CC)	146 LG	L
23 SB	- (With CC)	147 B	W
24 L	- (Without CC)	149 B	R
27 P	-	150 P	R
31 V	-	151 L	R
33 V	-	152 B	SHIELD
35 L	-	153 W	P
36 P	-	154 W	V
38 L	-	155 W	G
40 Y	-	156 R	R



Connector No.	M2
Connector Name	FUSE BLOCK (JB)
Connector Type	NS36FWCS



Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1 R	- (With CC)	121 R	O
2 Y	- (Without CC)	122 V	BG
23 L	- (With CC)	123 BG	BG
23 SB	- (Without CC)	124 BG	BG
24 L	-	125 B	B
27 P	-	131 SB	W
31 V	-	132 LG	Y
33 V	-	133 L	SHIELD
35 L	-	134 L	B
36 P	-	135 P	SHIELD
38 L	-	136 P	B
40 Y	-	137 Y	B




JRAWC1678GB

# CONSULT/GST CHECKING SYSTEM


**< BASIC INSPECTION >**

## CONSULT CHECKING SYSTEM (WITH ICC)

Connector No.	M28
Connector Name	PCB HARNESS
Connector Type	TH0FW-NH

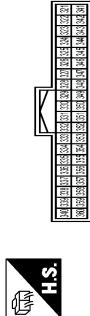

Connector No.	M43
Connector Name	LOW TIRE PRESSURE WARNING CONTROL UNIT
Connector Type	TH2FW-NH

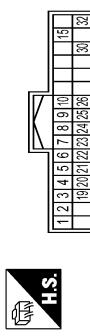

Terminal Color Of Wire	Signal Name [Specification]	Signal Name [Specification]
1 P	CANL	CORNER SENSOR SIGNAL FRONT LH
2 L	CANH	CORNER SENSOR SIGNAL FRONT RH
3 B	RR TUNER (SG)	CORNER SENSOR SIGNAL REAR LH
4 B	RL TUNER (SG)	CENTER SENSOR SIGNAL REAR LH
5 B	FR TUNER (SG)	PADDLE SHIFTER SHIFT DOWN SIGNAL
6 G	FL TUNER (SG)	PADDLE SHIFTER SHIFT UP SIGNAL
7 R	RR TUNER (VCC)	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
8 W	RL TUNER (VCC)	PASSENGER SEAT BELT WARNING SIGNAL
9 W	FR TUNER (VCC)	NON-MANUAL MODE SIGNAL
10 W	FL TUNER (VCC)	MANUAL MODE SHIFT DOWN SIGNAL
15 Y	IGN	MANUAL MODE SHIFT UP SIGNAL
19 G	RR TUNER (RSSI)	MANUAL MODE SIGNAL
20 R	RL TUNER (RSSI)	MANUAL MODE SIGNAL
20 Y	CANL (Without ICC)	
21 G	FR TUNER (RSSI)	
22 R	FL TUNER (RSSI)	
23 W	RR TUNER (GND)	
24 R	RL TUNER (GND)	
25 R	FR TUNER (GND)	
26 B	FL TUNER (GND)	
30 G	BCM FLASHER GND	
32 B		
360 G		

Terminal Color Of Wire	Signal Name [Specification]	Signal Name [Specification]
7 SB	ENTER SWITCH SIGNAL	SELECT SWITCH SIGNAL
8 B	BATTERY POWER SUPPLY	ILLUMINATION CONTROL SWITCH SIGNAL (+)
9 G	IGNITION SIGNAL	ILLUMINATION CONTROL SWITCH SIGNAL (-)
10 GR	GR	TRIP RESET SWITCH SIGNAL
11 L		
12 B		GROUND
14 L	CANL	AIR BAG SIGNAL
15 P		LED HEADLAMP (RH) WARNING SIGNAL
16 R		LED HEADLAMP (LH) WARNING SIGNAL
18 V		
23 B	FUEL LEVEL SENSOR GROUND	
24 B		
25 W	ALTERNATOR SIGNAL	
26 V	PARKING BRAKE SWITCH SIGNAL	
27 V	BRAKE FLUID LEVEL SWITCH SIGNAL	
28 G	WASHER LEVEL SWITCH SIGNAL	
29 L		
32 G		
33 BG		
34 G	FUEL LEVEL SENSOR SIGNAL	
35 W	SEAT BELT BUCKLE SIGNAL (DRIVER SIDE)	
36 G	PASSENGER SEAT BELT WARNING SIGNAL	
37 G	NON-MANUAL MODE SIGNAL	
38 V	MANUAL MODE SHIFT DOWN SIGNAL	
39 L	MANUAL MODE SHIFT UP SIGNAL	
40 W	MANUAL MODE SIGNAL	

Terminal Color Of Wire	Signal Name [Specification]	Signal Name [Specification]
1 M66	A/C AUTO AMP	
2 Connector Name		TF2OFW-TB6
3 Connector Type		

Terminal Color Of Wire	Signal Name [Specification]	Signal Name [Specification]
1 H.S.		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		
26		


Terminal Color Of Wire	Signal Name [Specification]	Signal Name [Specification]
1 H.S.		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		
26		

Terminal Color Of Wire	Signal Name [Specification]	Signal Name [Specification]
1 H.S.		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		
26		

JRAWC1679GB

# **CONSULT/GST CHECKING SYSTEM**

## < BASIC INSPECTION >

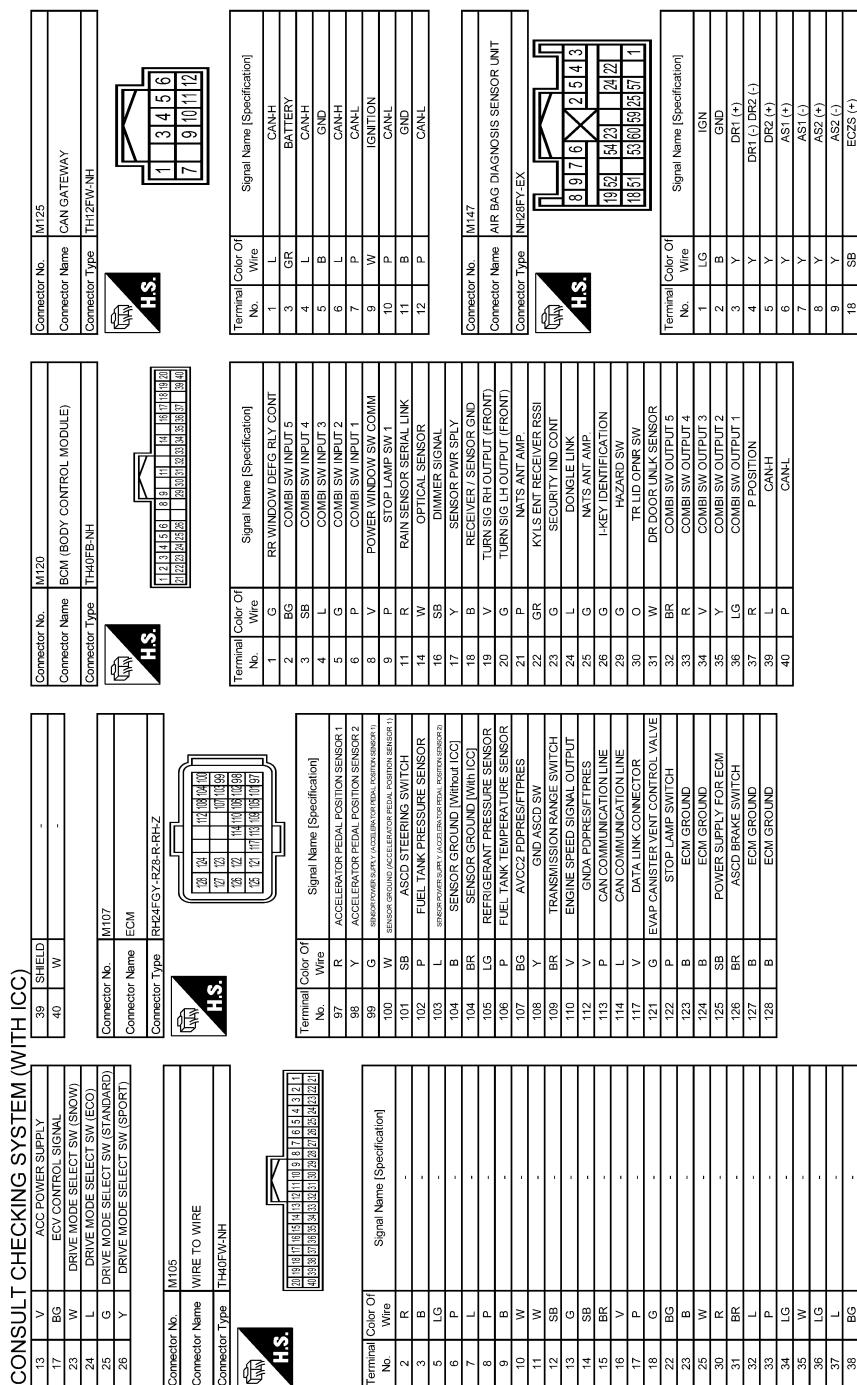

IRAWC1680GB

# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

## CONSULT CHECKING SYSTEM (WITH ICC)

Connector No.		Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
19	V	ECZS (-)	SB	POWER SUPPLY FOR ECM	M182	
22	SHIELD	GND	R	THROTTLE CONTROL MOTOR POWER SUPPLY		
23	R	AIR BAG W/L	B	ECM GROUND		
24	G	SEAT BELT	B	ECM GROUND		
25	R	CUT-OFF TELTATE				
51	G	SATELLITE RP2 (+)				
52	R	SATELLITE RP2 (-)				
53	P	SATELLITE RP2 (+)				
54	L	SATELLITE RP2 (-)				
57	L	IVCS				
59	L	CANH				
60	P	CANL				
Connector No.		Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
M160		ECM	W	IGN. INJECTOR DRIVER POWER SUPPLY	SB	IGN. SWV
Connector Name			W	FUEL INJECTOR DRIVER POWER SUPPLY	S8	M-CAN H
Connector Type		MA555FBAMEB101HZ	B	ECM GROUND	B	EARTH
RHT2FB			B		L	CANH
Connector No.		Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
M154		ACCELERATOR PEDAL ACTUATOR/ACCELERATOR PEDAL	W	V	V	KLINE
Connector Name		ACCELERATOR PEDAL ACTUATOR/ACCELERATOR PEDAL	W	EVAP CANISTER VENT CONTROL VALVE	LG	IGN. SWV
Connector Type		ECM GROUND	B	THROTTLE CONTROL MOTOR RELAY	R	IGN. SWV
RHT2FB			B	FUEL PUMP CONTROL MODULE (FPCM)	B	M-CAN H
Connector No.		Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
M181		ECM GROUND	B	ACCELERATOR PEDAL POSITION SENSOR1	B	IGN. SWV
Connector Name			B	ASCD STEERING SWITCH	R	M-CAN H
Connector Type			B	ASCD STEERING SWITCH	R	CANL
RHT2FB			B	SENSOR GROUND (Without ICC)	L	CANL
Connector No.		Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
M182		ECM GROUND	B	SENSOR GROUND (With ICC)	P	POWER
Connector Name			B		W	
Connector Type						
RHT2FB						
Connector No.		Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1	O	BATTERY	SB	SENSOR POWER SUPPLY	W	N210
2	R	IGNITION	P	FUEL TANK TEMPERATURE SENSOR	LG	
3	L	ITS COMM-L	R	ACCELERATOR PEDAL POSITION SENSOR1	SB	
4	G	SENSOR POWER SUPPLY	G	SENSOR POWER SUPPLY	G	
5	W	SENSOR GROUND	P	BATTERY CURRENT SENSOR	BR	
6	R	ACCELERATOR PEDAL POSITION SENSOR1	BG	BATTERY TEMPERATURE SENSOR	V	
7	B	GROUND	W	SENSOR GROUND	P	
9	Y	ITS COMM-L	G	IGNITION SWITCH	G	
10	L	SENSOR POWER SUPPLY	GR	FUEL PUMP CONTROL MODULE (FPCM) CHECK	BR	
11	B	SENSOR GROUND	P	FUEL TANK PRESSURE SENSOR	B	
12	Y	ACCELERATOR PEDAL POSITION SENSOR2	LG	REFRIGERANT PRESSURE SENSOR	W	
146	L	CAN COMMUNICATION LINE	R	CAN COMMUNICATION LINE	R	
147	BR	ASCD BRAKE SWITCH	BR			
150	V	SENSOR GROUND	L			
151	P	CAN COMMUNICATION LINE	P			
155	W	POWER SUPPLY FOR ECM (BACK-UP)	LG			
158	P	STOP LAMP SWITCH	W			
161	Y	ENG COMMUNICATION LINE	LG			
163	W	ECM RELAY (SELF SHUT-OFF)	L			
166	BG	ENG COMMUNICATION LINE	BG			
169	V	ENGINE SPEED SIGNAL OUTPUT	BR			
171	SB	POWER SUPPLY FOR ECM	W			

JRAWC1681GB

# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

GI

B

C

D

E

F

G

H

I

J

M

N

O

P

## CONSULT CHECKING SYSTEM (WITH IC-C)

Connector No.	M221	Connector No.	R8
Connector Name	WIRE TO WIRE	Connector Name	LANE CAMERA UNIT
Connector Type	MOSFET-LC	Connector Type	TH08FW-NH
			
			

Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1 W	-	1 B	GROUND
2 R	-	4 L	ITS COMM+H
3 W	-	5 B	GROUND
		7 G	IGNITION
		8 Y	ITS COMM-L

Connector No.	M222	Connector No.	M222
Connector Name	WIRE TO WIRE	Connector Name	WIRE TO WIRE
Connector Type	MOSMMW-LC	Connector Type	MOSMMW-LC
			
			


Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1 Y	BATTERY POWER SUPPLY	1 W	GROUND
2 B	GROUND	2 R	-
3 SB	ACC POWER SUPPLY	3 Y	-
4 W	IGNITION SIGNAL		
5 V	ACC OUTPUT		
6 P	GROUND		
7 B	CANH		
8 L	CANL		
10 P	MICROPHONE-VCC		
18 G	MICROPHONE-SIGNAL		
19 R	MICROPHONE-SIGNAL		
20 SHIELD	MICROPHONE-SHIELD		
21 G	MICROPHONE-VCC		
22 R	MICROPHONE-SIGNAL		
23 SHIELD	MICROPHONE-SHIELD		
34 G	SOS call switch		
35 BR	SOS call switch LED signal		

JRAWC1682GB

# **CONSULT/GST CHECKING SYSTEM**

## < BASIC INSPECTION >

## WITHOUT ICC

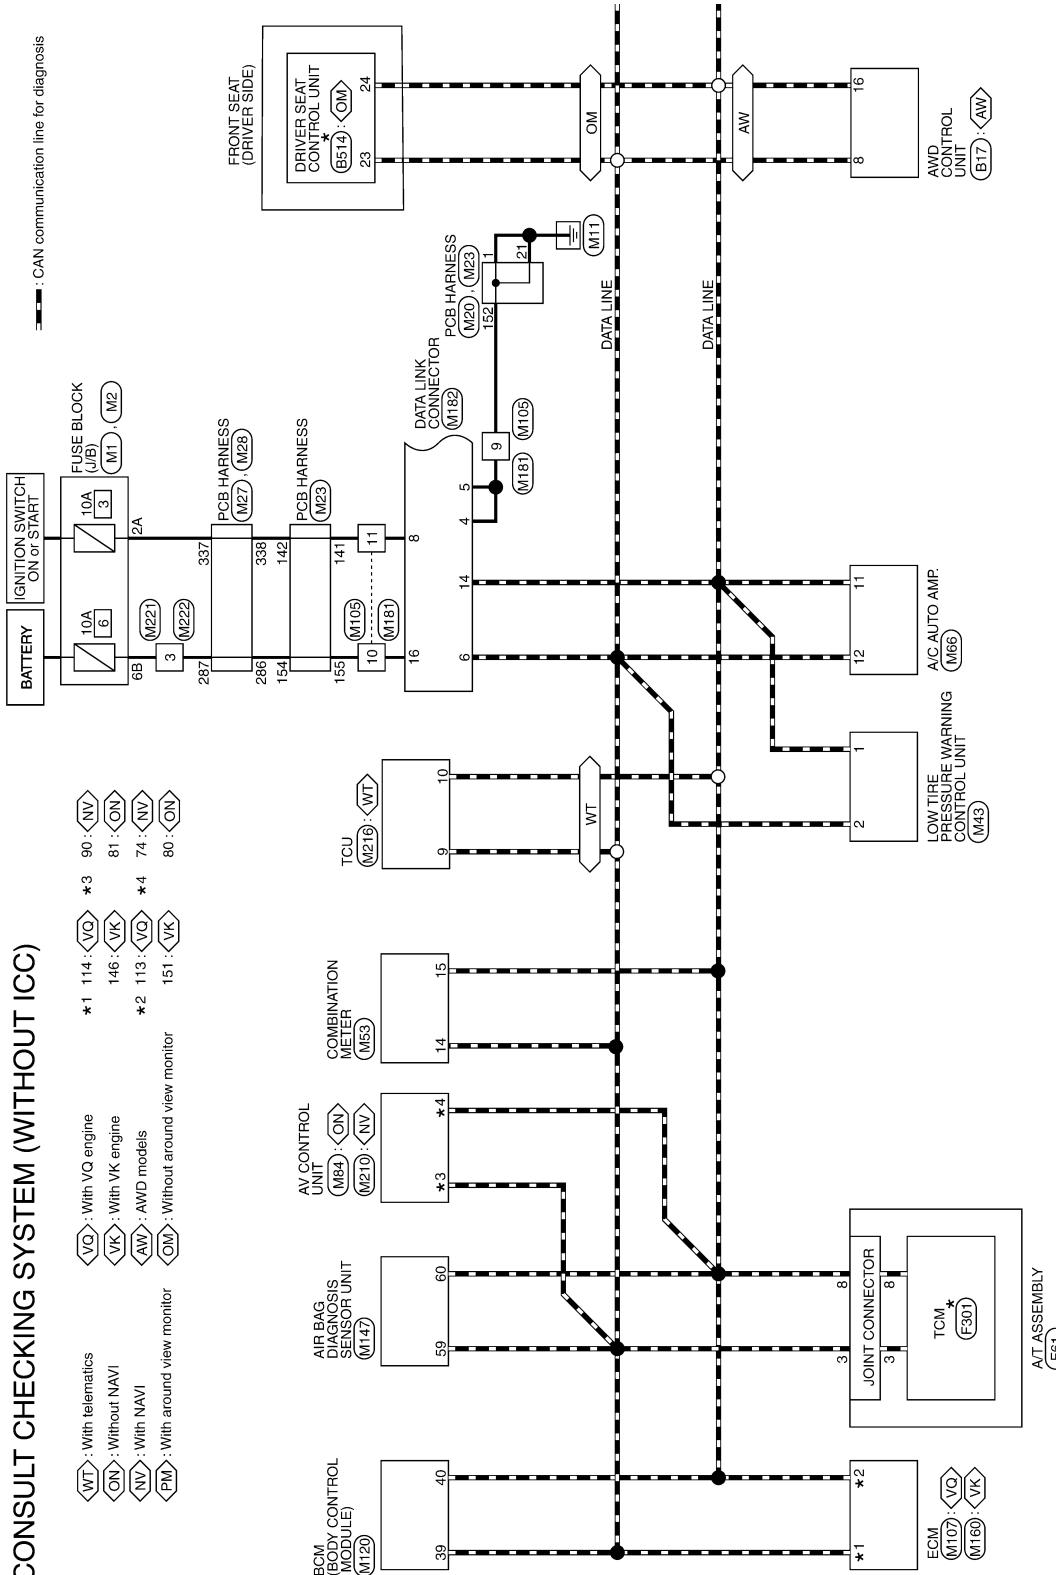


\* : This connector is not shown in "Harness Layout".

2014/07/11

JRAWC1663GB

# CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

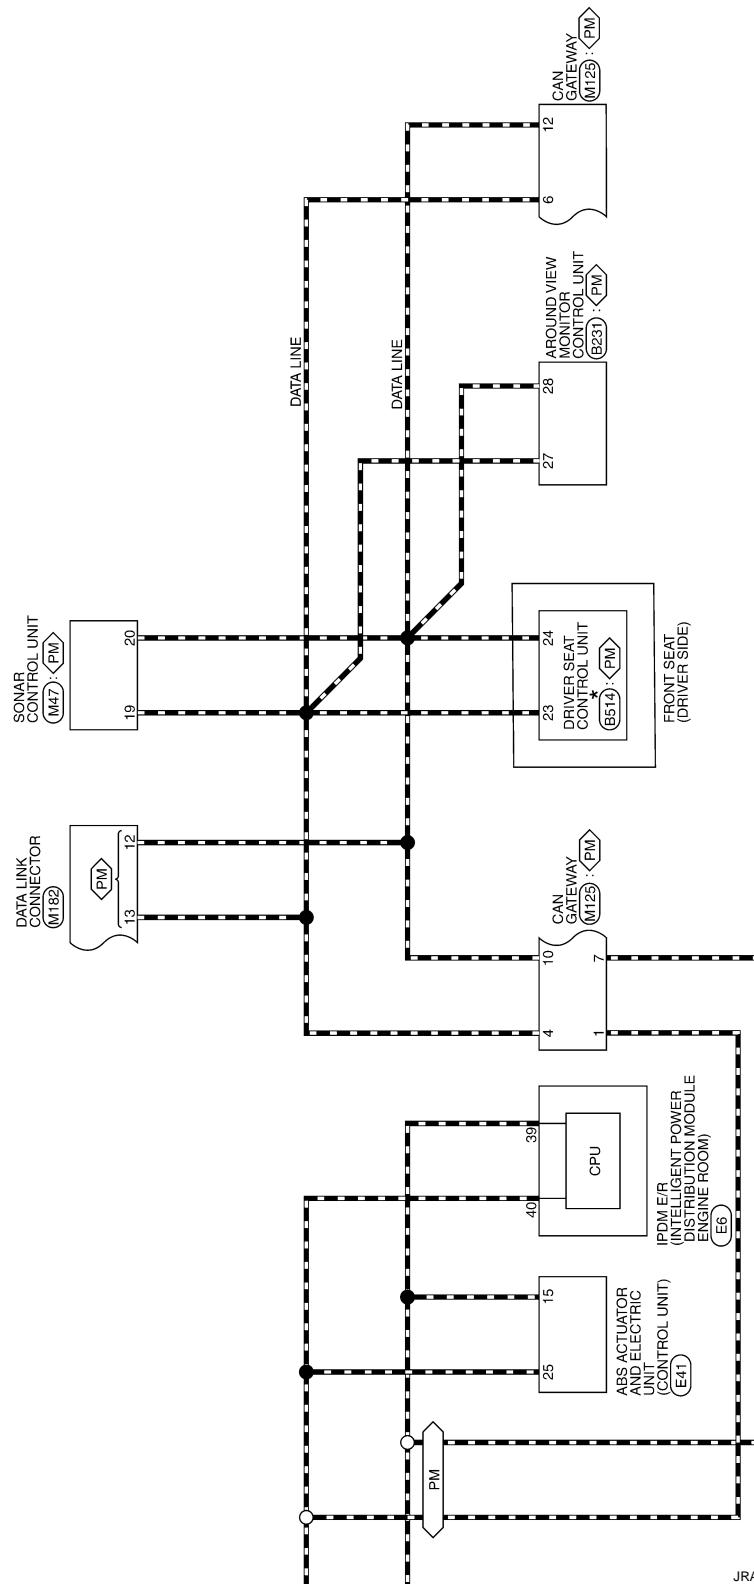

\* : This connector is not shown in "Harness Layout".

JRAWC1664GB

GI

B

C

D

E

F

G

H

I

K

L

M

N

O


P

# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

## CONSULT CHECKING SYSTEM (WITHOUT ICC)

Connector No.	B17	CAN-L [Without ICC]	CAN-L [With ICC]
Connector Name	AWD CONTROL UNIT	FROM ER INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM	VAC SEN(SIGNAL)
Connector Type	TH05FW-NH	RETRACT MOTOR OPERATION SIGNAL (OPEN) CLOSE	CANH CANL
		CONNECTOR TYPE: TH05FW-NH	CANL(C) CANH(C)

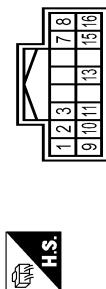

Terminal Color Of Wire	No.	Signal Name [Specification]	Signal Name [Specification]
BR	1	AND SOL (+)	[2][3][2][2][2][1][7][5][3]
R	2	AND SOL (-)	[2][3][2][3][2][2][1][8][6][2]
W	3	FLUID TEMP (-)	[2][3][2][3][2][2][1][8][6][2]
Y	7	IGN	[2][3][2][3][2][2][1][8][6][2]
L	8	CANH	[2][3][2][3][2][2][1][8][6][2]
SB	9	AWD SOL BAT	[2][3][2][3][2][2][1][8][6][2]
GND	10	BY	[2][3][2][3][2][2][1][8][6][2]
GND	11	BY	[2][3][2][3][2][2][1][8][6][2]
LG	13	LG	[2][3][2][3][2][2][1][8][6][2]
FLUID TEMP (+)	14	FLUID TEMP (+)	[2][3][2][3][2][2][1][8][6][2]
BATTERY POWER SUPPLY	15	BATTERY POWER SUPPLY	[2][3][2][3][2][2][1][8][6][2]
P	16	P	[2][3][2][3][2][2][1][8][6][2]




Terminal Color Of Wire	No.	Signal Name [Specification]	Signal Name [Specification]
BR	18	FRONT LIFTER SW (DOWNWARD)	[2][3][2][3][2][2][1][8][6][2]
LG/R	19	FRONT LIFTER SW (UPWARD)	[2][3][2][3][2][2][1][8][6][2]
Y/G	20	PULSE (SLIDE)	[2][3][2][3][2][2][1][8][6][2]
Y	21	PULSE (RECLINER)	[2][3][2][3][2][2][1][8][6][2]
Y	22	PULSE (REAR LIFTER)	[2][3][2][3][2][2][1][8][6][2]
P	23	PULSE FRONT LIFTER	[2][3][2][3][2][2][1][8][6][2]
PIL	24	CANL	[2][3][2][3][2][2][1][8][6][2]
GIO	25	IND 1	[2][3][2][3][2][2][1][8][6][2]
L/O	26	IND 2	[2][3][2][3][2][2][1][8][6][2]
Y	27	ADDRESS 1	[2][3][2][3][2][2][1][8][6][2]
V/W	28	ADDRESS 2	[2][3][2][3][2][2][1][8][6][2]
L	29	SET SW	[2][3][2][3][2][2][1][8][6][2]
BR	30	PULSE(TILT)	[2][3][2][3][2][2][1][8][6][2]
BRW	31	PULSE(TELESCOPIC)	[2][3][2][3][2][2][1][8][6][2]
GROUND	32	UART (TX/RX)	[2][3][2][3][2][2][1][8][6][2]
Y	33	POWER SUPPLY (ENCODER)	[2][3][2][3][2][2][1][8][6][2]



Connector No.	E6	F-FRH SEN(POWER)
Connector Name	FROM ER INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM	VAC SEN(SIGNAL)
Connector Type	TH05FW-NH	CANH CANL
		R-RH SEN(SIGNAL)
		R-RH SEN(POWER)
		F-FRH SEN(POWER)
		F-FRH SEN(SIGNAL)
		F-FRH SEN(POWER)
		CANH
		VAC SEN(POWER)
		VDC OFF SW
		VAC SEN(GND)
		IGN(POWER)
		G



Terminal Color Of Wire	No.	Signal Name [Specification]	Signal Name [Specification]
P	39	WIRE	CANL
L	40	WIRE	CANH
S-GND	41	WIRE	S-GND
V	42	MOTOR FAN RLY CONN (WITH VK engine)	MOTOR FAN RLY CONN (WITH VQ engine)
Y	43	DEFENT SW	DEFENT SW
SB	44	GR	HORN RLY (WITH VK engine)
GND	44	LG	HORN RLY (WITH VQ engine)
G	45	G	HORN SW
BR	46	BR	START CONN

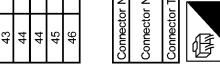

Terminal Color Of Wire	No.	Signal Name [Specification]	Signal Name [Specification]
WIRE	2	15[15]7[7]9[9]	15[15]7[7]9[9]
WIRE	3	5[5]6[6]7[7]9[9]	5[5]6[6]7[7]9[9]
WIRE	4	10[10]11[11]12[12]	10[10]11[11]12[12]
WIRE	5	13[13]14[14]15[15]	13[13]14[14]15[15]
WIRE	6	16[16]17[17]18[18]	16[16]17[17]18[18]
WIRE	7	19[19]20[20]21[21]	19[19]20[20]21[21]
WIRE	8	22[22]23[23]24[24]	22[22]23[23]24[24]
WIRE	9	25[25]26[26]27[27]	25[25]26[26]27[27]
WIRE	10	28[28]29[29]30[30]	28[28]29[29]30[30]



Terminal Color Of Wire	No.	Signal Name [Specification]	Signal Name [Specification]
ECU(GND)	1	WIRE	POWER SUPPLY (BACK UP)
B	2	WIRE	POWER SUPPLY (BACK UP)
R	3	WIRE	CANH
GND	4	WIRE	KLINE
G	6	WIRE	POWER SUPPLY (IGN)
SB	7	WIRE	BACK-UP LAMP RELAY
P	8	WIRE	CANL
BR	9	WIRE	PIN SIGNAL
GROUND	10	WIRE	GROUND



Terminal Color Of Wire	No.	Signal Name [Specification]	Signal Name [Specification]
ECU(GND)	1	WIRE	POWER SUPPLY (BACK UP)
B	2	WIRE	POWER SUPPLY (BACK UP)
R	3	WIRE	CANH
GND	4	WIRE	KLINE
G	6	WIRE	POWER SUPPLY (IGN)
SB	7	WIRE	BACK-UP LAMP RELAY
P	8	WIRE	CANL
BR	9	WIRE	PIN SIGNAL
GROUND	10	WIRE	GROUND



Terminal Color Of Wire	No.	Signal Name [Specification]	Signal Name [Specification]
ECU(GND)	1	WIRE	POWER SUPPLY (BACK UP)
B	2	WIRE	POWER SUPPLY (BACK UP)
R	3	WIRE	CANH
GND	4	WIRE	KLINE
G	6	WIRE	POWER SUPPLY (IGN)
SB	7	WIRE	BACK-UP LAMP RELAY
P	8	WIRE	CANL
BR	9	WIRE	PIN SIGNAL
GROUND	10	WIRE	GROUND



Terminal Color Of Wire	No.	Signal Name [Specification]	Signal Name [Specification]
ECU(GND)	1	WIRE	POWER SUPPLY (BACK UP)
B	2	WIRE	POWER SUPPLY (BACK UP)
R	3	WIRE	CANH
GND	4	WIRE	KLINE
G	6	WIRE	POWER SUPPLY (IGN)
SB	7	WIRE	BACK-UP LAMP RELAY
P	8	WIRE	CANL
BR	9	WIRE	PIN SIGNAL
GROUND	10	WIRE	GROUND



Terminal Color Of Wire	No.	Signal Name [Specification]	Signal Name [Specification]
ECU(GND)	1	WIRE	POWER SUPPLY (BACK UP)
B	2	WIRE	POWER SUPPLY (BACK UP)
R	3	WIRE	CANH
GND	4	WIRE	KLINE
G	6	WIRE	POWER SUPPLY (IGN)
SB	7	WIRE	BACK-UP LAMP RELAY
P	8	WIRE	CANL
BR	9	WIRE	PIN SIGNAL
GROUND	10	WIRE	GROUND



Terminal Color Of Wire	No.	Signal Name [Specification]	Signal Name [Specification]
ECU(GND)	1	WIRE	POWER SUPPLY (BACK UP)
B	2	WIRE	POWER SUPPLY (BACK UP)
R	3	WIRE	CANH
GND	4	WIRE	KLINE
G	6	WIRE	POWER SUPPLY (IGN)
SB	7	WIRE	BACK-UP LAMP RELAY
P	8	WIRE	CANL
BR	9	WIRE	PIN SIGNAL
GROUND	10	WIRE	GROUND



Terminal Color Of Wire	No.	Signal Name [Specification]	Signal Name [Specification]
ECU(GND)	1	WIRE	POWER SUPPLY (BACK UP)
B	2	WIRE	POWER SUPPLY (BACK UP)
R	3	WIRE	CANH
GND	4	WIRE	KLINE
G	6	WIRE	POWER SUPPLY (IGN)
SB	7	WIRE	BACK-UP LAMP RELAY
P	8	WIRE	CANL
BR	9	WIRE	PIN SIGNAL
GROUND	10	WIRE	GROUND



Terminal Color Of Wire	No.	Signal Name [Specification]	Signal Name [Specification]
ECU(GND)	1	WIRE	POWER SUPPLY (BACK UP)
B	2	WIRE	POWER SUPPLY (BACK UP)
R	3	WIRE	CANH
GND	4	WIRE	KLINE
G	6	WIRE	POWER SUPPLY (IGN)
SB	7	WIRE	BACK-UP LAMP RELAY
P	8	WIRE	CANL
BR	9	WIRE	PIN SIGNAL
GROUND	10	WIRE	GROUND



Terminal Color Of Wire	No.	Signal Name [Specification]	Signal Name [Specification]
ECU(GND)	1	WIRE	POWER SUPPLY (BACK UP)
B	2	WIRE	POWER SUPPLY (BACK UP)
R	3	WIRE	CANH
GND	4	WIRE	KLINE
G	6	WIRE	POWER SUPPLY (IGN)
SB	7	WIRE	BACK-UP LAMP RELAY
P	8	WIRE	CANL
BR	9	WIRE	PIN SIGNAL
GROUND	10	WIRE	GROUND



Terminal Color Of Wire	No.	Signal Name [Specification]	Signal Name [Specification]


<tbl\_r cells="4" ix="2" maxcspan="1"


# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

G

## CONSULT CHECKING SYSTEM (WITHOUT ICC)

Connector No.	F301
Connector Name	TCM
Connector Type	SPDIF/FG

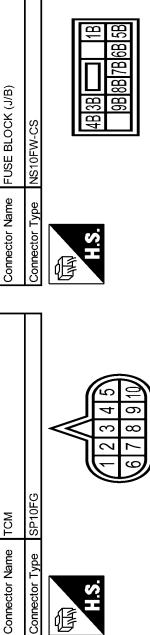

Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1 -	VIGN	18 P	-
2 -	BATT	19 W	-
3 -	CANH	21 B	-
4 -	KLINE	22 R	- [With ICC]
5 -	GND	22 Y	- [Without ICC]
6 -	VIGN	23 L	- [With ICC]
7 -	REV/LAMP RLY	23 SB	- [Without ICC]
8 -	CANL	24 L	-
9 -	START RLY	27 P	-
10 -	GND	31 V	-
		33 V	-
		35 L	-
		36 P	-
		38 L	-
		40 Y	-

Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1B	R	19	P
3B	P	21	-
4B	G	22	-
5B	SB	23	-
6B	W	23	-
7B	Y	24	-
8B	R	27	-
9B	R	31	-
		33	-
		35	-
		36	-
		38	-
		40	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NSD6FW-MCS



Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1B	R	19	P
2B	P	21	-
3B	G	22	- [With ICC]
4B	SB	22 Y	- [Without ICC]
5B	W	23 L	- [With ICC]
6B	Y	23 SB	- [Without ICC]
7B	R	24 L	-
8B	R	27 P	-
9B	R	31 V	-
		33 V	-
		35 L	-
		36 P	-
		38 L	-
		40 Y	-

Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1B	R	19	P
2B	P	21	-
3B	G	22	-
4B	SB	22 Y	- [With ICC]
5B	W	23 L	- [Without ICC]
6B	Y	23 SB	- [With ICC]
7B	R	24 L	- [Without ICC]
8B	R	27 P	-
9B	R	31 V	-
		33 V	-
		35 L	-
		36 P	-
		38 L	-
		40 Y	-

Connector No.	M23
Connector Name	PCB HARNESS
Connector Type	TH40FBNH




Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1B	R	19	P
2B	P	21	-
3B	G	22	-
4B	SB	22 Y	- [With ICC]
5B	W	23 L	- [Without ICC]
6B	Y	23 SB	- [With ICC]
7B	R	24 L	- [Without ICC]
8B	R	27 P	-
9B	R	31 V	-
		33 V	-
		35 L	-
		36 P	-
		38 L	-
		40 Y	-

Connector No.	M20
Connector Name	PCB HARNESS
Connector Type	TH40FBNH



Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1B	R	19	P
2B	P	21	-
3B	G	22	-
4B	SB	22 Y	- [With ICC]
5B	W	23 L	- [Without ICC]
6B	Y	23 SB	- [With ICC]
7B	R	24 L	- [Without ICC]
8B	R	27 P	-
9B	R	31 V	-
		33 V	-
		35 L	-
		36 P	-
		38 L	-
		40 Y	-

Connector No.	M21
Connector Name	FUSE BLOCK (J/B)
Connector Type	NSD6FW-M2

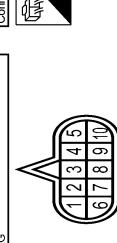

Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1B	R	19	P
2B	P	21	-
3B	G	22	-
4B	SB	22 Y	- [With ICC]
5B	W	23 L	- [Without ICC]
6B	Y	23 SB	- [With ICC]
7B	R	24 L	- [Without ICC]
8B	R	27 P	-
9B	R	31 V	-
		33 V	-
		35 L	-
		36 P	-
		38 L	-
		40 Y	-

Connector No.	M22
Connector Name	PCB HARNESS
Connector Type	TH40FBNH



Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1B	R	19	P
2B	P	21	-
3B	G	22	-
4B	SB	22 Y	- [With ICC]
5B	W	23 L	- [Without ICC]
6B	Y	23 SB	- [With ICC]
7B	R	24 L	- [Without ICC]
8B	R	27 P	-
9B	R	31 V	-
		33 V	-
		35 L	-
		36 P	-
		38 L	-
		40 Y	-

Connector No.	M24
Connector Name	PCB HARNESS
Connector Type	TH40FBNH



Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1B	R	19	P
2B	P	21	-
3B	G	22	-
4B	SB	22 Y	- [With ICC]
5B	W	23 L	- [Without ICC]
6B	Y	23 SB	- [With ICC]
7B	R	24 L	- [Without ICC]
8B	R	27 P	-
9B	R	31 V	-
		33 V	-
		35 L	-
		36 P	-
		38 L	-
		40 Y	-

Connector No.	M25
Connector Name	PCB HARNESS
Connector Type	TH40FBNH



Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1B	R	19	P
2B	P	21	-
3B	G	22	-
4B	SB	22 Y	- [With ICC]
5B	W	23 L	- [Without ICC]
6B	Y	23 SB	- [With ICC]
7B	R	24 L	- [Without ICC]
8B	R	27 P	-
9B	R	31 V	-
		33 V	-
		35 L	-
		36 P	-
		38 L	-
		40 Y	-

Connector No.	M26
Connector Name	PCB HARNESS
Connector Type	TH40FBNH



Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1B	R	19	P
2B	P	21	-
3B	G	22	-
4B	SB	22 Y	- [With ICC]
5B	W	23 L	- [Without ICC]
6B	Y	23 SB	- [With ICC]
7B	R	24 L	- [Without ICC]
8B	R	27 P	-
9B	R	31 V	-
		33 V	-
		35 L	-
		36 P	-
		38 L	-
		40 Y	-

Connector No.	M27
Connector Name	PCB HARNESS
Connector Type	TH40FBNH




Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1B	R	19	P
2B	P	21	-
3B	G	22	-
4B	SB	22 Y	- [With ICC]
5B	W	23 L	- [Without ICC]
6B	Y		

# **CONSULT/GST CHECKING SYSTEM**

## < BASIC INSPECTION >

CONSULT CHECKING SYSTEM (WITHOUT ICC)

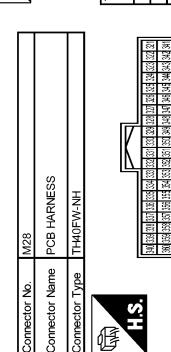


Terminal No.	Color Of Wire	Signal Name [Specification]
321	V	-
322	V	-
324	B	-
325	L	-
326	L	-
327	P	-
328	P	-
330	B	-
331	V	-
332	V	-
335	B	-
337	W	-
338	W	-
343	L	-
344	B	-
345	Y	-
346	L	-
347	P	-
348	GR	-
349	V	-
	LG	-



८

M43	LOW TIRE PRESSURE/WARNING CONTROL UNIT T182PWNH
-	
-	
-	
-	

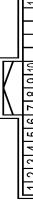

Obj	Signal Name [Specification]
CAN-L	CAN-L
CAN-H	CAN-H
RR_TUNER(SIG)	RR_TUNER(SIG)
BL_TUNER(SIG)	BL_TUNER(SIG)
FR_TUNER(SIG)	FR_TUNER(SIG)
FL_TUNER(SIG)	FL_TUNER(SIG)
RR_TUNER(VCC)	RR_TUNER(VCC)
RL_TUNER(VCC)	RL_TUNER(VCC)
FR_TUNER(VCC)	FR_TUNER(VCC)
FL_TUNER(VCC)	FL_TUNER(VCC)
(GEN)	(GEN)
RR_TUNER(RSS)	RR_TUNER(RSS)
RL_TUNER(RSS)	RL_TUNER(RSS)
FR_TUNER(RSS)	FR_TUNER(RSS)
FL_TUNER(RSS)	FL_TUNER(RSS)
RR_TUNER(GND)	RR_TUNER(GND)
RL_TUNER(GND)	RL_TUNER(GND)
FR_TUNER(GND)	FR_TUNER(GND)
FL_TUNER(GND)	FL_TUNER(GND)
BOMFLASHER	BOMFLASHER
CORE	CORE

卷之三

Connector No.	M47
Connector Name	SONAR CONTROL UNIT
Connector Type	T124FW-NH





Connector No.	M63
Connector Name	COMBINATION METER
Connector Type	THDFN-NH
5	W
6	B
7	G
8	R
9	Y
10	G
12	B
13	L
19	CAN-H
20	R
20	Y
24	B
	GROUND
	IGNITION POWER SUPPLY
	CAN-L
	CANL (Without [CC])
	CANL (With [CC])
	GROUND




卷之三

		ENTER SWITCH SIGNAL
7	SB	SELECT SWITCH SIGNAL
8	LG	ILLUMINATION CONTROL SWITCH SIGNAL (+)
9	G	ILLUMINATION CONTROL SWITCH SIGNAL (-)
10	GR	TRIP RESET SWITCH SIGNAL
11	L	GROUND
12	B	CANH
14	L	CANL
15	P	CANL
16	R	AIR BAG (3) WARNING SIGNAL
17	G	LED HEADLAMP (3) WARNING SIGNAL



Connector No.	Connector Name	Pin No.	Pin Name
166	A/C AUTO AMP.	1	PASSANGER SEAT BELT WARNING SIGNAL
37	G	2	SECURITY SIGNAL
38	V	3	WASHER LEVEL SWITCH SIGNAL
39	L	4	PADDLE SHAFT SHIFT DOWN SIGNAL
40	W	5	PADDLE SHAFT SHIFT UP SIGNAL
		6	FUEL LEVEL SENSOR SIGNAL
		7	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)
		11	MANUAL MODE SHIFT DOWN SIGNAL
		12	MANUAL MODE SHIFT UP SIGNAL
		13	MANUAL MODE SIGNAL
		17	
		23	
		24	
		25	
		26	

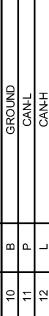

Revision: 2014 November

# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

GI

## CONSULT CHECKING SYSTEM (WITHOUT ICC)

Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
13 V	ACC POWER SUPPLY	97 R	ACCELERATOR PEDAL POSITION SENSOR 1
17 BG	ECV/CONTROL SIGNAL	98 Y	ACCELERATOR PEDAL POSITION SENSOR 2
23 W	DRIVE MODE SELECT SW (SNOW)	99 G	SEATBELT PRE-TENSIONER REAR POSITION SENSOR 1
24 L	DRIVE MODE SELECT SW (ECO)	100 W	SEATBELT PRE-TENSIONER REAR POSITION SENSOR 11
25 G	DRIVE MODE SELECT SW (STANDARD)	101 SB	ASCD STEERING SWITCH
26 Y	DRIVE MODE SELECT SW (SPORT)	102 P	FUEL TANK PRESSURE SENSOR
		103 L	RECEIVER (ANTENNA, RECEIVER, RECEIVER ANTENNA)
		104 B	SENSOR GROUND (Without ICC)
		104 BR	SENSOR GROUND (With ICC)
		105 LG	REFRIGERANT PRESSURE SENSOR
		106 P	FUEL TANK TEMPERATURE SENSOR
		107 BG	AVC2 DIPRESET/PINES
		108 Y	GND/ASCD SW
		109 BR	TRANSMISSION RANGE SWITCH
		110 V	ENGINE SPEED SIGNAL OUTPUT
		112 V	GNDA DIPRESET/PINES
		113 P	CAN COMMUNICATION LINE
		114 L	CAN COMMUNICATION LINE
		117 V	DATA LINK CONNECTOR
		121 G	EVAP CANISTER VENT CONTROL VALVE
		122 P	STOP LAMP SWITCH
		123 B	ECM GROUND
		124 B	ECM GROUND
		125 SB	POWER SUPPLY FOR ECM
		126 BR	ASCD BRAKE SWITCH
		127 B	ECM GROUND
		128 B	ECM GROUND
		34 V	COMBI SW OUTPUT 1
		35 Y	COMBI SW OUTPUT 3
		36 LG	COMBI SW OUTPUT 2
		37 R	COMBI SW OUTPUT 1
		39 L	P-POSITION CANHL
		40 P	

JRAWC1686GB

# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

## CONSULT CHECKING SYSTEM (WITHOUT ICC)

Connector No.	Signal Name [Specification]	Terminal Color Of Wire	Wire Number	Signal Name [Specification]	Terminal Color Of Wire	Wire Number	Signal Name [Specification]
M125	CAN GATEWAY	V	19	ECZS (-)	P	22	BG
		SHIELD	22	FUEL TANK PRESSURE SENSOR	P	23	B
Connector Name		R	23	REFRIGERANT PRESSURE SENSOR	LG	25	W
Connector Type	TH2PWNH	G	24	CAN COMMUNICATION LINE	L	30	R
		SEAT BELT	25	ASCD BRAKE SWITCH LH	BR	31	BR
		CUT-OFF TEL/TALE	51	ASCD BRAKE SWITCH RH	V	32	L
		SATELLITE RH2 (+)	52	CAN COMMUNICATION LINE	P	33	P
		SATELLITE RH2 (-)	53	POWER SUPPLY FOR ECM(BACK-UP)	W	34	LG
		SATELLITE RH2 (-)	54	STOP LAMP SWITCH	P	35	W
		IVCS	57	ENG COMMUNICATION LINE	Y	36	LG
		CAN-H	59	ECM RELAY (SELF SHUT-OFF)	W	37	L
		CAN-L	60	ENG COMMUNICATION LINE	BG	38	BG
		P		ENGINE SPEED SIGNAL OUTPUT	V	39	SHIELD
				POWER SUPPLY FOR ECM	W	40	-
Connector No.	M160			POWER SUPPLY FOR ECM	SB	171	-
Connector Name	ECM			POWER SUPPLY FOR ECM	SB	172	-
Connector Type	MAB5FB-MEB10-LHZ			THROTTLE CONTROL MOTOR-POWER SUPPLY	R	173	-
				ECM GROUND	B	174	-
				ECM GROUND	B	175	-
Terminal Color Of Wire				Connector No.	M161		
No.	Signal Name [Specification]			Connector Name	WIRE TO WIRE		
1	L	CANH		Connector Type	TH40MW-NH		
3	GR	BATTERY					
4	L	CANH					
5	B	GND					
6	L	CANH					
7	P	CANL					
9	W	IGNITION					
10	P	CANL					
11	B	GND					
12	P	CANL					
Connector No.	M147			Terminal Color Of Wire			
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT			No.			
Connector Type	NH2BRY-EX			111	W		
				112	W		
				114	B		
				115	B		
				120	G		
				122	V		
				123	B		
				125	P		
				126	Y		
				128	SB		
				129	B		
				130	Y		
				131	L		
				133	BG		
				134	P		
				136	R		
				137	G		
				138	P		
				139	BG		
				140	W		
				141	G		
							(IGNITION SWITCH)

JRAWC1687GB

# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

GI

B

C

D

E

F

G

H

I

J

M

N

O

P

## CONSULT CHECKING SYSTEM (WITHOUT ICC)

Connector No.	M210
Connector Name	AV CONTROL UNIT
Connector Type	TH02FWNH



Connector No.	M216
Connector Name	TCU
Connector Type	TH02FWNH



Terminal Color Of No.	Signal Name [Specification]
65	V
67	R
68	W
69	G
70	P
71	SHEILD
72	G
73	BR
74	P
75	LG
76	LG
79	SB
80	W
81	BG
82	R
83	SHEILD
84	B
87	R
88	SHEILD
89	Y
90	L
91	SB
92	SB

Terminal Color Of No.	Signal Name [Specification]
1	Y
2	B
3	SB
4	W
5	P
6	-
7	B
9	L
10	P
18	G
19	R
20	SHEILD
21	G
22	R
23	SHEILD
34	G
35	BR

Terminal Color Of No.	Signal Name [Specification]
1	WIRE TO WIRE
2	WIRE TO WIRE
3	WIRE TO WIRE

Terminal Color Of No.	Signal Name [Specification]
1	WIRE TO WIRE
2	WIRE TO WIRE
3	WIRE TO WIRE

# INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

## INSPECTION AND ADJUSTMENT

### ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL

### ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Required Procedure After Battery Disconnection

INFOID:000000011251294

SYSTEM	ITEM	REFERENCE
Automatic air conditioning system	Temperature setting trimmer	—
	Foot position setting trimmer	—
	Inlet port memory function*	—
	Inlet port memory function (FRE)	—
	Inlet port memory function (REC)	—
	Exhaust gas/outside odor detecting gas sensor sensitivity adjustment function*	—
	Auto intake switch interlocking movement change*	—
	Clean switch interlocking movement change*	—
Automatic drive positioner	Automatic drive positioner system	<a href="#">ADP-57, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"</a>
Power window control	Power window control system	<a href="#">PWC-31, "Description"</a>
Sunroof system	Sunroof system	—
Sunshade system	Sunshade system	—
Rear view monitor	Rear view monitor predictive course line center position adjustment	—
Around view monitor	Predictive course line center position adjustment	—
Automatic back door system*	Automatic back door system	—
Engine oil level read*	Engine oil level read	—

\*: Not equipped.