

SECTION **RF**  
ROOF

A  
B  
C

D  
E

F  
G

H  
I

J  
RF

L  
M

N  
O

P

CONTENTS

<b>BASIC INSPECTION</b> .....	3	Component Function Check .....	11
<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	3	Diagnosis Procedure .....	11
Work Flow .....	3	Component Inspection .....	12
<b>INSPECTION AND ADJUSTMENT</b> .....	4	<b>DOOR SWITCH</b> .....	13
<b>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT</b> .....	4	Description .....	13
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description .....	4	Component Function Check .....	13
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement .....	4	Diagnosis Procedure .....	13
<b>SYSTEM DESCRIPTION</b> .....	5	Component Inspection .....	14
<b>SUNROOF SYSTEM</b> .....	5	<b>ECU DIAGNOSIS INFORMATION</b> .....	15
System Diagram .....	5	<b>BCM (BODY CONTROL MODULE)</b> .....	15
System Description .....	5	Reference Value .....	15
Component Parts Location .....	6	Wiring Diagram - BCM - .....	37
Component Description .....	6	Fail-safe .....	52
<b>DIAGNOSIS SYSTEM (BCM)</b> .....	7	DTC Inspection Priority Chart .....	53
<b>COMMON ITEM</b> .....	7	DTC Index .....	54
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) .....	7	<b>SUNROOF MOTOR ASSEMBLY</b> .....	56
<b>RETAINED PWR</b> .....	8	Reference Value .....	56
RETAINED PWR : CONSULT Function (BCM - RETAINED PWR) .....	8	Wiring Diagram - SUNROOF - .....	57
<b>DTC/CIRCUIT DIAGNOSIS</b> .....	10	<b>SYMPTOM DIAGNOSIS</b> .....	64
<b>POWER SUPPLY AND GROUND CIRCUIT</b> .....	10	<b>SUNROOF DOES NOT OPERATE PROPERLY</b> .....	64
<b>SUNROOF MOTOR ASSEMBLY</b> .....	10	Description .....	64
SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure .....	10	Diagnosis Procedure .....	64
<b>SUNROOF SWITCH</b> .....	11	<b>AUTO OPERATION DOES NOT OPERATE</b> ....	66
Description .....	11	Description .....	66
		Diagnosis Procedure .....	66
		<b>RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY</b> .....	67
		Diagnosis Procedure .....	67
		<b>ANTI-PINCH FUNCTION DOES NOT OPERATE</b> .....	68
		Diagnosis Procedure .....	68

<b>SQUEAK AND RATTLE TROUBLE DIAG- NOSES</b> .....	<b>69</b>	<b>GLASS LID</b> .....	<b>78</b>
Work Flow .....	69	Exploded View .....	78
Inspection Procedure .....	71	Removal and Installation .....	78
Diagnostic Worksheet .....	73	Adjustment .....	79
<b>PRECAUTION</b> .....	<b>75</b>	<b>SUNROOF MOTOR ASSEMBLY</b> .....	<b>81</b>
<b>PRECAUTIONS</b> .....	<b>75</b>	Exploded View .....	81
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" .....	75	Removal and Installation .....	81
Precaution for Procedure without Cowl Top Cover..	75	<b>SUNROOF UNIT ASSEMBLY</b> .....	<b>83</b>
Precautions For Xenon Headlamp Service .....	75	Exploded View .....	83
Precautions for Removing Battery Terminal .....	76	Removal and Installation .....	84
<b>PREPARATION</b> .....	<b>77</b>	Disassembly and Assembly .....	85
<b>PREPARATION</b> .....	<b>77</b>	<b>SUNSHADE</b> .....	<b>86</b>
Special Service Tool .....	77	Exploded View .....	86
Commercial Service Tool .....	77	Removal and Installation .....	86
<b>REMOVAL AND INSTALLATION</b> .....	<b>78</b>	<b>WIND DEFLECTOR</b> .....	<b>88</b>
		Exploded View .....	88
		Removal and Installation .....	88
		<b>SUNROOF SWITCH</b> .....	<b>89</b>
		Exploded View .....	89
		Removal and Installation .....	89

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:0000000010578783

DETAILED FLOW

#### 1.OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much malfunction information (conditions and environment when the malfunction occurred) as possible when the customer brings the vehicle in.

>> GO TO 2.

#### 2.REPRODUCE THE MALFUNCTION INFORMATION

Check the malfunction on the vehicle that the customer describes.  
Inspect the relation of the symptoms and the condition when the symptoms occur.

>> GO TO 3.

#### 3.IDENTIFY THE MALFUNCTIONING SYSTEM WITH "SYMPTOM DIAGNOSIS"

Use "Symptom diagnosis" from the symptom inspection result in step 2 and then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 4.

#### 4.IDENTIFY THE MALFUNCTIONING PARTS WITH "COMPONENT DIAGNOSIS"

Perform the diagnosis with "Component diagnosis" of the applicable system.

>> GO TO 5.

#### 5.REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 6.

#### 6.FINAL CHECK

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 2.

Are the malfunctions corrected?

YES >> INSPECTION END

NO >> GO TO 3.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

---

## INSPECTION AND ADJUSTMENT

### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

#### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000010578784

If any of the following operations are performed, the initialization is necessary.

- Power supply to the sunroof motor assembly is cut off while the sunroof is operating.
- Disassembly and assembly of sunroof unit assembly.

Refer to [RF-4, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

#### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000010578785

#### INITIALIZATION PROCEDURE

If the sunroof does not close or open automatically, use the following procedure to return sunroof operation to normal.

1. Close the sunroof if it is not in the closed position. It may be necessary to repeatedly press the switch to close the sunroof.
2. Press the tilt up switch and start the tilt up operation.
3. Release the tilt up switch once, press and hold the tilt up switch again.
4. The glass lid moves slight toward tilt up direction then stops. (Press and hold the switch during this operation)
5. Release the switch again, and press and hold the tilt up switch within the first 6 seconds.
6. After 4 seconds, the glass lid will be automatically operated in sequence of tilt down, slide open and slide close.
7. After the glass lid stops, release the switch 0.5 seconds later.
8. Check anti-pinch function. If the sunroof operation is normal, the initialization is done.

#### CHECK ANTI-PINCH FUNCTION

1. Fully open the sunroof.
  2. Place a wooden object (wooden hammer handle, etc.) near the fully closed position.
  3. Close the sunroof completely with auto-slide close.
- Check that sunroof opens for approximately 150 mm (5.91 in) or 2 seconds without pinching a wooden object and stops.

#### **CAUTION:**

- **Never check with hands or other part of body because they may be pinched. Never get pinched.**
- **Depending on environment and driving conditions, if a similar impact or load is applied to the sunroof it may tilt up or open.**
- **Check that auto-slide operates before inspection when system initialization is performed.**
- **Perform initial setting when auto-slide operation or anti-pinch function does not operate normally.**

# SUNROOF SYSTEM

< SYSTEM DESCRIPTION >


## SYSTEM DESCRIPTION

### SUNROOF SYSTEM

#### System Diagram

INFOID:000000010578786

#### SUNROOF

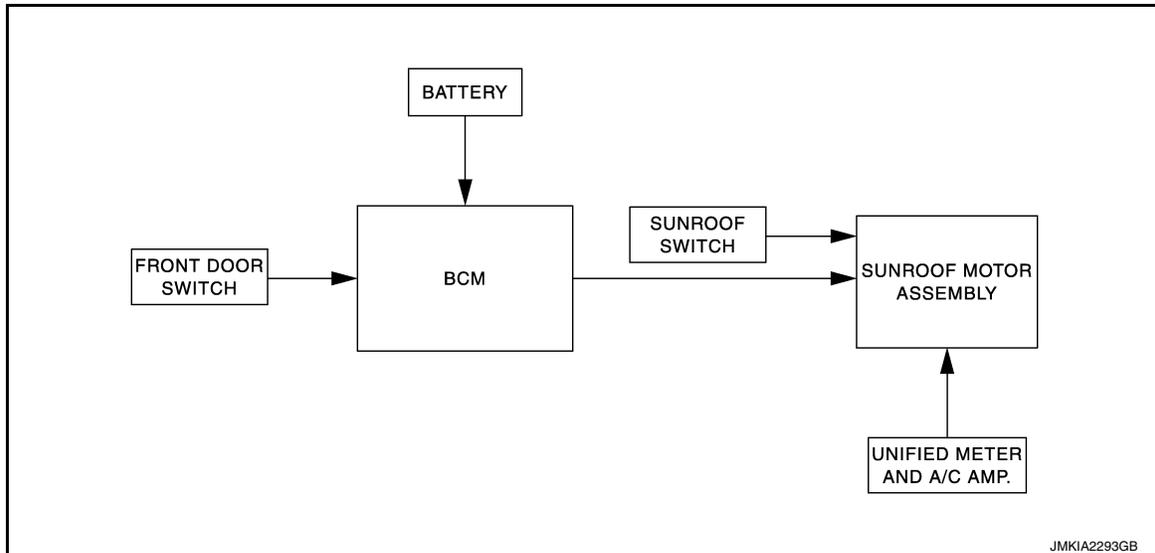

#### System Description

INFOID:000000010578787

#### SUNROOF OPERATION

- Sunroof motor assembly operates with the power supply that is output from BCM while ignition switch is ON or retained power is operating.
- Tilt up/down and slide open/close signals from sunroof switch activates the sunroof motor to move arbitrarily.
- Sunroof motor assembly receives a vehicle speed signal from unified meter and A/C amp. and controls the sunroof motor torque at the time of high speed operation.

#### AUTO OPERATION

Sunroof AUTO feature makes it possible to slide open and slide close or tilt up and tilt down the sunroof without holding the sunroof switch in the slide open/tilt down or slide close/tilt up position.

#### RETAINED POWER OPERATION

Retained power operation is an additional power supply function that enables sunroof system to operate 45 seconds even after the ignition switch is turned OFF.

#### RETAINED POWER FUNCTION CANCEL CONDITIONS

- Front door CLOSE (door switch OFF)→OPEN (door switch ON).
- When ignition switch is ON again.
- When timer time passes. (45 seconds)

#### ANTI-PINCH FUNCTION

##### CAUTION:

**There are some small distances immediately before the closed position that cannot be detected.**


The CPU of sunroof motor assembly monitors the sunroof condition by the signals from sunroof motor. When sunroof motor assembly detects an interruption during close or tilt down operation, sunroof motor tilts up or open [150 mm (5.91 in) or more] sunroof.

# SUNROOF SYSTEM

< SYSTEM DESCRIPTION >

## Component Parts Location

INFOID:000000010578788

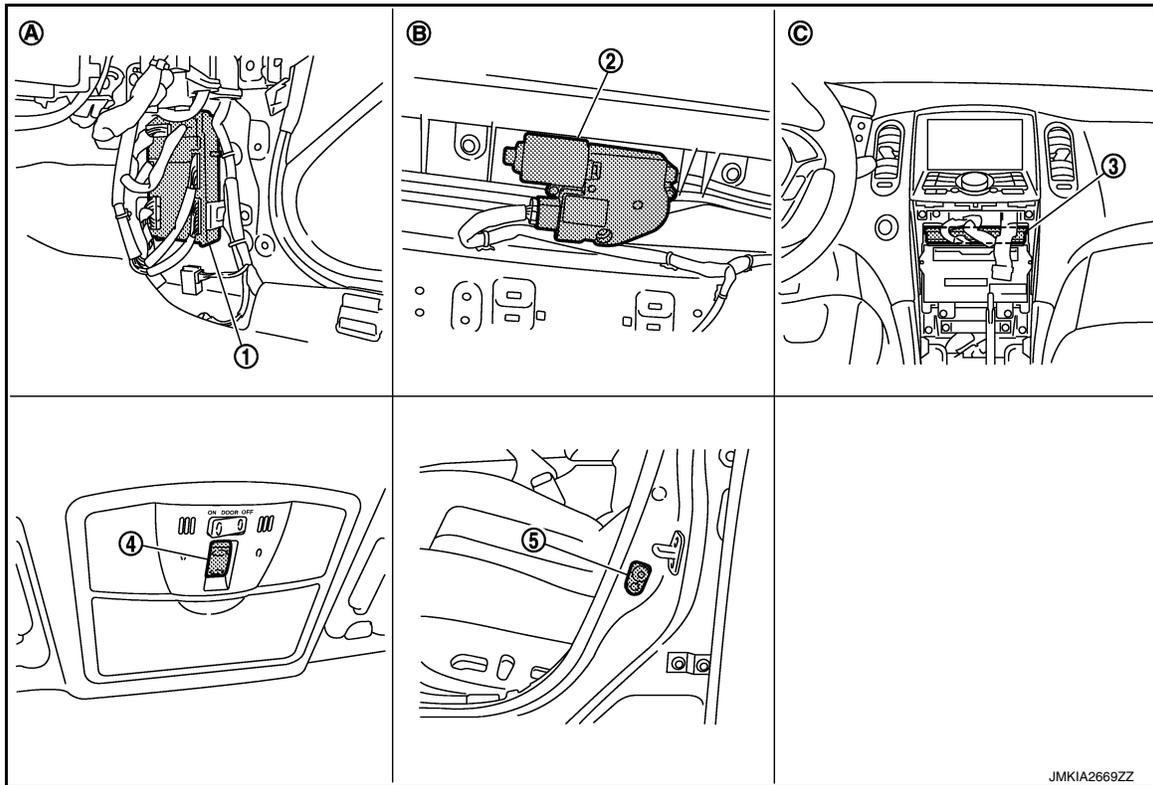

- |                                     |                                    |                               |
|-------------------------------------|------------------------------------|-------------------------------|
| 1. BCM                              | 2. Sunroof motor assembly          | 3. Unified meter and A/C amp. |
| 4. Sunroof switch                   | 5. Front door switch (driver side) |                               |
| A. Dash side lower (passenger side) | B. View with headlining removed    | C. Behind cluster lid C       |

## Component Description

INFOID:000000010578789

Component	Function
BCM	<ul style="list-style-type: none"> <li>Supplies the power to sunroof motor assembly.</li> <li>Controls retained power.</li> </ul>
Sunroof switch	Transmits tilt up/down and slides open/close operation signal to sunroof motor assembly.
Sunroof motor assembly	It is sunroof motor and CPU integrated type that enables tilt up/down and slide open/close by sunroof switch operation
Front door switch	Detects door open/close condition and transmits to BCM.
Unified meter and A/C amp.	Transmits vehicle speed signal to sunroof motor assembly.

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

#### COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000010782870

#### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> <li>• Read and save the vehicle specification.</li> <li>• Write the vehicle specification when replacing BCM.</li> </ul>

#### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

x: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	x	x	x
Rear window defogger	REAR DEFOGGER		x	x
Warning chime	BUZZER		x	x
Interior room lamp timer	INT LAMP	x	x	x
Exterior lamp	HEAD LAMP	x	x	x
Wiper and washer	WIPER	x	x	x
Turn signal and hazard warning lamps	FLASHER	x	x	x
—	AIR CONDITONER*			
<ul style="list-style-type: none"> <li>• Intelligent Key system</li> <li>• Engine start system</li> </ul>	INTELLIGENT KEY	x	x	x
Combination switch	COMB SW		x	
Body control system	BCM	x		
IVIS - NATS	IMMU		x	x
Interior room lamp battery saver	BATTERY SAVER	x	x	x
Back door open	TRUNK		x	x
Vehicle security system	THEFT ALM	x	x	x
RAP system	RETAINED PWR		x	
Signal buffer system	SIGNAL BUFFER		x	x

#### NOTE:

\*: This item is displayed, but is not used.

#### FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

# DIAGNOSIS SYSTEM (BCM)

## < SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected*	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK"*)
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
	LOCK>ACC		While turning power supply position from "LOCK" to "ACC"
	ACC>ON		While turning power supply position from "ACC" to "IGN"
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
	RUN>URGENT		While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
	ACC>OFF		While turning power supply position from "ACC" to "OFF"
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"*
	OFF>ACC		While turning power supply position from "OFF" to "ACC"
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK"*) to low power consumption mode
	LOCK		Power supply position is "LOCK"*
	OFF		Power supply position is "OFF" (Ignition switch OFF)
	ACC		Power supply position is "ACC" (Ignition switch ACC)
	ON		Power supply position is "IGN" (Ignition switch ON with engine stopped)
	ENGINE RUN		Power supply position is "RUN" (Ignition switch ON with engine running)
CRANKING	Power supply position is "CRANKING" (At engine cranking)		
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> <li>• The number is 0 when a malfunction is detected now.</li> <li>• The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.</li> <li>• The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.</li> </ul>	

### NOTE:

\*: Power supply position shifts to "LOCK" from "OFF", when ignition switch is in the OFF position, selector lever is in the P position, and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power supply position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "LOCK".

### RETAINED PWR

RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)

INFOID:000000010578791

### DATA MONITOR

### NOTE:

# DIAGNOSIS SYSTEM (BCM)

## < SYSTEM DESCRIPTION >

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Description
DOOR SW-DR	Indicates [ON/OFF] condition of driver side door switch.
DOOR SW-AS	Indicates [ON/OFF] condition of passenger side door switch.

A

B

C

D

E

F

G

H

I

J

RF

L

M

N

O

P

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### POWER SUPPLY AND GROUND CIRCUIT SUNROOF MOTOR ASSEMBLY

#### SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure

INFOID:0000000010578792

#### 1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect sunroof motor assembly connector.
3. Turn ignition switch ON.
4. Check voltage between sunroof motor assembly harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Sunroof motor assembly			
Connector	Terminal	Ground	Battery voltage
R4	9		
	7		

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 3.

#### 2. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between sunroof motor assembly harness connector and ground.

Sunroof motor assembly		Ground	Continuity
Connector	Terminal		
R4	10		Existed

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Repair or replace harness.

#### 3. CHECK SUNROOF MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and sunroof motor assembly harness connector.

BCM		Sunroof motor assembly		Continuity
Connector	Terminal	Connector	Terminal	
M118	2	R4	7	Existed
	3		9	

4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M118	2		Not existed
	3		

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-93. "Removal and Installation"](#).  
NO >> Repair or replace harness.

# SUNROOF SWITCH

< DTC/CIRCUIT DIAGNOSIS >

## SUNROOF SWITCH

### Description

INFOID:000000010578793

Tilt up/down and slide open/close by sunroof switch operation.

### Component Function Check

INFOID:000000010578794

#### 1.CHECK SUNROOF MOTOR OPERATION

Check tilt up/down and slide open/close operations using sunroof switch.

Is the inspection result normal?

- YES >> Sunroof switch is OK.  
NO >> Refer to [RF-11, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000010578795

## SUNROOF SWITCH

#### 1.CHECK SUNROOF SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect sunroof switch connector.
3. Turn ignition switch ON.
4. Check voltage between sunroof switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Sunroof switch			
Connector	Terminal	Ground	Battery voltage
R16	1		
	3		

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 4.

#### 2.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between sunroof switch harness connector and ground.

Sunroof switch		Ground	Continuity
Connector	Terminal		
R16	2		Existed

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace harness.

#### 3.CHECK SUNROOF SWITCH

Check sunroof switch.

Refer to [RF-12, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Replace sunroof switch (built in map lamp assembly). Refer to [RF-89, "Removal and Installation"](#).

#### 4.CHECK SUNROOF SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect sunroof motor assembly connector.
3. Check continuity between sunroof switch assembly harness connector and sunroof switch harness connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF

# SUNROOF SWITCH

## < DTC/CIRCUIT DIAGNOSIS >

Sunroof switch		Sunroof motor assembly		Continuity
Connector	Terminal	Connector	Terminal	
R16	1	R4	5	Existed
	3		1	

4. Check continuity between sunroof switch assembly harness connector and ground.

Sunroof motor assembly		Ground	Continuity
Connector	Terminal		
R4	5		Not existed
	1		

Is the inspection result normal?

YES >> Replace sunroof motor assembly. Refer to [RF-81, "Removal and Installation"](#).

NO >> Repair or replace harness.

## 5.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:0000000010578796

## SUNROOF SWITCH

### 1.CHECK SUNROOF SWITCH

1. Turn ignition switch OFF.
2. Disconnect sunroof switch connector.
3. Check continuity between sunroof switch terminals.

Terminals		Sunroof switch	Condition	Continuity
1	2			TILT the DOWN/SLIDE OPEN
		Other than the above		Not existed
3		TILT UP/SLIDE the CLOSE		Existed
		Other than the above		Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace sunroof switch (built in map lamp assembly). Refer to [RF-89, "Removal and Installation"](#).

# DOOR SWITCH

< DTC/CIRCUIT DIAGNOSIS >

## DOOR SWITCH

### Description

INFOID:000000010578797

Detects door open/closed condition.

### Component Function Check

INFOID:000000010578798

### 1.CHECK FUNCTION

Check door switches ("DOOR SW-DR", "DOOR SW-AS") in the "Data Monitor" mode using CONSULT.

Monitor item	Door condition	Display
DOOR SW-DR	CLOSE → OPEN	OFF → ON
DOOR SW-AS		

Is the inspection result normal?


- YES >> Door switch is OK.  
 NO >> Refer to [RF-13, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000010578799

### 1.CHECK FRONT DOOR SWITCH INPUT SIGNAL

- Turn ignition switch OFF.
- Disconnect malfunctioning front door switch connector.
- Check voltage signal between malfunctioning front door switch harness connector and ground.

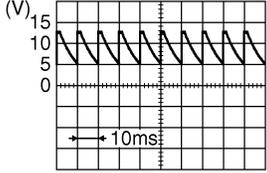(+)		Terminal	(-)	Voltage (V) (Approx.)
Front door switch				
Connector		2	Ground	
Driver side	B16			
Passenger side	B216			

Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> GO TO 2.

### 2.CHECK DOOR SWITCH CIRCUIT

- Disconnect BCM connector.
- Check continuity between BCM harness connector and malfunctioning door switch harness connector.

BCM		Front door switch		Continuity
Connector	Terminal	Connector	Terminal	
M123	124	B216	2	Existed
	150	B16		

- Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M123	124	Ground	Not existed
	150		

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF

# DOOR SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-93, "Removal and Installation"](#).

NO >> Repair or replace harness.

## 3.CHECK FRONT DOOR SWITCH

Check front door switch.

Refer to [RF-14, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace malfunctioning front door switch. Refer to [DLK-356, "Removal and Installation"](#).

## 4.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000010578800

## 1.CHECK FRONT DOOR SWITCH

1. Turn ignition switch OFF.
2. Disconnect malfunctioning front door switch connector.
3. Check malfunctioning front door switch.

(+)			(-)	Condition	Continuity		
Front door switch							
Connector		Terminal	Ground part of door switch	Door switch			
Driver side	B16	2				Pressed	Not existed
						Released	Existed
Passenger side	B216	2				Pressed	Not existed
			Released	Existed			

Is the inspection result normal?

YES >> Front door switch is OK.

NO >> Replace malfunctioning front door switch. Refer to [DLK-356, "Removal and Installation"](#).

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## ECU DIAGNOSIS INFORMATION

### BCM (BODY CONTROL MODULE)

#### Reference Value

INFOID:0000000010782871

#### VALUES ON THE DIAGNOSIS TOOL

##### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

##### CONSULT MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT/AUTO	Off
	Front wiper switch INT/AUTO	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper volume dial is in a dial position 1 - 7	Wiper volume dial position
RR WIPER ON	Other than rear wiper switch ON	Off
	Rear wiper switch ON	On
RR WIPER INT	Other than rear wiper switch INT	Off
	Rear wiper switch INT	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER STOP	Rear wiper is in STOP position	Off
	Rear wiper is not in STOP position	On
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
RR FOG SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	Rear RH door closed	Off
	Rear RH door opened	On
DOOR SW-RL	Rear LH door closed	Off
	Rear LH door opened	On
DOOR SW-BK	Back door closed	Off
	Back door opened	On
CDL LOCK SW	Other than power door lock switch LOCK	Off
	Power door lock switch LOCK	On
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off
	Power door lock switch UNLOCK	On
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off
	Driver door key cylinder LOCK position	On
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off
	Driver door key cylinder UNLOCK position	On
KEY CYL SW-TR	<b>NOTE:</b> The item is indicated, but not monitored.	Off
HAZARD SW	Hazard switch is OFF	Off
	Hazard switch is ON	On
REAR DEF SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off
TR CANCEL SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off
TR/BD OPEN SW	Back door opener switch OFF	Off
	While the back door opener switch is turned ON	On
TRNK/HAT MNTR	<b>NOTE:</b> The item is indicated, but not monitored.	Off
REVERSE SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off
RKE-LOCK	LOCK button of the Intelligent Key is not pressed	Off
	LOCK button of the Intelligent Key is pressed	On
RKE-UNLOCK	UNLOCK button of the Intelligent Key is not pressed	Off
	UNLOCK button of the Intelligent Key is pressed	On
RKE-TR/BD	<b>NOTE:</b> The item is indicated, but not monitored.	Off
RKE-PANIC	PANIC button of the Intelligent Key is not pressed	Off
	PANIC button of the Intelligent Key is pressed	On
RKE-P/W OPEN	UNLOCK button of the Intelligent Key is not pressed	Off
	UNLOCK button of the Intelligent Key is pressed and held	On

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
RKE-MODE CHG	LOCK/UNLOCK button of the Intelligent Key is not pressed and held simultaneously	Off	A
	LOCK/UNLOCK button of the Intelligent Key is pressed and held simultaneously	On	B
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V	
	Dark outside of the vehicle	Close to 0 V	
REQ SW -DR	Driver door request switch is not pressed	Off	C
	Driver door request switch is pressed	On	
REQ SW -AS	Passenger door request switch is not pressed	Off	D
	Passenger door request switch is pressed	On	
REQ SW -RR	<b>NOTE:</b> The item is indicated, but not monitored.	Off	E
REQ SW -RL	<b>NOTE:</b> The item is indicated, but not monitored.	Off	
REQ SW -BD/TR	Back door request switch is not pressed	Off	F
	Back door request switch is pressed	On	
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off	G
	Push-button ignition switch (push switch) is pressed	On	
IGN RLY2 -F/B	<b>NOTE:</b> The item is indicated, but not monitored.	Off	H
ACC RLY -F/B	<b>NOTE:</b> The item is indicated, but not monitored.	Off	
CLUCH SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off	I
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off	J
	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On	
BRAKE SW 2	The brake pedal is not depressed	Off	
	The brake pedal is depressed	On	
DETE/CANCL SW	Selector lever in P position	Off	RF
	Selector lever in any position other than P	On	
SFT PN/N SW	Selector lever in any position other than P and N	Off	L
	Selector lever in P or N position	On	
S/L -LOCK	<b>NOTE:</b> The item is indicated but not monitored.	Off	M
S/L -UNLOCK	<b>NOTE:</b> The item is indicated but not monitored.	Off	
S/L RELAY-F/B	<b>NOTE:</b> The item is indicated but not monitored.	Off	N
UNLK SEN -DR	Driver door is unlocked	Off	O
	Driver door is locked	On	
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off	P
	Push-button ignition switch (push-switch) is pressed	On	
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off	
	Ignition switch in ON position	On	
DETE SW -IPDM	Selector lever in any position other than P	Off	
	Selector lever in P position	On	
SFT PN -IPDM	Selector lever in any position other than P and N	Off	
	Selector lever in P or N position	On	

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
SFT P -MET	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT N -MET	Selector lever in any position other than N	Off
	Selector lever in N position	On
ENGINE STATE	Engine stopped	Stop
	While the engine stalls	Stall
	At engine cranking	Crank
	Engine running	Run
S/L LOCK-IPDM	<b>NOTE:</b> The item is indicated but not monitored.	Off
S/L UNLK-IPDM	<b>NOTE:</b> The item is indicated but not monitored.	Off
S/L RELAY-REQ	<b>NOTE:</b> The item is indicated but not monitored.	Off
VEH SPEED 1	While driving	Equivalent to speedometer reading
VEH SPEED 2	While driving	Equivalent to speedometer reading
DOOR STAT-DR	Driver door is locked	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Driver door is unlocked	UNLOCK
DOOR STAT-AS	Passenger door is locked	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Passenger door is unlocked	UNLOCK
ID OK FLAG	Driver side door is open after ignition switch is turned OFF (Selector lever is in the P position)	Reset
	Ignition switch ON	Set
PRMT ENG STRT	The engine start is prohibited	Reset
	The engine start is permitted	Set
PRMT RKE STRT	<b>NOTE:</b> The item is indicated, but not monitored.	Reset
KEY SW -SLOT	The Intelligent Key is not inserted into key slot	Off
	The Intelligent Key is inserted into key slot	On
RKE OPE COUN1	During the operation of the Intelligent Key	Operation frequency of the Intelligent Key
RKE OPE COUN2	<b>NOTE:</b> The item is indicated, but not monitored.	—
CONFIRM ID ALL	The key ID that the key slot receives is not recognized by any key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with any key ID registered to BCM.	Done
CONFIRM ID4	The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.	Done
CONFIRM ID3	The key ID that the key slot receives is not recognized by the third key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the third key ID registered to BCM.	Done

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
CONFIRM ID2	The key ID that the key slot receives is not recognized by the second key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the second key ID registered to BCM.	Done
CONFIRM ID1	The key ID that the key slot receives is not recognized by the first key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the first key ID registered to BCM.	Done
TP 4	The ID of fourth Intelligent Key is not registered to BCM	Yet
	The ID of fourth Intelligent Key is registered to BCM	Done
TP 3	The ID of third Intelligent Key is not registered to BCM	Yet
	The ID of third Intelligent Key is registered to BCM	Done
TP 2	The ID of second Intelligent Key is not registered to BCM	Yet
	The ID of second Intelligent Key is registered to BCM	Done
TP 1	The ID of first Intelligent Key is not registered to BCM	Yet
	The ID of first Intelligent Key is registered to BCM	Done


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## TERMINAL LAYOUT

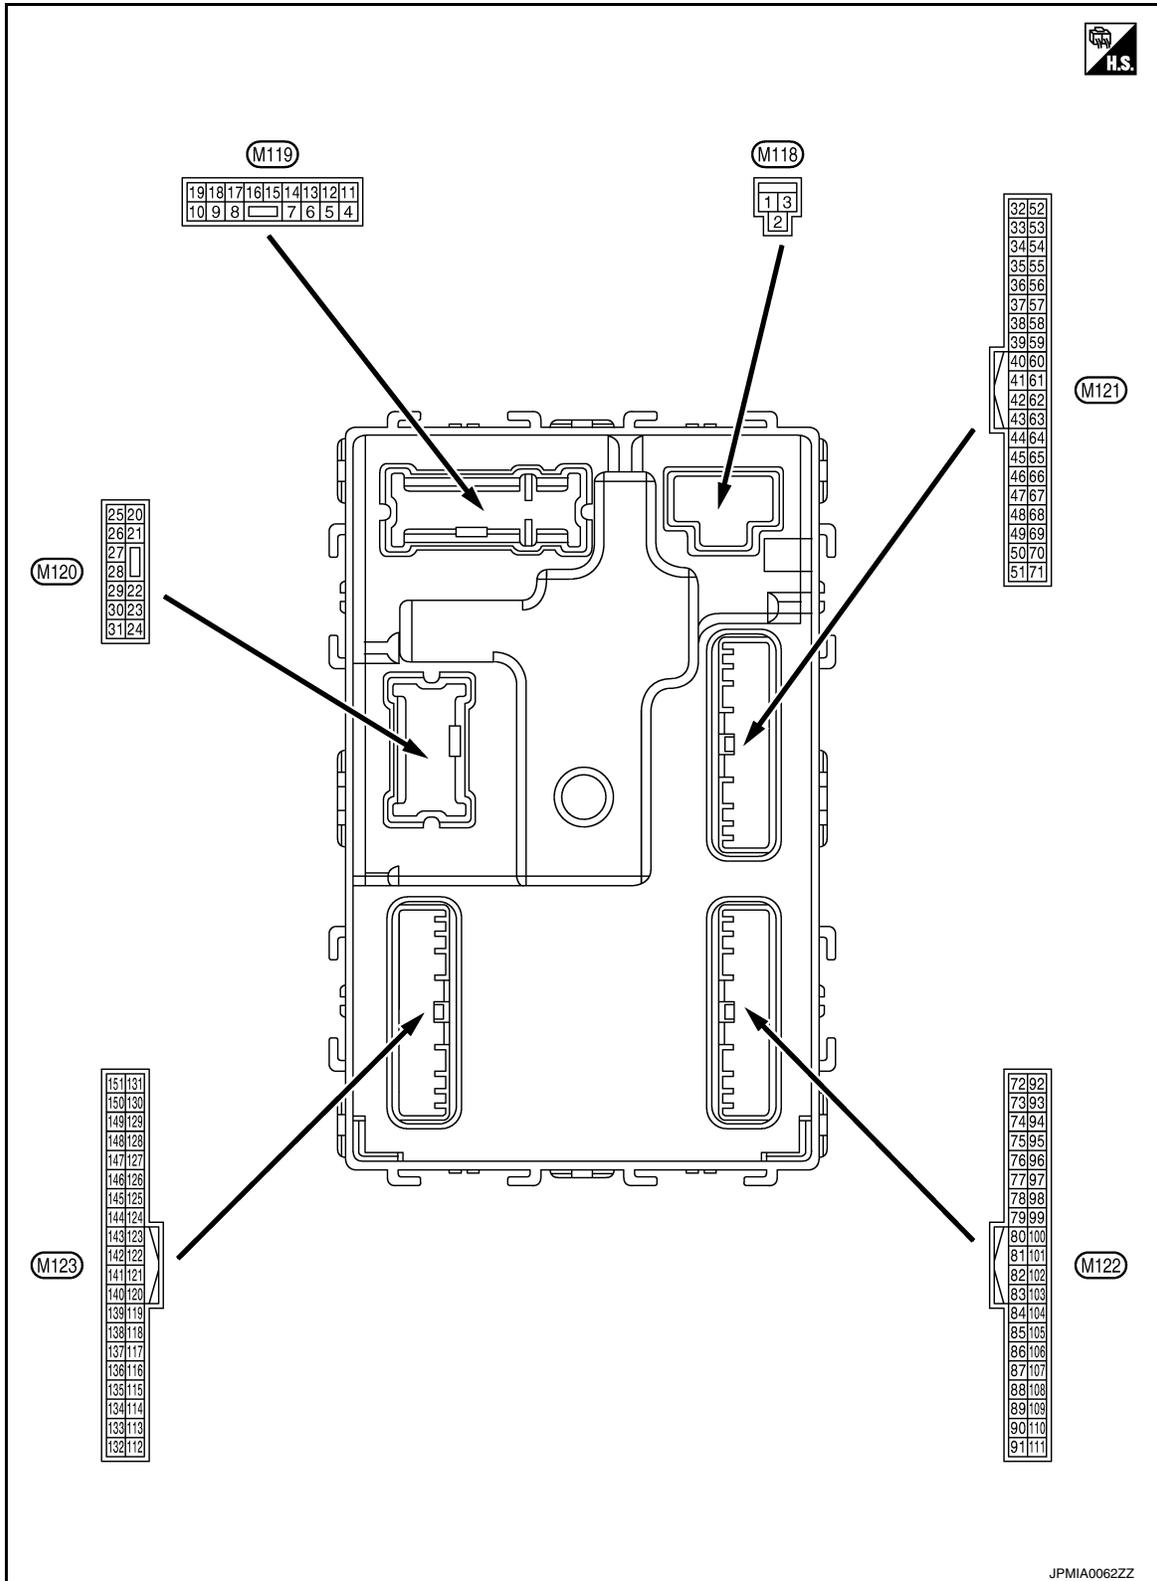


## PHYSICAL VALUES

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
2 (Y)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF	12 V
3 (BG)	Ground	P/W power supply (IGN)	Output	Ignition switch ON	12 V
4 (P)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)	0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)	12 V
5 (V)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)
					Other than UNLOCK (Actuator is not activated)
7 (Y)	Ground	Step lamp control	Output	Step lamp	ON
8 (V)	Ground	All doors, fuel lid LOCK	Output	All doors, fuel lid	LOCK (Actuator is activated)
9 (G)	Ground	Driver door, fuel lid UNLOCK	Output	Driver door, fuel lid	UNLOCK (Actuator is activated)
10 (BR)	Ground	Rear RH door and rear LH door UN- LOCK	Output	Rear RH door and rear LH door	UNLOCK (Actuator is activated)
11 (R)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON	0 V
15 (Y)	Ground	ACC indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)
17 (W)	Ground	Turn signal RH (Front)	Output	Ignition switch ON	Turn signal switch OFF

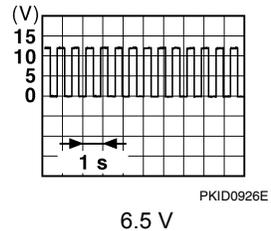

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P







# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
18 (BG)	Ground	Turn signal LH (Front)	Output	Ignition switch ON	0 V
				Turn signal switch OFF	6.5 V
19 (SB)	Ground	Interior room lamp control	Output	Other than under condition	5.0 V
				<ul style="list-style-type: none"> <li>Interior room lamp timer is activated. (Door is unlocked. etc...)</li> <li>Welcome light function is activated.</li> </ul>	0 V
20 (V)	Ground	Turn signal RH (Rear)	Output	Ignition switch ON	0 V
				Turn signal switch OFF	6.5 V
25 (G)	Ground	Turn signal LH (Rear)	Output	Ignition switch ON	0 V
				Turn signal switch OFF	6.5 V
26 (P)	Ground	Rear wiper	Output	Rear wiper	0 V
				OFF (Stopped)	12 V
34 (SB)	Ground	Luggage room anten- na (-)	Output	Ignition switch OFF	0 V
				When Intelligent Key is in the passenger compart- ment	12 V
34 (SB)	Ground	Luggage room anten- na (-)	Output	Ignition switch OFF	0 V
				When Intelligent Key is not in the passenger com- partment	12 V

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

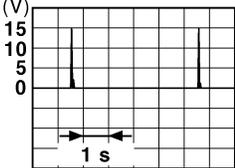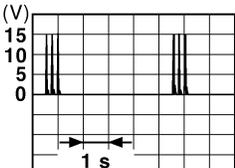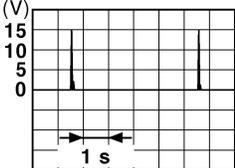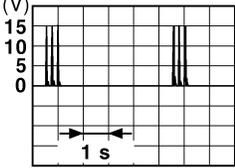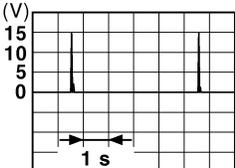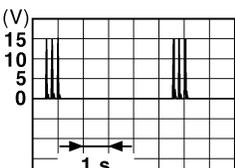Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
35 (V)	Ground	Luggage room antenna (+)	Output	Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMkia0062GB</p>	
				When Intelligent Key is not in the passenger compartment	 <p style="text-align: right; font-size: small;">JMkia0063GB</p>	
38 (B)	Ground	Back door antenna (-)	Output	When the back door opener request switch is operated with ignition switch OFF	 <p style="text-align: right; font-size: small;">JMkia0062GB</p>	
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMkia0063GB</p>	
39 (W)	Ground	Back door antenna (+)	Output	When the back door opener request switch is operated with ignition switch OFF	 <p style="text-align: right; font-size: small;">JMkia0062GB</p>	
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMkia0063GB</p>	
47 (Y)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	12 V
				ON	0 V	





A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF

# BCM (BODY CONTROL MODULE)






## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
52 (LG)	Ground	Starter relay control	Output	Ignition switch ON	12 V
				When selector lever is not in P or N position	0 V
60 (SB)	Ground	Push-button ignition switch (Push switch)	Input	Push-button ignition switch (Push switch)	0 V
				Pressed	12 V
61 (W)	Ground	Back door opener request switch	Input	Back door request switch	0 V
				ON (Pressed)	0 V
64 (L)	Ground	Intelligent Key warning buzzer (Engine room)	Output	Intelligent Key warning buzzer (Engine room)	0 V
				OFF (Not pressed)	12 V
65 (BG)	Ground	Rear wiper stop position	Input	Rear wiper	0 V
				In stop position	12 V
66 (LG)	Ground	Back door switch	Input	Back door switch	0 V
				OFF (Door close)	12 V
67 (P)	Ground	Back door opener switch	Input	Back door opener switch	0 V
				Pressed	0 V
68 (BR)	Ground	Rear RH door switch	Input	Rear RH door switch	0 V
				Not pressed	8.5 - 9.0 V
68 (BR)	Ground	Rear RH door switch	Input	Rear RH door switch	0 V
				OFF (Door close)	8.5 - 9.0 V
68 (BR)	Ground	Rear RH door switch	Input	Rear RH door switch	0 V
				ON (Door open)	0 V

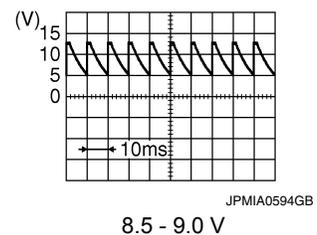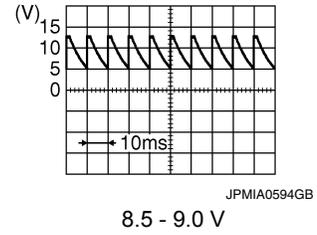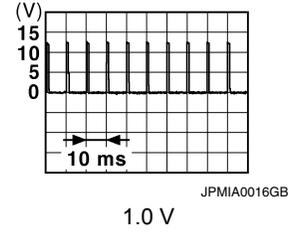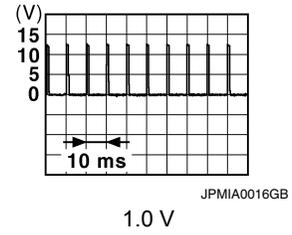

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

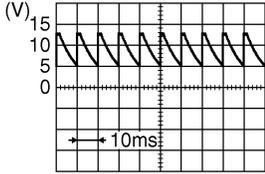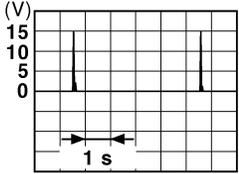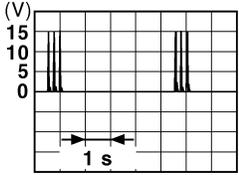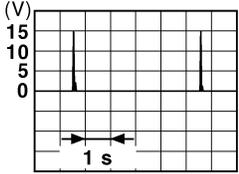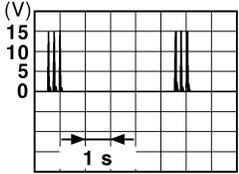Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
69 (R)	Ground	Rear LH door switch	Input	Rear LH door switch	 <p style="text-align: right; font-size: small;">JPMIA0594GB</p> <p style="text-align: center;">8.5 - 9.0 V</p>
				OFF (Door close)	0 V
74 (SB)	Ground	Passenger door antenna (-)	Output	When the passenger door request switch is operated with ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
75 (BR)	Ground	Passenger door antenna (+)	Output	When the passenger door request switch is operated with ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
76 (V)	Ground	Driver door antenna (-)	Output	When Intelligent Key is in the antenna detection area		
				When the driver door request switch is operat- ed with ignition switch OFF	When Intelligent Key is not in the antenna detec- tion area	
77 (LG)	Ground	Driver door antenna (+)	Output	When Intelligent Key is in the antenna detection area		
				When the driver door request switch is operat- ed with ignition switch OFF	When Intelligent Key is not in the antenna detec- tion area	
78 (Y)	Ground	Room antenna (-) (Instrument panel)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	
				When Intelligent Key is not in the passenger compart- ment		
					When Intelligent Key is not in the passenger compart- ment	

# BCM (BODY CONTROL MODULE)





## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
79 (BR)	Ground	Room antenna (+) (Instrument panel)	Output	Ignition switch OFF		
				When Intelligent Key is not in the passenger compart- ment		
80 (GR)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (W)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (P)	Ground	Ignition relay [Fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
					ON	12 V
83 (GR)	Ground	Remote keyless entry receiver communica- tion	Input/ Output	During waiting		
				When operating either button on the Intelli- gent Key		

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

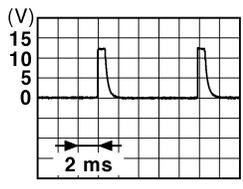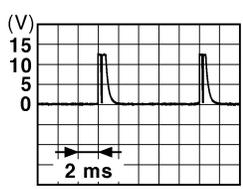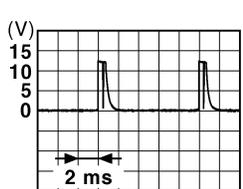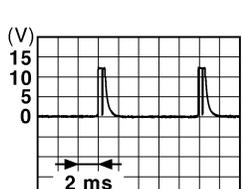Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
87 (BR)	Ground	Combination switch INPUT 5	Input	Combination switch	All switches OFF (Wiper volume dial 4) <div style="text-align: right;">  <p style="text-align: right;">1.4 V</p> </div>
					Front fog lamp switch ON (Wiper volume dial 4) <div style="text-align: right;">  <p style="text-align: right;">1.3 V</p> </div>
					Rear wiper switch ON (Wiper volume dial 4) <div style="text-align: right;">  <p style="text-align: right;">1.3 V</p> </div>
					Any of the conditions be- low with all switches OFF <ul style="list-style-type: none"> <li>• Wiper volume dial 1</li> <li>• Wiper volume dial 2</li> <li>• Wiper volume dial 6</li> <li>• Wiper volume dial 7</li> </ul> <div style="text-align: right;">  <p style="text-align: right;">1.3 V</p> </div>

# BCM (BODY CONTROL MODULE)



## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
88 (V)	Ground	Combination switch INPUT 3	Input	Combination switch	All switches OFF (Wiper volume dial 4)	<p style="text-align: center;">1.4 V</p>
					Lighting switch HI (Wiper volume dial 4)	<p style="text-align: center;">1.3 V</p>
					Lighting switch 2ND (Wiper volume dial 4)	<p style="text-align: center;">1.3 V</p>
					Rear washer switch ON (Wiper volume dial 4)	<p style="text-align: center;">1.3 V</p>
					Any of the conditions below with all switches OFF	<ul style="list-style-type: none"> <li>• Wiper volume dial 1</li> <li>• Wiper volume dial 2</li> <li>• Wiper volume dial 3</li> </ul> <p style="text-align: center;">1.3 V</p>
90 (P)	Ground	CAN-L	Input/ Output	—	—	
91 (L)	Ground	CAN-H	Input/ Output	—	—	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P






# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

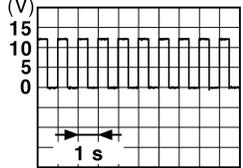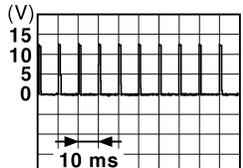Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
92 (LG)	Ground	Key slot illumination	Output	Key slot illumination	OFF	12 V
					Blinking	 <p style="text-align: right; font-size: small;">JPMIA0015GB</p>
					ON	0 V
93 (V)	Ground	ON indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ON or ACC	0 V
95 (BG)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	12 V
96 (GR)	Ground	A/T shift selector (Detention switch) power supply	Output	—	12 V	
99 (R)	Ground	Selector lever P position switch	Input	Selector lever	P position	0 V
					Any position other than P	12 V
100 (G)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: right; font-size: small;">JPMIA0016GB</p>
101 (SB)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: right; font-size: small;">JPMIA0016GB</p>
102 (BG)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	12 V
103 (BR)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF	12 V	

# BCM (BODY CONTROL MODULE)



## < ECU DIAGNOSIS INFORMATION >

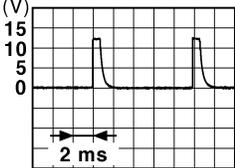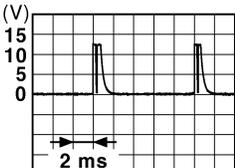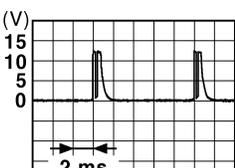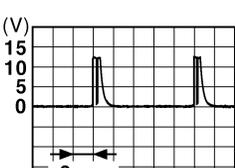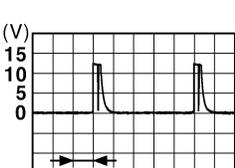Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
107 (LG)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper volume dial 4)	All switches OFF <div style="text-align: right;">  <p>1.4 V</p> </div>
					Turn signal switch LH <div style="text-align: right;">  <p>1.3 V</p> </div>
					Turn signal switch RH <div style="text-align: right;">  <p>1.3 V</p> </div>
					Front wiper switch LO <div style="text-align: right;">  <p>1.3 V</p> </div>
					Front washer switch ON <div style="text-align: right;">  <p>1.3 V</p> </div>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P





# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

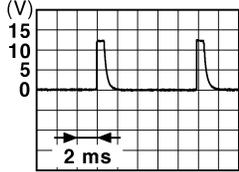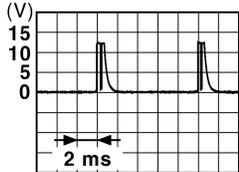Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
108 (R)	Ground	Combination switch INPUT 4	Input	Combination switch	All switches OFF (Wiper volume dial 4)	 <p style="text-align: right; margin-right: 20px;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>
					Lighting switch AUTO (Wiper volume dial 4)	 <p style="text-align: right; margin-right: 20px;">JPMIA0038GB</p> <p style="text-align: center;">1.3 V</p>
					Lighting switch 1ST (Wiper volume dial 4)	 <p style="text-align: right; margin-right: 20px;">JPMIA0036GB</p> <p style="text-align: center;">1.3 V</p>
					Rear wiper switch INT (Wiper volume dial 4)	 <p style="text-align: right; margin-right: 20px;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p>
					Any of the conditions below with all switches OFF	<ul style="list-style-type: none"> <li>• Wiper volume dial 1</li> <li>• Wiper volume dial 5</li> <li>• Wiper volume dial 6</li> </ul>  <p style="text-align: right; margin-right: 20px;">JPMIA0039GB</p> <p style="text-align: center;">1.3 V</p>

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

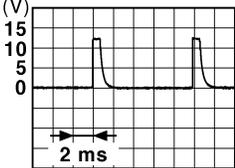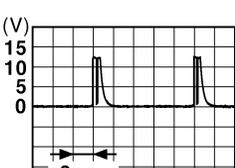
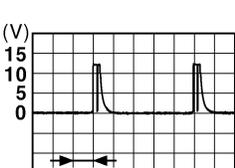
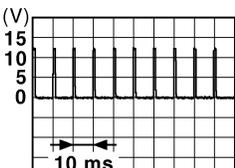
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
109 (Y)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper volume dial 4)	All switches OFF	 <p style="text-align: center;">1.4 V</p>
					Lighting switch PASS	 <p style="text-align: center;">1.3 V</p>
					Lighting switch 2ND	 <p style="text-align: center;">1.3 V</p>
					Front wiper switch INT/ AUTO	 <p style="text-align: center;">1.3 V</p>
					Front wiper switch HI	 <p style="text-align: center;">1.3 V</p>
					ON	0 V
110 (G)	Ground	Hazard switch	Input	Hazard switch	OFF	 <p style="text-align: center;">1.1 V</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF





# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

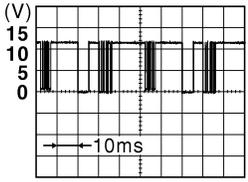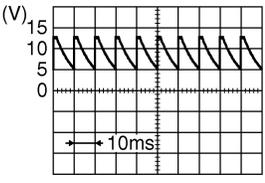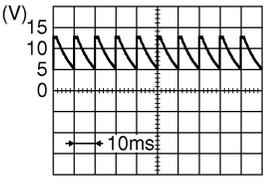Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
112 (GR)	Ground	Rain sensor serial link	Input/ Output	Ignition switch ON		 <p style="text-align: center;">8.7 V</p>
113 (P)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
116 (BR)	Ground	Stop lamp switch 1	Input	—		Battery voltage
118 (P)	Ground	Stop lamp switch 2 (Without ICC)	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is depressed)	Battery voltage
		Stop lamp switch 2 (With ICC)		Stop lamp switch OFF (Brake pedal is not depressed) and ICC brake hold relay OFF		0 V
				Stop lamp switch ON (Brake pedal is depressed) or ICC brake hold relay ON		Battery voltage
119 (SB)	Ground	Front door lock assembly driver side (Unlock sensor)	Input	Driver door	LOCK status (Unlock sensor switch OFF)	 <p style="text-align: center;">8.5 - 9.0 V</p>
					UNLOCK status (Unlock switch sensor ON)	0 V
121 (BR)	Ground	Key slot switch	Input	When the Intelligent Key is inserted into key slot		12 V
				When the Intelligent Key is not inserted into key slot		0 V
123 (W)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
124 (LG)	Ground	Passenger door switch	Input	Passenger door switch	OFF (Door close)	 <p style="text-align: center;">8.5 - 9.0 V</p>
					ON (Door open)	0 V

# BCM (BODY CONTROL MODULE)




## < ECU DIAGNOSIS INFORMATION >

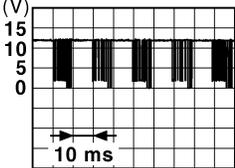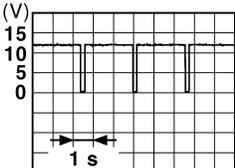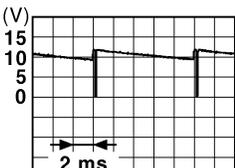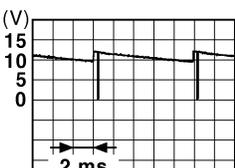Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
132 (BG)	Ground	Power window switch communication	Input/ Output	Ignition switch ON	 <small>JPMIA0013GB</small> 10.2 V
				Ignition switch OFF or ACC	12 V
134 (GR)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	OFF
				ON	Battery voltage
137 (B)	Ground	Receiver and sensor ground	Input	Ignition switch ON	0 V
138 (Y)	Ground	Sensor power supply	Output	Ignition switch	OFF
				ACC or ON	5.0 V
140 (R)	Ground	Selector lever P/N position	Input	Selector lever	P or N position
				Except P and N positions	0 V
141 (G)	Ground	Security indicator lamp	Output	Security indicator lamp	ON
				Blinking	 <small>JPMIA0014GB</small> 11.3 V
				OFF	12 V
142 (BG)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper volume dial 4)	All switches OFF
				Lighting switch 1ST	 <small>JPMIA0031GB</small> 10.7 V
				Lighting switch HI	
				Lighting switch 2ND	
				Turn signal switch RH	
143 (P)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switches OFF (Wiper volume dial 4)
				Front wiper switch HI (Wiper volume dial 4)	 <small>JPMIA0032GB</small> 10.7 V
				Rear wiper switch INT (Wiper volume dial 4)	
				Any of the conditions below with all switches OFF	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

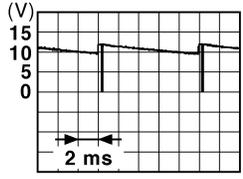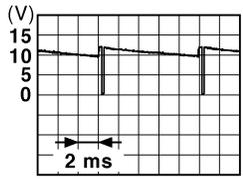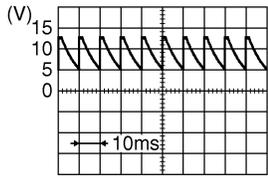
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
144 (G)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switches OFF (Wiper volume dial 4)	0 V
					Front washer switch ON (Wiper volume dial 4)	
					Rear wiper switch ON (Wiper volume dial 4)	
					Rear washer switch ON (Wiper volume dial 4)	
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> <li>• Wiper volume dial 1</li> <li>• Wiper volume dial 5</li> <li>• Wiper volume dial 6</li> </ul>	
145 (L)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper volume dial 4)	All switches OFF	0 V
					Front wiper switch INT/ AUTO	
					Front wiper switch LO	
					Lighting switch AUTO	
146 (SB)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper volume dial 4)	All switches OFF	0 V
					Front fog lamp switch ON	
					Lighting switch 2ND	
					Lighting switch PASS	
					Turn signal switch LH	
150 (GR)	Ground	Driver door switch	Input	Driver door switch	OFF (Door close)	 8.5 - 9.0 V
					ON (Door open)	0 V
151 (G)	Ground	Rear window defog- ger relay control	Output	Rear window de- fogger	Active	0 V
				Not activated	Battery voltage	

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## Wiring Diagram - BCM -

INFOID:000000010782872

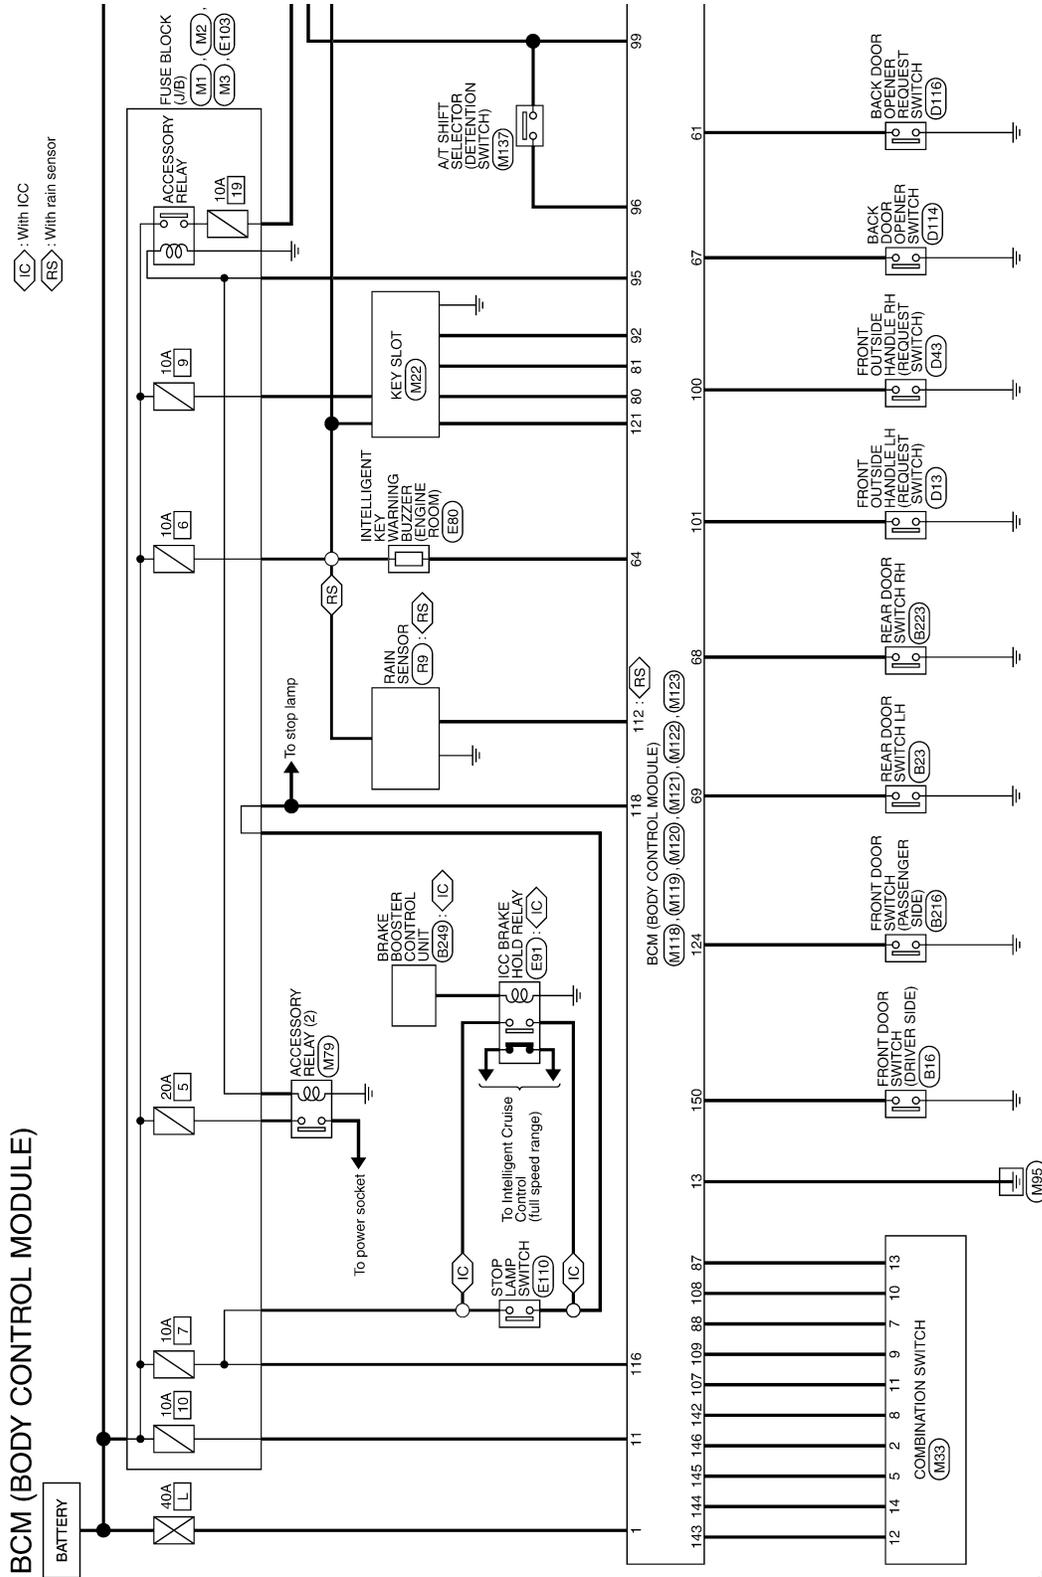


2014/03/18

JRMWF4484GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

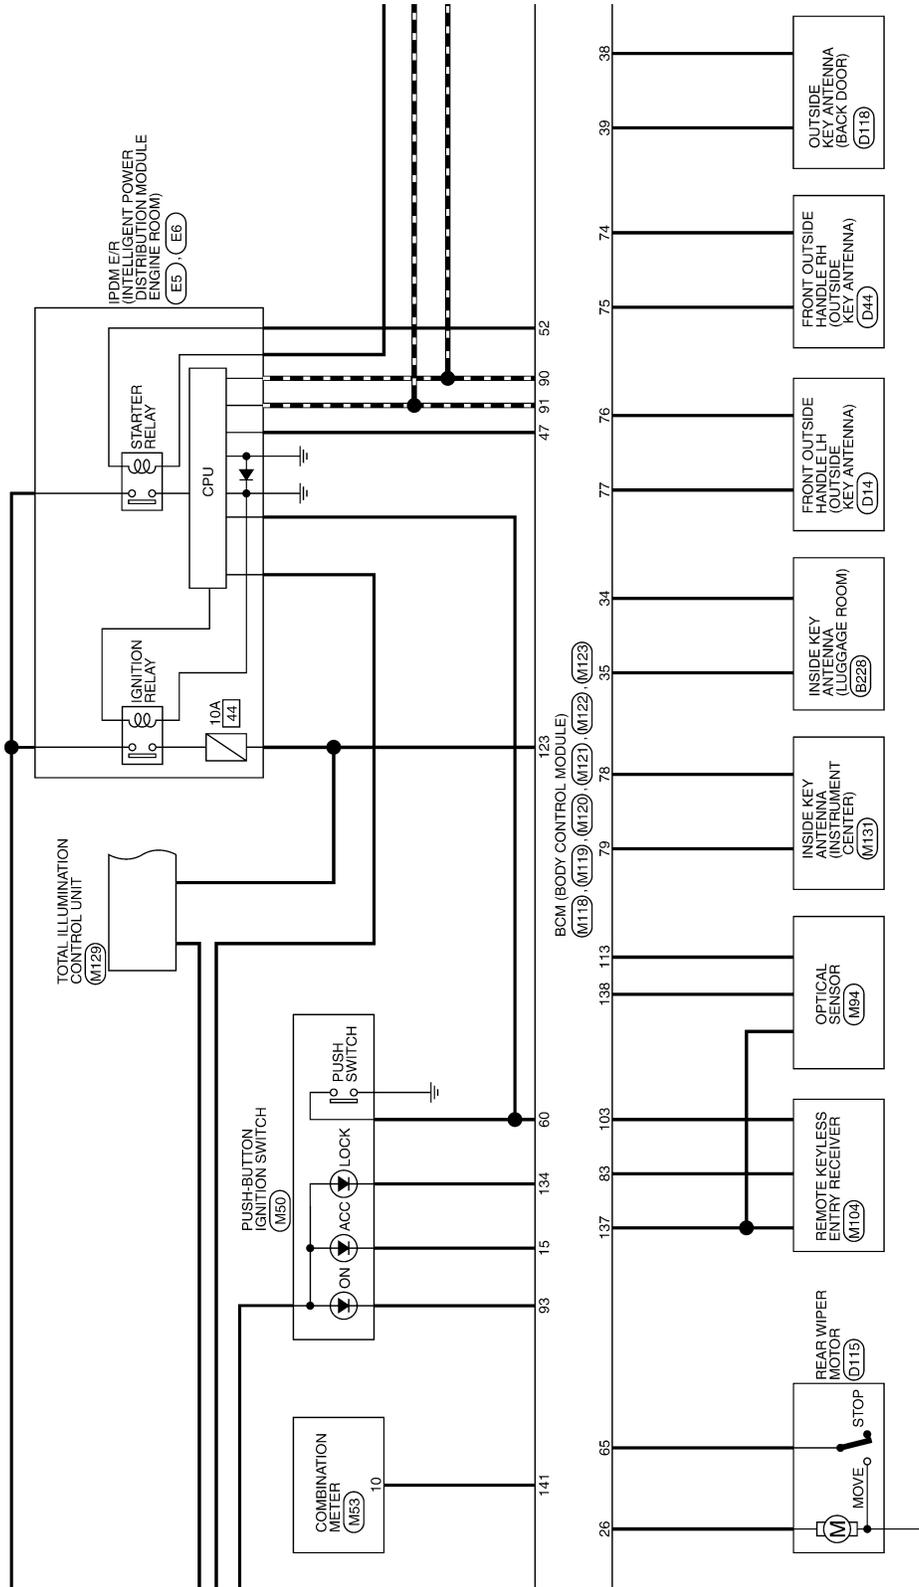


JRMWF4485GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

- ◊VQ : With VQ engine
- ◊VK : With VK engine
- ◊NV : With NAVI
- ◊ON : Without NAVI
- ◊PM : With automatic drive positioner
- ◊OP : Without automatic drive positioner

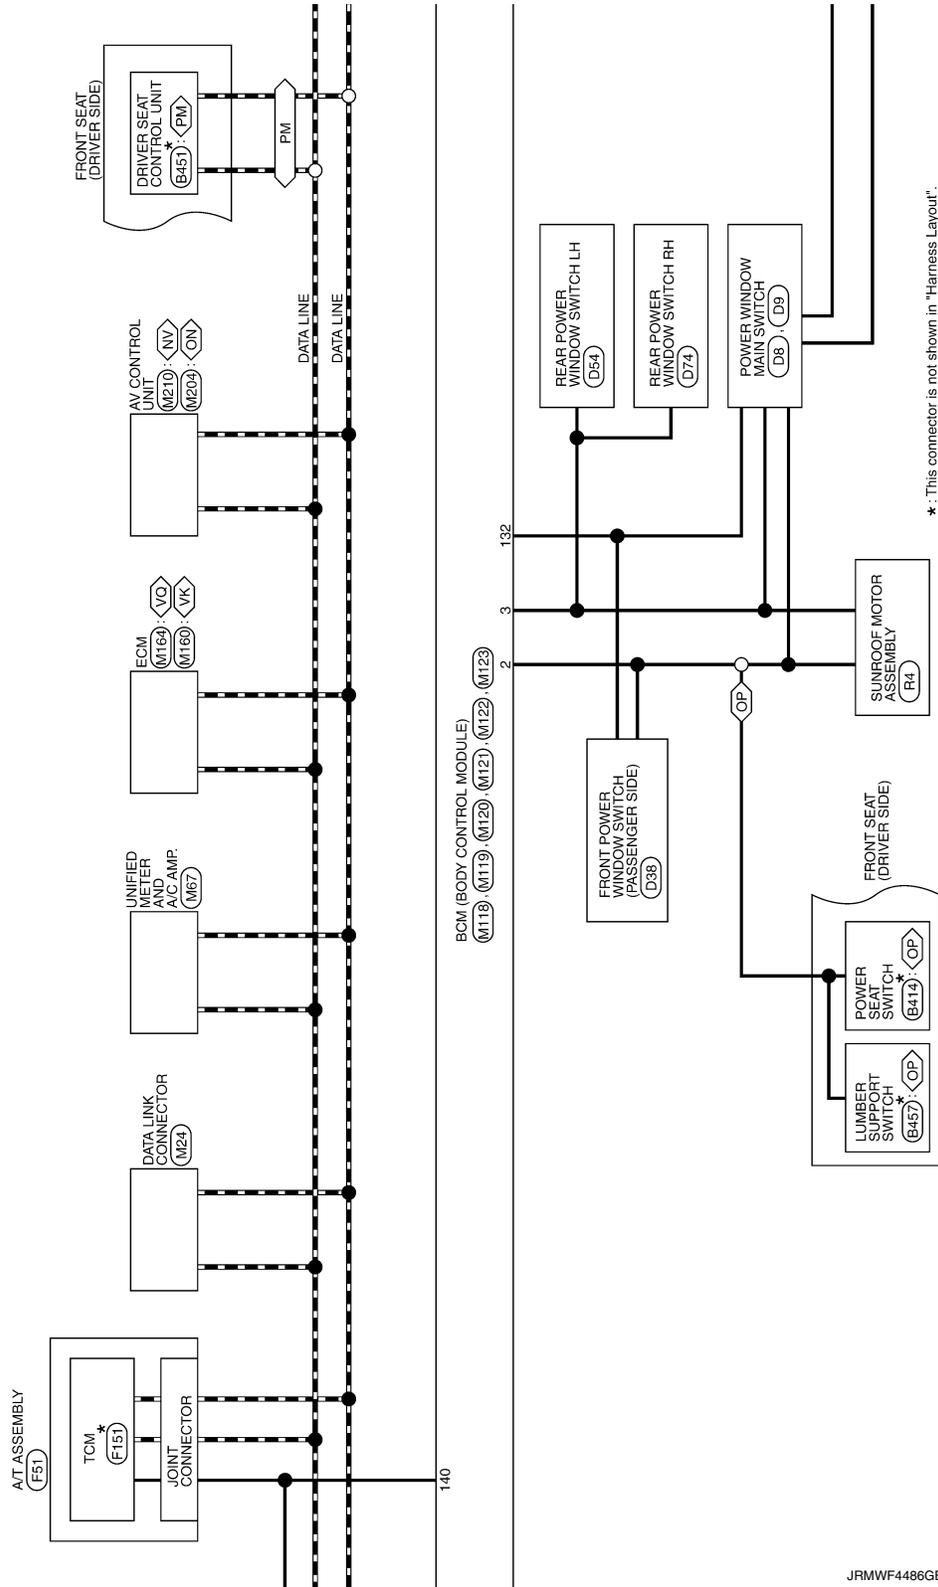


JRMWF4486GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

IC : With ICC  
OI : Without ICC

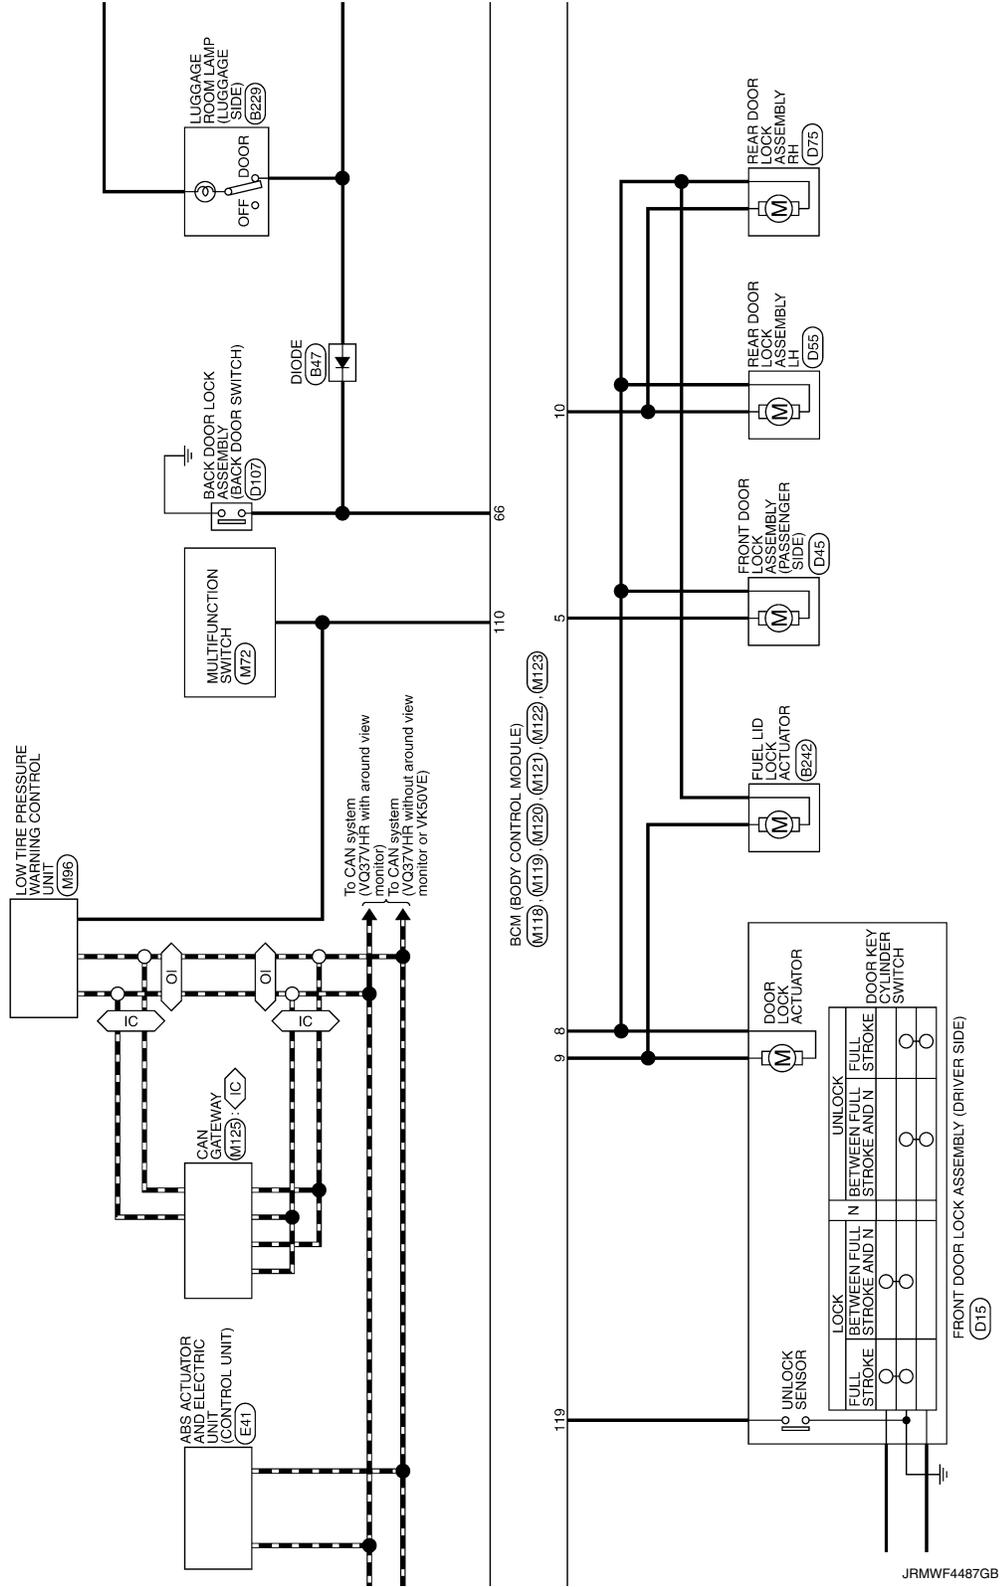

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

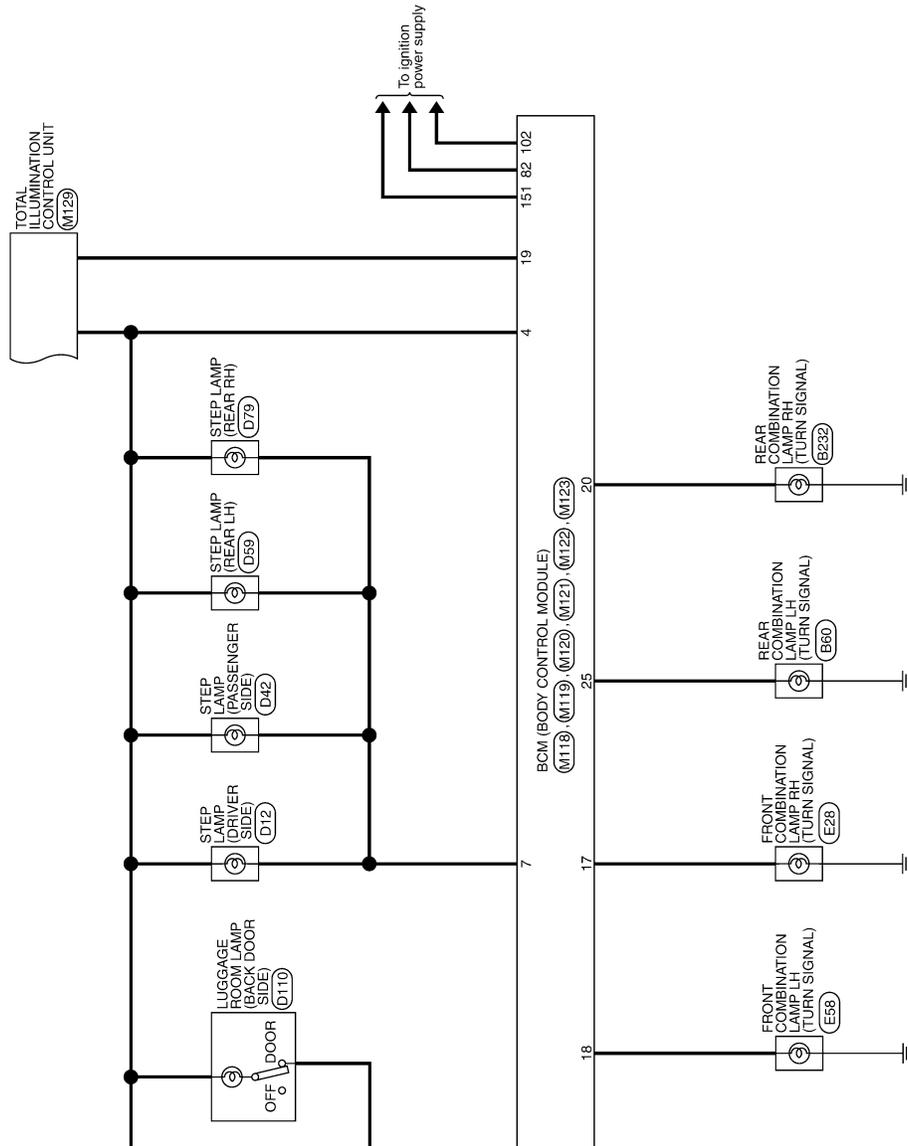

JRMWF4488GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## BCM (BODY CONTROL MODULE)

Connector No.	B116
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	A03FW



Terminal Color Of No.	Wire	Signal Name [Specification]
2	GR	-

Connector No.	B23
Connector Name	REAR DOOR SWITCH-LH
Connector Type	A03FW



Terminal Color Of No.	Wire	Signal Name [Specification]
2	W	-

Connector No.	B47
Connector Name	DIODE
Connector Type	24335_C9800




Terminal Color Of No.	Wire	Signal Name [Specification]
1	GR	-
2	V	-

Connector No.	B60
Connector Name	REAR COMBINATION LAMP LH
Connector Type	TH04MW-NH



Terminal Color Of No.	Wire	Signal Name [Specification]
1	R	-
2	LG	-
3	G	-
4	B	-

Connector No.	B216
Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)
Connector Type	A03FW



Terminal Color Of No.	Wire	Signal Name [Specification]
2	GR	-

Connector No.	B223
Connector Name	REAR DOOR SWITCH RH
Connector Type	A03FW



Terminal Color Of No.	Wire	Signal Name [Specification]
2	BG	-

Connector No.	B228
Connector Name	INSIDE KEY ANTENNA (LUGGAGE ROOM)
Connector Type	FKG2FGY



Terminal Color Of No.	Wire	Signal Name [Specification]
1	V	-
2	SB	-

Connector No.	B229
Connector Name	LUGGAGE ROOM LAMP (LUGGAGE SIDE)
Connector Type	TK03FW



Terminal Color Of No.	Wire	Signal Name [Specification]
1	W	-
2	L	-

Connector No.	B232
Connector Name	REAR COMBINATION LAMP RH
Connector Type	TH04MW-NH



Terminal Color Of No.	Wire	Signal Name [Specification]
1	P	-
2	LG	-
3	V	-
4	B	-

JRMWF4489GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


## BCM (BODY CONTROL MODULE)

Connector No.	B242
Connector Name	FUEL LID LOCK ACTUATOR
Connector Type	MD4FW-LC




Terminal No.	Wire	Signal Name [Specification]
1	W	-
2	V	-

Connector No.	B249
Connector Name	BRAKE BOOSTER CONTROL UNIT
Connector Type	TK2AFGY



Terminal No.	Wire	Signal Name [Specification]
33	G	IGNITION
40	SB	IBA OFF SW
42	G	IGNITION
46	B	GROUND
47	LG	BRAKE HOLD RLY DRIVE SIGNAL

Connector No.	B414
Connector Name	POWER SEAT SWITCH
Connector Type	NS10FW-CS



Terminal No.	Wire	Signal Name [Specification]
3	GY	-
4	P	-
5	W	-
6	V	-
7	LY	-
8	L	-
9	L/R	-
10	GW	-
33	R	-
48	B	-

Connector No.	B451
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	TH32FW



Terminal No.	Wire	Signal Name [Specification]
1	LW	RX
3	RY	CANH
9	WG	PULSE (RECLINING)
10	P/B	PULSE (RLIFTING)
11	BR	SLIDING SW (BACKWARD)
12	SB	RECLINING SW (BACKWARD)
13	GR	FRONT LIFTING SW (DOWNWARD)
14	GB	REAR LIFTING SW (DOWNWARD)
16	O	VCC
17	Y/R	TX


19	V	CAN-L
21	LY	P RANGE SW
24	R	PULSE (SLIDING)
25	Y/B	PULSE (RLIFTING)
26	Y	SLIDING SW (FORWARD)
27	R/G	RECLINING SW (FORWARD)
28	W/B	FRONT LIFTING SW (UPWARD)
29	P/L	REAR LIFTING SW (UPWARD)
31	GR	SENSOR GND
32	B/W	GND (SIGNAL)

Connector No.	B457
Connector Name	LUMBAR SUPPORT SWITCH
Connector Type	NS04FW-CS



Terminal No.	Wire	Signal Name [Specification]
33	R	-
48	B	-
57	W	-
58	L	-

Connector No.	D8
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS16FW-CS



Terminal No.	Wire	Signal Name [Specification]
1	W	-
2	LG	-
3	GR	-
4	V	-

5	SB	-
6	Y	-
7	BR	-
8	L	-
9	W	-
10	O	-
11	G	-
13	P	-
14	V	-
15	W	-

Connector No.	D9
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS03FW-CS



Terminal No.	Wire	Signal Name [Specification]
17	B	-
19	Y	-

Connector No.	D12
Connector Name	STEP LAMP (DRIVER SIDE)
Connector Type	TB02FW



Terminal No.	Wire	Signal Name [Specification]
1	LG	-
2	SB	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## BCM (BODY CONTROL MODULE)

Connector No.	D13
Connector Name	FRONT OUTSIDE HANDLE LH (REQUEST SWITCH)
Connector Type	RK02FL-B




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-

Connector No.	D14
Connector Name	FRONT OUTSIDE HANDLE LH (OUTSIDE KEY ANTENNA)
Connector Type	RK02MGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	V	-

Connector No.	D15
Connector Name	FRONT DOOR LOCK ASSEMBLY (DRIVERSIDE)
Connector Type	E08FGY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	R	-
3	G	-
4	B	-
5	V	-
6	V	-

Connector No.	D38
Connector Name	FRONT POWER WINDOW SWITCH (PASSENGER SIDE)
Connector Type	NST16FW-GS



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	W	-
8	L	-
9	G	-
10	Y	-
11	B	-
12	P	-
15	R	-
16	V	-

Connector No.	D42
Connector Name	STEP LAMP (PASSENGER SIDE)
Connector Type	TB02FM



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-
2	R	-

Connector No.	D43
Connector Name	FRONT OUTSIDE HANDLE RH (REQUEST SWITCH)
Connector Type	RK02FL-B




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-

Connector No.	D44
Connector Name	FRONT OUTSIDE HANDLE RH (OUTSIDE KEY ANTENNA)
Connector Type	RK02MGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	W	-

Connector No.	D45
Connector Name	FRONT DOOR LOCK ASSEMBLY (PASSENGER SIDE)
Connector Type	E08FGY-RS





Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	LG	-

JRMWF4491GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)			
Connector No.	D54	Connector Name	REAR POWER WINDOW SWITCH LH
Connector Type	NS08FW-CS		
			
			
Terminal No.	Wire	Signal Name [Specification]	
1	W	-	
2	L	-	
3	R	-	
4	L	-	
5	G	-	
7	B	-	
Connector No.	D55	Connector Name	REAR DOOR LOCK ASSEMBLY LH
Connector Type	E06FGY-RS		
			
			
Terminal No.	Wire	Signal Name [Specification]	
1	V	-	
2	G	-	
Connector No.	D59	Connector Name	STEP LAMP (REAR LH)
Connector Type	TB02FW		
			
			
Terminal No.	Wire	Signal Name [Specification]	
1	L	-	
2	O	-	
Connector No.	D74	Connector Name	REAR POWER WINDOW SWITCH RH
Connector Type	NS08FW-CS		
			
			
Terminal No.	Wire	Signal Name [Specification]	
1	W	-	
2	P	-	
3	R	-	
4	L	-	
5	G	-	
7	B	-	
Connector No.	D75	Connector Name	REAR DOOR LOCK ASSEMBLY RH
Connector Type	E06FGY-RS		
			
			
Terminal No.	Wire	Signal Name [Specification]	
1	G	-	
2	L	-	
Connector No.	D79	Connector Name	STEP LAMP (REAR RH)
Connector Type	TB02FW		
			
			
Terminal No.	Wire	Signal Name [Specification]	
1	L	-	
2	O	-	
Connector No.	D107	Connector Name	BACK DOOR LOCK ASSEMBLY
Connector Type	NS08FW-CS		
			
			
Terminal No.	Wire	Signal Name [Specification]	
1	LW	-	
2	LB	-	
4	G	-	
6	L	-	
7	W	-	
8	GR	-	
Connector No.	D110	Connector Name	LUGGAGE ROOM LAMP (BACK DOOR SIDE)
Connector Type	TK03FW		
			
			
Terminal No.	Wire	Signal Name [Specification]	
1	GR	-	
2	L	-	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## BCM (BODY CONTROL MODULE)

Connector No.	D114
Connector Name	BACK DOOR OPENER SWITCH
Connector Type	TK02MBR-P



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	D115
Connector Name	REAR WIPER MOTOR
Connector Type	CJ04FM-IV



Terminal No.	Color Of Wire	Signal Name [Specification]
2	G	-
3	BG	-
4	B	-

Connector No.	D116
Connector Name	BACK DOOR OPENER REQUEST SWITCH
Connector Type	TK02MBR-P




Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	B	-

Connector No.	D118
Connector Name	OUTSIDE KEY ANTENNA (BACK DOOR)
Connector Type	RK02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	R	-

Connector No.	E5
Connector Name	IPDM ER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH02FM-CS12-M4-IV



Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
7	R	-
10	SB	-
12	B	-
13	Y	-
16	LG	-
19	W	-
25	G	-
26	R	-
27	Y	-
28	BG	-
30	GR	-
36	G	-

Connector No.	E6
Connector Name	IPDM ER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH03FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B	-
42	Y	-
43	SB	-
44	W	-


45	G
46	BR

Connector No.	E28
Connector Name	FRONT COMBINATION LAMP RH
Connector Type	RSM4FB-FR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	V	-
3	B	-
4	P	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAM42FB-AH24-LH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	G	GROUND
3	R	LBWR
4	B	GROUND
5	Y	DIS FL
6	BG	DIP RL
7	BR	DIP RL
9	B	DIP FR
10	W	DIS FR
12	L	VAC
14	P	CANL
15	SHIELD	AGND

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## BCM (BODY CONTROL MODULE)

19	P	UST
25	Y	BUS-L
26	R	DP FL
27	GR	DS RL
28	G	LZ
29	LG	DS RR
30	SB	BLS
31	R	VDC OFF SW
35	L	CANH
45	B	BUS-H

Connector No.	E58
Connector Name	FRONT COMBINATION LAMP LH
Connector Type	RS4FBR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	G	-
3	B	-
4	BG	-

Connector No.	E80
Connector Name	INTELLIGENT KEY WARNING BUZZER (B/W/LE ROOM)
Connector Type	RK3FBR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	+BAT (VOL. SMALL)
3	GR	BUZZER SIGNAL

Connector No.	E91
Connector Name	ICC BRAKE HOLD RELAY
Connector Type	MD6FGY-R-US



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	B	-
3	G	-
4	G	-
6	W	-
7	L	-

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10F	L	-
1F	SB	-
2F	W	-
3F	Y	-
4F	G	-
6F	BG	-
8F	L	-
9F	R	-

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	MD4FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	W	-
3	G	-
4	BR	-

Connector No.	F51
Connector Name	AT ASSEMBLY
Connector Type	RK10FG-DSY




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	IGNITION POWER SUPPLY
2	R	BATTERY POWER SUPPLY (MEMORY BACKUP)
3	L	CANH
4	V	K-LINE
5	B	GROUND
6	Y	IGNITION POWER SUPPLY
7	R	BACK-UP LAMP RELAY
8	P	CANL
9	GR	STARTER RELAY (with VQ engine)
10	B	STARTER RELAY (with VK engine)
		GROUND

Connector No.	F151
Connector Name	TCM
Connector Type	SP10FG



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	IGNITION POWER SUPPLY
2	B	BATTERY POWER SUPPLY (MEMORY BACKUP)
3	R	CANH
4	O	K-LINE
5	G	GROUND
6	GR	IGNITION POWER SUPPLY
7	L	BACK-UP LAMP RELAY
8	BR	CANL
9	Y	STARTER RELAY
10	W/B	GROUND

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS08FM-M2



Terminal No.	Color Of Wire	Signal Name [Specification]
1A	BG	-
2A	G	-
3A	L	-
4A	R	-
5A	V	-
6A	Y	-
7A	R	-
8A	L	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


RF

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


## BCM (BODY CONTROL MODULE)

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
1B	LG	-
3B	P	-
4B	G	-
5B	BG	-
6B	Y	-
7B	L	-
8B	R	-
9B	BR	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
10C	L	-
11C	LG	-
12C	R	-
6C	P	-
7C	B	-
9C	BG	-

Connector No.	M22
Connector Name	KEY SLOT
Connector Type	TH12FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	BAT
2	GR	CLOCK
3	W	DATA
5	Y	ILL BAT
6	LG	ILL BAT
7	B	GROUND
11	BR	KEY SWITCH SIGNAL

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW




Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-
6	L	-
7	GR	-
8	G	-
11	SB	-
12	P	-
13	L	-
14	B	-
16	BG	-

Connector No.	M33
Connector Name	COMBINATION SWITCH
Connector Type	TH18FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	FR WASHER (-)
2	SB	OUTPUT 4
3	BG	FR WASHER (+)
4	G	IGN
5	L	OUTPUT 3
6	B	GROUND
7	V	INPUT 3
8	BG	OUTPUT 5
9	Y	INPUT 2
10	R	INPUT 4
11	LG	INPUT 1
12	P	OUTPUT 1
13	BR	INPUT 5
14	G	OUTPUT 2


Connector No.	M50
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FBR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	R	-
3	BG	-
4	SB	-
6	GR	-
6	Y	-

7	V	-
8	P	-

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	BATTERY POWER SUPPLY
2	LG	COMMUNICATION SIGNAL (METER->AMP)
3	GR	COMMUNICATION SIGNAL (AMP->METER)
5	B	GROUND
6	W	ALTERNATOR SIGNAL
7	P	AIR BAG SIGNAL
10	G	SECURITY INDICATOR SIGNAL
15	B	GROUND
16	B	METER CONTROL SWITCH GROUND
21	R	IGNITION SIGNAL
24	BR	COMMUNICATION SIGNAL (LCD->AMP)
25	Y	COMMUNICATION SIGNAL (AMP->LCD)
26	R	VEHICLE SPEED SIGNAL (8-PULSE)
27	V	PARKING BRAKE SWITCH SIGNAL
28	W	BRAKE FLUID LEVEL SWITCH SIGNAL
29	SB	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
30	G	PASSENGER SEAT BELT WARNING SIGNAL
31	L	WASHER LEVEL SWITCH SIGNAL
34	B	ILLUMINATION CONTROL SIGNAL
36	LG	SELECT SWITCH SIGNAL
37	SB	ENTER SWITCH SIGNAL
38	L	TRIP AB RESET SWITCH SIGNAL
39	P	ILLUMINATION CONTROL SWITCH SIGNAL (-)
40	BG	ILLUMINATION CONTROL SWITCH SIGNAL (+)

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


## BCM (BODY CONTROL MODULE)

Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH32FM-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
41	V	ACC POWER SUPPLY
42	Y	FUEL LEVEL SENSOR SIGNAL
43	R	INTAKE SENSOR SIGNAL
44	LG	IN-VEHICLE SENSOR SIGNAL
45	P	AMBIENT SENSOR SIGNAL
46	BG	SUNLOAD SENSOR SIGNAL
47	V	GAS SENSOR SIGNAL
53	G	IGNITION POWER SUPPLY
54	BG	BATTERY POWER SUPPLY
55	B	GROUND
56	L	GNDH
57	W	BRAKE FLUID LEVEL SWITCH SIGNAL
58	B	FUEL LEVEL SENSOR GROUND
59	GR	INTAKE SENSOR GROUND
60	L	IN-VEHICLE SENSOR GROUND
61	BR	AMBIENT SENSOR GROUND
62	SB	SUNLOAD SENSOR GROUND
63	R	ION MODE SIGNAL
65	BG	ECV SIGNAL
69	L	A/C LAN SIGNAL
70	R	EACH DOOR MOTOR POWER SUPPLY
71	B	GROUND
72	P	CANH

Connector No.	M72
Connector Name	MULTIFUNCTION SWITCH
Connector Type	TH18FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	V	ACC
3	V	ACC
4	R	ILL CONT
5	R	ILL CONT
6	SB	AV COMM(H)
8	LG	AV COMM(L)
9	BR	SW GND
14	SB	DISK EJECT SIGNAL
16	G	HAZARD ON

Connector No.	M79
Connector Name	ACCESSORY RELAY (2)
Connector Type	MS02FL-M2-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-
3	LG	-
5	L	-

Connector No.	M94
Connector Name	OPTICAL SENSOR
Connector Type	TK03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	POWER
2	P	OUTPUT
3	B	GROUND

Connector No.	M96
Connector Name	LOW TIRE PRESSURE WARNING CONTROL UNIT
Connector Type	TH32FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	CAN- (L)
2	L	CAN+ (H)
3	BG	RR TUNER (SIG)
4	L	RL TUNER (SIG)
5	R	FR TUNER (SIG)
6	P	FL TUNER (SIG)
7	SB	RR TUNER (VCC)
8	R	RL TUNER (VCC)
9	GR	FR TUNER (VCC)
10	G	FL TUNER (VCC)
15	Y	IGN
19	W	RR TUNER (RSSI)
20	BR	RL TUNER (RSSI)
21	LG	FR TUNER (RSSI)
22	V	FL TUNER (RSSI)
23	B	RR TUNER (GND)
24	Y	RL TUNER (GND)

25	W	FR TUNER (GND)
26	P	FL TUNER (GND)
30	LG	BCM FLASHER
32	B	GROUND

Connector No.	M104
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	JAB04FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	GR	SIGNAL OUTPUT
4	BR	BATTERY

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (E/L)
2	Y	POWER WINDOW POWER SUPPLY (BAT)
3	BG	POWER WINDOW POWER SUPPLY (RAP)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P  
Q  
R  
S  
T  
U  
V  
W  
X  
Y  
Z

RF


JRMWF4496GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


## BCM (BODY CONTROL MODULE)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
4	P	INT ROOM LAMP PWR SUPPLY (BAT SAME)
5	V	PASSENGER DOOR UNLOCK OUTPUT
7	Y	STEER LAMP OUTPUT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
10	BR	REAR DOOR UNLOCK OUTPUT
11	R	BAT (FUSE)
13	B	GROUND
15	Y	ACC IND
17	W	TURN SIGNAL RH (FRONT)
18	BG	TURN SIGNAL LH (FRONT)
19	SB	ROOM LAMP-TIMER

Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
20	V	TURN SIGNAL RH (REAR)
25	G	TURN SIGNAL LH (REAR)
26	P	REAR WIPER OUTPUT

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-YH



Terminal No.	Color Of Wire	Signal Name [Specification]
34	SB	LUGGAGE ROOM ANTI-LUGGAGE ROOM ANTI-
35	V	BACK DOOR ANTI-
38	B	BACK DOOR ANTI-
39	W	BACK DOOR ANTI-
47	Y	IGN RELAY (RPM F/B) CONT
52	LG	STARTER RELAY CONT
60	SB	END START SW
61	W	TRUNK REQUEST SW
64	L	LKEY WARN BUZZER (ENG ROOM)
65	BG	REAR WIPER STOP POSITION
66	LG	BACK DOOR SW
67	P	BACK DOOR OPENER SW
68	BR	REAR RH DOOR SW
69	R	REAR LH DOOR SW


Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
74	SB	PASSENGER DOOR ANTI-
75	BR	PASSENGER DOOR ANTI-
76	V	DRIVER DOOR ANTI-
77	LG	DRIVER DOOR ANTI-
78	Y	ROOM ANTI-
79	BR	ROOM ANTI+

80	GR	NATS ANT AMP.
81	W	NATS ANT AMP.
82	P	IGN RELAY (F/B) CONT
83	GR	KEYLESS ENTRY RECEIVER SIGNAL
87	BR	COMBI SW INPUT 5
88	V	COMBI SW INPUT 3
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL
93	V	ON IND
95	BG	ACC RELAY CONT
96	GR	AT SHIFT SELECTOR POWER SUPPLY
99	R	SHIFT P
100	R	PASSENGER DOOR REQUEST SW
101	SB	DRIVER DOOR REQUEST SW
102	BG	BLOWER FAN MOTOR RELAY CONT
103	BR	KEYLESS ENTRY RECEIVER POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	Y	COMBI SW INPUT 2
110	G	HAZARD SW


Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
112	GR	RAIN SENSOR SERIAL LINK
113	P	OPTICAL SENSOR
116	BR	STOP LAMP SW 1
118	P	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	BR	KEY SLOT SW
123	W	IGN F/B
124	LG	PASSENGER DOOR SW
132	BG	POWER WINDOW SW COMM
134	GR	LOCK IND
137	B	RECEIVER SENSOR GND
138	Y	SENSOR POWER SUPPLY
140	R	SHIFT NP

141	G	SECURITY INDICATOR OUTPUT
142	BG	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	GR	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY CONT

Connector No.	M125
Connector Name	CAN GATEWAY
Connector Type	TH12EW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
3	GR	BATTERY
4	L	CAN-H
5	B	GROUND
6	L	CAN-H
7	P	CAN-L
9	LG	IGNITION
10	P	CAN-L
11	B	GROUND
12	P	CAN-L

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## BCM (BODY CONTROL MODULE)

Connector No.	M123
Connector Name	TOTAL ILLUMINATION CONTROL UNIT
Connector Type	TH40FV-NH



Terminal No.	Color	Wire	Signal Name [Specification]
3	V		DDL2
4	L		TAIL LAMP SIGNAL
5	V		ACC SIGNAL
6	P		BAT SAVER SIGNAL
7	W		IGN SIGNAL
8	G		DOOR SW (AS)
9	BG		DOOR SW (RL)
10	SB		MOOD LAMP (FR ARMREST RH)
11	Y		MOOD LAMP (RR ARMREST RH)
12	P		MAP LAMP (AS)
13	G		PERSONAL LAMP (LH)
14	R		PERSONAL LAMP (RH)
16	GR		FOOT LAMP (RH)
17	LG		HSPIL ILLUMINATIONS
18	L		MAP LAMP (DR)
19	R		PUSH ENG START SW LED
20	Y		AMBIENCE LAMP
21	R		BAT POWER SUPPLY
23	B		GROUND
24	B		ILL CONT INPUT
25	BR		DOOR SW (RR)
26	BR		MAP LAMP SW (DOOR)
27	R		MAP LAMP SW (ALL ON)
28	SB		ROOM LAMP TIMER
29	GR		DOOR SW (DR)
30	LG		MOOD LAMP (FR ARMREST LH)
31	BG		MOOD LAMP (RR ARMREST LH)
33	W		HSPIL POWER SUPPLY 3
34	R		HSPIL POWER SUPPLY 2
35	V		HSPIL POWER SUPPLY 1
36	Y		FOOT LAMP (LH)
39	B		PUDDLE LAMP (RH)
40	BG		PUDDLE LAMP (LH)

Connector No.	M131
Connector Name	INSIDE KEY ANTENNA (INSTRUMENT CENTER)
Connector Type	RK02MGY



Terminal No.	Color	Wire	Signal Name [Specification]
1	BR		-
2	Y		-



Terminal No.	Color	Wire	Signal Name [Specification]
1	W		-
2	V		-
3	L		-
4	B		-
5	G		-
7	BG		-
8	SB		-
9	B		-
10	GR		-
11	R		-

Connector No.	M160
Connector Name	ECM
Connector Type	RH24FGY-RZ8-R-LH-Z



Terminal No.	Color	Wire	Signal Name [Specification]
97	R		ENGINE SPEED SIGNAL OUTPUT
99	G		SENSOR POWER SUPPLY Y
100	L		SENSOR POWER SUPPLY X
101	B		CAN COMMUNICATION LINE
102	SB		ASCD/ICC STEERING SWITCH
104	R		ACCELERATOR PEDAL POSITION SENSOR 1
105	L		CAN COMMUNICATION LINE
106	L		IGNITION SWITCH
108	P		ACCELERATOR PEDAL POSITION SENSOR 2
110	P		STOP LAMP SWITCH
111	V		SENSOR GROUND
112	LG		FUEL PUMP CONTROL MODULE (FFCM) CHECK
114	GR		DATA LINK CONNECTOR
115	GR		SENSOR GROUND
116	G		TRANSMISSION RANGE SWITCH
117	BR		ASCD/ICC BRAKE SWITCH
118	R		POWER SUPPLY FOR ECM (BACK-UP)
119	W		SENSOR GROUND
120	W		FUEL TANK TEMPERATURE SENSOR
121	GR		POWER SUPPLY FOR ECM
123	B		ECM GROUND
125	R		FUEL PUMP CONTROL MODULE (FFCM)
128	B		ECM GROUND

Connector No.	M164
Connector Name	ECM
Connector Type	RH24FGY-RZ8-R-LH-Z



Terminal No.	Color	Wire	Signal Name [Specification]
97	R		ACCELERATOR PEDAL POSITION SENSOR 1
98	P		ACCELERATOR PEDAL POSITION SENSOR 2 (WITH NAVI)
99	V		ACCELERATOR PEDAL POSITION SENSOR 3 (WITH NAVI)
88	Y		SENSOR POWER SUPPLY Y (WITH NAVI)
89	G		SENSOR POWER SUPPLY X (WITH NAVI)
89	L		SENSOR POWER SUPPLY (Without NAVI)
100	W		SENSOR GROUND
101	SB		ASCD/ICC STEERING SWITCH
102	LG		EVAP CONTROL SYSTEM PRESSURE SENSOR
103	G		SENSOR POWER SUPPLY (With NAVI)
103	L		SENSOR POWER SUPPLY (Without NAVI)
104	BR		SENSOR GROUND (With NAVI)
104	GR		SENSOR GROUND (Without NAVI)
105	L		REFRIGERANT PRESSURE SENSOR
106	W		FUEL TANK TEMPERATURE SENSOR
107	BG		SENSOR POWER SUPPLY
108	V		SENSOR GROUND
109	G		PNP SIGNAL
110	R		ENGINE SPEED OUTPUT SIGNAL
112	V		ENGINE CONTROL SYSTEM PRESSURE SENSOR
112	W		ENGINE CONTROL SYSTEM PRESSURE SENSOR
113	P		CAN COMMUNICATION LINE
114	L		CAN COMMUNICATION LINE
117	GR		DATA LINK CONNECTOR
121	LG		EVAP CANISTER VENT CONTROL VALVE
122	P		STOP LAMP SWITCH
123	B		ECM GROUND
124	B		ECM GROUND
125	GR		POWER SUPPLY FOR ECM
126	BR		ASCD/ICC BRAKE SWITCH
127	B		ECM GROUND
128	B		ECM GROUND


A B C D E F G H I J L M N O P RF

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


## BCM (BODY CONTROL MODULE)

Connector No.	M204
Connector Name	AV CONTROL UNIT
Connector Type	TH32FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
76	LG	AV COMM (L)
77	SB	AV COMM (H)
78	LG	AV COMM (L)
79	SB	AV COMM (H)
80	P	CANL
81	I	CANH
82	BR	SW GND
86	SHIELD	SHIELD
87	L	TEL VOICE SIGNAL (+)
88	P	TEL VOICE SIGNAL (-)
92	R	VEHICLE SPEED SIGNAL (R-PULSE)
93	V	PARKING BRAKE SIGNAL REVERSE SIGNAL
94	BG	IGNITION SIGNAL
95	G	DISK EJECT SIGNAL
96	SB	AUX GND
102	B	AUX AUDIO LH+
103	W	AUX AUDIO LH-
104	R	AUX AUDIO RH+

Connector No.	M210
Connector Name	AV CONTROL UNIT
Connector Type	TH32FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
65	V	PARKING BRAKE SIGNAL
67	B	COMPOSITE IMAGE SIGNAL
68	R	COMPOSITE IMAGE SIGNAL
71	SHIELD	MICROPHONE SHIELD
72	G	MICROPHONE VCC
73	R	COMM (CONT->DISP)
74	P	CANL
75	LG	AV COMM (L)
76	LG	AV COMM (L)
79	R	ILLUMINATION
80	G	IGNITION SIGNAL
81	BG	REVERSE SIGNAL
82	R	VEHICLE SPEED SIGNAL (R-PULSE)
87	R	MICROPHONE SIGNAL
88	B	SHIELD
89	G	COMM (DISP->CONT)
90	L	CANLH
91	SB	AV COMM (H)
92	SB	AV COMM (H)

Connector No.	R4
Connector Name	SUNROOF MOTOR ASSEMBLY
Connector Type	YEA10FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	SW-BIT1
5	P	SW-BIT0
7	BR	+B
8	L	SPEED SENSOR (2P)
9	Y	TIMER (+IGN)
10	G	GROUND

Connector No.	R9
Connector Name	RAIN SENSOR
Connector Type	IAEB03FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	+B
2	GR	SIG
3	B	GROUND

## Fail-safe

### FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

JRMWF4499GB

INFOID:000000010782873

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> <li>Starter control relay signal</li> <li>Starter relay status signal</li> </ul>
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> <li>Starter relay control signal</li> <li>Starter relay status signal (CAN)</li> </ul>
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> <li>IGN relay (IPDM E/R) control signal: OFF (Battery voltage)</li> <li>Ignition ON signal (CAN to IPDM E/R): OFF (Request signal)</li> <li>Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)</li> </ul>
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled <ul style="list-style-type: none"> <li>Power position changes to ACC</li> <li>Receives engine status signal (CAN)</li> </ul>
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization

### FAIL-SAFE CONTROL BY RAIN SENSOR MALFUNCTION

- BCM judges the rain sensor serial link error by the rain sensor serial link condition and detects the rain sensor malfunction by rain sensor malfunction signal.
- When BCM detects the rain sensor serial link error or the rain sensor malfunction while front wiper AUTO operation, BCM operates a fail-safe control.

#### NOTE:

If rain sensor malfunction is detected when ignition switch is turned OFF ⇒ ON and front wiper switch is INT position, BCM operates a fail-safe control.

### REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper stop position signal. When the rear wiper stop position signal does not change for more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

#### Condition of cancellation

1. More than 1 minute is passed after the rear wiper stops.
2. Turn rear wiper switch OFF.
3. Operate the rear wiper switch or rear washer switch.

### DTC Inspection Priority Chart

INFOID:0000000010782874

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> <li>U1000: CAN COMM</li> <li>U1010: CONTROL UNIT(CAN)</li> </ul>

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Priority	DTC
3	<ul style="list-style-type: none"> <li>• B2190: NATS ANTENNA AMP</li> <li>• B2191: DIFFERENCE OF KEY</li> <li>• B2192: ID DISCORD BCM-ECM</li> <li>• B2193: CHAIN OF BCM-ECM</li> <li>• B2195: ANTI SCANNING</li> </ul>
4	<ul style="list-style-type: none"> <li>• B2553: IGNITION RELAY</li> <li>• B2555: STOP LAMP</li> <li>• B2556: PUSH-BTN IGN SW</li> <li>• B2557: VEHICLE SPEED</li> <li>• B2560: STARTER CONT RELAY</li> <li>• B2601: SHIFT POSITION</li> <li>• B2602: SHIFT POSITION</li> <li>• B2603: SHIFT POSI STATUS</li> <li>• B2604: PNP/CLUTCH SW</li> <li>• B2605: PNP/CLUTCH SW</li> <li>• B2608: STARTER RELAY</li> <li>• B260A: IGNITION RELAY</li> <li>• B260F: ENG STATE SIG LOST</li> <li>• B2614: BCM</li> <li>• B2615: BCM</li> <li>• B2616: BCM</li> <li>• B2617: BCM</li> <li>• B2618: BCM</li> <li>• B261A: PUSH-BTN IGN SW</li> <li>• B261E: VEHICLE TYPE</li> <li>• B26EA: KEY REGISTRATION</li> <li>• U0415: VEHICLE SPEED SIG</li> </ul>
5	<ul style="list-style-type: none"> <li>• B2621: INSIDE ANTENNA</li> <li>• B2623: INSIDE ANTENNA</li> </ul>
6	B26E7: TPMS CAN COMM

## DTC Index

INFOID:0000000010782875

### NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [RF-7, "COMMON ITEM : CONSULT Function \(BCM - COMMON ITEM\)"](#).

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warn- ing lamp ON	Reference
No DTC is detected. Further testing may be required.	—	—	—	—
U1000: CAN COMM	—	—	—	<a href="#">BCS-39</a>
U1010: CONTROL UNIT(CAN)	—	—	—	<a href="#">BCS-40</a>
U0415: VEHICLE SPEED SIG	—	—	—	<a href="#">BCS-41</a>
B2190: NATS ANTENNA AMP	×	—	—	<a href="#">SEC-47</a>
B2191: DIFFERENCE OF KEY	×	—	—	<a href="#">SEC-50</a>
B2192: ID DISCORD BCM-ECM	×	—	—	<a href="#">SEC-51</a>
B2193: CHAIN OF BCM-ECM	×	—	—	<a href="#">SEC-53</a>
B2195: ANTI SCANNING	×	—	—	<a href="#">SEC-54</a>
B2553: IGNITION RELAY	—	×	—	<a href="#">PCS-53</a>
B2555: STOP LAMP	—	×	—	<a href="#">SEC-55</a>

## BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warn- ing lamp ON	Reference	A
B2556: PUSH-BTN IGN SW	—	×	×	<a href="#">SEC-57</a>	B
B2557: VEHICLE SPEED	×	×	×	<a href="#">SEC-59</a>	C
B2560: STARTER CONT RELAY	×	×	×	<a href="#">SEC-60</a>	D
B2562: LOW VOLTAGE	—	×	—	<a href="#">BCS-42</a>	E
B2601: SHIFT POSITION	×	×	×	<a href="#">SEC-61</a>	F
B2602: SHIFT POSITION	×	×	×	<a href="#">SEC-64</a>	G
B2603: SHIFT POSI STATUS	×	×	×	<a href="#">SEC-66</a>	H
B2604: PNP/CLUTCH SW	×	×	×	<a href="#">SEC-69</a>	I
B2605: PNP/CLUTCH SW	×	×	×	<a href="#">SEC-71</a>	J
B2608: STARTER RELAY	×	×	×	<a href="#">SEC-73</a>	K
B260A: IGNITION RELAY	×	×	×	<a href="#">PCS-55</a>	L
B260F: ENG STATE SIG LOST	×	×	×	<a href="#">SEC-75</a>	M
B2614: BCM	—	×	×	<a href="#">PCS-57</a>	N
B2615: BCM	—	×	×	<a href="#">PCS-59</a>	O
B2616: BCM	—	×	×	<a href="#">PCS-61</a>	P
B2617: BCM	×	×	×	<a href="#">SEC-77</a>	Q
B2618: BCM	×	×	×	<a href="#">PCS-63</a>	R
B261A: PUSH-BTN IGN SW	—	×	×	<a href="#">SEC-79</a>	S
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	<a href="#">SEC-82</a>	T
B2621: INSIDE ANTENNA	—	×	—	<a href="#">DLK-101</a>	U
B2623: INSIDE ANTENNA	—	×	—	<a href="#">DLK-103</a>	V
B26E7: TPMS CAN COMM	—	—	—	<a href="#">BCS-43</a>	W
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	<a href="#">SEC-76</a>	RF

# SUNROOF MOTOR ASSEMBLY


< ECU DIAGNOSIS INFORMATION >

## SUNROOF MOTOR ASSEMBLY

Reference Value

INFOID:000000010578806

### TERMINAL LAYOUT

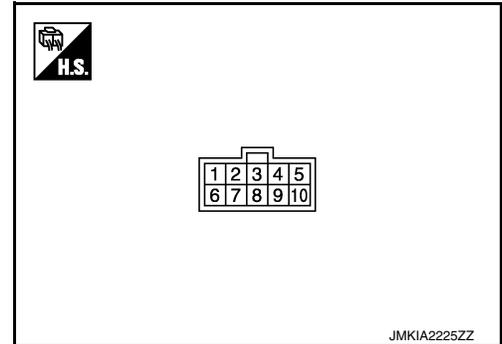

### PHYSICAL VALUES


Terminal No. (Wire color)		Description		Condition	Voltage (V) (Approx.)
+	-	Signal name	Input/ Out- put		
1 (GR)	Ground	Sunroof switch (tilt up/ slide close) signal	Input	Sunroof switch in the following position • TILT UP • SLIDE CLOSE	0
				Other than above	Battery voltage
5 (P)	Ground	Sunroof switch (tilt down/ slide open) signal	Input	Sunroof switch in the following position • TILT DOWN • SLIDE OPEN	0
				Other than the above	Battery voltage
7 (BR)	Ground	Sunroof power supply	Input	—	Battery voltage
8 (L)	Ground	Vehicle speed signal (2- pulse)	Input	Speedometer operated [When vehicle speed is approx.40 km/h (25 MPH)]	<p style="text-align: right;">ELF1080D</p>
9 (Y)	Ground	RAP signal	Input	Ignition switch ON	Battery voltage
				Within 45 seconds after ignition switch is turned to OFF.	Battery voltage
				When driver side or passenger side door is opened during re- tained power operation.	0
10 (G)	Ground	Ground	—	—	0

# SUNROOF MOTOR ASSEMBLY

< ECU DIAGNOSIS INFORMATION >

## Wiring Diagram - SUNROOF -

INFOID:000000010578807

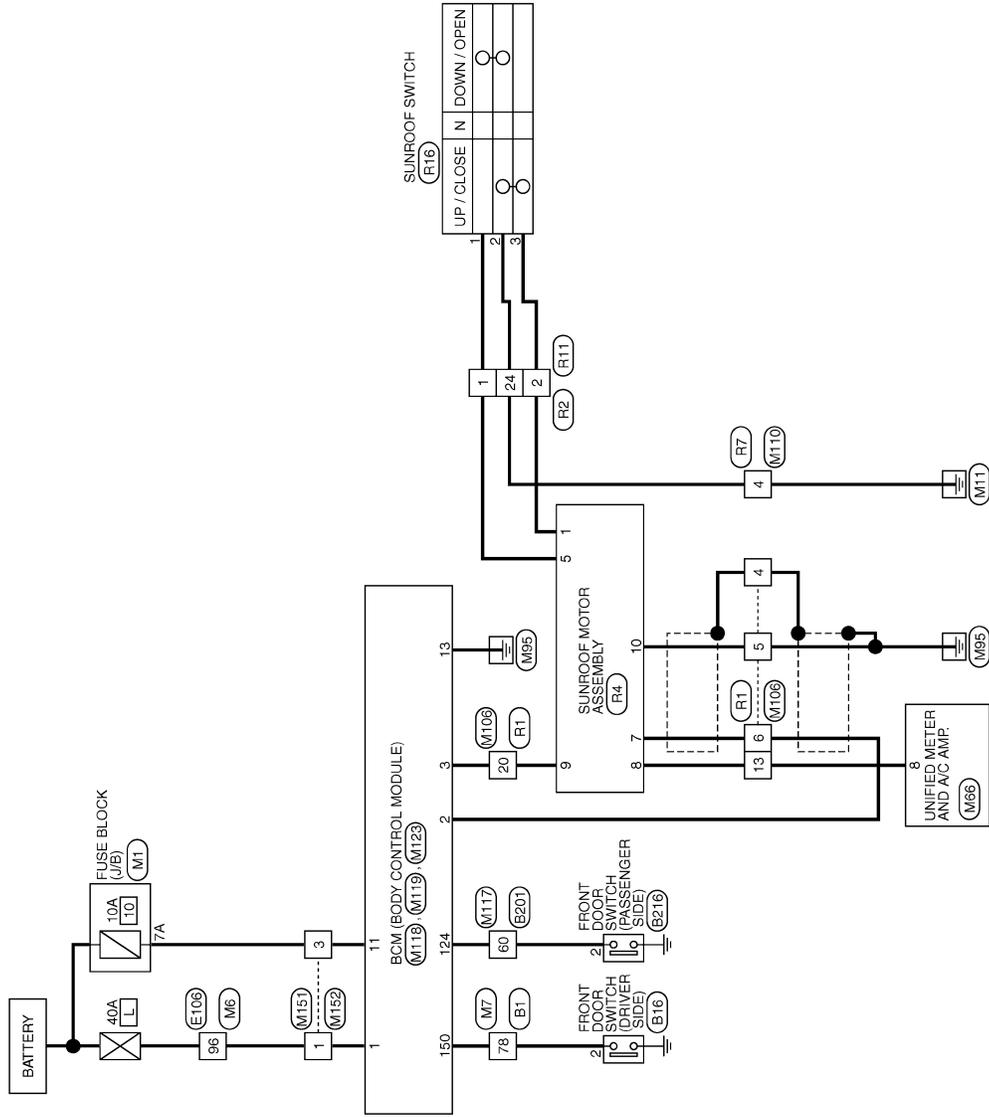

SUNROOF

2013/02/13

JRKWC3269GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# SUNROOF MOTOR ASSEMBLY

< ECU DIAGNOSIS INFORMATION >


## SUNROOF

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	L	-
3	W	-
6	G	-
7	P	-
8	BG	-
10	SB	-
11	SB	-
12	B	-
13	G	-
14	R	-
15	W	-
16	SHIELD	-
17	L	-
18	P	-
19	G	-
20	Y	-
21	W	-
23	V	-
24	P	-
25	BR	-
26	GR	-
27	BG	-
28	W	-
38	B	-
39	B	-
43	SB	-
44	V	-
45	GR	-
51	V	-
52	SB	SHIELD
53	BR	-
54	BR	-
55	Y	-
56	SHIELD	-

Connector No.	B16
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	IA03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
2	GR	-

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	R	-
3	BR	-
4	SB	-
6	BG	-
7	GR	-
8	W	-
10	G	-
11	SHIELD	-
20	L	-
21	P	-
22	GR	-
23	LG	-
24	W	-
25	V	-
26	G	-
27	V	-
28	SHIELD	-

31	W	-
32	GR	-
33	SB	-
36	L	-
37	P	-
38	L	-
39	P	-
40	LG	- [With ICC] - [Without ICC]
41	SB	- [With ICC] - [Without ICC]
42	Y	- [With ICC] - [Without ICC]
43	B	- [With ICC] - [Without ICC]
44	R	- [With ICC] - [Without ICC]
45	G	-
46	BG	- [With ICC] - [Without ICC]
47	B	- [With ICC] - [Without ICC]
48	P	- [With ICC] - [Without ICC]
49	G	- [With ICC] - [Without ICC]
50	SHIELD	-
51	W	-
52	R	-
53	G	-
54	L	-
55	SB	-
60	GR	-
61	LG	-
62	SB	-
63	P	-
64	BR	-
65	BG	-
66	Y	-
67	W	-
69	G	-
71	SB	-
72	V	-
73	LG	-
74	W	-
75	BR	-
76	V	-
77	LG	-
80	BG	-
82	P	-


# SUNROOF MOTOR ASSEMBLY

< ECU DIAGNOSIS INFORMATION >

## SUNROOF

83	Y	-	-
84	R	-	-
85	SB	-	-
86	GR	-	-
87	L	-	-
91	V	-	-
92	W	-	-
93	R	-	-
94	LG	-	-
95	GR	-	-
96	W	-	-
97	G	-	-
98	BG	-	-
99	L	-	-

Connector No.	B216
Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)
Connector Type	A03FV



Terminal No.	2
Color Of Wire	GR
Signal Name [Specification]	-

Connector No.	E1106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4




Terminal No.	1	
Color Of Wire	G	
Signal Name [Specification]	-	
2	BG	-
3	SB	-

4	LG	-	-
5	Y	-	-
6	W	-	-
7	G	-	-
8	V	-	-
9	R	-	-
10	BR	-	-
11	B	-	-
12	G	-	-
13	R	-	-
14	W	-	-
15	SHIELD	-	-
16	SB	-	-
17	L	-	-
18	P	-	-
19	G	-	-
20	W	- [With ICC]	- [Without ICC]
21	BR	- [With ICC]	- [Without ICC]
22	R	- [With ICC]	- [Without ICC]
23	V	- [With ICC]	- [Without ICC]
24	L	- [With ICC]	- [Without ICC]
24	P	- [Without ICC]	- [Without ICC]
25	L	- [Without ICC]	- [Without ICC]
25	Y	- [With ICC]	- [Without ICC]
26	SHIELD	-	-
28	G	-	-
29	LG	-	-
30	BG	-	-
32	W	-	-
33	Y	-	-
34	BG	-	-
37	Y	-	-
38	GR	-	-
39	LG	-	-
41	LG	-	-
42	V	-	-
43	R	-	-
44	G	-	-
45	GR	-	-
46	W	-	-
47	L	-	-
48	P	-	-
48	P	-	-
49	SB	-	-
50	BR	-	-
51	B	-	-
52	Y	-	-
53	BG	-	-
54	R	-	-


55	SB	-	-
59	P	-	-
60	SB	-	-
61	V	-	-
62	P	-	-
63	LG	-	-
64	L	-	-
65	BG	-	-
69	L	-	-
70	SHIELD	-	-
71	G	-	-
72	G	-	-
73	R	-	-
74	BR	-	-
76	L	-	-
77	W	-	-
78	Y	-	-
80	SB	-	-
81	L	-	-
82	W	-	-
83	LG	-	-
84	GR	-	-
85	G	-	-
86	P	-	-
87	W	-	-
88	BG	-	-
89	LG	-	-
90	BR	-	-
91	GR	-	-
92	BR	-	-
93	SB	-	-
95	Y	-	-
96	W	-	-
97	W	-	-
98	SHIELD	-	-
100	Y	-	-

Connector No.	M1
Connector Name	FUSE BLOCK (JIB)
Connector Type	NS06FM-M2



Terminal No.	1A	
Color Of Wire	BG	
Signal Name [Specification]	-	
2A	G	-
3A	L	-
4A	R	-
5A	V	-
6A	Y	-
7A	R	-
8A	L	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	1	
Color Of Wire	G	
Signal Name [Specification]	-	
2	BG	-
3	LG	- [Without Auto aircon seat]
3	SB	- [With Auto aircon seat]
4	LG	-
5	GR	-
6	W	-
7	G	-
8	W	-
9	P	-
10	BR	-
11	B	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# SUNROOF MOTOR ASSEMBLY

< ECU DIAGNOSIS INFORMATION >

## SUNROOF

12	G	-	-	7	V	-	76	LG	-
13	R	-	-	8	BG	-	77	SB	-
14	W	-	-	9	W	-	78	GR	-
15	SHIELD	-	-	10	W	-	79	R	-
16	BR	-	-	11	BG	-	80	L	-
17	L	-	-	12	B	-	81	P	-
18	P	-	-	13	G	-	82	L	-
19	G	-	-	14	R	-	83	P	-
20	GR	-	-	15	W	-	84	SB	-
21	BR	-	-	16	SHIELD	-	85	W	-
22	L	-	-	17	L	-	86	Y	-
23	G	-	-	18	P	-	87	B	-
24	L	-	-	19	G	-	88	G	-
25	W	-	-	20	R	-	89	BG	-
26	Y	-	-	21	LG	-	91	R	-
27	SHIELD	-	-	23	V	-	92	BG	-
28	GR	-	-	24	P	-	93	BR	-
29	V	-	-	25	BR	-	94	V	-
30	BG	-	-	26	GR	-	95	W	-
31	W	-	-	27	GR	-	96	BG	-
32	W	-	-	28	W	-	97	W	-
33	Y	-	-	29	B	-	98	R	-
34	L	-	-	30	B	-	99	BG	-
35	Y	-	-	31	R	-			
36	Y	-	-	32	GR	-			
37	G	-	-	33	Y	-			
38	R	-	-	34	L	-			
39	G	-	-	35	G	-			
40	GR	-	-	36	W	-			
41	L	-	-	37	W	-			
42	W	-	-	38	G	-			
43	R	-	-	39	R	-			
44	LG	-	-	40	P	-			
45	GR	-	-	41	L	-			
46	W	-	-	42	W	-			
47	L	-	-	43	R	-			
48	P	-	-	44	LG	-			
49	BG	-	-	45	GR	-			
50	LG	-	-	46	W	-			
51	SB	-	-	47	L	-			
52	Y	-	-	48	P	-			
53	BG	-	-	49	BG	-			
54	BR	-	-	50	LG	-			
55	SB	-	-	51	SB	-			
56	SB	-	-	52	Y	-			
57	SB	-	-	53	BG	-			
58	SB	-	-	54	BR	-			
59	SB	-	-	55	Y	-			
60	SB	-	-	56	SHIELD	-			
61	V	-	-	57	P	-			
62	P	-	-	58	L	-			
63	R	-	-	59	SHIELD	-			
64	L	-	-	60	L	-			
		-	-	61	BR	-			
		-	-	62	R	-			
		-	-	63	Y	-			
		-	-	64	L	-			
		-	-	65	W	-			
		-	-	66	V	-			
		-	-	67	LG	-			
		-	-	68	Y	-			
		-	-	69	G	-			
		-	-	70	V	-			
		-	-	71	W	-			
		-	-	72	B	-			
		-	-	73	W	-			
		-	-	74	LG	-			
		-	-	75	P	-			

65	BG	-	-	7	V	-	76	LG	-
66	V	-	-	8	BG	-	77	SB	-
67	SHIELD	-	-	9	W	-	78	GR	-
68	SHIELD	-	-	10	W	-	79	R	-
69	SHIELD	-	-	11	BG	-	80	L	-
70	SHIELD	-	-	12	B	-	81	P	-
71	BG	-	-	13	G	-	82	L	-
72	GR	-	-	14	R	-	83	P	-
73	W	-	-	15	W	-	84	SB	-
74	SB	-	-	16	SHIELD	-	85	W	-
75	V	-	-	17	L	-	86	Y	-
76	V	-	-	18	P	-	87	B	-
77	V	-	-	19	G	-	88	G	-
78	Y	-	-	20	R	-	89	BG	-
79	Y	-	-	21	LG	-	91	R	-
80	BG	-	-	23	V	-	92	BG	-
81	L	-	-	24	P	-	93	BR	-
82	W	-	-	25	BR	-	94	V	-
83	Y	-	-	26	GR	-	95	W	-
84	L	-	-	27	GR	-	96	BG	-
85	P	-	-	28	W	-	97	W	-
86	BR	-	-	29	B	-	98	R	-
87	P	-	-	30	B	-	99	BG	-
88	V	-	-	31	R	-			
89	G	-	-	32	GR	-			
90	P	-	-	33	Y	-			
91	R	-	-	34	L	-			
92	R	-	-	35	G	-			
93	GR	-	-	36	W	-			
94	W	-	-	37	W	-			
95	G	-	-	38	G	-			
96	W	-	-	39	R	-			
97	W	-	-	40	P	-			
98	SHIELD	-	-	41	L	-			
99	Y	-	-	42	W	-			
100	Y	-	-	43	R	-			

Connector No. M7  
Connector Name WIRE TO WIRE  
Connector Type TH80MW-C516-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	[With Auto aircon seat]
2	B	[Without Auto aircon seat]
3	W	-
6	P	-

Connector No. M66  
Connector Name UNIFIED METER AND A/C AMP.  
Connector Type TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
5	L	MANUAL MODE SHIFT UP SIGNAL
6	BG	PADDLE SHIFTER UP SIGNAL
7	GR	COMMUNICATION SIGNAL (AMP->METER)
8	L	VEHICLE SPEED SIGNAL (2-PULSE)
9	SB	SEAT BELT BUZZER SWITCH SIGNAL (DRIVER SIDE)
10	W	MANUAL MODE SIGNAL
11	G	NON-MANUAL MODE SIGNAL
14	BR	COMMUNICATION SIGNAL (LCD->AMP)
20	L	ION SENSOR SIGNAL
23	V	AT SNOW SWITCH SIGNAL
25	V	MANUAL MODE SHIFT DOWN SIGNAL
26	G	PADDLE SHIFTER DOWN SIGNAL

# SUNROOF MOTOR ASSEMBLY

< ECU DIAGNOSIS INFORMATION >

## SUNROOF

27	LG	COMMUNICATION SIGNAL (METER->AMP.)
28	R	VEHICLE SPEED SIGNAL (6-PULSE)
30	V	PARKING BRAKE SWITCH SIGNAL
34	Y	COMMUNICATION SIGNAL (AMP->LCD)
38	L	BLOWER MOTOR CONTROL SIGNAL

Connector No.	M106
Connector Name	WIRE TO WIRE
Connector Type	NH10MW-CS10

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20				




Connector No.	M110
Connector Name	WIRE TO WIRE
Connector Type	TH16MW-AH



1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	P	-
4	B	-
5	W	-
6	W	-
7	GR	-
8	SB	-
9	LG	-
10	SHIELD	-
11	R	-
15	G	-
16	V	-

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH16MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	BR	-
3	V	-
4	SB	-
6	Y	-
7	B	-
8	W	-
10	W	-

71	SB	-
72	V	-
73	V	-
74	LG	-
75	BR	-
76	V	-
77	LG	-
80	R	-
82	Y	-
83	BG	-
84	W	-
85	SB	-
86	B	-
87	P	-
91	L	-
92	L	-
93	G	-
94	BG	-
95	V	-
96	G	-
97	G	-
98	L	-
99	LG	-

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FBL-C



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (E/L)
2	Y	POWER WINDOW POWER SUPPLY (BAT)
3	BG	POWER WINDOW POWER SUPPLY (RAP)

11	SHIELD	-
20	R	-
21	G	-
22	GR	-
23	V	-
24	W	-
25	R	-
26	P	-
27	L	-
28	SHIELD	-
31	W	-
32	W	-
33	SB	-
36	L	-
37	P	-
38	L	-
39	B	-
40	V	-
41	SB	- [With ICC]
41	Y	- [Without ICC]
42	V	- [With ICC]
42	W	- [Without ICC]
43	B	- [With ICC]
43	P	- [Without ICC]
44	R	-
45	G	- [Without ICC]
45	L	- [With ICC]
46	BG	- [With ICC]
46	SHIELD	- [Without ICC]
47	B	- [With ICC]
47	L	- [Without ICC]
48	P	- [With ICC]
48	R	- [Without ICC]
49	G	- [With ICC]
49	W	- [Without ICC]
50	SHIELD	-
51	BG	-
52	GR	-
53	G	-
54	L	-
55	P	-
60	LG	-
61	R	-
62	SB	-
63	V	-
64	Y	-
65	BR	-
66	BG	-
67	W	-
69	G	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

RF

# SUNROOF MOTOR ASSEMBLY

< ECU DIAGNOSIS INFORMATION >

## SUNROOF

Connector No.	M119
Connector Name	BOM (BODY CONTROL MODULE)
Connector Type	NS18FW-CS



4	5	7	8	9	10
11	13	15	17	18	19

Terminal No.	Color Of Wire	Signal Name [Specification]
4	P	INT ROOM LAMP PWR SUPPLY (BAT SAME)
5	V	PASSENGER DOOR UNLOCK OUTPUT
7	Y	STEER LAMP OUTPUT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
10	BR	REAR DOOR UNLOCK OUTPUT
11	R	BAT (PUSE)
13	B	GROUND
15	Y	ACC IND
17	W	TURN SIGNAL RH (FRONT)
18	BG	TURN SIGNAL LH (FRONT)
19	SB	ROOM LAMP TIMER

Connector No.	M123
Connector Name	BOM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
112	GR	RAIN SENSOR SERIAL LINK
113	P	OPTICAL SENSOR
116	BR	STOP LAMP SW 1
118	P	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
123	BR	KEY SLOT SW
124	W	IGN P/B
124	LG	PASSENGER DOOR SW

132	BG	POWER WINDOW SW COMM
134	GR	LOCK IND
137	B	RECEIVER/SENSOR GND
138	Y	SENSOR POWER SUPPLY
140	R	SHIFT N/P
141	G	SECURITY INDICATOR OUTPUT
142	BG	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	GR	DRIVER DOOR SW
151	G	REAR WINDOW DEFOSGER RELAY CONT

Connector No.	M151
Connector Name	WIRE TO WIRE
Connector Type	M03FW-LC



1	2	3
---	---	---

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	Y	-
3	R	-

Connector No.	M152
Connector Name	WIRE TO WIRE
Connector Type	M03MMW-LC



1	2	3
---	---	---

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	Y	-
3	R	-

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	NH10FW-GS10



6	5	4	3	2	1				
20	19	18	17	16	15	14	9	8	7

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	BR	-
3	GR	-
4	SHIELD	-
5	G	-
6	BR	-
9	P	-
10	G	-
11	Y	-
12	BR	-
13	L	-
14	L	-
15	R	-
16	R	-
17	B	-
20	Y	-

Connector No.	R2
Connector Name	WIRE TO WIRE
Connector Type	TH24FW-NH



12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	GR	-
8	SHIELD	-
9	R	-
10	G	-
11	B	-
12	V	-
17	Y	-
18	G	-
19	R	-
20	L	-
21	P	-
22	R	-
23	BR	-
24	B	-

Connector No.	R4
Connector Name	SUNROOF MOTOR ASSEMBLY
Connector Type	YEA10FGY



1	2	3	4	5	6	7	8	9	10
---	---	---	---	---	---	---	---	---	----

Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	SW/BIT1
5	P	SW/BIT0
7	BR	-
8	L	SPEED SENSOR (2P)
9	Y	TIMER (+IGN)

# SUNROOF MOTOR ASSEMBLY


< ECU DIAGNOSIS INFORMATION >

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

## SUNROOF

10	G	GROUND
----	---	--------

Connector No.	R7
Connector Name	WIRE TO WIRE
Connector Type	TH18FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	P	-
4	B	-
5	BR	-
6	GR	-
7	SB	-
8	Y	-
9	SHIELD	-
10	R	-
11	G	-
15	R	-
16	V	-

Connector No.	R11
Connector Name	WIRE TO WIRE
Connector Type	TH24MW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	GR	-
8	SHIELD	-
9	L	-
10	R	-

11	B	-
12	V	-
17	Y	-
18	G	-
19	SB	-
20	P	-
21	L	-
22	R	-
23	BR	-
24	O	-

Connector No.	R16
Connector Name	SUNROOF SWITCH
Connector Type	TK03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	O	-
3	GR	-

# SUNROOF DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

---

## SYMPTOM DIAGNOSIS

### SUNROOF DOES NOT OPERATE PROPERLY

#### Description

INFOID:0000000010578808

Sunroof does not operate normally.

- Glass lid does not slide or tilt.
- Judder occurs during sliding operation of glass lid
- Sliding or tilting operation of glass lid is slow.

#### Diagnosis Procedure

INFOID:0000000010578809

#### 1.CHECK GLASS LID

---

Check the following items.

- Cracks, damage, or deformation of weather-strip.
- Sticking of weather-strip.
- Loose or missing glass lid mounting bolt.
- Misalignment of glass lid.

Refer to [RF-79, "Adjustment"](#).

Is the check result normal?

YES >> GO TO 2.

NO >> Repair or replace applicable parts.

#### 2.CHECK SUNROOF FRAME ASSEMBLY

---

Check the following items.

- Damage, deformation, or trapped foreign material of slide rail.
- Insufficient application of grease to sliding section of slide rail.

Is the check result normal?

YES >> GO TO 3.

NO >> Repair or replace applicable parts.

#### 3.CHECK SUNSHADE

---

Check sunshade for damage, deformation, or interference with other parts.

Is the check result normal?

YES >> GO TO 4.

NO >> Repair or replace applicable parts.

#### 4.CHECK WINDOW DEFLECTOR

---

Check window deflector for deformation and interference.

Is the check result normal?

YES >> GO TO 5.

NO >> Repair or replace applicable parts.

#### 5.CHECK SUNROOF MOTOR ASSEMBLY POWER SUPPLY AND GROUND CIRCUIT

---

Check sunroof motor assembly power supply and ground circuit.

Refer to [RF-10, "SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace the malfunctioning parts.

#### 6.CHECK SUNROOF SWITCH

---

Check sunroof switch.

Refer to [RF-11, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace sunroof switch. Refer to [RF-89, "Removal and Installation"](#).

# SUNROOF DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

---

## 7. CONFIRM THE OPERATION

---

Confirm the operation again.

Is the result normal?

- YES >> Check intermittent incident. Refer to [GI-47. "Intermittent Incident"](#).
- NO >> INSPECTION END.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# AUTO OPERATION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

---

## AUTO OPERATION DOES NOT OPERATE

### Description

INFOID:000000010578810

Auto operation does not operate

- Auto operation of glass lid does not operate.
- Glass lid stops halfway.
- Anti-pinch function operates.

### Diagnosis Procedure

INFOID:000000010578811

#### 1. CHECK GLASS LID

---

Check the following items.

- Cracks, damage, or deformation of weather-strip.
- Sticking of weather-strip.
- Loose or missing glass lid mounting bolt.
- Misalignment of glass lid.

Refer to [RF-79, "Adjustment"](#).

Is the check result normal?

YES >> GO TO 2.

NO >> Repair or replace applicable parts.

#### 2. CHECK WINDOW DEFLECTOR

---

Check window deflector for deformation and interference.

Is the check result normal?

YES >> GO TO 3.

NO >> Repair or replace applicable parts.

#### 3. CHECK SUNROOF FRAME ASSEMBLY

---

Check the following items.

- Damage, deformation, or trapped foreign material of slide rail.
- Insufficient application of grease to sliding section of slide rail.

Is the check result normal?

YES >> GO TO 4.

NO >> Repair or replace applicable parts.

#### 4. PERFORM INITIALIZATION PROCEDURE

---

Perform initialization procedure.

Refer to [RF-4, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace sunroof motor assembly. Refer to [GI-47, "Intermittent Incident"](#).

# RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

## RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

### Diagnosis Procedure

INFOID:000000010578812

#### 1.CHECK SUNROOF MOTOR ASSEMBLY POWER SUPPLY AND GROUND CIRCUIT

Check sunroof motor assembly power supply and ground circuit.

Refer to [RF-10, "SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

#### 2.CHECK DOOR SWITCH

Check door switch.

Refer to [RF-13, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

#### 3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 1.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# ANTI-PINCH FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

---

## ANTI-PINCH FUNCTION DOES NOT OPERATE

### Diagnosis Procedure

INFOID:000000010578813

#### 1.CHECK SUNROOF MECHANISM

---

Check the following items.

- Operation malfunction caused by sunroof mechanism deformation, pinched harness or other foreign materials.
- Operation malfunction and interference with other parts by poor installation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

#### 2.PERFORM INITIALIZATION PROCEDURE

---

Perform initialization procedure.

Refer to [RF-4, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description"](#).

Is the inspection result normal?

YES >> Sunroof system is normal.

NO >> Replace sunroof motor assembly.


# SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

## SQUEAK AND RATTLE TROUBLE DIAGNOSES

### Work Flow

INFOID:000000010578814

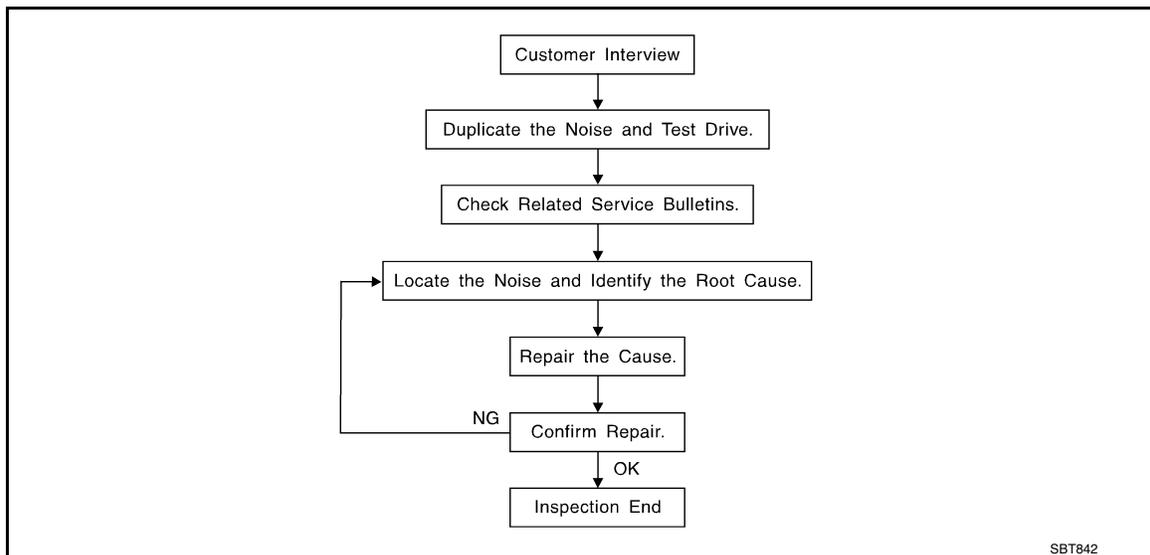

### CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any of customer's comments; refer to [RF-73, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, perform a diagnosis and repair the noise that the customer is concerned about. This can be accomplished by performing a cruise test on the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak – (Like tennis shoes on a clean floor)  
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces = higher pitch noise/softer surfaces = lower pitch noises/edge to surface = chirping
- Creak – (Like walking on an old wooden floor)  
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle – (Like shaking a baby rattle)  
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock – (Like a knock on a door)  
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick – (Like a clock second hand)  
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump – (Heavy, muffled knock noise)  
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz – (Like a bumblebee)  
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending up on the person. A noise that a technician may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

### DUPLICATE THE NOISE AND TEST DRIVE

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when the repair is reconfirmed.

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## < SYMPTOM DIAGNOSIS >

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
  - 2) Tap or push/pull around the area where the noise appears to be coming from.
  - 3) Rev the engine.
  - 4) Use a floor jack to recreate vehicle "twist".
  - 5) At idle, apply engine load (electrical load, half-clutch on M/T models, drive position on A/T models).
  - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
  - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

## CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

## LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis ear: J-39570, Engine ear and mechanics stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
  - Removing the components in the area that is are suspected to be the cause of the noise.  
Do not use too much force when removing clips and fasteners, otherwise clips and fastener can be broken or lost during the repair, resulting in the creation of new noise.
  - Tapping or pushing/pulling the component that is are suspected to be the cause of the noise.  
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
  - Feeling for a vibration by hand by touching the component(s) that is are suspected to be the cause of the noise.
  - Placing a piece of paper between components that are suspected to be the cause of the noise.
  - Looking for loose components and contact marks.  
Refer to [RF-71, "Inspection Procedure"](#).

## REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
  - Separate components by repositioning or loosening and retightening the component, if possible.
  - Insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A Nissan Squeak and Rattle Kit (J-50397) is available through the authorized Nissan Parts Department.

### **CAUTION:**

**Never use excessive force as many components are constructed of plastic and may be damaged.**

### **NOTE:**

Always check with the Parts Department for the latest parts information.

The following materials are contained in the Nissan Squeak and Rattle Kit (J-50397) are listed on the inside cover of the kit; and can each be ordered separately as needed.

URETHANE PADS [1.5 mm (0.059 in) thick]

Insulates connectors, harness, etc.

76268-9E005: 100 × 135 mm (3.94 × 5.31 in)/76884-71L01: 60 × 85 mm (2.36 × 3.35 in)/76884-

71L02: 15 × 25 mm (0.59 × 0.98 in)

INSULATOR (Foam blocks)

Insulates components from contact. Can be used to fill space behind a panel.

73982-9E000: 45 mm (1.77 in) thick, 50 × 50 mm (1.97 × 1.97 in)/73982-

50Y00: 10 mm (0.39 in) thick, 50 × 50 mm (1.97 × 1.97 in)

INSULATOR (Light foam block)

80845-71L00: 30 mm (1.18 in) thick, 30 × 50 mm (1.18 × 1.97in)

FELT CLOTHTAPE

Used to insulate where movement does not occur. Ideal for instrument panel applications.

68370-4B000: 15 × 25 mm (0.59 × 0.98 in) pad/68239-13E00: 5 mm (0.20 in) wide tape roll

The following materials, not found in the kit, can also be used to repair squeaks and rattles.

UHMW (TEFLON) TAPE

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## < SYMPTOM DIAGNOSIS >

Insulates where slight movement is present. Ideal for instrument panel applications.

### SILICONE GREASE

Used in place of UHMW tape that is be visible or does not fit. Will only last a few months.

### SILICONE SPRAY

Used when grease cannot be applied.

### DUCT TAPE

Used to eliminate movement.

## CONFIRM THE REPAIR

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

## Inspection Procedure

INFOID:000000010578815

Refer to Table of Contents for specific component removal and installation information.

## INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

1. The cluster lid A and instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar garnish
4. Instrument panel to windshield
5. Instrument panel mounting pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicon spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

### **CAUTION:**

**Never use silicone spray to isolate a squeak or rattle. If the area is saturated with silicone, the recheck of repair becomes impossible.**

## CENTER CONSOLE

Components to pay attention to include:

1. Shifter assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

## DOORS

Pay attention to the following:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. The areas can usually be insulated with felt cloth tape or insulator foam blocks from the Nissan Squeak and Rattle Kit (J-50397) to repair the noise.

## TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the customer.

In addition look for the following:

1. Trunk lid dumpers out of adjustment
2. Trunk lid striker out of adjustment
3. The trunk lid torsion bars knocking together
4. A loose license plate or bracket

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## < SYMPTOM DIAGNOSIS >

---

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

### SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sunvisor shaft shaking in the holder
3. Front or rear windshield touching headlining and squeaking

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

### SEATS

When isolating seat noise it's important to note the position the seats in and the load placed on the seat when the noise occurs. These conditions should be duplicated when verifying and isolating the cause of the noise.

Cause of seat noise include:

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

### UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

Causes of transmitted underhood noise include:

1. Any component mounted to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator mounting pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine RPM or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

## Diagnostic Worksheet

INFOID:0000000110578816







### SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

Dear Infiniti Customer:

We are concerned about your satisfaction with your Infiniti vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your Infiniti right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service consultant or technician to ensure we confirm the noise you are hearing.

#### I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

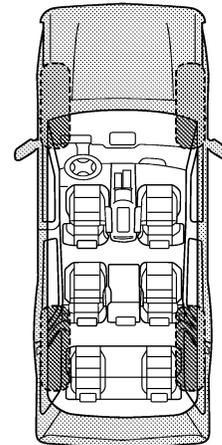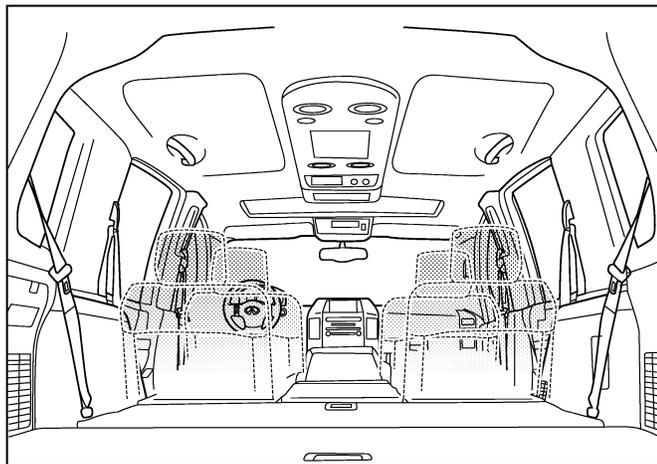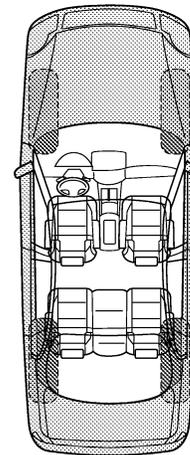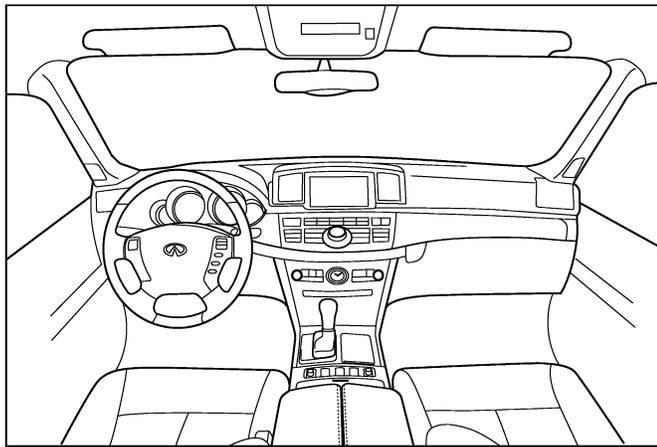

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

PIIB8741E

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

## SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

---

---

### II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- |   |  |
|---|--|
| <input type="checkbox"/> anytime                      | <input type="checkbox"/> after sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning      | <input type="checkbox"/> when it is raining or wet     |
| <input type="checkbox"/> only when it is cold outside | <input type="checkbox"/> dry or dusty conditions       |
| <input type="checkbox"/> only when it is hot outside  | <input type="checkbox"/> other:                        |

### III. WHEN DRIVING:

- through driveways
- over rough roads
- over speed bumps
- only about \_\_\_\_ mph
- on acceleration
- coming to a stop
- on turns: left, right or either (circle)
- with passengers or cargo
- other: \_\_\_\_\_
- after driving \_\_\_\_ miles or \_\_\_\_ minutes

### IV. WHAT TYPE OF NOISE

- squeak (like tennis shoes on a clean floor)
- creak (like walking on an old wooden floor)
- rattle (like shaking a baby rattle)
- knock (like a knock at the door)
- tick (like a clock second hand)
- thump (heavy, muffled knock noise)
- buzz (like a bumble bee)

## TO BE COMPLETED BY DEALERSHIP PERSONNEL

### Test Drive Notes:

---

---

---

	YES	NO	Initials of person performing
Vehicle test driven with customer	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise verified on test drive	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise source located and repaired	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Follow up test drive performed to confirm repair	<input type="checkbox"/>	<input type="checkbox"/>	_____

VIN: \_\_\_\_\_ Customer Name: \_\_\_\_\_  
W.O.# \_\_\_\_\_ Date: \_\_\_\_\_

This form must be attached to Work Order

PIIB8742E

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000010578817

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Procedure without Cowl Top Cover

INFOID:000000010782876

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

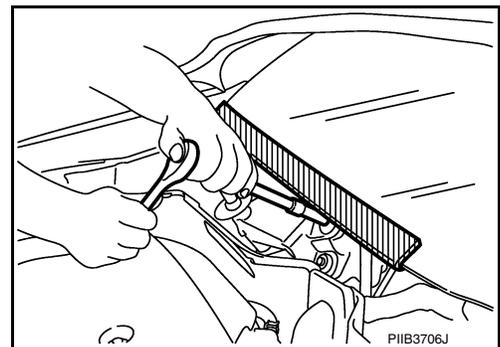

#### Precautions For Xenon Headlamp Service

INFOID:000000010782877

#### **WARNING:**

Comply with the following warnings to prevent any serious accident.

- Disconnect the battery cable (negative terminal) or the power supply fuse before installing, removing, or touching the xenon headlamp (bulb included). The xenon headlamp contains high-voltage generated parts.
- Never work with wet hands.
- Check the xenon headlamp ON-OFF status after assembling it to the vehicle. Never turn the xenon headlamp ON in other conditions. Connect the power supply to the vehicle-side connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# PRECAUTIONS

## < PRECAUTION >

(Turning it ON outside the lamp case may cause fire or visual impairments.)

- Never touch the bulb glass immediately after turning it OFF. It is extremely hot.

### CAUTION:

Comply with the following cautions to prevent any error and malfunction.

- Install the xenon bulb securely. (Insufficient bulb socket installation may melt the bulb, the connector, the housing, etc. by high-voltage leakage or corona discharge.)
- Never perform HID circuit inspection with a tester.
- Never touch the xenon bulb glass with hands. Never put oil and grease on it.
- Dispose of the used xenon bulb after packing it in thick vinyl without breaking it.
- Never wipe out dirt and contamination with organic solvent (thinner, gasoline, etc.).

## Precautions for Removing Battery Terminal

INFOID:000000010782878

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

### NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


### NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

### NOTE:

The removal of 12V battery may cause a DTC detection error.

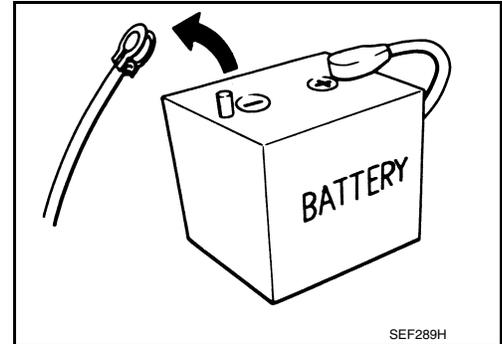

# PREPARATION

< PREPARATION >


## PREPARATION

### PREPARATION

#### Special Service Tool



INFOID:000000010578818

The actual shapes of TechMate tools may differ from those of special service tools illustrated here.

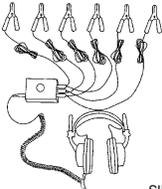Tool number (TechMate No.) Tool name	Description
<p>(J-39570) Chassis ear</p>  <p>SIIA0993E</p>	<p>Locates the noise</p>
<p>(J-50397) NISSAN Squeak and Rattle Kit</p>  <p>SIIA0994E</p>	<p>Repairs the cause of noise</p>

#### Commercial Service Tool

INFOID:000000010578819

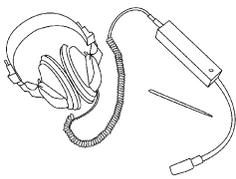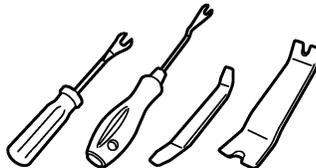Tool name	Description
<p>Engine ear</p>  <p>SIIA0995E</p>	<p>Locates the noise</p>
<p>Remover tool</p>  <p>JMKIA3050ZZ</p>	<p>Removes clips, pawls and metal clips</p>

# GLASS LID


< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### GLASS LID

Exploded View

INFOID:0000000010578820

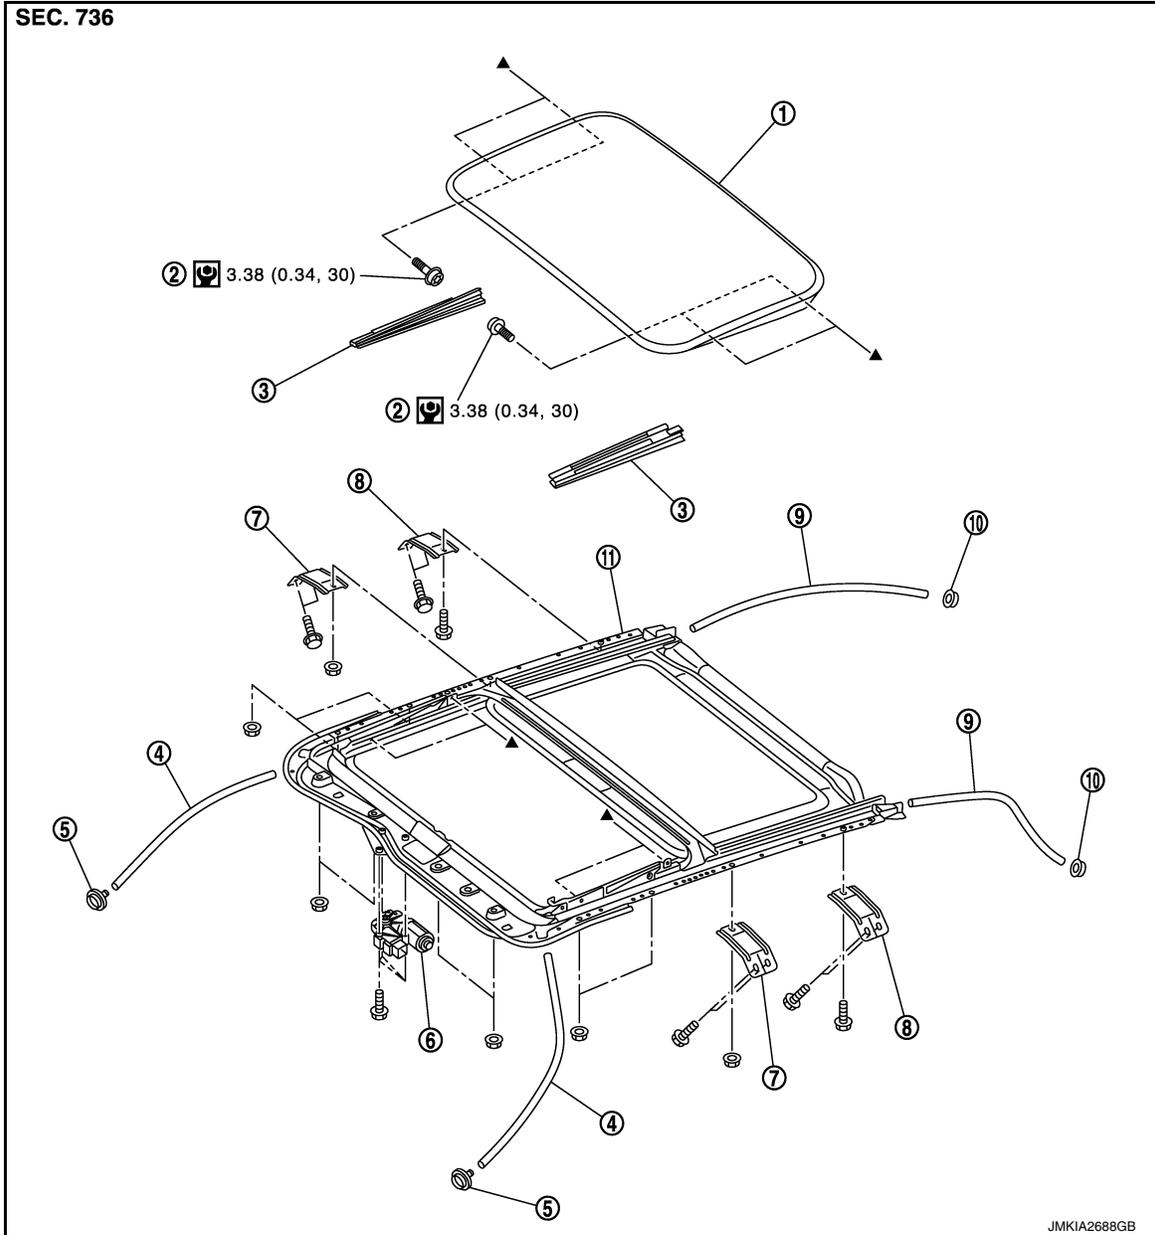

- |                                  |                                 |                           |
|----------------------------------|---------------------------------|---------------------------|
| 1. Glass lid                     | 2. TORX bolt                    | 3. Inner blind (LH/RH)    |
| 4. Drain hose (front)            | 5. Drain connector (front)      | 6. Sunroof motor assembly |
| 7. Sunroof front bracket (LH/RH) | 8. Sunroof rear bracket (LH/RH) | 9. Drain hose (rear)      |
| 10. Drain connector (rear)       | 11. Sunroof unit assembly       |                           |

: N·m (kg-m, in-lb)

▲ : Indicates that the part is connected at points with same symbol in actual vehicle.

### Removal and Installation

INFOID:0000000010578821

#### REMOVAL


# GLASS LID

## < REMOVAL AND INSTALLATION >

### CAUTION:

Always work with 2 workers.

1. Remove the inner blind.
2. Remove the TORX bolts (A).

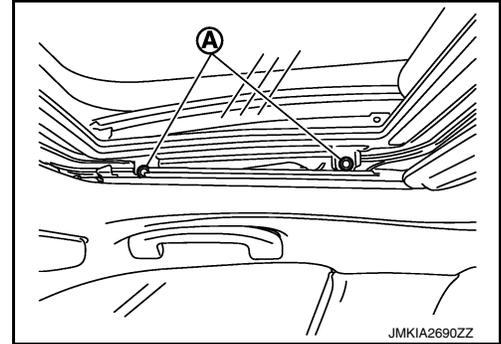

3. Remove the glass lid from the vehicle.

## INSTALLATION

### CAUTION:

After installing the glass lid, perform the leak test and check that there is no malfunction.


### NOTE:

After installation perform fitting adjustment. Refer to [RF-79, "Adjustment"](#).

Install in the reverse order of removal.

## Adjustment

INFOID:000000010578822

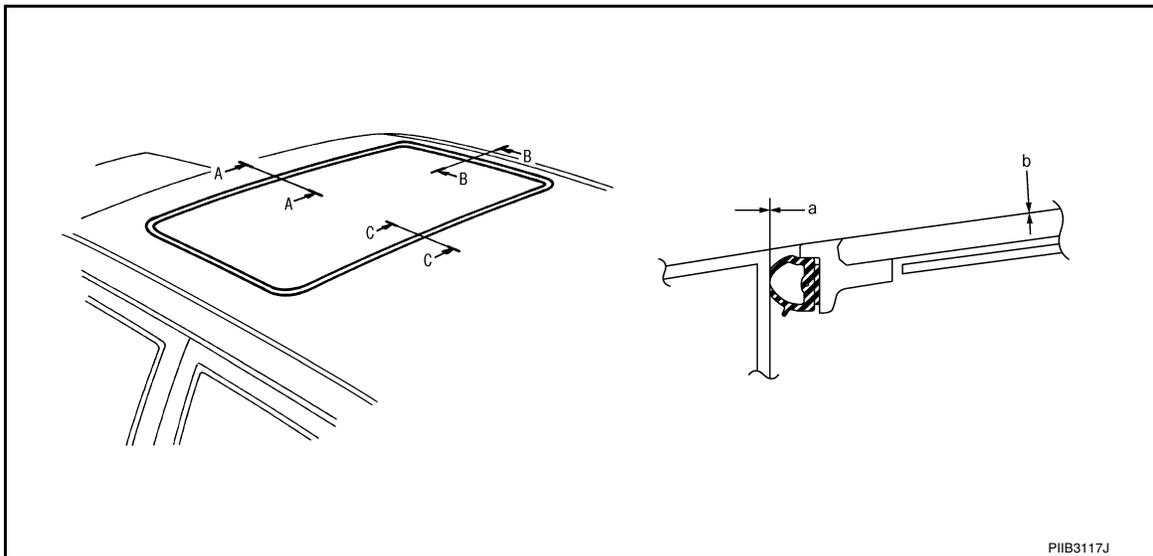

## LID WEATHER-STRIP OVERLAP ADJUSTMENT AND SURFACE MISMATCH ADJUSTMENT

1. Tilt up glass lid, and then remove Inner blind (left and right).
2. After loosening glass lid from TORX bolts (left and right), tilt down glass lid.
3. Adjust glass lid from outside of vehicle so it resembles "A – A" "B – B" "C – C" as shown in the figure.

Portion		a (Weather-strip overlap)	b (Surface height)
Glass lid front end	A – A	0.6 – 2.2 mm (0.024 – 0.087 in)	-0.7 – 2.3 mm (-0.028 – 0.091 in)
Glass lid side end	B – B	0.6 – 2.2 mm (0.024 – 0.087 in)	-0.7 – 2.3 mm (-0.028 – 0.091 in)
Glass lid rear end	C – C	0.6 – 2.2 mm (0.024 – 0.087 in)	-0.7 – 2.3 mm (-0.028 – 0.091 in)

4. To prevent glass lid from moving after adjustment, first tighten the TORX bolts of front left, and then tighten the TORX bolts of rear right.
5. Tighten remaining TORX bolts, being careful to prevent glass lid from moving.

## GLASS LID

### < REMOVAL AND INSTALLATION >

---

6. Tilt glass lid up and down several times to check that it moves smoothly.

**NOTE:**

After adjusting the sunroof unit assembly, perform additional service. Refer to [RF-4, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).


# SUNROOF MOTOR ASSEMBLY

< REMOVAL AND INSTALLATION >

## SUNROOF MOTOR ASSEMBLY

Exploded View

INFOID:0000000110578823

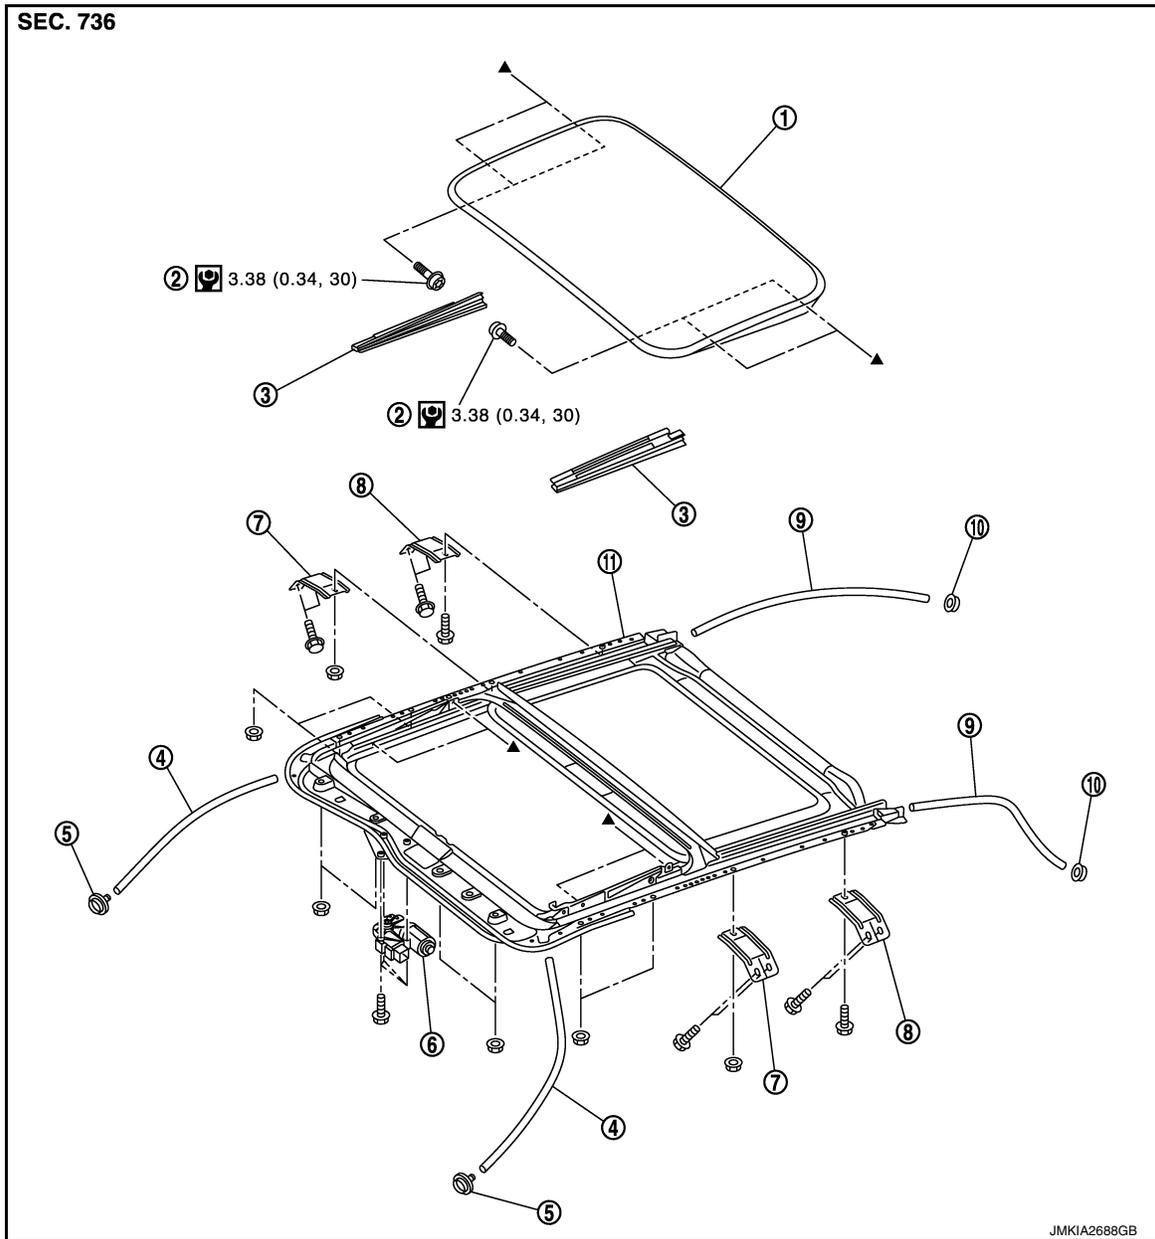

- |                                  |                                 |                           |
|----------------------------------|---------------------------------|---------------------------|
| 1. Glass lid                     | 2. TORX bolt                    | 3. Inner blind (LH/RH)    |
| 4. Drain hose (front)            | 5. Drain connector (front)      | 6. Sunroof motor assembly |
| 7. Sunroof front bracket (LH/RH) | 8. Sunroof rear bracket (LH/RH) | 9. Drain hose (rear)      |
| 10. Drain connector (rear)       | 11. Sunroof unit assembly       |                           |

: N·m (kg-m, in-lb)

: Indicates that the part is connected at points with same symbol in actual vehicle.

### Removal and Installation

INFOID:0000000110578824

#### REMOVAL

#### CAUTION:

- Before removing sunroof motor, check that glass lid is fully closed.


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# SUNROOF MOTOR ASSEMBLY

## < REMOVAL AND INSTALLATION >

• **After removing sunroof motor, never attempt to rotate sunroof motor assembly as a single unit.**

1. Remove the map lamp assembly. Refer to [INL-190, "Removal and Installation"](#).
2. Remove the sunroof motor assembly.
  - Disconnect connector (A) from sunroof motor assembly (1).
  - Remove sunroof motor assembly mounting screws (B), and then remove sunroof motor assembly.

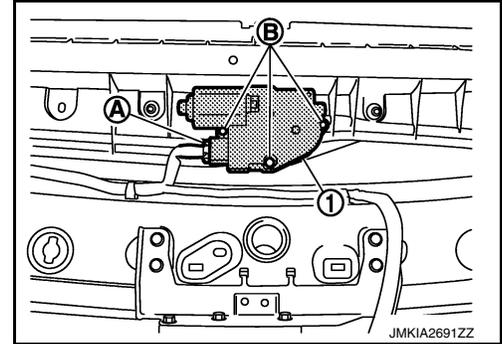

## INSTALLATION

### **CAUTION:**

**Before installing the sunroof motor assembly, always place the link and wire assembly in the symmetrical and fully closed position.**

1. Move the sunroof motor assembly laterally a little so that the gear is completely engaged into the wire on the sunroof unit assembly and mounting surface becomes parallel. Then tighten the sunroof motor assembly with screws.
2. Install the map lamp assembly. Refer to [INL-190, "Removal and Installation"](#).

# SUNROOF UNIT ASSEMBLY


< REMOVAL AND INSTALLATION >

## SUNROOF UNIT ASSEMBLY

Exploded View

INFOID:000000010578825

### REMOVAL

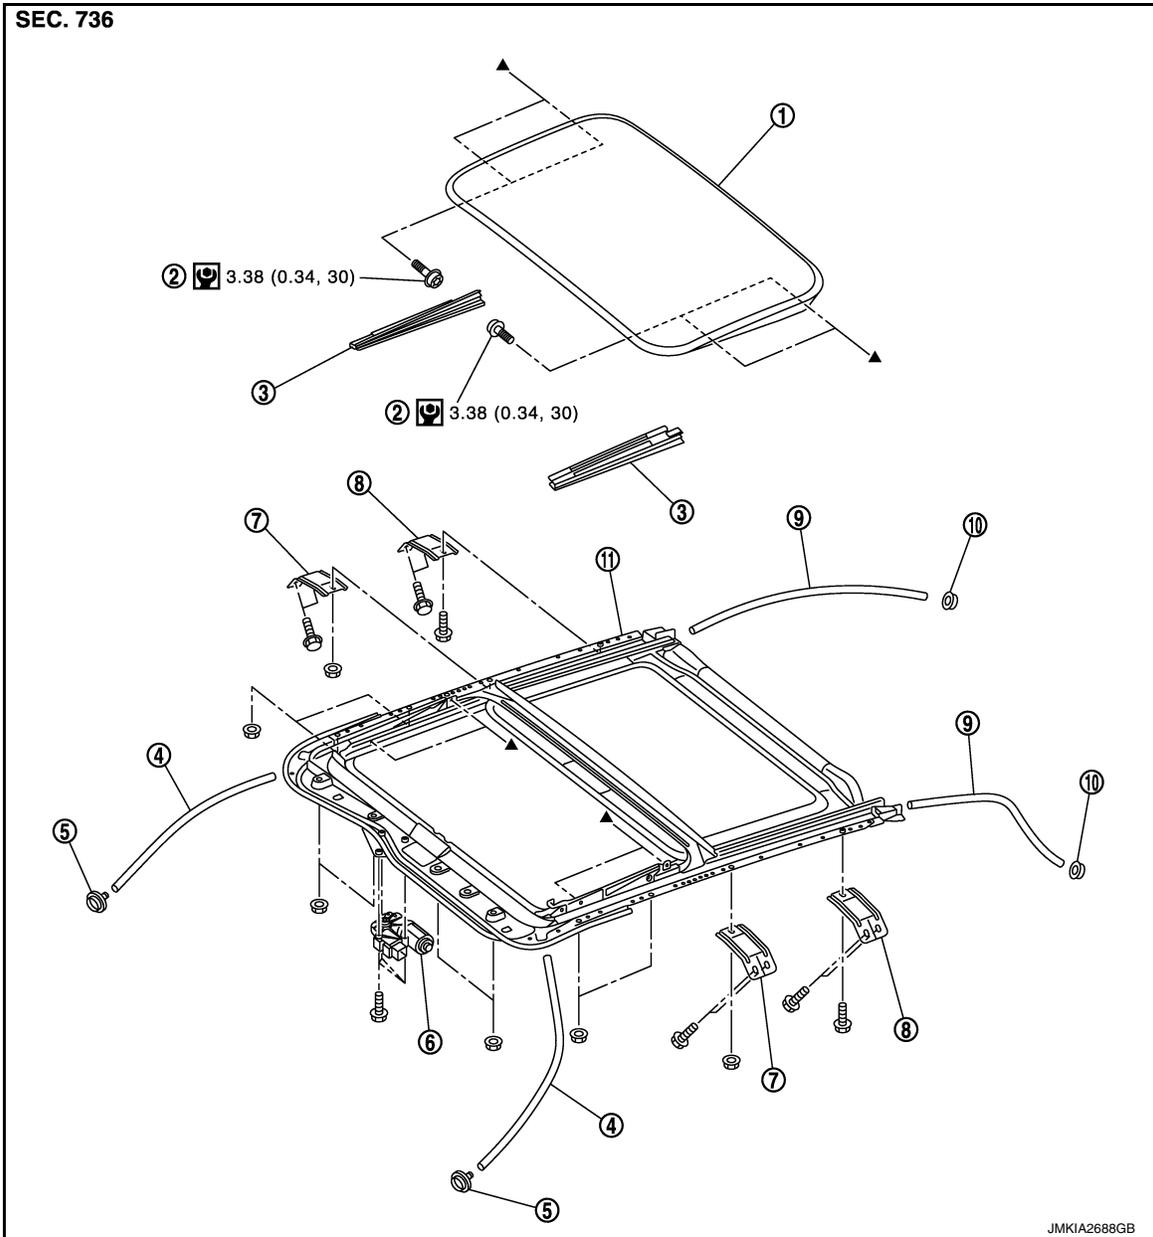

- |                                  |                                 |                           |
|----------------------------------|---------------------------------|---------------------------|
| 1. Glass lid                     | 2. TORX bolt                    | 3. Inner blind (LH/RH)    |
| 4. Drain hose (front)            | 5. Drain connector (front)      | 6. Sunroof motor assembly |
| 7. Sunroof front bracket (LH/RH) | 8. Sunroof rear bracket (LH/RH) | 9. Drain hose (rear)      |
| 10. Drain connector (rear)       | 11. Sunroof unit assembly       |                           |

: N·m (kg-m, in-lb)


▲ : Indicates that the part is connected at points with same symbol in actual vehicle.

### DISASSEMBLY

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# SUNROOF UNIT ASSEMBLY

< REMOVAL AND INSTALLATION >

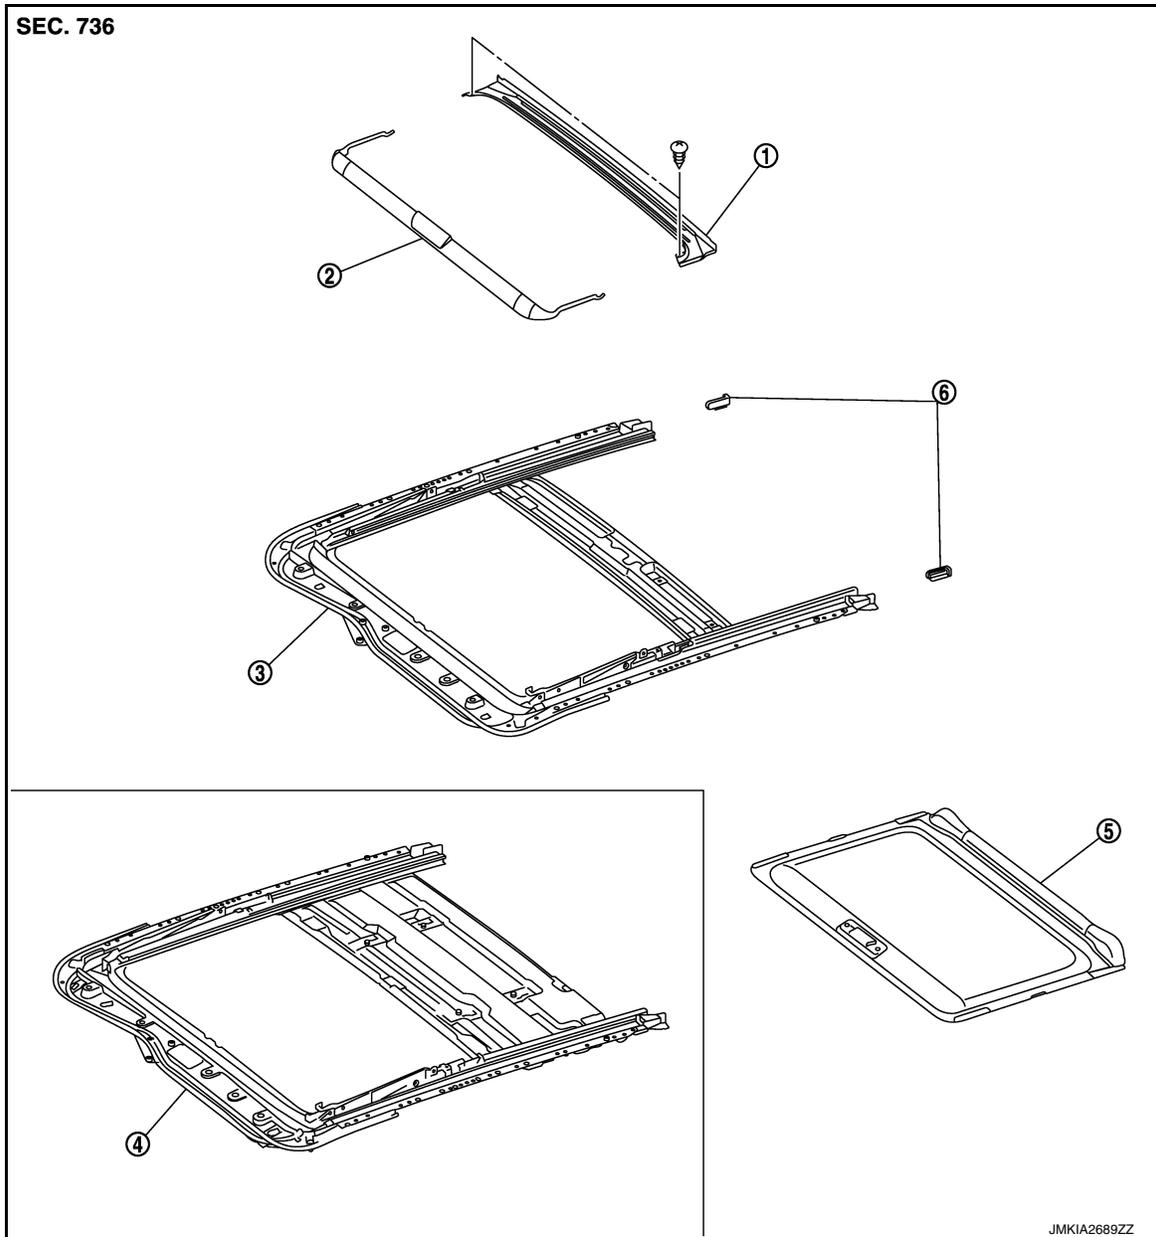

- |  |                   |                             |
|--|-------------------|-----------------------------|
| 1. Rear drain                              | 2. Wind deflector | 3. Sunroof frame            |
| 4. Sunroof frame (with rear display model) | 5. Sunshade       | 6. Sunshade stopper (LH/RH) |

## Removal and Installation

INFOID:000000010578826

### REMOVAL

#### CAUTION:

- Always work with 2 workers.
- Fully close the glass lid, before removal, then never operate sunroof motor assembly after removal.
- When taking sunroof unit assembly out, use shop cloths to protect the seats and trim from damage.

1. Remove the headlining. Refer to [INT-26, "Removal and Installation"](#).
2. Remove the glass lid. Refer to [RF-78, "Removal and Installation"](#).
3. Remove the sunroof motor assembly. Refer to [RF-81, "Removal and Installation"](#).
4. Disconnect drain hoses.
5. Remove the side curtain air bag mounting bolt. Refer to [SR-19, "Removal and Installation"](#).
6. Remove the sunroof front brackets (LH/RH).

# SUNROOF UNIT ASSEMBLY

## < REMOVAL AND INSTALLATION >

7. Remove the sunroof rear brackets (LH/RH).
8. Remove nuts from the front end and side rail, and then remove sunroof unit assembly from roof panel.
9. Remove sunroof unit assembly through the back door while being careful not to damage the seats and trim.

## INSTALLATION

### CAUTION:

After installing the sunroof unit assembly and glass lid, perform the leak test and check that there is no malfunction.

1. Temporarily tighten the mounting bolts to the sunroof rear brackets (LH/RH).
2. Temporarily tighten the mounting bolts to the sunroof front brackets (LH/RH).
3. Bring sunroof unit into back door.
4. Temporarily tighten the mounting nuts to the side rail of sunroof unit assembly.
5. Temporarily tighten the mounting nuts to the front end of sunroof unit assembly.
6. Tighten the installation points diagonally excluding the installation points of the sunroof brackets around the roof opening.
7. Tighten the sunroof bracket bolts of the vehicle side, and then tighten the bolt of the rail side.
8. Install the side curtain air bag mounting bolt. Refer to [SR-19, "Removal and Installation"](#).
9. Install the sunroof motor assembly. Refer to [RF-81, "Removal and Installation"](#).
10. Install the glass lid. Refer to [RF-78, "Removal and Installation"](#).

### NOTE:

After installation, perform fitting adjustment. Refer to [RF-79, "Adjustment"](#).

11. Connect drain hoses.
12. Install the headlining. Refer to [INT-26, "Removal and Installation"](#).

## Disassembly and Assembly

INFOID:0000000010578827

## DISASSEMBLY

1. Remove the screw, and then rear drain.
2. Remove the sunshade. Refer to [RF-86, "Removal and Installation"](#).
3. Remove the wind deflector. Refer to [RF-88, "Removal and Installation"](#).

## ASSEMBLY

Assemble in the reverse order of disassembly.


# SUNSHADE

< REMOVAL AND INSTALLATION >

## SUNSHADE

Exploded View

INFOID:000000010578828

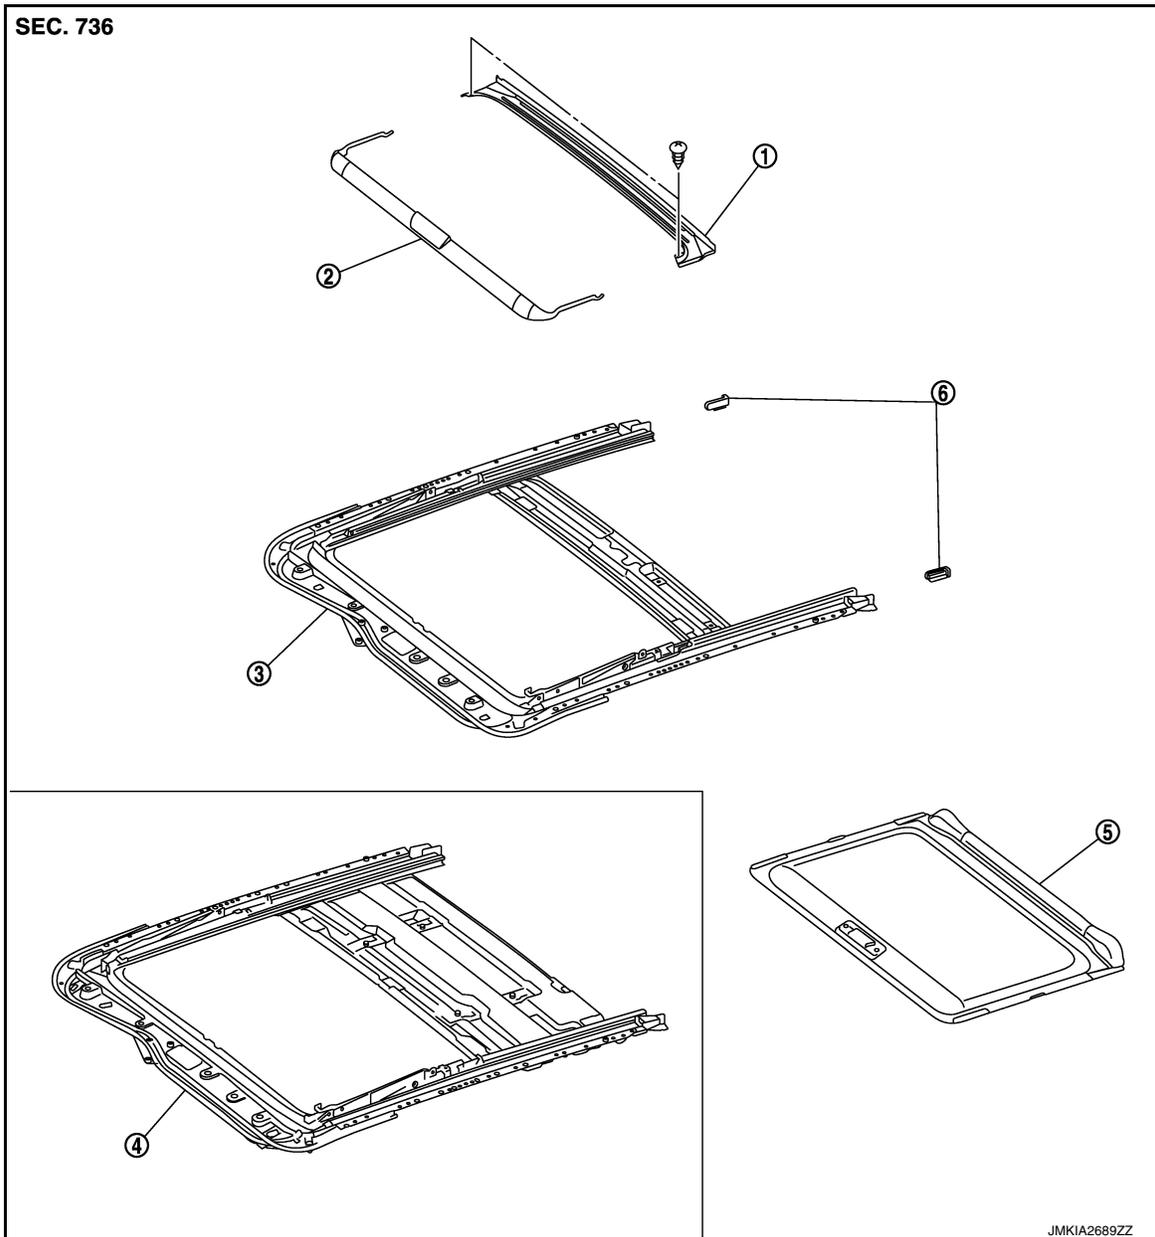

## Removal and Installation

INFOID:000000010578829


### REMOVAL

1. Remove the headlining. Refer to [INT-26. "Removal and Installation"](#).

# SUNSHADE

## < REMOVAL AND INSTALLATION >

2. Remove the sunshade stopper (LH/RH) from the sunroof frame end.

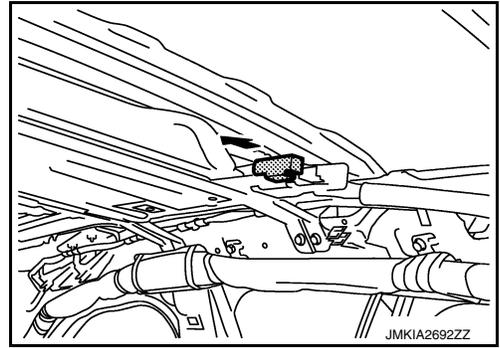

3. Remove the sunshade from the rear end of sunroof frame.

## INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P


# WIND DEFLECTOR

< REMOVAL AND INSTALLATION >

## WIND DEFLECTOR

Exploded View

INFOID:000000010578830

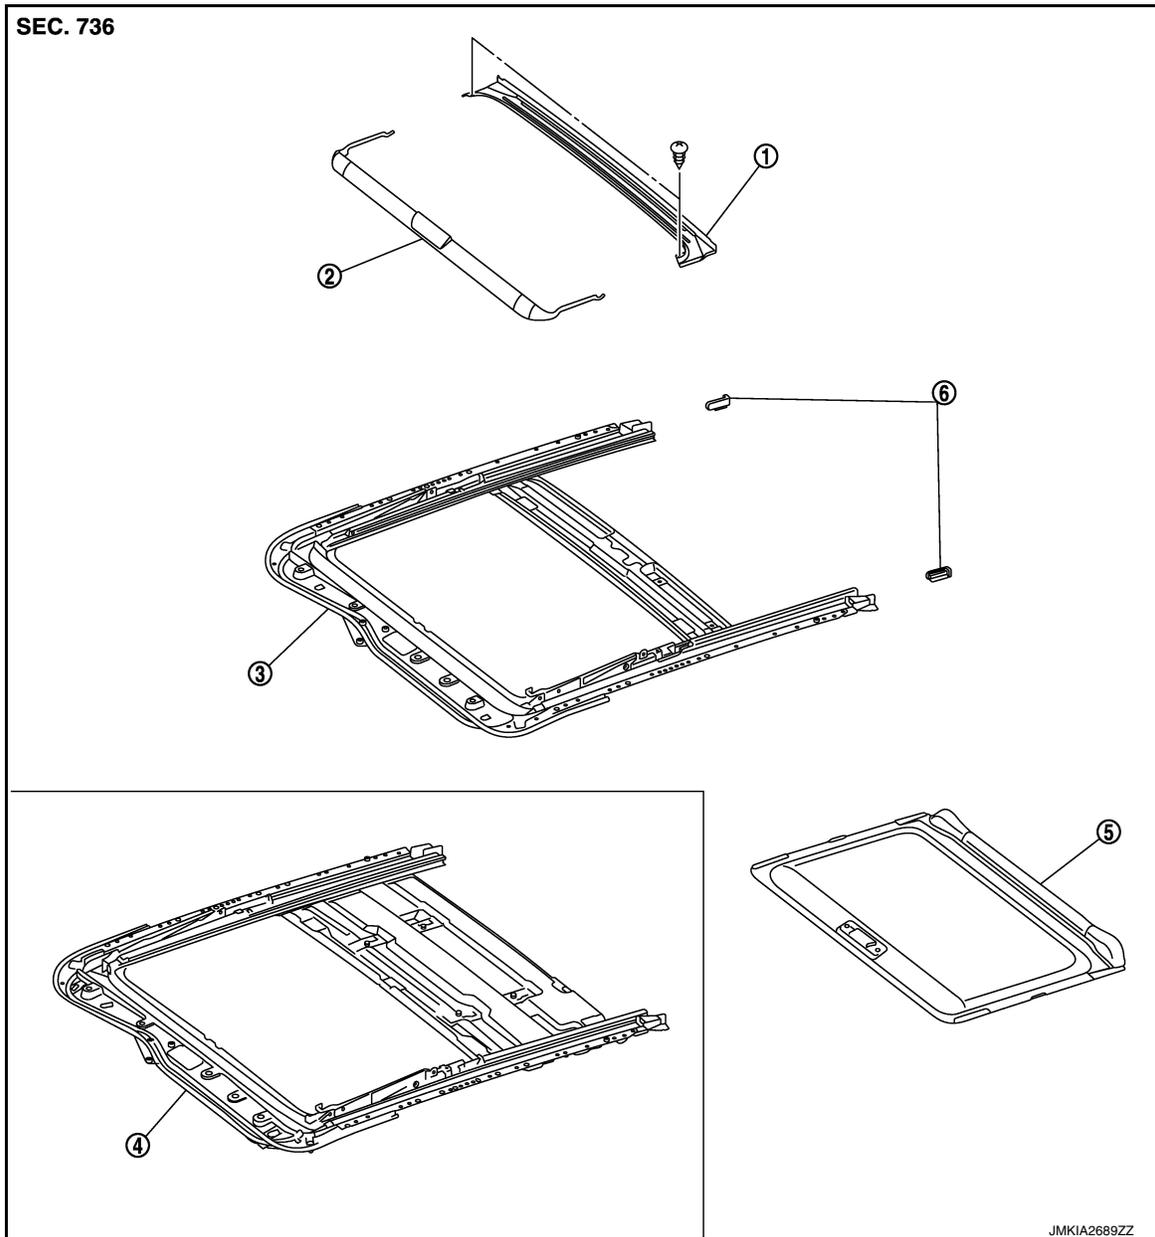

- |  |                   |                             |
|--|-------------------|-----------------------------|
| 1. Rear drain                              | 2. Wind deflector | 3. Sunroof frame            |
| 4. Sunroof frame (with rear display model) | 5. Sunshade       | 6. Sunshade stopper (LH/RH) |

## Removal and Installation

INFOID:000000010578831

### Removal

1. Open the glass lid to see the wind deflector installation point on the sun roof slide rail.
2. Remove the wind deflector.
  - Remove the spring from sunroof frame groove.
  - Turn the wind deflector and remove it from sunroof frame.

### Installation

Install in the reverse order of removal.

# SUNROOF SWITCH

< REMOVAL AND INSTALLATION >

## SUNROOF SWITCH

---

### Exploded View

INFOID:000000010578832

Refer to [INT-25, "Exploded View"](#).

### Removal and Installation

INFOID:000000010578833

#### Removal

Remove the sunroof switch. Refer to [INT-26, "Removal and Installation"](#).

#### Installation

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

RF

L

M

N

O

P